

# BMWAG

## Electrical troubleshooting manual

### 5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

- [0100.0 Index](#)
- [0110.0 Introduction](#)
- [0140.0 Symbols](#)
- [0670.0 Power distribution chart](#)
- [0670.1 Fuse chart](#)
- [0670.2 Power distribution](#)
- [0670.3 Fuse details](#)
- [0670.4 Ground distribution](#)
- [0670.5 Diagnostic link](#)
- [1210.8 Digital motor electronics \(DME M1.7,4-cylinderM40\)](#)
- [1210.10 Engine management MS40 \(6-cylinder M50\)](#)
- [1220.0 Preheating system](#)
- [1230.0 Alternator](#)
- [1240.0 Starter](#)
- [1360.1 Digital diesel electronics \(DDE 2, 6-cylinderM51\)](#)
- [2460.2 Electronic transmission control \(EGS A4S 31 OR\)](#)
- [2460.4 Electronic transmission control \(EGS ASS 31 OZ\)](#)
- [2460.5 Electronic transmission control \(EGS ASS 31 OZ diesel\)](#)
- [3231.0 Electronic steering column control](#)
- [3234.0 Airbag \(AB\)](#)
- [3240.0 Servotronic](#)
- [3250.0 Antilock brake system \(ABS\)](#)
- [5116.0 Power mirrors](#)
- [5120.0 Door lock heating \(ZKE/TSH\)](#)
- [5120.1 Door lock heating \(ZVM/TSH\)](#)
- [5126.0 Central locking system \(ZKE/ZV\)](#)
- [5126.1 Central locking module \(ZVM\)](#)
- [5133.0 Power windows \(ZKE/FH\)](#)
- [5146.0 Electric sun shades](#)
- [5200.0 Power seats](#)
- [5203.0 Heated seats](#)
- [5212.0 Lumbar support](#)
- [5410.0 Sunroof \(ZKE/SHD\)](#)
- [5410.2 Double-panel sunroof \(ZKE\)](#)
- [5410.3 Double-panel sunroof \(ZVM\)](#)
- [6100.0 Central body electronics \(ZKE\)](#)
- [6133.0 Horn](#)

- [6160.0 Windscreen wipe/wash system \(ZKE\)](#)
- [6160.1 Wipe/wash module \(WWM\)](#)
- [6162.0 Rear window wipe/wash system](#)
- [6167.0 Headlight washer \(ZKE/SRA\)](#)
- [6169.0 Windscreen washer Jet heaters](#)
- [6200.3 Instrument cluster \(redesigned standard version\)](#)
- [6213.0 Clock](#)
- [6213.2 Multi-function clock](#)
- [6300.0 Light switch](#)
- [6312.0 Headligh/fog light](#)
- [6313.0 Turn signal/hazard warning system](#)
- [6314.0 Park/tail/underhood lights](#)
- [6320.0 Licence plate/luggage compartment lights](#)
- [6322.0 Reversing lights](#)
- [6325.0 Brake lights](#)
- [6328.1 Trailer coupling](#)
- [6330.0 Interior light control \(ZKE/IB\)](#)
- [6330.1 ZVM Interior lights](#)
- [6332.0 Interior](#)
- [6350.0 Crash and alarm sensor](#)
- [6410.1 Automatic heating control \(HR34\) - digital](#)
- [6410.6 Automatic heating control \(IHRF3\)](#)
- [6412.0 Independent heating/ventilation with IHKA](#)
- [6412.1 Independent heating/ventilation with HR34](#)
- [6412.2 Independent ventilation with IHKA](#)
- [6412.3 Independent ventilation with HR34](#)
- [6412.14 Independent heating/ventilation with IHRF3](#)
- [6412.15 Independent ventilation with IHRF3](#)
- [6412.18 Independent heating/ventilation with IHKR/F3](#)
- [6412.19 Independent ventilation with IHKR/3](#)
- [6424.0 Rear window defogger/antenna](#)
- [6430.0 Automatic circulating air control \(AUC\)](#)
- [6450.0 Automatic climate control \(IHKA\)](#)
- [6450.5 Automatic climate control with filter \(IHKR/F3\)](#)
- [6454.0 Auxiliary fan](#)
- [6510.0 Radio/stereo](#)
- [6510.1 Radio/HiFi](#)
- [6510.2 Radio provisions](#)
- [6561.0 Cellular telephone](#)
- [6571.0 Cruise control](#)
- [6575.1 Antitheft system III \(DWA III\)](#)
- [6581.0 On-board computer \(BC IV\)](#)
- [6610.0 Infrared locking system \(IR\)](#)
- [6621.0 Park distance control \(PDC\)](#)

**7000.0** Component location chart

**7100.0** Component location views

**8000.0** Solder connector location views

**8500.0** Connector views

# BMWAG

## Electrical troubleshooting manual

### 5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

#### Index

#### Scheme 0100.0

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

[Press Here](#)

A/C compressor relay, K19

A/C fan II switch, S2138

A/C system relay, K33

ABS control unit, A7

ABS hydraulic unit, Y1

Air flow meter, B6233

Airbag (AB)

<a href="#">Airbag diagnostic module, A12</a>	<a href="#">Press Here</a>
<a href="#">Alternator, G2023</a>	<a href="#">Press Here</a>
<a href="#">Alternator, G6509</a>	<a href="#">Press Here</a>
<a href="#">Alternator</a>	<a href="#">Press Here</a>
<a href="#">AM/FM antenna amplifier, N8</a>	<a href="#">Press Here</a>
<a href="#">Antilock brake system (ABS)</a>	<a href="#">Press Here</a>
<a href="#">Antitheft (DWA) LED, V5</a>	<a href="#">Press Here</a>
<a href="#">Antitheft (DWA) radio microswitch, S20</a>	<a href="#">Press Here</a>
<a href="#">Antitheft horn (DWA), H1</a>	<a href="#">Press Here</a>
<a href="#">Antitheft module (DWA), N1</a>	<a href="#">Press Here</a>
<a href="#">Antitheft system III (DWA III)</a>	<a href="#">Press Here</a>
<a href="#">AUC control unit, A417</a>	<a href="#">Press Here</a>
<a href="#">AUC sensor, B414</a>	<a href="#">Press Here</a>
<a href="#">Automatic circulating air control (AUC)</a>	<a href="#">Press Here</a>
<a href="#">Automatic climate control (IHKA)</a>	<a href="#">Press Here</a>
<a href="#">Automatic climate control module (IHKA), AH</a>	<a href="#">Press Here</a>
<a href="#">Automatic climate control unit 3 (IHKR/F3), A87w</a>	<a href="#">Press Here</a>
<a href="#">Automatic climate control unit 3 (IHKR/F3), A87w</a>	<a href="#">Press Here</a>
<a href="#">Automatic climate control with filter (IHKR/F3)</a>	<a href="#">Press Here</a>
<a href="#">Automatic heating control (HR34) -digital</a>	<a href="#">Press Here</a>
<a href="#">Automatic heating control (IHRF3)</a>	<a href="#">Press Here</a>
<a href="#">Auxiliary battery, G3</a>	<a href="#">Press Here</a>
<a href="#">Auxiliary battery isolating relay, K14</a>	<a href="#">Press Here</a>
<a href="#">Auxiliary fan</a>	<a href="#">Press Here</a>
<a href="#">Auxiliary fan motor, M9</a>	<a href="#">Press Here</a>
<a href="#">Auxiliary fan stage 1 relay, K21</a>	<a href="#">Press Here</a>
<a href="#">Auxiliary fan stage 2 relay, K22</a>	<a href="#">Press Here</a>
<a href="#">Auxiliary fuse box in luggage compartment, P96</a>	<a href="#">Press Here</a>
<a href="#">Auxiliary water pump, M37a *6410</a>	<a href="#">Press Here</a>
<a href="#">Auxiliary water pump, M37a *6450</a>	<a href="#">Press Here</a>
<a href="#">Battery, G1 *0670.2</a>	<a href="#">Press Here</a>
<a href="#">Battery microswitch (DWA), 822 *6575.1</a>	<a href="#">Press Here</a>
<a href="#">Blower ballast resistor, R11 *6410</a>	<a href="#">Press Here</a>
<a href="#">Blower ballast resistor, R11 *6412</a>	<a href="#">Press Here</a>
<a href="#">Blower ballast resistor, R11 *6450</a>	<a href="#">Press Here</a>
<a href="#">Blower motor, M30 *6412.</a>	<a href="#">Press Here</a>
<a href="#">Blower motor, M30 *6450</a>	<a href="#">Press Here</a>
<a href="#">Blower switch, S75 *6410</a>	<a href="#">Press Here</a>
<a href="#">Blower switch, S75 *6412</a>	<a href="#">Press Here</a>
<a href="#">Blower switch, S75 *6450</a>	<a href="#">Press Here</a>
<a href="#">Brake fluid level switch, B18 *6200.3</a>	<a href="#">Press Here</a>
<a href="#">Brake light switch, S30 *6325.0</a>	<a href="#">Press Here</a>
<a href="#">Brake lights *6325.0-00</a>	<a href="#">Press Here</a>
<a href="#">Camshaft control, B6208 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Camshaft sensor, B6204 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">Camshaft sensor, B6204 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Cassette box light, E45y *6300.0</a>	<a href="#">Press Here</a>
<a href="#">CD changer, N22 *6510.1</a>	<a href="#">Press Here</a>
<a href="#">Cellular telephone *6561.0-00</a>	<a href="#">Press Here</a>
<a href="#">Central body electronics (ZKE) *6100.0-00</a>	<a href="#">Press Here</a>
<a href="#">Central locking (ZV) drive driver's door, M12 *5126.0</a>	<a href="#">Press Here</a>
<a href="#">Central locking (ZV) drive driver's door, M12 *5126.1</a>	<a href="#">Press Here</a>
<a href="#">Central locking (ZV) drive passenger's door, M13 *5126.0</a>	<a href="#">Press Here</a>
<a href="#">Central locking (ZV) drive passenger's door, M13 *5126.1</a>	<a href="#">Press Here</a>

<a href="#">Central locking drive rear left, M15 *5126.0</a>	<a href="#">Press Here</a>
<a href="#">Central locking drive rear left, M15 *5126.1</a>	<a href="#">Press Here</a>
<a href="#">Central locking drive rear lid, M17 *5126.0</a>	<a href="#">Press Here</a>
<a href="#">Central locking drive rear lid, M17 *5126.1</a>	<a href="#">Press Here</a>
<a href="#">Central locking drive rear right, M14 *5126.0</a>	<a href="#">Press Here</a>
<a href="#">Central locking drive rear right, M14 *5126.1</a>	<a href="#">Press Here</a>
<a href="#">Central locking module (ZVM), A30 *5126.1</a>	<a href="#">Press Here</a>
<a href="#">Central locking module (ZVM) *5126.1-00</a>	<a href="#">Press Here</a>
<a href="#">Central locking system (ZKE/ZV) *5126.0-00</a>	<a href="#">Press Here</a>
<a href="#">Changeover valve for exhaust gas recirculation (AGR), B2017 ... 1360.1-02</a>	<a href="#">Press Here</a>
<a href="#">Changeover valve radiator shutter, S2001 *1360.1-07</a>	<a href="#">Press Here</a>
<a href="#">Charcoal filter valve, Y6120 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">Charcoal filter valve, Y6120 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Charge air temperature sensor, B2012 *1360.1-05</a>	<a href="#">Press Here</a>
<a href="#">Charge pressure sensor, B2014 *1360.1-04</a>	<a href="#">Press Here</a>
<a href="#">Circulation air flap motor, M40 *6450.0</a>	<a href="#">Press Here</a>
<a href="#">Circulation air flap motor, M40 *6450.5</a>	<a href="#">Press Here</a>
<a href="#">Clock, N50 *6213.0</a>	<a href="#">Press Here</a>
<a href="#">Clock *6213.0-00</a>	<a href="#">Press Here</a>
<a href="#">Clutch switch, 832 *6571.0</a>	<a href="#">Press Here</a>
<a href="#">Comfort relay, K78 *5410.3-00</a>	<a href="#">Press Here</a>
<a href="#">Compact infrared unit, N13z *6610.0</a>	<a href="#">Press Here</a>
<a href="#">Component location chart *7000.0-00</a>	<a href="#">Press Here</a>
<a href="#">Component location views *7100.0-00</a>	<a href="#">Press Here</a>
<a href="#">Connector views *8500.0-00</a>	<a href="#">Press Here</a>
<a href="#">Coolant temperature sensor, B2015 *1360.1-05</a>	<a href="#">Press Here</a>
<a href="#">Coolant temperature sensor, B6236 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">Coolant temperature sensor, B6236 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Crankshaft sensor, B6203 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">Crankshaft sensor, B6203 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Crash alarm sensor, N17 *6350.0</a>	<a href="#">Press Here</a>
<a href="#">Crash and alarm sensor *6350.0-00</a>	<a href="#">Press Here</a>
<a href="#">Cruise control *6571.0-00</a>	<a href="#">Press Here</a>
<a href="#">Cruise control actuator (Tempomat), M25 *6571.0</a>	<a href="#">Press Here</a>
<a href="#">Cruise control module, A8 *6571.0</a>	<a href="#">Press Here</a>
<a href="#">Cruise control switch, S28 *6571.0</a>	<a href="#">Press Here</a>
<a href="#">Daytime light coding diodes, V4 *6300.0</a>	<a href="#">Press Here</a>
<a href="#">DDE relay, K2003 *1360.1</a>	<a href="#">Press Here</a>
<a href="#">DDE2 control unit, A2019 *1360.1</a>	<a href="#">Press Here</a>
<a href="#">DDSHD sensor I, B54 *5410.2-02</a>	<a href="#">Press Here</a>
<a href="#">DDSHD sensor I, B54 *5410.3-02</a>	<a href="#">Press Here</a>
<a href="#">DDSHD sensor II, B55 *5410.2-02</a>	<a href="#">Press Here</a>
<a href="#">DDSHD sensor II, B55 *5410.3-02</a>	<a href="#">Press Here</a>
<a href="#">Decoupling diode, V6 *6332.0-01</a>	<a href="#">Press Here</a>
<a href="#">Defroster flap motor, M35 *6450.0</a>	<a href="#">Press Here</a>
<a href="#">Diagnostic connector, D100 *0670.5</a>	<a href="#">Press Here</a>
<a href="#">Diagnostic link *0670.5-00</a>	<a href="#">Press Here</a>
<a href="#">Digital diesel electronics (DDE 2, 6-cylinder M51) *1360.1-00</a>	<a href="#">Press Here</a>
<a href="#">Digital motor electronics (DME M 1.7, 4-cylinder M40) ..... 1210.8-00</a>	<a href="#">Press Here</a>
<a href="#">Dimmer, N3*6300.0</a>	<a href="#">Press Here</a>
<a href="#">Diode module, A59 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">Diversity, N404 *6424.0</a>	<a href="#">Press Here</a>

<a href="#">DME control unit, A6000 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">DME control unit, A6000 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">DME relay, K6300 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">DME relay, K6300 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Door lock heating, E48 *5120.0</a>	<a href="#">Press Here</a>
<a href="#">Door lock heating, E48 *5120.1</a>	<a href="#">Press Here</a>
<a href="#">Door lock heating (ZKE/TSH) *5120.0-00</a>	<a href="#">Press Here</a>
<a href="#">Door lock heating (ZVM/TSH) *5120.1-00</a>	<a href="#">Press Here</a>
<a href="#">Door lock heating relay, K54 *5120.1</a>	<a href="#">Press Here</a>
<a href="#">Double-panel sunroof (ZKE) *5410.2-00</a>	<a href="#">Press Here</a>
<a href="#">Double-panel sunroof (ZVM) *5410.3-00</a>	<a href="#">Press Here</a>
<a href="#">Double-panel sunroof control unit, A99 *5410.2</a>	<a href="#">Press Here</a>
<a href="#">Double-panel sunroof control unit, A99 *5410.3</a>	<a href="#">Press Here</a>
<a href="#">Double-panel sunroof switch, S38w *5410.2-01</a>	<a href="#">Press Here</a>
<a href="#">Double-panel sunroof switch, S38w *5410.3-01</a>	<a href="#">Press Here</a>
<a href="#">Driver's airbag gas generator, G5 *3234.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's backrest heating, E56 *5203.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's backrest recliner motor, M53 *5200.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's door contact switch, S14 *6330.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's door contact switch, S14 *6330.1</a>	<a href="#">Press Here</a>
<a href="#">Driver's door handle switch, S48 *5120.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's door handle switch, S48 *5120.1</a>	<a href="#">Press Here</a>
<a href="#">Driver's door lock switch, S47 *5126.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's door lock switch, S47 *5126.1</a>	<a href="#">Press Here</a>
<a href="#">Driver's headrest motor, M54 *5200.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's lumbar support switch, S52 *5212.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's make-up mirror light, E35 *6332.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's make-up mirror switch, S77 *6332.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's power mirror switch, S17 *5116.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's seat adjustment switch, S51 *5200.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's seat cushion tilt motor, M50 *5200.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's seat heating, E57 *5203.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's seat heating switch, S53 *5203.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's seat height adjustment motor, M52 *5200.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's seat lumbar support motor, M55 *5212.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's seat movement motor, M51 *5200.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's thigh support motor, M65 *5200.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's window end position sensor, S43 *5133.0</a>	<a href="#">Press Here</a>
<a href="#">Driver's window monitoring switch (DWA), S100 *6575.1</a>	<a href="#">Press Here</a>
<a href="#">Driver's window motor, M21 *5133.0-03</a>	<a href="#">Press Here</a>
<a href="#">Dual temperature switch 91 °/99°, S36 *6454.0</a>	<a href="#">Press Here</a>
<a href="#">DWA conductor loop, rear left side window, 8148 *6575.1-02</a>	<a href="#">Press Here</a>
<a href="#">WA conductor loop, rear right side window, S149 *6575.1-02</a>	<a href="#">Press Here</a>
<a href="#">EGS control unit, A2154 *2460.5</a>	<a href="#">Press Here</a>
<a href="#">EGS control unit, A8500 *2460.2</a>	<a href="#">Press Here</a>
<a href="#">EGS control unit, A7000 *2460.4</a>	<a href="#">Press Here</a>
<a href="#">Electric cutout, Y2009 *1360.1-03</a>	<a href="#">Press Here</a>
<a href="#">Electric sun shades *5146.0-00</a>	<a href="#">Press Here</a>
<a href="#">Electrical fuel pump relay, K6301 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">Electrical fuel pump relay, K6301 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Electrical steering column adjustment relay, K87 *3231.0</a>	<a href="#">Press Here</a>
<a href="#">Electrochromatic rear view mirror, A22z *5116.0</a>	<a href="#">Press Here</a>
<a href="#">Electrohydraulic converter of servotronic, B15 *3240.0</a>	<a href="#">Press Here</a>
<a href="#">Electronic seat control, A113 *3234.0</a>	<a href="#">Press Here</a>

<a href="#">Electronic steering column control *3231.0-00</a>	<a href="#">Press Here</a>
<a href="#">Electronic transmission control (EGS A4S 31 OR) *2460.2-00</a>	<a href="#">Press Here</a>
<a href="#">Electronic transmission control (EGS A5S 31 OZ diesel) ..... 2460.5-00</a>	<a href="#">Press Here</a>
<a href="#">Electronic transmission control (EGS A5S 31 OZ) *2460.4-00</a>	<a href="#">Press Here</a>
<a href="#">Engine management MS40 (6-cylinder M50) *1210.10-00</a>	<a href="#">Press Here</a>
<a href="#">Engine speed sensor, B2013 *1360.1-04</a>	<a href="#">Press Here</a>
<a href="#">Evaporator sensor, B14 *6450.0</a>	<a href="#">Press Here</a>
<a href="#">Evaporator sensor, B14 *6450.5</a>	<a href="#">Press Here</a>
<a href="#">Feed pump relay, K2002 *1360.1</a>	<a href="#">Press Here</a>
<a href="#">FM amplifier HLO, N444 *6424.0</a>	<a href="#">Press Here</a>
<a href="#">Fog light relay, K47 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Fog light relay, K79 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Fog light switch, S10 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Footwell/rear compartment actuator motor, M41 *6450.0</a>	<a href="#">Press Here</a>
<a href="#">Fresh air flap motor, M36 *6450.0</a>	<a href="#">Press Here</a>
<a href="#">Fresh air flap motor, M36 *6450.5</a>	<a href="#">Press Here</a>
<a href="#">Front cigar lighter, E28 *6332.0</a>	<a href="#">Press Here</a>
<a href="#">Front cigar lighter light, E29 *6300.0</a>	<a href="#">Press Here</a>
<a href="#">Front left ABS sensor, B2 *3450.0</a>	<a href="#">Press Here</a>
<a href="#">Front left auxiliary flasher unit, H9 *6313.0</a>	<a href="#">Press Here</a>
<a href="#">Front left brake pad sensor, B16 *6200.3</a>	<a href="#">Press Here</a>
<a href="#">Front left flasher unit, H7 *6313.0</a>	<a href="#">Press Here</a>
<a href="#">Front lid microswitch, S21 *6575.1</a>	<a href="#">Press Here</a>
<a href="#">Front power distribution box, P90 *0670.2</a>	<a href="#">Press Here</a>
<a href="#">Front power distribution box, P90 *0670.3</a>	<a href="#">Press Here</a>
<a href="#">Front right ABS sensor, B1 *3450.0</a>	<a href="#">Press Here</a>
<a href="#">Front right auxiliary flasher unit, H8 *6313.0</a>	<a href="#">Press Here</a>
<a href="#">Front right flasher unit, H4 *6313.0</a>	<a href="#">Press Here</a>
<a href="#">Fuel heating, E2000 *1360.1</a>	<a href="#">Press Here</a>
<a href="#">Fuel injector 1, Y6101 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">Fuel injector 1, Y6101 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Fuel injector 2, Y6102 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">Fuel injector 2, Y6102 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Fuel injector 3, Y6103 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">Fuel injector 3, Y6103 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Fuel injector 4, Y6104 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">Fuel injector 4, Y6104 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Fuel injector 5, Y6105 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Fuel injector 6, Y6106 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Fuel pump (EKP I), M2 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">Fuel pump (EKP I), M2 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Fuel pump (EKP I), M2 *1360.1</a>	<a href="#">Press Here</a>
<a href="#">Fuse chart *0670.1-00</a>	<a href="#">Press Here</a>
<a href="#">Fuse details *0670.3-00</a>	<a href="#">Press Here</a>
<a href="#">Fuse link (80A), F0 *0670.2</a>	<a href="#">Press Here</a>
<a href="#">Gear selector lever switch, S3 *2460.2</a>	<a href="#">Press Here</a>
<a href="#">Gear selector lever switch, S3 *2460.4</a>	<a href="#">Press Here</a>
<a href="#">Gear selector lever switch, S3 *2460.5</a>	<a href="#">Press Here</a>
<a href="#">Gear shift unit, Y2153 *2460.5-01</a>	<a href="#">Press Here</a>
<a href="#">Gear-shift unit, Y8505 *2460.2-01</a>	<a href="#">Press Here</a>
<a href="#">Gearshift unit, Y8505y *2460.4</a>	<a href="#">Press Here</a>
<a href="#">General module, A1 *6100.0</a>	<a href="#">Press Here</a>
<a href="#">General module safety relay, K15 *6100.0</a>	<a href="#">Press Here</a>



<a href="#">Glove compartment light, E42 *6332.0</a>	<a href="#">Press Here</a>
<a href="#">Glove compartment light switch, S37 *6332.0</a>	<a href="#">Press Here</a>
<a href="#">Gong I, H10 *6581.0-02</a>	<a href="#">Press Here</a>
<a href="#">Gradient monitor (DWA), B28 *6575.1</a>	<a href="#">Press Here</a>
<a href="#">Ground distribution *0670.4-00</a>	<a href="#">Press Here</a>
<a href="#">Handbrake switch, S31 *6200.3</a>	<a href="#">Press Here</a>
<a href="#">Hazard flasher relay, K16 *6313.0</a>	<a href="#">Press Here</a>
<a href="#">Hazard warning switch, S18 *6313.0</a>	<a href="#">Press Here</a>
<a href="#">Headlight beam angle adjust potentiometer, R13 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Headlight/fog light *6312.0-00</a>	<a href="#">Press Here</a>
<a href="#">Headlight relay, K48 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Headlight washer (ZKE/SRA) *6167.0-00</a>	<a href="#">Press Here</a>
<a href="#">Headlight washer module (SRA), N6 *6167.0</a>	<a href="#">Press Here</a>
<a href="#">Headlight washer pump, M7 *6167.0</a>	<a href="#">Press Here</a>
<a href="#">Heated oxygen sensor, B6200 *1210.8-06</a>	<a href="#">Press Here</a>
<a href="#">Heated oxygen sensor, B6200 *1210.10-08</a>	<a href="#">Press Here</a>
<a href="#">Heated seats *5203.0-00</a>	<a href="#">Press Here</a>
<a href="#">Heater plug relay, K2000 *1220.0-01</a>	<a href="#">Press Here</a>
<a href="#">Heating blower relay, K4 *6410</a>	<a href="#">Press Here</a>
<a href="#">Heating blower relay, K4 *6412</a>	<a href="#">Press Here</a>
<a href="#">Heating blower relay, K4 *6450</a>	<a href="#">Press Here</a>
<a href="#">Heating control unit, A32 *6410</a>	<a href="#">Press Here</a>
<a href="#">Hifi amplifier, A18 *6510.1</a>	<a href="#">Press Here</a>
<a href="#">High beam relay, K46 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Horn *6133.0-00</a>	<a href="#">Press Here</a>
<a href="#">Horn relay, K2 *6133.0</a>	<a href="#">Press Here</a>
<a href="#">Horn relay on-board computer, K91 *6581.0-02</a>	<a href="#">Press Here</a>
<a href="#">Horn switch, S4 *6133.0</a>	<a href="#">Press Here</a>
<a href="#">Hot film air mass meter, B6217 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Idle actuator, Y6130 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">Idle actuator, Y6130 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Ignition coil, T6150 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">Ignition coil 1, T6151 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Ignition coil 2, T6152 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Ignition coil 3, T6153 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Ignition coil 4, T6154 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Ignition coil 5, T6155 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Ignition coil 6, T6156 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Ignition switch, 82 *0670.2</a>	<a href="#">Press Here</a>
<a href="#">IHKA operating switch, S26</a>	<a href="#">Press Here</a>
<a href="#">IHKR/F3 Operating panel, S134w *6450.5</a>	<a href="#">Press Here</a>
<a href="#">IHKR/F3 switch unit, S135w *6450.5</a>	<a href="#">Press Here</a>
<a href="#">Immersion tube sensor, B6 *6200.3</a>	<a href="#">Press Here</a>
<a href="#">Independent heating, E50 *6412</a>	<a href="#">Press Here</a>
<a href="#">Independent heating relay, K62 *6412</a>	<a href="#">Press Here</a>
<a href="#">Independent heating/ventilation control unit, A14 *6412</a>	<a href="#">Press Here</a>
<a href="#">Independent heating/ventilation with HR34 *6412.1-00</a>	<a href="#">Press Here</a>
<a href="#">Independent heating/ventilation with IHKA *6412.0-00</a>	<a href="#">Press Here</a>
<a href="#">Independent heating/ventilation with IHKR/F3 *6412.18-00</a>	<a href="#">Press Here</a>
<a href="#">Independent heating/ventilation with IHRF3 *6412.14-00</a>	<a href="#">Press Here</a>
<a href="#">Independent ventilation with HR34 *6412.3-00</a>	<a href="#">Press Here</a>
<a href="#">Independent ventilation with IHKA *6412.2-00</a>	<a href="#">Press Here</a>
<a href="#">Independent ventilation with IHKR/3 *6412.19-00</a>	<a href="#">Press Here</a>
<a href="#">Independent ventilation with IHRF3 *6412.15-00</a>	<a href="#">Press Here</a>

<a href="#">Index *0100.0-00</a>	<a href="#">Press Here</a>
<a href="#">Inertia switch, 827 *6350.0</a>	<a href="#">Press Here</a>
<a href="#">Infrared locking system (IR) *6610.0-00</a>	<a href="#">Press Here</a>
<a href="#">Injection quantity control unit, Y2010 *1360.1-05</a>	<a href="#">Press Here</a>
<a href="#">Instrument cluster, A2w *6200.3</a>	<a href="#">Press Here</a>
<a href="#">Instrument cluster (redesigned standard version) *6200.3-00</a>	<a href="#">Press Here</a>
<a href="#">Intake air temperature sensor, B6205 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Intensive washer pump, M5 *6160.0</a>	<a href="#">Press Here</a>
<a href="#">Interior *6332.0-00</a>	<a href="#">Press Here</a>
<a href="#">Interior light control (ZKE/IB) *6330.0-00</a>	<a href="#">Press Here</a>
<a href="#">Interior light, left rear, E39 *6330.0</a>	<a href="#">Press Here</a>
<a href="#">Interior light, left rear, E39 *6330.1</a>	<a href="#">Press Here</a>
<a href="#">Interior light, right rear, E40 *6330.0</a>	<a href="#">Press Here</a>
<a href="#">Interior light, right rear, E40 *6330.1</a>	<a href="#">Press Here</a>
<a href="#">Interior/reading lamp, front, E34 *6330.0</a>	<a href="#">Press Here</a>
<a href="#">Interior/reading lamp, front, E34 *6330.1</a>	<a href="#">Press Here</a>
<a href="#">Introduction *0110.0-00</a>	<a href="#">Press Here</a>
<a href="#">Jumper, B900 *1240.0-01</a>	<a href="#">Press Here</a>
<a href="#">Kick-down switch, S8507 *2460.2-05</a>	<a href="#">Press Here</a>
<a href="#">Kick-down switch, S8507 *2460.4-00</a>	<a href="#">Press Here</a>
<a href="#">Knock sensor 1 cyl. 1-3, B6241w *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Knock sensor 2 cyl. 4-6, B6242w *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Left brake light, H24 *6325.0</a>	<a href="#">Press Here</a>
<a href="#">Left fog light, E26 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Left footwell flap motor, M31 *6450.0</a>	<a href="#">Press Here</a>
<a href="#">Left footwell sensor, B26 *6410</a>	<a href="#">Press Here</a>
<a href="#">Left front high range speaker, H59 *6510.0</a>	<a href="#">Press Here</a>
<a href="#">Left front high range speaker, H59 *6510.1</a>	<a href="#">Press Here</a>
<a href="#">Left front low range speaker, H58 *6510.0</a>	<a href="#">Press Here</a>
<a href="#">Left front low range speaker, H58 *6510.1</a>	<a href="#">Press Here</a>
<a href="#">Left front mid-range speaker, H55 *6510.1</a>	<a href="#">Press Here</a>
<a href="#">Left headlight, E13 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Left headlight beam angle adjust actuator, M80 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Left heat exchanger sensor, B11 *6410</a>	<a href="#">Press Here</a>
<a href="#">Left heat exchanger sensor, B11 *6450</a>	<a href="#">Press Here</a>
<a href="#">Left high beam, E11 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Left horn, H2 *6133.0</a>	<a href="#">Press Here</a>
<a href="#">Left licence plate light, E43 *6320.0</a>	<a href="#">Press Here</a>
<a href="#">Left mixing flap motor, M39</a>	<a href="#">Press Here</a>
<a href="#">Left outside mirror, Y5</a>	<a href="#">Press Here</a>
<a href="#">Left parking light, E15</a>	<a href="#">Press Here</a>
<a href="#">Left parking light relay, K26 *6300.0</a>	<a href="#">Press Here</a>
<a href="#">Left rear fog light, H26 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Left rear high range speaker, H56 *6510.1</a>	<a href="#">Press Here</a>
<a href="#">Left rear lid light, E46 *6322.0</a>	<a href="#">Press Here</a>
<a href="#">Left rear low range speaker, H57 *6510.0</a>	<a href="#">Press Here</a>
<a href="#">Left rear low range speaker, H57 *6510.1</a>	<a href="#">Press Here</a>
<a href="#">Left reversing light, H27 *6322.0</a>	<a href="#">Press Here</a>
<a href="#">Lefttail light, E16 *6314.0</a>	<a href="#">Press Here</a>
<a href="#">Lefttrunk light, H90 *6320.0</a>	<a href="#">Press Here</a>
<a href="#">Left ventilation flap motor, M38 *6450.0</a>	<a href="#">Press Here</a>
<a href="#">Left windscreen washer jet heater, E51 *6169.0</a>	<a href="#">Press Here</a>
<a href="#">Licence plate/luggage compartment lights *6320.0-00</a>	<a href="#">Press Here</a>
<a href="#">Light switch, S8 *6300.0</a>	<a href="#">Press Here</a>

<a href="#">Light switch, S9 *6300.0</a>	<a href="#">Press Here</a>
<a href="#">Light switch *6300.0-00</a>	<a href="#">Press Here</a>
<a href="#">Lockout relay, C900 *6424.0</a>	<a href="#">Press Here</a>
<a href="#">Lumbar support *5212.0-00</a>	<a href="#">Press Here</a>
<a href="#">Metering pump (independent heating), Y7 *6412</a>	<a href="#">Press Here</a>
<a href="#">Mixing actuator, E41y *6300.0</a>	<a href="#">Press Here</a>
<a href="#">Motor drive I DDSHD, M87 *5410.2-02</a>	<a href="#">Press Here</a>
<a href="#">Motor drive II DDSHD, M88 *5410.2-02</a>	<a href="#">Press Here</a>
<a href="#">Multi-function clock, N10 *6213.2</a>	<a href="#">Press Here</a>
<a href="#">Multi-function clock *6213.2-00</a>	<a href="#">Press Here</a>
<a href="#">Needle lift sensor, Y2008 *1360.1-03</a>	<a href="#">Press Here</a>
<a href="#">Oil pressure switch, B2008 *6200.3-10</a>	<a href="#">Press Here</a>
<a href="#">Oil pressure switch, B6231 *6200.3</a>	<a href="#">Press Here</a>
<a href="#">On-board computer, N4 *6581.0</a>	<a href="#">Press Here</a>
<a href="#">On-board computer (ÃÑ IV) *6581.0-00</a>	<a href="#">Press Here</a>
<a href="#">On-board computer temperature sensor, B21 *6581.0-01</a>	<a href="#">Press Here</a>
<a href="#">Optional extra Taxi *6740.0</a>	<a href="#">Press Here</a>
<a href="#">Output stage, N2 *6450.0</a>	<a href="#">Press Here</a>
<a href="#">Output stage, N2 *6412</a>	<a href="#">Press Here</a>
<a href="#">Outside temperature sensor, B13 *6410</a>	<a href="#">Press Here</a>
<a href="#">Outside temperature sensor, B13 *6450</a>	<a href="#">Press Here</a>
<a href="#">Oxygen sensor relay, K6303 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">Park distance control (PDC) *6621.0-00</a>	<a href="#">Press Here</a>
<a href="#">Park/tail/underhood lights *6314.0-00</a>	<a href="#">Press Here</a>
<a href="#">Parking aid control unit, A81 *6621.0</a>	<a href="#">Press Here</a>
<a href="#">Parking aid speaker, H40 *6621.0-02</a>	<a href="#">Press Here</a>
<a href="#">Passenger's airbag gas generator 1, G6 *3234.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's backrest heating, E59 *5203.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's backrest recliner motor, M58 *5200.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's door contact switch, S13 *6330.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's door contact switch, S13 *6330.1</a>	<a href="#">Press Here</a>
<a href="#">Passenger's door lock switch, S49 *5126.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's door lock switch, S49 *5126.1</a>	<a href="#">Press Here</a>
<a href="#">Passenger's headrest motor, M57 *5200.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's lumbar support switch, 855 *5212.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's make-up mirror light, E36 *6332.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's make-up mirror switch, 878 *6332.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's seat adjustment switch, 856 *5200.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's seat cushion tilt motor, M61 *5200.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's seat heating, E58 *5203.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's seat heating switch, 854 *5203.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's seat height adjustment motor, M59 *5200.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's seat lumbar support motor, M56 *5212.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's seat movement motor, M60 *5200.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's thigh support motor, M66 *5200.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's window end position sensor, S44 *5133.0</a>	<a href="#">Press Here</a>
<a href="#">Passenger's window monitoring switch (DWA), S99 *6575.1</a>	<a href="#">Press Here</a>
<a href="#">Passenger's window motor, M23 *5133.0</a>	<a href="#">Press Here</a>
<a href="#">Pedal value sensor, R10 *1360.1-05</a>	<a href="#">Press Here</a>
<a href="#">Power distribution *0670.2-00</a>	<a href="#">Press Here</a>
<a href="#">Power distribution chart *0670.0-00</a>	<a href="#">Press Here</a>
<a href="#">Power mirrors *5116.0-00</a>	<a href="#">Press Here</a>
<a href="#">Power seats *5200.0-00</a>	<a href="#">Press Here</a>
<a href="#">Power window end position sensor, rear left, S45 *5133.0</a>	<a href="#">Press Here</a>

<a href="#">Power window end position sensor, rear right, S46 *5133.0</a>	<a href="#">Press Here</a>
<a href="#">Power window motor, rear left, M20 *5133.0-03</a>	<a href="#">Press Here</a>
<a href="#">Power window motor, rear right, M22 *5133.0</a>	<a href="#">Press Here</a>
<a href="#">Power window switch (centre console), S40 *5133.0</a>	<a href="#">Press Here</a>
<a href="#">Power windows (ZKE/FH) *5133.0-00</a>	<a href="#">Press Here</a>
<a href="#">Preheating system *1220.0-00</a>	<a href="#">Press Here</a>
<a href="#">Pressure switch, B9508 *6450</a>	<a href="#">Press Here</a>
<a href="#">Pressure switch, B8y *6450</a>	<a href="#">Press Here</a>
<a href="#">Pressure switch, B9y *6454.0</a>	<a href="#">Press Here</a>
<a href="#">Program switch, 88503 *2460.2-02</a>	<a href="#">Press Here</a>
<a href="#">Program switch, 88503 *2460.4-02</a>	<a href="#">Press Here</a>
<a href="#">Program switch, 88503 *2460.5-02</a>	<a href="#">Press Here</a>
<a href="#">Radio, N9 *6510.0</a>	<a href="#">Press Here</a>
<a href="#">Radio, N9 *6510.1</a>	<a href="#">Press Here</a>
<a href="#">Radio/HiFi *6510.1-00</a>	<a href="#">Press Here</a>
<a href="#">Radio provisions *6510.2-00</a>	<a href="#">Press Here</a>
<a href="#">Radio receiver, N20 *6510</a>	<a href="#">Press Here</a>
<a href="#">Radio/stereo *6510.0-00</a>	<a href="#">Press Here</a>
<a href="#">Raised brake light, H34 *6325.0</a>	<a href="#">Press Here</a>
<a href="#">Rear centre left converter, B35 *6621.0-02</a>	<a href="#">Press Here</a>
<a href="#">Rear centre right converter, B36 *6621.0-02</a>	<a href="#">Press Here</a>
<a href="#">Rear defogger/arrtenna, ÅP *6424.0</a>	<a href="#">Press Here</a>
<a href="#">Rear defogger relay, K13 *6424.0</a>	<a href="#">Press Here</a>
<a href="#">Rear left AB8 sensor, B4 *3450.0</a>	<a href="#">Press Here</a>
<a href="#">Rear left converter, B34 *6621.0-02</a>	<a href="#">Press Here</a>
<a href="#">Rear left door DWA conductor loop, R21 *6575.1</a>	<a href="#">Press Here</a>
<a href="#">Rear left flasher unit, H6 *6313.0</a>	<a href="#">Press Here</a>
<a href="#">Rear left power window switch, 841 *5133.0</a>	<a href="#">Press Here</a>
<a href="#">Rear left window monitoring switch (DWA), 8102 *6575.1</a>	<a href="#">Press Here</a>
<a href="#">Rear Ø door contact switch, 816 *6313.0</a>	<a href="#">Press Here</a>
<a href="#">Rear lid lamp, E33 *6320.0</a>	<a href="#">Press Here</a>
<a href="#">Rear lid light switch, 861 *6320.0</a>	<a href="#">Press Here</a>
<a href="#">Rear lid lock switch, 8167 *5126.0-05</a>	<a href="#">Press Here</a>
<a href="#">Rear lid servo opening motor, M97 *5126.0-06</a>	<a href="#">Press Here</a>
<a href="#">Rear lid servo opening motor, M97 *5126.1-06</a>	<a href="#">Press Here</a>
<a href="#">Rear lid switch, 8172 *6320.0</a>	<a href="#">Press Here</a>
<a href="#">Rear power distribution box, P91 *0670.2</a>	<a href="#">Press Here</a>
<a href="#">Rear power distribution box, P91 *0670.3</a>	<a href="#">Press Here</a>
<a href="#">Rear RH door contact switch, 815 *6330.0</a>	<a href="#">Press Here</a>
<a href="#">Rear RH door contact switch, 815 *6330.1</a>	<a href="#">Press Here</a>
<a href="#">Rear right AB8 sensor, B3 *3450.0</a>	<a href="#">Press Here</a>
<a href="#">Rear right brake pad sensor, B17 *6200.3</a>	<a href="#">Press Here</a>
<a href="#">Rear right converter, B37 *6621.0-02</a>	<a href="#">Press Here</a>
<a href="#">Rear right door DWA conductor loop, R22 *6575.1</a>	<a href="#">Press Here</a>
<a href="#">Rear right flasher unit, H5 *6313.0</a>	<a href="#">Press Here</a>
<a href="#">Rear right power window switch, 842 *5133.0</a>	<a href="#">Press Here</a>
<a href="#">Rear right window monitoring switch (DWA), 8101 *6575.1</a>	<a href="#">Press Here</a>
<a href="#">Rear seat microswitch (DWA), 824 *6575.1</a>	<a href="#">Press Here</a>
<a href="#">Rear washer pump, M95 *6162.0-00</a>	<a href="#">Press Here</a>
<a href="#">Rear window defogger/antenna *6424.0-00</a>	<a href="#">Press Here</a>
<a href="#">Rear window defogger I, E9 *6424.0</a>	<a href="#">Press Here</a>
<a href="#">Rear window heating switch, 876 *6410.1</a>	<a href="#">Press Here</a>
<a href="#">Rear window heating switch, 876 *6410.6</a>	<a href="#">Press Here</a>
<a href="#">Rear window opening switch, 8147 *6320.0</a>	<a href="#">Press Here</a>

<a href="#">Rear window servo opening motor, M96 *5126.0-06</a>	<a href="#">Press Here</a>
<a href="#">Rear window servo opening motor, M96 *5126.1-06</a>	<a href="#">Press Here</a>
<a href="#">Rear window servo opening switch, 8170 *5126.0-06</a>	<a href="#">Press Here</a>
<a href="#">Rear window servo opening switch, 8170 *5126.1-06</a>	<a href="#">Press Here</a>
<a href="#">Rear window servo opening switch, 8171 *5126.0-06</a>	<a href="#">Press Here</a>
<a href="#">Rear window servo opening switch, 8171 *5126.1-06</a>	<a href="#">Press Here</a>
<a href="#">Rear window wipe/wash system *6162.0-00</a>	<a href="#">Press Here</a>
<a href="#">Rear wipe/wash interval control unit, A36 *6162.0</a>	<a href="#">Press Here</a>
<a href="#">Rear wiper motor, M94 *6162.0-01</a>	<a href="#">Press Here</a>
<a href="#">Rear wiper relay II, K92 *6162.0-01</a>	<a href="#">Press Here</a>
<a href="#">Relay box independent heating/independent ventilation. A15 ..... 6412</a>	<a href="#">Press Here</a>
<a href="#">Relay module, A5 *6100.0</a>	<a href="#">Press Here</a>
<a href="#">Remote thermometer sensor, B2009 *6200.3</a>	<a href="#">Press Here</a>
<a href="#">Remote thermometer sensor, B6232 *6200.3</a>	<a href="#">Press Here</a>
<a href="#">Resistor, R6240 *0670.4</a>	<a href="#">Press Here</a>
<a href="#">Reverse polarity relay, K44 *6581.0</a>	<a href="#">Press Here</a>
<a href="#">Reversing light switch (manual transmission), S92 *6322.0</a>	<a href="#">Press Here</a>
<a href="#">Reversing lights *6322.0-00</a>	<a href="#">Press Here</a>
<a href="#">Right brake light, H31 *6325.0</a>	<a href="#">Press Here</a>
<a href="#">Right fog light. E27 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">RigM footwell flap motor, M32 *6450.0</a>	<a href="#">Press Here</a>
<a href="#">Right footwell sensor, B27 *6410</a>	<a href="#">Press Here</a>
<a href="#">Right front high range speaker, H50 *6510.0</a>	<a href="#">Press Here</a>
<a href="#">RigM front high range speaker, H50 *6510.1</a>	<a href="#">Press Here</a>
<a href="#">RigM front low range speaker, H51 *6510.0</a>	<a href="#">Press Here</a>
<a href="#">Right front low range speaker, H51 *6510.1</a>	<a href="#">Press Here</a>
<a href="#">Right front mid-range speaker, H54 *6510.1</a>	<a href="#">Press Here</a>
<a href="#">Right headlight, E14 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Right headlight beam angle adjust actuator, M81 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Right heat exchanger sensor, B12 *6410</a>	<a href="#">Press Here</a>
<a href="#">Right heat exchanger sensor, B12 *6450</a>	<a href="#">Press Here</a>
<a href="#">Right high beam, E12 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Right horn, H3 *6133.0</a>	<a href="#">Press Here</a>
<a href="#">Right licence plate light, E44 *6320.0</a>	<a href="#">Press Here</a>
<a href="#">Right luggage compartment lamp, H91 *6320.0</a>	<a href="#">Press Here</a>
<a href="#">Right mixing flap motor, M34 *6450.0</a>	<a href="#">Press Here</a>
<a href="#">Right mixing flap motor, M34 *6450.5</a>	<a href="#">Press Here</a>
<a href="#">Right outside mirror, Y6 *5116.0-01</a>	<a href="#">Press Here</a>
<a href="#">Right parking light, E19 *6314.0</a>	<a href="#">Press Here</a>
<a href="#">Right parking light/licence plate light relay, K25 *6300.0</a>	<a href="#">Press Here</a>
<a href="#">Right rear fog light, H29 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Right rear high range speaker, H53 *6510.1</a>	<a href="#">Press Here</a>
<a href="#">Right rear lid light, E47 *6322.0</a>	<a href="#">Press Here</a>
<a href="#">Right rear low range speaker, H52 *6510.1</a>	<a href="#">Press Here</a>
<a href="#">Right rear low range speaker, H52 *6510.0</a>	<a href="#">Press Here</a>
<a href="#">Right reversing light, H28 *6322.0</a>	<a href="#">Press Here</a>
<a href="#">Right tail light, E17 *6314.0</a>	<a href="#">Press Here</a>
<a href="#">Right ventilation flap motor, M33 *6450.0</a>	<a href="#">Press Here</a>
<a href="#">Right windscreen washer jet heater, E52 *6169.0</a>	<a href="#">Press Here</a>
<a href="#">Servo relay module, A84 *5126.0</a>	<a href="#">Press Here</a>
<a href="#">Servotronic *3240.0-00</a>	<a href="#">Press Here</a>
<a href="#">Servotronic control unit, A17 *3240.0</a>	<a href="#">Press Here</a>
<a href="#">Solder connector location views *8000.0-00</a>	<a href="#">Press Here</a>

<a href="#">Solenoid clutch, Y2 *6450.0</a>	<a href="#">Press Here</a>
<a href="#">Solenoid clutch, Y2 *6450.5</a>	<a href="#">Press Here</a>
<a href="#">Solenoid valve independent heating/ventilation II, Y12 *6412</a>	<a href="#">Press Here</a>
<a href="#">Solenoid valve, injection timing device, B2011 *1360.1-02</a>	<a href="#">Press Here</a>
<a href="#">Special option-Taxi *6740.0-00</a>	<a href="#">Press Here</a>
<a href="#">Speed sensor EGS, Y8516 *2460.2-01</a>	<a href="#">Press Here</a>
<a href="#">Speedometer reed contact, B10 *6200.3</a>	<a href="#">Press Here</a>
<a href="#">Starter, M2025 *1240.0</a>	<a href="#">Press Here</a>
<a href="#">Starter, M6510 *1240.0</a>	<a href="#">Press Here</a>
<a href="#">Starter *1240.0-00</a>	<a href="#">Press Here</a>
<a href="#">Starter relay, K1 *1240.0</a>	<a href="#">Press Here</a>
<a href="#">Steering column adjustment motor, M82 *3231.0</a>	<a href="#">Press Here</a>
<a href="#">Steering column adjustment switch, S119z *3231.0-00</a>	<a href="#">Press Here</a>
<a href="#">Sun roof motor, M24 *5410.0</a>	<a href="#">Press Here</a>
<a href="#">Sun shade control unit, A82 *5146.0</a>	<a href="#">Press Here</a>
<a href="#">Sun shades motor, M74 *5146.0</a>	<a href="#">Press Here</a>
<a href="#">Sun shades switch, S110 *5146.0</a>	<a href="#">Press Here</a>
<a href="#">Sunroof (ZKE/SHD) *5410.0-00</a>	<a href="#">Press Here</a>
<a href="#">Sunroof position sensor (SHD), S39 *5410.0</a>	<a href="#">Press Here</a>
<a href="#">Sunroof switch (SHD), S38 *5410.0</a>	<a href="#">Press Here</a>
<a href="#">Sweden/Canada coding plug, K80 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Switch for driver's seat thigh support, S93 *5200.0</a>	<a href="#">Press Here</a>
<a href="#">Switch for passenger's seat thigh support, S94 *5200.0</a>	<a href="#">Press Here</a>
<a href="#">Symbols *0140.0-00</a>	<a href="#">Press Here</a>
<a href="#">Tail light, left, H25 *6314.0</a>	<a href="#">Press Here</a>
<a href="#">Tail light, right, H30 *6314.0</a>	<a href="#">Press Here</a>
<a href="#">Telephone C-network, U2 *6561.0</a>	<a href="#">Press Here</a>
<a href="#">Temperature distribution potentiometer, R1 *6450.0</a>	<a href="#">Press Here</a>
<a href="#">Temperature distribution potentiometer, R1 *6450.5</a>	<a href="#">Press Here</a>
<a href="#">Temperature regulator automatic heating control 3 (IHRF3), A32w ..... 6410</a>	<a href="#">Press Here</a>
<a href="#">Temperature regulator automatic heating control 3 (IHRF3), A32w ..... 6412</a>	<a href="#">Press Here</a>
<a href="#">Temperature switch, radiator shutter, S2000 *1360.1-07</a>	<a href="#">Press Here</a>
<a href="#">Temperature switch, radiator shutter, S2156 *1360.1-07</a>	<a href="#">Press Here</a>
<a href="#">Thermal switch, heated jets, 8198 *6169.0-00</a>	<a href="#">Press Here</a>
<a href="#">Throttle potentiometer, R6252 *1210.8</a>	<a href="#">Press Here</a>
<a href="#">Throttle potentiometer, R6252 *1210.10</a>	<a href="#">Press Here</a>
<a href="#">Trailer coupling *6328.1-00</a>	<a href="#">Press Here</a>
<a href="#">Turn indicator/low beam selector, S7 *6312.0</a>	<a href="#">Press Here</a>
<a href="#">Turn signal/hazard warning system *6313.0-00</a>	<a href="#">Press Here</a>
<a href="#">Unloader relay Term.61, K61 *1230.0</a>	<a href="#">Press Here</a>
<a href="#">Unloader relay terminal 15, K9 *0670.2</a>	<a href="#">Press Here</a>
<a href="#">Unloader relay terminal R, K3 *0670.2</a>	<a href="#">Press Here</a>
<a href="#">Volute spring, C101 *3234.0</a>	<a href="#">Press Here</a>
<a href="#">Washer pump, M4 *6160.0</a>	<a href="#">Press Here</a>
<a href="#">Washer pump, M4 *6160.1</a>	<a href="#">Press Here</a>
<a href="#">Washer pump relay Intensive wash, K5 *6160.0</a>	<a href="#">Press Here</a>
<a href="#">Washer pump relay Intensive wash, K5 *6167.0-01</a>	<a href="#">Press Here</a>
<a href="#">Water level sensor Fuel filter, B2016 *1360.1-03</a>	<a href="#">Press Here</a>
<a href="#">Water pump relay, K8b *6410</a>	<a href="#">Press Here</a>
<a href="#">Water pump relay, K8b *6450</a>	<a href="#">Press Here</a>
<a href="#">Water valves, Y4 *6410</a>	<a href="#">Press Here</a>
<a href="#">Water valves, Y4 *6412</a>	<a href="#">Press Here</a>



[Press Here](#)

[Press Here](#)

[Press Here](#)



**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Automatic climate control (IHKA)

Scheme 6450.0

**Pin Assignment**

A=X610	26-pin, white	B=X611	26-pin, green
C=X613	26-pin, blue		
D=X614	26-pin, yellow		

**Pin Assignment X610**

Pin	Type	Description/Function	Connection
1	A	Signal, rear compartment	Rear actuator motor
2	A	Signal, rear compartment	Rear actuator motor
3	A	Signal, rear compartment	Rear actuator motor
4	A	Signal, rear compartment	Rear actuator motor
5	A	Blower ON	Blower output stage
6	A	Signal, air conditioning ON	A/C relay
7	A	Signal, rear window defogger ON	Rear window defogger relay
8	A	Signal, compressor ON	Pressure switch B8y
9		not used	
10		not used	
11		not used	
12	E	Terminal 30	Fuse
13	E	Terminal 30	Fuse
14	A	Signal, recirculated air	Recirculated air flap motor
15	A	Signal, recirculated air	Recirculated air flap motor
16	A	Signal, recirculated air	Recirculated air flap motor
17	A	Signal, recirculated air	Recirculated air flap motor
18	A	Activation, lights	IHKA operating unit
19	A	Activation, rear window defogger lights	IHKA operating unit
20	E/A	TxD diagnosis line	Diagnostic connector
21	A	Activation, left water valve	Left water valve
22	A	Activation, auxiliary water pump	Auxiliary water pump relay
23	A	Activation, right water valve	Right water valve
24		not used	
25	E	Terminal 30	Fuse
26	E	Terminal 30	Fuse

**Pin Assignment X611**

Pin	Type	Description/Function	Connection
1	A	Signal, left footwell	Left footwell actuator motor
2	A	Signal, left air mixing	Mixing air flap motor, left
3	A	Signal, left air mixing	Mixing air flap motor, left
4	A	Signal, left air mixing	Mixing air flap motor, left
5	A	Signal, left air mixing	Mixing air flap motor, left
6	A	Activation, fresh air	Fresh air flap motor
7	A	Activation, fresh air	Fresh air flap motor
8	A	Activation, fresh air	Fresh air flap motor
9	A	Activation, fresh air	Fresh air flap motor
10		not used	
11		not used	
12		not used	
13		not used	
14	A	Signal, left footwell	Left footwell actuator motor
15	A	Signal, left footwell	Left footwell actuator motor
16	A	Signal, left footwell	Left footwell actuator motor
17	A	Signal, defrost	Defroster flap motor
18	A	Signal, defrost	Defroster flap motor
19	A	Signal, defrost	Defroster flap motor
20	A	Signal, defrost	Defroster flap motor
21	A	Signal, left-hand ventilation	Ventilation flap motor
22	A	Signal, left-hand ventilation	Ventilation flap motor
23	A	Signal, left-hand ventilation	Ventilation flap motor
24	A	Signal, left-hand ventilation	Ventilation flap motor
25		not used	
26		not used	

**Pin Assignment X613**

Pin	Type	Description/Function	Connection
1	M	Ground	Ground connection
2	M	Ground	Ground connection
3		not used	
4	A	Setpoint, left-hand temperature	IHKA operating unit
5	A	Setpoint, blower	IHKA operating unit
6	A	Interior sensor blower motor	Interior sensor blower motor
7	E	Outside temperature	Outside temperature sensor
8	A	Setpoint, right-hand temperature	IHKA operating unit
9	E	Evaporator temperature	Evaporator sensor
10	A	Voltage supply of actuator motors	All actuator motors
11	A	Voltage supply of actuator motors	All actuator motors
12	E	Terminal 15	Fuse
13	E	Terminal 15	Fuse
14	M	Ground	Ground connection
15	M	Ground	Ground connection
16	M	Ground for all sensors	All temperature sensors
17	A	Setpoint, mixing air	Mixing air actuator
18	E	Left heat exchanger temperature	Left heat exchanger sensor
19	E	Terminal 30 h	Alternator
20	M	Ground for potentiometer	IHKA operating unit, mixing air control
21	E	Interior temperature	IHKA operating unit
22	E	Right heat exchanger temperature	Heat exchanger sensor
23	A	Voltage supply of actuator motors	All actuator motors
24	A	Voltage supply of actuator motors	All actuator motors
25	E	Terminal 15	Fuse
26	E	Terminal 15	Fuse

**Pin Assignment X614**

Pin	Type	Description/Function	Connection
1	A	Signal, right footwell	Right footwell actuator motor
2	A	Signal, right footwell	Right footwell actuator motor
3	A	Signal, right footwell	Right footwell actuator motor
4	A	Signal, right footwell	Right footwell actuator motor
5	E	Signal, recirculated air	IHKA operating unit
6	E	Signal, defrost	IHKA operating unit
7	E	Signal, rear window defogger	IHKA operating unit
8	E	Signal, normal program	IHKA operating unit
9	E	Speedometer A signal	Instrument cluster
10	A	RxD diagnosis line	Diagnostic connector
11	A	Voltage supply for defrost/ independent heating	IHKA operating unit
12	A	Voltage supply, interior ventilation/ recirculated air/independent heating	IHKA operating unit
13	A	Voltage supply footwell/recirculated air/ rear window defogger	IHKA operating unit
14	A	Signal, right-hand ventilation	Right ventilation flap motor
15	A	Signal, right-hand ventilation	Right ventilation flap motor
16	A	Signal, right-hand ventilation	Right ventilation flap motor
17	A	Signal, right-hand ventilation	Right ventilation flap motor
18	A	Signal, right air mixing	Mixing air flap motor, right
19	A	Signal, right air mixing	Mixing air flap motor, right
20	A	Signal, right air mixing	Mixing air flap motor, right
21	A	Signal, right air mixing	Mixing air flap motor, right
22		not used	
23		not used	
24		not used	
25		not used	
26		not used	

E = Input, A = Output, M = Ground




**Automatic climate control (IHKA)**

**Current**


**520i/t, 525td/t, 525tds/t**

09/93



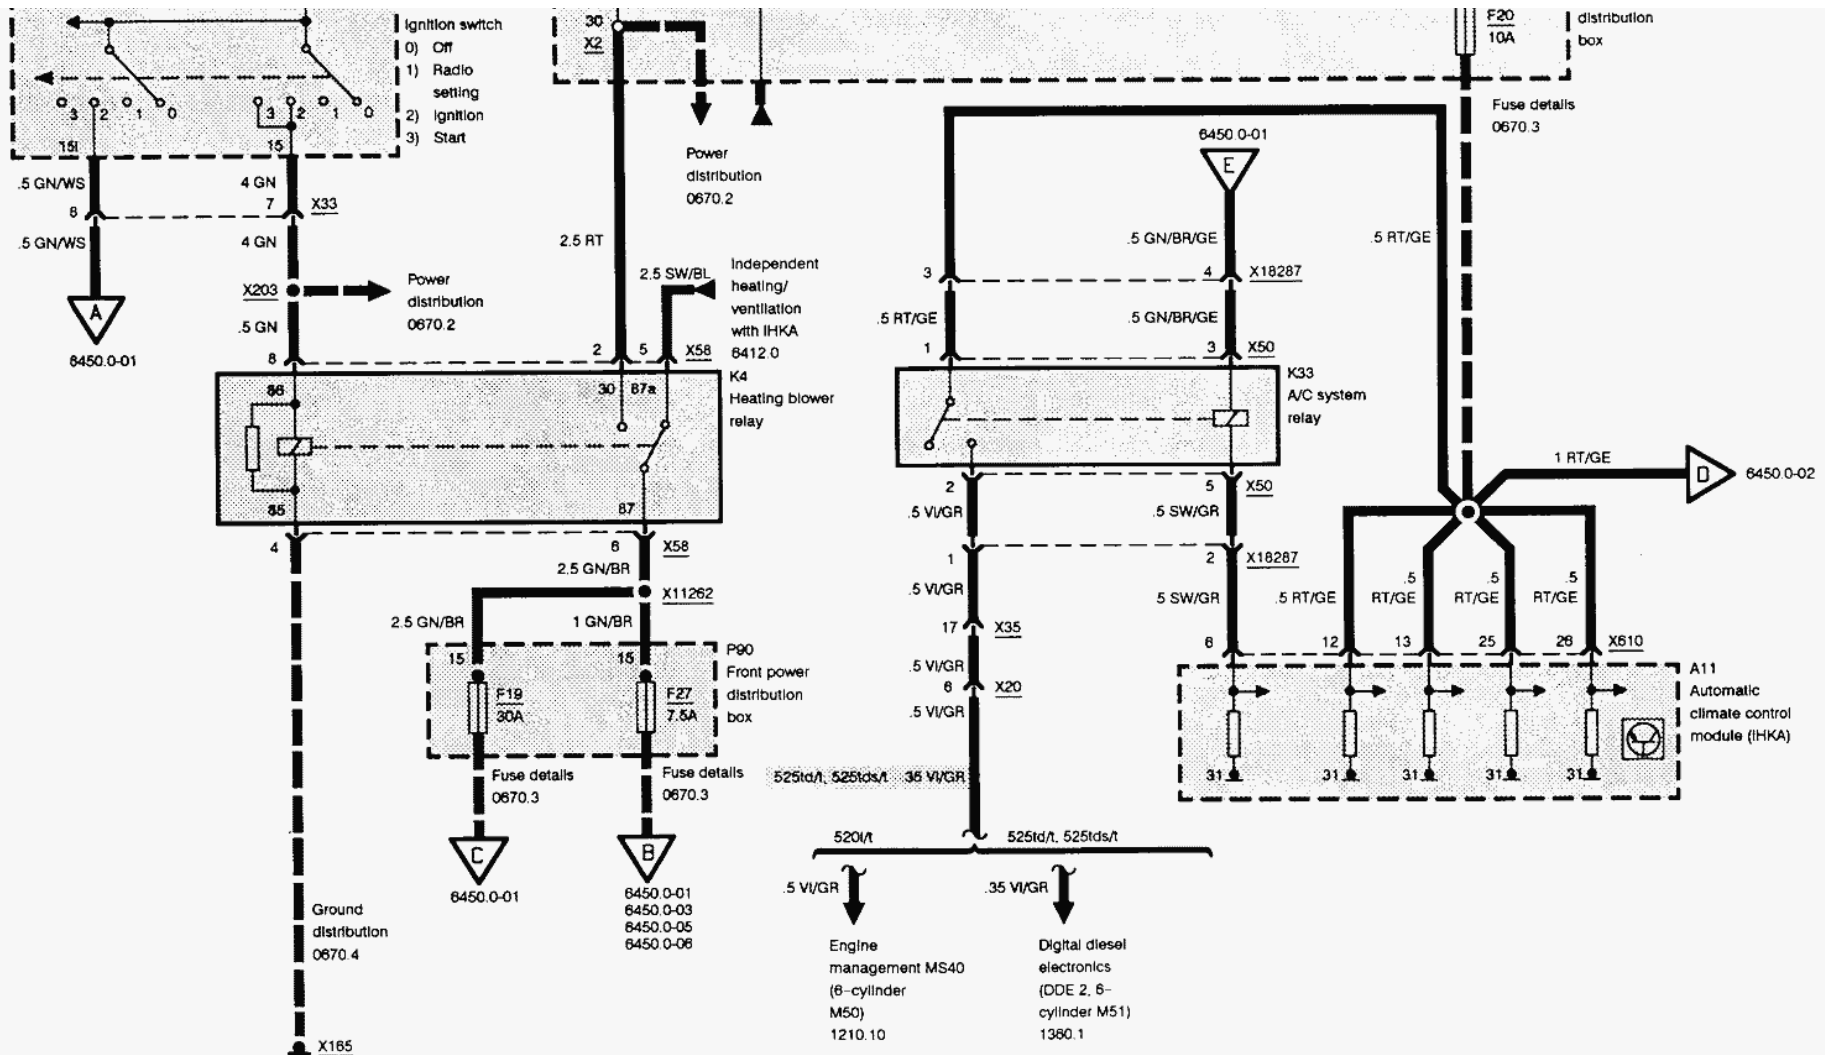


**AIR VOLUME control**

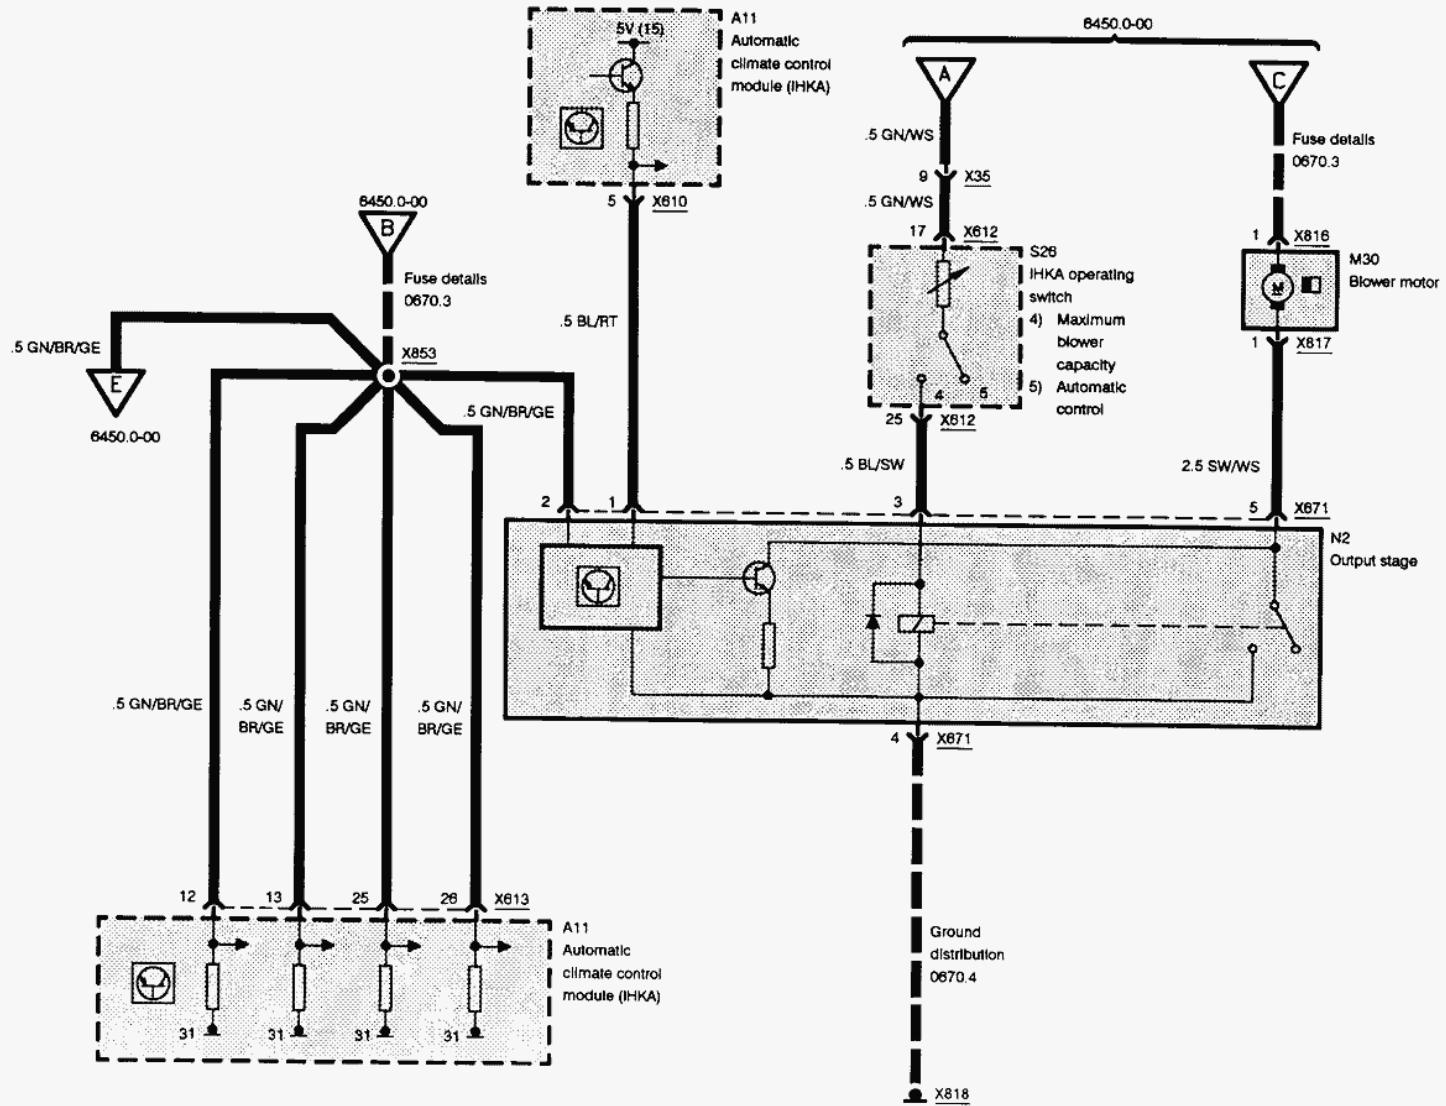


29/93  
6450.0-01  
1994

## 5 Air volume control

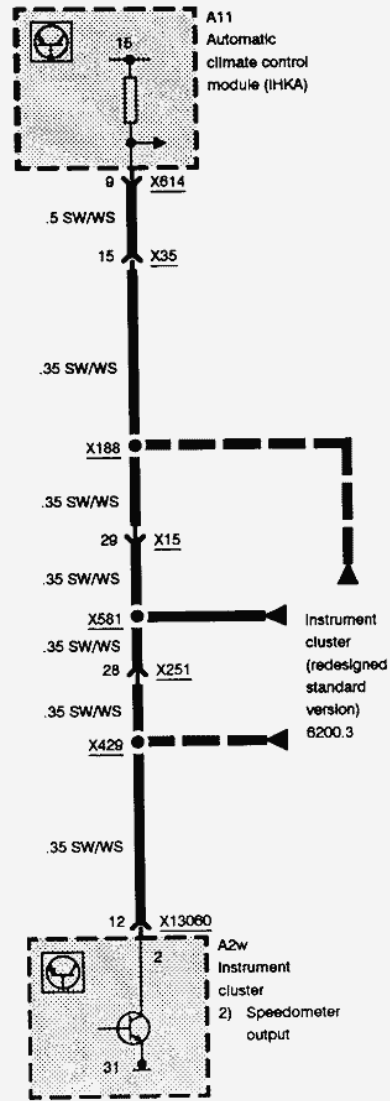

## Water valves

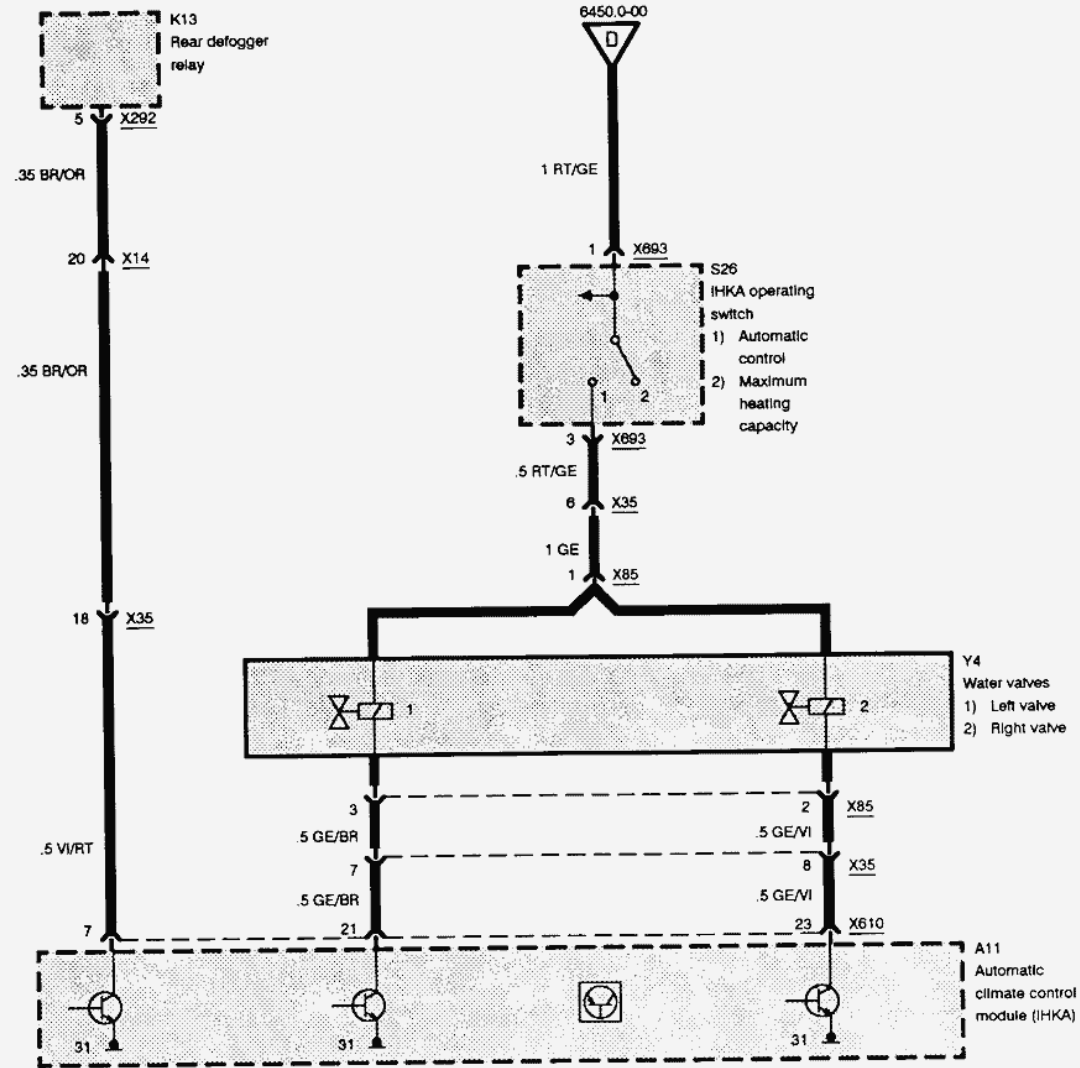




# Automatic climate control (IHKA)

520i/t, 525td/t, 525tds/t

## Temperature control

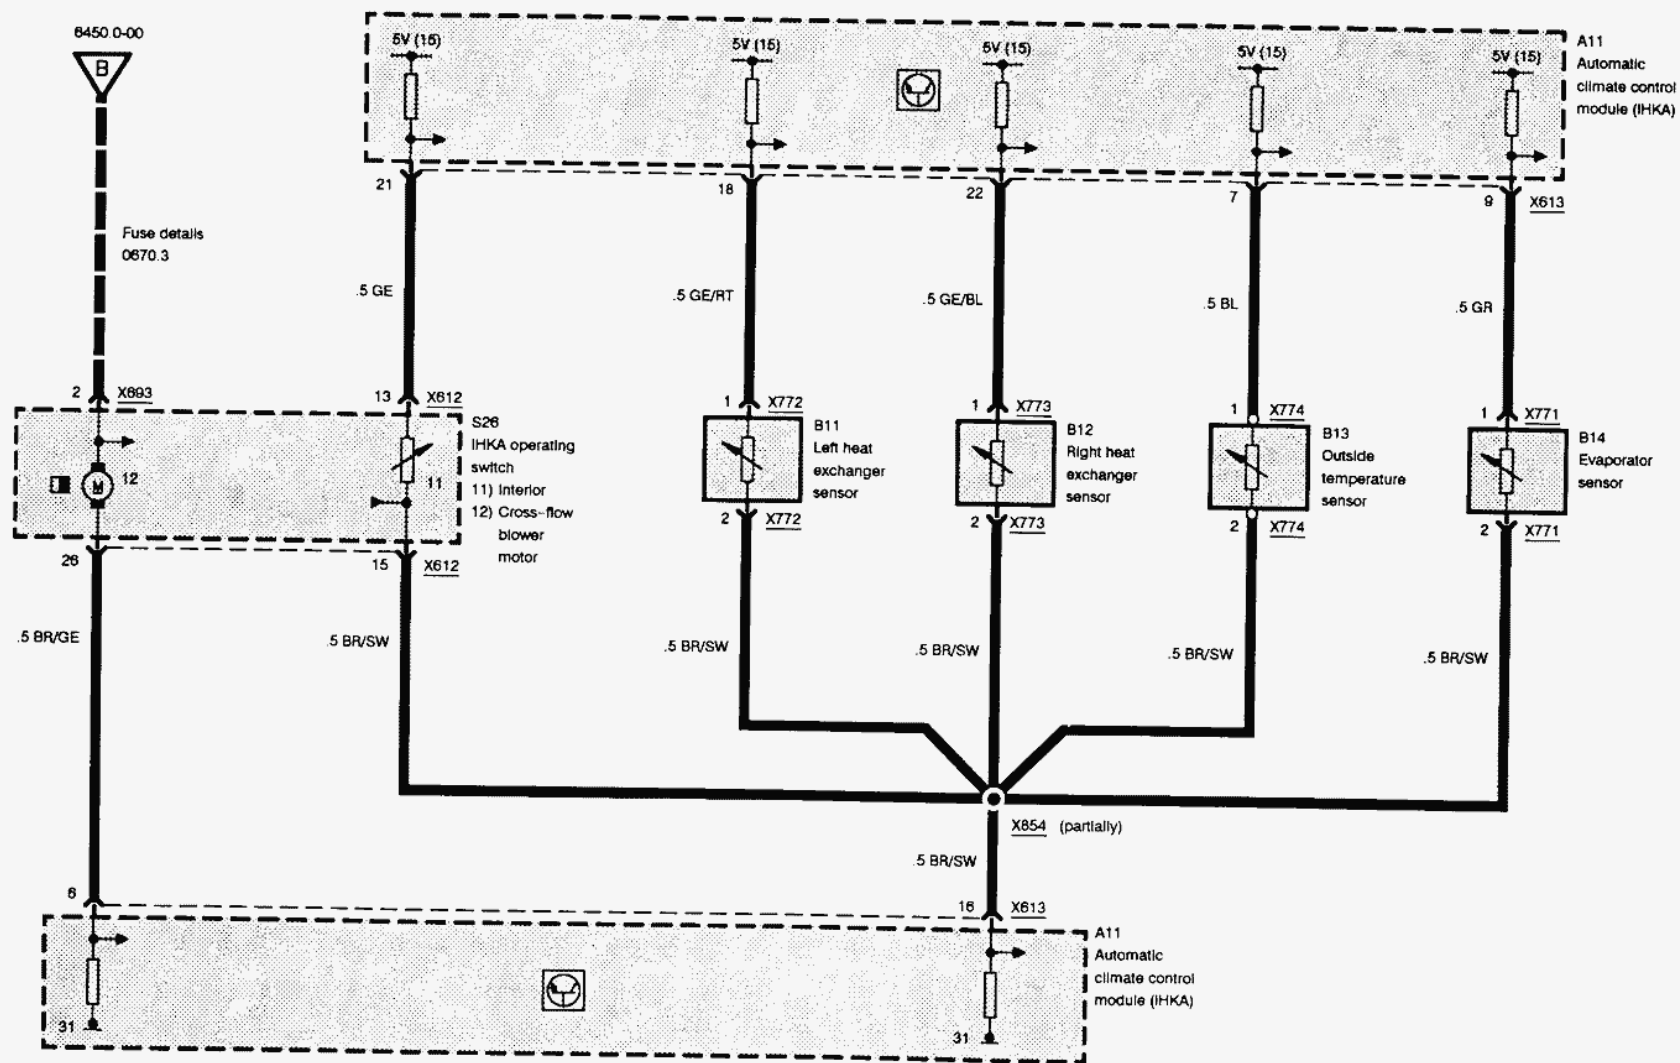

09/93

6450.0-03


1994



# Automatic climate control (IHKA)

520i/t, 525td/t, 525tds/t

## Temperature control

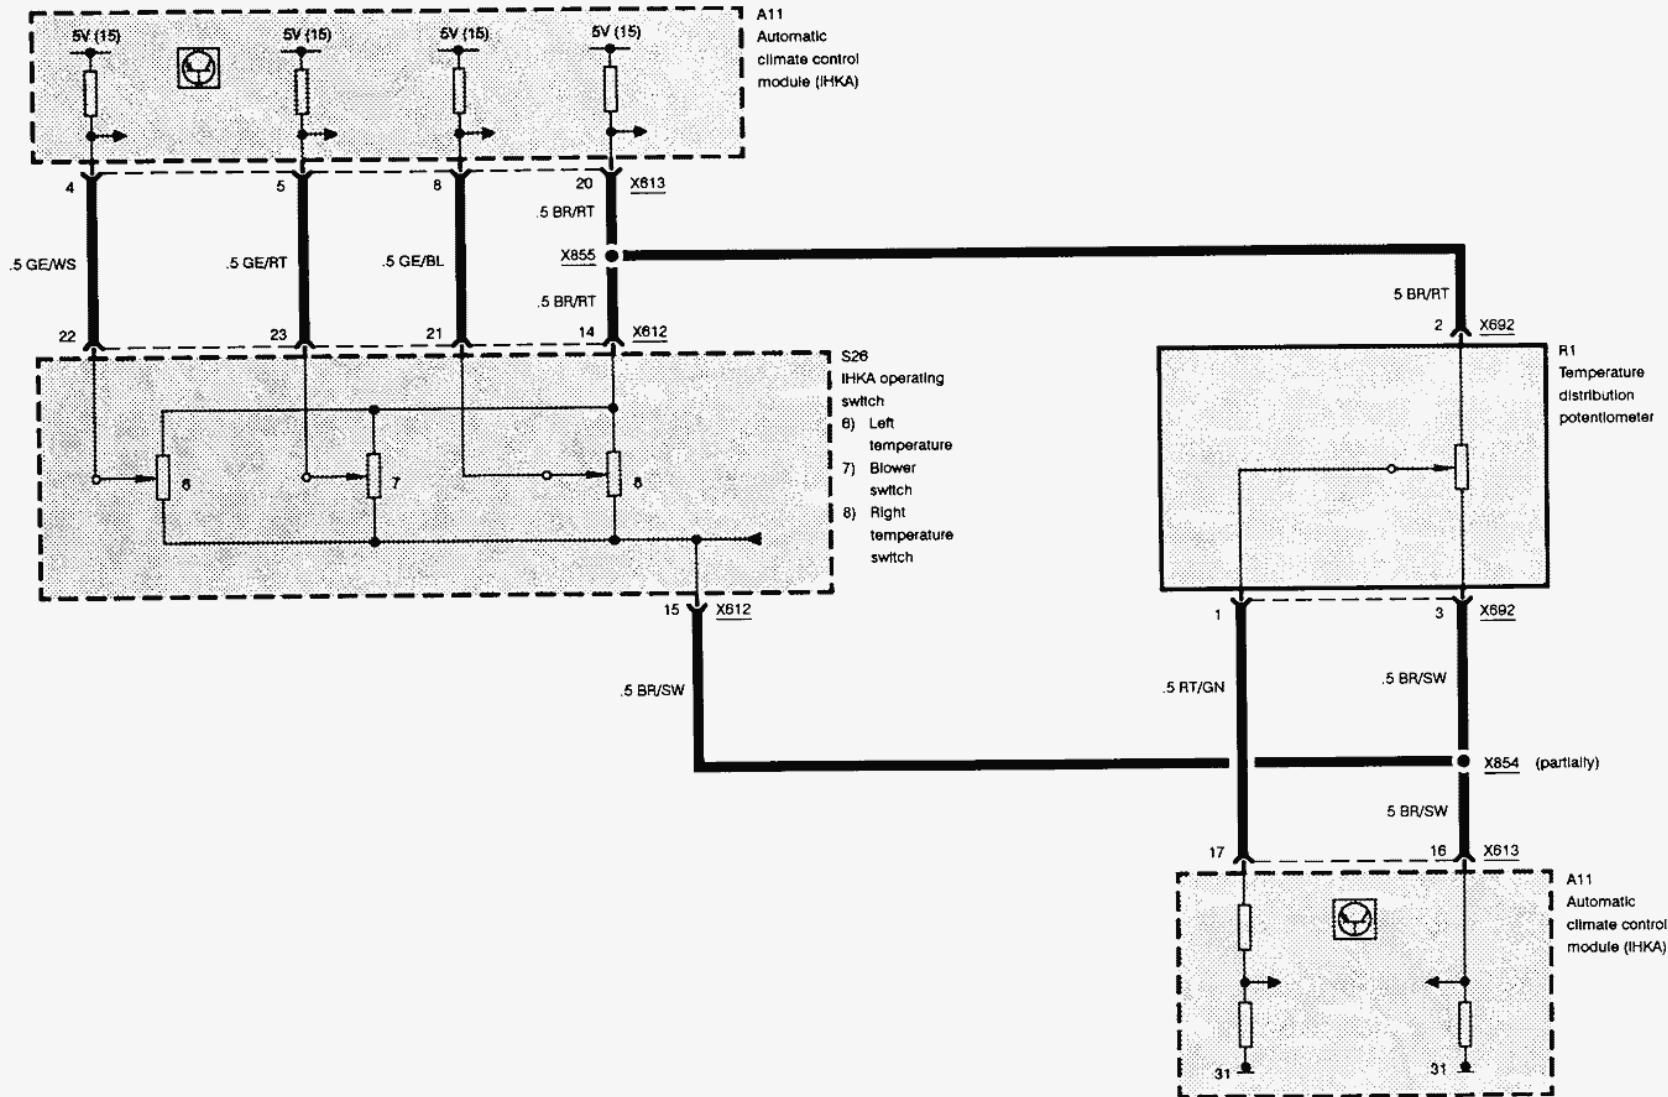

09/93

6450.0-04


1994



# Automatic climate control (IHKA)

520i/t, 525td/t, 525tds/t

## Air supply

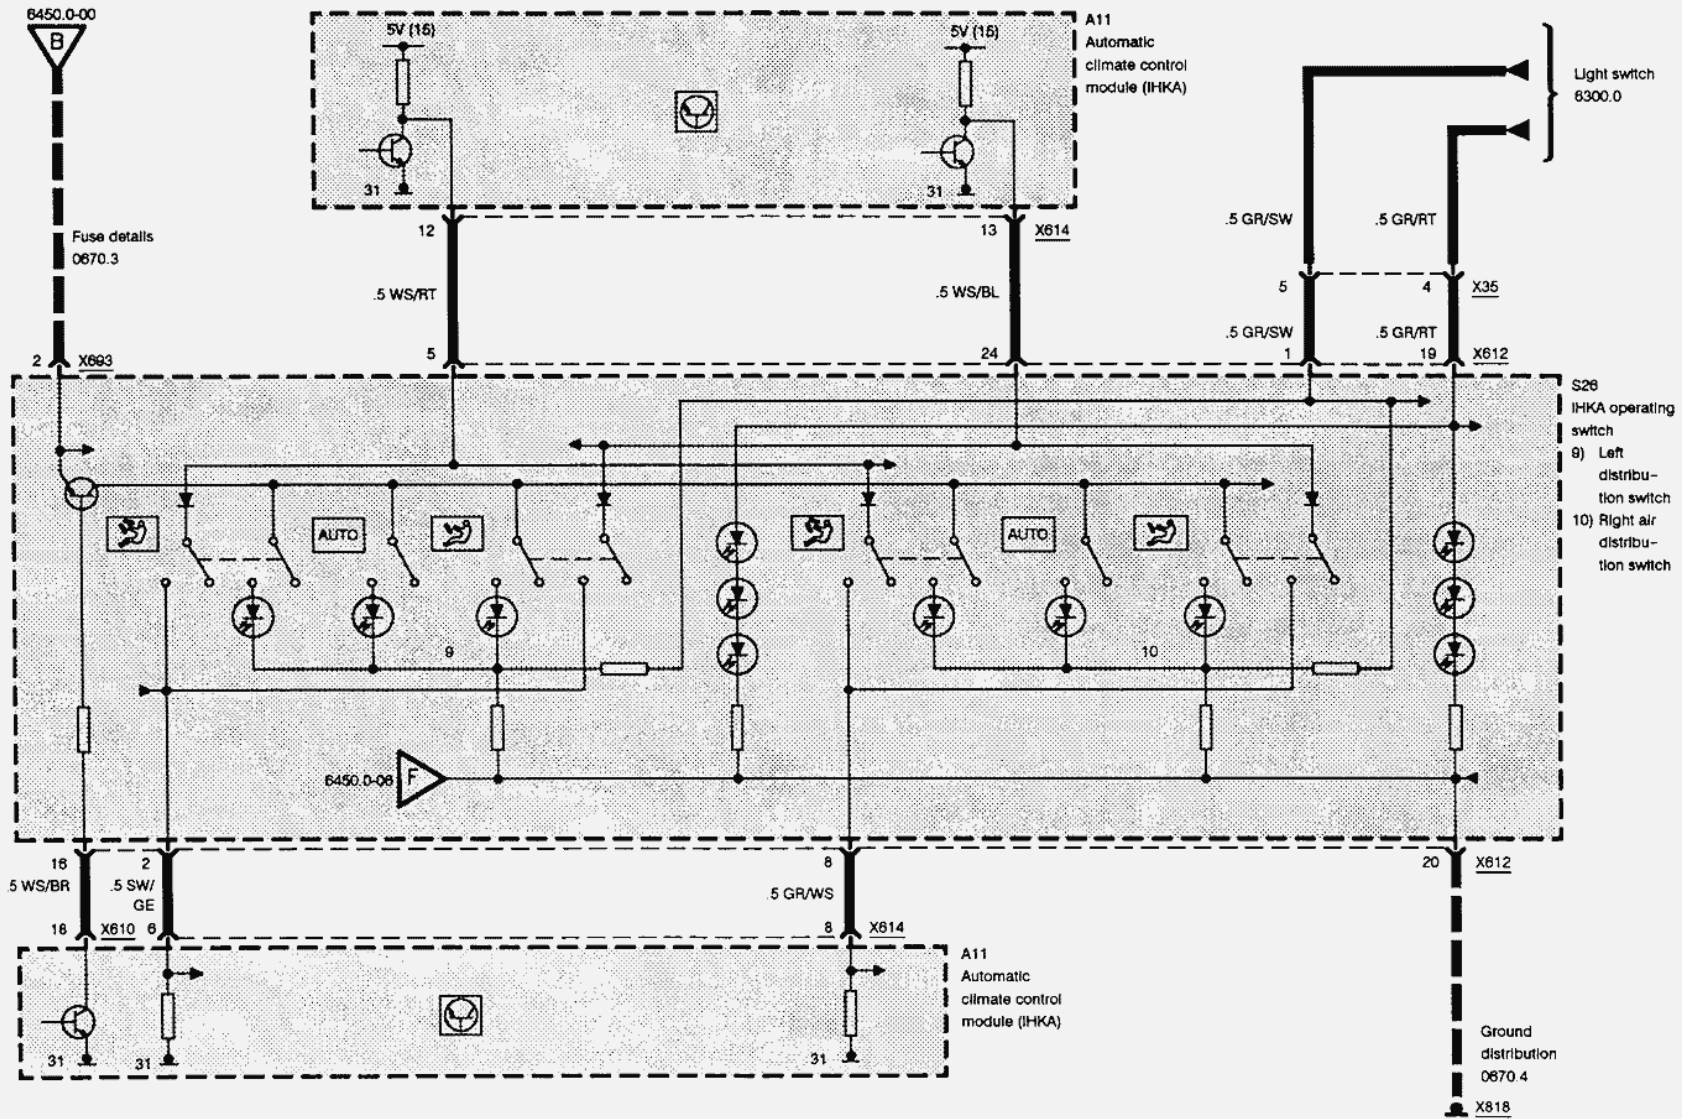

09/93

6450.0-05

1994






# Automatic climate control (IHKA)

520i/t, 525td/t, 525tds/t

## Air supply

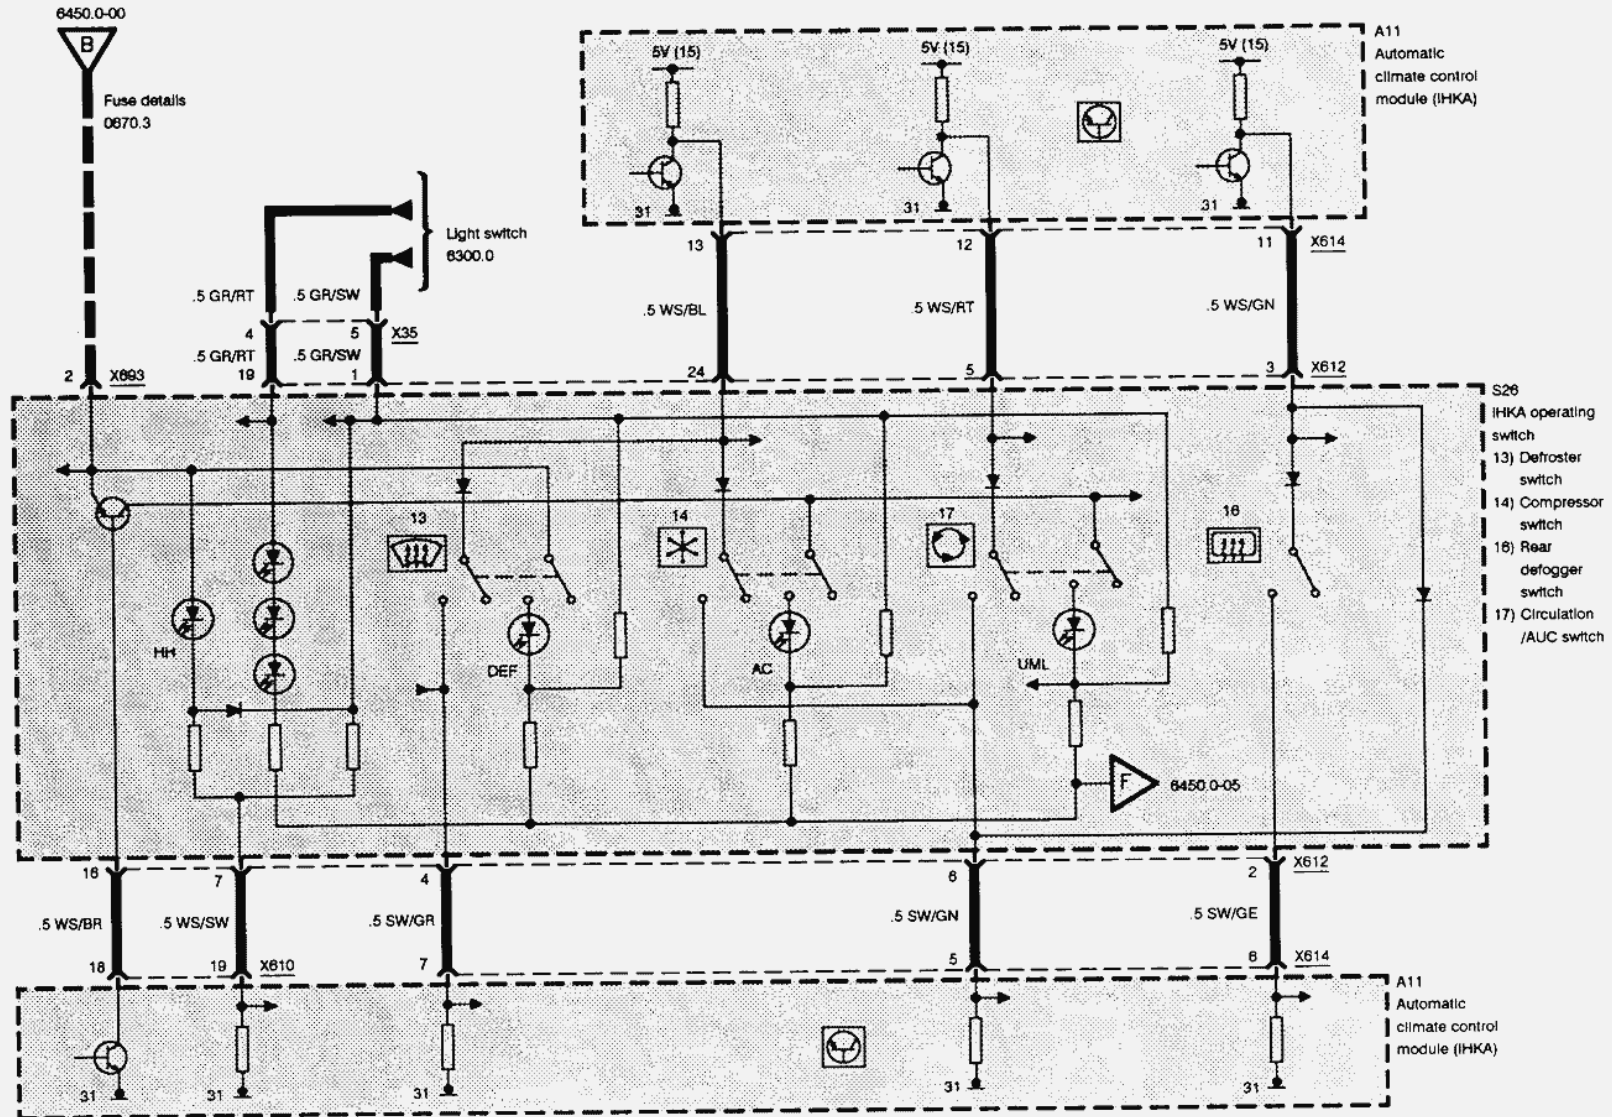

09/93

6450.0-06


1994



# Automatic climate control (IHKA)

## Air supply

520i/t, 525td/t, 525tds/t

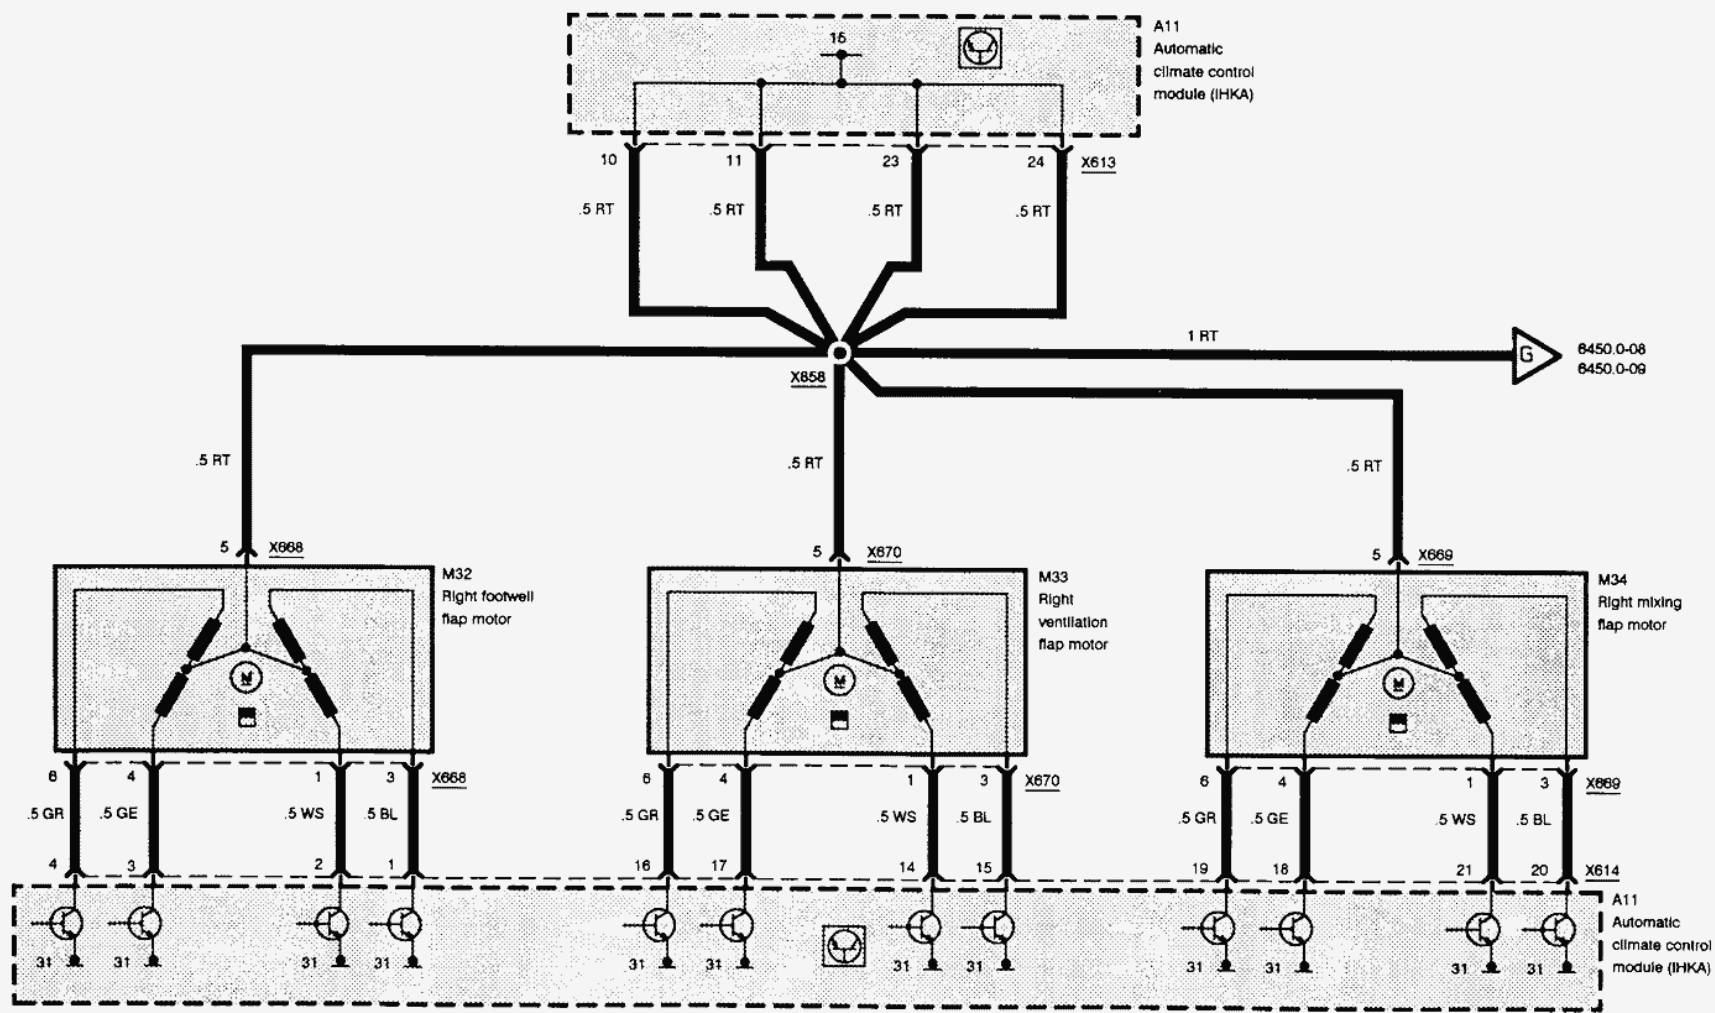




# Automatic climate control (IHKA)

## Air supply

520i/t, 525td/t, 525tds/t

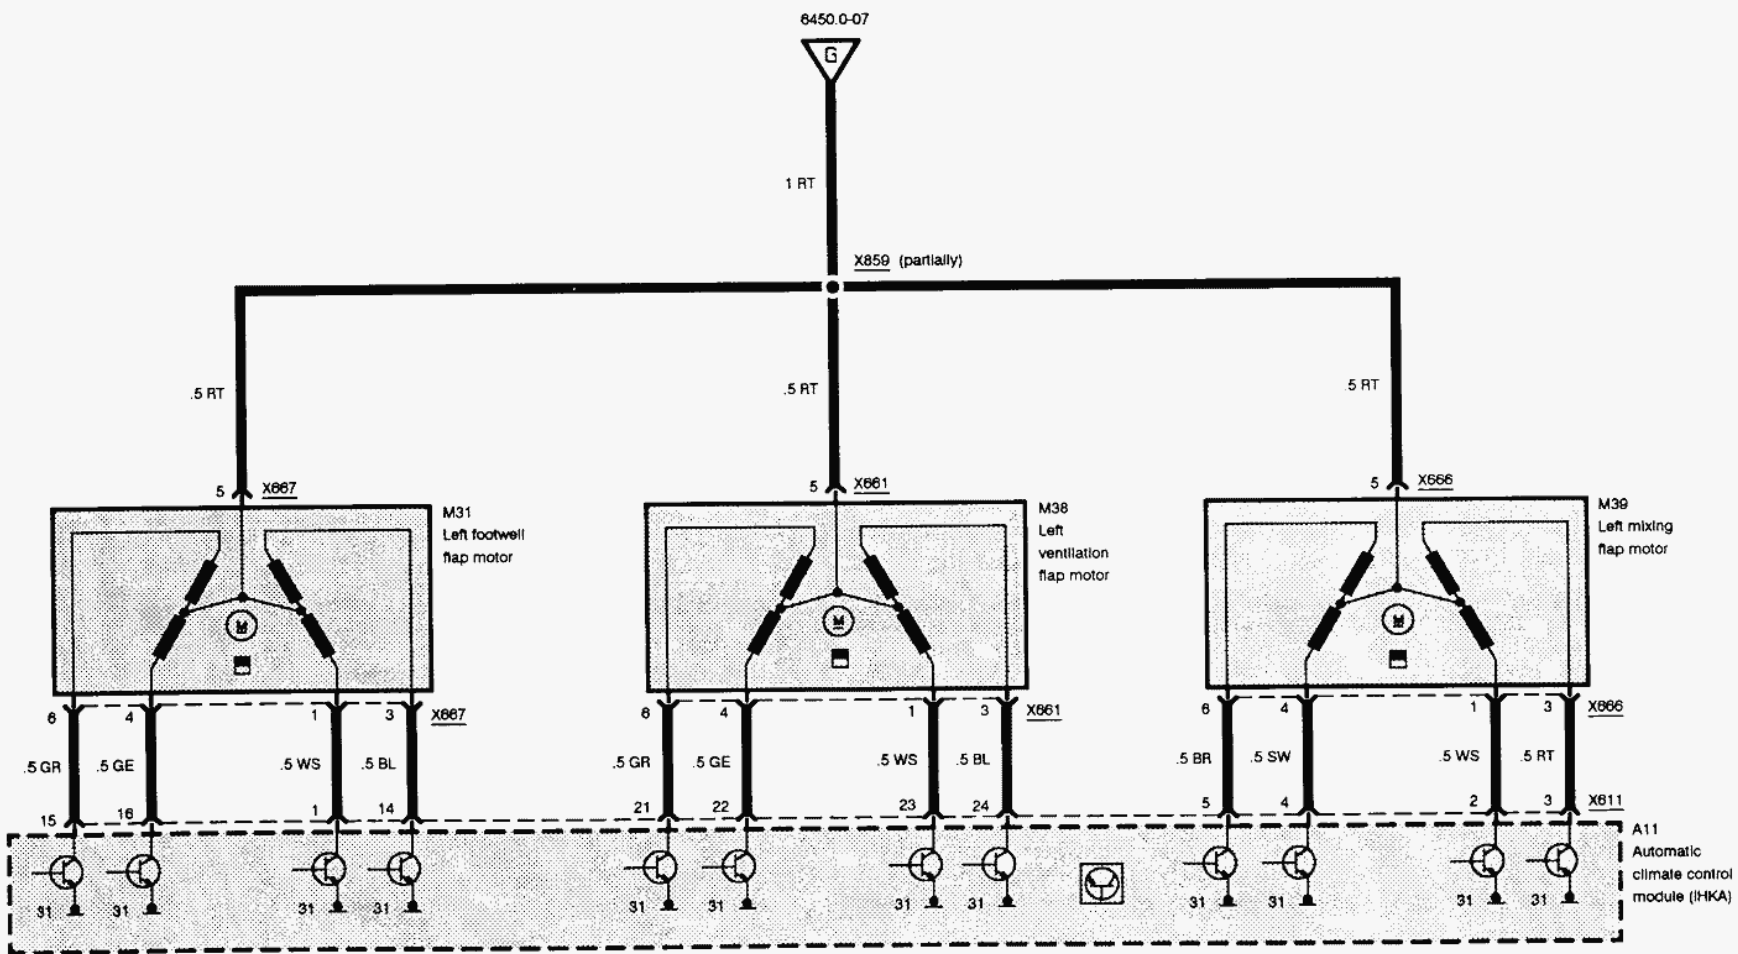

09/93

6450.0-08

1994




# Automatic climate control (IHKA) Air supply

520i/t, 525td/t, 525tds/t

09/93


6450.0-09

11

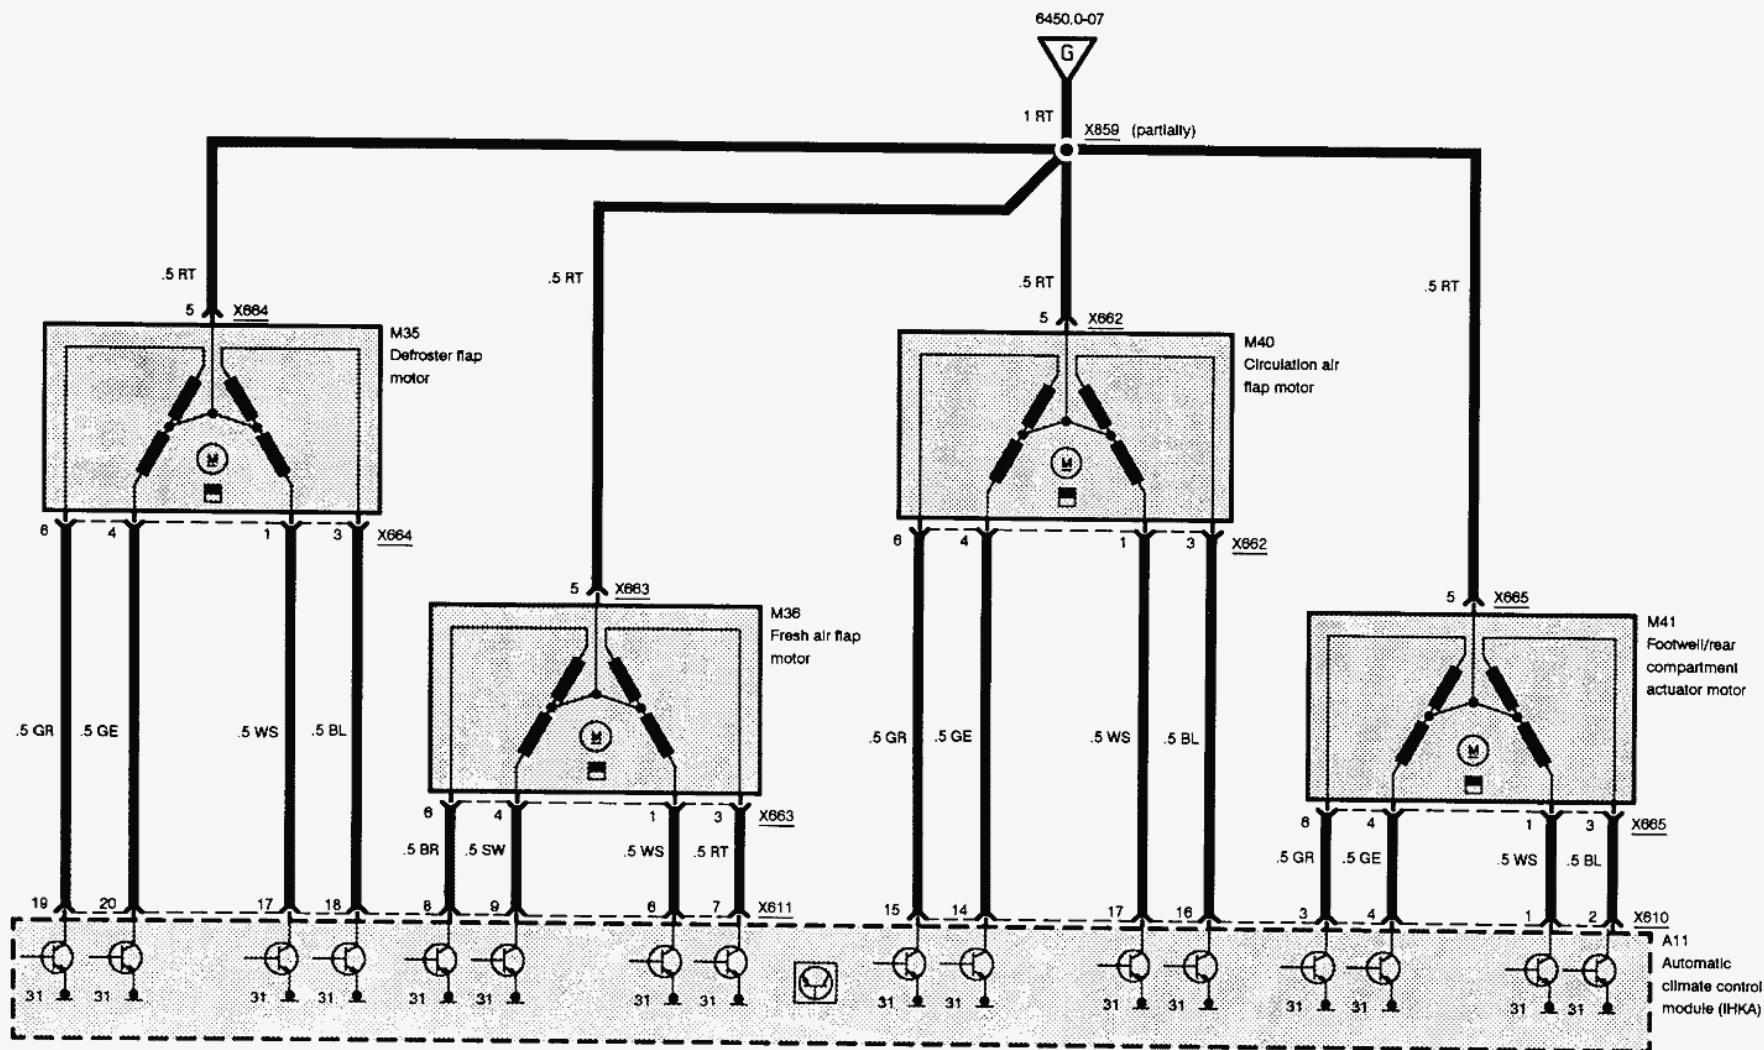

**BMW 5** Automatic climate control (IHKA)  
Compressor control

520i/t, 525td/t, 525tds/t

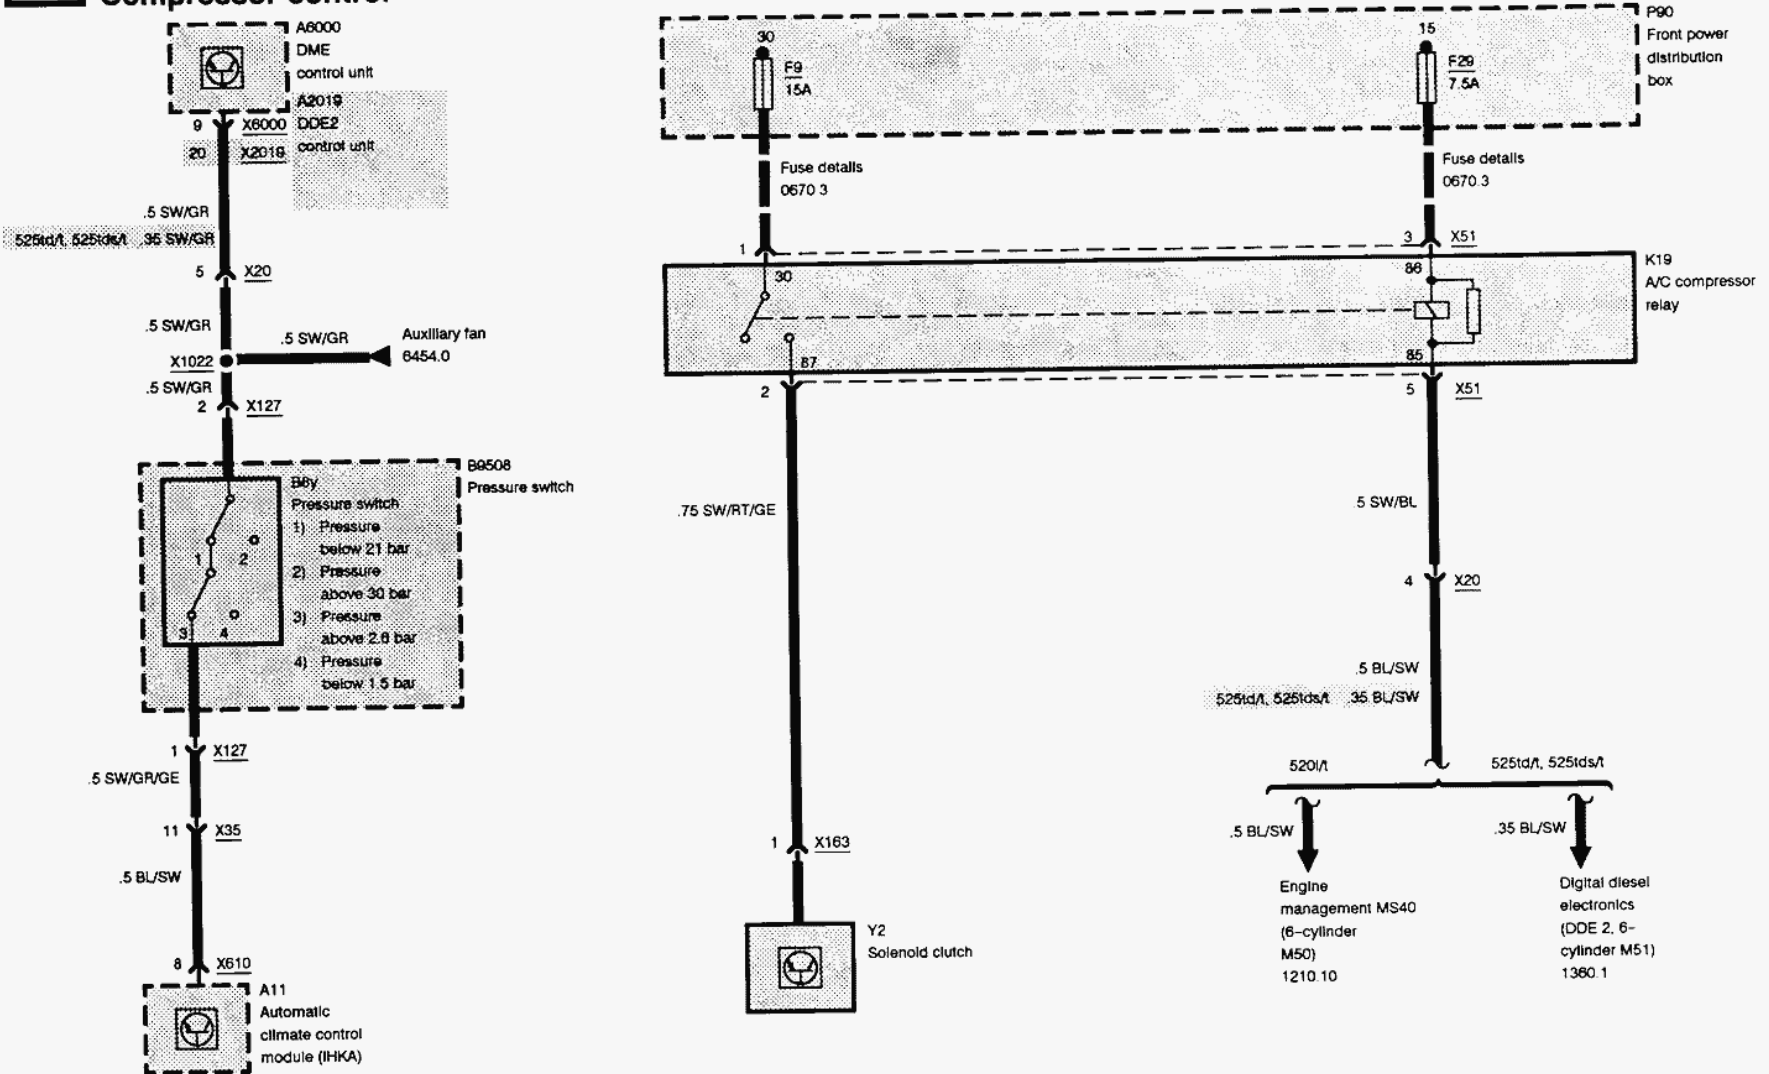

09/93


6450.0-10



# Automatic climate control (IHKA)

520i/t, 525td/t, 525tds/t

## Water pump

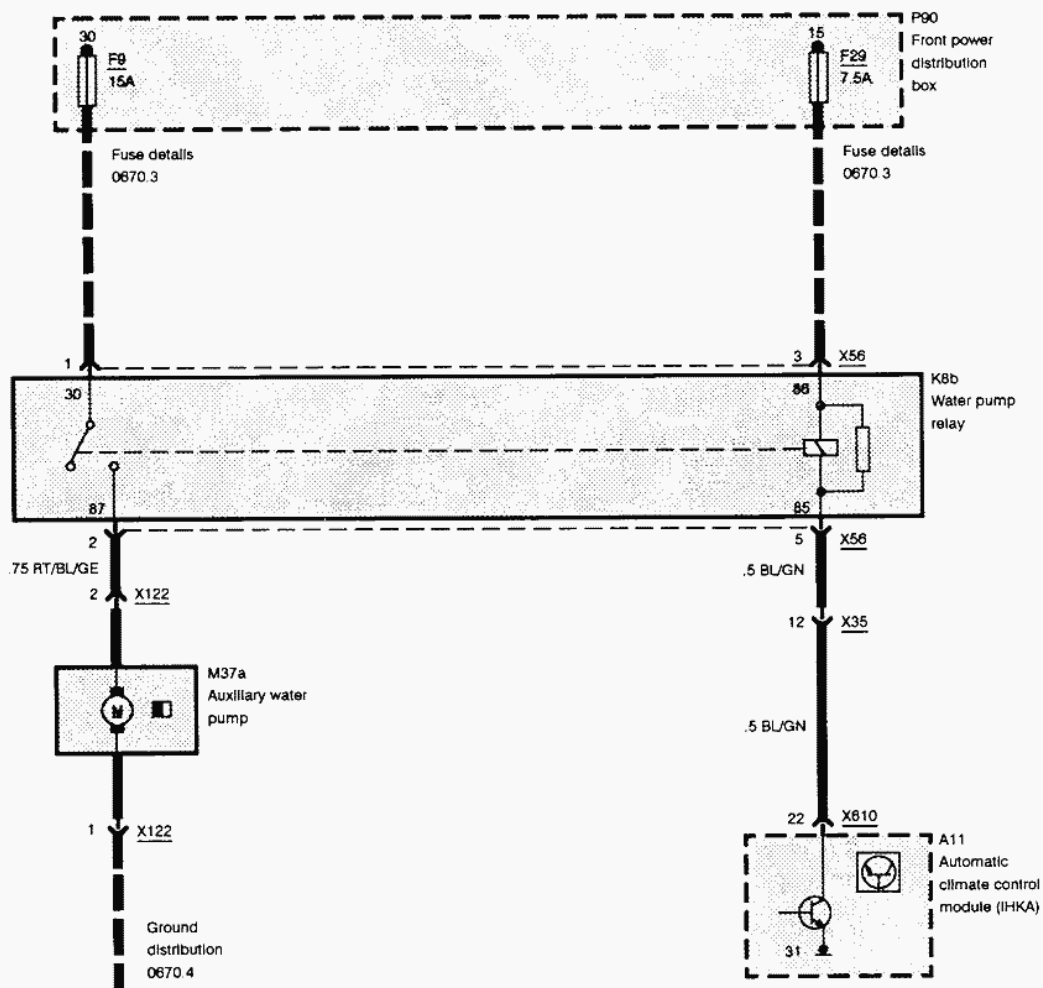

09/93


6450.0-11





Pin	Type	Description/Function	Connection
1	A	Activation, fuel quantity control unit	Fuel quantity control unit
2	A	Activation, fuel quantity control unit	Fuel quantity control unit
3	A	Activation, electrical cutout	Electrical cutout
4	A	Diagnosis lamp diesel	Instrument cluster
5	A	Activation, SD nozzle	SD nozzle
6	A	Glow time control glow plug relay not used	Glow plug relay
7	A	Activation, AGR changeover valve	AGR changeover valve
8	E	Signal, A/C compressor	A/C compressor relay
10	A	Activation, injection timing valve	Solenoid valve injection timing device
11	A	"Preheating" diesel	Instrument cluster
12	E	Signal, SD nozzle	SD nozzle
13	M	Ground for shieldings and sensor	Shielding and sensor
14	M	Ground for actuator and pedal position sensor	Actuator and pedal position sensor
15	E	Terminal 15	DOE relay
16	E	Terminal 15	DOE relay
17	E	Terminal 15	DOE relay
18	M	Ground	Ground connection
19	M	Ground	Ground connection
20	E	Cruise control (Tempomat) signal	Cruise control (Tempomat)
21	E	Actual valve, control unit not used	Fuel quantity control unit
22	E	not used	
23	E	not used	
24	E	Signal, compressor ON	Pressure switch and auxiliary fan relay
25	E	Load signal	Pedal position sensor
26	E	Brake signal	Brake light switch
27	A	R/D diagnosis line	Diagnostic connector
28	EE	Clutch signal (manual transmission) P/N selector lever signal (automatic transmission)	Clutch switch Selector lever switch
29	E	Speedometer A signal	Instrument cluster
30	E	not used	
31	E	Brake light test signal	Brake light switch
32	E	not used	
33	A	Positive supply for pedal position sensor not used	Pedal position sensor
34	E	Activation, temperature sensor	Fuel quantity control unit
35	E	Signal, water level in fuel filter	Water level sensor, fuel filter
37	E	Actual valve, pedal position sensor not used	Pedal position sensor
38	E	not used	
39	A	Positive supply for actuator	Fuel quantity control unit
40	A	Multiplex signal for EGS (MSP)	EGS control unit
41	E	Error message glow plug relay	Glow plug relay
42	E/A	TxD diagnosis line	Diagnostic connector
43	E	Signal, engine intervention	EGS control unit
44	E	Signal, air condition ON	A/C control unit / A/C relay (Motronic)
45	E	Signal, immobilizing device not used	On-board computer
46	E	Speed signal	Speed transmitter
47	E	not used	
48	E	Consumption signal, TQ	Instrument cluster
49	E	Engine speed signal TQ	Instrument cluster
50	E	Positive supply charge pressure sensor	Charge pressure sensor
51	E	Charge air temperature	Charge air temperature sensor
52	E	Coolant temperature	Coolant temperature sensor
53	E	Actual valve, charge pressure not used	Charge pressure sensor
54	E	not used	
55	E	not used	

E = Input, A = Output, M = Ground


# BMW 5 Digital diesel electronics (DDE 2, 6-cylinder M51)

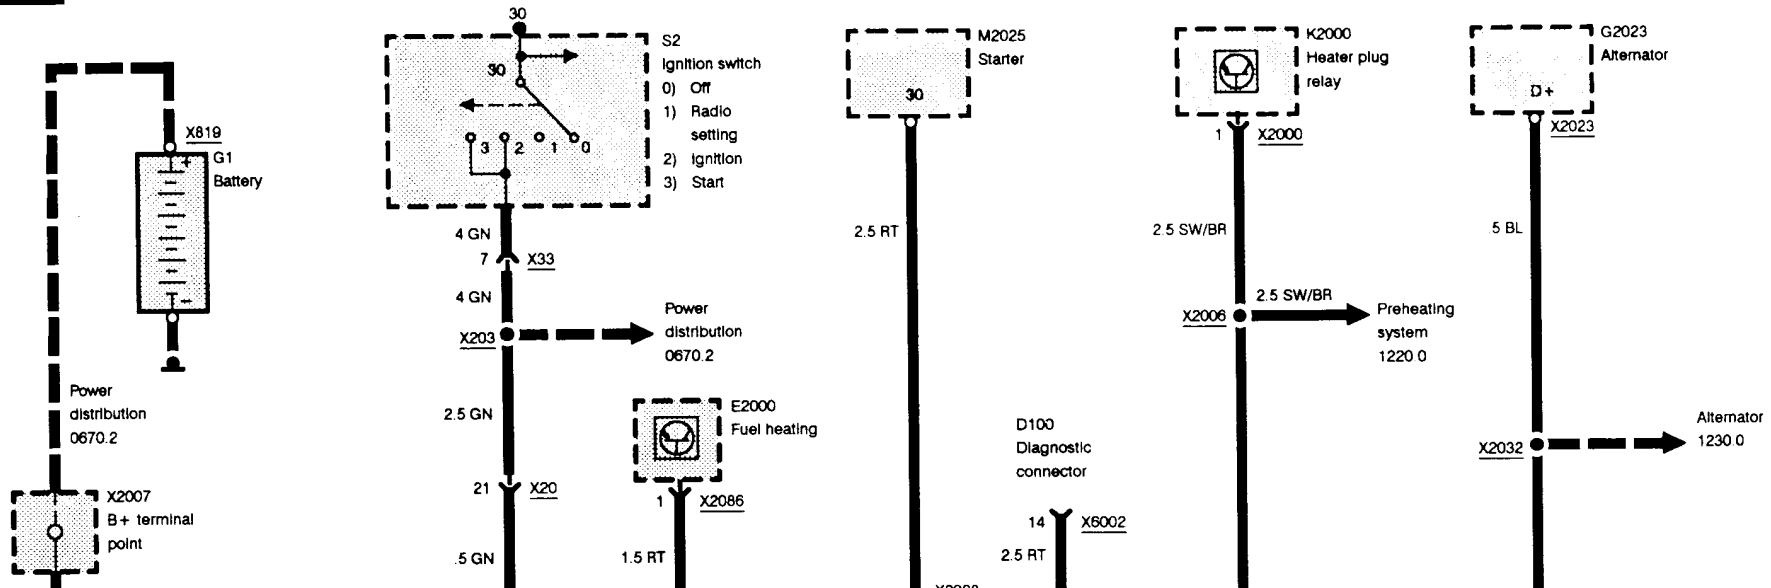




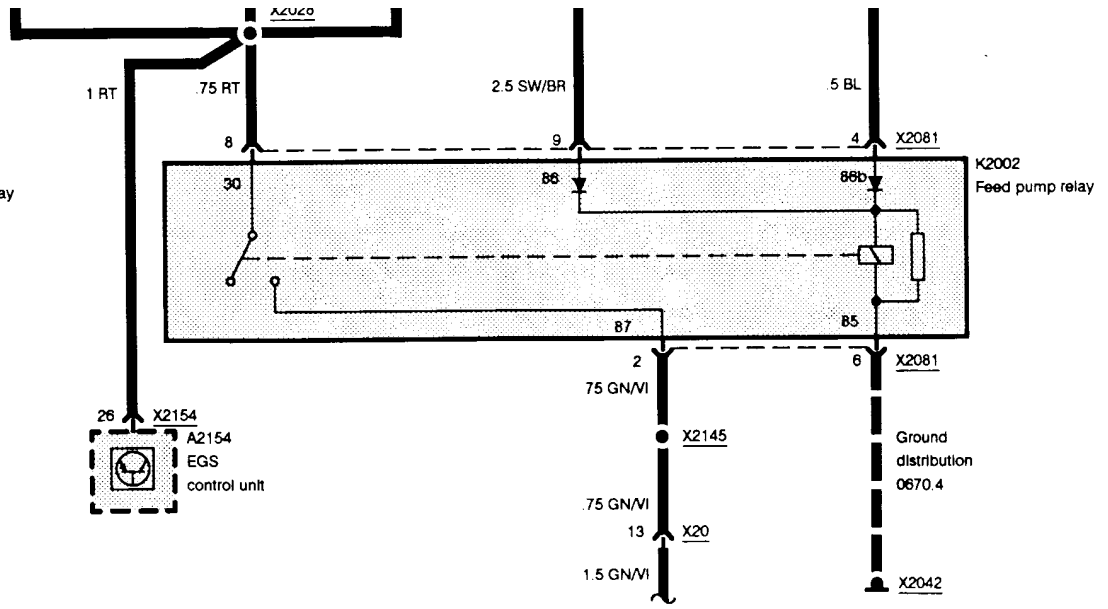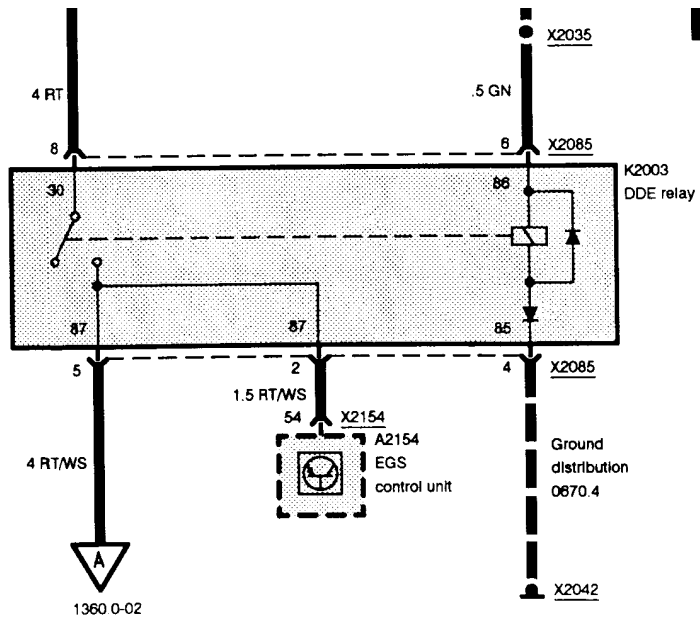

00  
1994

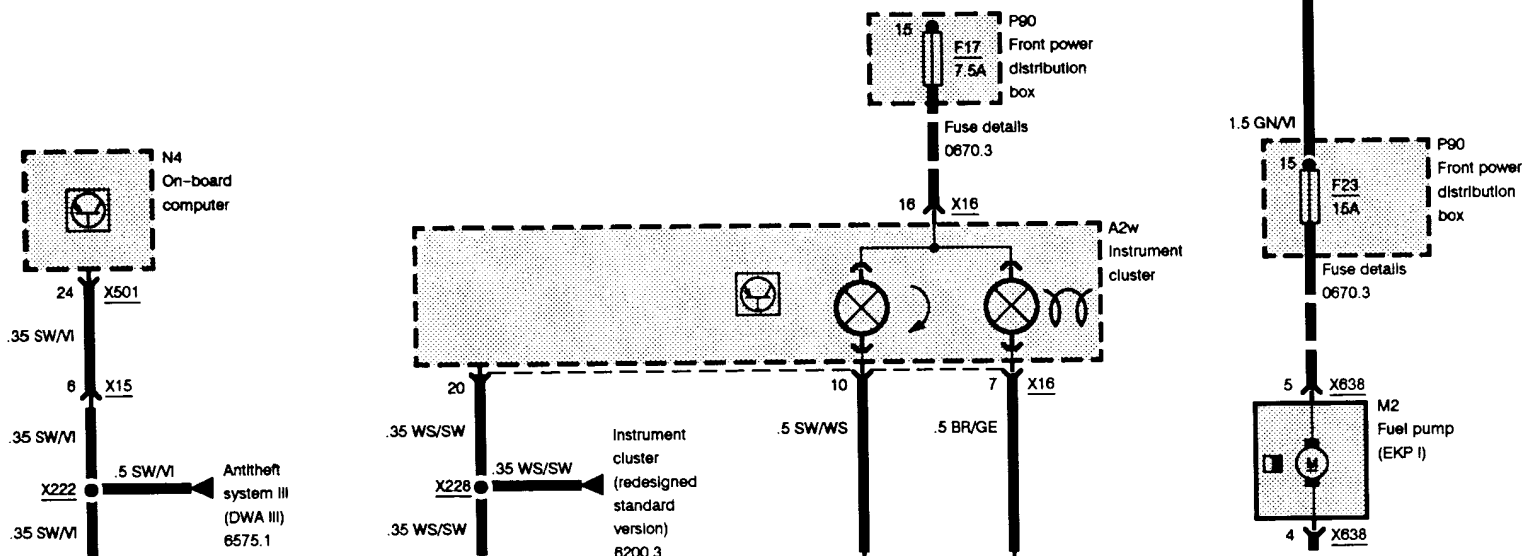


09/93

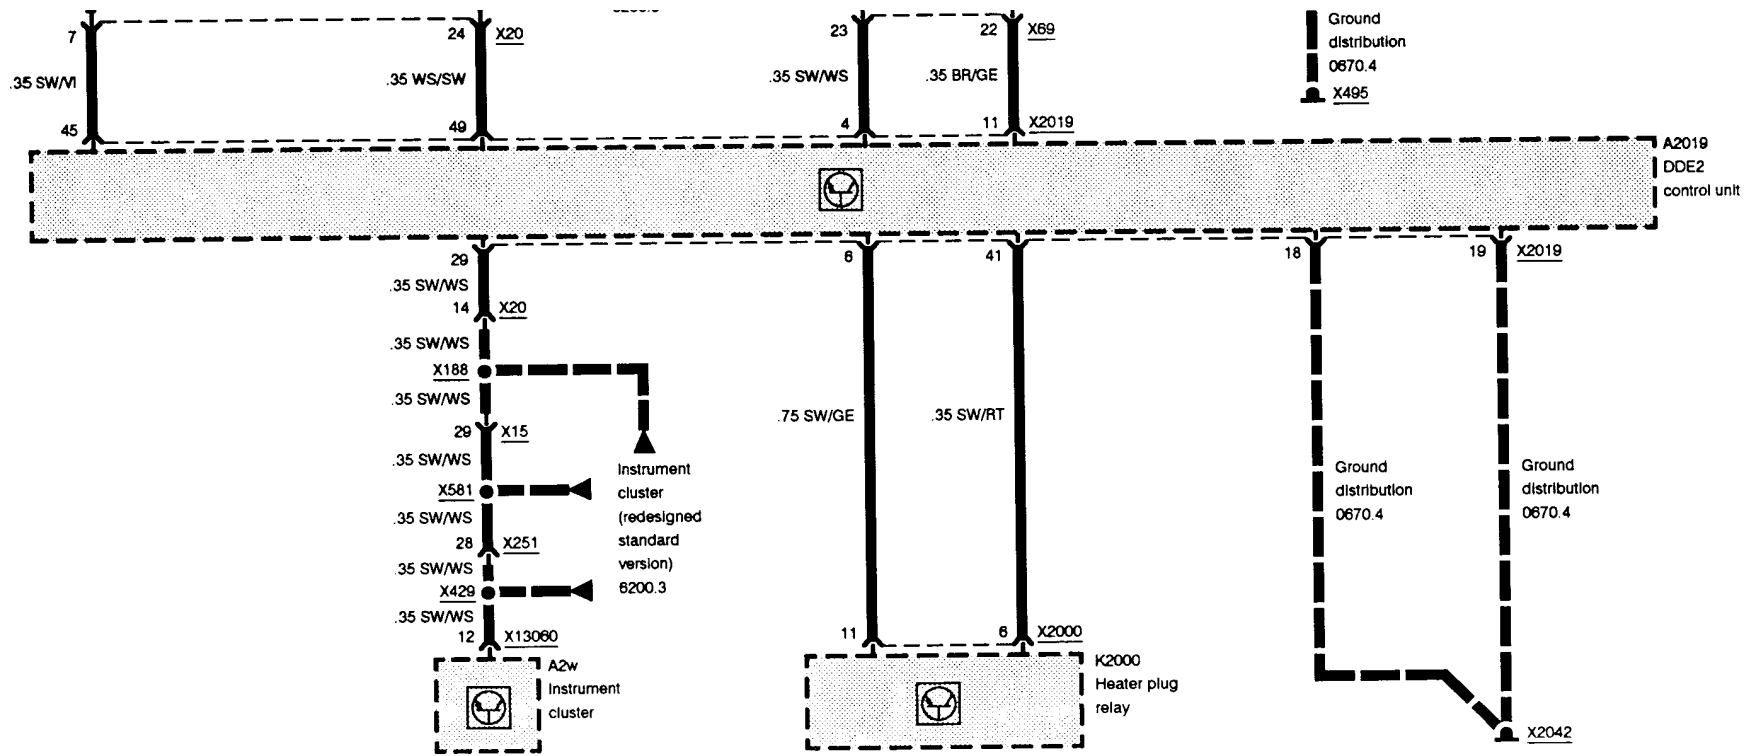


- 1360.1-01

1994

**BMW 5** Digital diesel electronics (DDE 2, 6- cylinder M51)

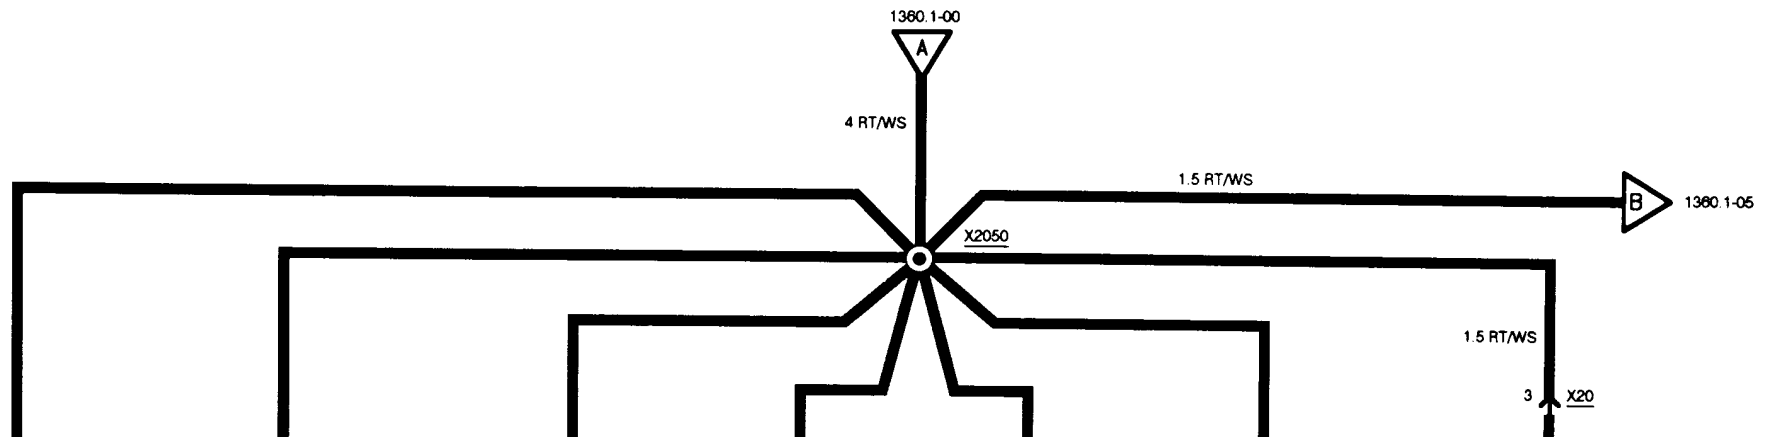


09/93

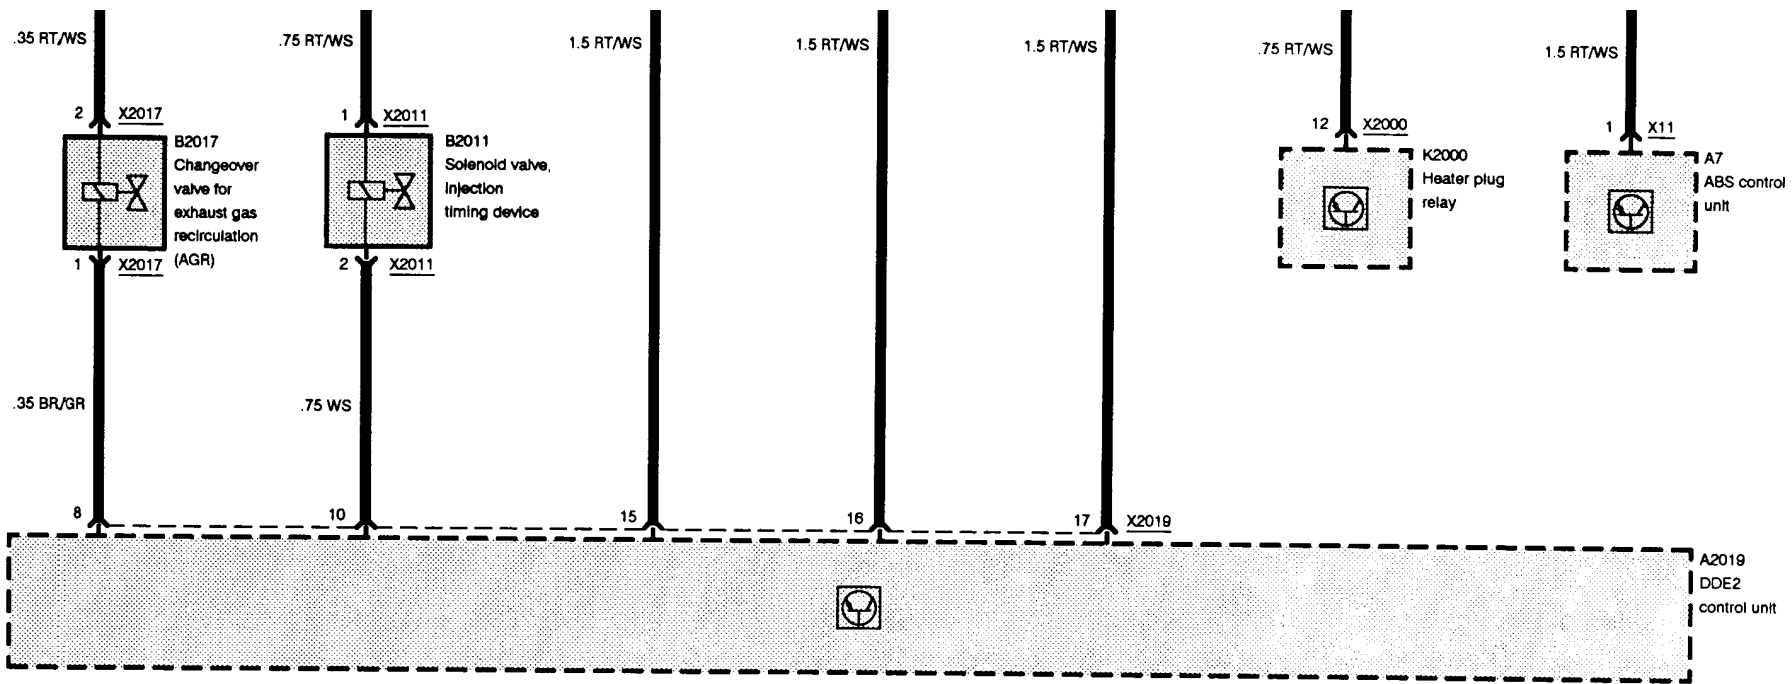


— 1360.1-02

1994

**BMW 5** Digital diesel electronics (DDE 2, 6- cylinder M51)

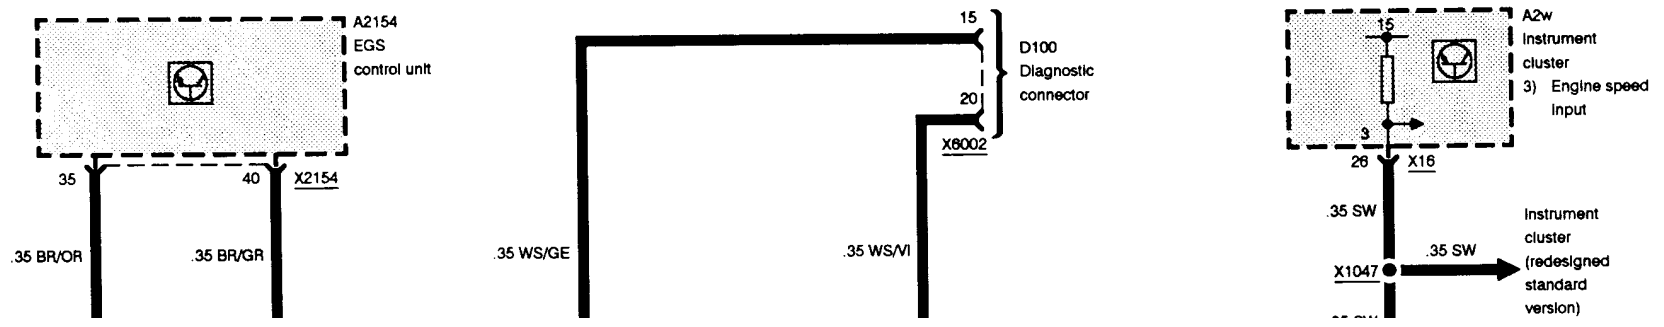


09/93

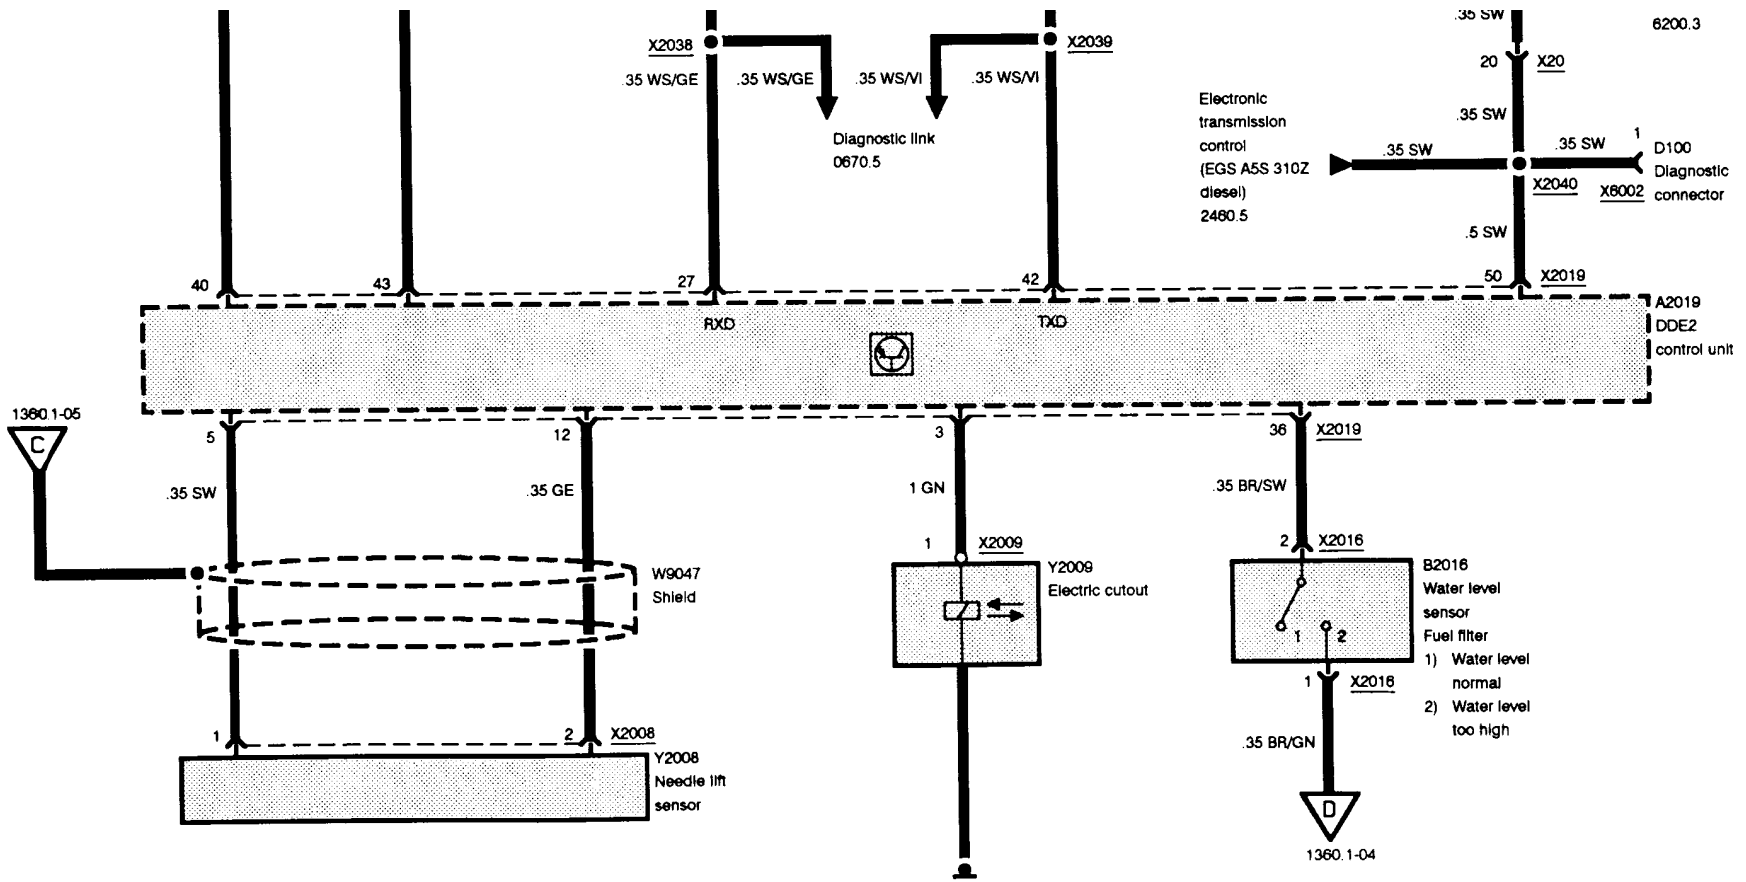


1360.1-03

1994

**BMW 5** Digital diesel electronics (DDE 2, 6- cylinder M51)

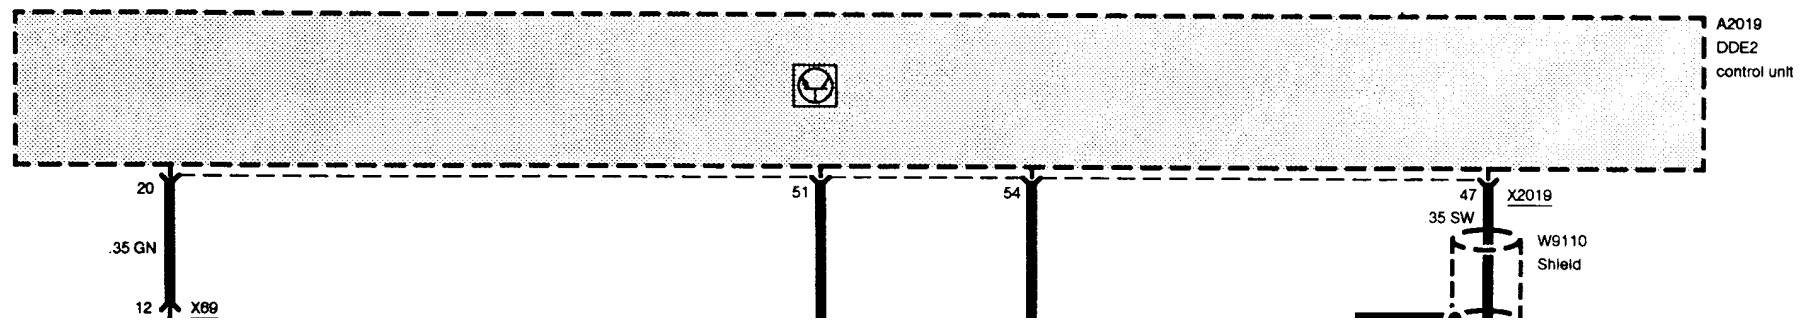

09/93

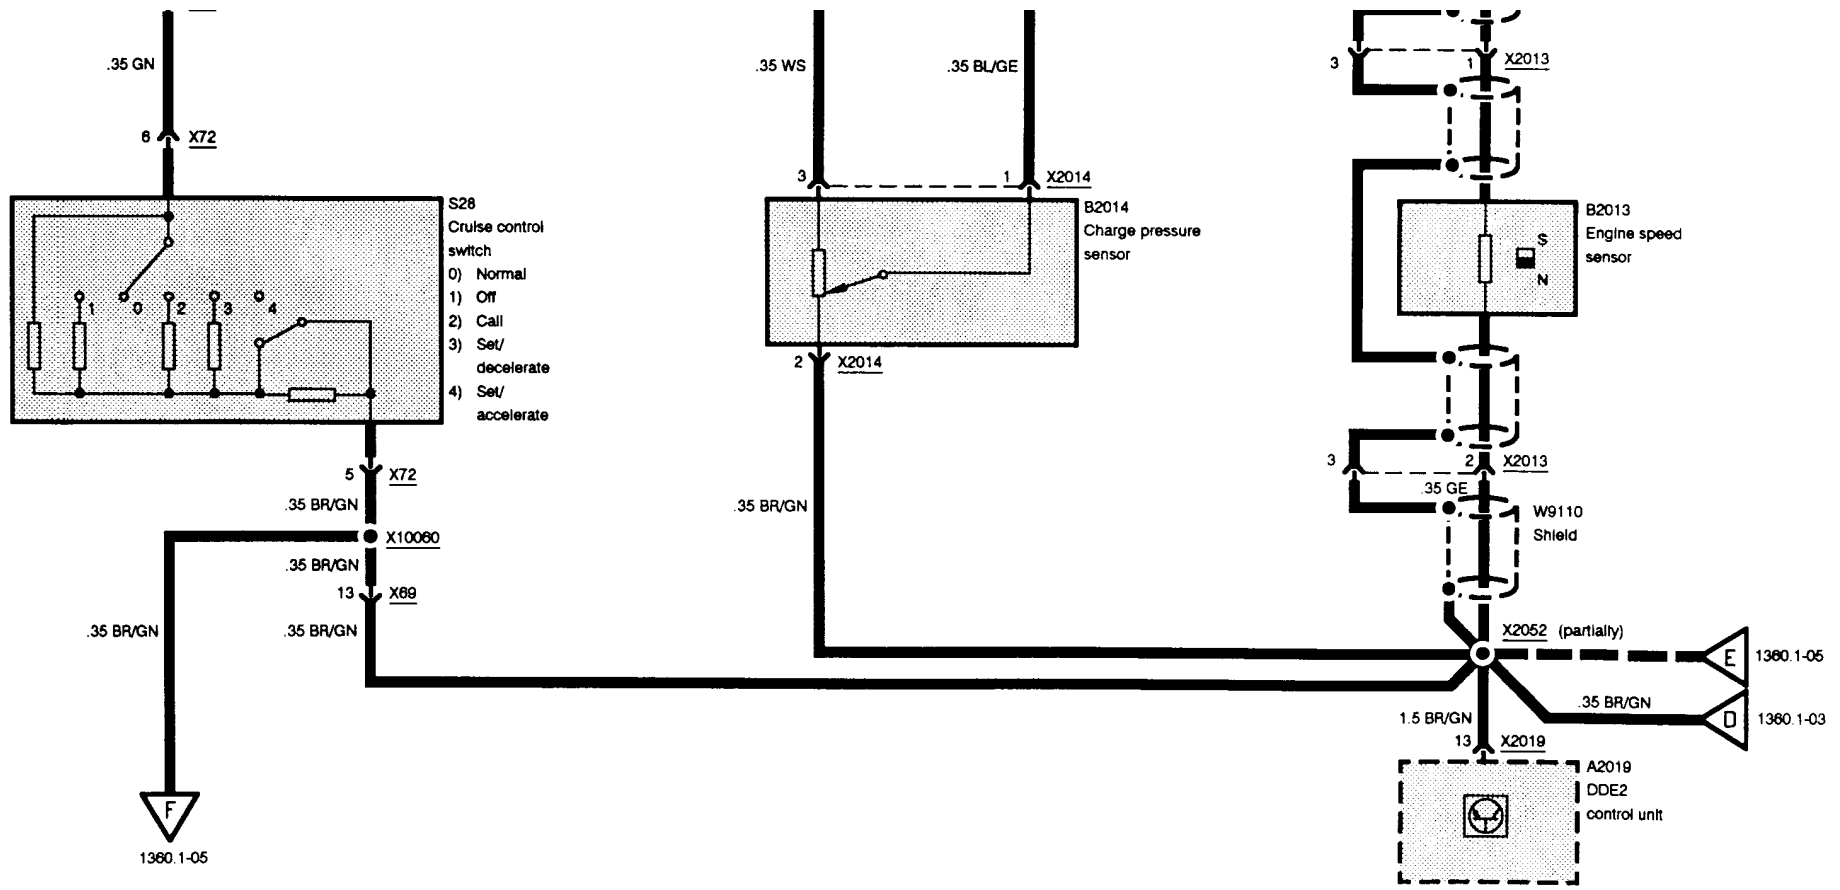


1360.1-04


1994



### Digital diesel electronics (DDE 2, 6- cylinder M51)

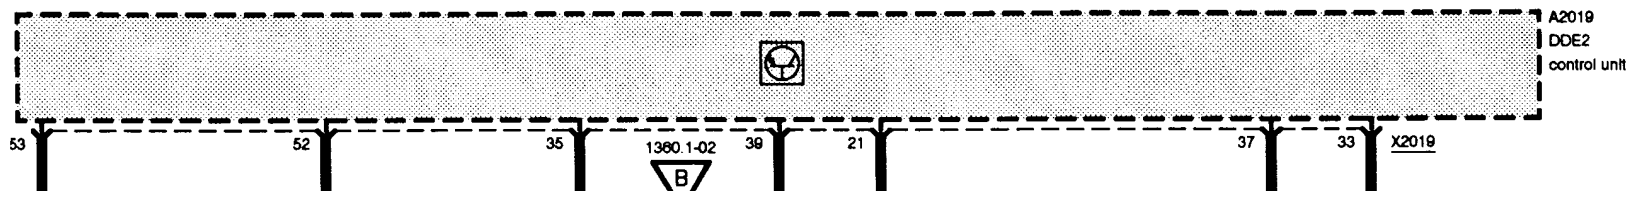




09/93

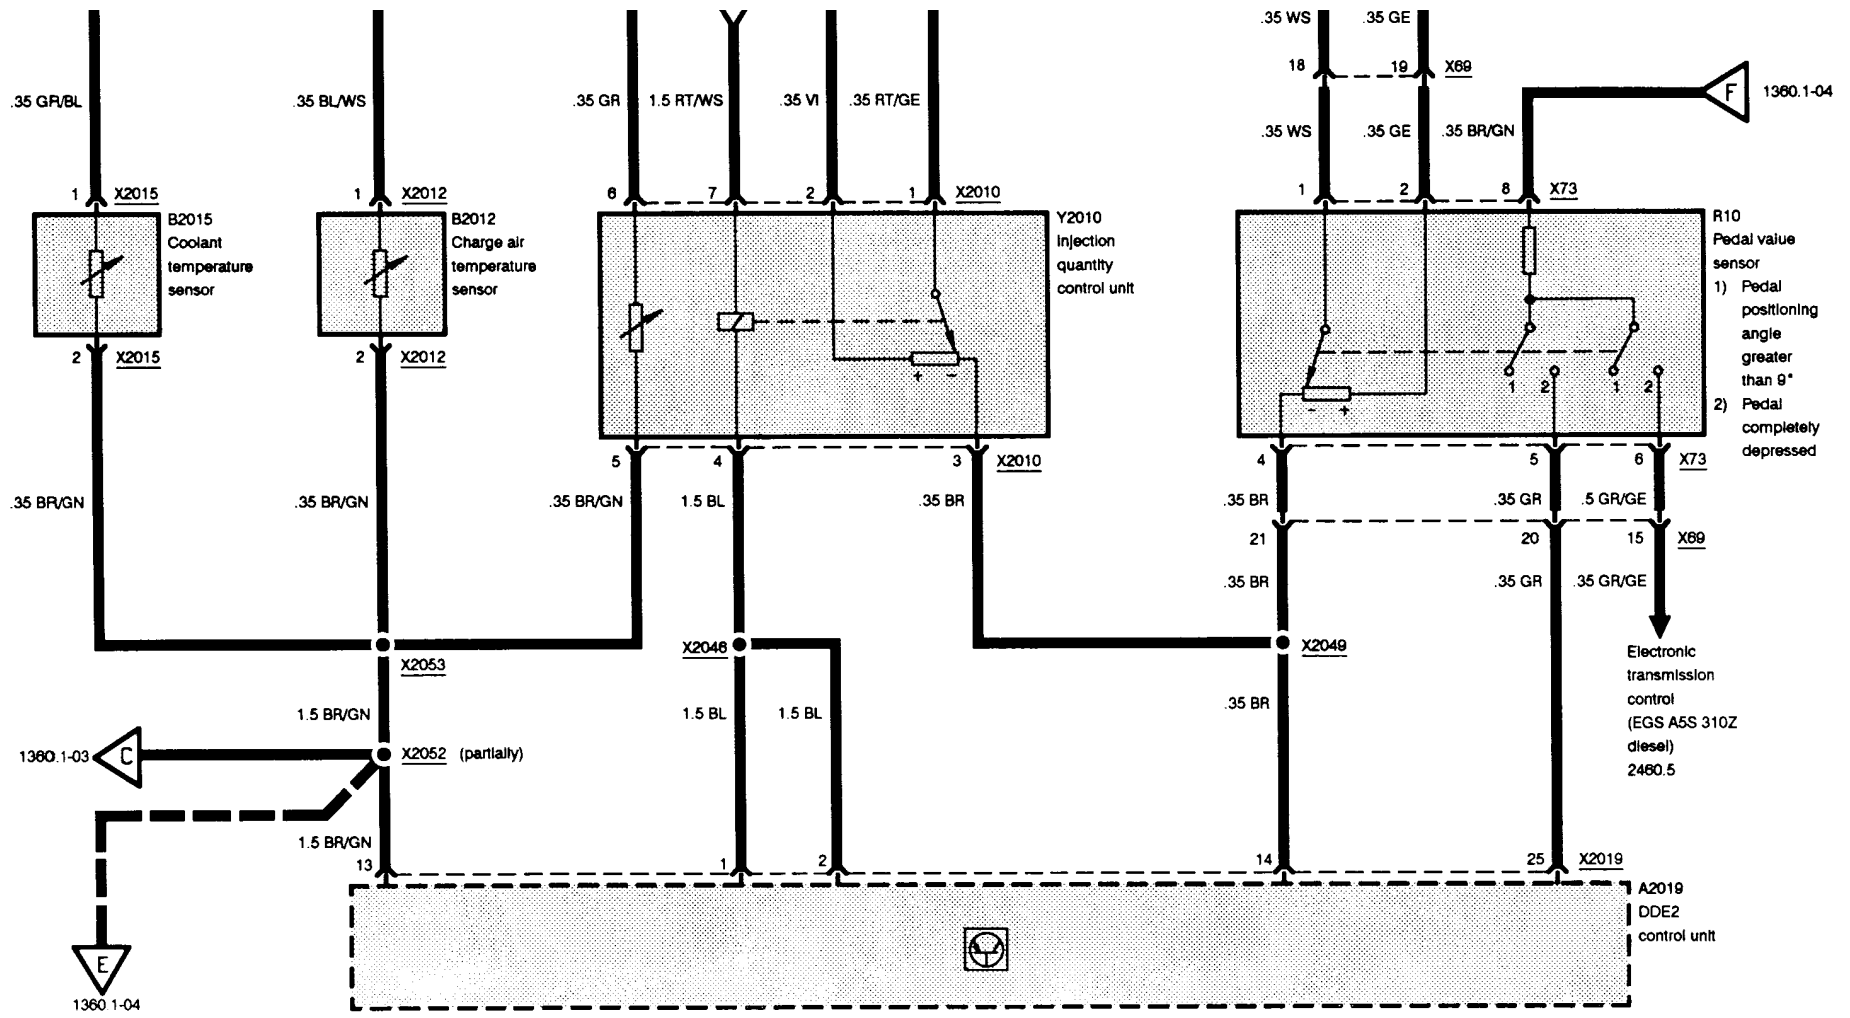


1360.1-05

1994

**BMW 5** Digital diesel electronics (DDE 2, 6-cylinder M51)

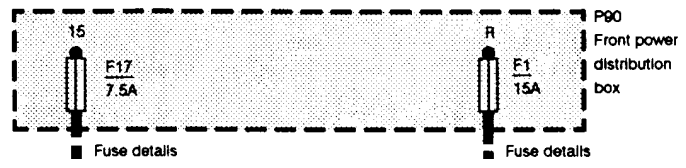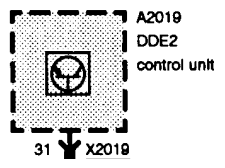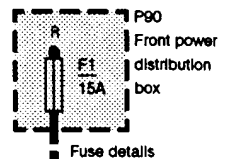

09/93

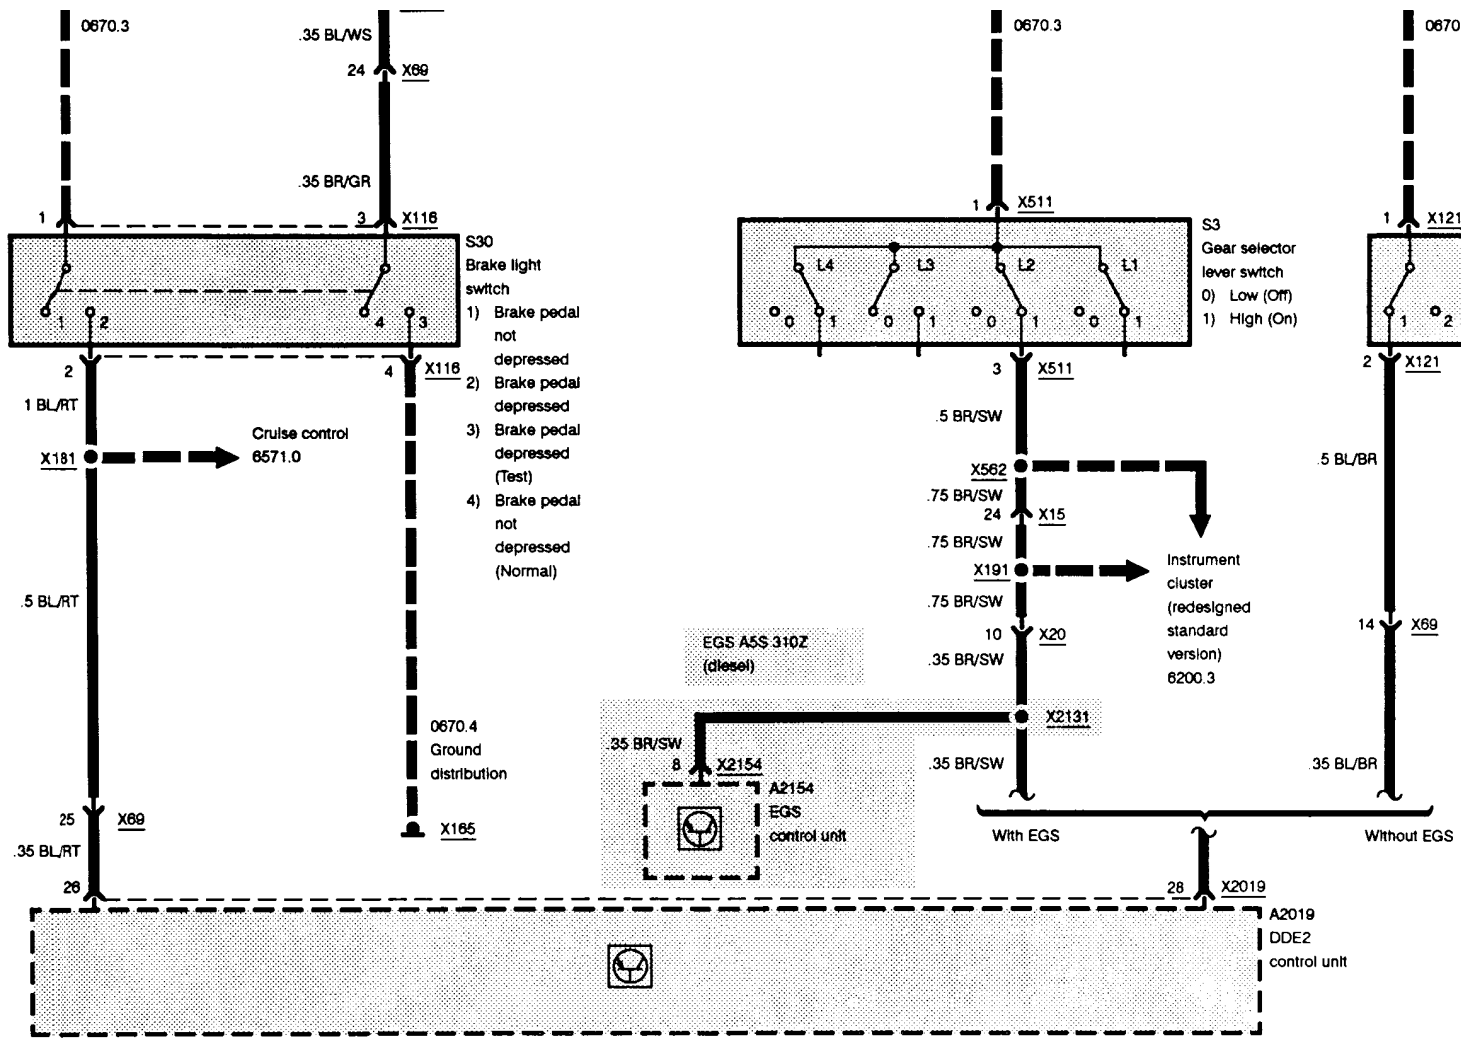

- S30  
Brake light switch
- 1) Brake pedal not depressed
  - 2) Brake pedal depressed
  - 3) Brake pedal depressed (Test)
  - 4) Brake pedal not depressed (Normal)

- S3  
Gear selector lever switch
- 0) Low (Off)
  - 1) High (On)

- S32  
Clutch switch
- 1) Clutch pedal not depressed
  - 2) Clutch pedal depressed

EGS A5S 310Z (diesel)

	L1	L2	L3	L4
P	1	1	0	0
R	1	0	0	1
N	0	1	1	0
D	0	0	0	1
3	0	0	1	0
2	1	0	0	0
1	1	0	1	0


1360.1-06

1994

**BMW 5** Digital diesel electronics (DDE 2, 6- cylinder M51)




09/93

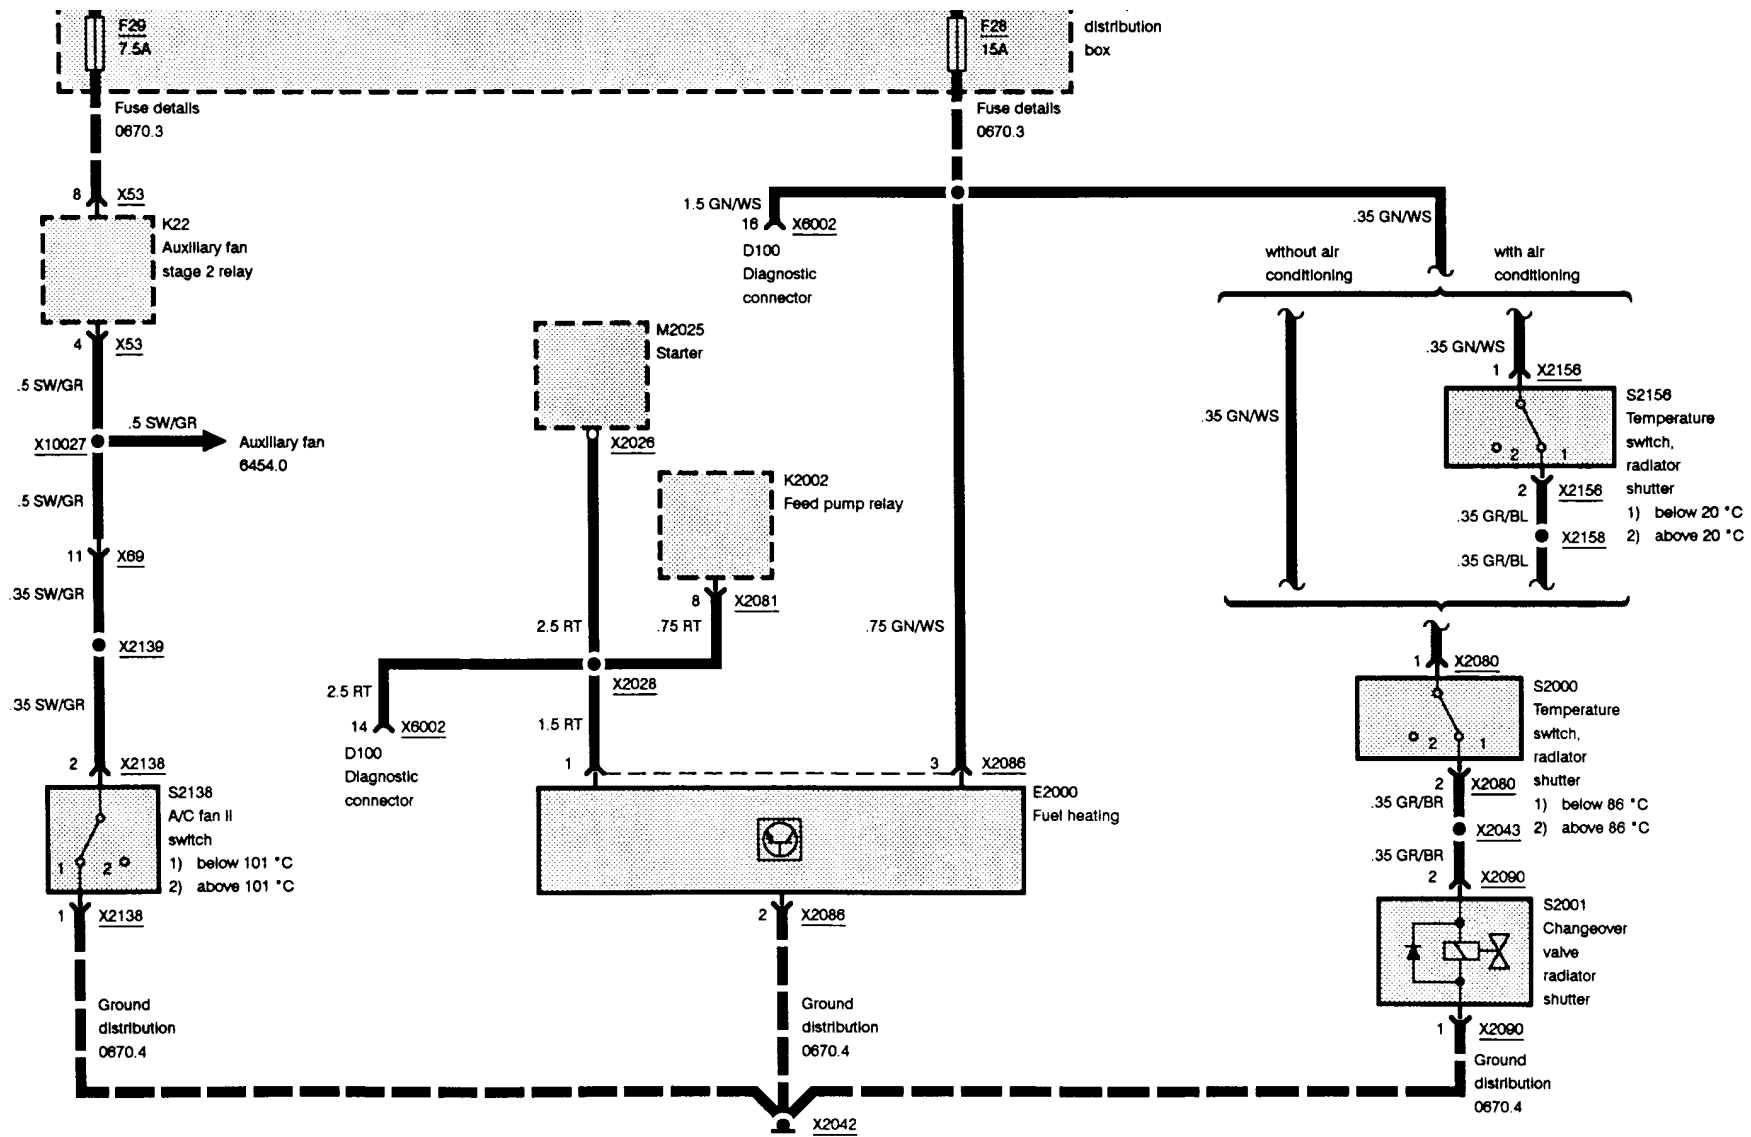

1360.1-07

1994



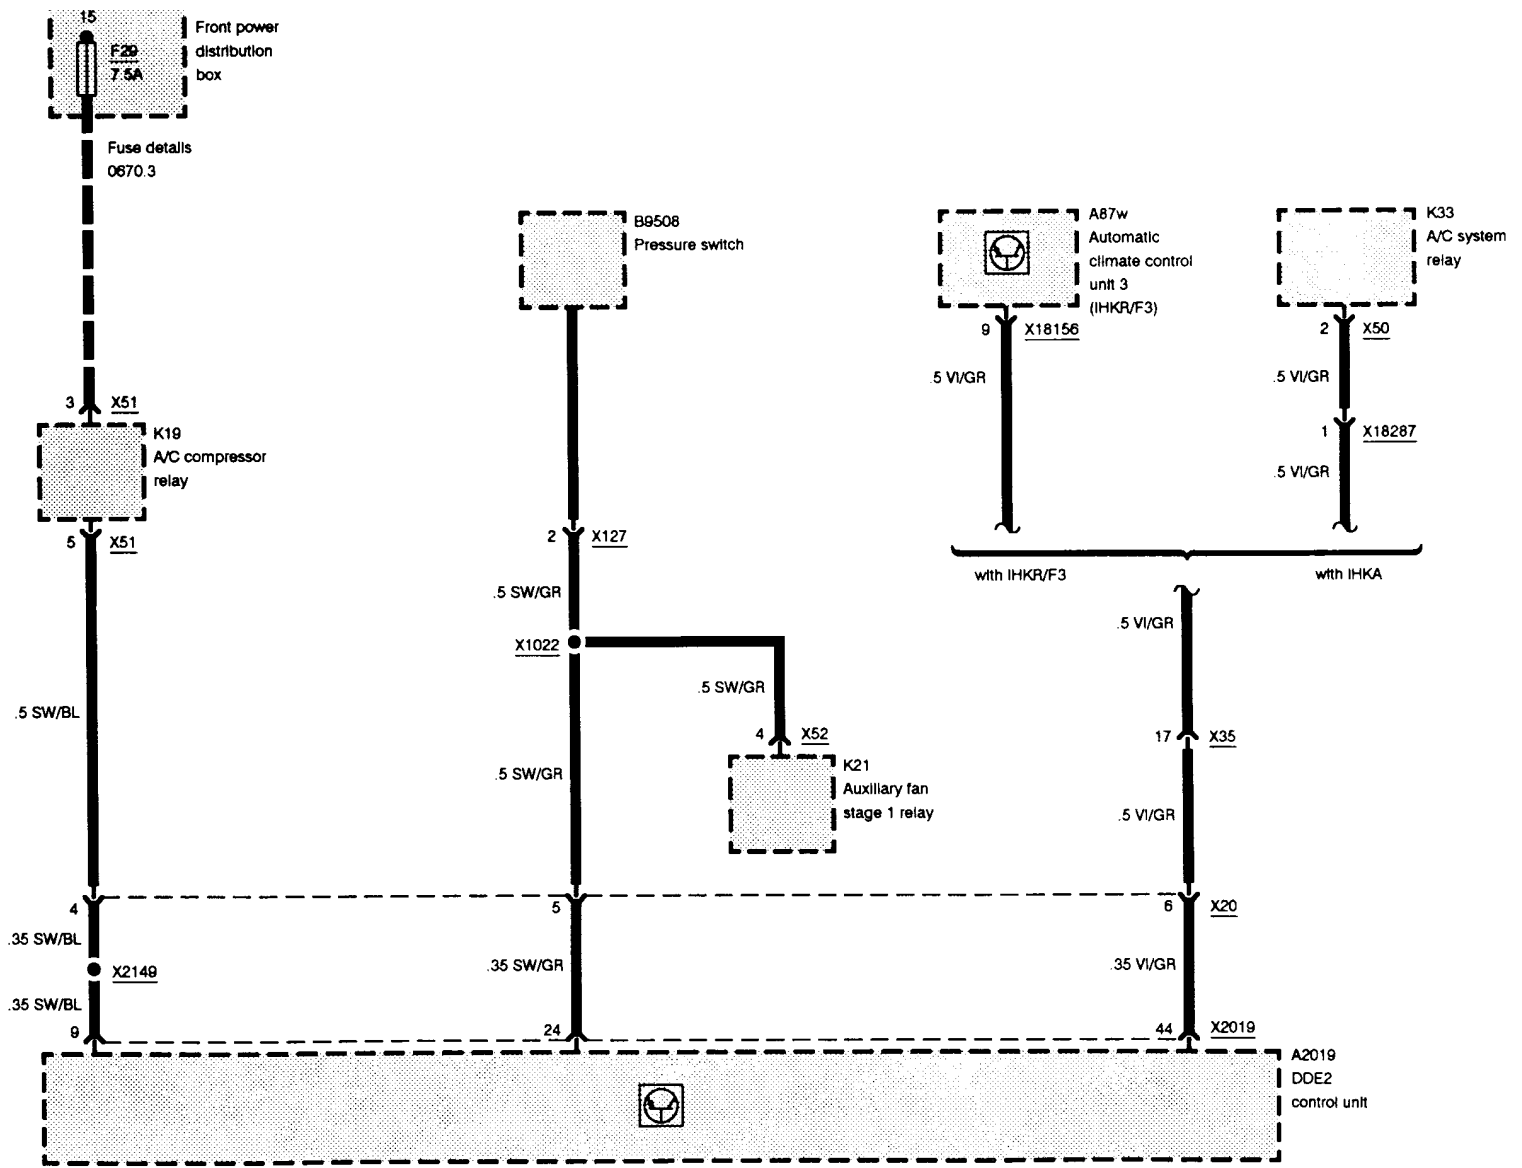

1360.1-08

1994

**BMWAG**Electrical troubleshooting manual

## 5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

## Antilock brake system (ABS)

## Scheme 3450.0

**Pin Assignment X11**

Pin	Type	Description/Function	Connection
1	E	Voltage supply	DME relay/DDE relay
2	M	Component ground	ABS hydraulic unit - front left solenoid valve
3		not used	
4	M	Component ground	Front left ABS sensor
5		not used	
6	E	Voltage signal	Front left ABS sensor
7		not used	
8	E	Voltage signal	Rear left ABS sensor
9	M	Component ground	Rear left ABS sensor
10		not used	
11	E	Voltage signal	Front right ABS sensor
12		not used	
13		not used	
14	E	Voltage supply	Terminal 87 pump relay
15		not used	
16		not used	
17	A	Relay activation	Terminal 86 pump relay
18	M	Component ground	ABS hydraulic unit - rear solenoid valve
19		not used	
20	M	Component ground	Ground connection
21	M	Component ground	Front right ABS sensor
22		not used	
23		not used	
24	E	Voltage signal	Rear right ABS sensor
25	M	Component ground	Brake light switch
26	M	Component ground	Rear right ABS sensor
27	M	Component ground	Terminal 85 valve relay
28	M	Component ground	Terminal 85 Pump relay
29	E	Voltage supply	Terminal 87 valve relay
30	A	RxD diagnosis line	Diagnostic connector
31	E/A	TxD diagnosis line	Diagnostic connector
32	E	Voltage supply	Terminal 87 valve relay
33		not used	
34	M	Component ground	Ground connection
35	M	Component ground	ABS hydraulic unit - front right solenoid valve


**E = Input, A = Output, M = Ground**

09/93

3450.0-00


1994

518i/t, 520i/t

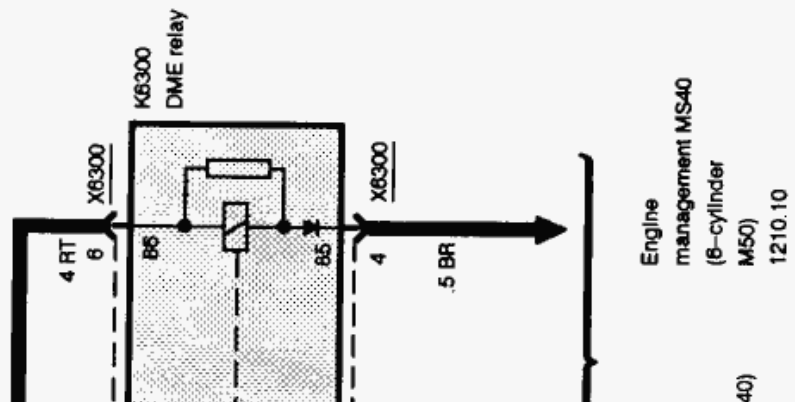



# Antilock brake system (ABS)

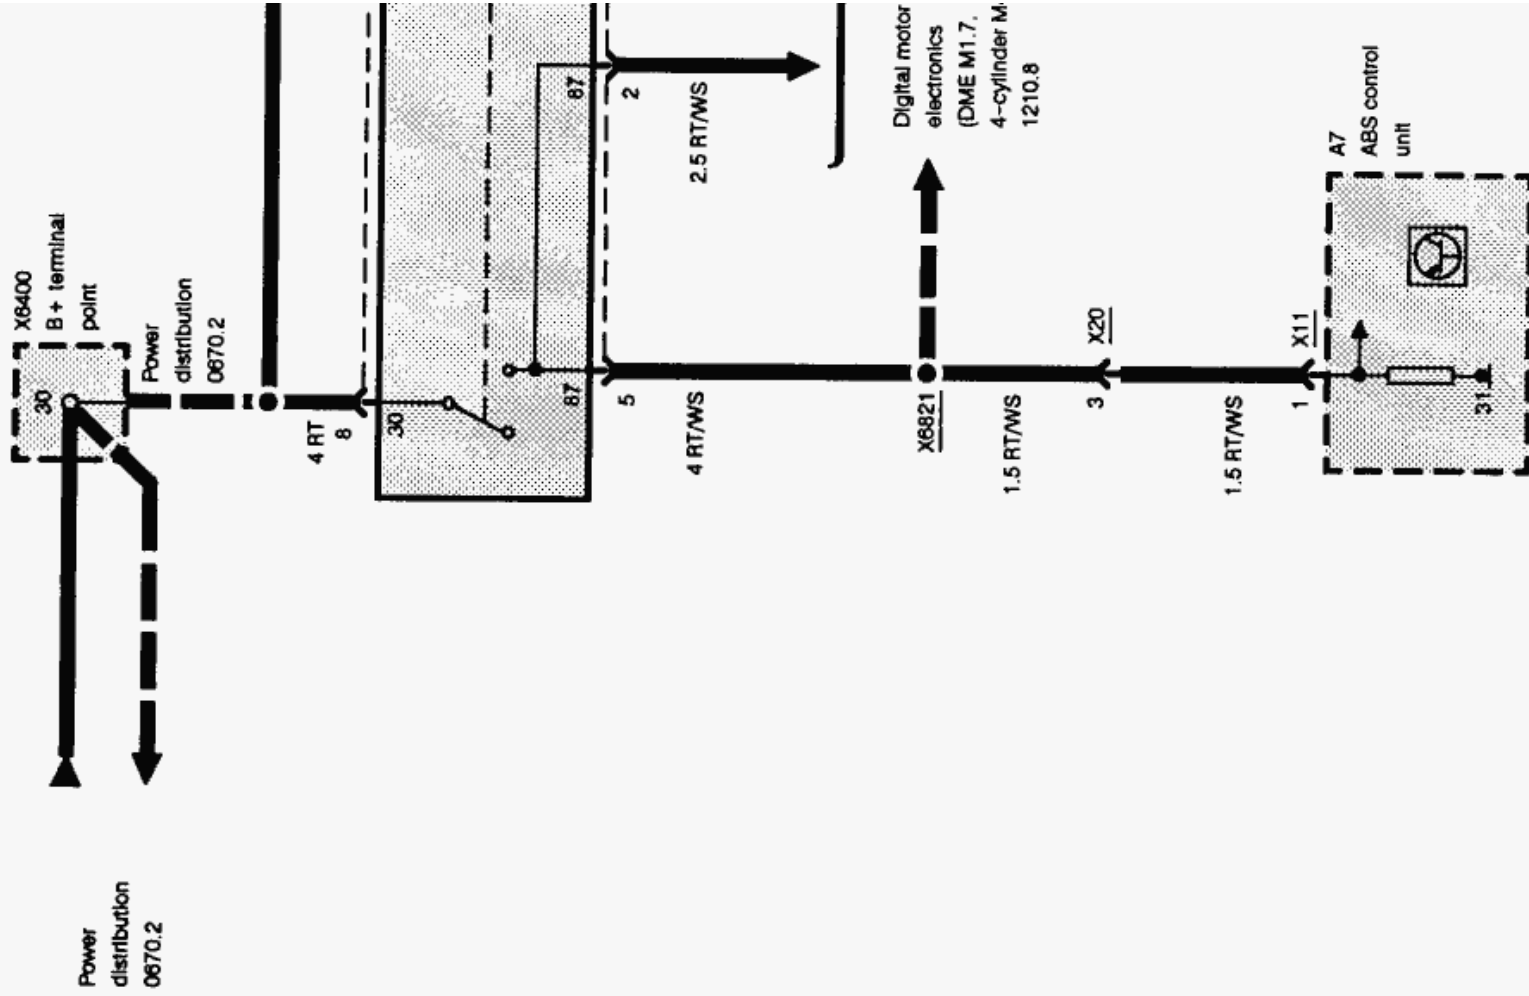


09/93

3450.0-01


1994

525td/t, 525tds/t

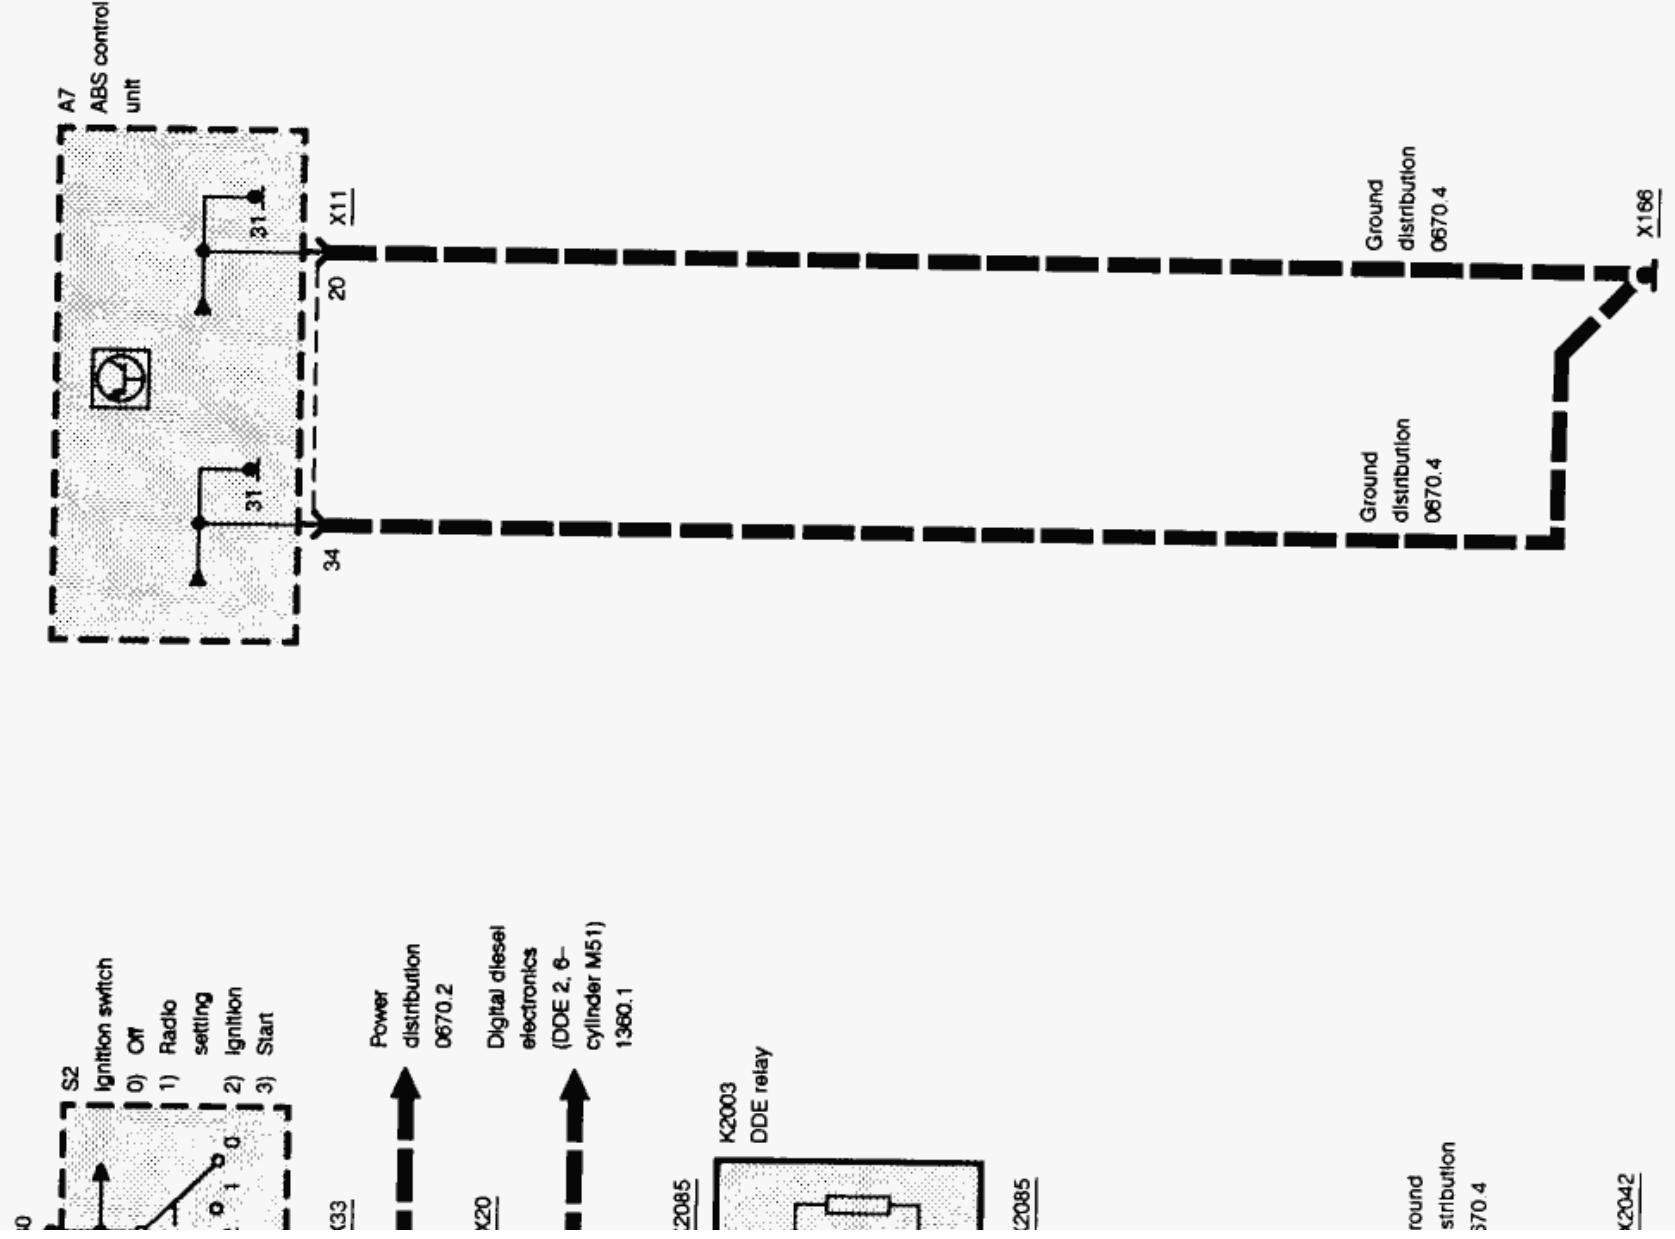




# Antilock brake system (ABS)

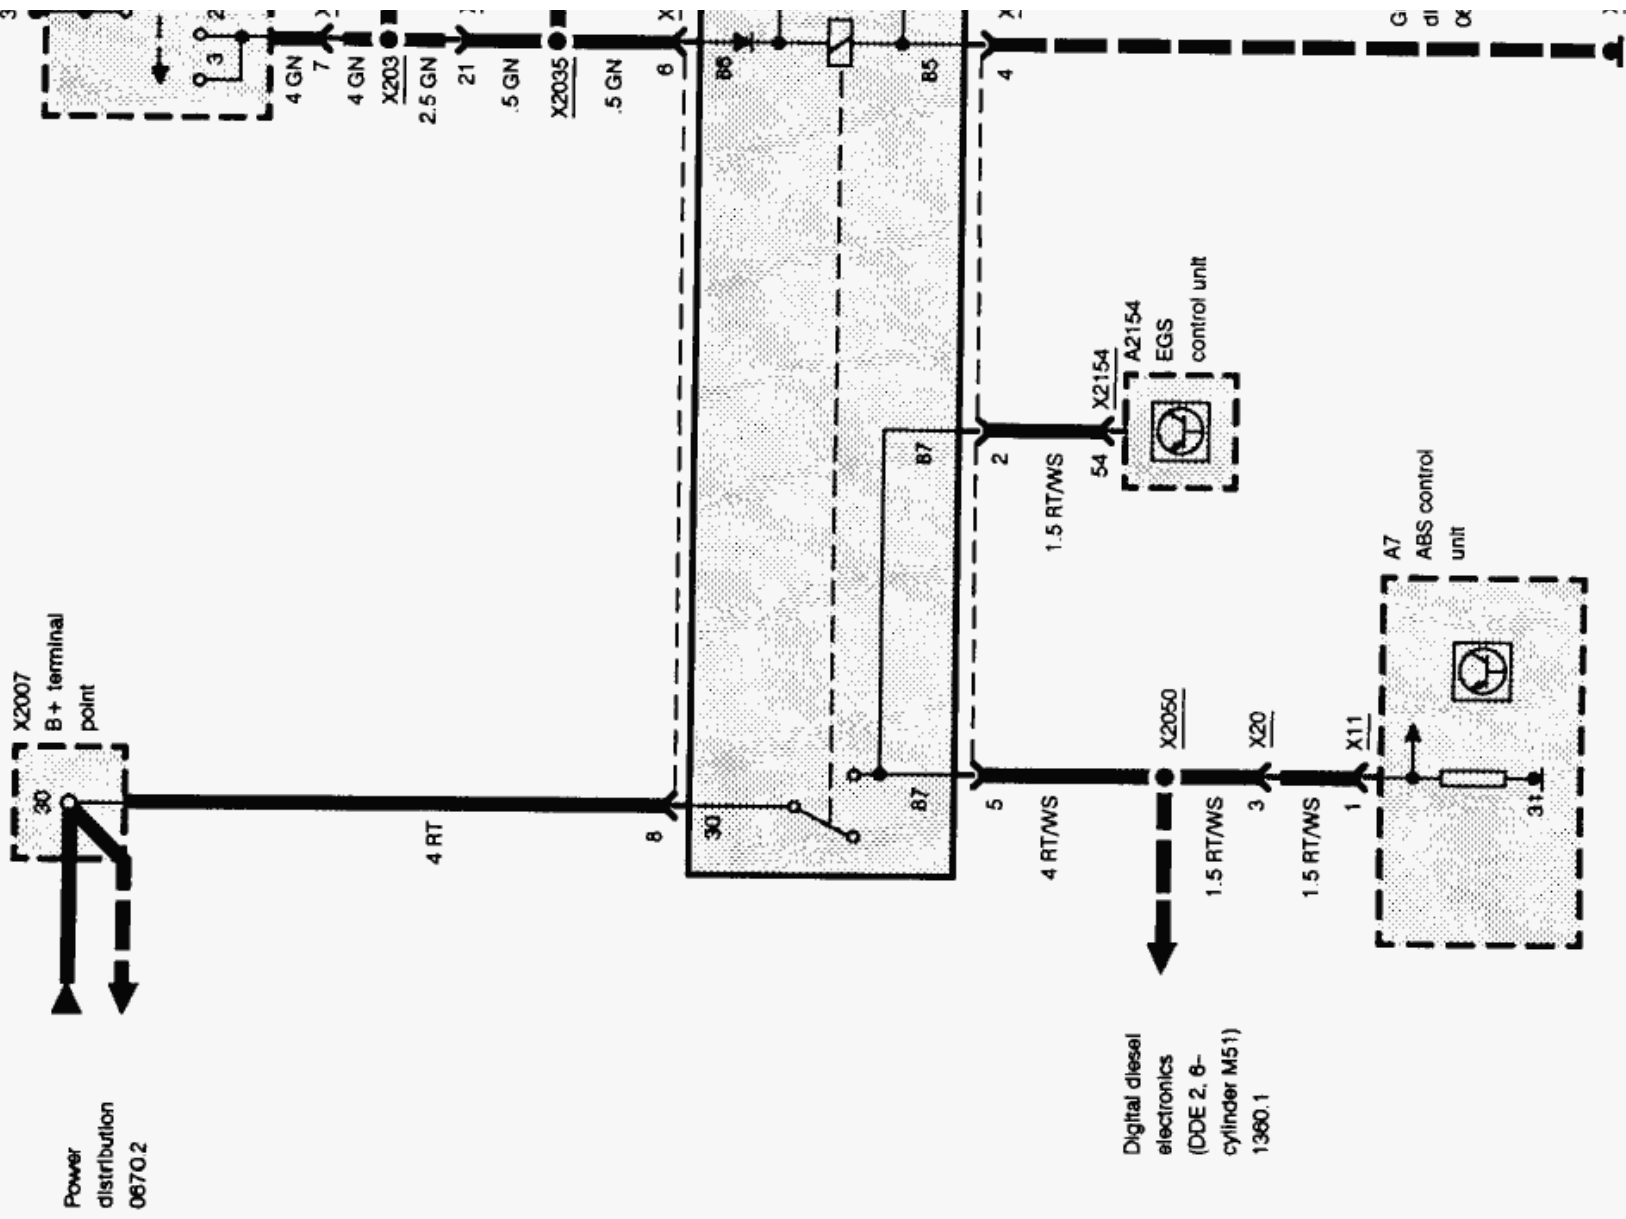


09/93

3450.0-02

1994

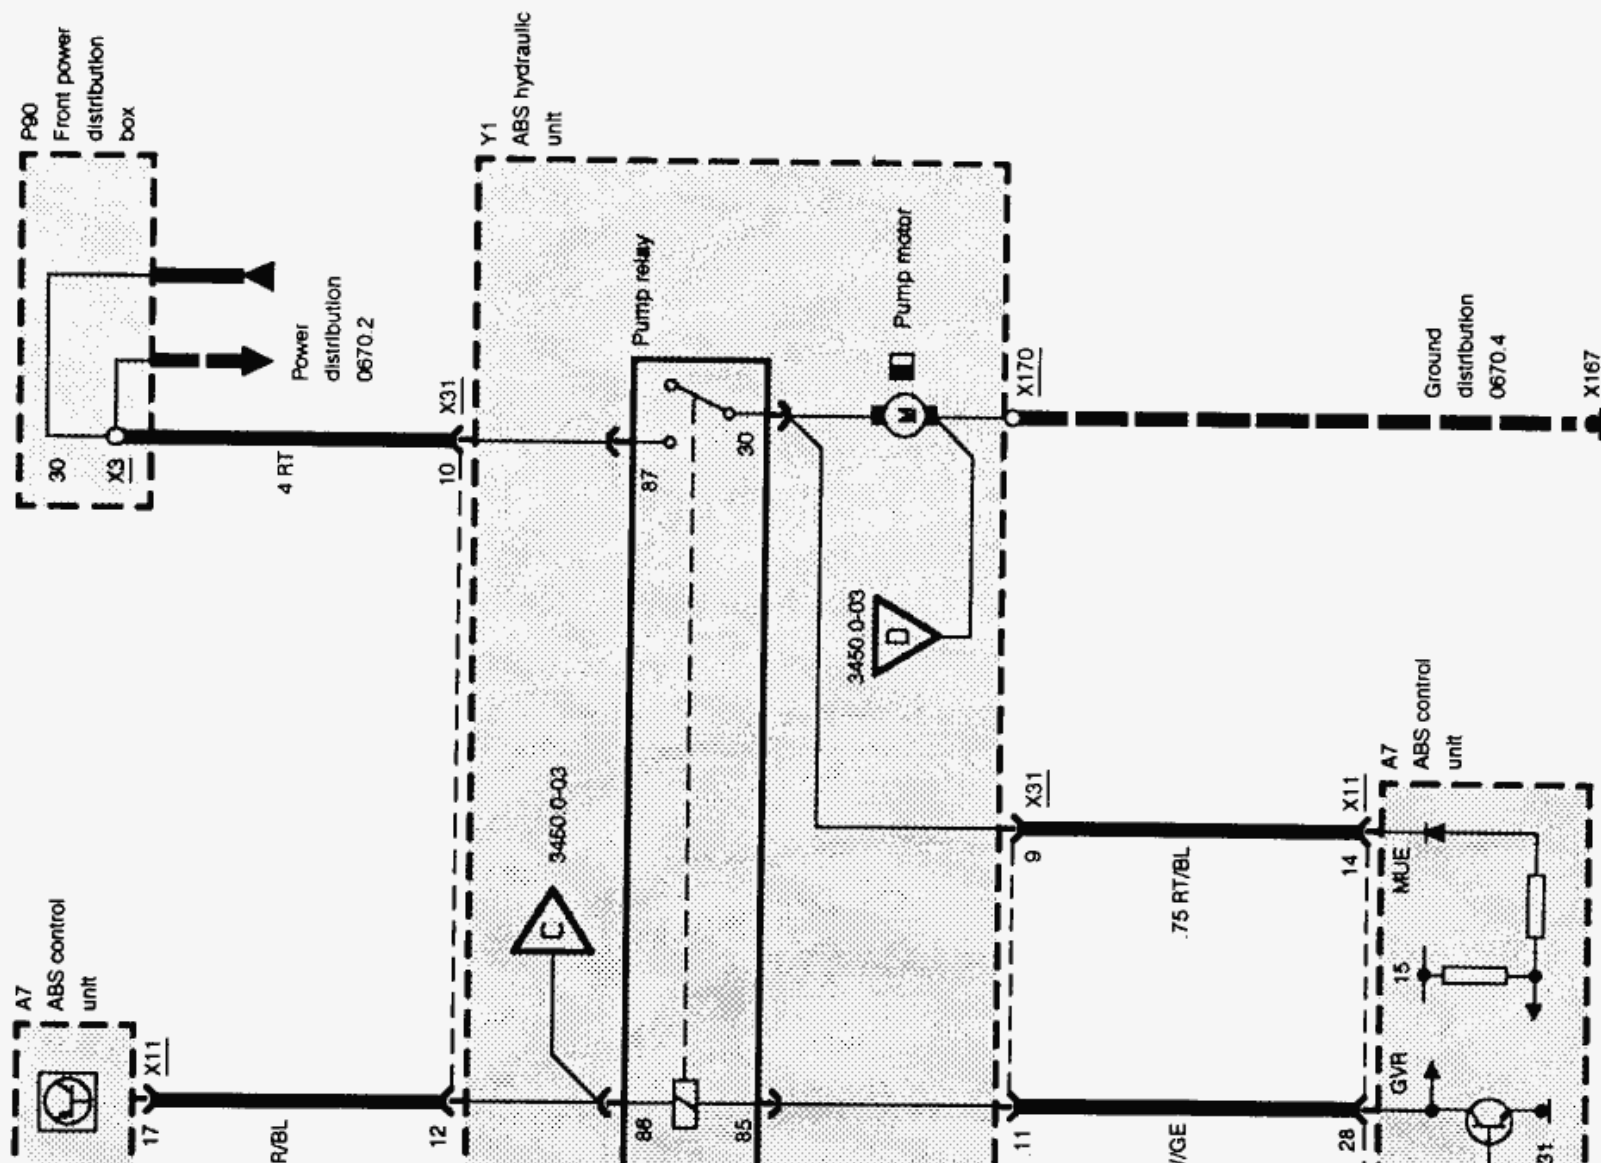

# Antilock brake system (ABS)

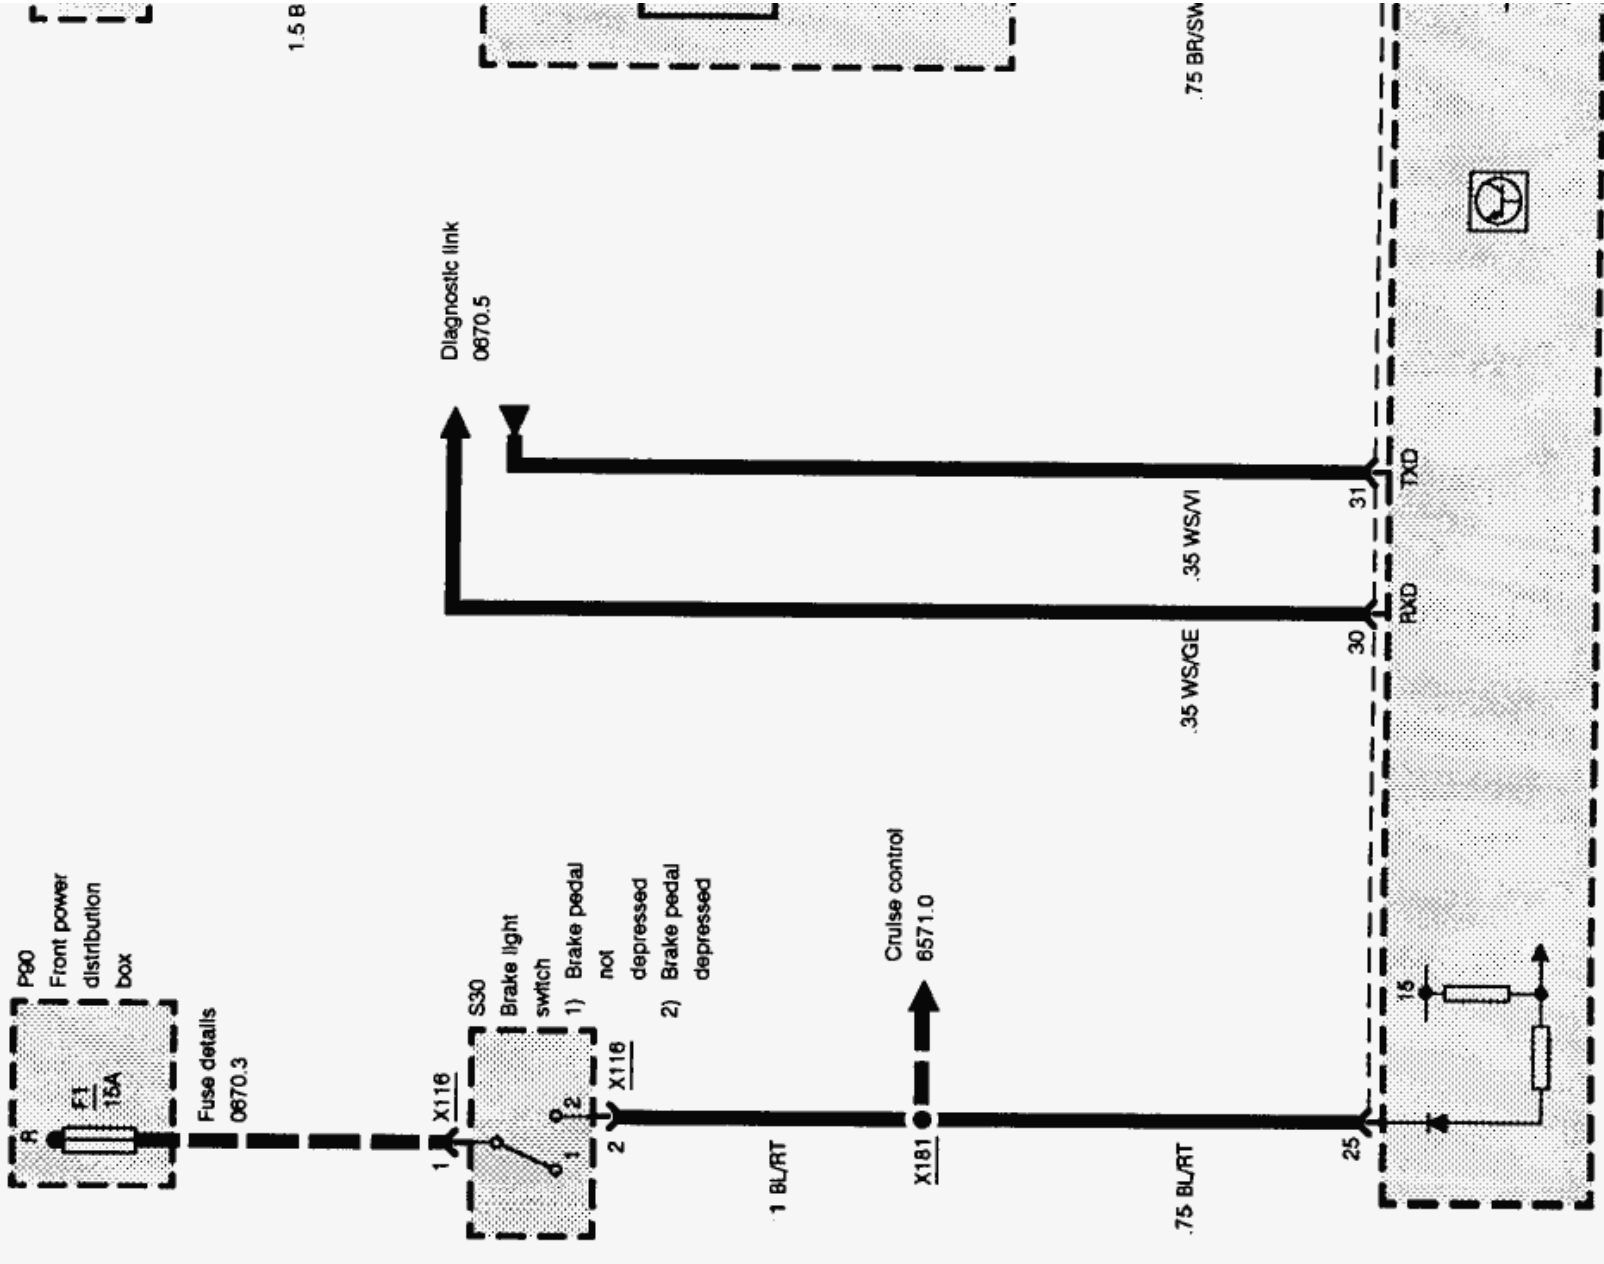




09/93


3450.0-03

1994

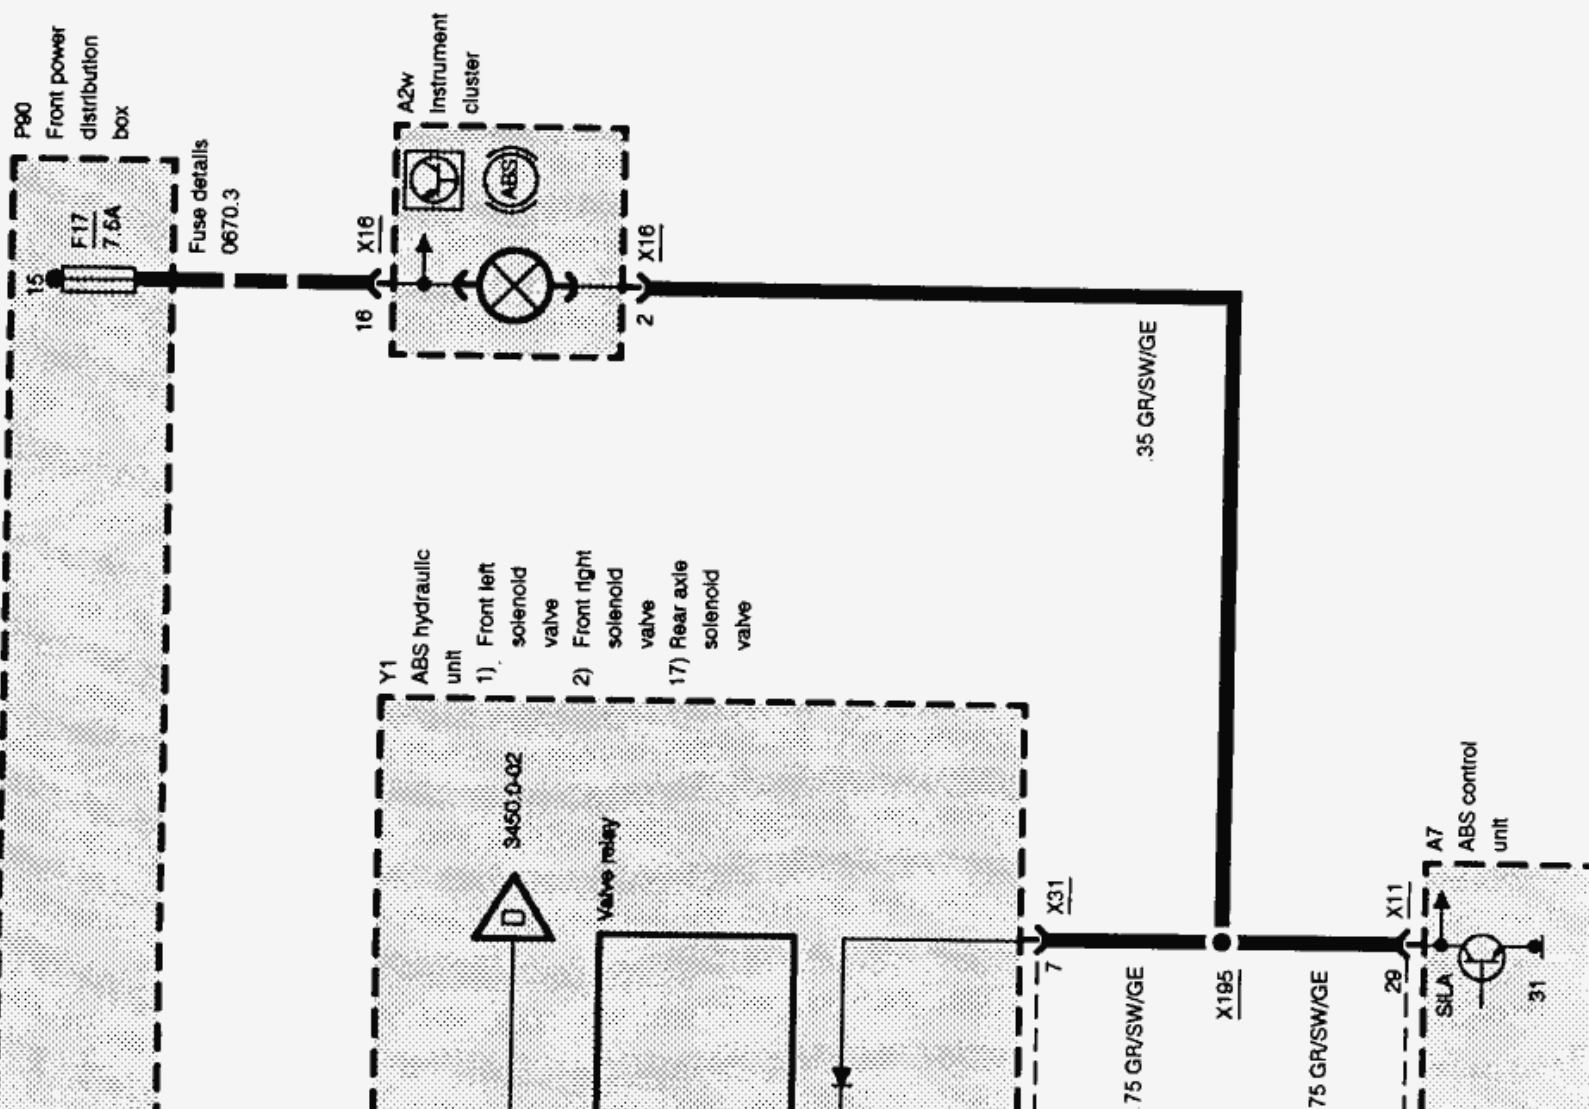




# Antilock brake system (ABS)

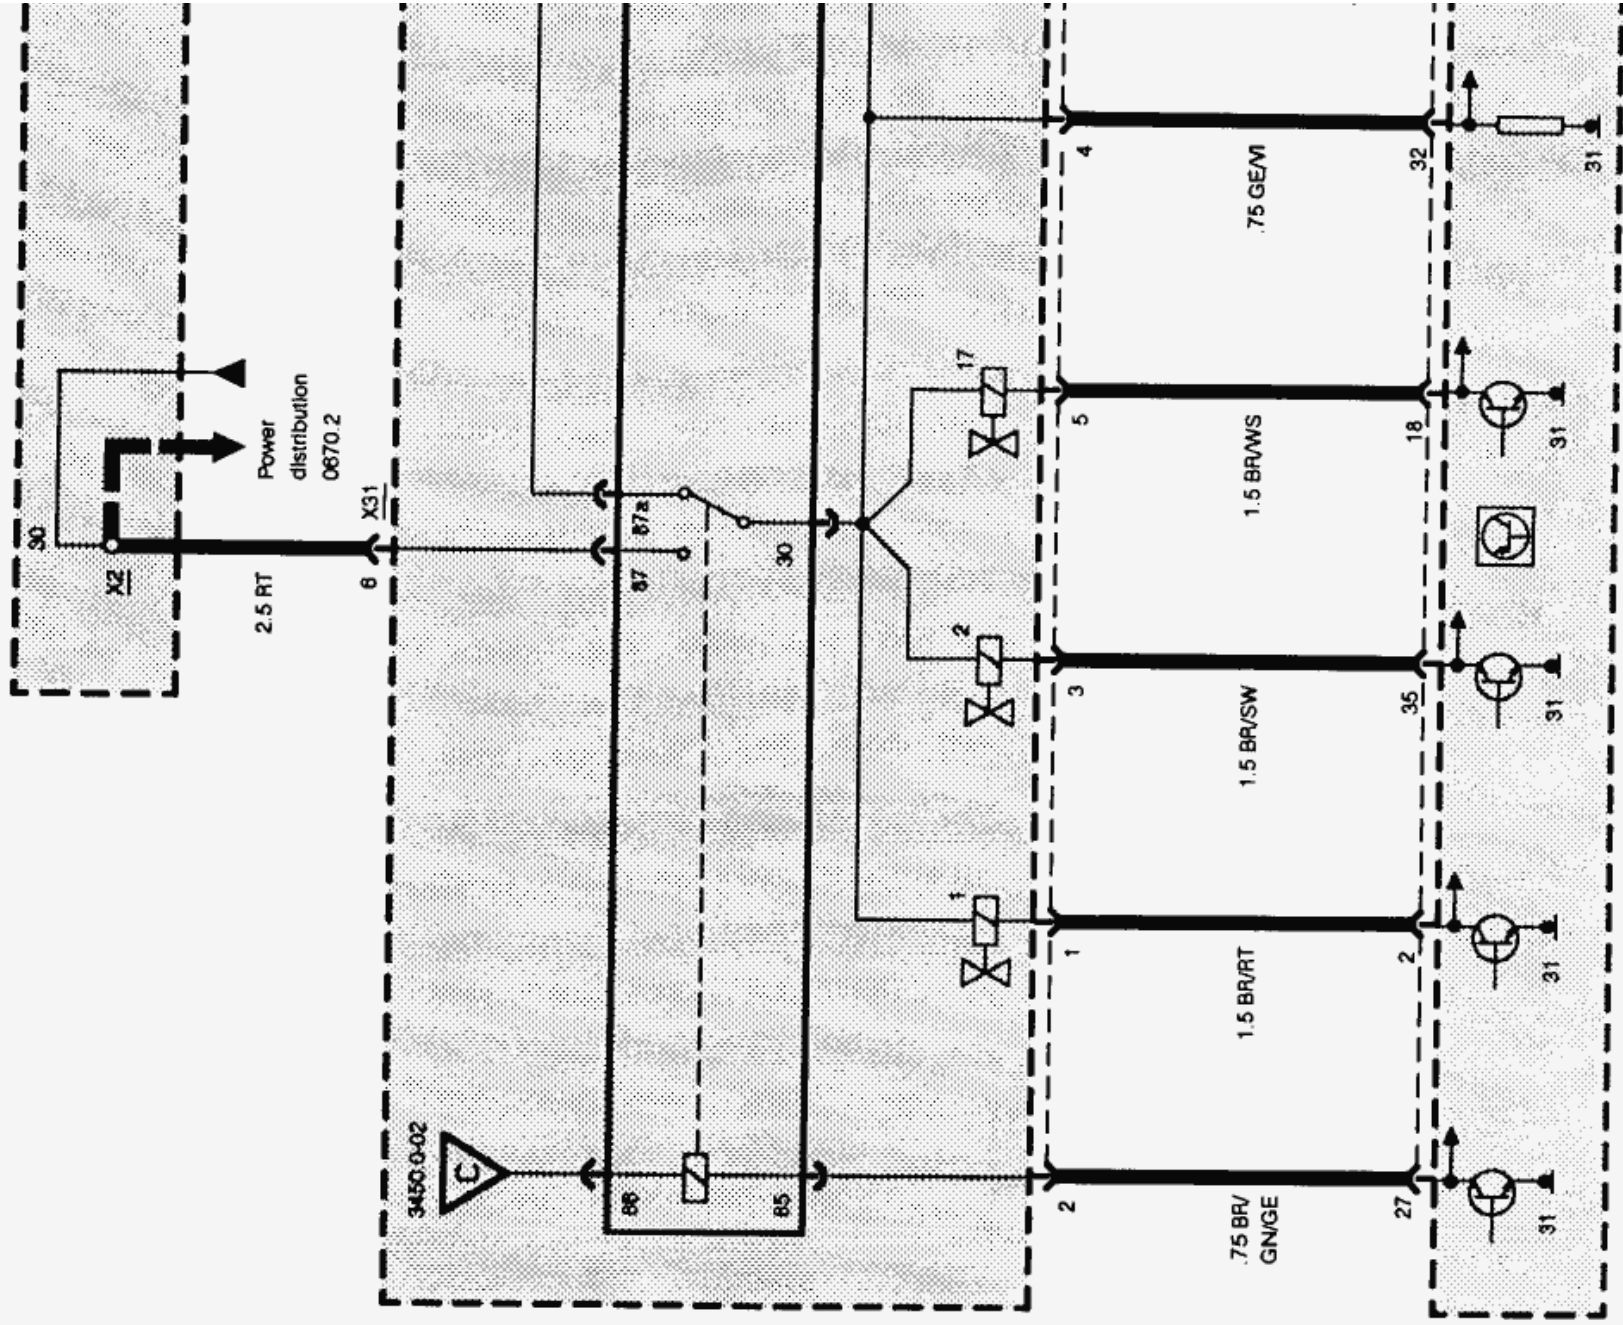

09/93


3450.0-04

1994

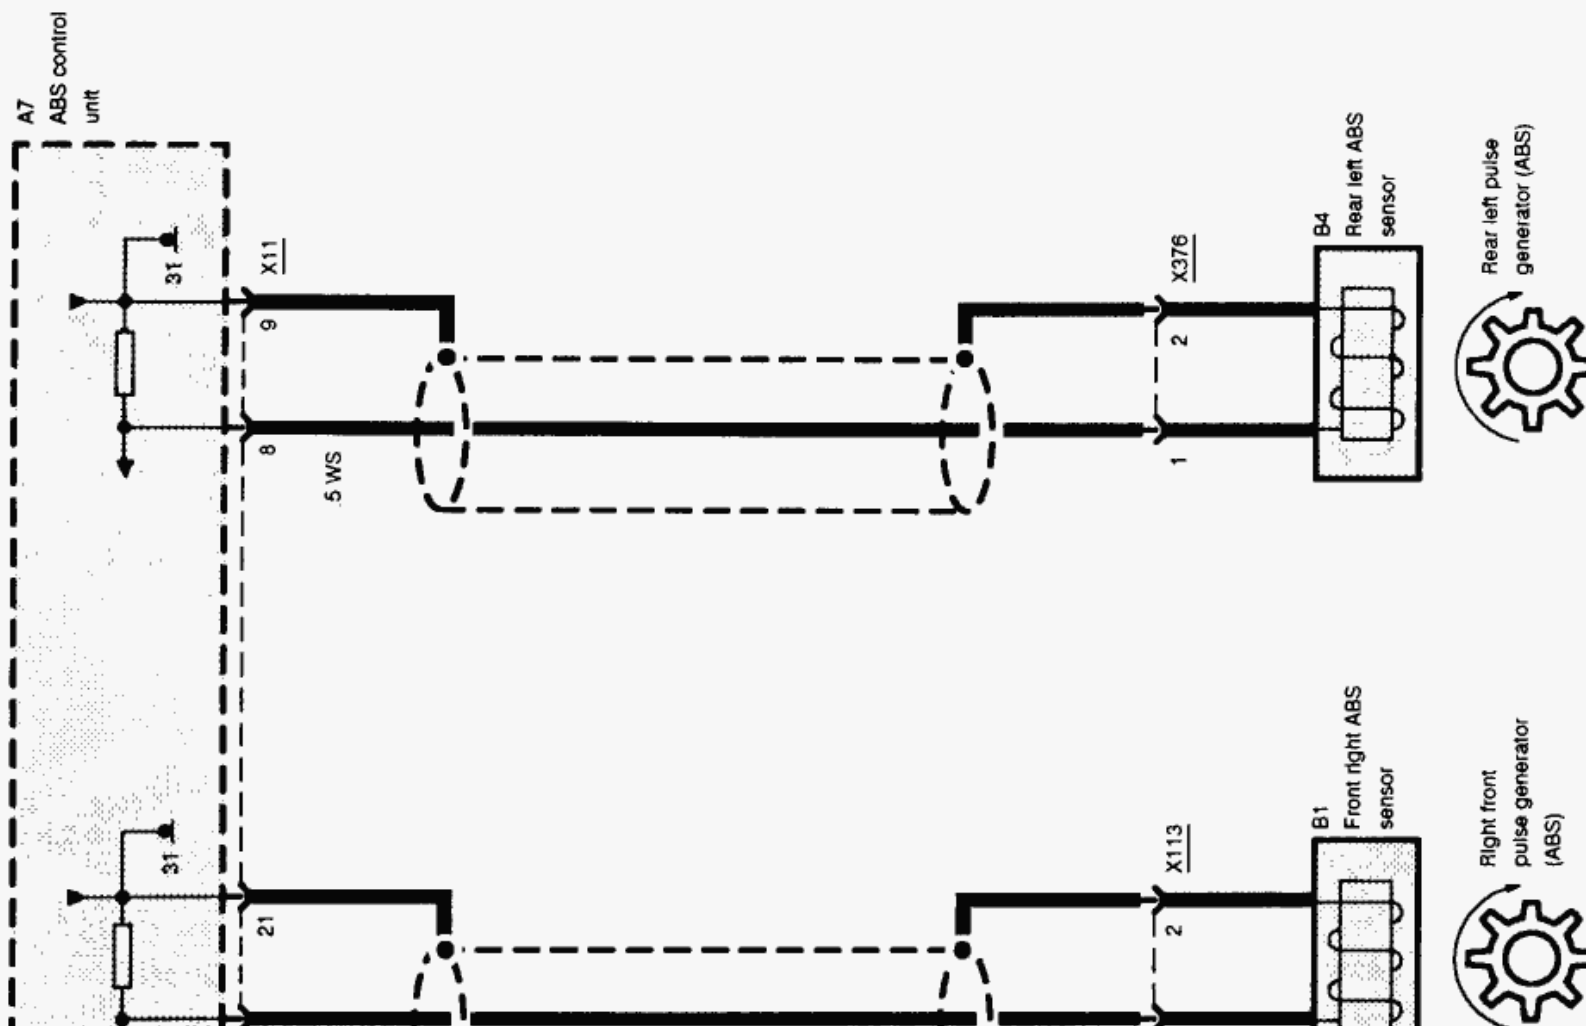



# Antilock brake system (ABS)

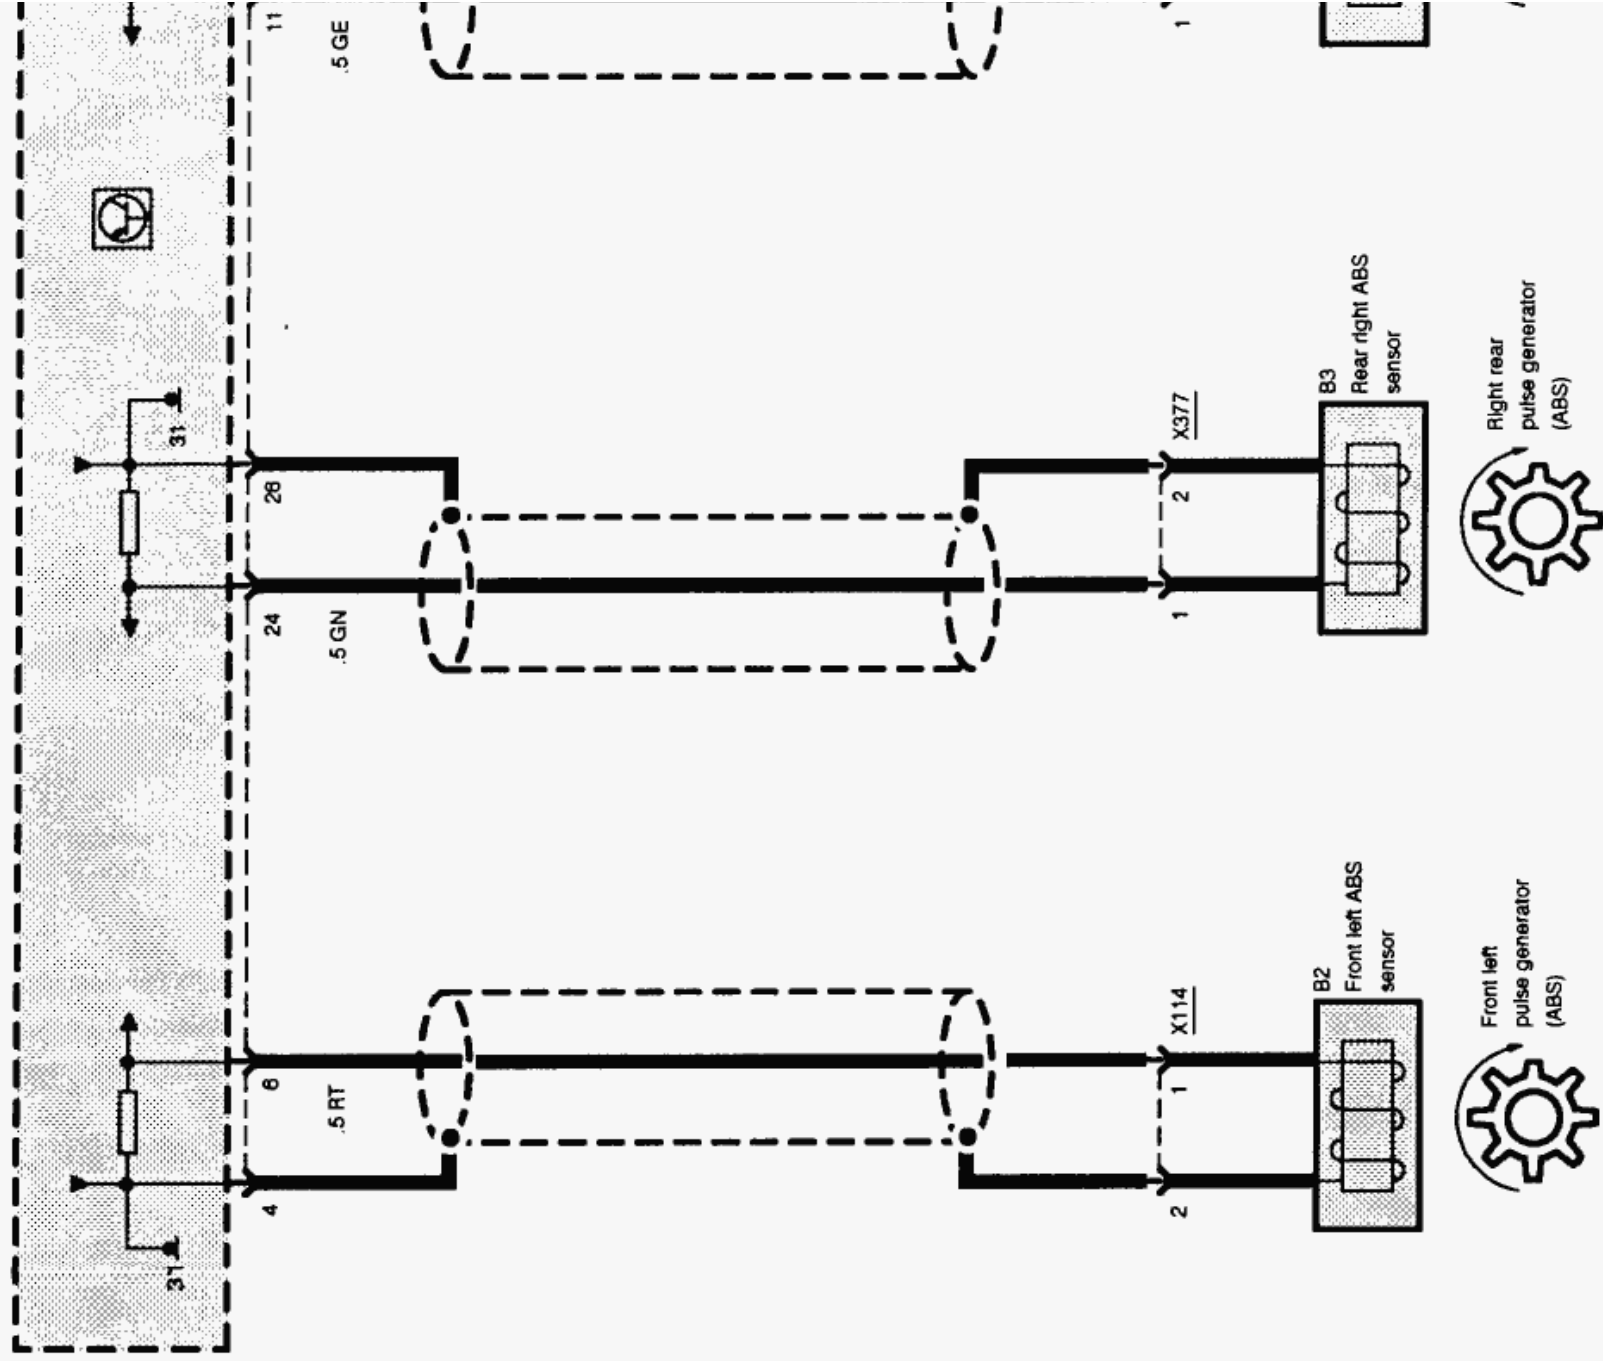




Pin	Type	Description/Function	Connection
1	A	Ignition, terminal 1	Ignition coil for cyl. 1
2	A	Ignition, terminal 1	Ignition coil for cyl. 3
3	A	Ignition, terminal 1	Ignition coil for cyl. 5
4	M	Ground	Ground connection
5	A	Injection valve, cylinder 6	Injection valve
6	A	Injection valve, cylinder 4	Injection valve
7			
8	E	Drive range P/N	Gear selector lever switch
9	A	Signal, air condition ON	Pressure switch
10	AA	HKRR/3: Auxiliary fan signal BKKA: Auxiliary fan signal	A/C control unit A/C system relay
11		not used	
12	A	Vehicle speed signal	Instrument cluster
13		not used	
14	A	Throttle-valve position	EGS control unit
15	E	Immobilizing device	On-board computer
16		not used	
17	A	Tl signal,	Instrument cluster
18	A	TD speed signal	Instrument cluster
19		not used	
20	E	Ignition timing intervention	EGS control unit
21		not used	
22	A	Injection valve, cylinder 3	Injection valve
23	A	Injection valve, cylinder 1	Injection valve
24	E	A/C compressor ON	A/C compressor relay
25	E	Signal, camshaft control	Camshaft control
26	E	Continuous pos. voltage, terminal 30	Bx terminal point
27	A	Idle actuator signal	Idle actuator
28	M	Ground	Ground connection
29	A	Ignition, terminal 1	Ignition coil for cyl. 2
30	A	Ignition, terminal 1	Ignition coil for cyl. 4
31	A	Ignition, terminal 1	Ignition coil for cyl. 6
32	M	Ground	Ground connection
33	A	Injection valve, cylinder 5	Injection valve
34	M	Ground	Ground connection
35	M	Shieldings, crankshaft sensor	Shielding
36		not used	
37		not used	
38	M	Shieldings, camshaft sensor	Shielding
39	M	Shieldings, knock sensor	Knock sensor 1
40	M	Shieldings, knock sensor	Knock sensor 2
41		not used	
42	M	Shieldings, oxygen sensor	Shielding
43		not used	
44		not used	
45		not used	
46		not used	
47		not used	
48	E	>10V from DME main relay	Main relay
49	E	Ignition, terminal 15	Ignition lock
50	A	Injection valve, cylinder 2	Injection valve
51	A	Tank ventilation valve	Tank ventilation valve
52	A	EKP relay and TR signal (crank angle reference)	Electrical fuel pump relay and electrical transmission
53	M	Ground oxygen sensor heater	Oxygen sensor
54	E	>10V from DME main relay	Main relay
55	A	DME main relay	DME main relay
56		not used	
57		not used	
58		not used	
59		not used	
60	E	Programming voltage	Diagnostic connector
61		not used	
62	M	Ground	Ground connection
63	E	Signal -	Knock sensor 2
64	E	Signal -	Knock sensor 1
65	A	Signal +	Knock sensor 1
66	A	Signal +	Knock sensor 2
67		not used	
68	M	Ground, air mass meter	Air mass meter
69		Signal, air mass meter	Hot wire air mass meter
70		not used	
71		not used	
72	A	Signal +	Throttle potentiometer
73	E	Signal, oxygen sensor	Oxygen sensor
74	M	Component ground	Camshaft sensor
75	M	Ground, oxygen sensor	Oxygen sensor
76	E	Signal	Throttle potentiometer
77	E	Throttle-valve position	Throttle potentiometer
78	E	Signal -	Crankshaft sensor
79	A	Signal +	Crankshaft sensor
80	E	Signal -	Coolant temperature sensor
81	A	Signal +	Coolant temperature sensor
82	M	Component ground	Crankshaft sensor
83	E	Signal -	Camshaft sensor
84	A	Signal +	Camshaft sensor
85	E	Intake air temperature sensor	Intake air temperature sensor
86	M	Component ground	Intake air temperature sensor
87	E	RxD diagnostic data link	Diagnostic connector
88	E/A	TxD diagnostic data link	Diagnostic connector


**Pin Assignment X6000**

E = Input, A = Output, M = Ground



# Digital motor electronics (DME M1.7, 4-cylinder M40)

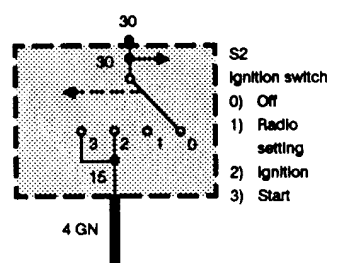

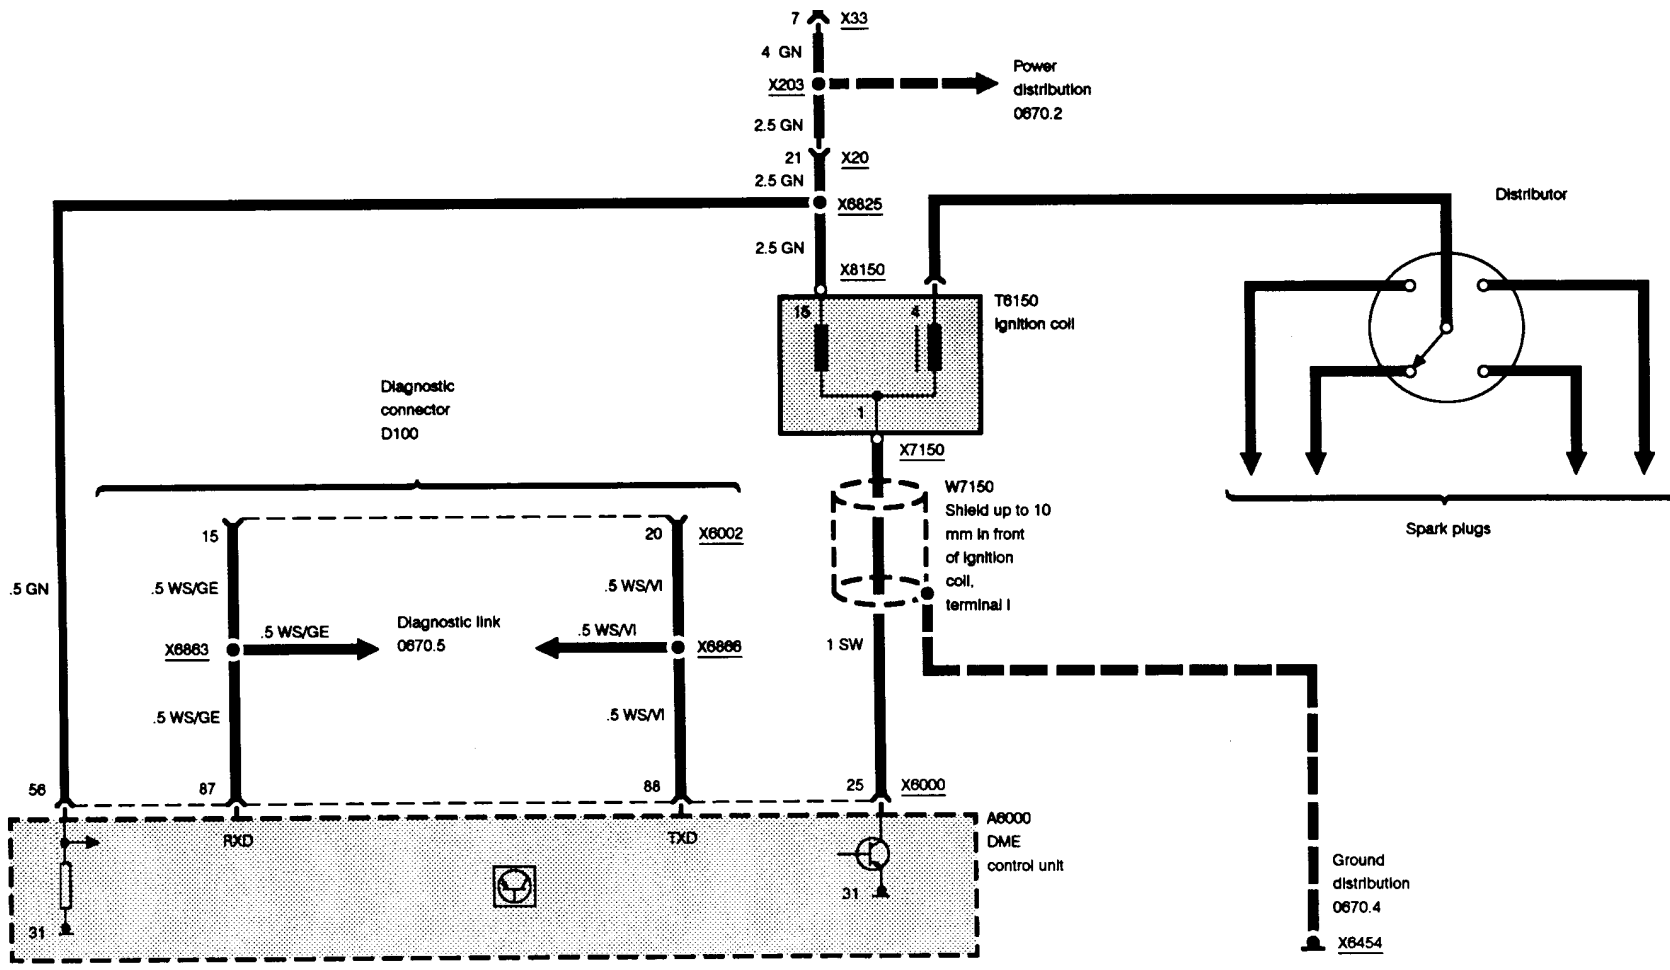


1210.8-00

1994

**BMW 5** Digital motor electronics (DME M1.7, 4-cylinder M40)



09/93

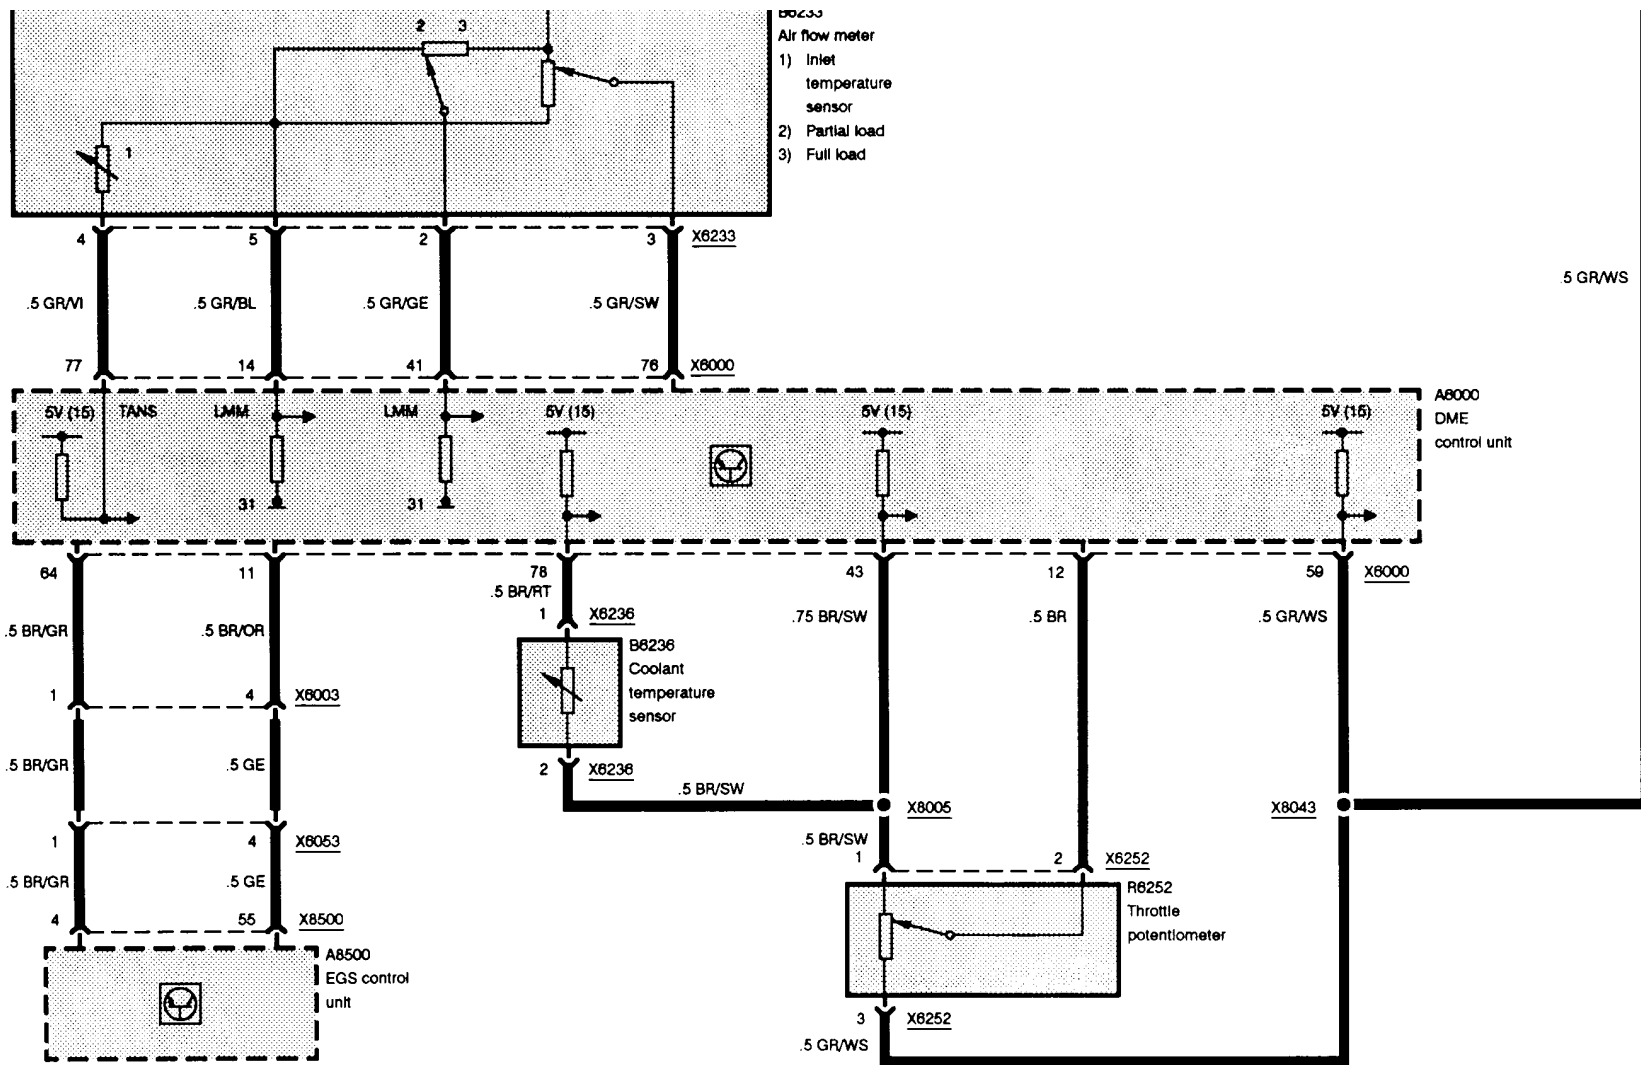


1210.8-01 1994





## Digital motor electronics (DME M1.7, 4-cylinder M40)



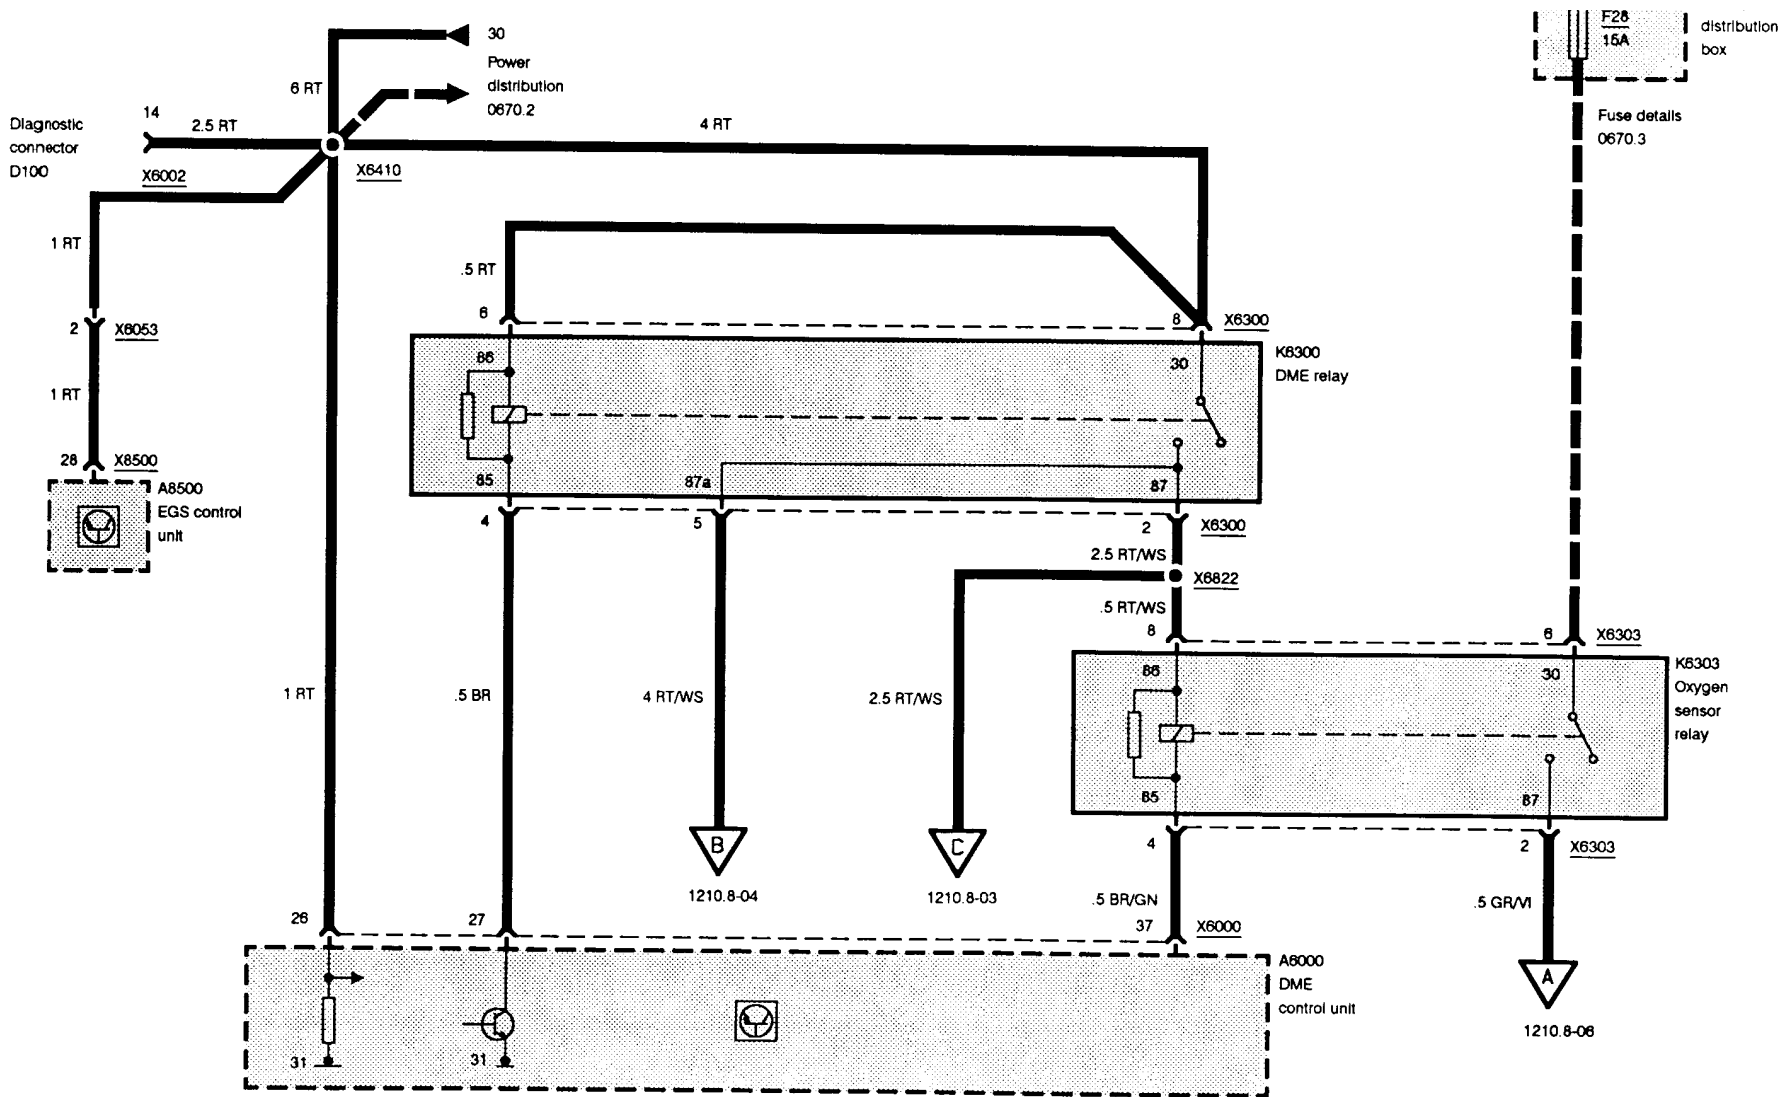


1210.8-02

 1994

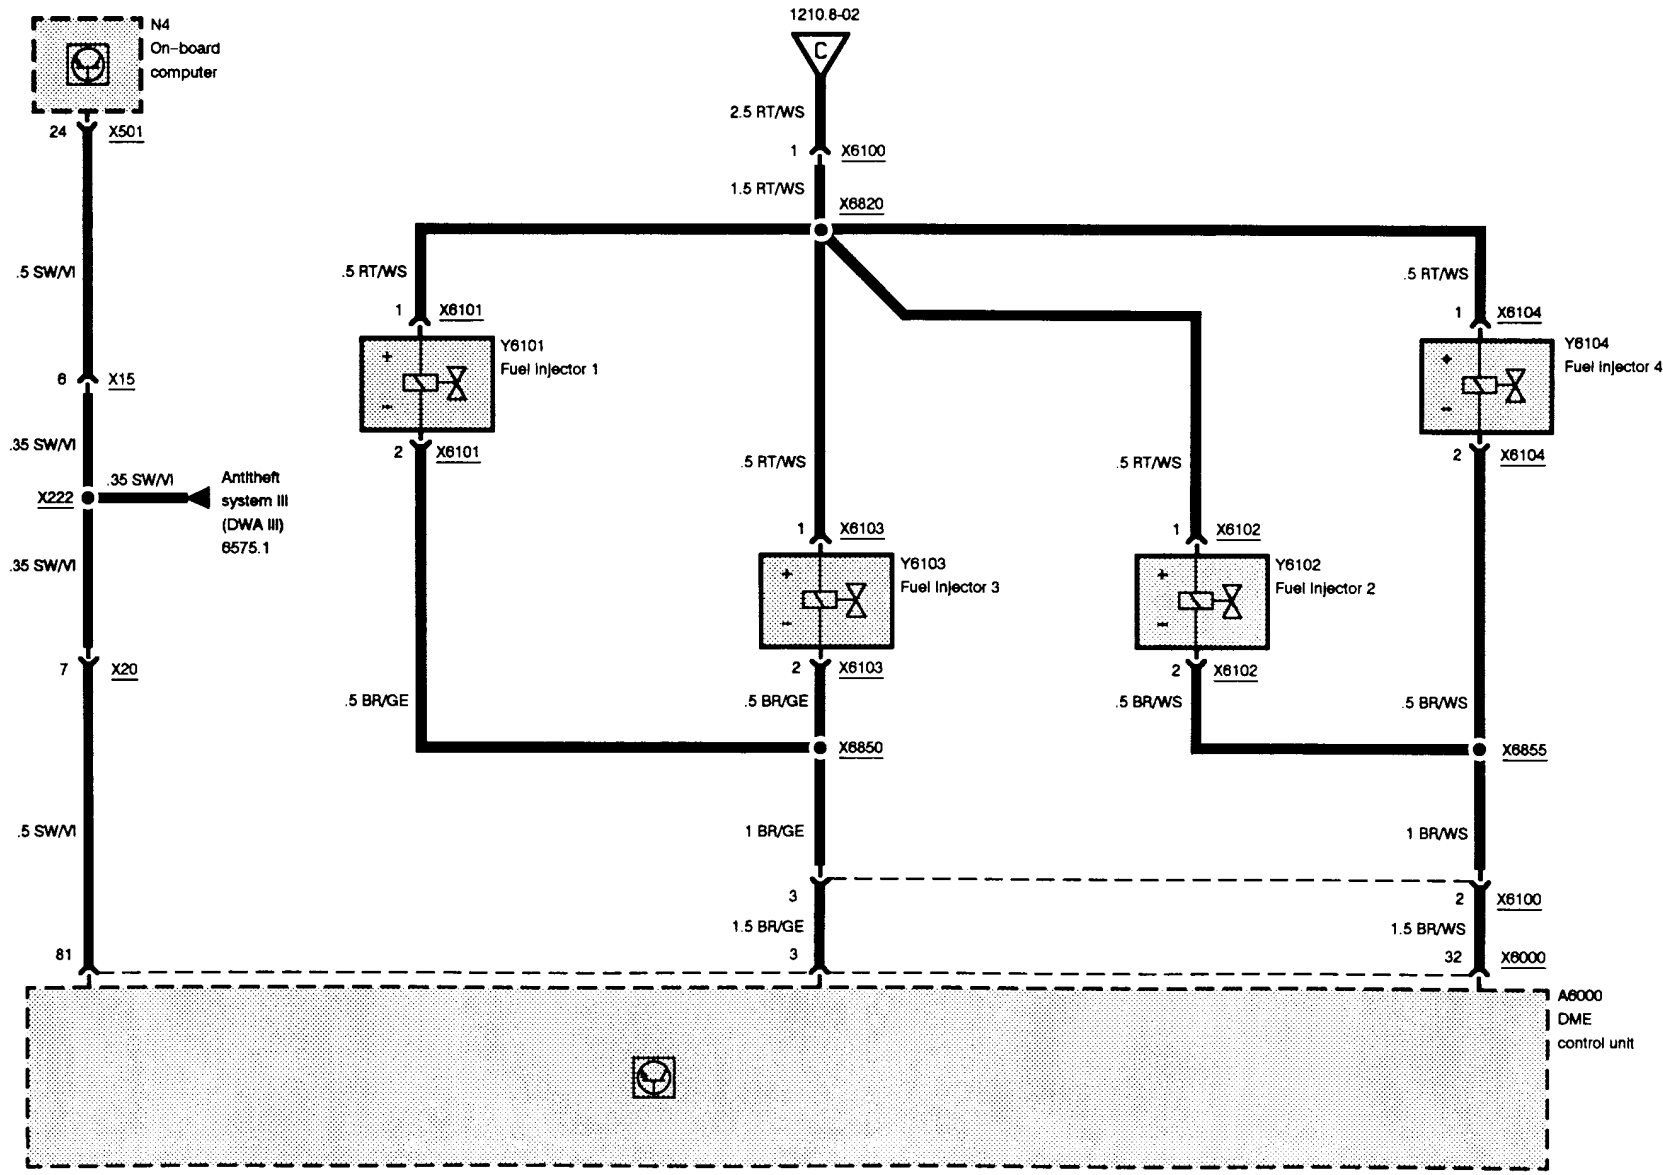


http://www.bmwusa.com/eng/shops/techcenter/1210.8/index.html?cid=11200072003144100

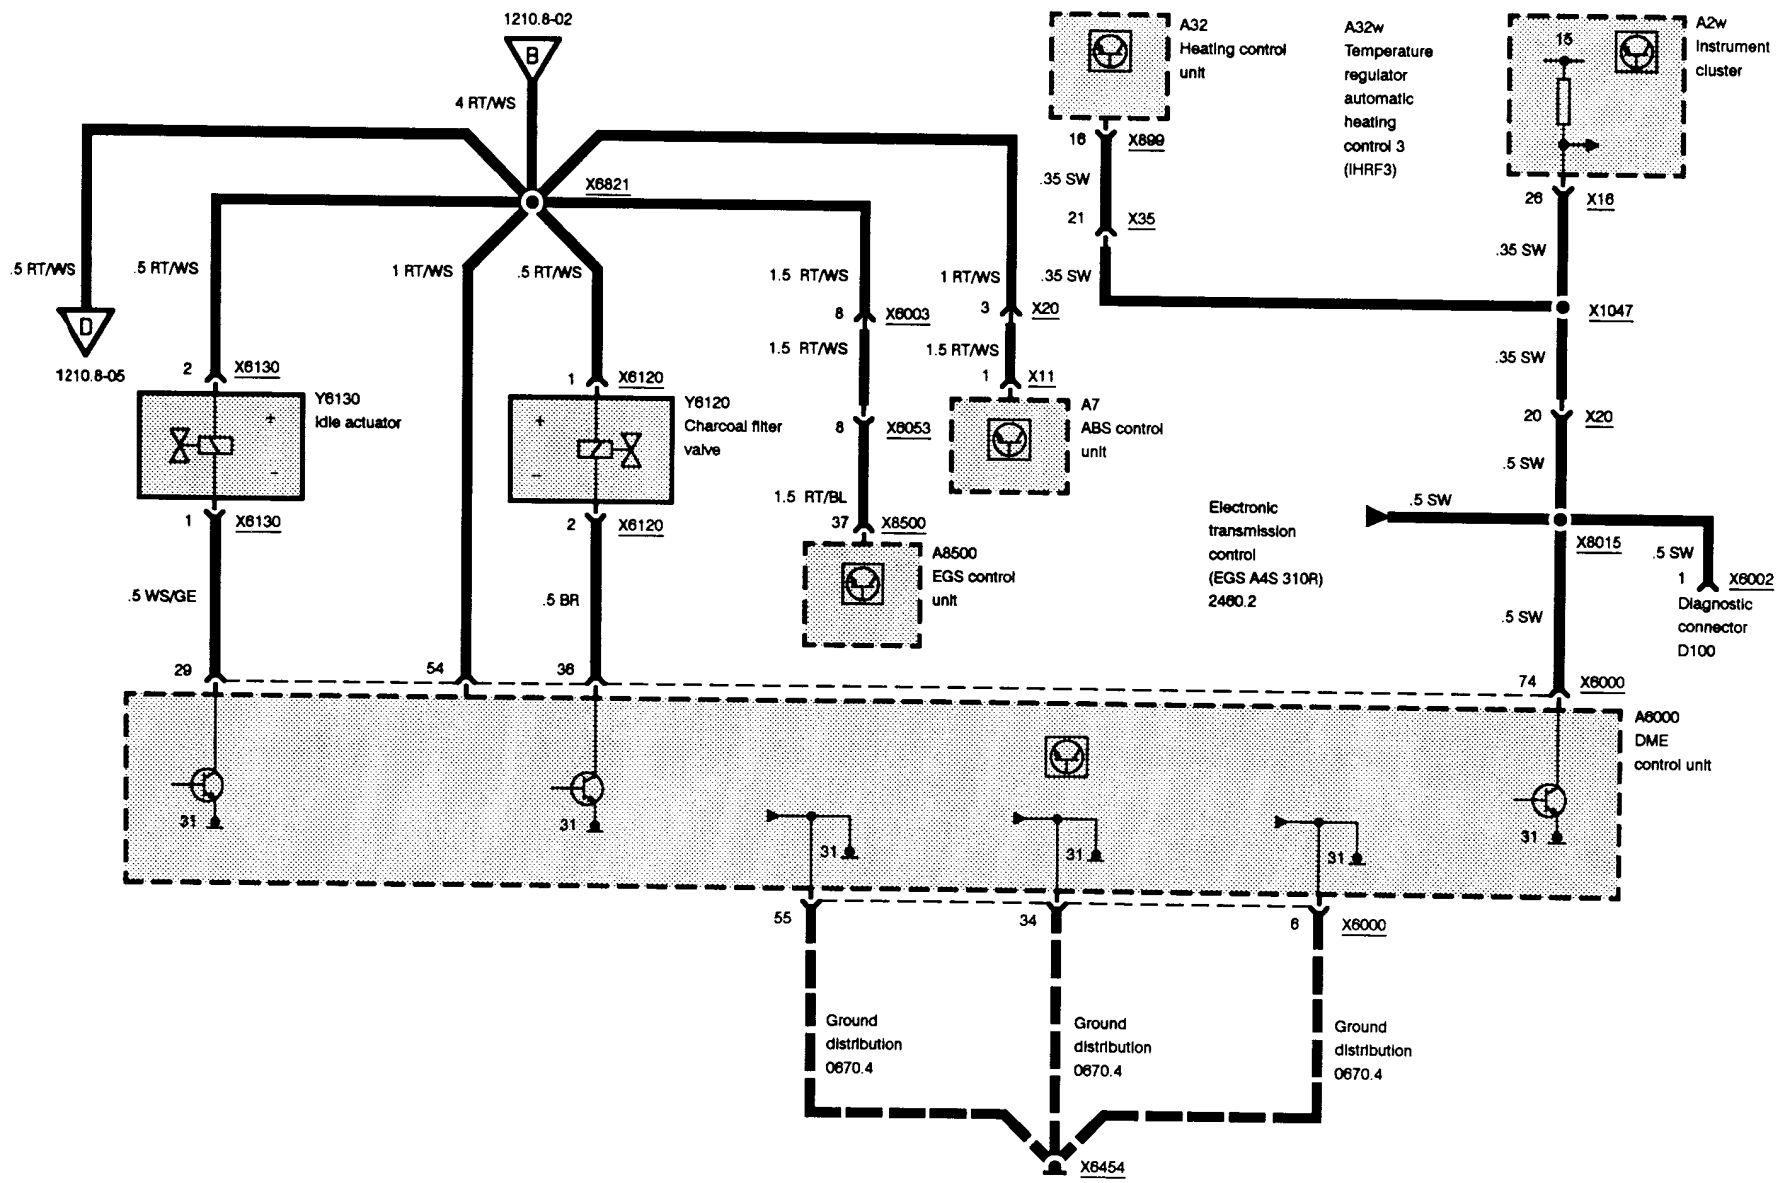




# Digital motor electronics (DME M1.7, 4-cylinder M40)

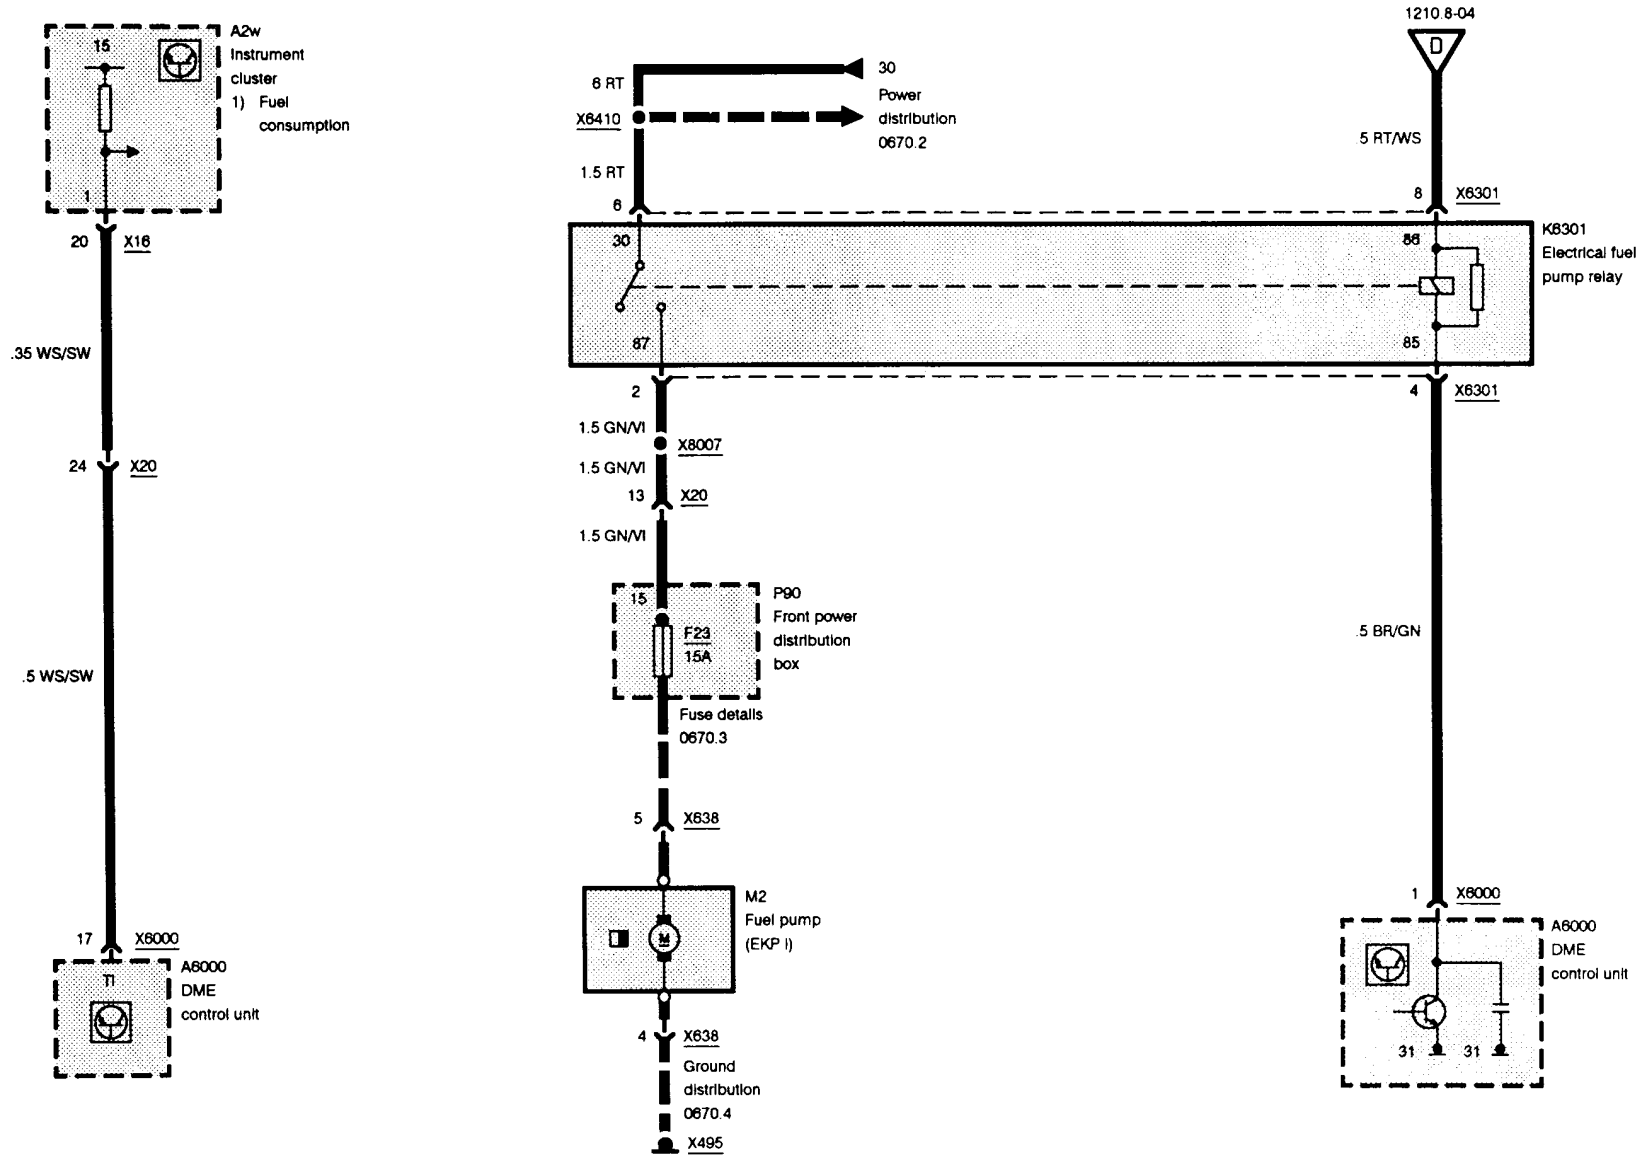



# Digital motor electronics (DME M1.7, 4-cylinder M40)

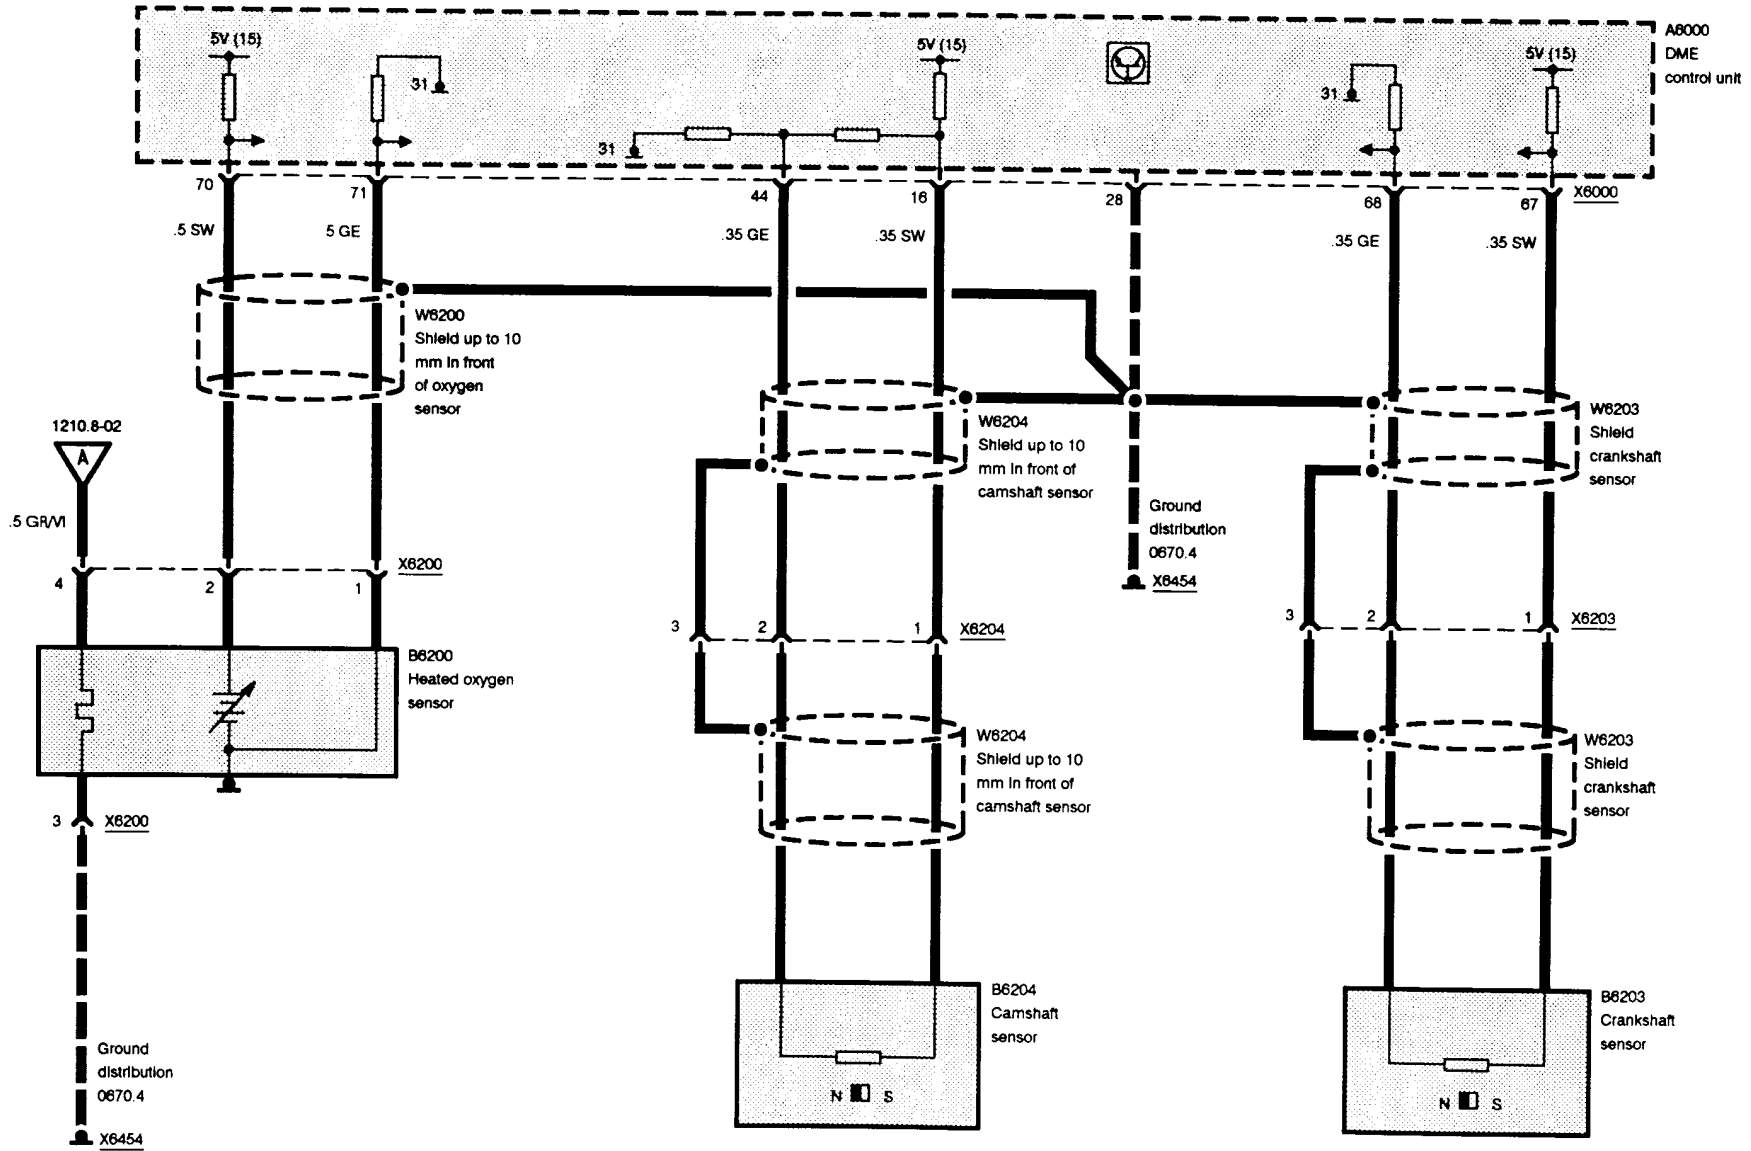


09/93

1210.8-06

1994

# BMW 5 Digital motor electronics (DME M1.7, 4-cylinder M40)

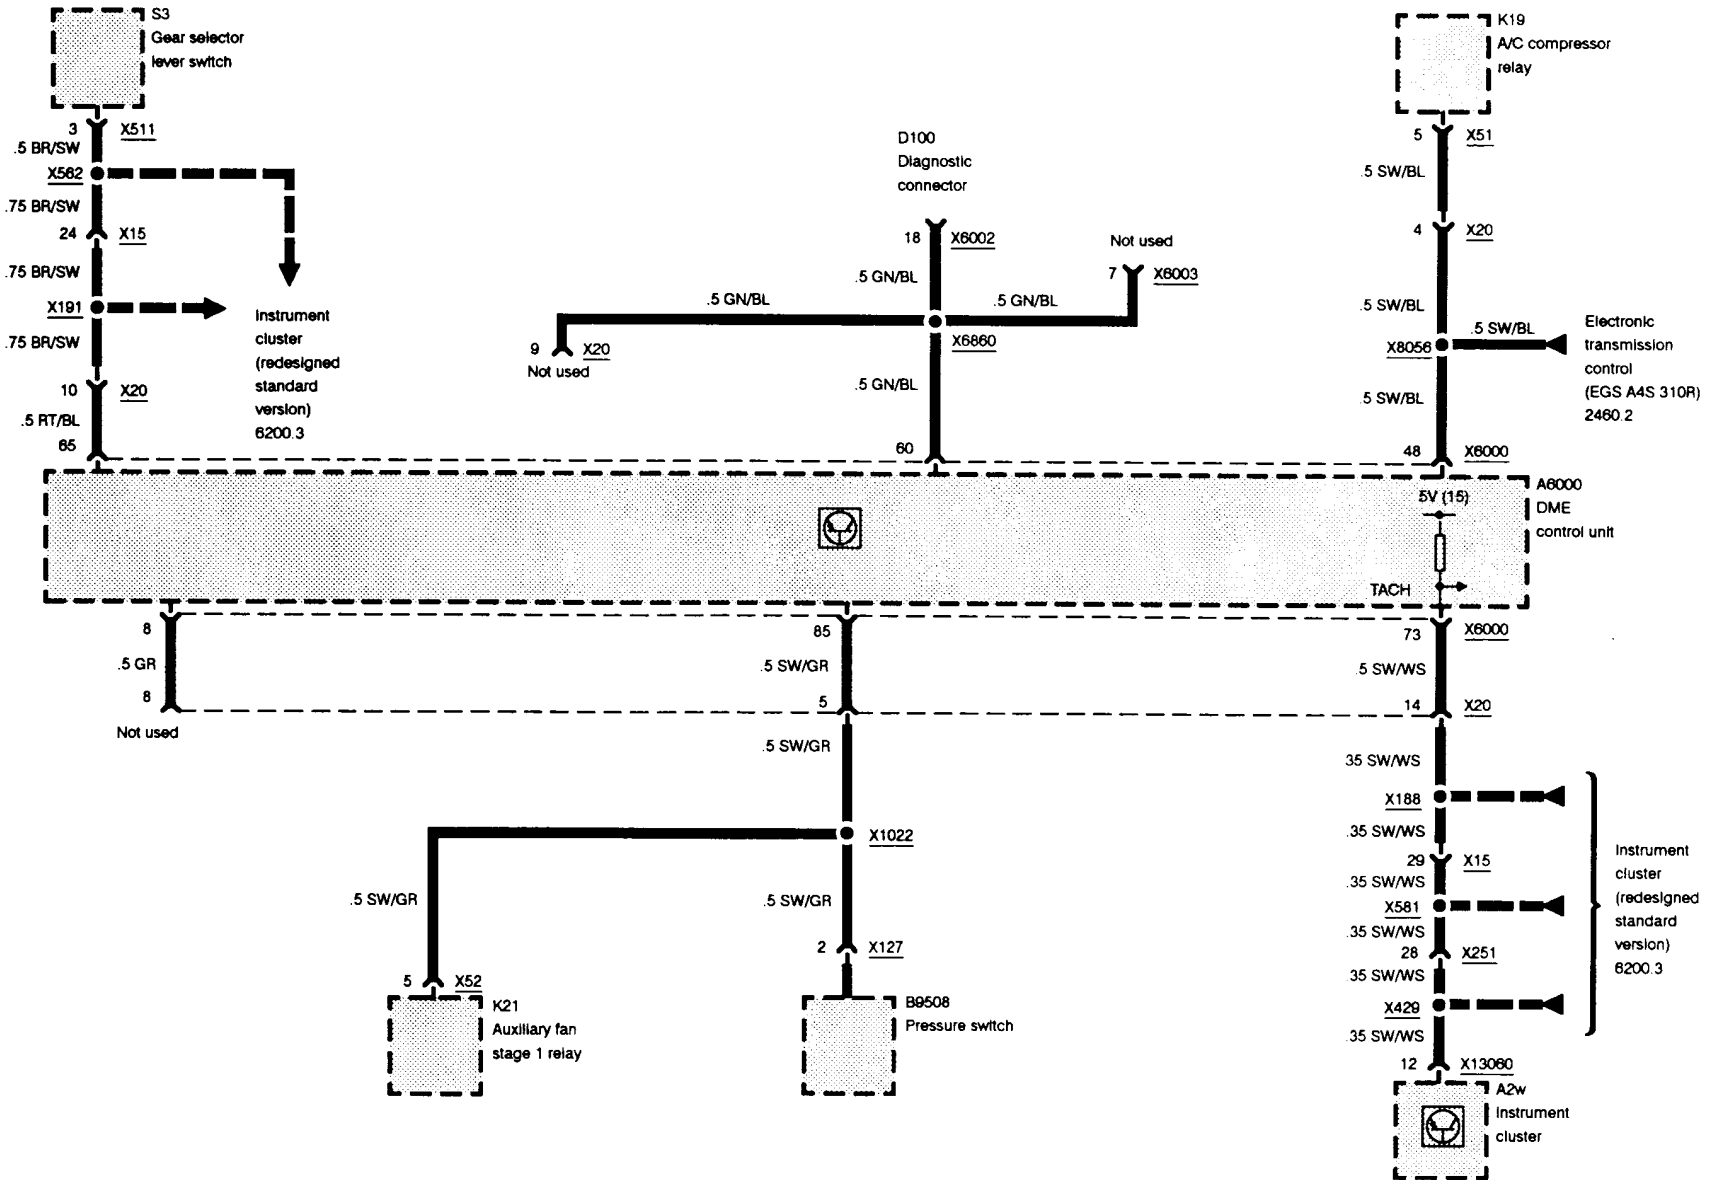


# BMW 5 Digital motor electronics (DME M1.7, 4-cylinder M40) Diode module

09/93

1210.8-08

1

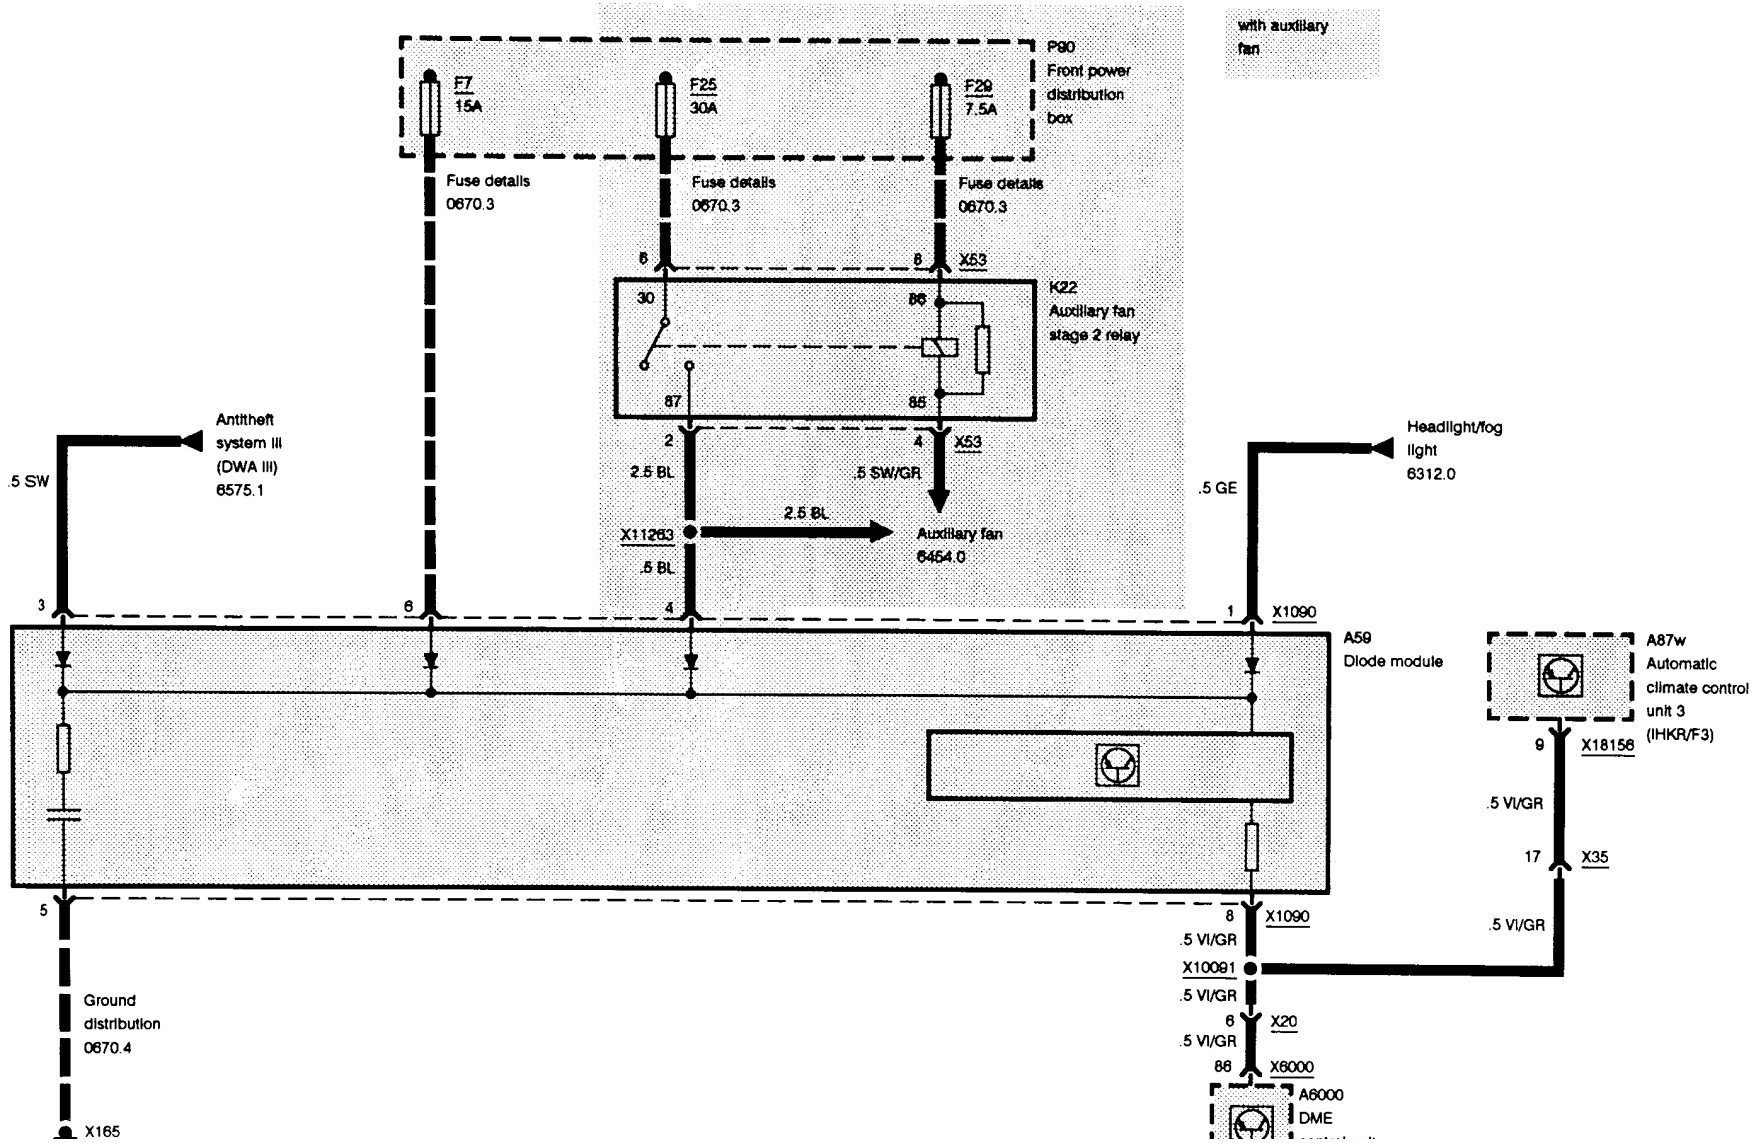

— — —

control unit





**BMWAG**


Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


Airbag (AB)

Scheme 3234.0

09/93 ————— 3234.0-00 ————— 1994

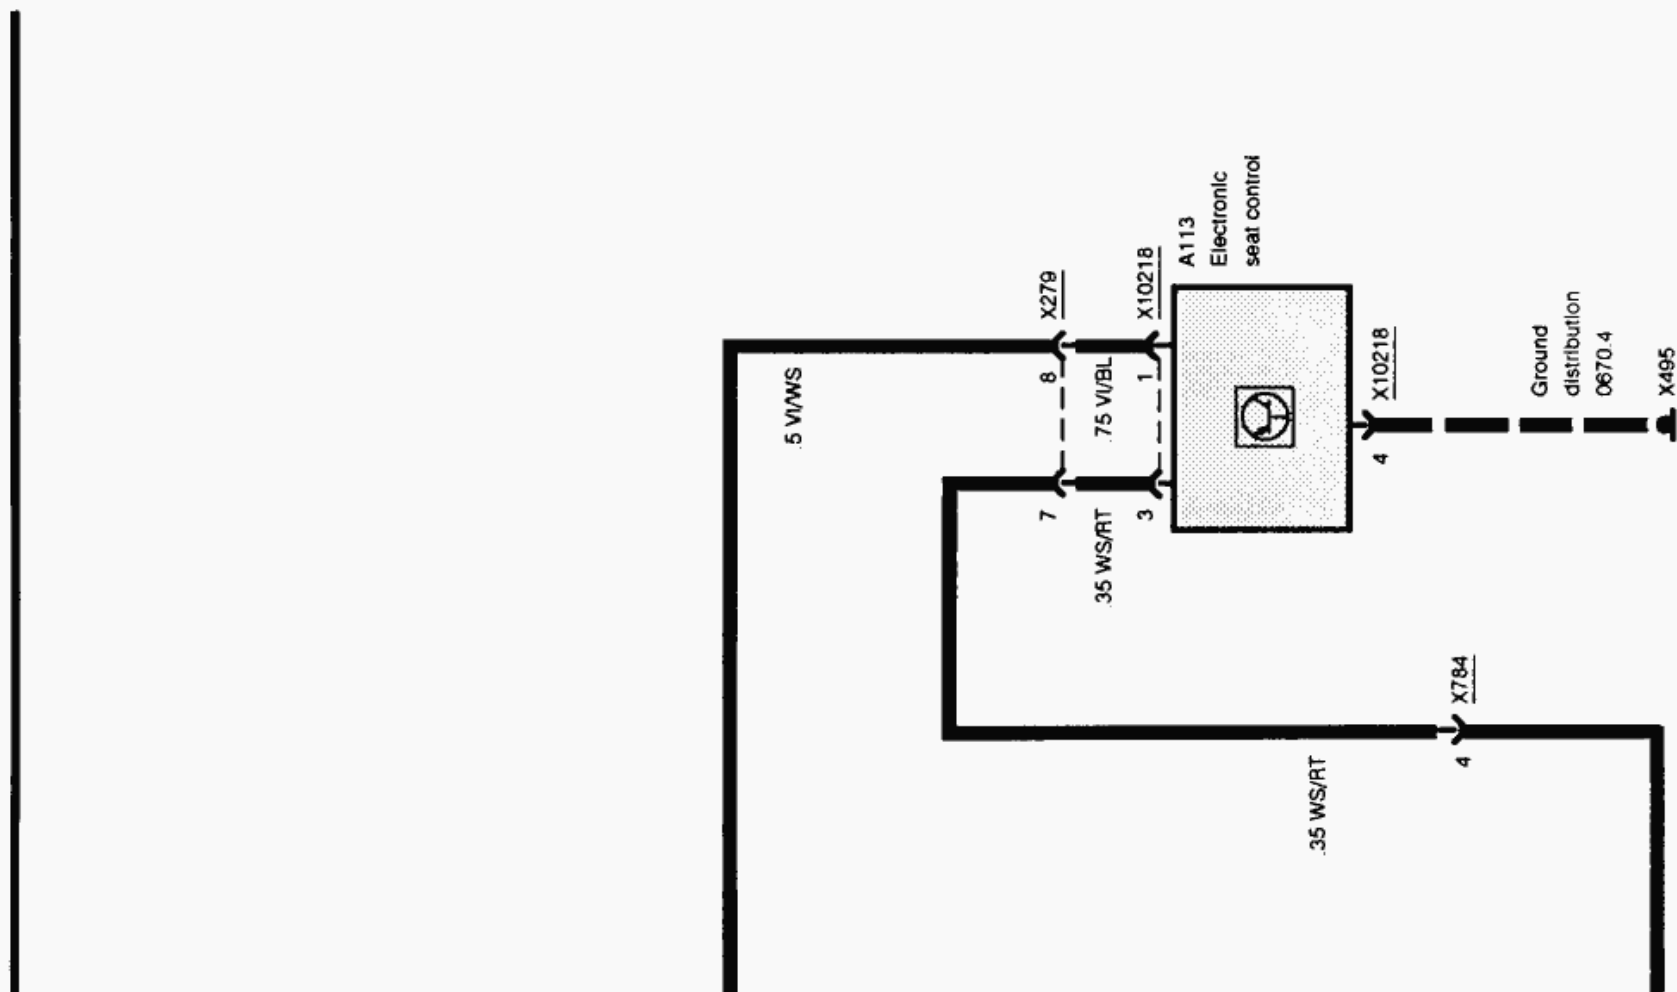

# Airbag (AB)

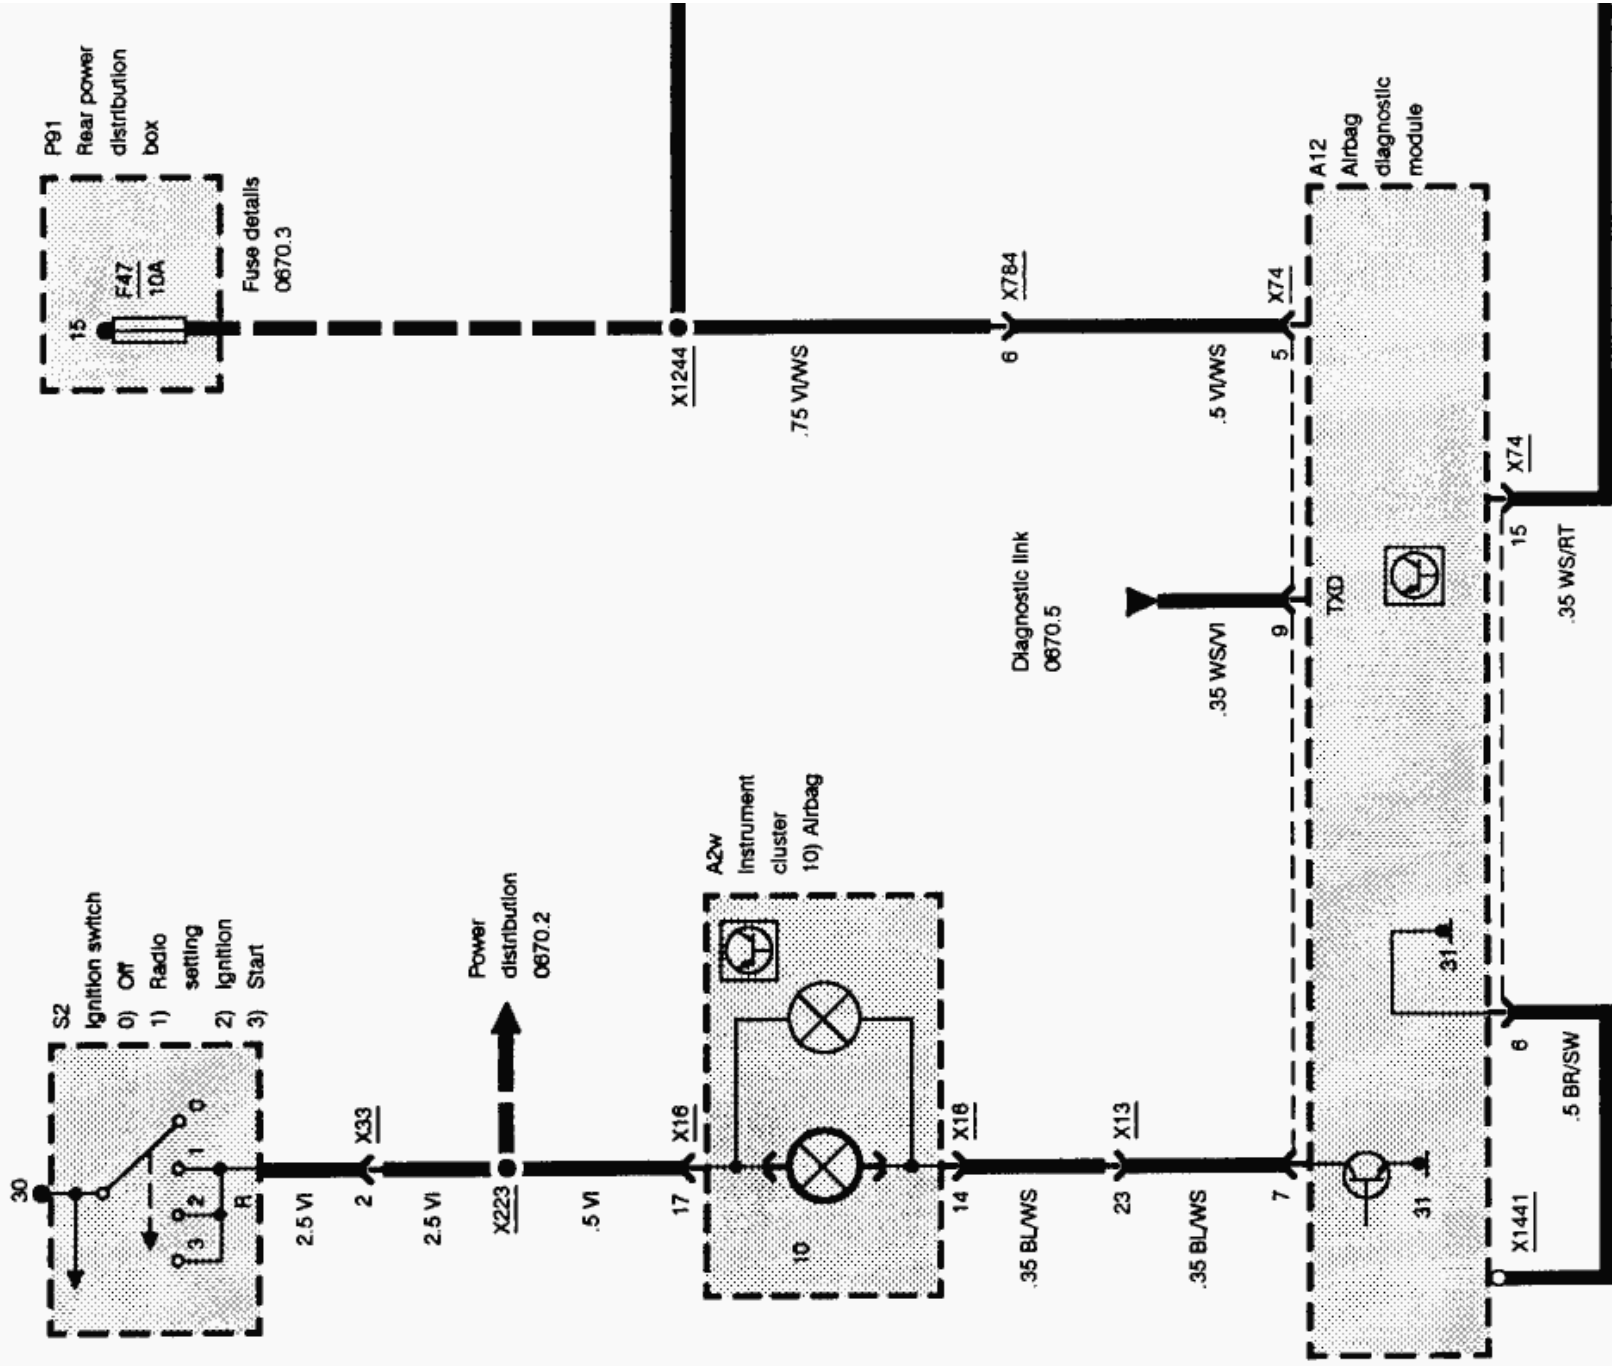





09/93

3234.0-01

1994

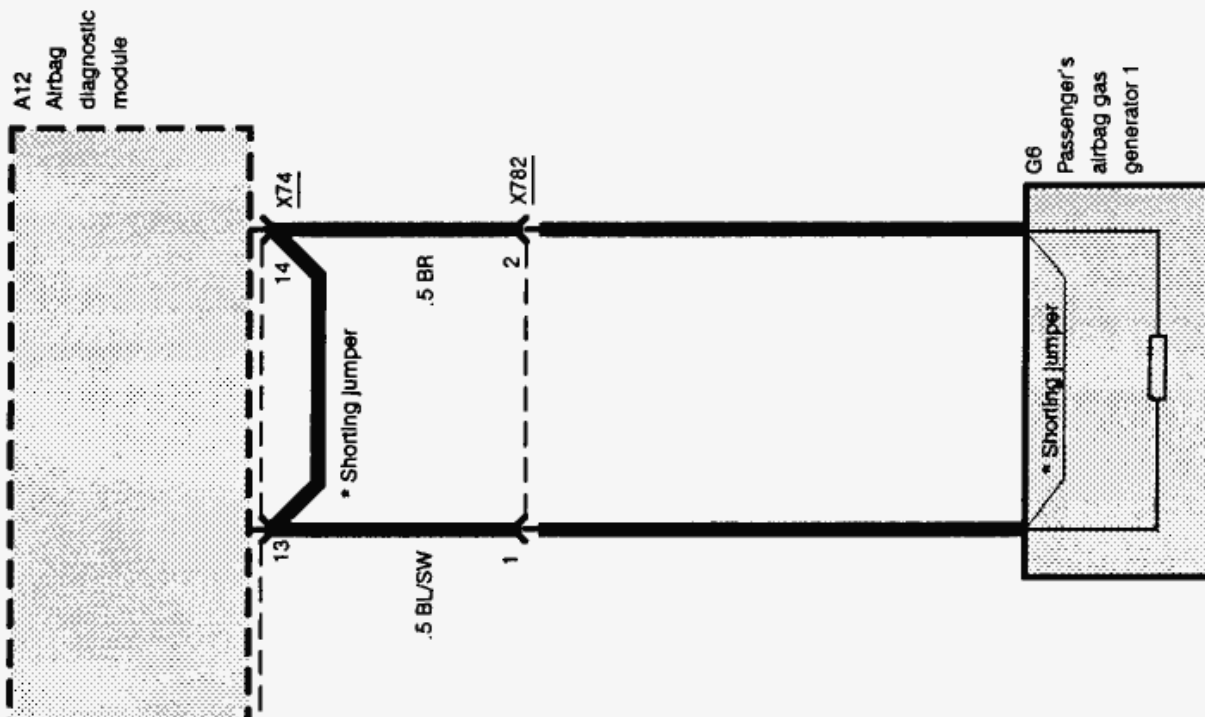

## Airbag (AB)

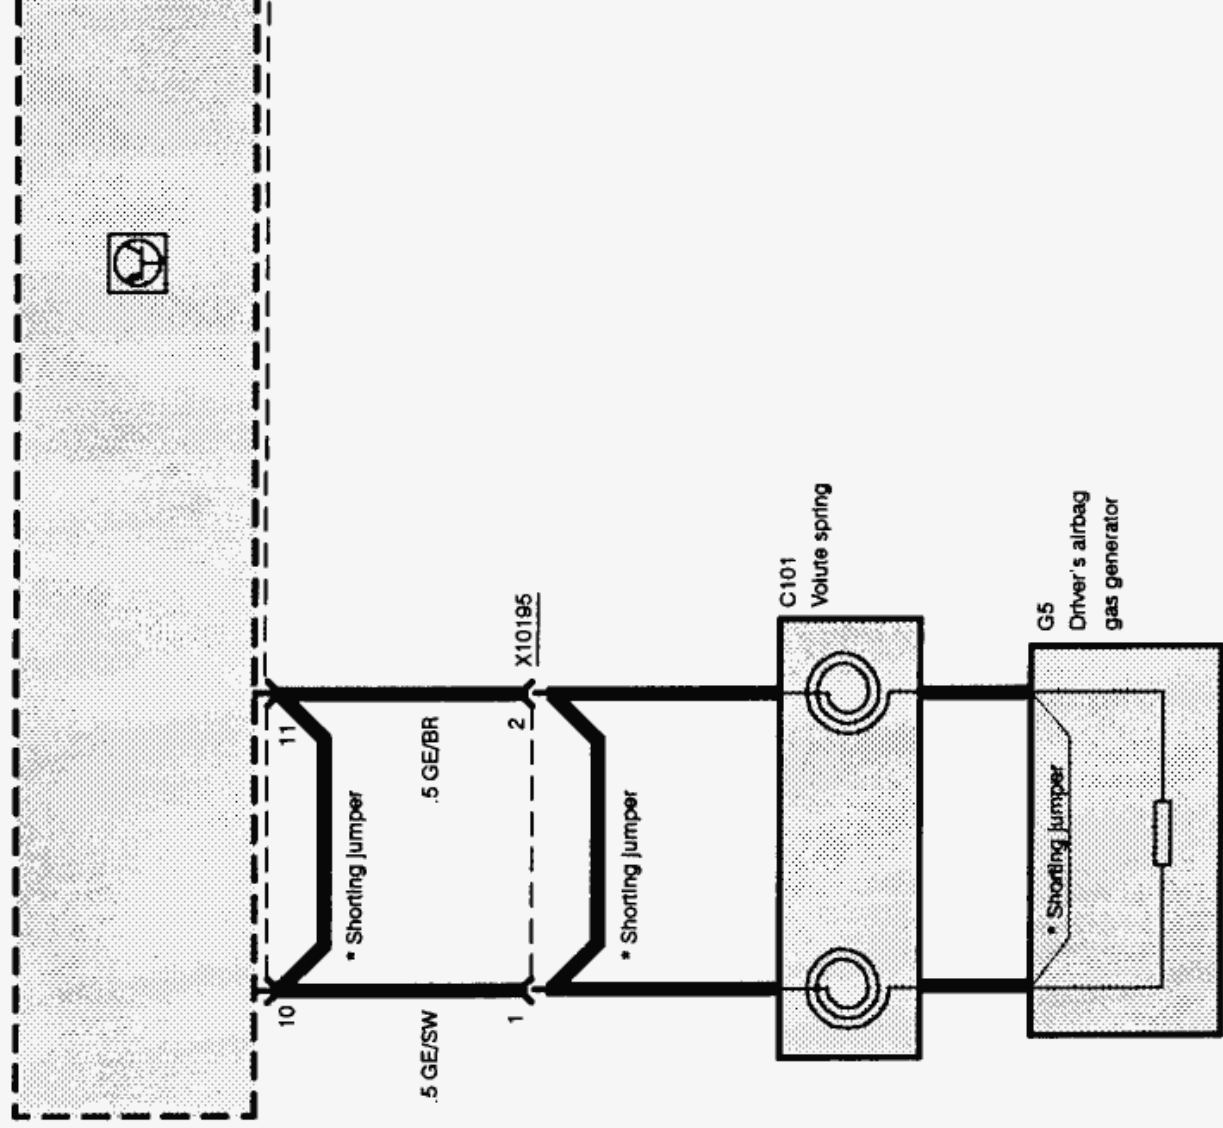

The gas generators on the driver's and passenger airbags are protected by shorting jumpers

The jumpers connect the gas generator and the trigger. They prevent unintentional triggering when working on the airbag system

In accordance with the Workshop Manual, only special tools 61 1260 and 62 1260 should be used to check the power circuit and the trigger resistance



**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


Alternator

Scheme 1230.0


09/93

1230.0-00

1994

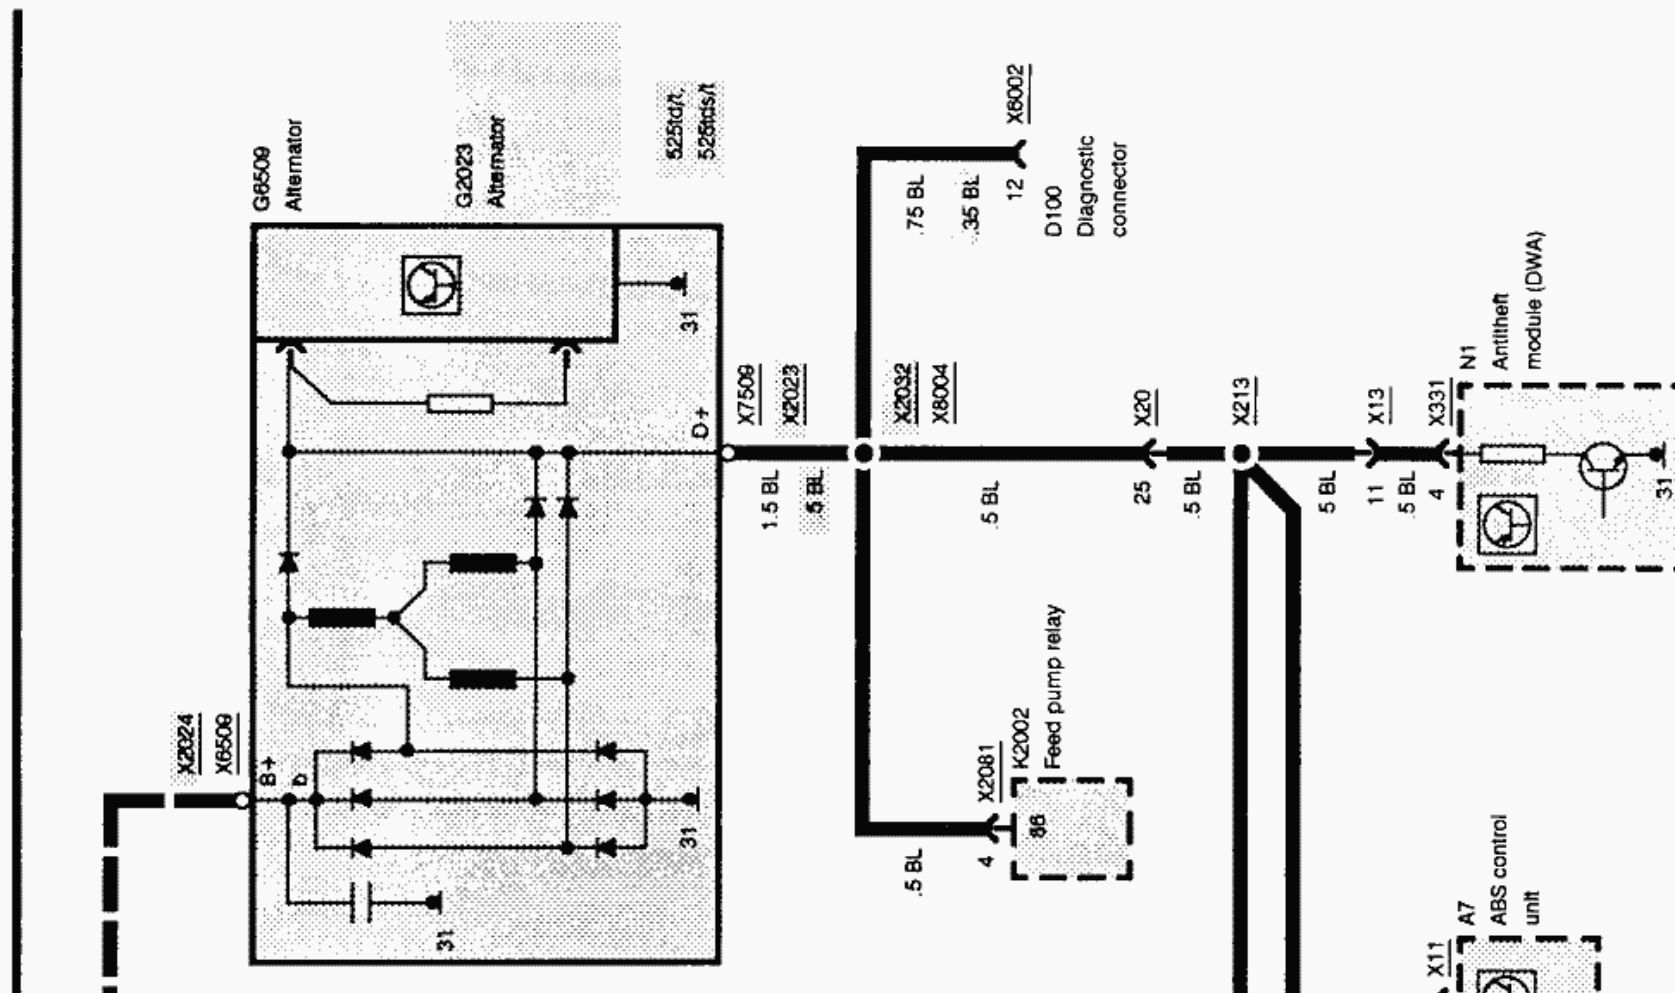

# Alternator

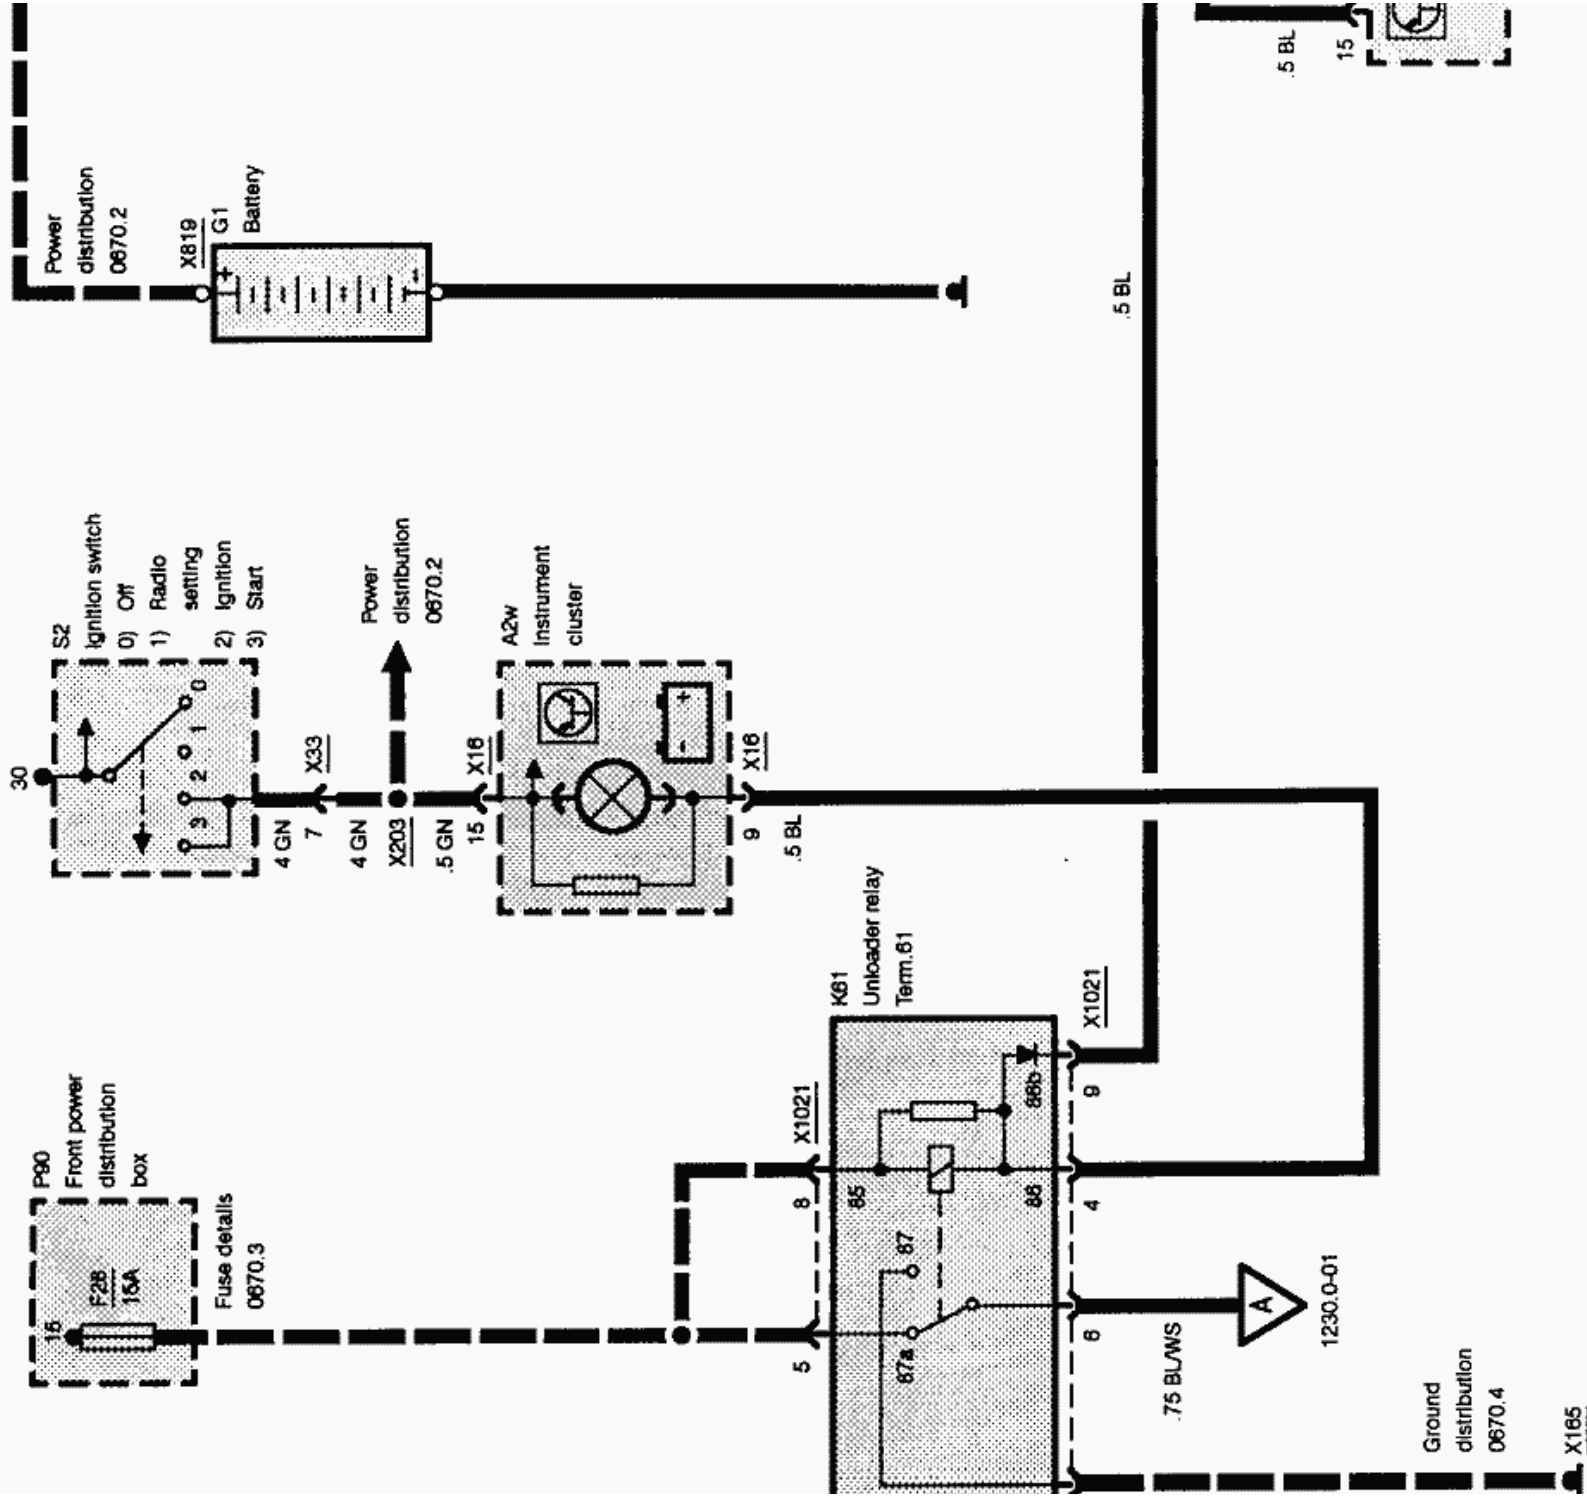




09/93


1230.0-01

1994

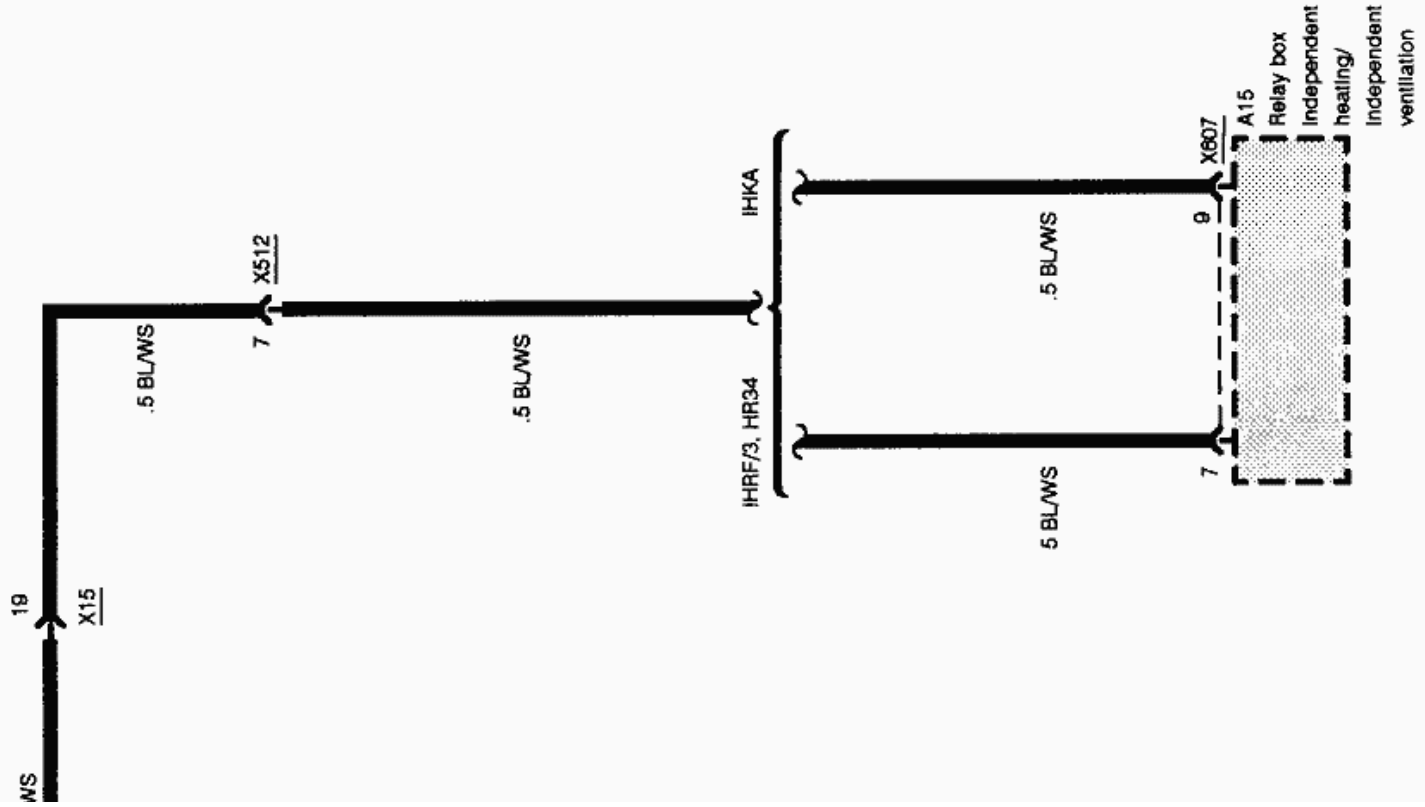



# Alternator

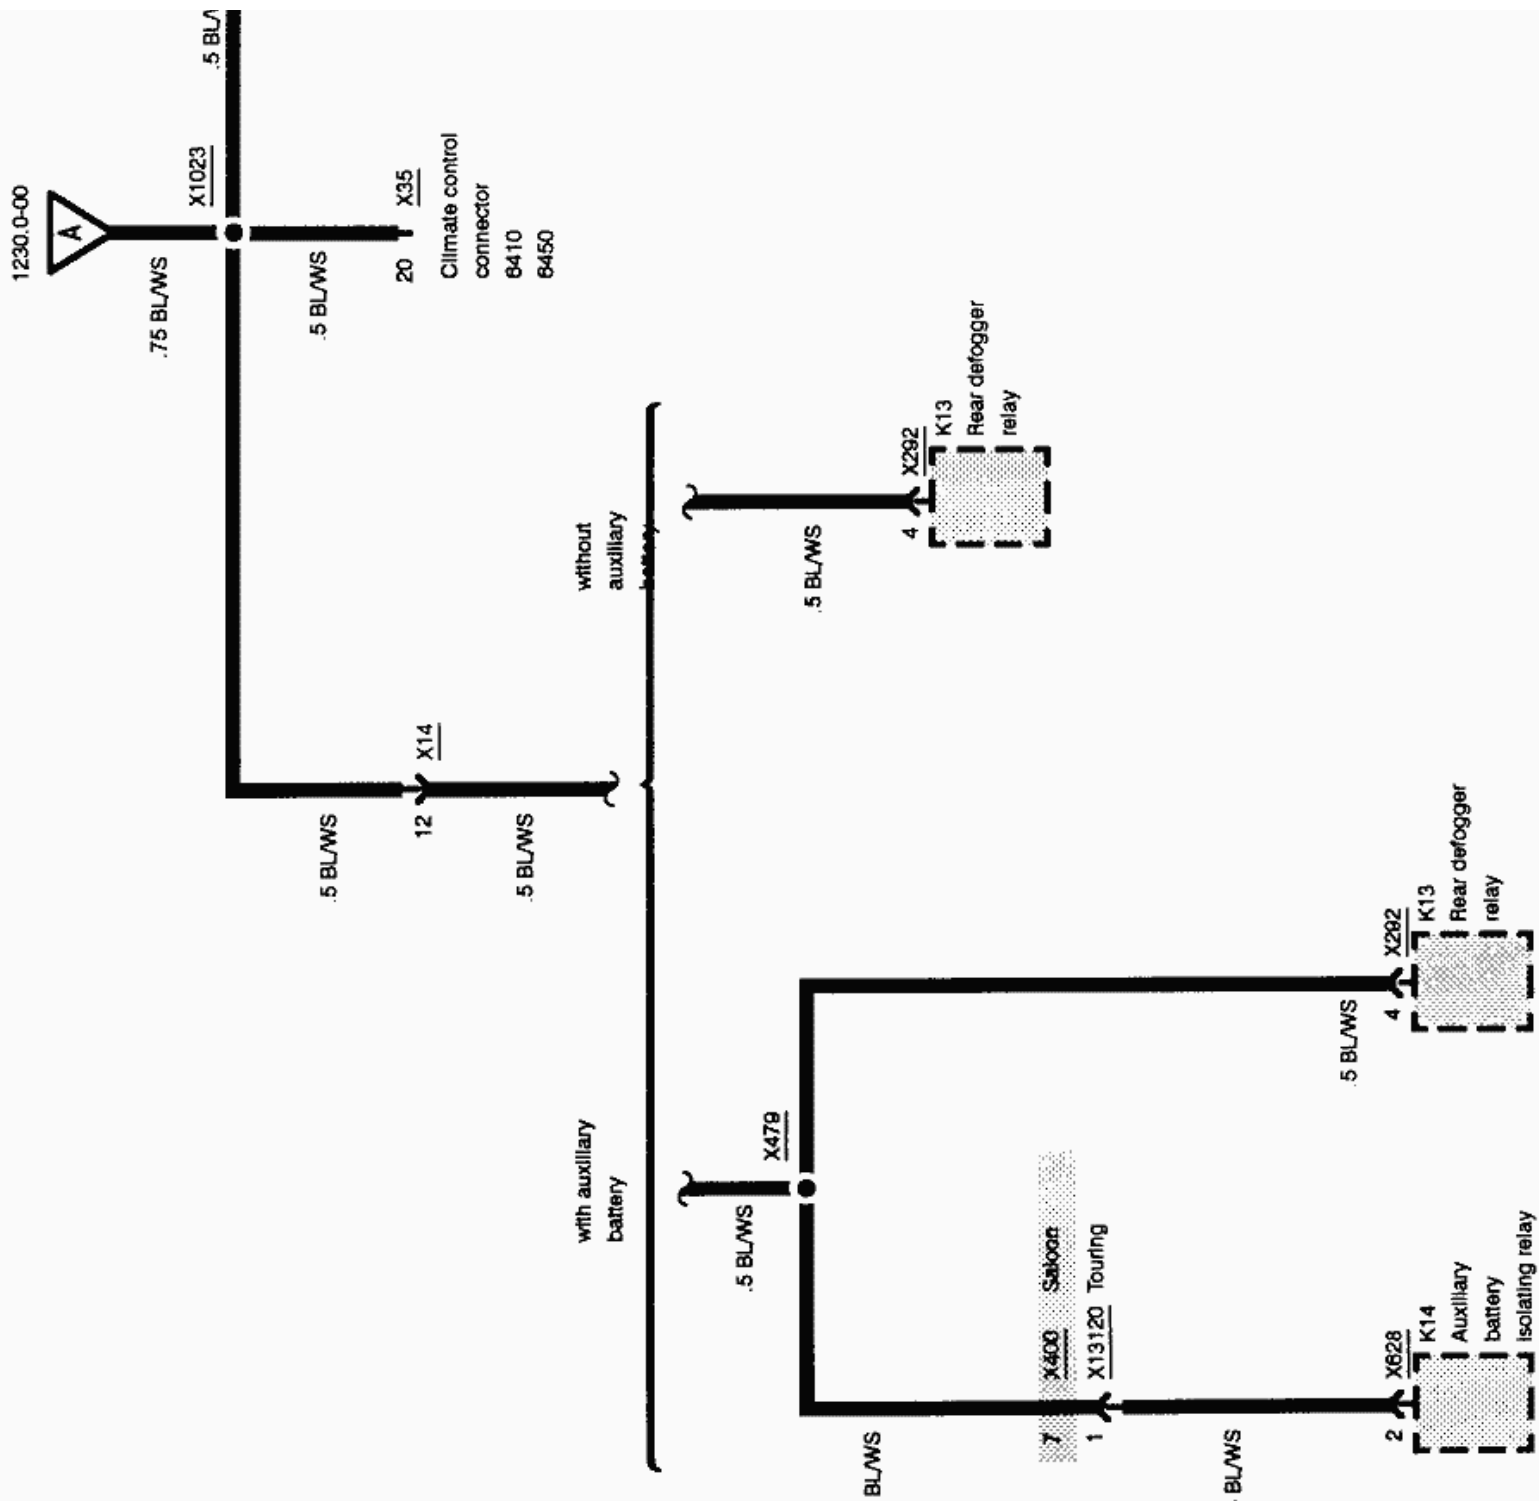



5

5

# BMWAG


## Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


### Rear window defogger/antenna

Scheme 6424.0

09/93 ————— 6424.0-00 ————— 1994

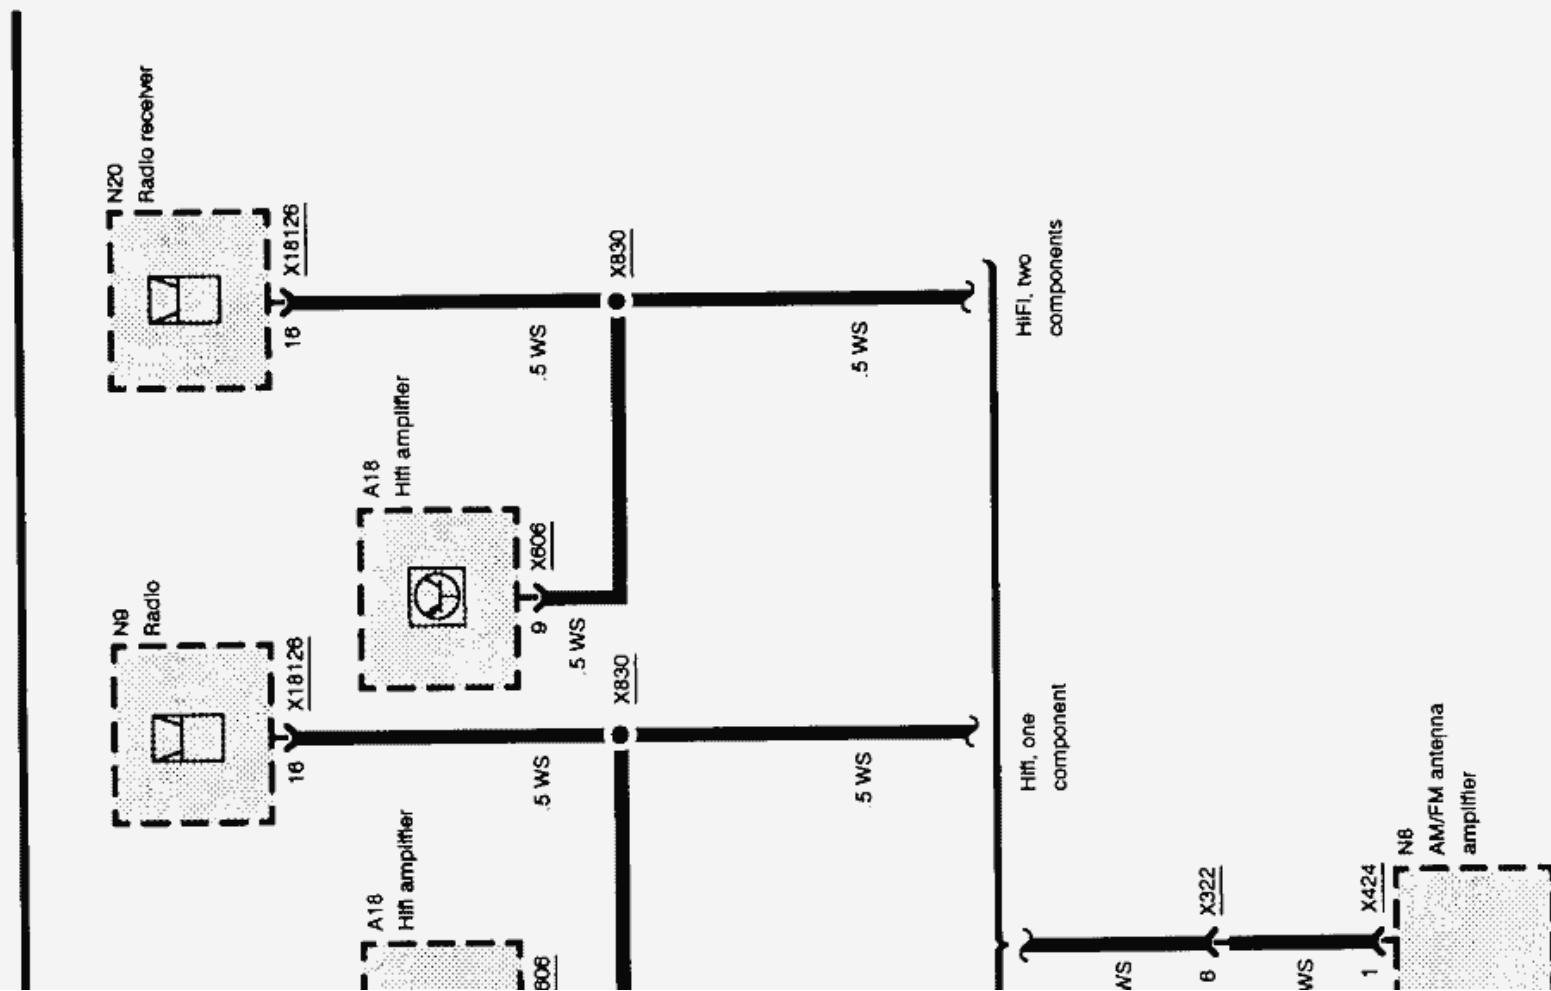

# Rear window defogger/ antenna

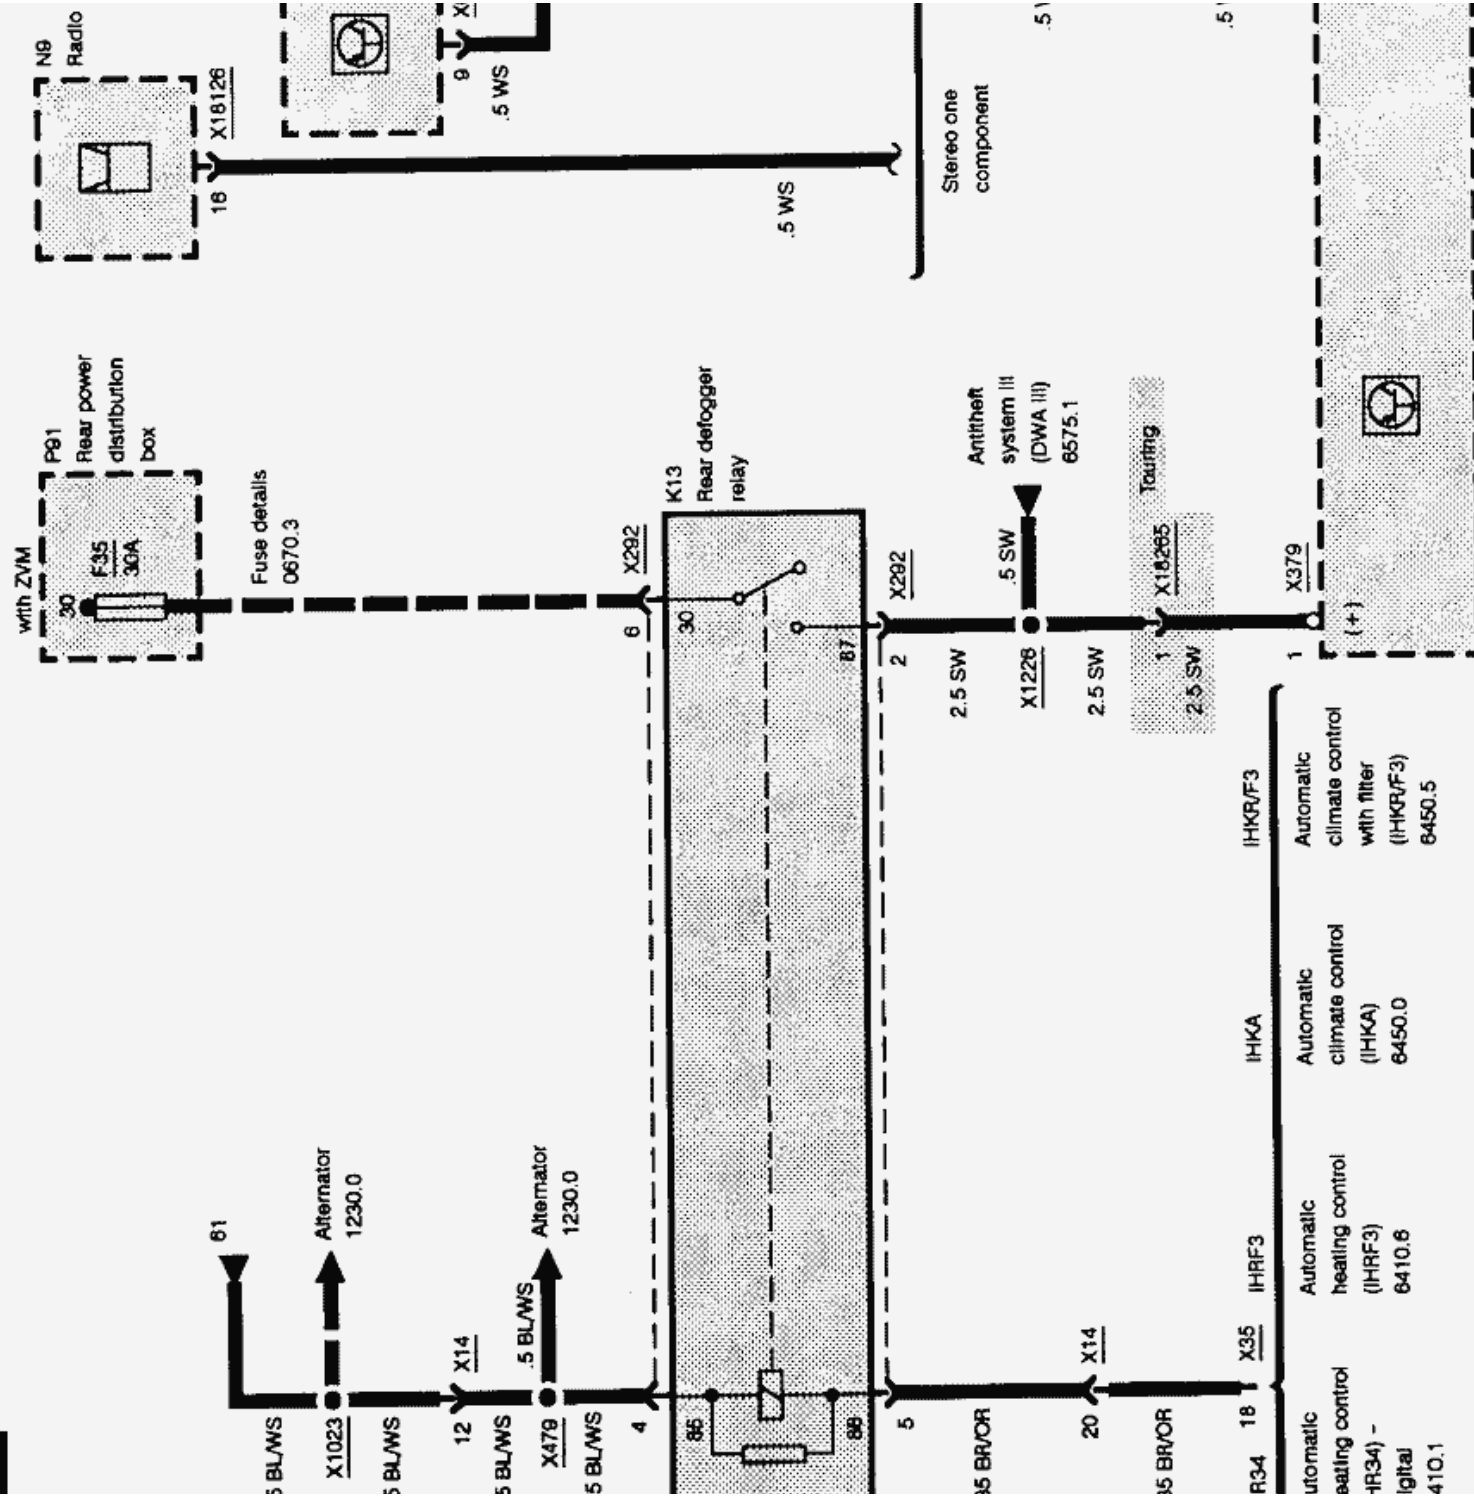




71

H A F I D B

09/93

6424.0-01


1994

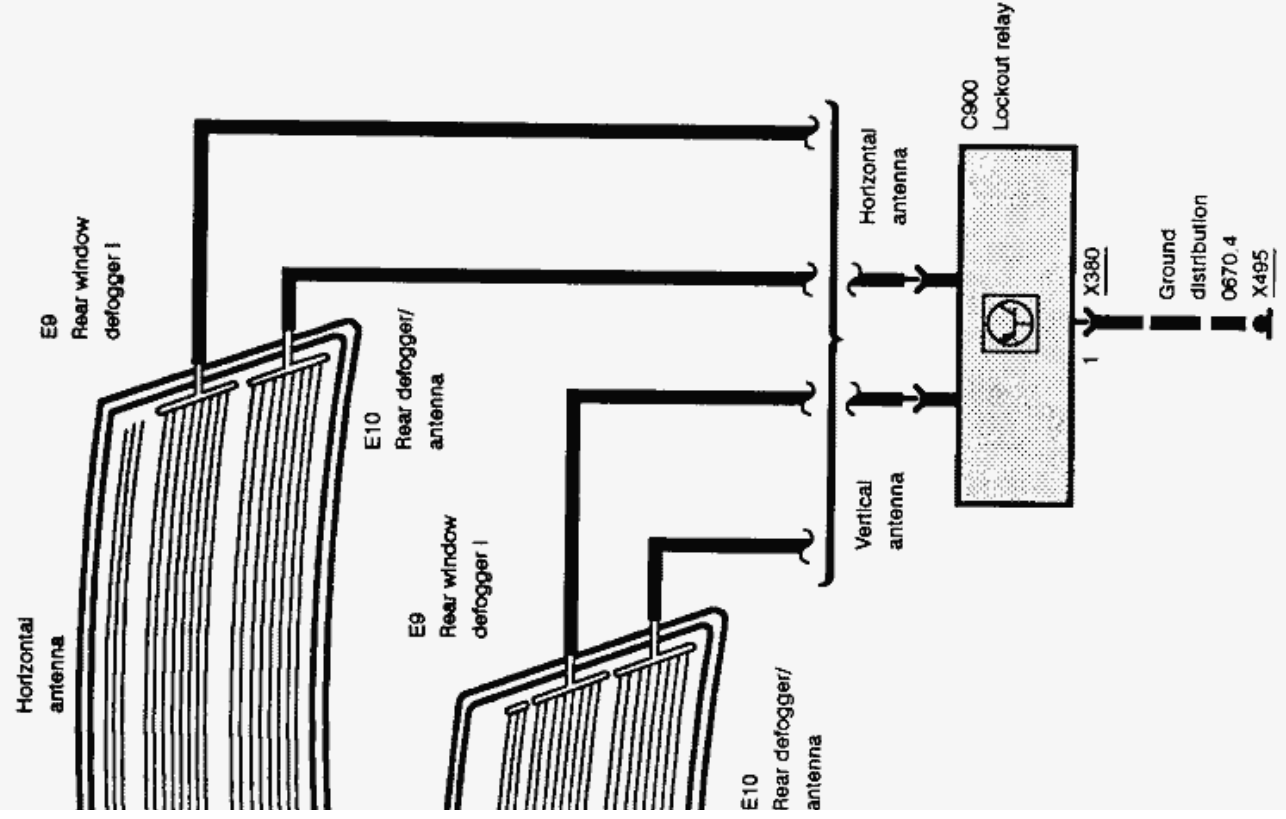

nna

# Rear window defogger/ antenna

## Rear window antenna

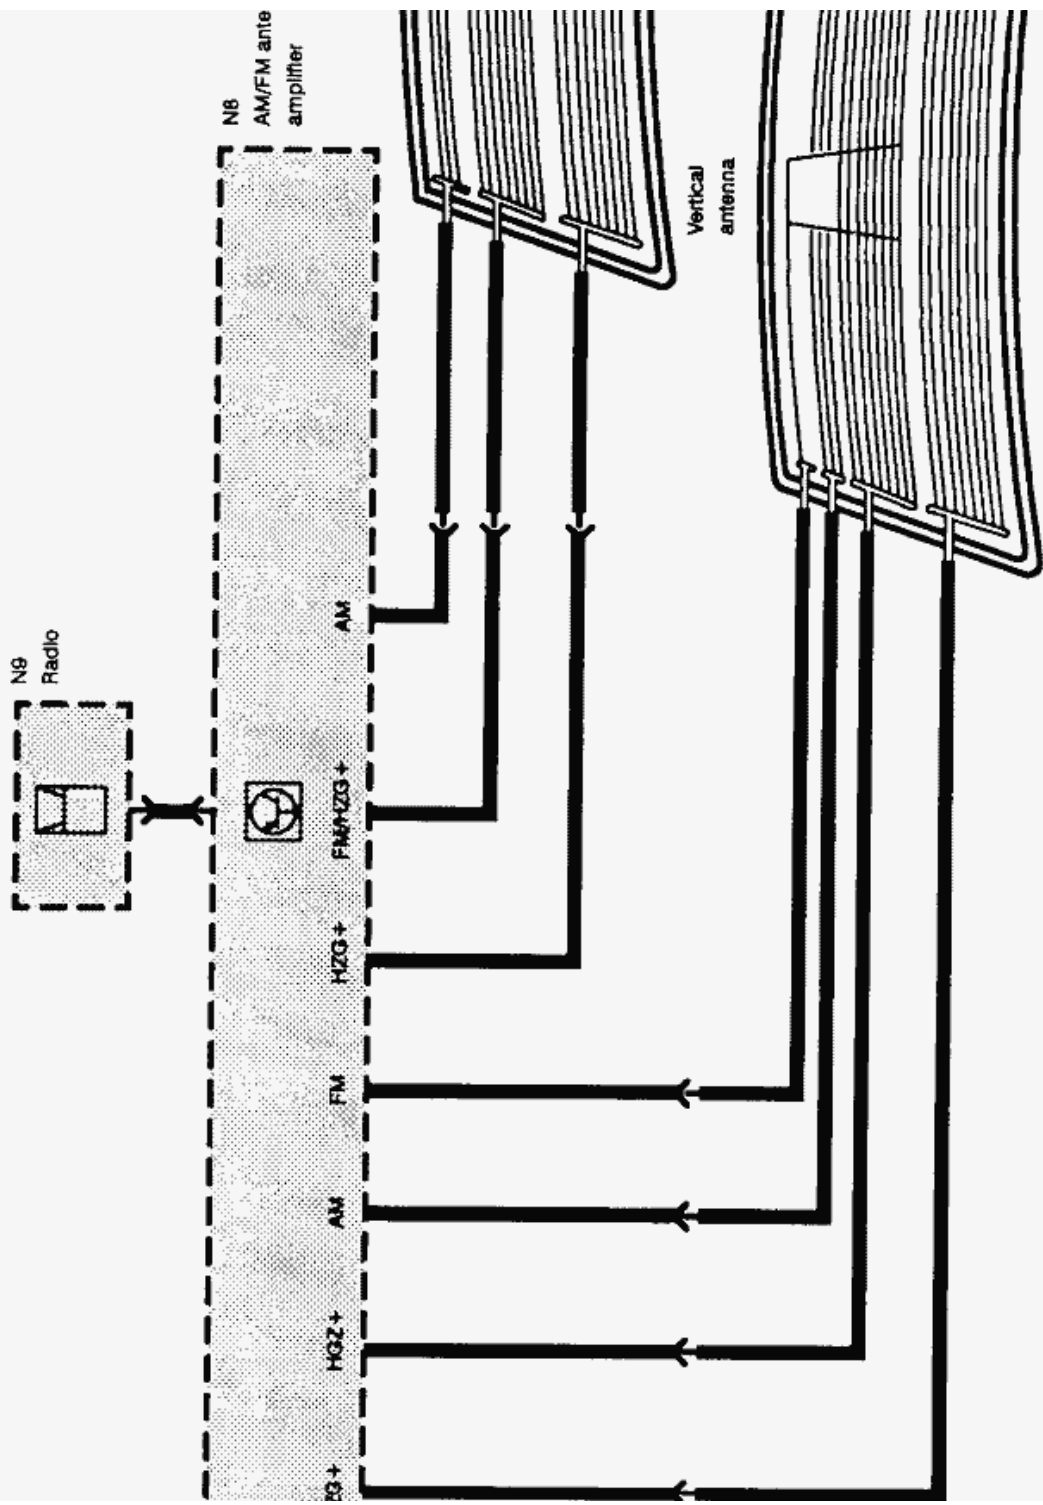




09/93


6424.0-02

1994

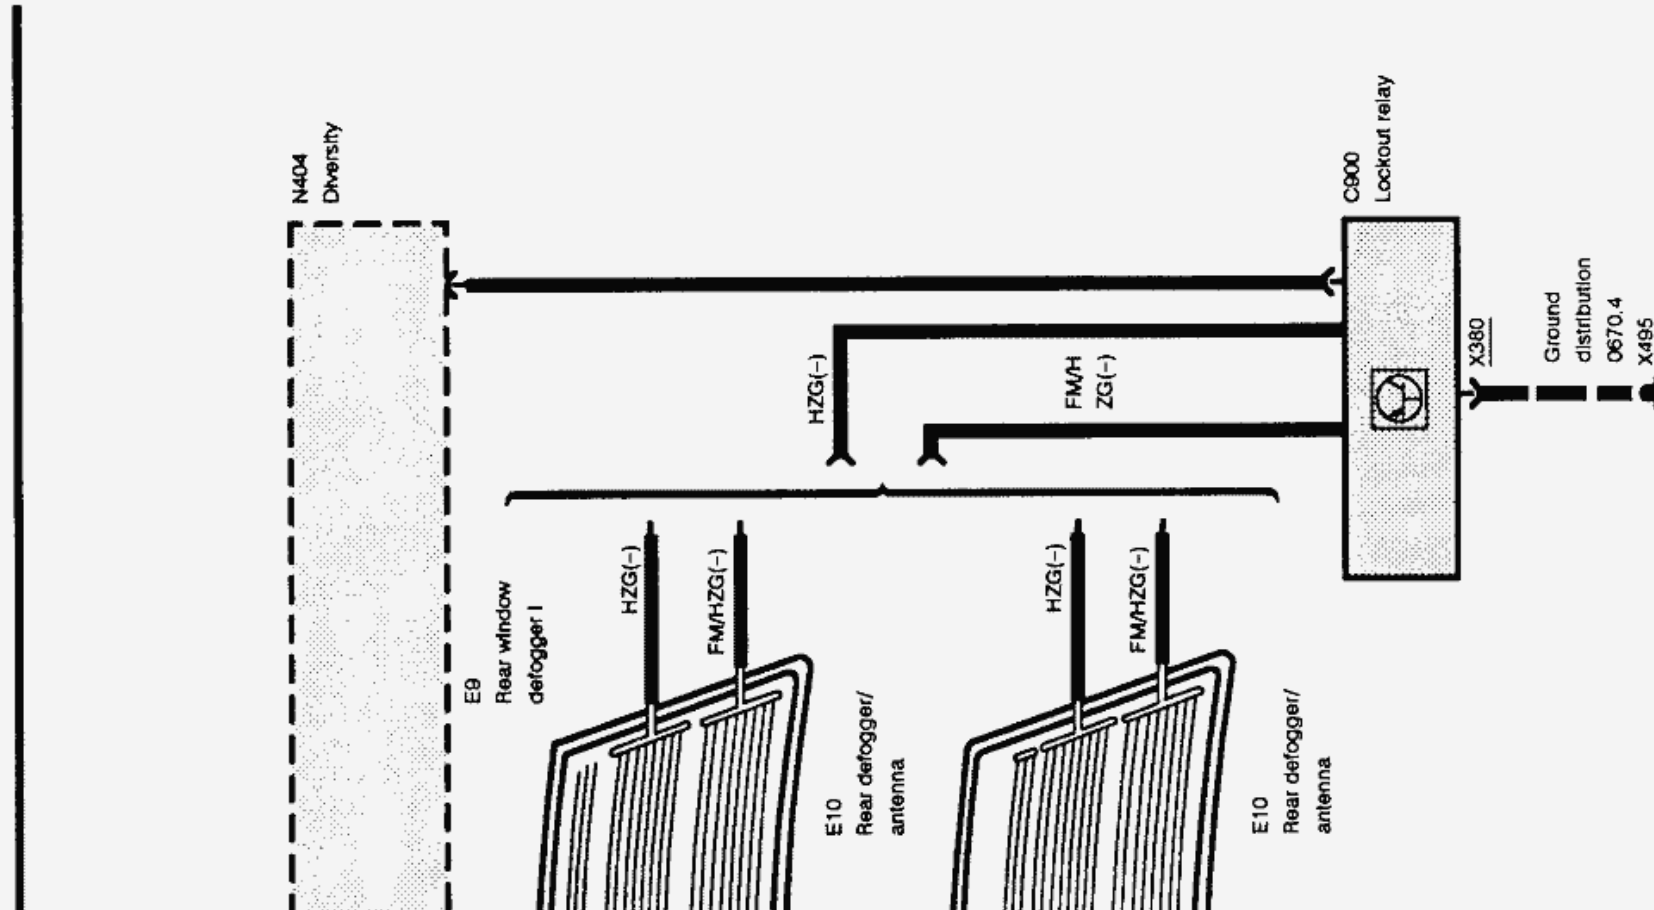

# Rear window defogger/ antenna

## 3-Antenna diversity

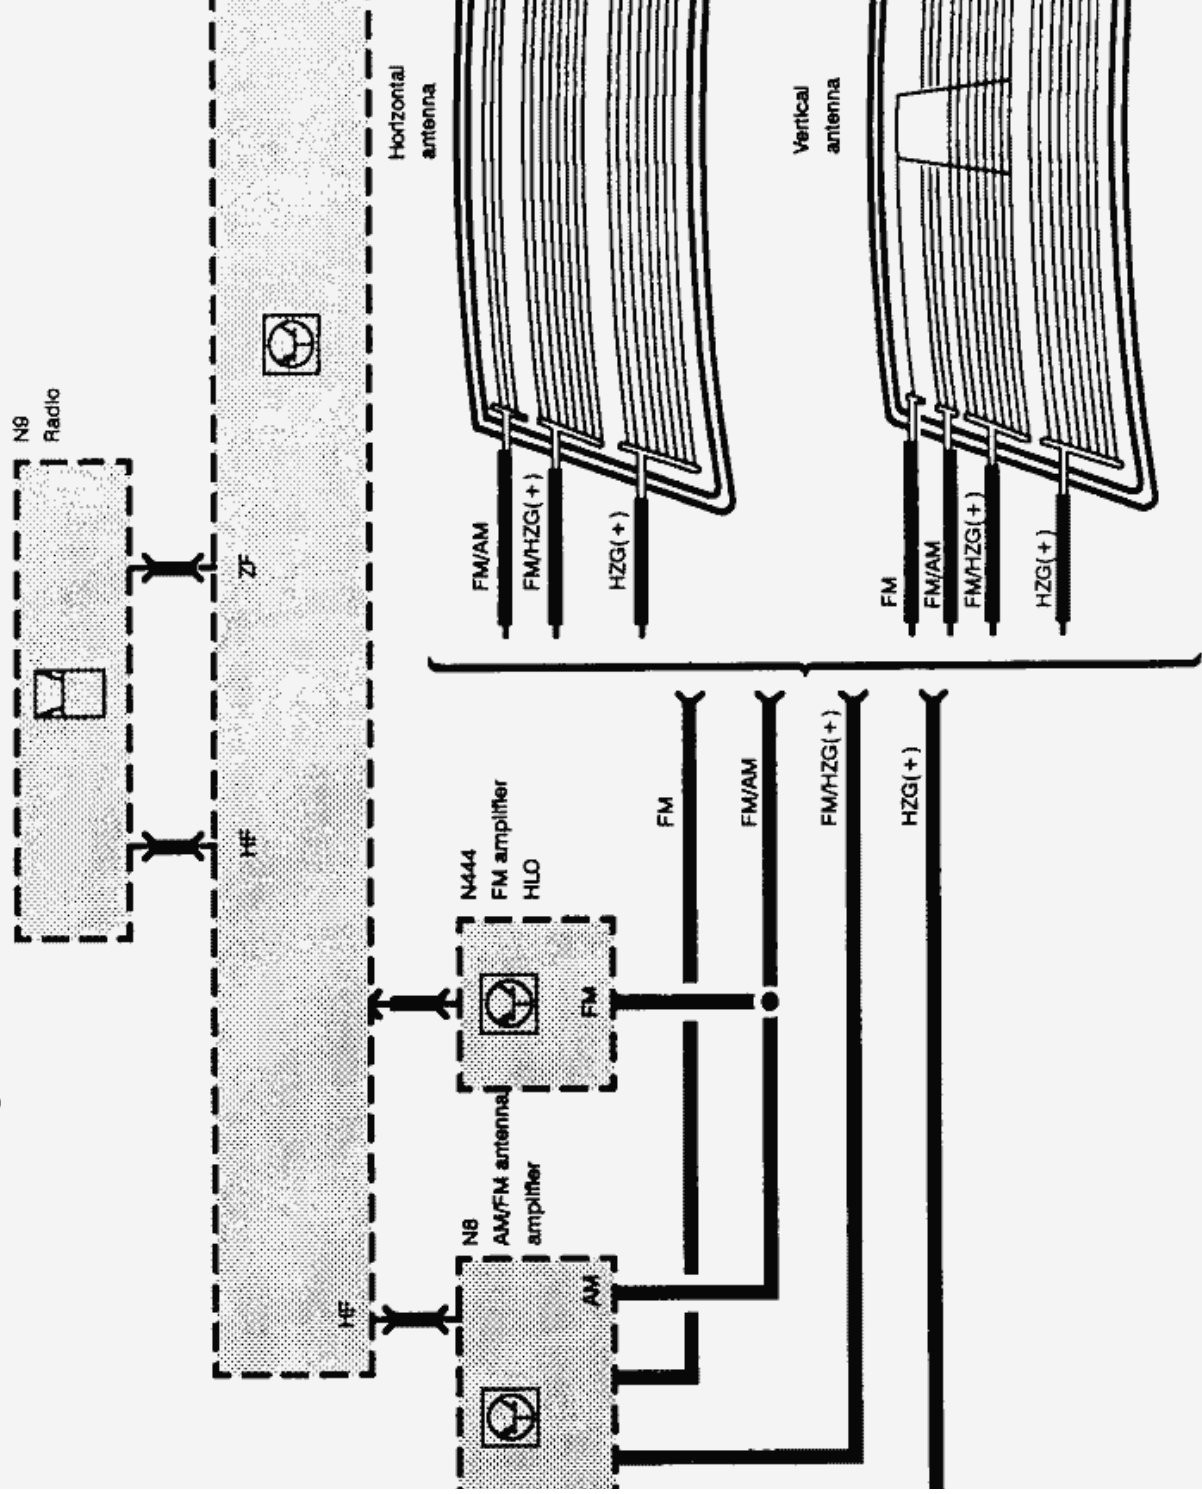





**BMWAG****Electrical troubleshooting manual**

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

**Antitheft system III (DWA III)****Scheme 6575.1****Pin Assignment**

A=X252	26-pin, black
B=X331	10-pin, black
C=X335	4-pin, black
D=X1221	26-pin, white

**Pin Assignment X252**

Pin	Type	Description/Function	Connection
1	A	RxD diagnosis line	Diagnostic connector
2	E/A	TxD diagnosis line	Diagnostic connector
3	E	Rear seat/battery monitoring	Rear seat/battery microswitch
4	E	Touring: Rear lid lock	Rear lid lock switch
5	E	Rear lid	Rear lid light switch
6	A	"Visual alarm"	Crash alarm generator
7	E	QZV	General module
8	A	Status LED	LED
9	E	ZV drive, rear lid	ZV motor drive switch
10	E	ZV drive, driver's door	ZV motor drive switch
11		not used	
12	E	ZV drive, passenger's door	ZV motor drive switch
13	E	Lock signal, IRS	IR control unit
14	E	Touring, rear lid lock	Rear lid lock switch
15	E	ZV drive, rear lid	ZV motor drive switch
16	E	Front passenger's door	Passenger's door contact
17	E	Connection terminal R	Wiper relay
18	E	Central double-locking	Door lock switch
19	E	Position pulse	Instrument cluster
20	E	Front lid/radio	Front lid/radio contact
21	E	Driver's door	Driver's door contact
22	E	Glove box	Glove box contact
23	E	Touring: DWA conductor loop	Rear right side window
24	E	Door contacts, rear	Door contacts
25		not used	
26	E	Touring, rear lid	Rear lid contact

**E = Input, A = Output, M = Ground****Pin Assignment X331**

Pin	Type	Description/Function	Connection
1	A	Immobilizing device	DME control unit/DDE control unit
2	M	Ground	Ground connection
3	E	Signal, ignition ON	Terminal 15
4	E	Terminal 61	Charge indicator
5		not used	
6		not used	
7	E	Touring DWA conductor loop	Rear right side window
8	E	Windows, rear right	Rear right window contact
9	E	Front passenger's door window	Passenger's window contact
10	E	Rear window	Aerial amplifier

**E = Input, A = Output, M = Ground****Pin Assignment X335**

Pin	Type	Description/Function	Connection
1	A	Alarm (horn) connection	Antitheft horn
2	A	Terminal 30S	On-board computer, inclination monitor
3	E	On-board computer alarm	On-board computer
4	E	Terminal SOU	Battery


**E = Input, A = Output, M = Ground****Pin Assignment X1221**

Pin	Type	Description/Function	Connection
1		not used	
2		not used	
3		not used	
4		not used	
5		not used	

6		not used	
7		not used	
8	E	Inclination sensor	Inclination sensor
9	A	Control line inclination sensor	Inclination sensor
10		not used	
11	E	Windows, rear left	Rear left window contact
12	E	Driver's door window	Driver's window contact
13	E	Touring, DWA conductor loop	Front left side window
14		not used	
15		not used	
16		not used	
17		not used	
18		not used	
19		not used	
20		not used	
21		not used	
22		not used	
23		not used	
24	E	Windows, rear right	Rear right window contact
25	E	Front passenger's door window	Passenger's window contact
26	E	Rear window	Rear window defogger


E = Input, A = Output, M = Ground

## BMW 5 Antitheft system III (DWA III) Current, motor operation signal

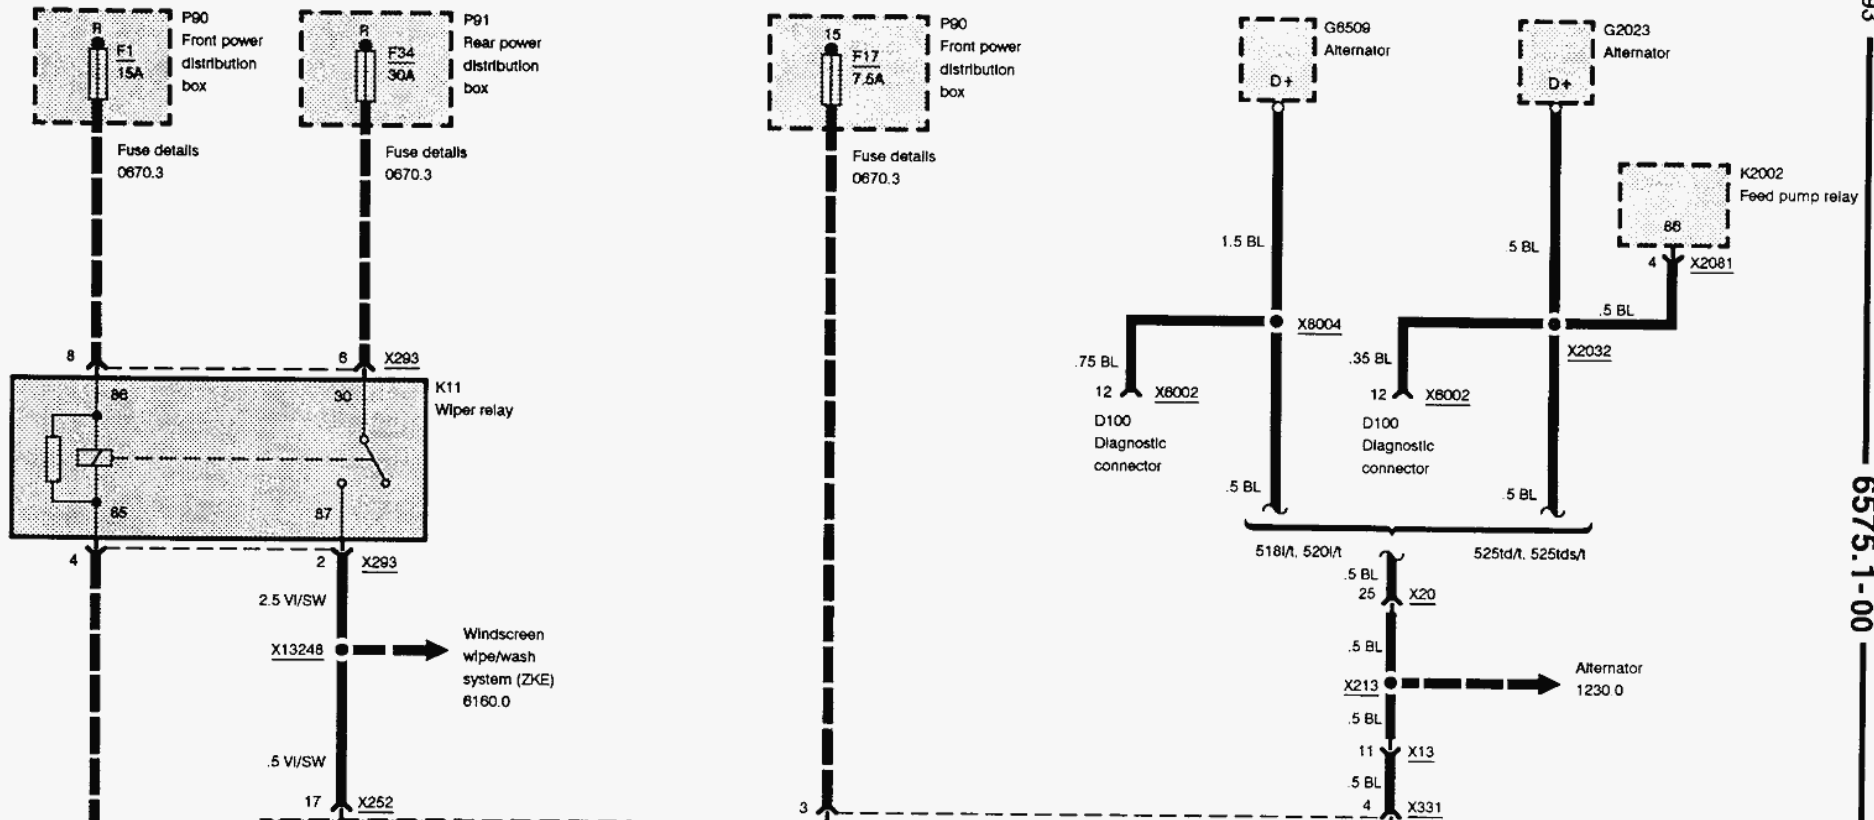


09/93

6575.1-00

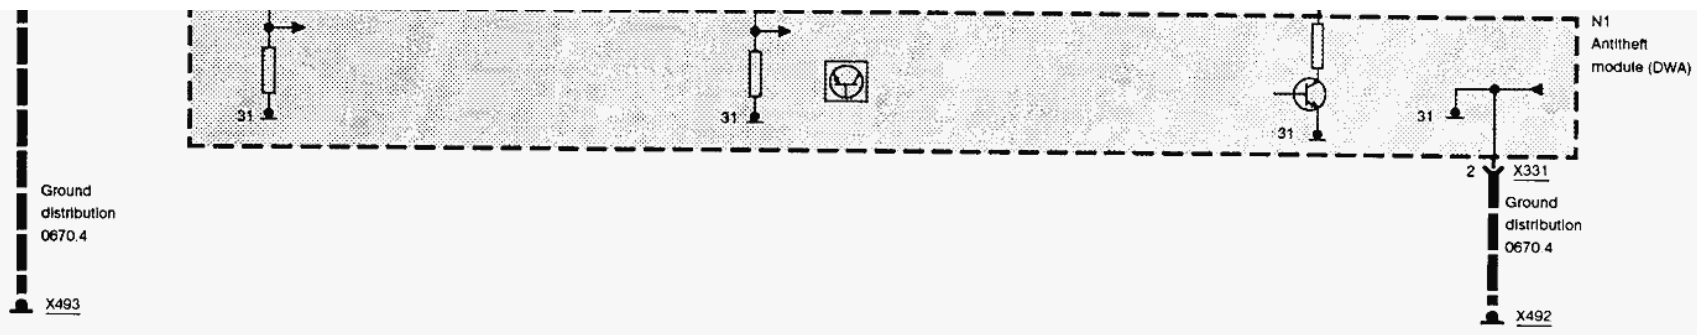


1994

**BMW 5** Antitheft system III (DWA III)  
Input signal driver's and passenger's door, rear lid and indicator lamp

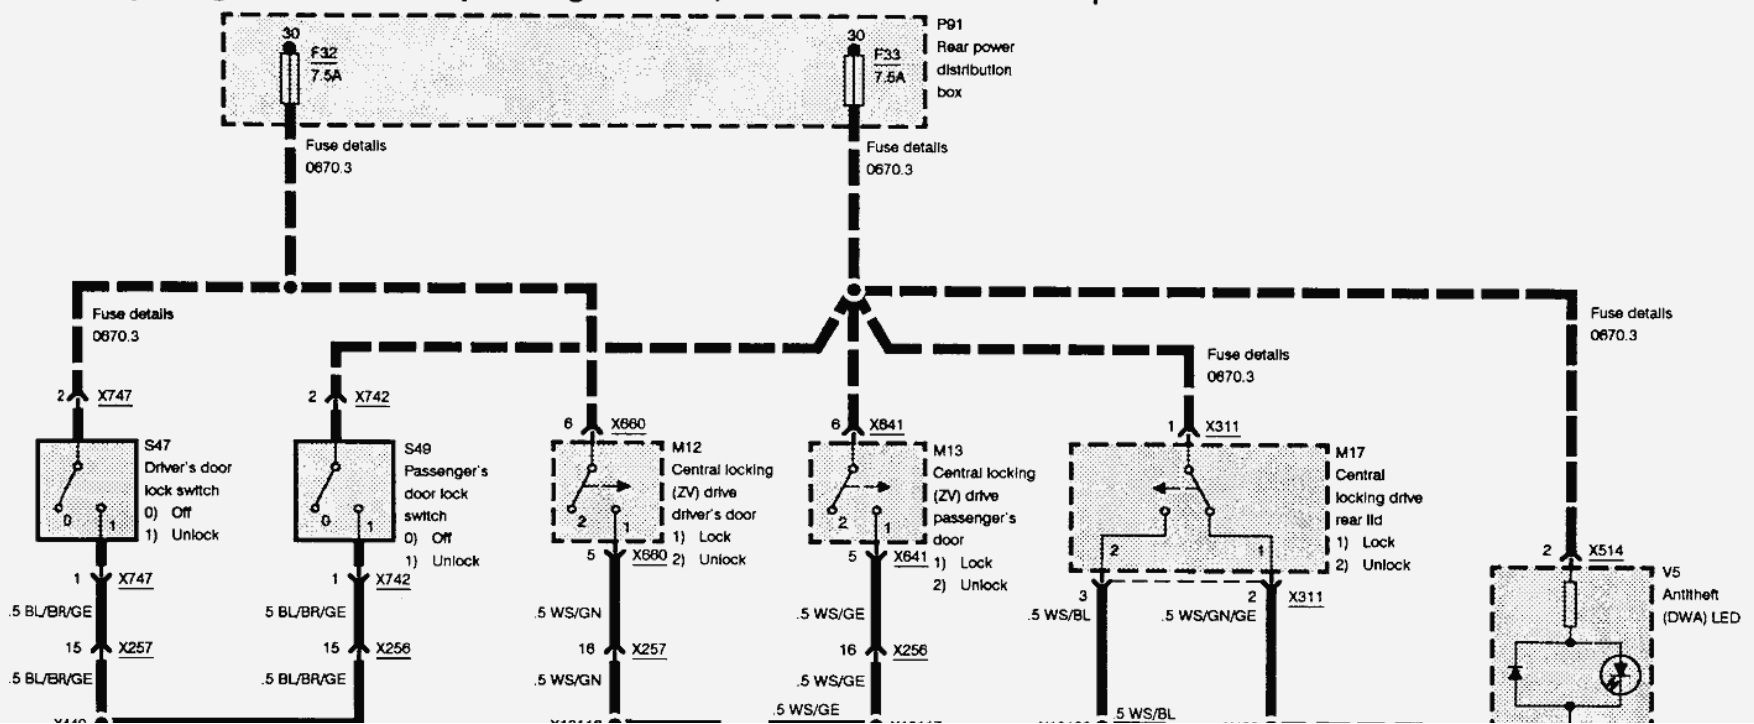

09/93

6575.1-01

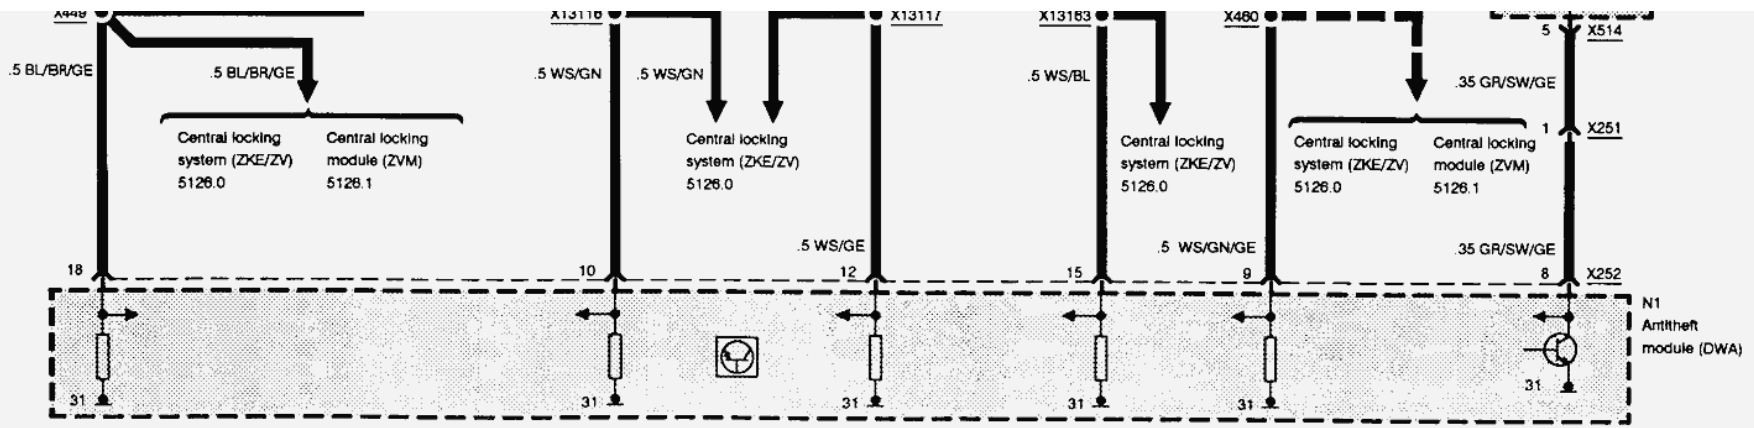


1994



## Antitheft system III (DWA III)


### Rear lid, rear side windows

### Touring

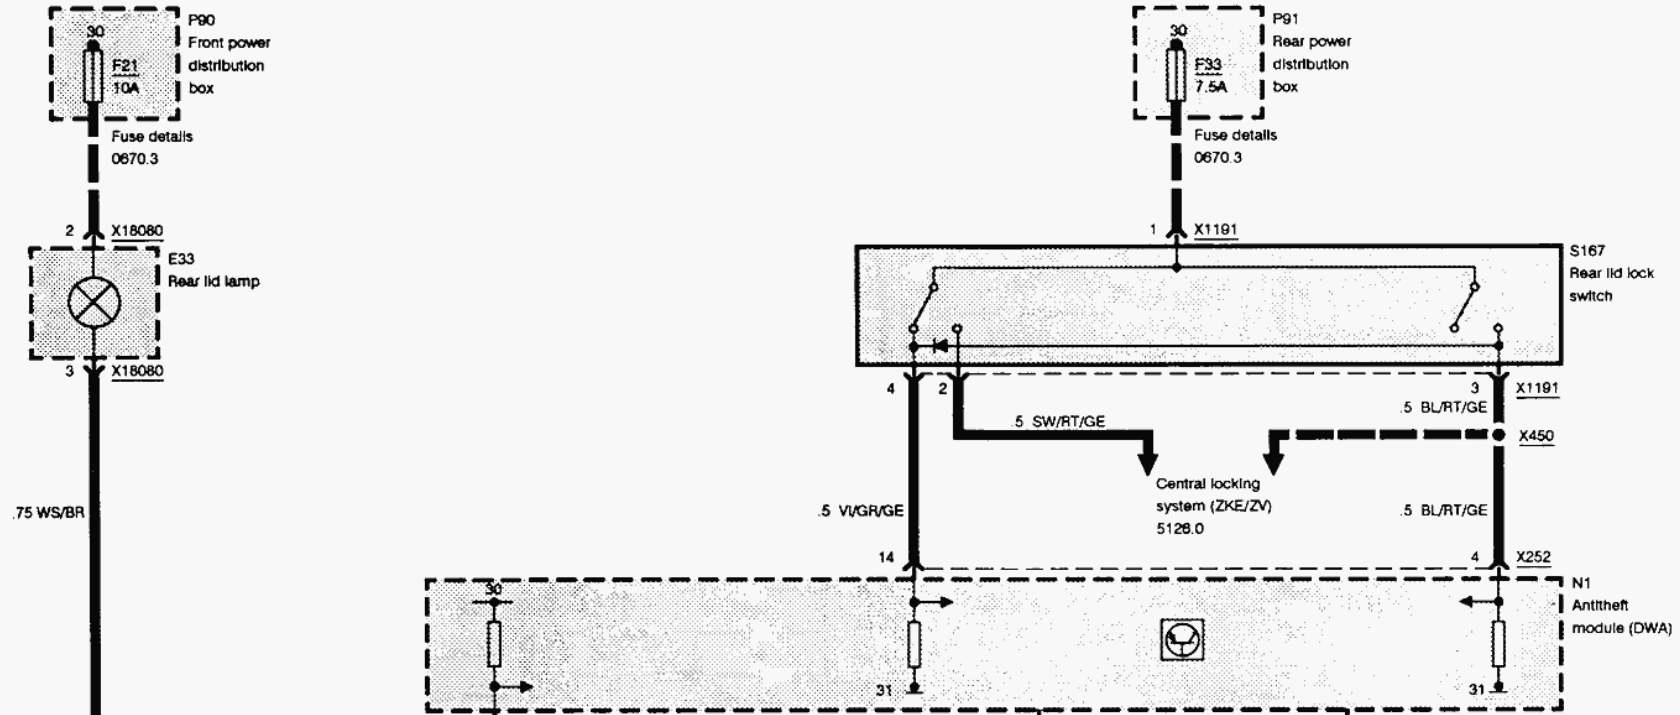

09/93

6575.1-02

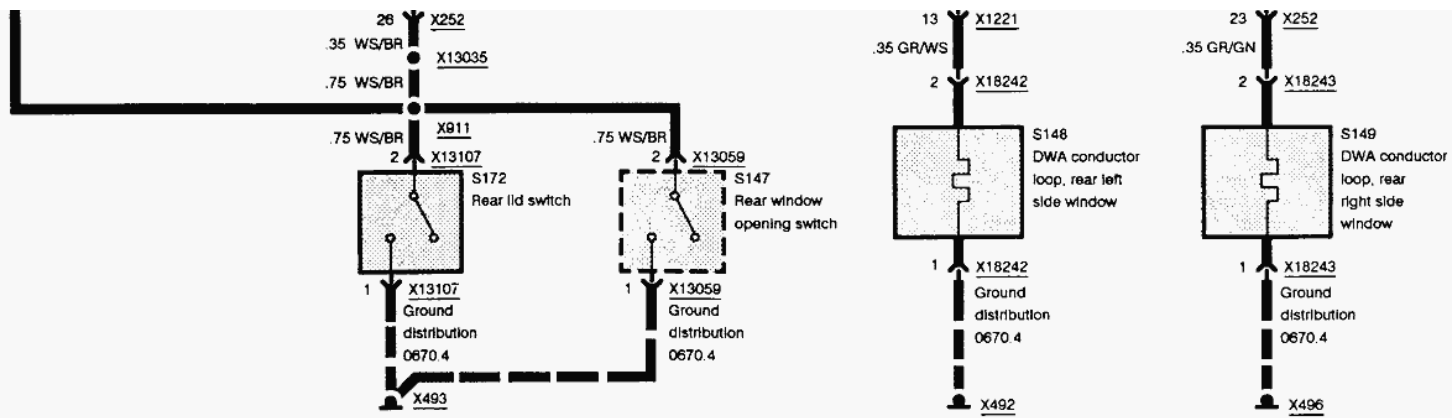


1994







### Antitheft system III (DWA III)

#### Front and rear door contacts, rear lid

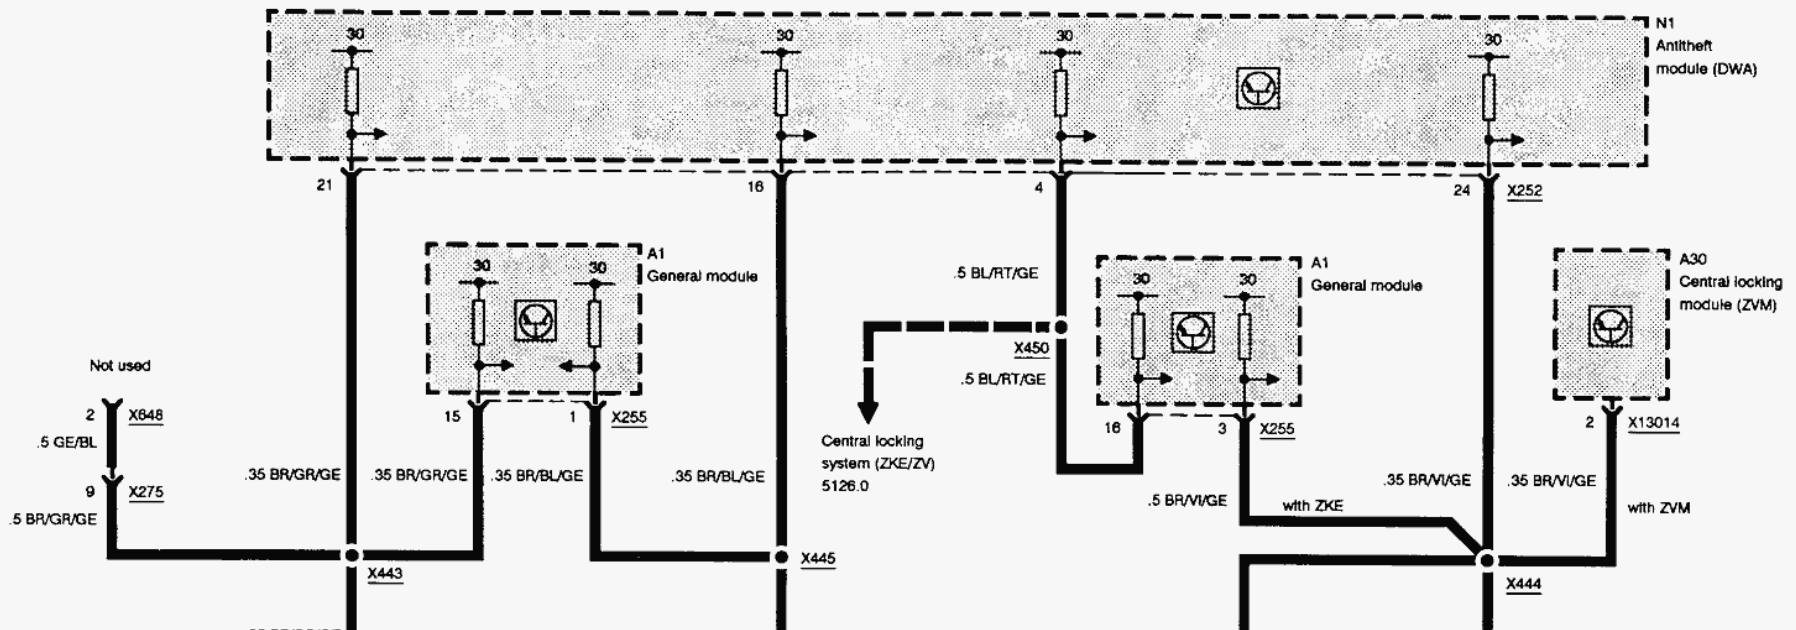

09/93

6575.1-03

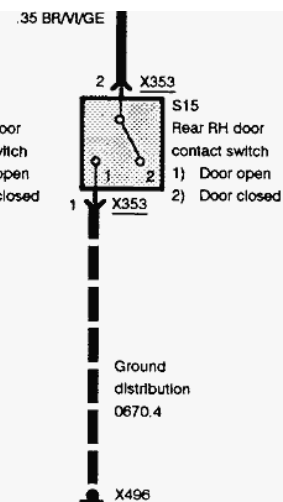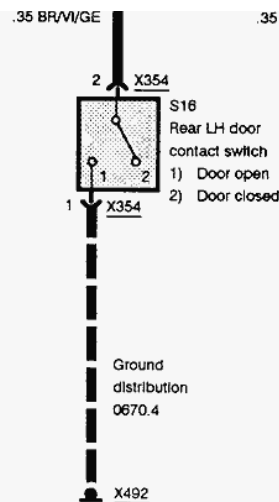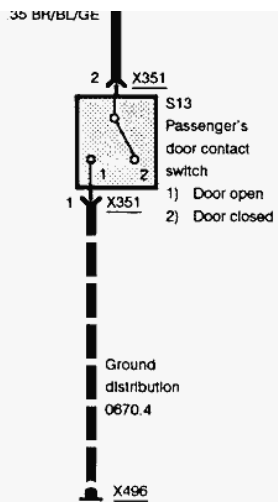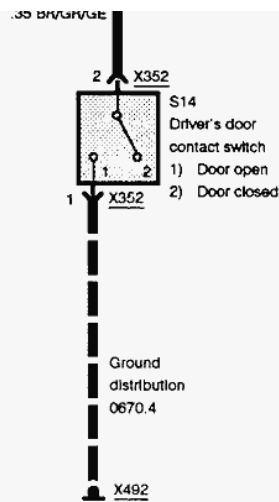


1994




## Antitheft system III (DWA III)

### Rear lid, antitheft horn (DWA), battery, rear seat, rear window monitor

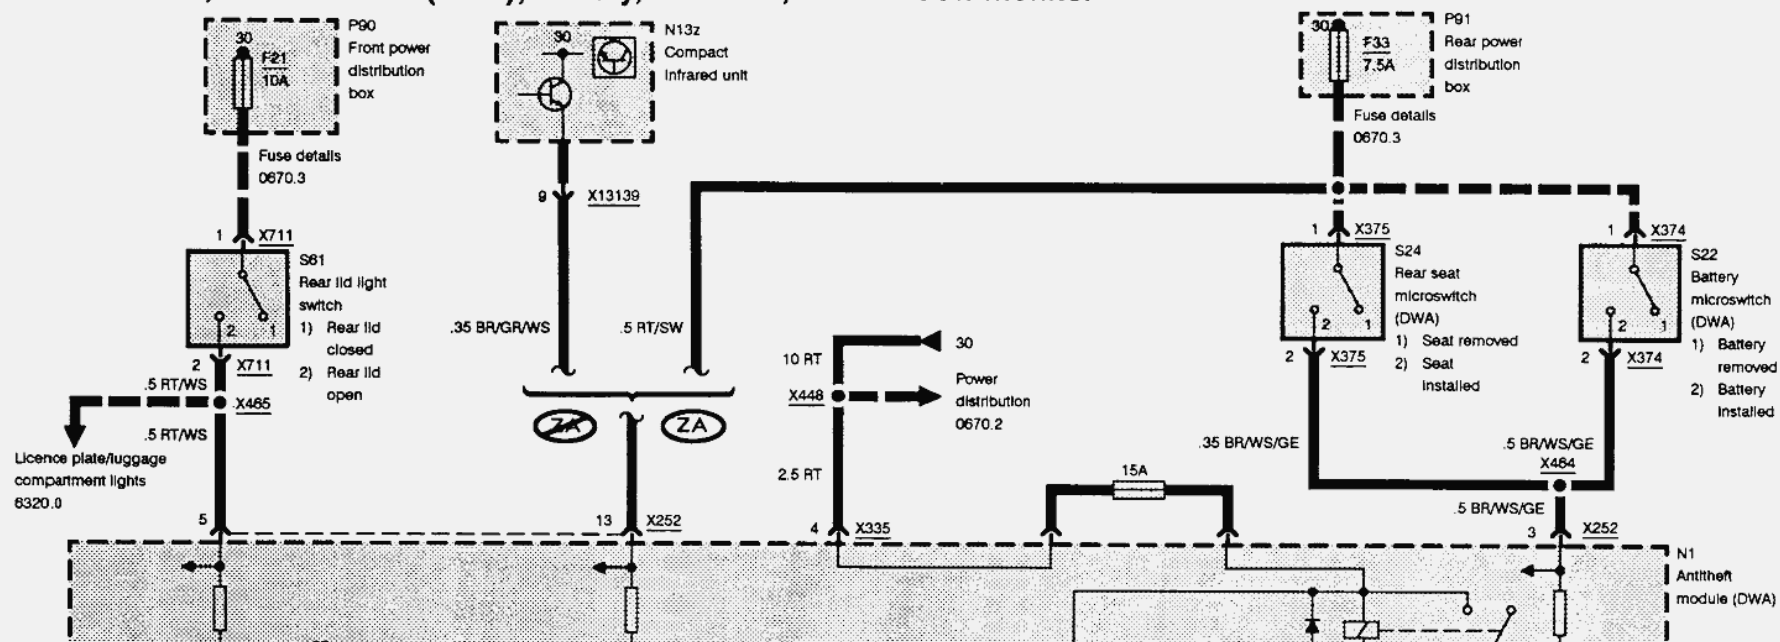

09/93


6575.1-04

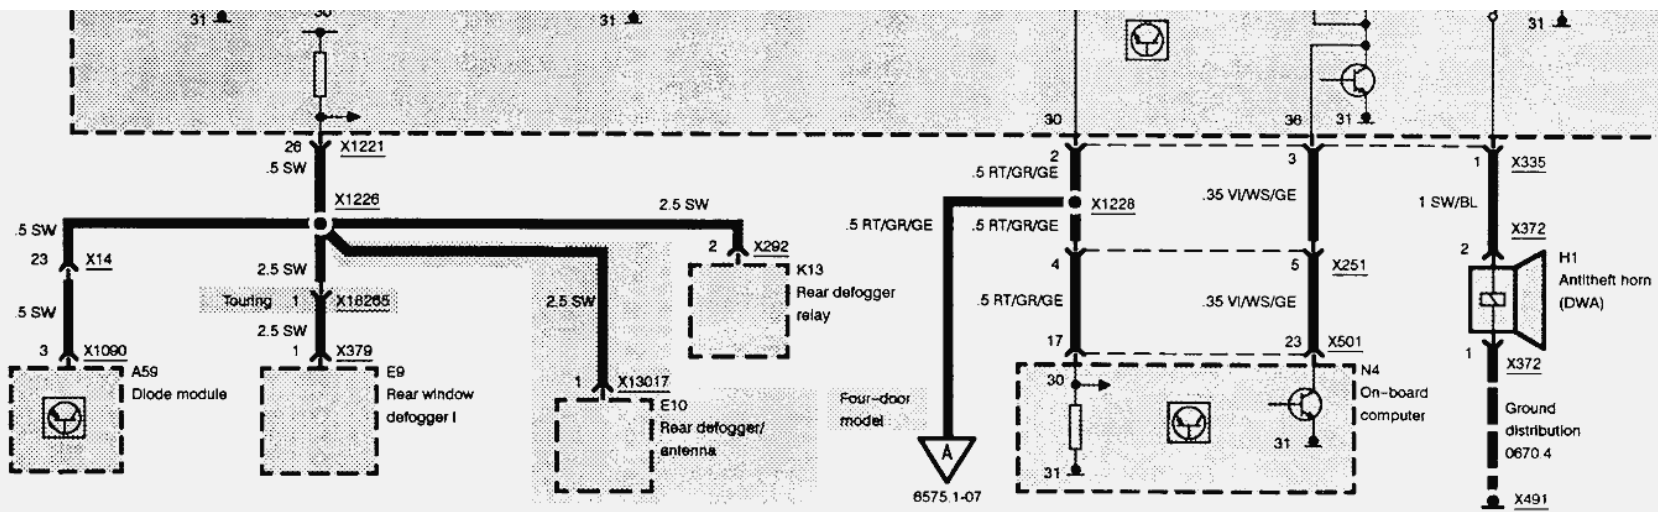

1994




### Antitheft system III (DWA III) Glove box, radio, front lid, visual alarm, position pulse

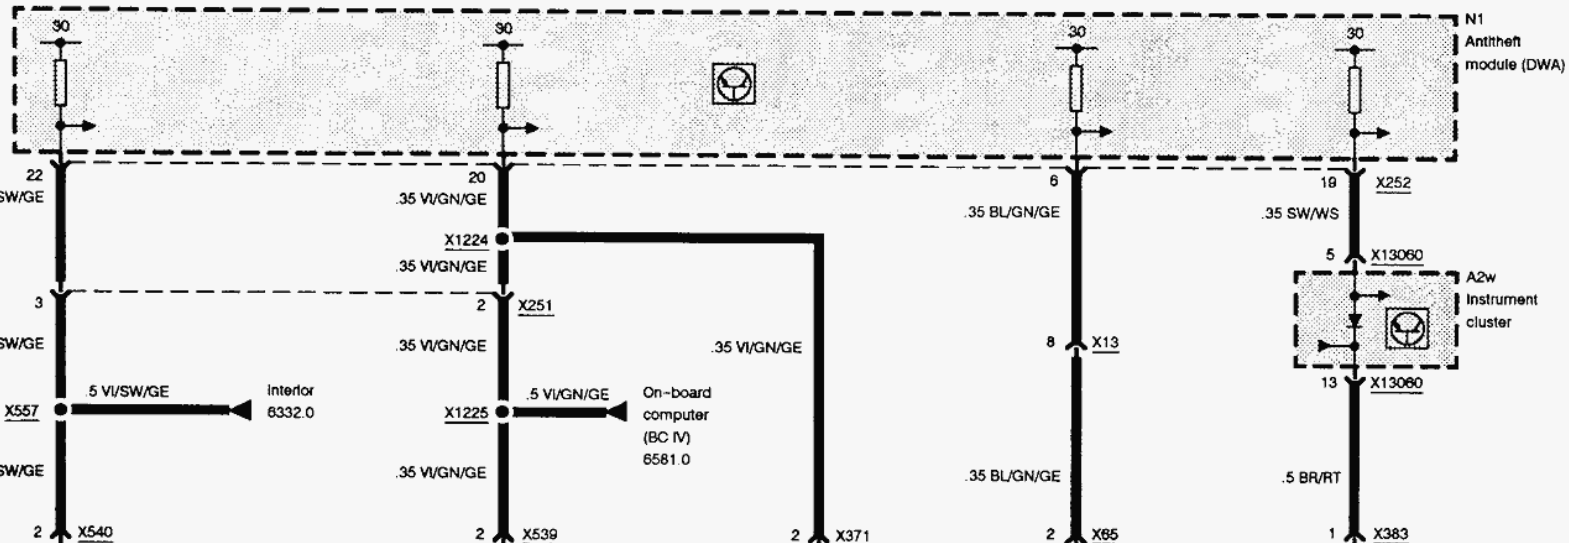

09/93


6575



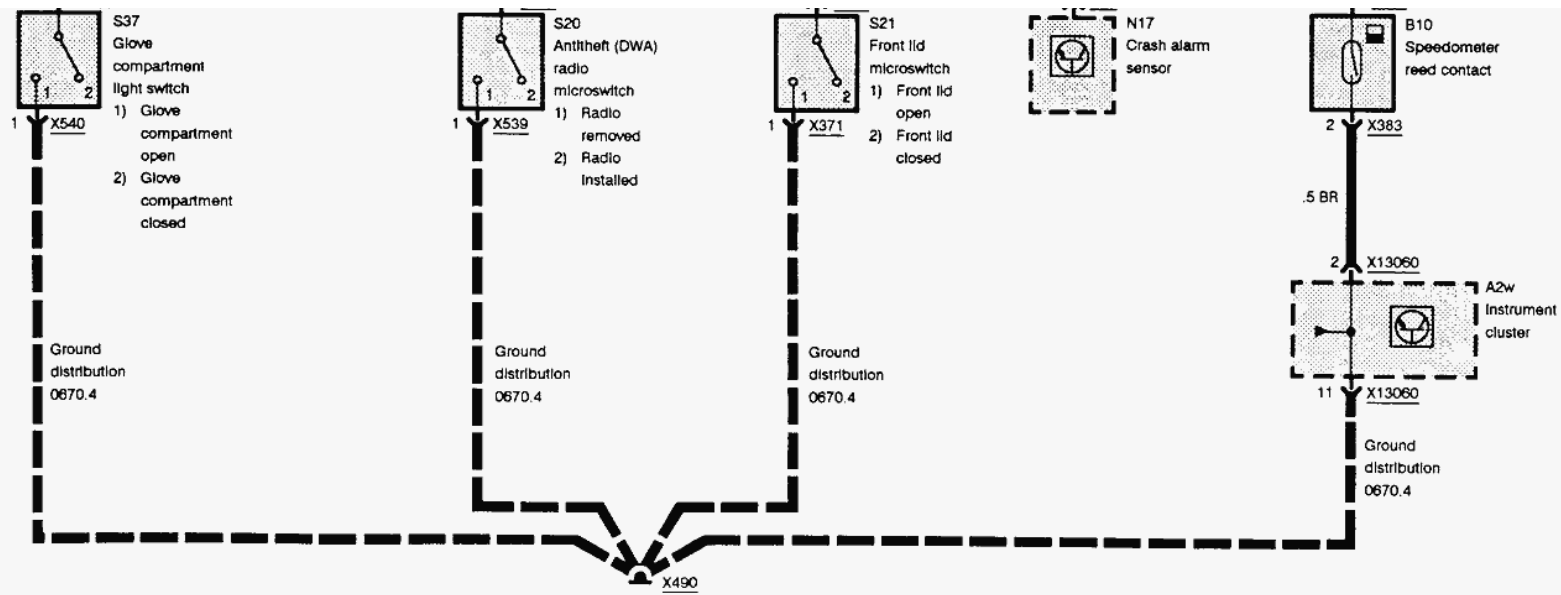


.1-05  
1994

**BMW 5** Antitheft system III (DWA III)  
Diagnostic link, drive-away protection

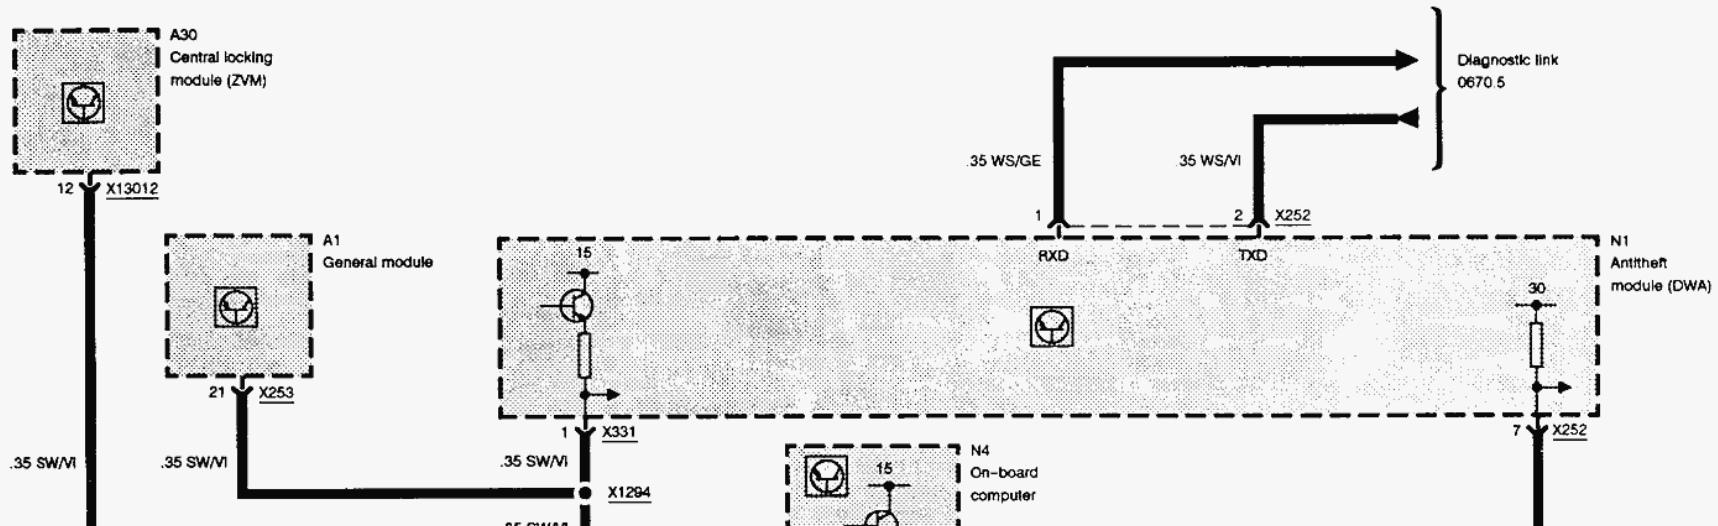


09/93  
6575.

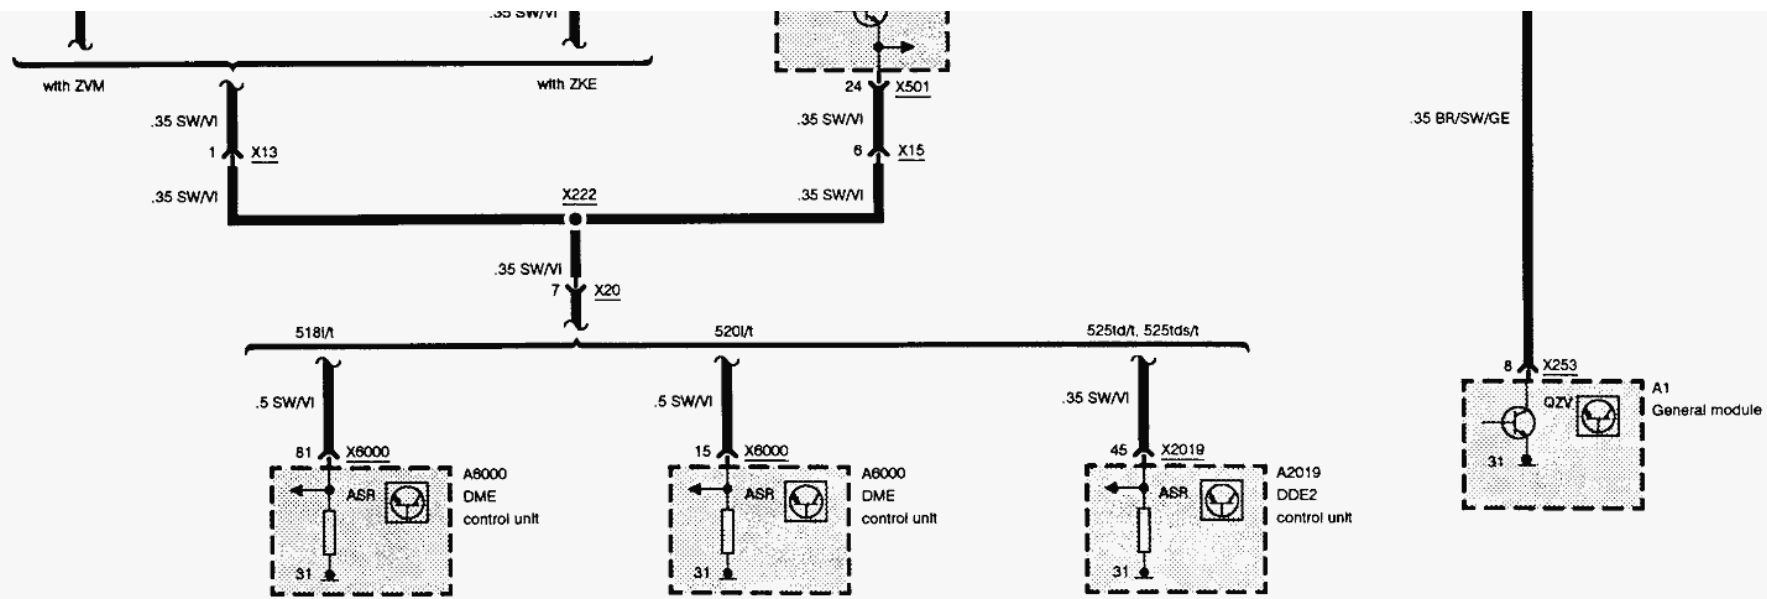


1-06  
1994

**BMW 5 Antitheft system III (DWA III)**  
**Front and rear window protection, inclination monitoring**

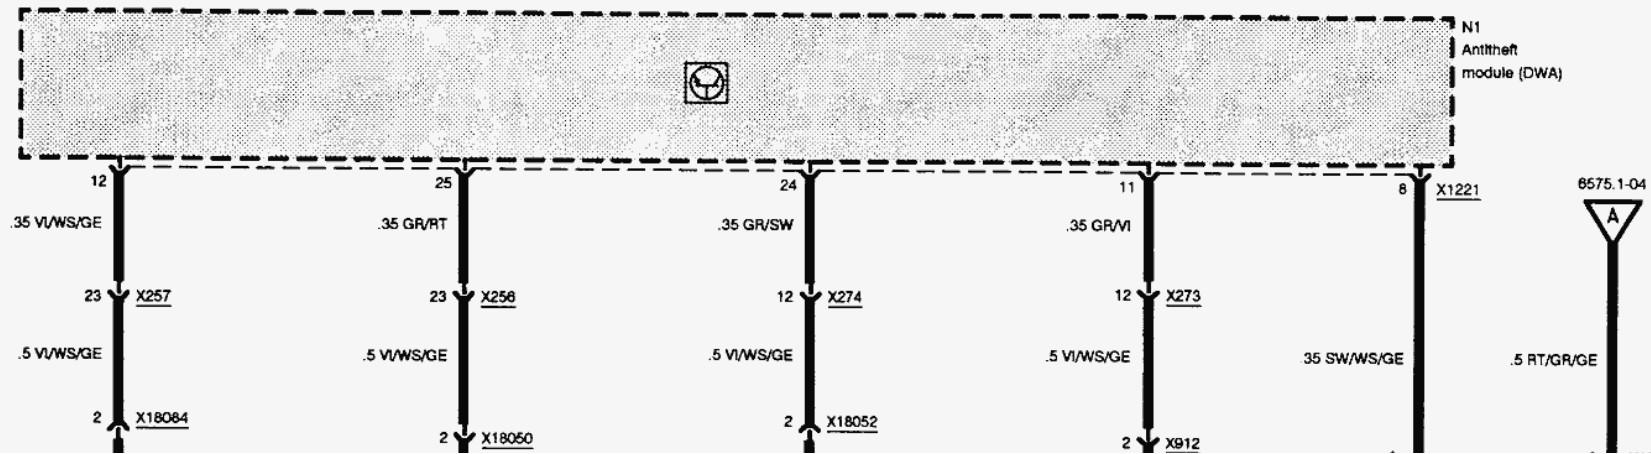

09/93

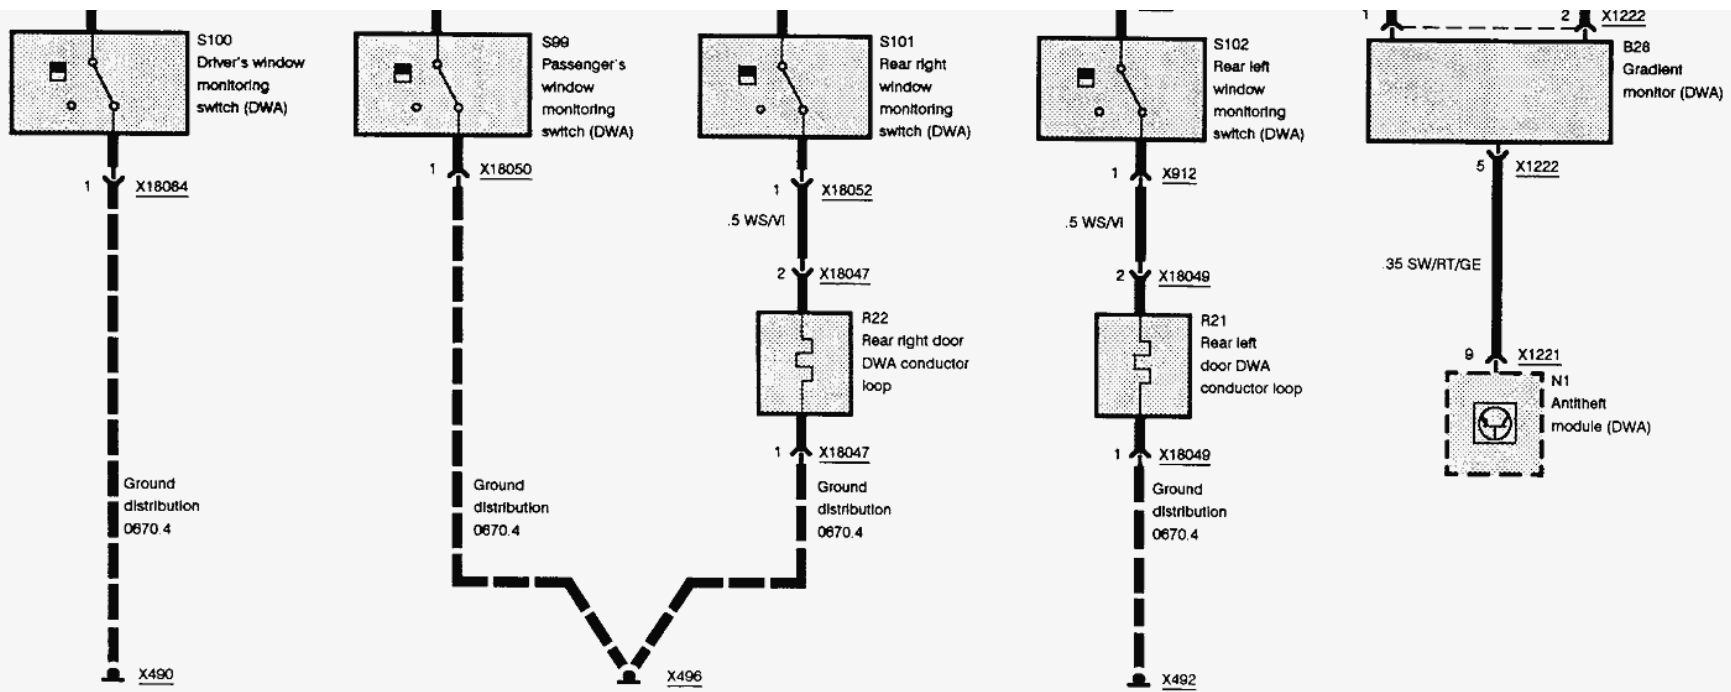

6575.1-07  
1994

**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


Automatic circulating air control (AUC)

Scheme 6430.0

09/93


6430.0-00

1994

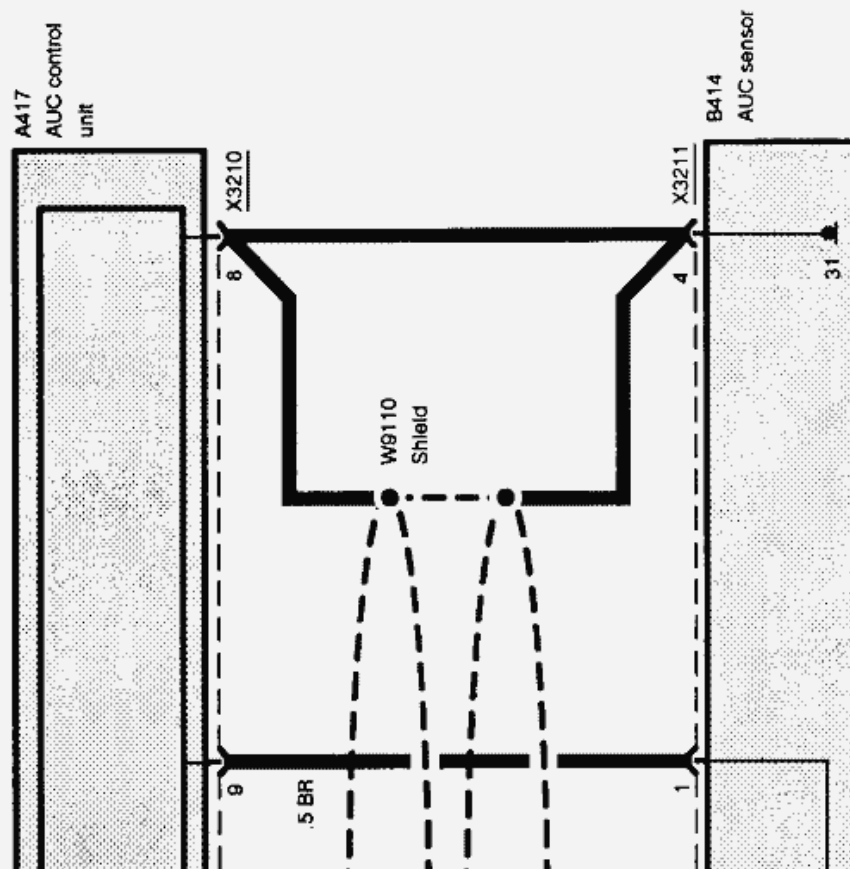


# Automatic circulating air control (AUC)

## AUC with IHKA

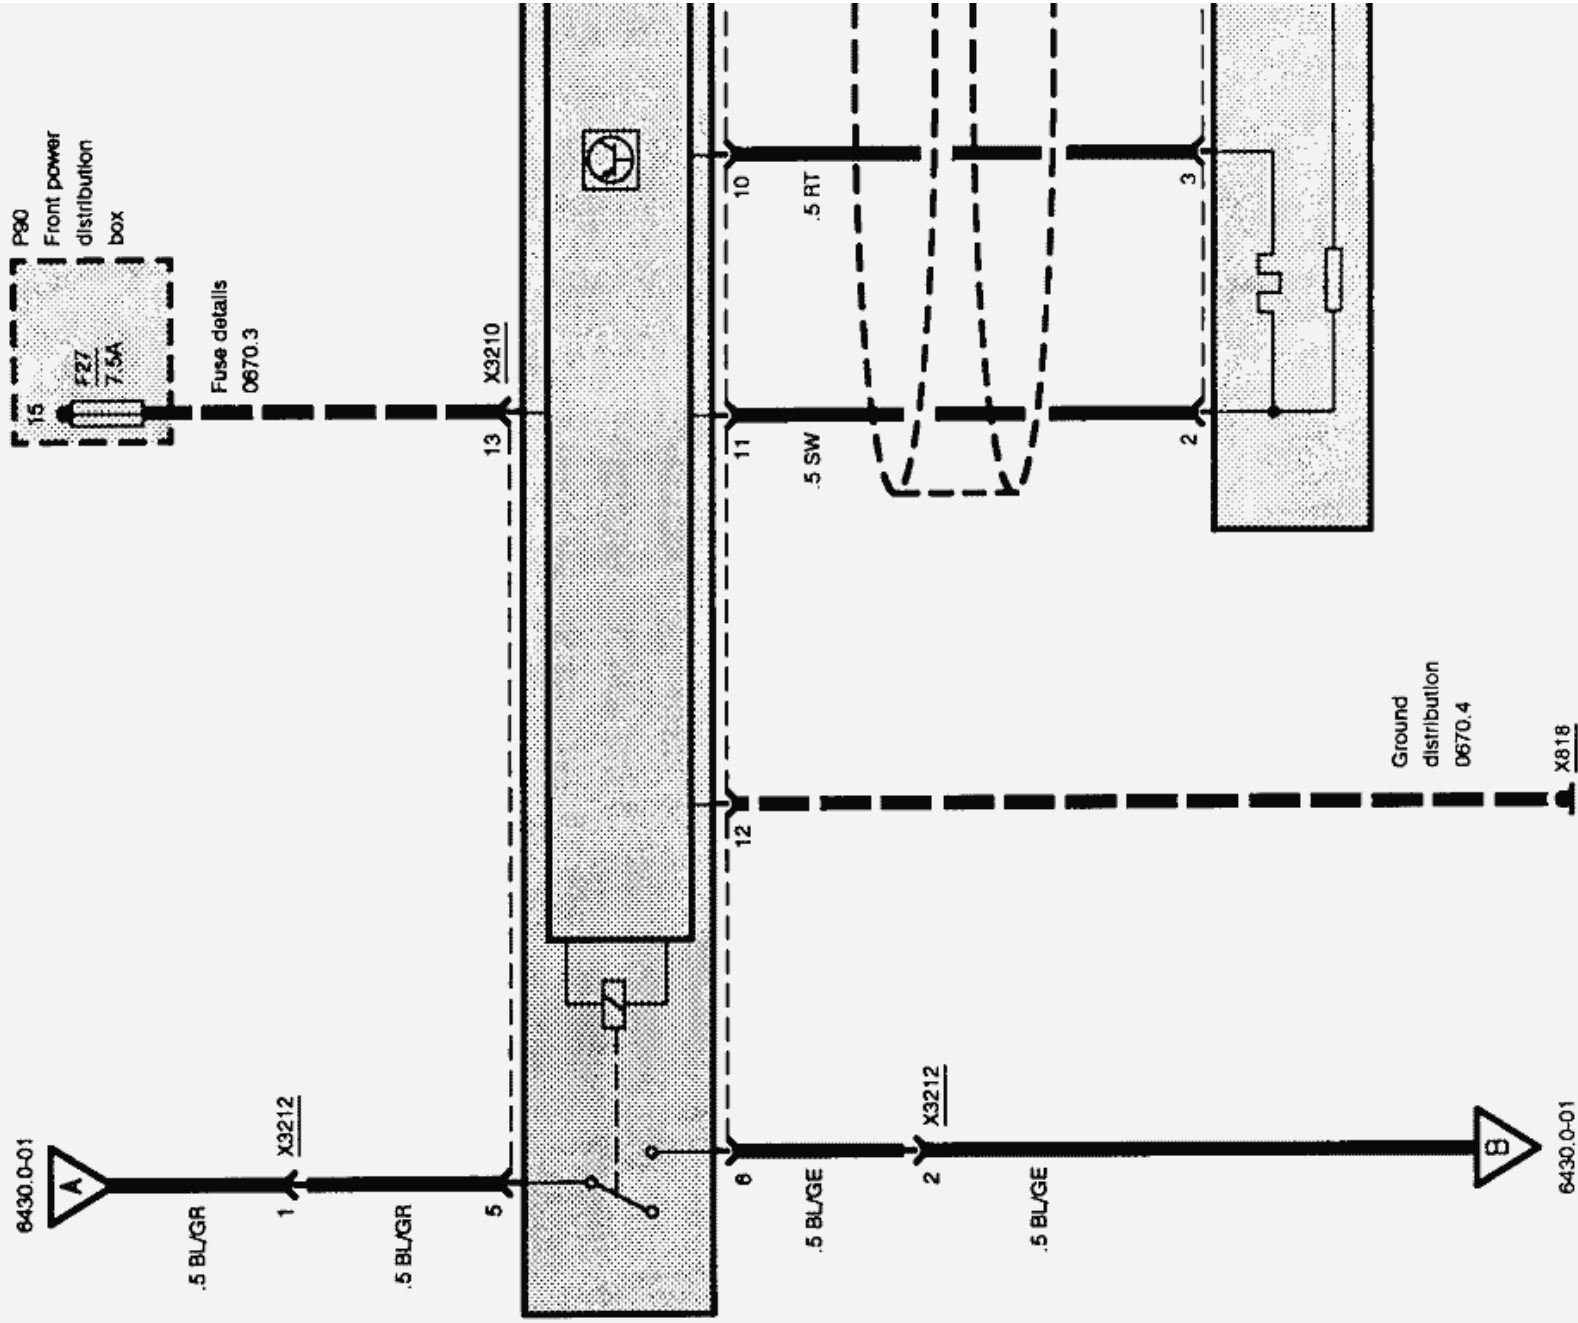




09/93 ————— 6430.0-01 ————— 1994

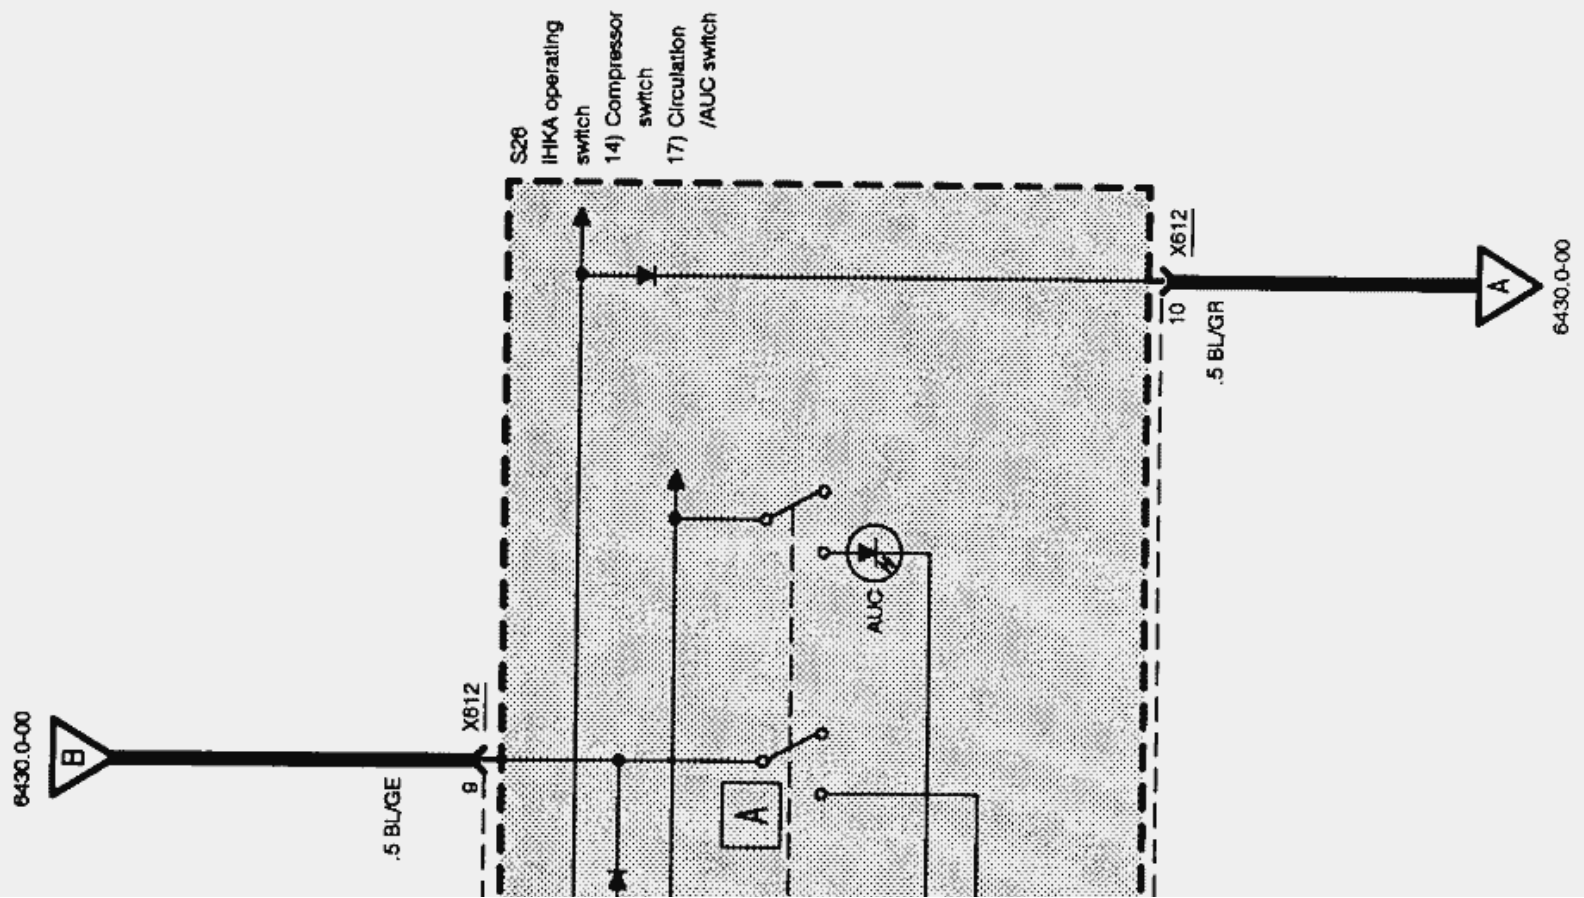

# Automatic circulating air control (AUC) AUC with IHKA

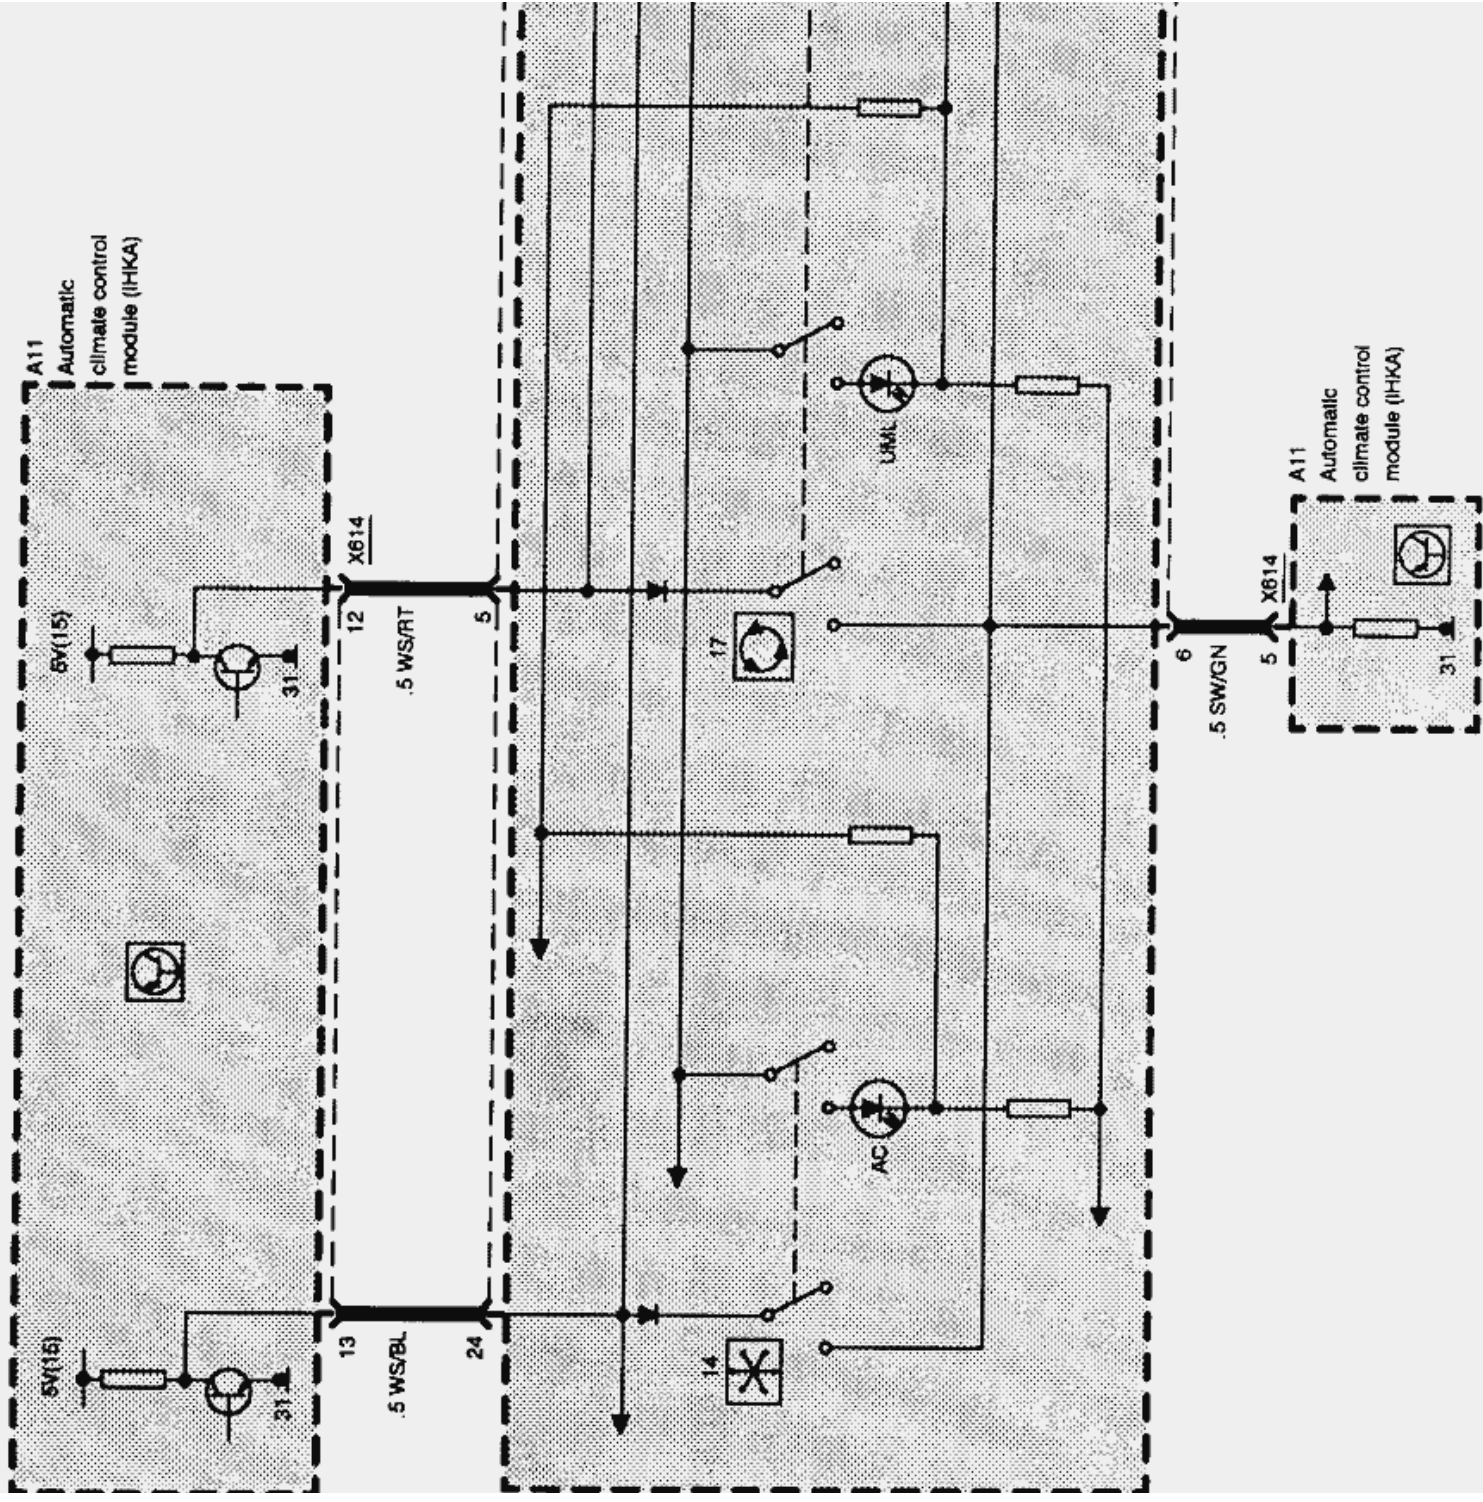




09/93

6430.0-02


1994

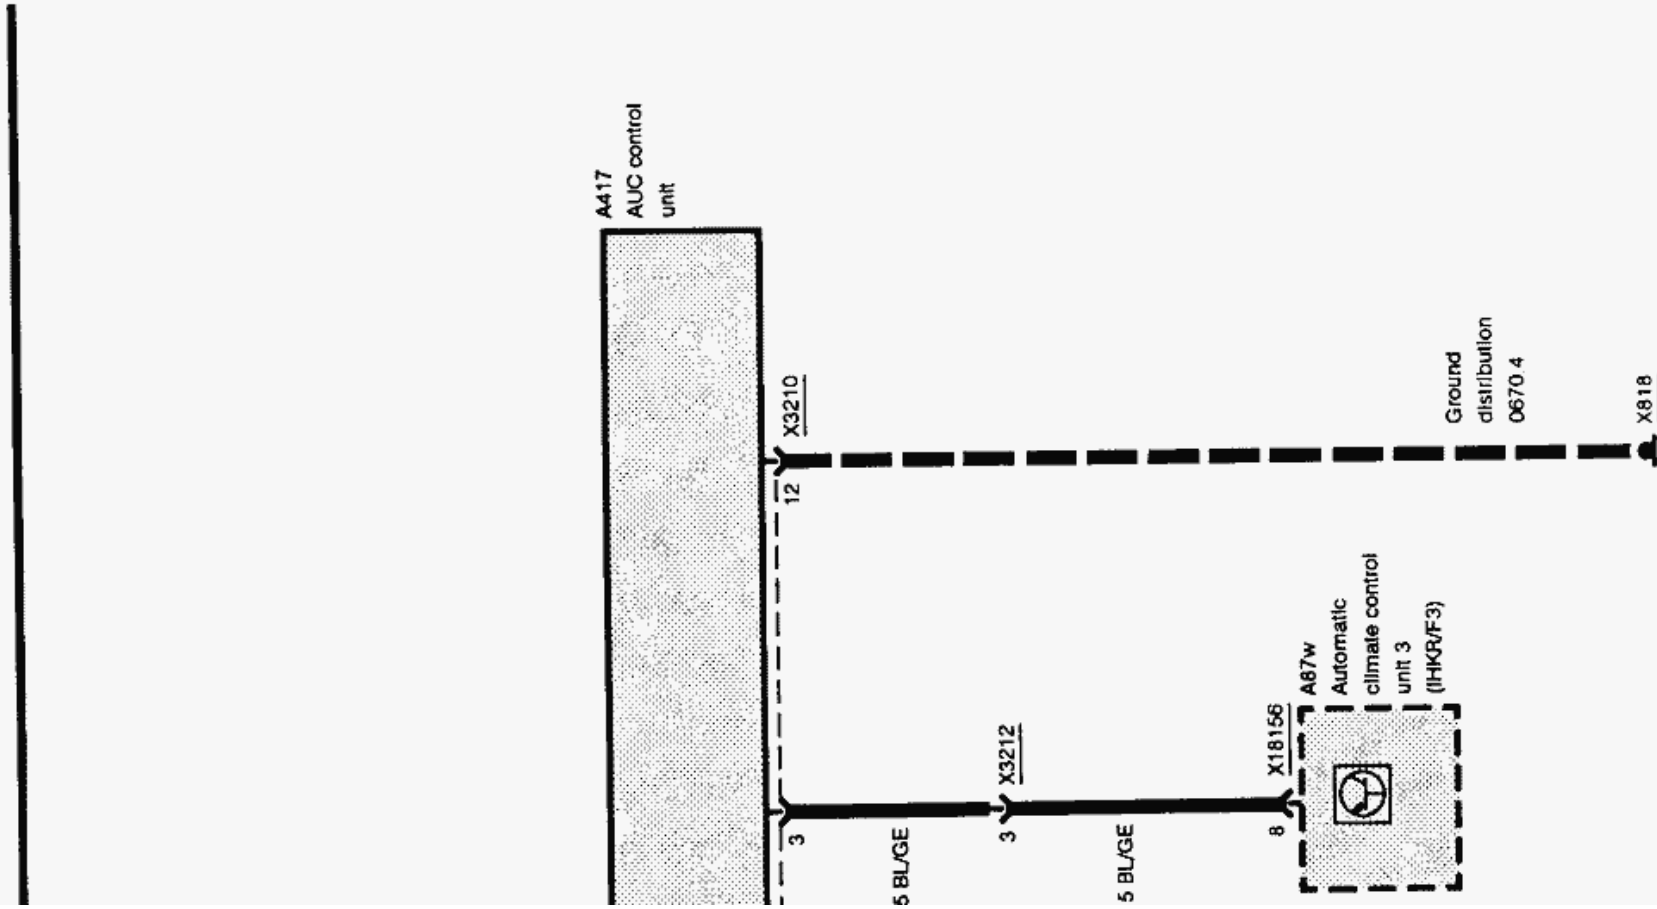



# Automatic circulating air control (AUC)

## AUC with IHKR/F3

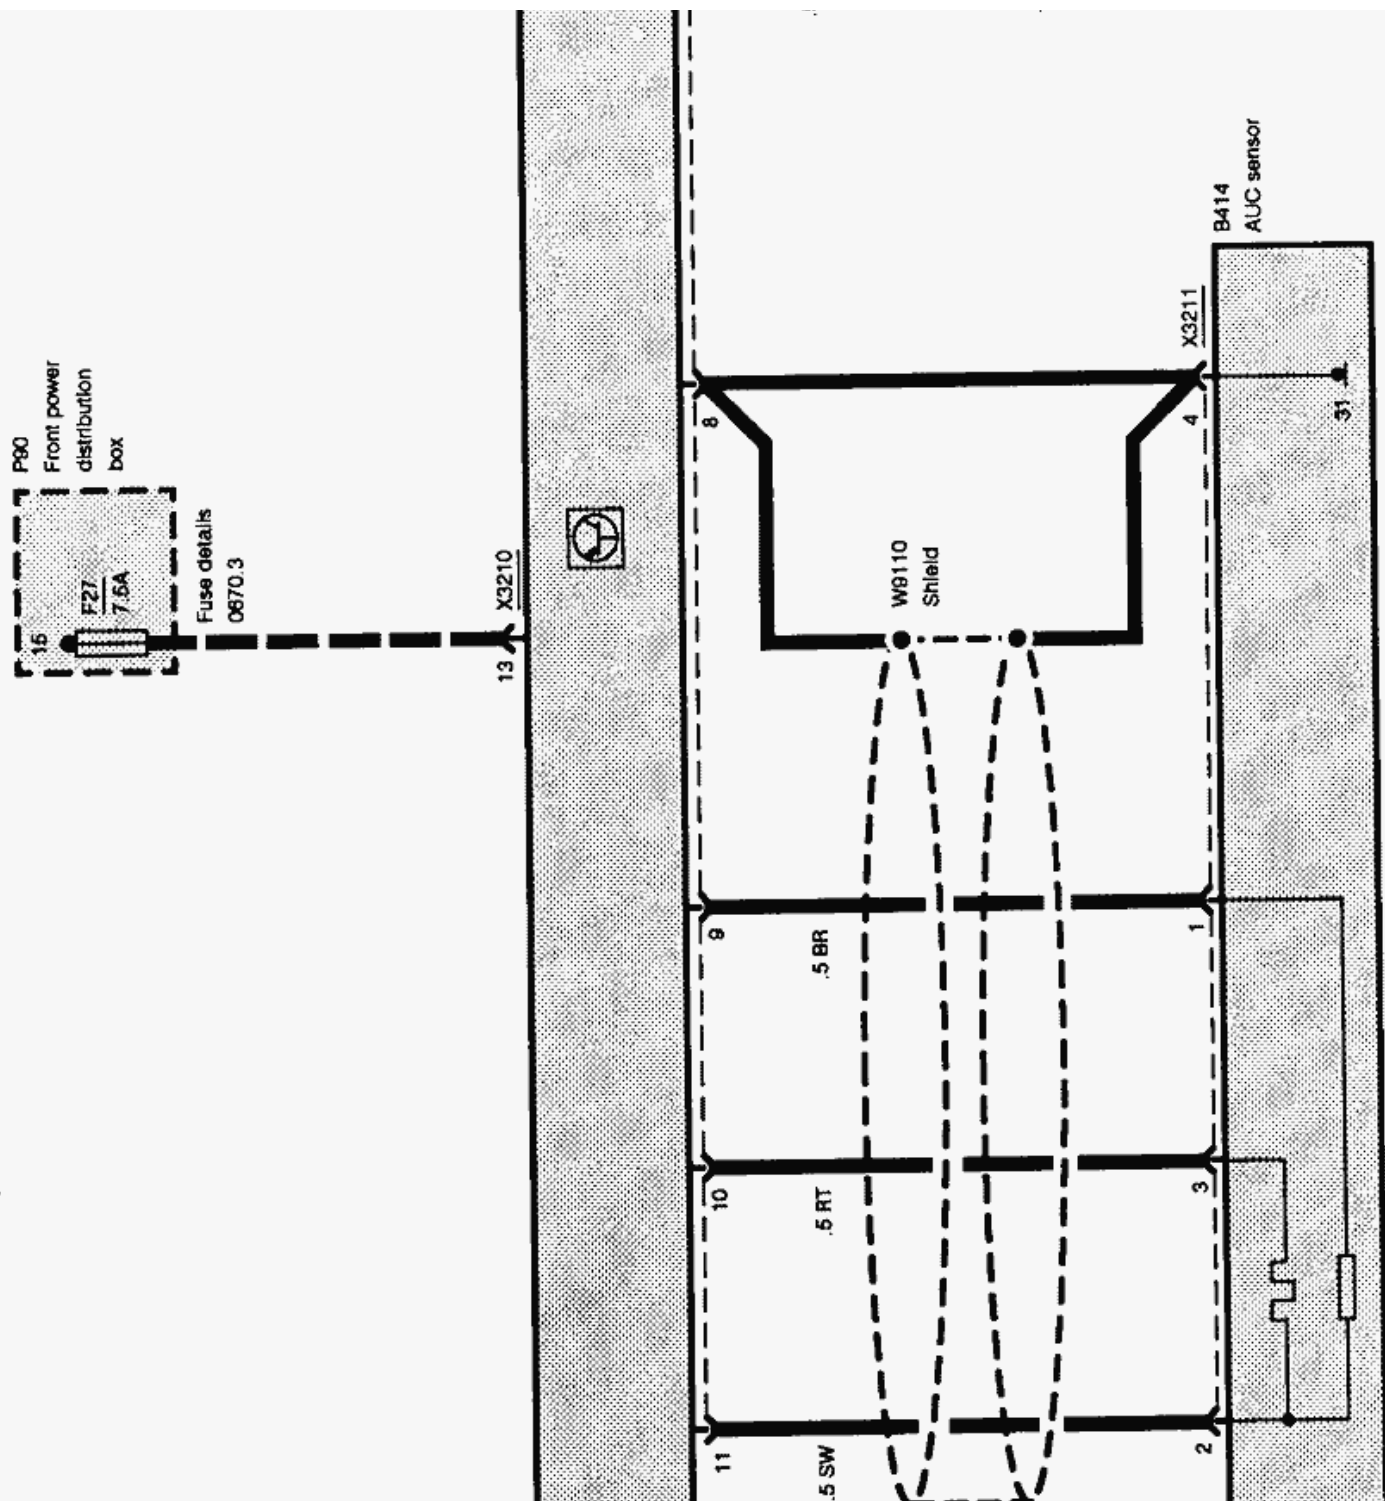



**BMWAG**Electrical troubleshooting manual

## 5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

## Automatic climate control with filter (IHKR/F3)

## Scheme 6450.5

**Pin Assignment**

A=X18155	26-pin, white
B=X18156	26-pin, black
C=X18157	26-pin, blue

**Pin Assignment X18155**

Pin	Type	Description/Function	Connection
1		not used	
2	E	Right heat exchanger temperature	Right heat exchanger sensor
3	E	Left heat exchanger temperature	Left heat exchanger sensor
4	E	Outside temperature	Outside temperature sensor
5	E	Evaporator temperature	Evaporator sensor
6	E	Setpoint, mixing air actuator	Mixing air actuator
7	E	Signal, independent ventilation	Relay box, independent heating/ventilation
8	E	Speedometer A signal	Instrument cluster
9		not used	
10	E	Signal, independent heating	Relay box, independent heating/ventilation
11		not used	
12	E	Terminal 58K	Light switch/lights
13	A	Supply voltage for function lights	IHKR/F3 push button unit
14	A	Supply voltage for mixing air actuator	Mixing air actuator
15	M	Ground for regulator in operating unit	IHKR/F3 operating unit
16	M	Ground for all sensors	All temperature sensors
17	M	Ground	Mixing air actuator
18	E	Push button unit lights	IHKR/F3 push button unit
19		not used	
20	E	Signal, air condition ON	IHKR/F3 push button unit
21	E	Signal, recirculated air/AUC ON	IHKR/F3 push button unit
22	E	Signal, rear window defogger ON	IHKR/F3 push button unit
23	E	Function indicator, air conditioning ON	IHKR/F3 push button unit
24	E	Function indicator, rear window defogger ON	IHKR/F3 push button unit
25	E	Function indicator, AUC ON	IHKR/F3 push button unit
26	E	Function indicator, recirculated air ON	IHKR/F3 push button unit

**E = Input, A = Output, M = Ground****Pin Assignment X18156**

Pin	Type	Description/Function	Connection
1	M	Ground	Ground connection
2		not used	
3	E	Interior temperature	Interior temperature sensor in IHKR/F3 operating unit
4	E	Setpoint, fresh air	IHKR/F3 operating unit
5	E	Setpoint, left blower	IHKR/F3 operating unit
6	E	Setpoint, right blower	IHKR/F3 operating unit

7		not used	
8	E	Signal AUC ON	AUC control unit
9	A	Signal, air conditioning ON	Diode module
10	M	Ground	Ground connection
11		not used	
12	E	Terminal 30	Fuse
13	E	Terminal 30	Fuse
14		not used	
15	E	max. heating, right	IHKR/F3 operating unit
16		not used	
17		not used	
18	E	Signal	Relay box, independent heating/ventilation
19		not used	
20		not used	
21		not used	
22	E	max. heating, left	IHKR/F3 operating unit
23	E	Terminal 15	Fuse
24		not used	
25	E	Terminal 61	Unloader relay
26	E	Terminal 30 h	Generator

**E = Input, A = Output, M = Ground**


**Pin Assignment X18157**

Pin	Type	Description/Function	Connection
1	A	Voltage supply for actuators	all actuator motors
2	A	Voltage supply for actuators	all actuator motors
3		not used	
4		not used	
5		not used	
6	A	Signal, recirculated air	Recirculated air flap motor
7	A	Signal, recirculated air	Recirculated air flap motor
8	A	Signal, recirculated air	Recirculated air flap motor
9	A	Signal, recirculated air	Recirculated air flap motor
10	A	Signal, fresh air	Fresh air flap motor
11	A	Signal, fresh air	Fresh air flap motor
12	A	Signal, fresh air	Fresh air flap motor
13	A	Signal, fresh air	Fresh air flap motor
14	A	Voltage supply for potentiometer	IHKR/F3 operating unit
15	A	RxD diagnosis line	Diagnostic connector
16	E/A	TxD diagnosis line	Diagnostic connector
17		not used	
18	A	Signal, interior sensor blower	Interior sensor blower motor
19	A	Signal, auxiliary water pump	Auxiliary water pump relay
20	A	Signal, rear window defogger ON	Rear window defogger relay
21		not used	
22	A	Signal, A/C compressor ON	Pressure switch B8y
23	A	Signal, air mixing	Mixing air flap motor
24	A	Signal, air mixing	Mixing air flap motor
25	A	Signal, air mixing	Mixing air flap motor
26	A	Signal, air mixing	Mixing air flap motor


09/93

6450.5-00

1994

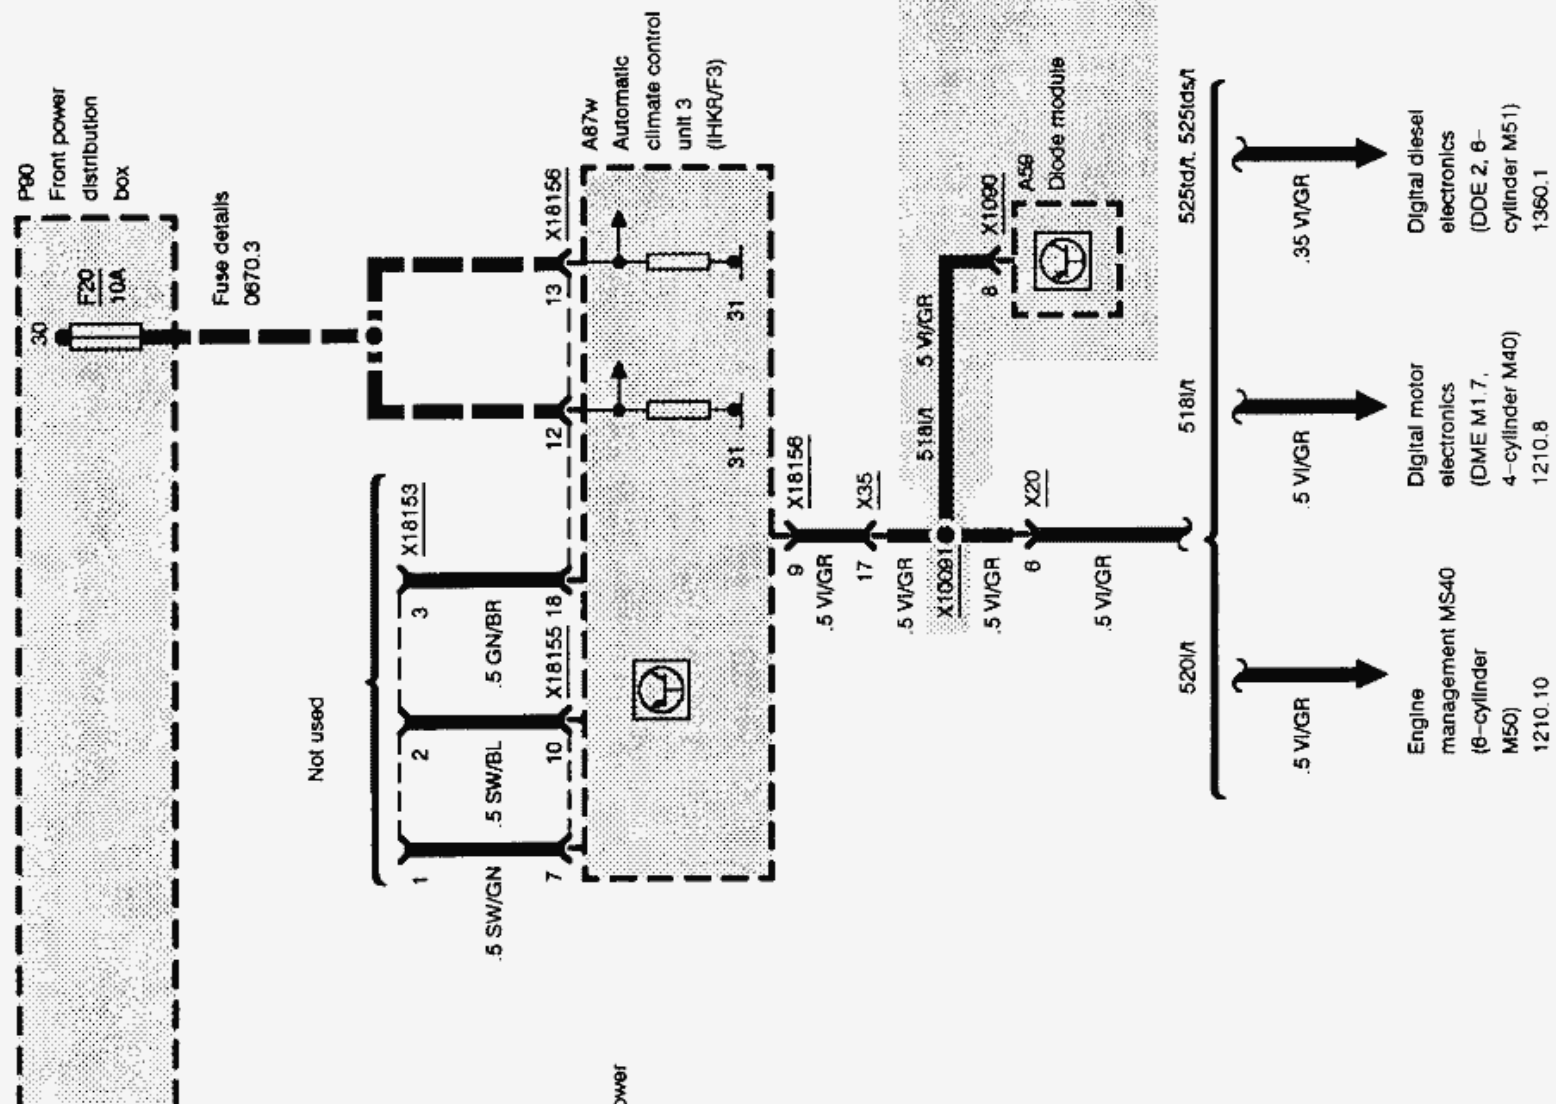


# Automatic climate control with filter (IHKR/F3) Current

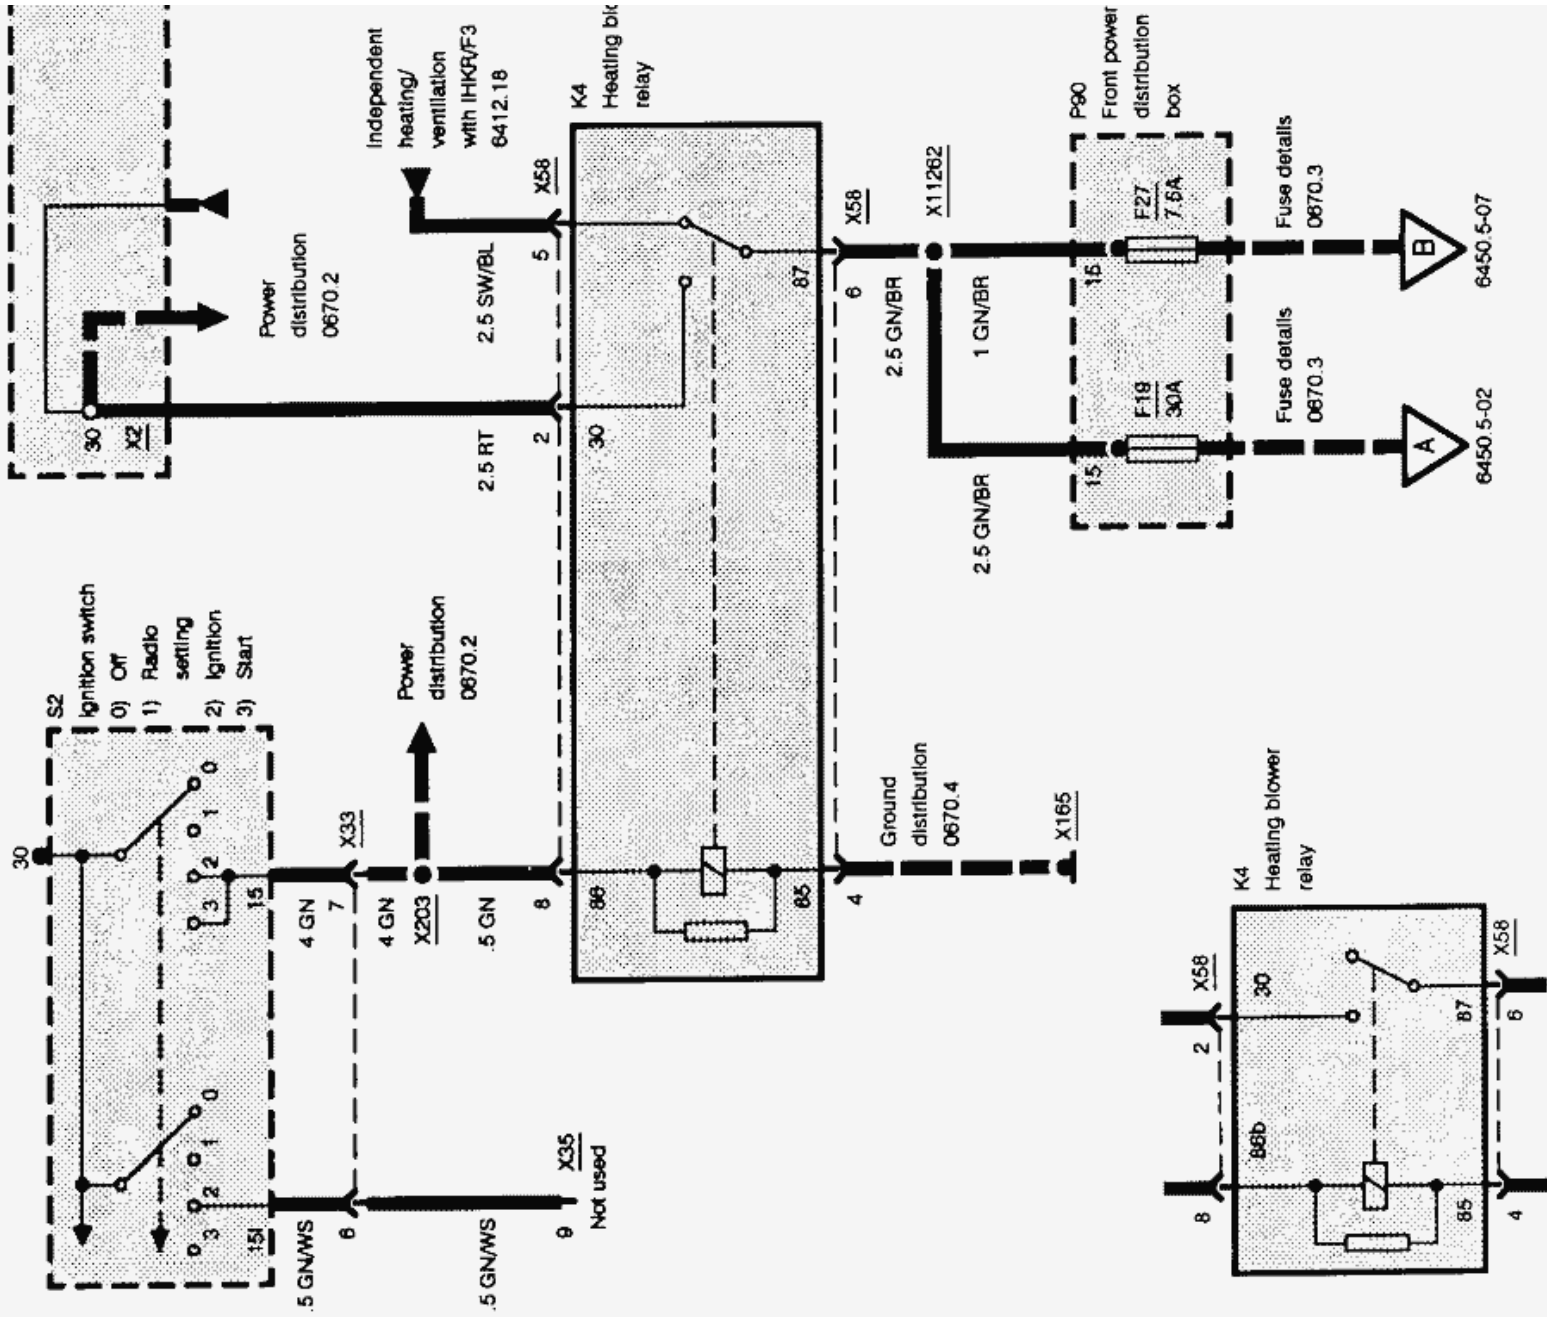


09/93

6450.5-01

1994

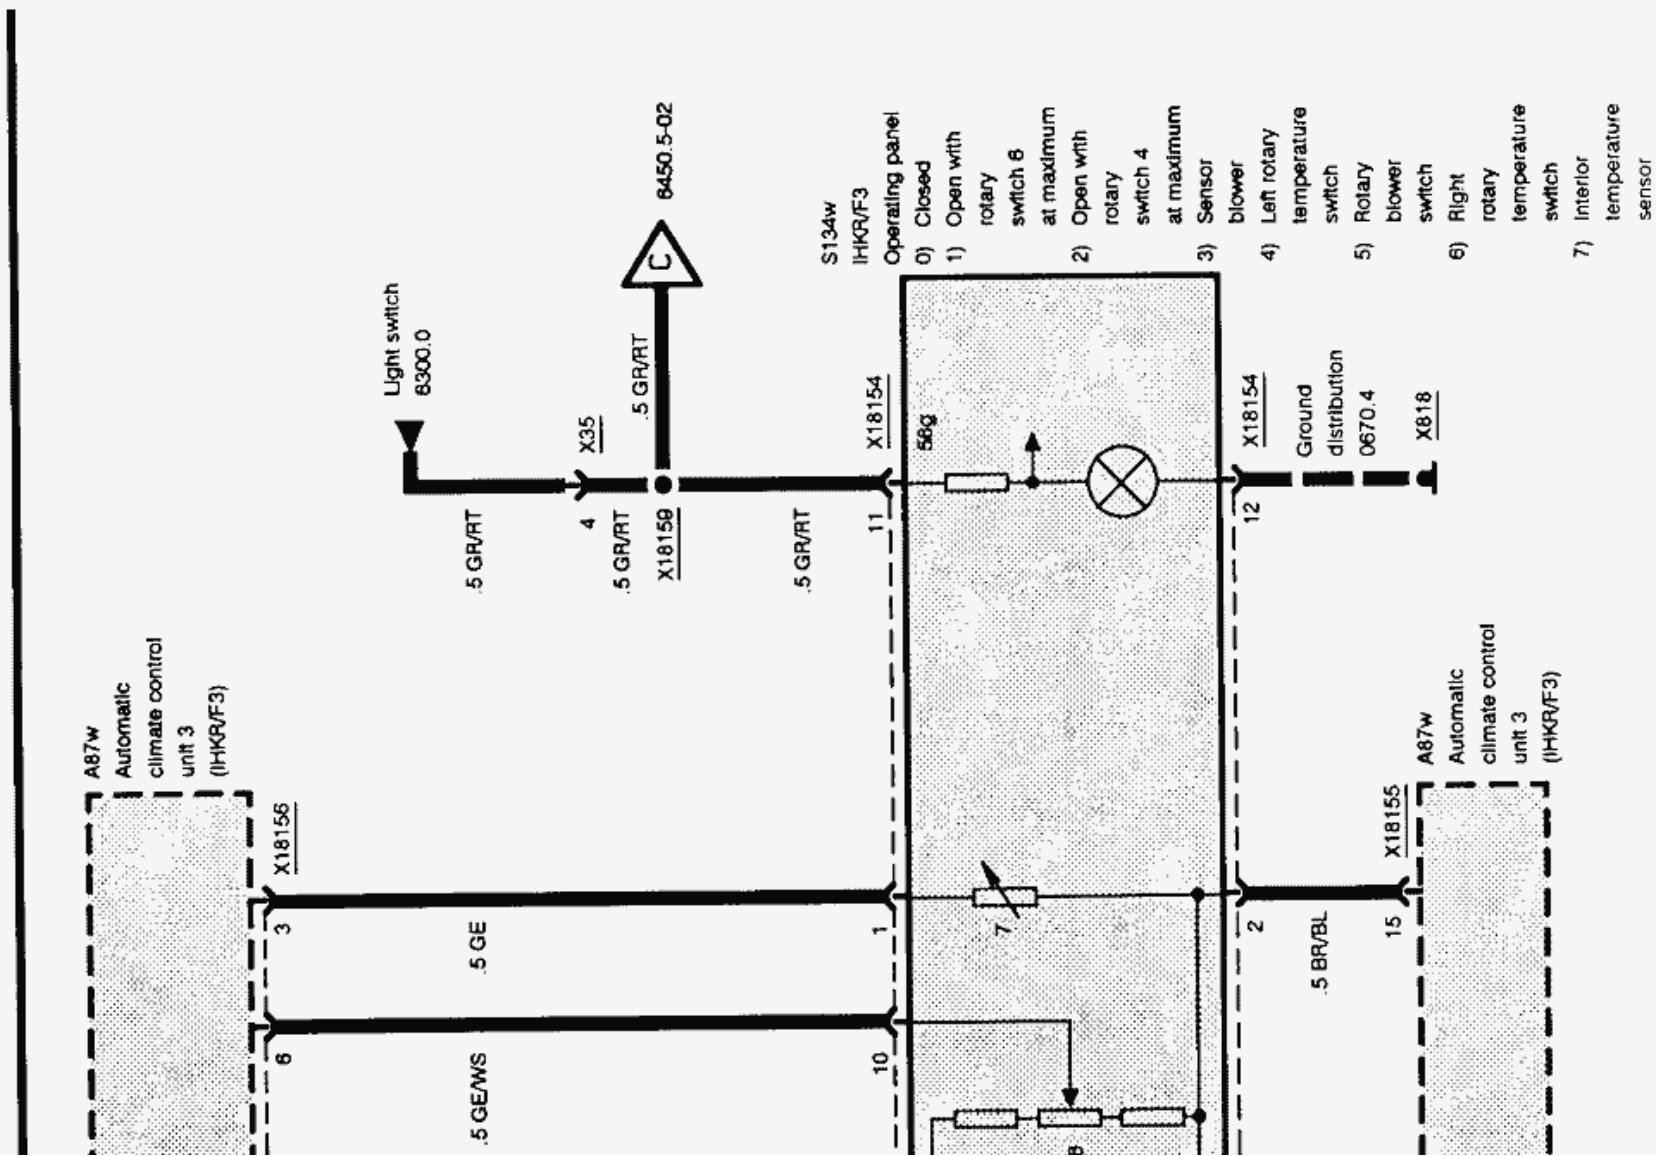

# Automatic climate control with filter (IHKR/F3)

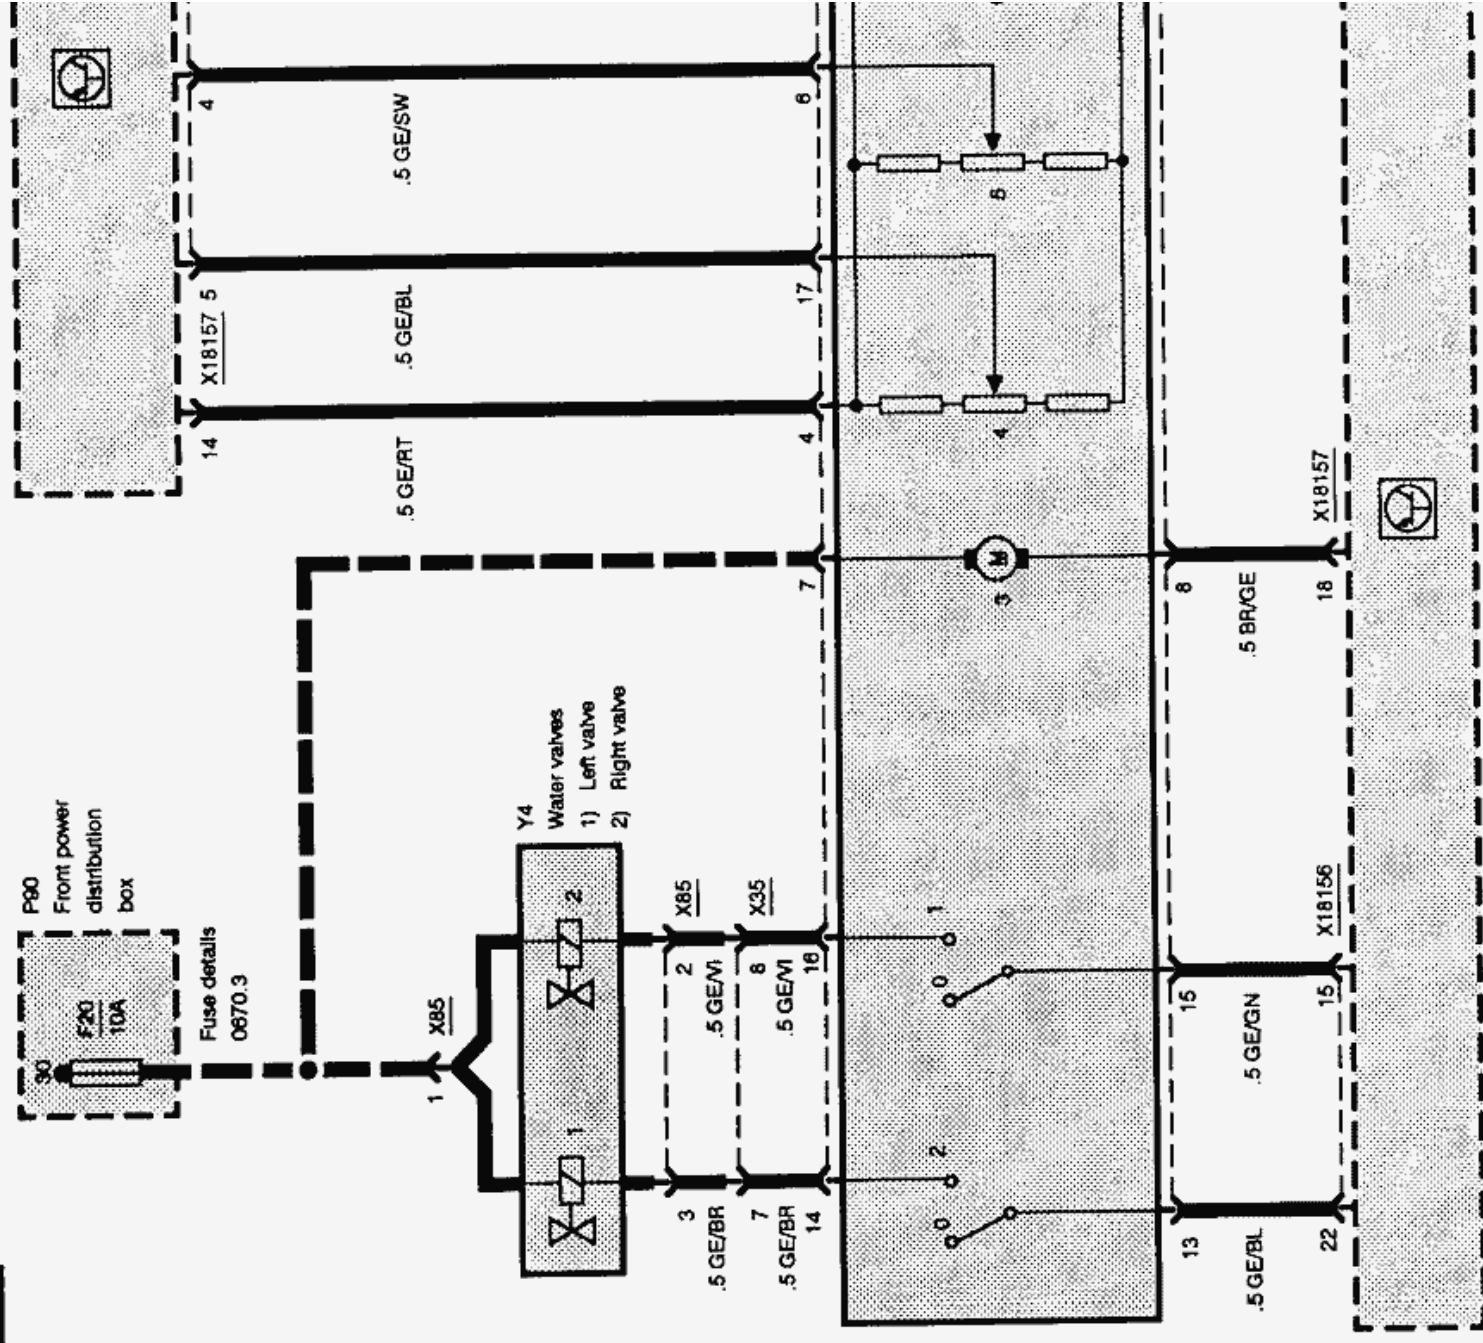




09/93



6450.5-02

1994

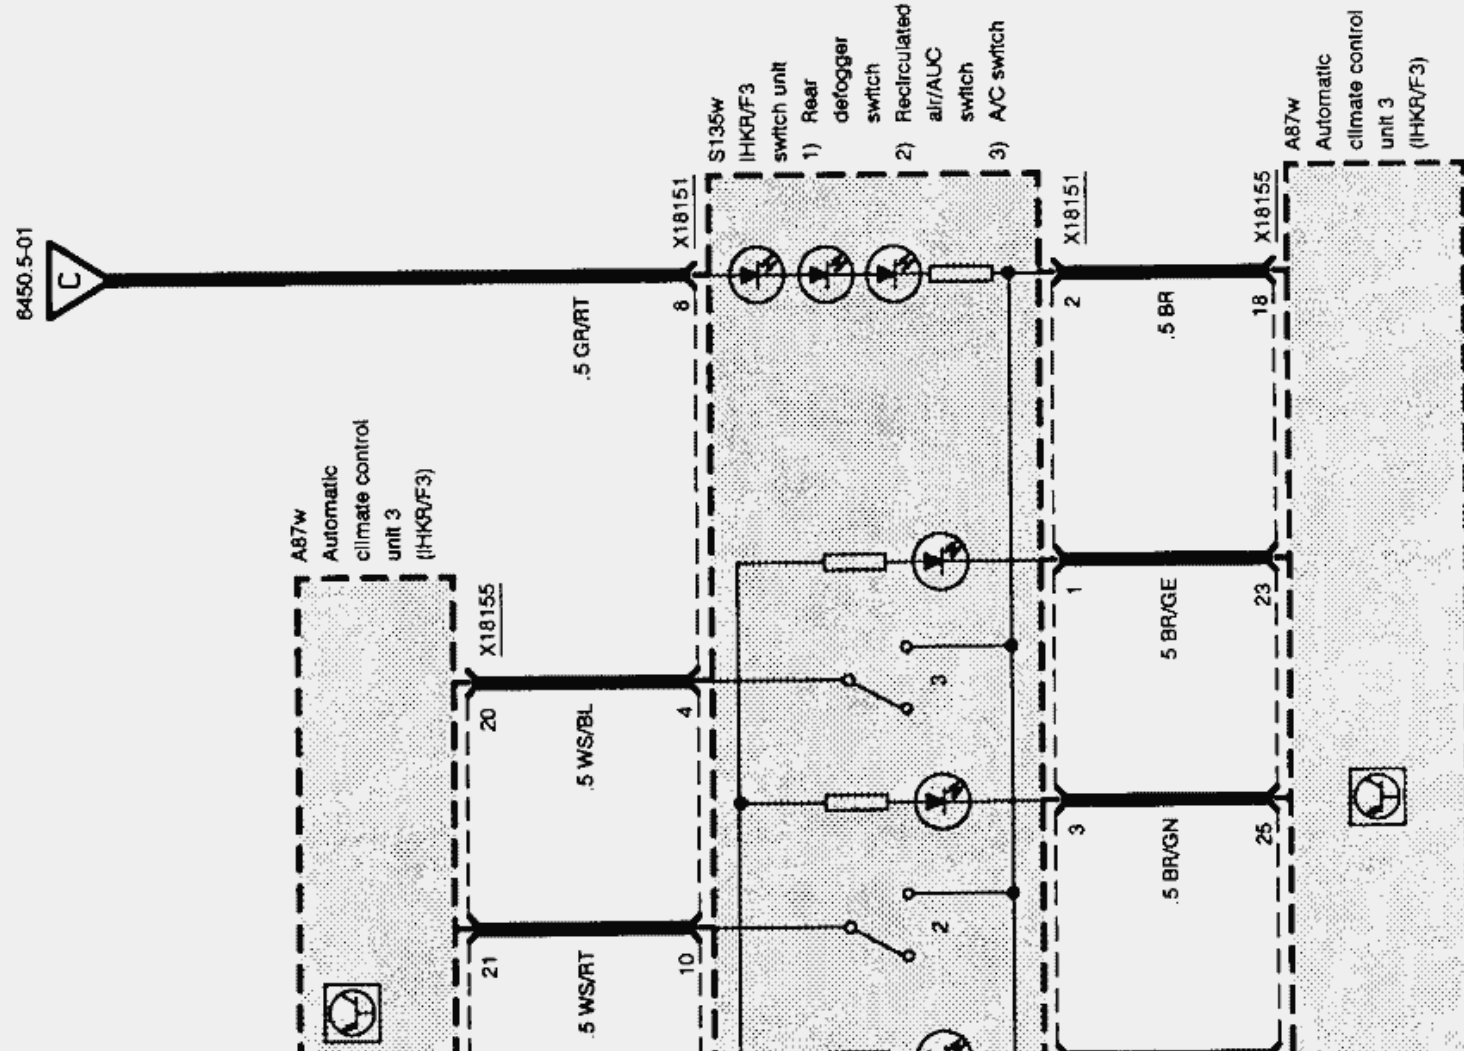





# Automatic climate control with filter (IHKR/F3)

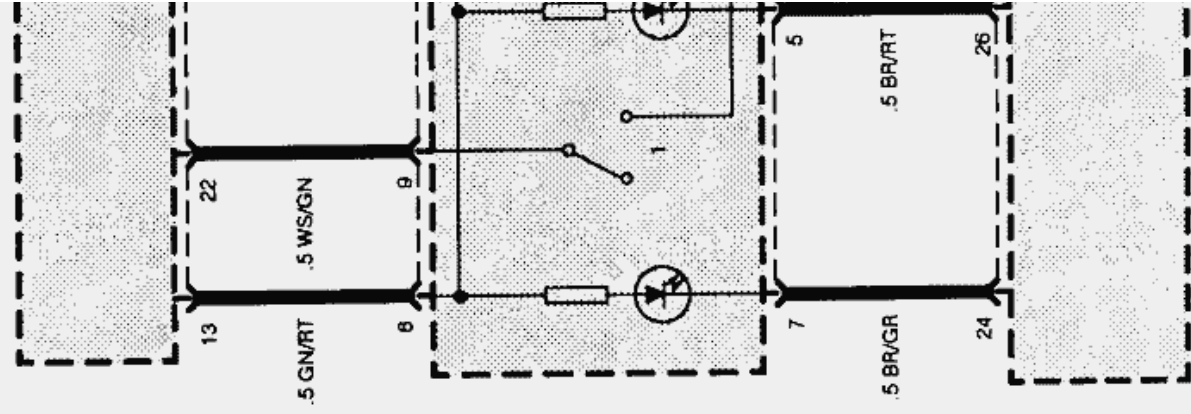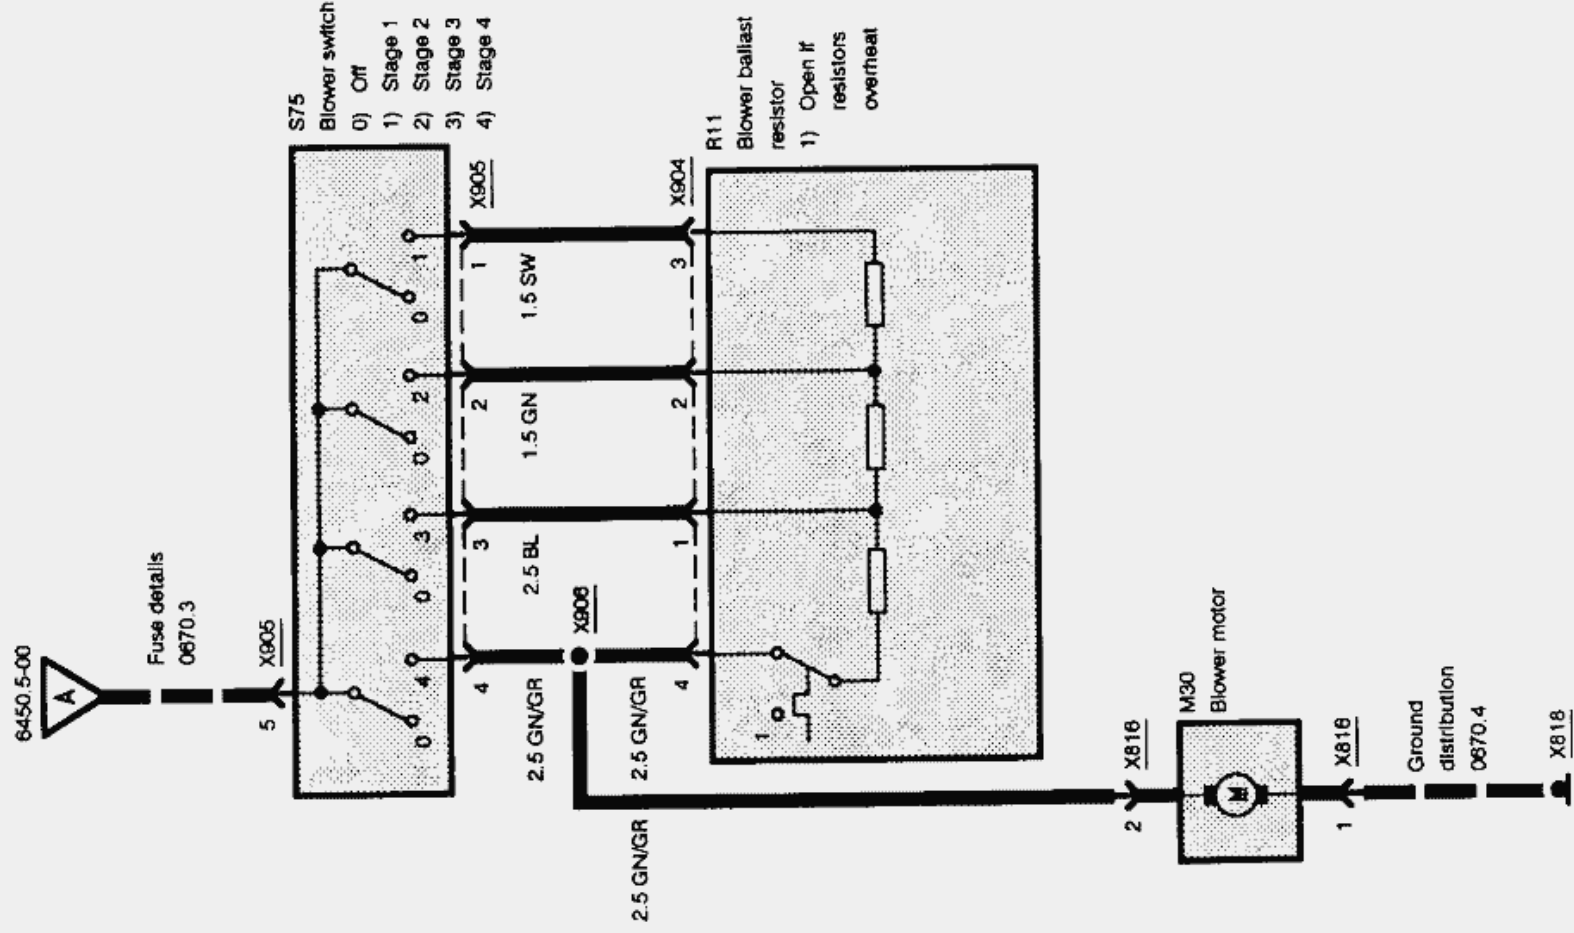

09/93

6450.5-03


1994

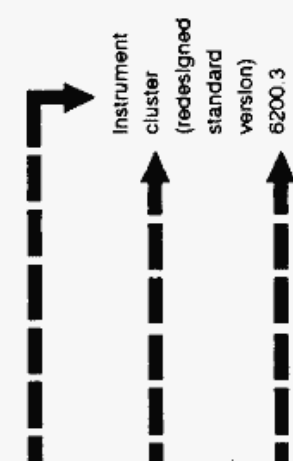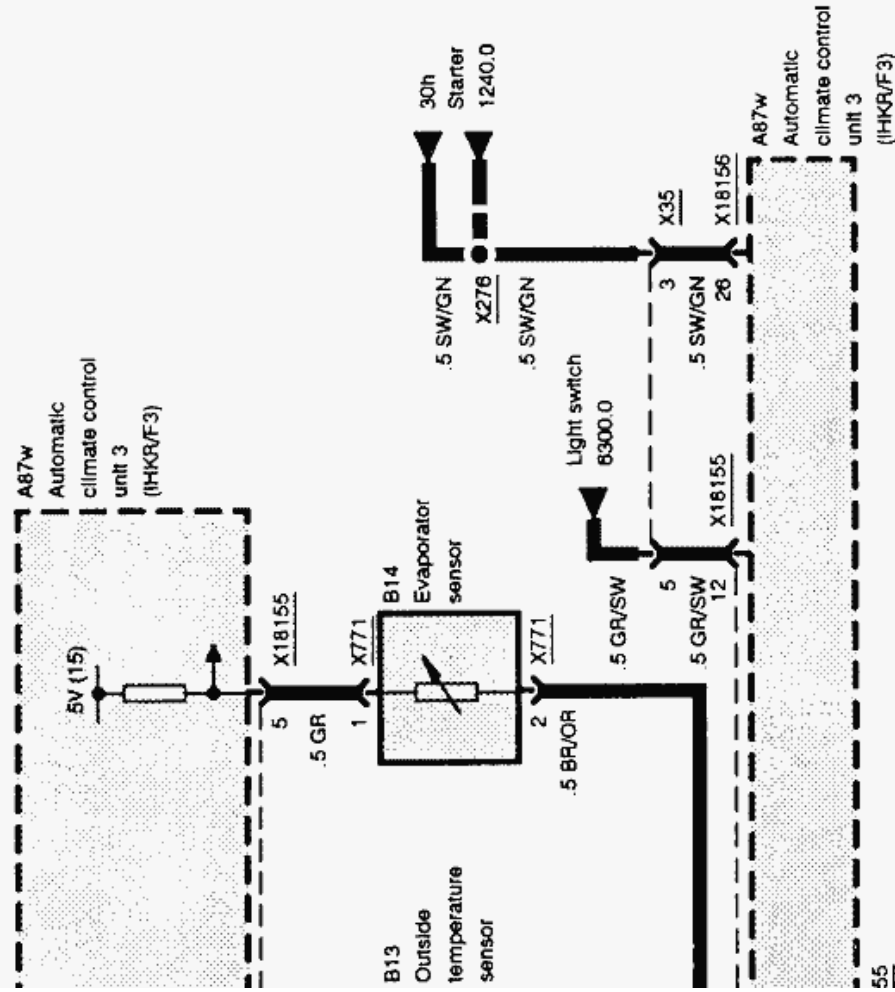

- 60
- 1 A2w
- Instrument cluster
- 2) Speedometer output




# Automatic climate control with filter (IHKR/F3) Temperature control

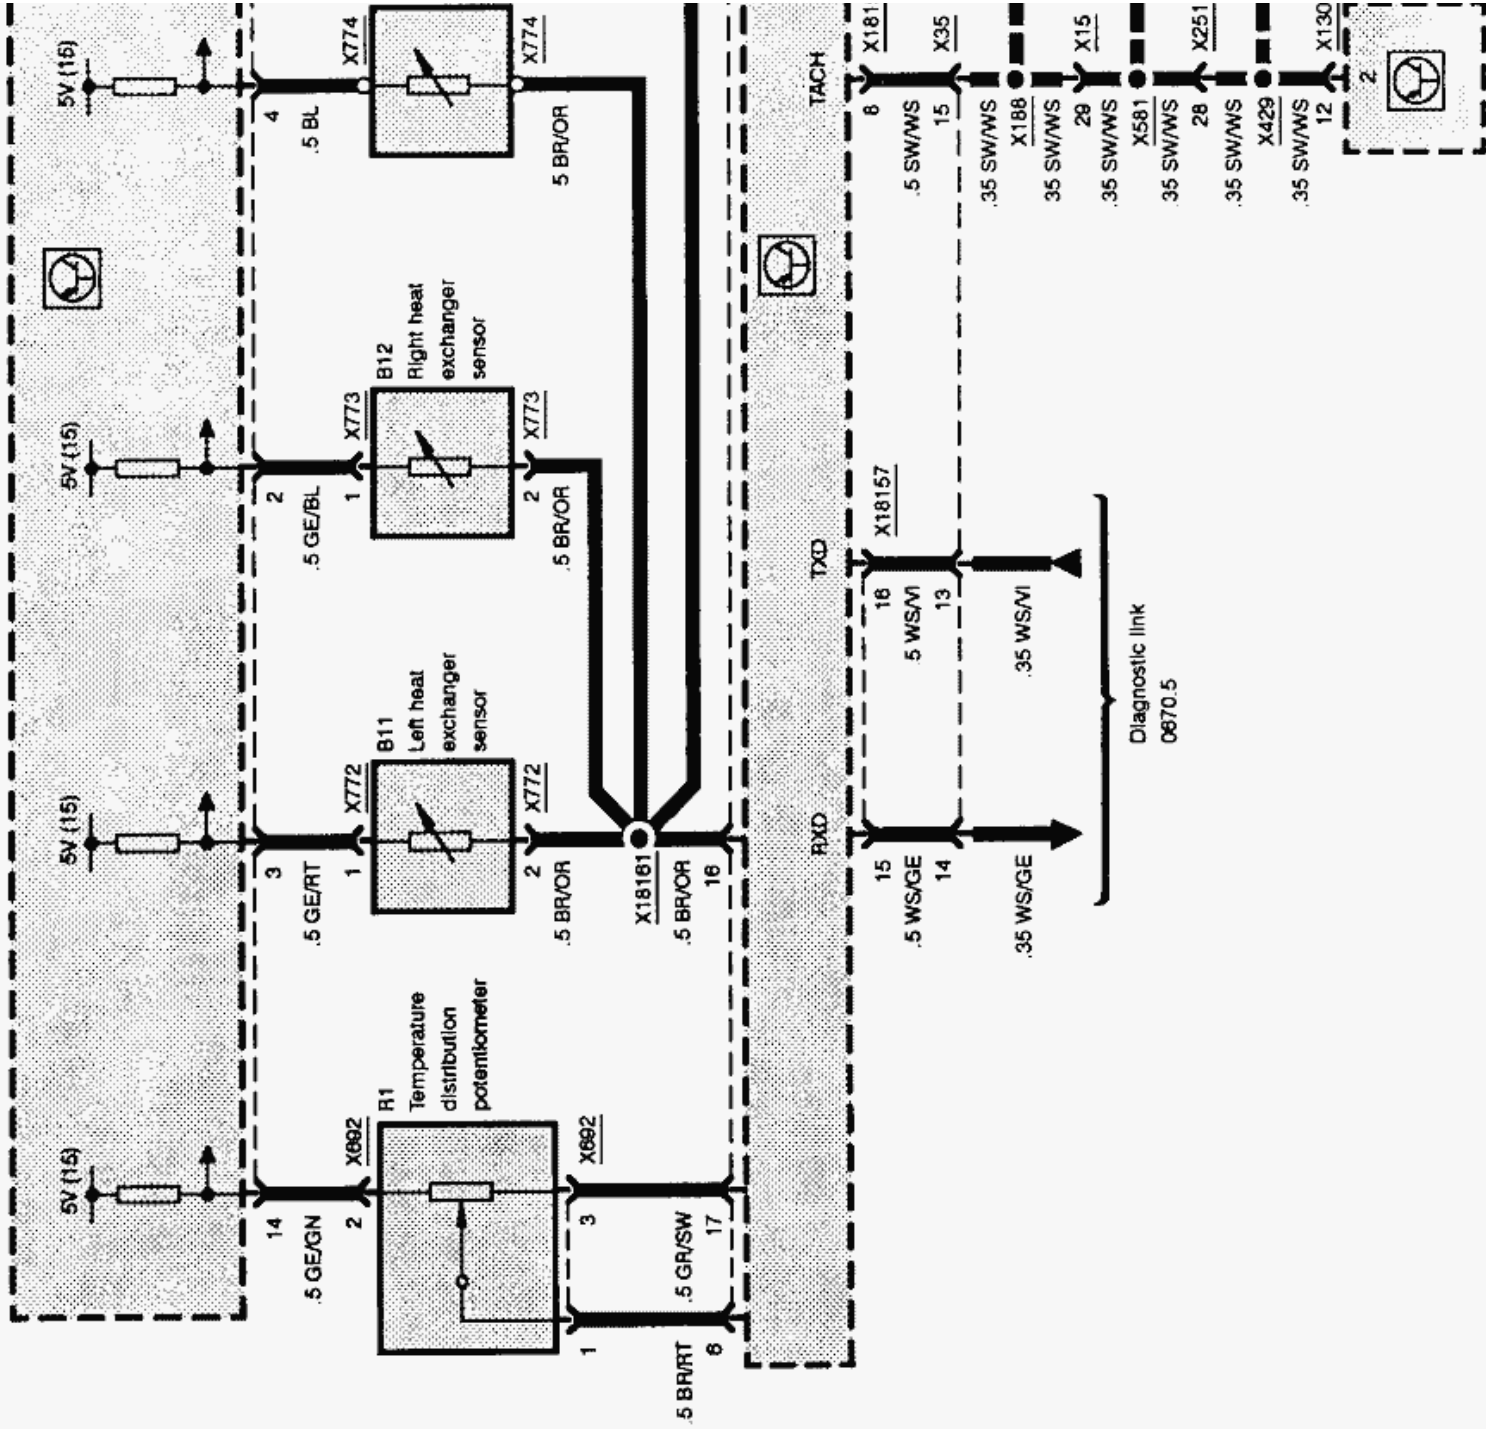

09/93


6450.5-04

1994

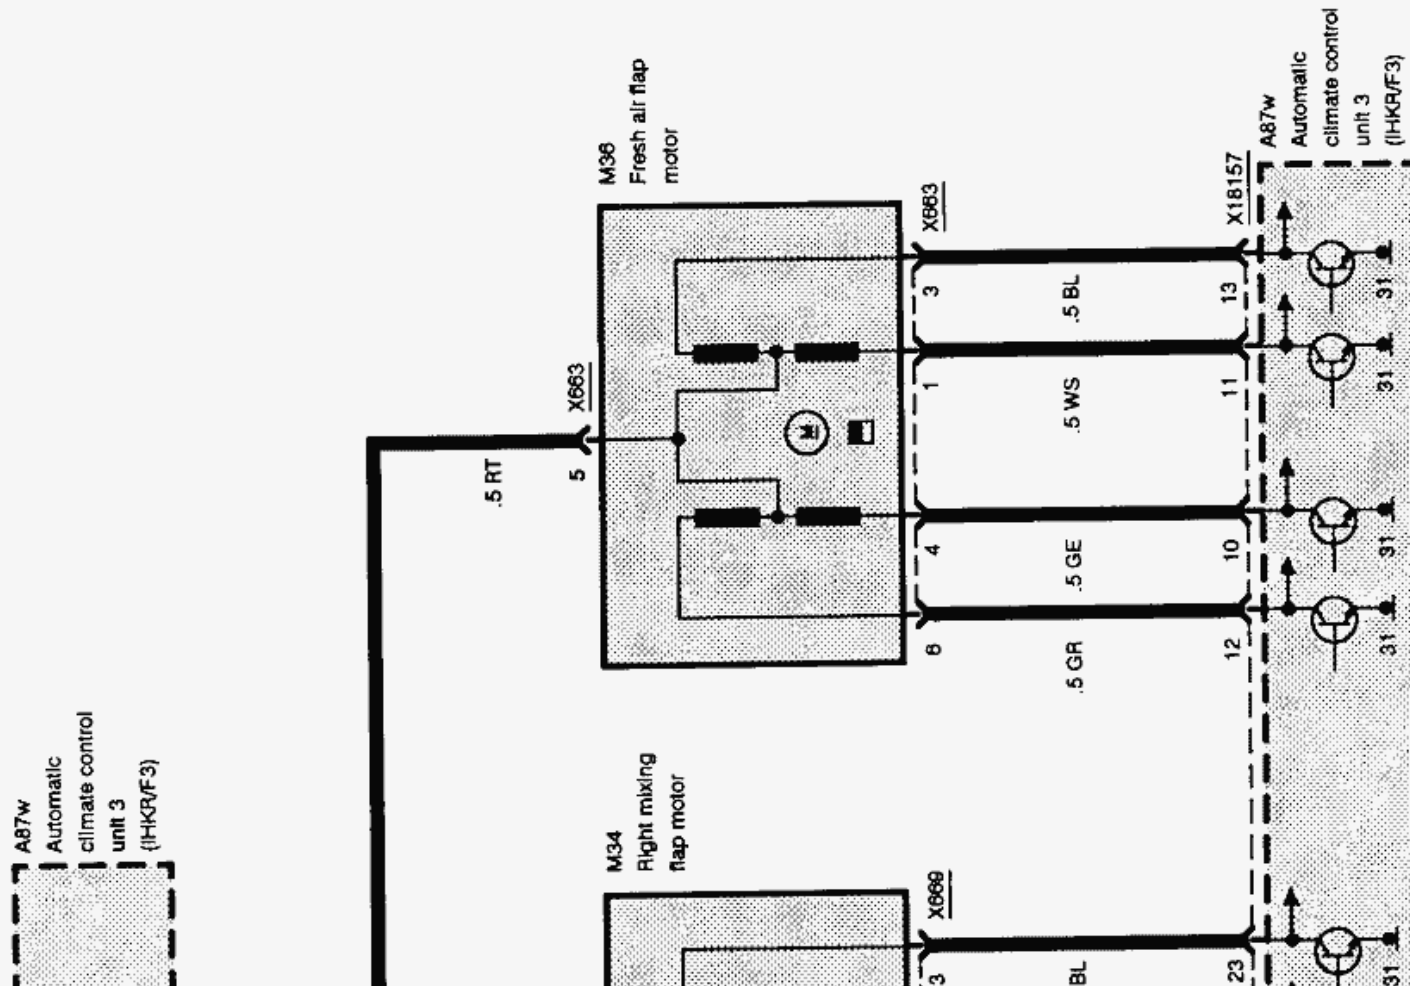

# Automatic climate control with filter (IHKR/F3)


## Air supply

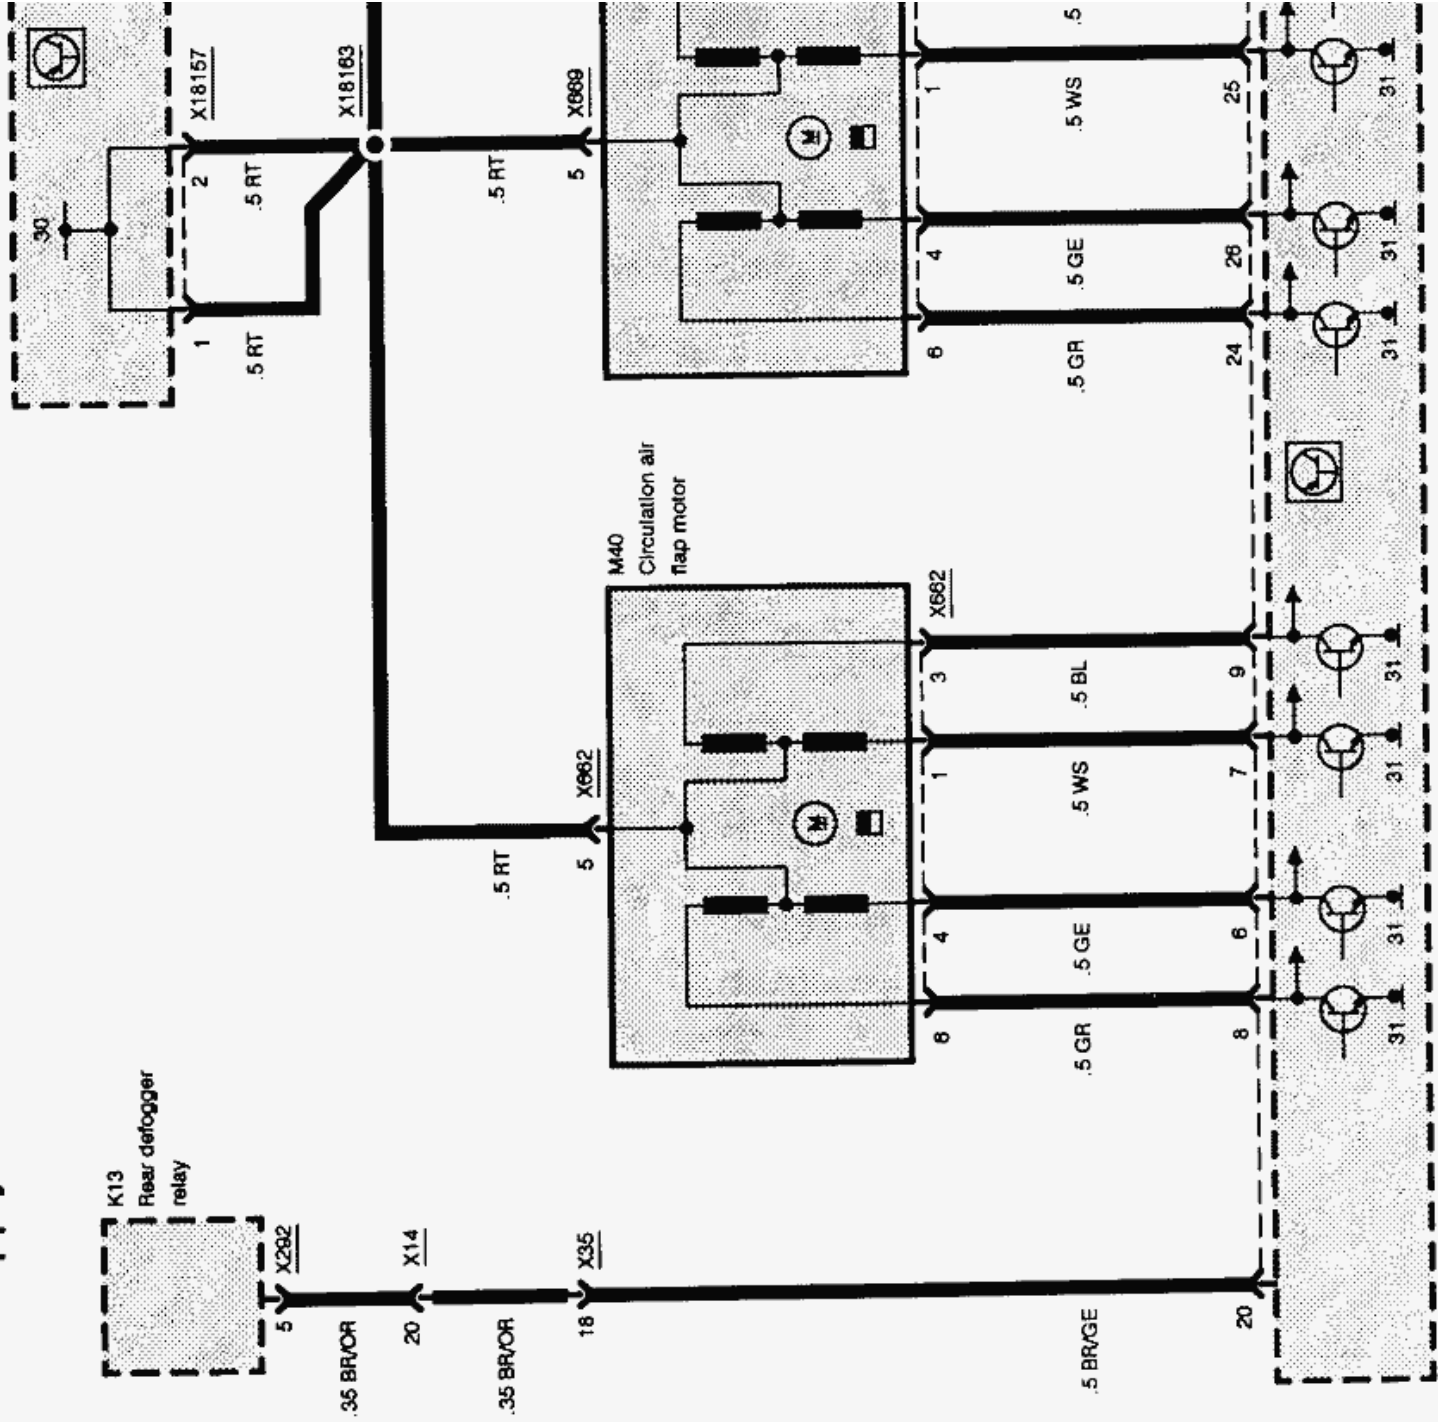

09/93


6450.5-05

1994

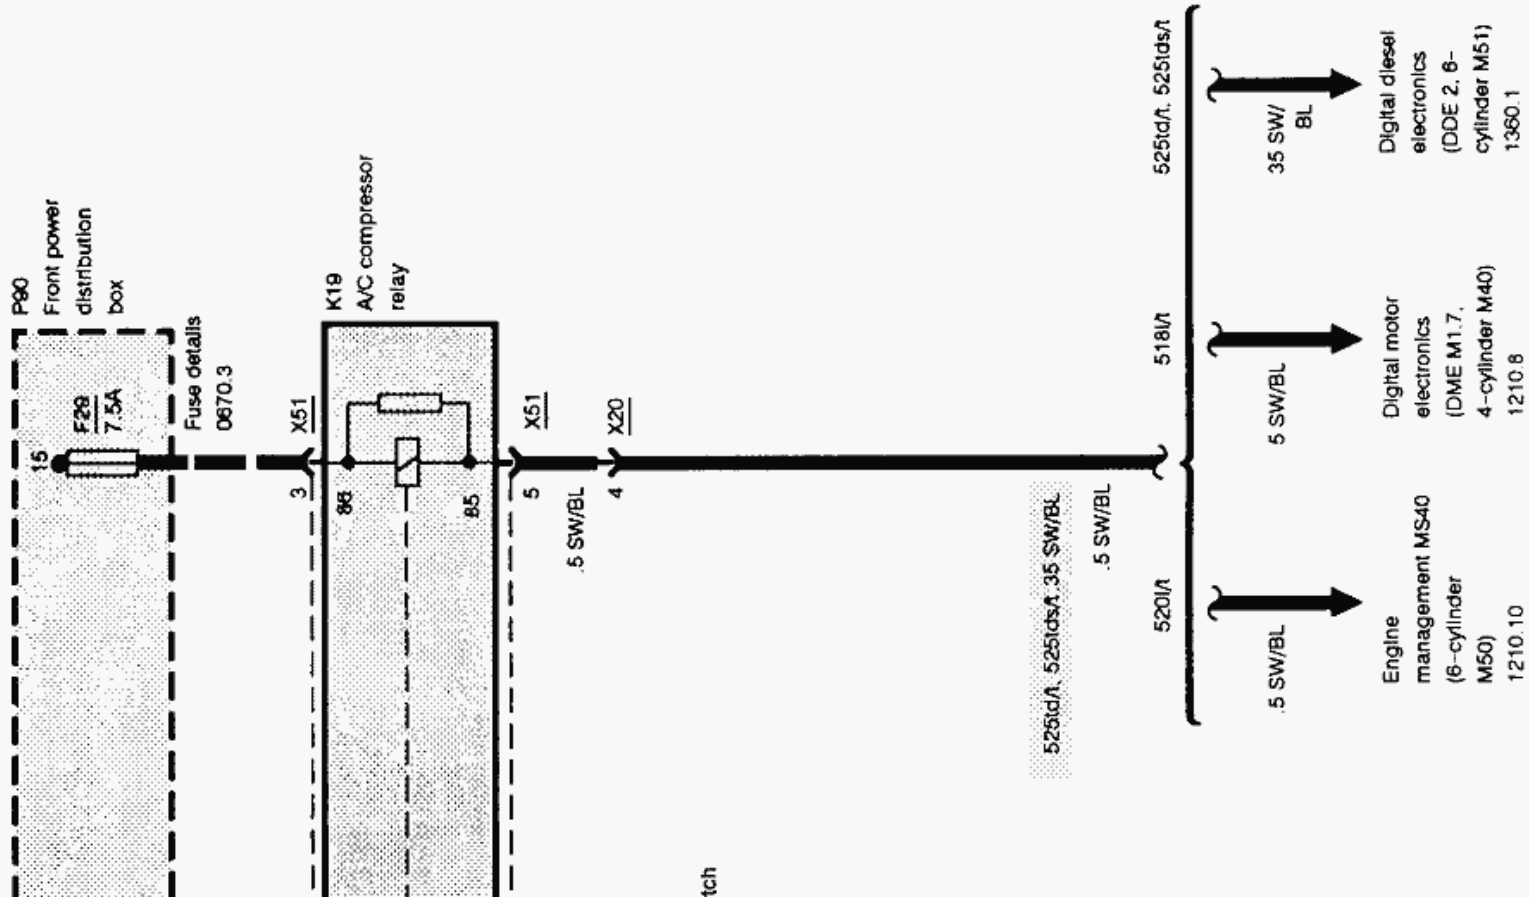

tch

# Automatic climate control with filter (IHKR/F3) Compressor control

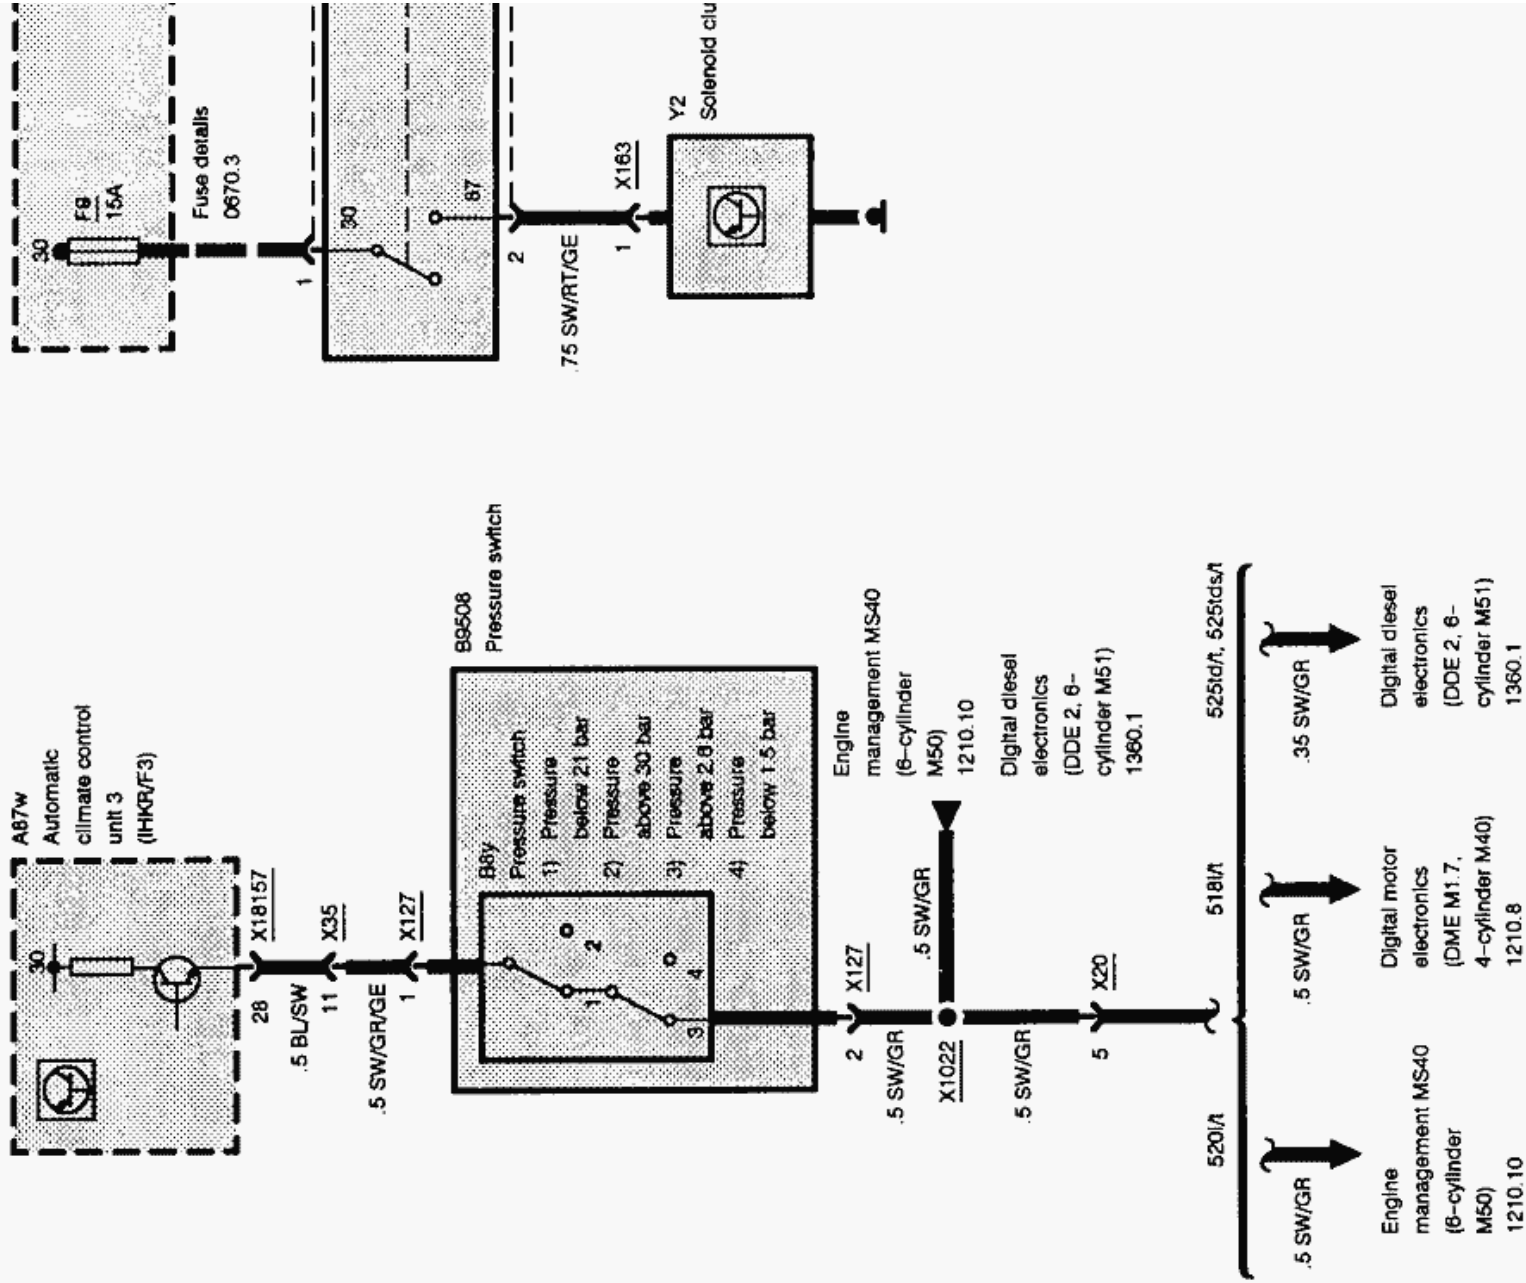







09/93

6450.5-06

1994

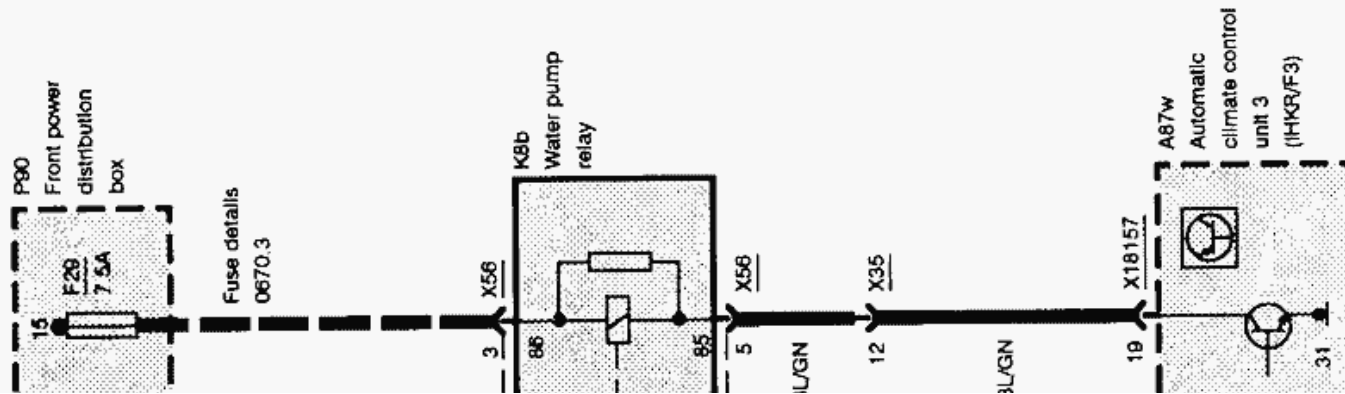

# Automatic climate control with filter (IHKR/F3) Auxiliary water pump

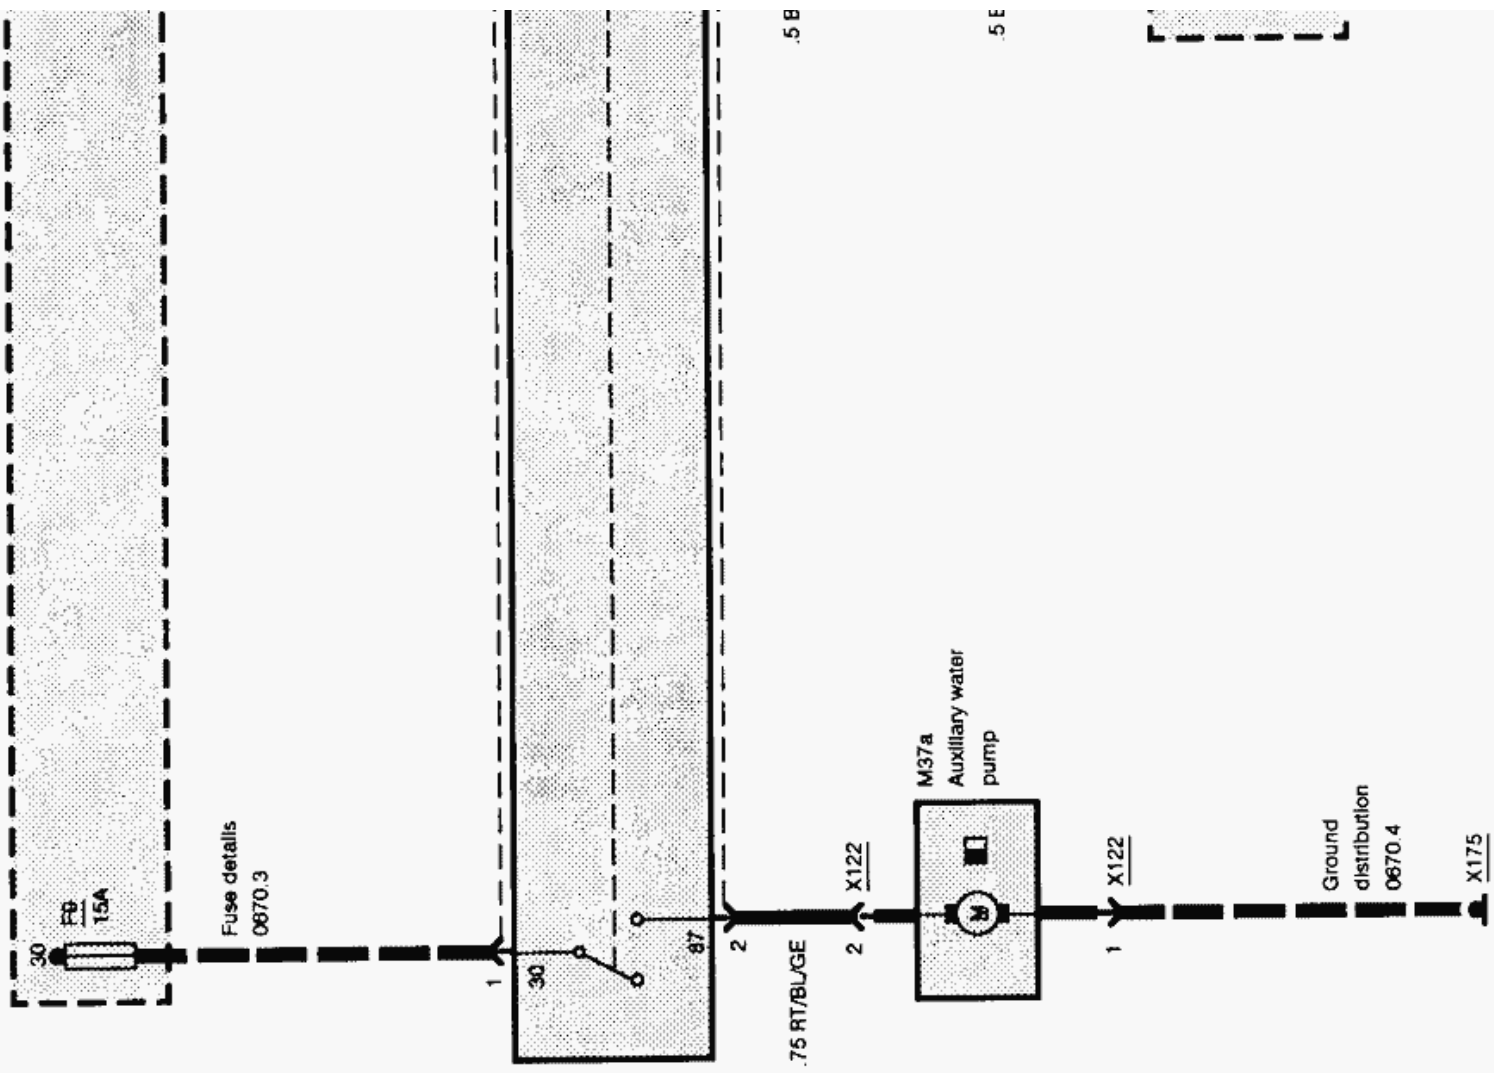

.5 B

.5 E







09/93

6450.5-07

1994

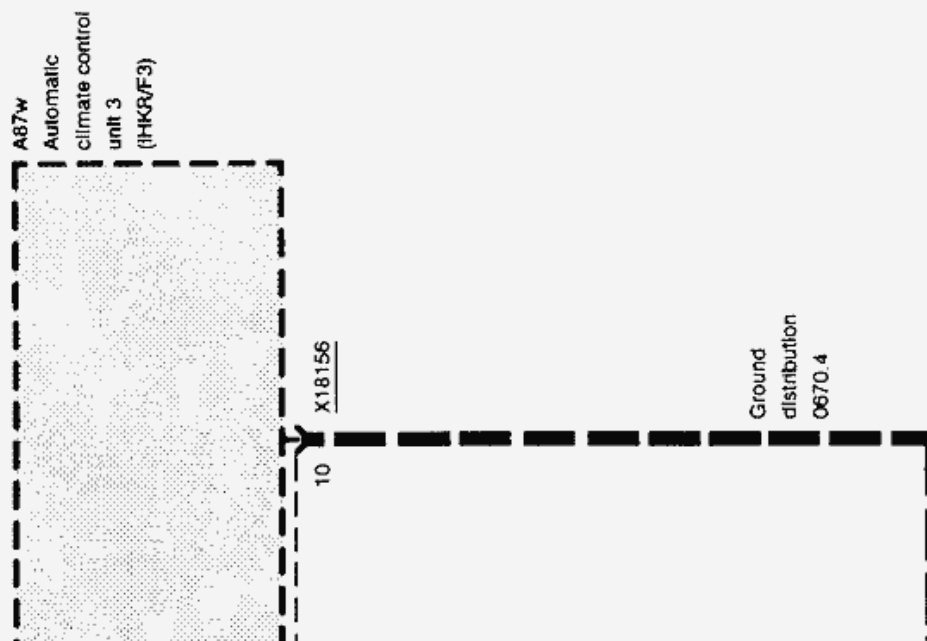

# Automatic climate control with filter (IHKR/F3)

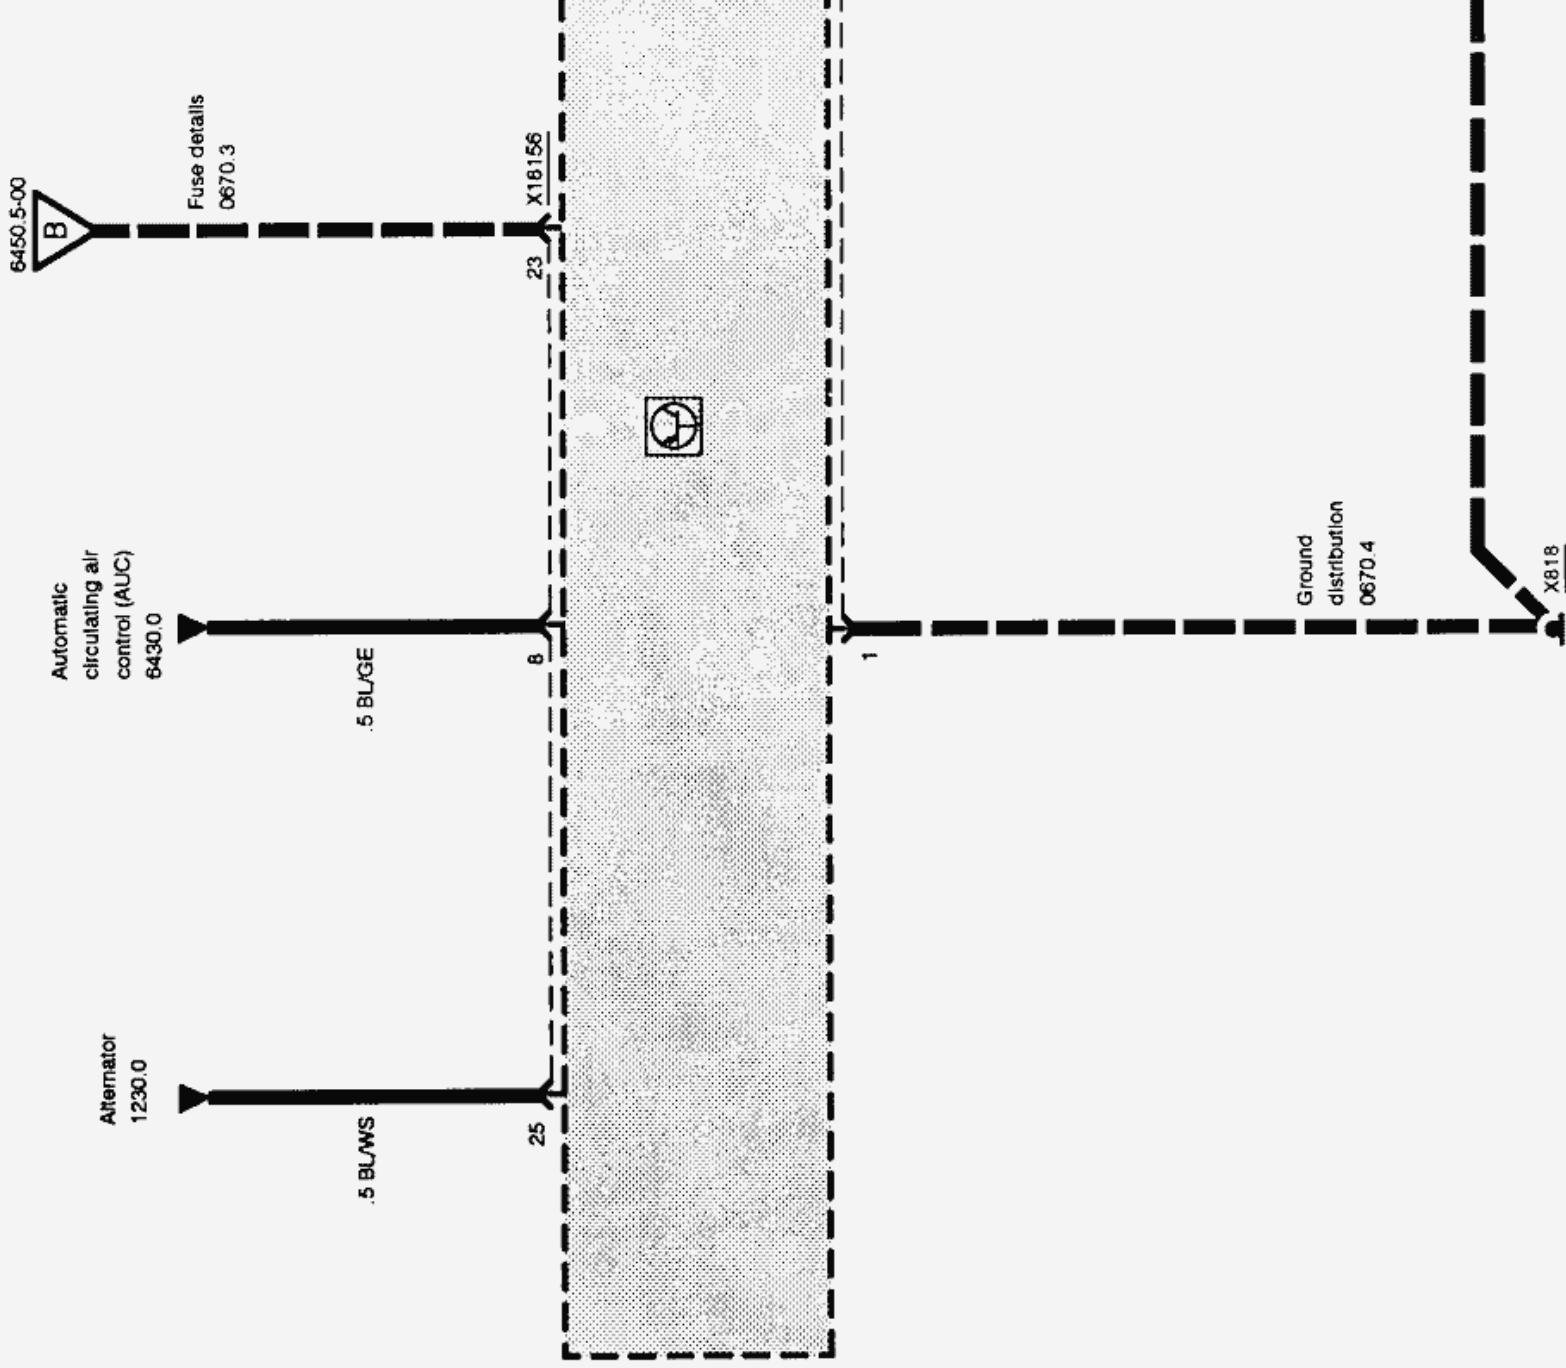





# Widexs

-  [Informatie](#)
-  [Nieuws](#)
-  [Producten](#)
-  [Instellingen](#)
-  [Scripts](#)
-  [Help](#)
-  [Resellers](#)
-  [Mirrors](#)
-  [Formulieren](#)
-  [Webmail](#)

The requested document was

Not Found on this server

[Click here to create your own Error documents](#)

www.

Genoemde prijzen zijn exclusief btw. en domain naam registratie

Momenteel hosten wij **60295** domeinen



[ [Mirrors](#) | [Statistieken](#) ]

Copyright © 2003 WideXS, An ion-ip company. All rights reserved.

**BMW**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Automatic heating control (HR34) - digital


Scheme 6410.1

Pin Assignment X899

Pin	Type	Description/Function	Connection
1	E	Left footwell temperature	Left footwell sensor
2	E	Right footwell temperature	Right footwell sensor
3	E	Right heat exchanger temperature	Right heat exchanger sensor
4	E	Outside temperature	Outside temperature sensor
5	E	Terminal 15	Fuse
6	M	Ground	Ground connection
7	E	Signal, rear window defogger ON	Rear window defogger switch
8	A	Signal, rear window defogger ON	Rear window defogger relay
9	A	Function light, rear window defogger	Rear window defogger switch
10	E	Left heat exchanger temperature	Left heat exchanger sensor
11	A	Activation, right water valve	Right water valve
12	A	Signal, auxiliary water pump	Relay, auxiliary water pump
13	E	Lights, terminal 58 g	Dimmer
14	M	Ground	Ground connection
15	A	Activation, left water valve	Left water valve
16	E	Tacho/speed signal	DME control unit/DDE control unit
17	M	518i/t, 520i/t: not used 525td/t, 525tds/t: Ground	Ground connection
18		not used	


E = Input, A = Output, M = Ground

**BMW** Automatic heating control (HR34) - digital

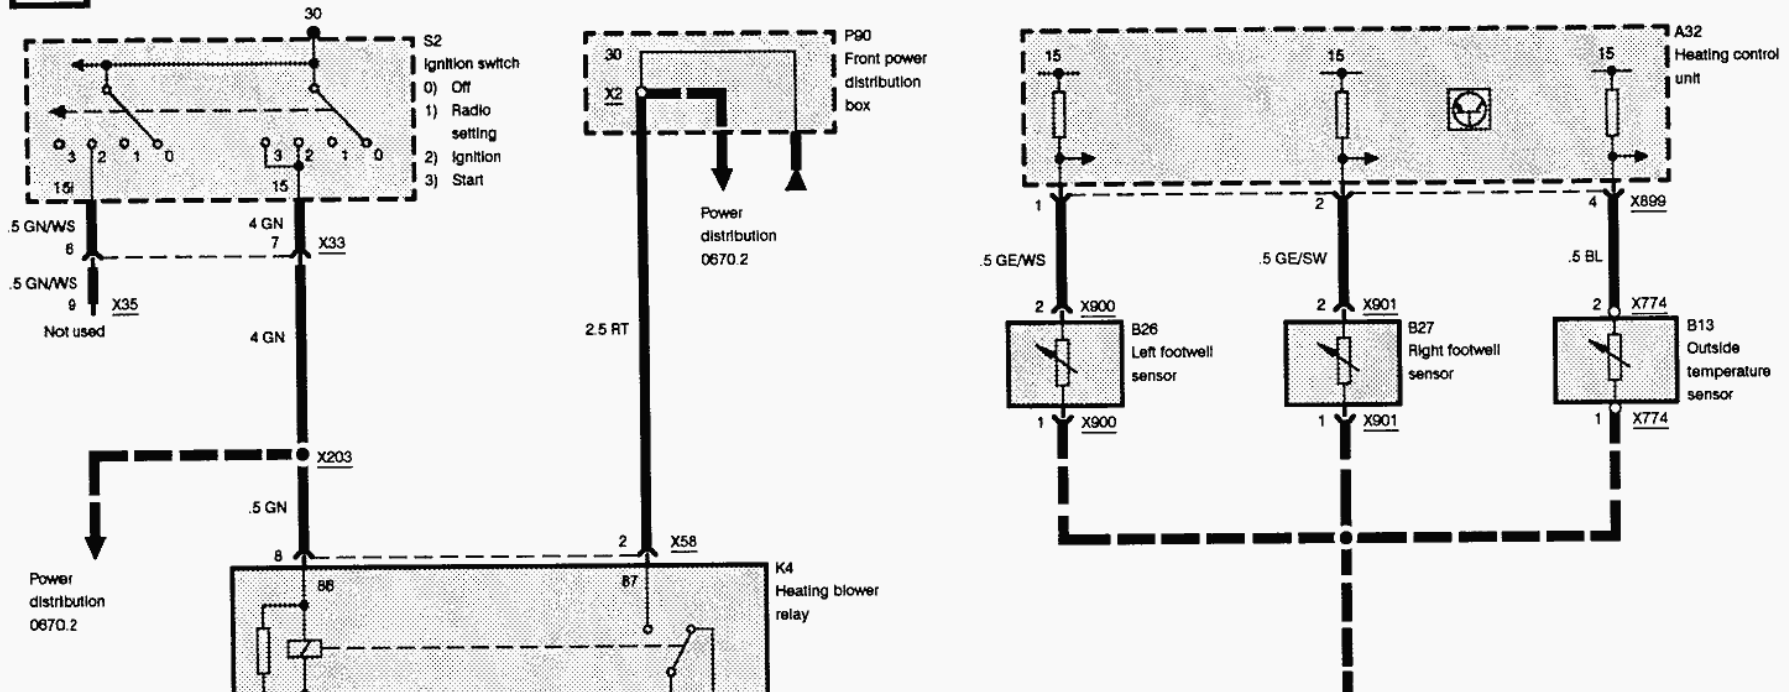


09/93

6410.1-00

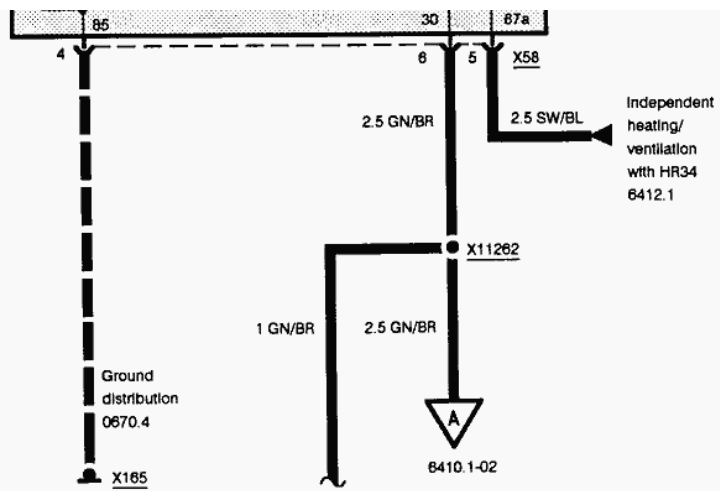


1994

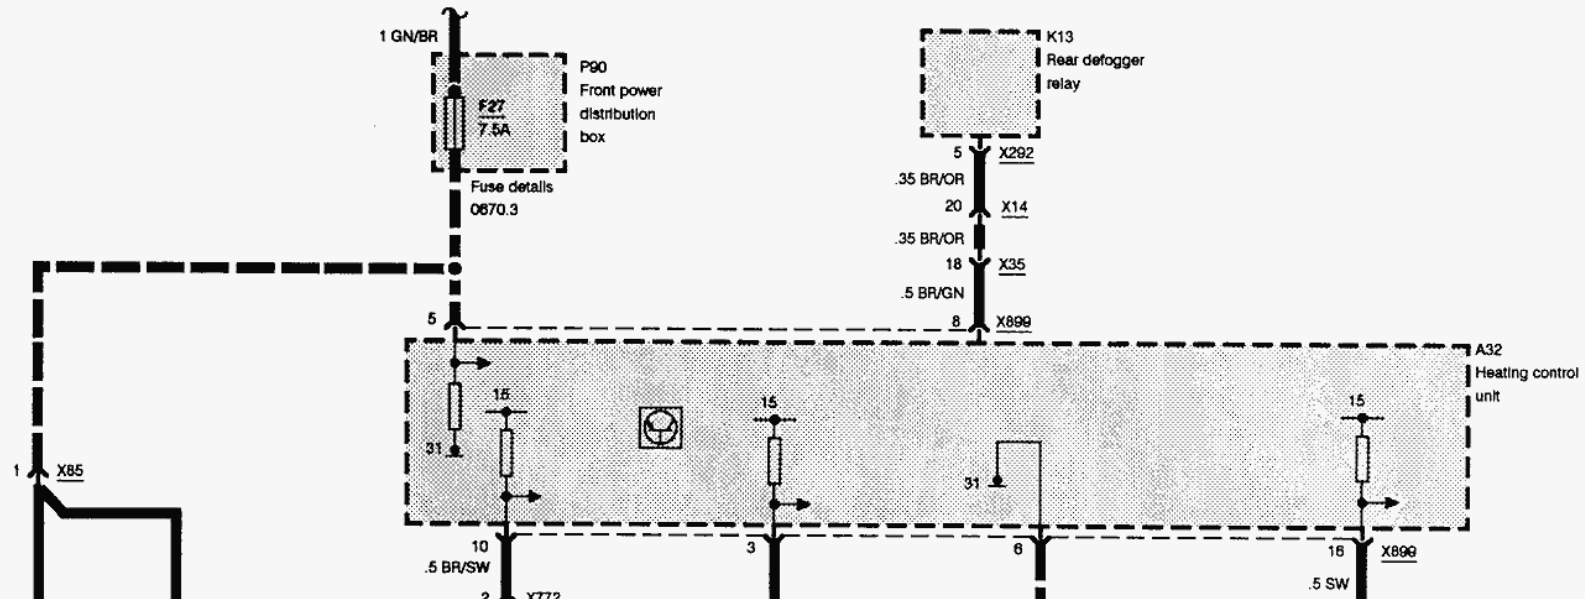



09/93  
6410.1-




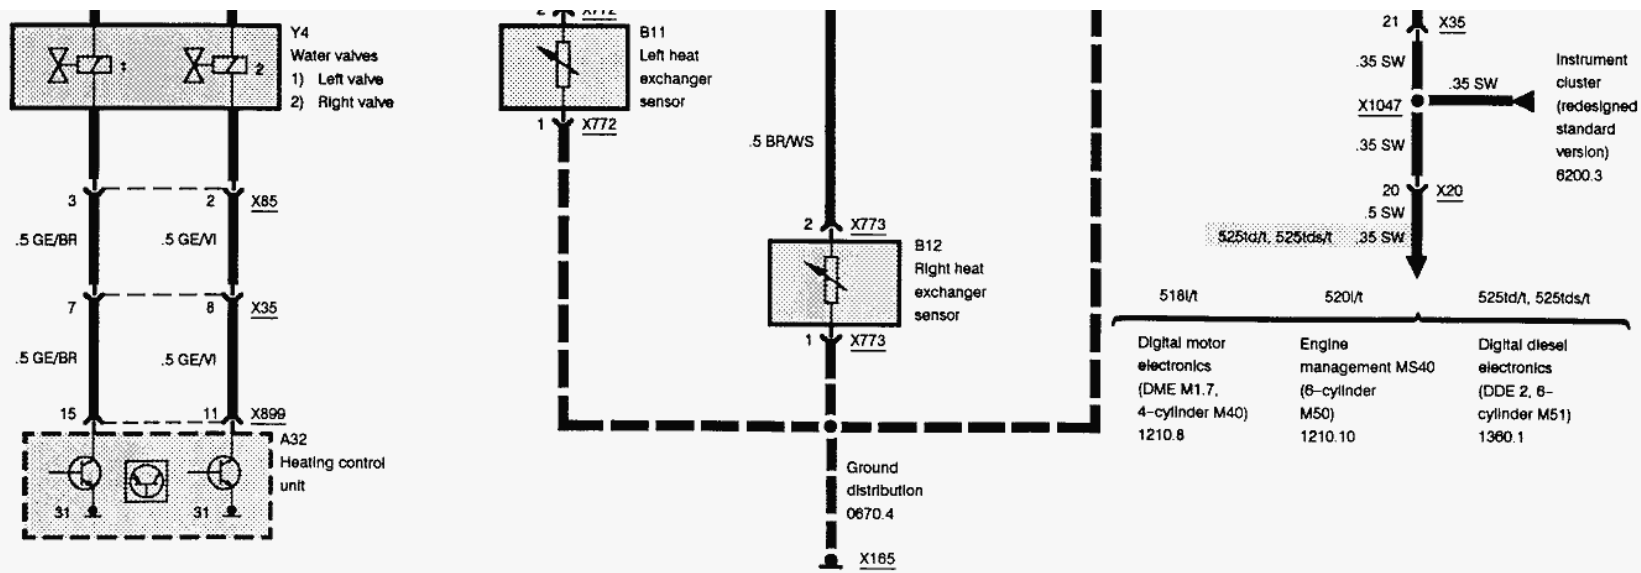


01  
1994

**BMW 5 Automatic heating control (HR34) - digital**

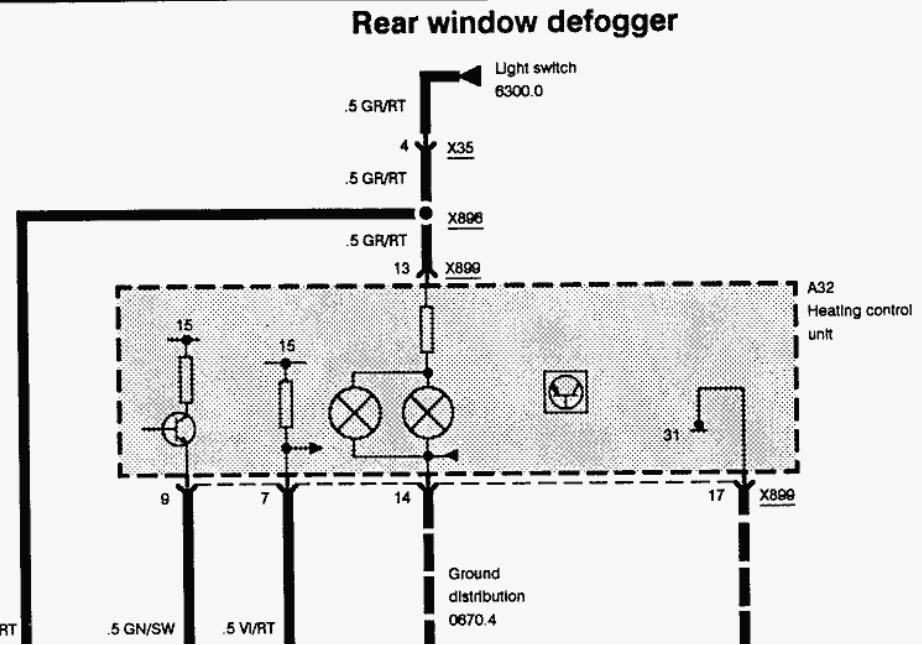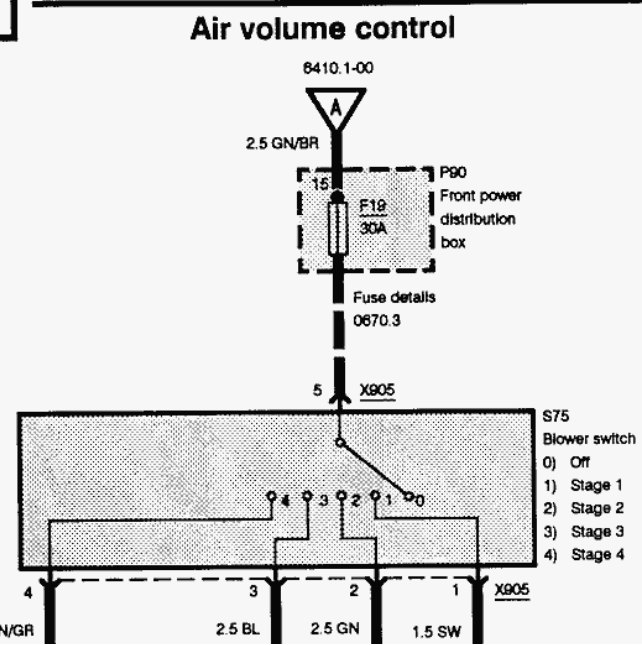


09/93  
6410.1-

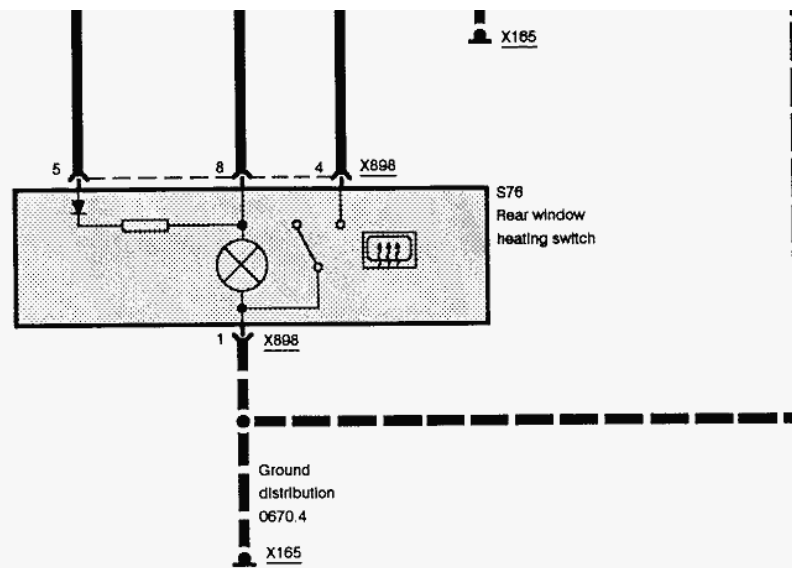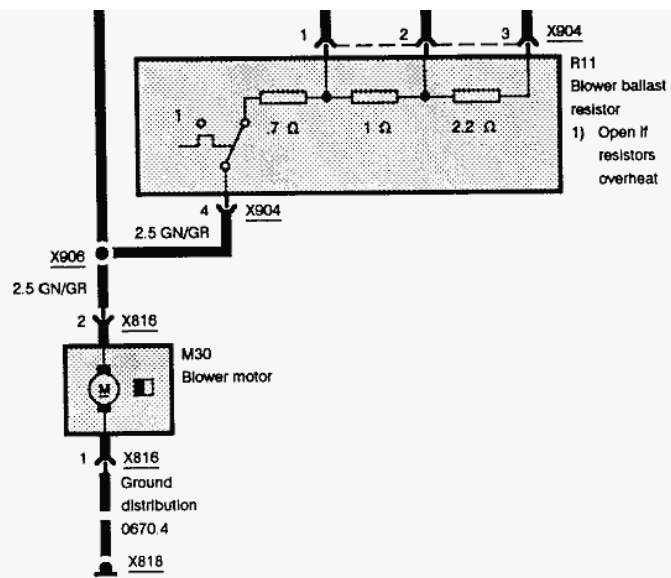

02  
1994

**BMW 5** Automatic heating control (HR34) - digital  
Water pump

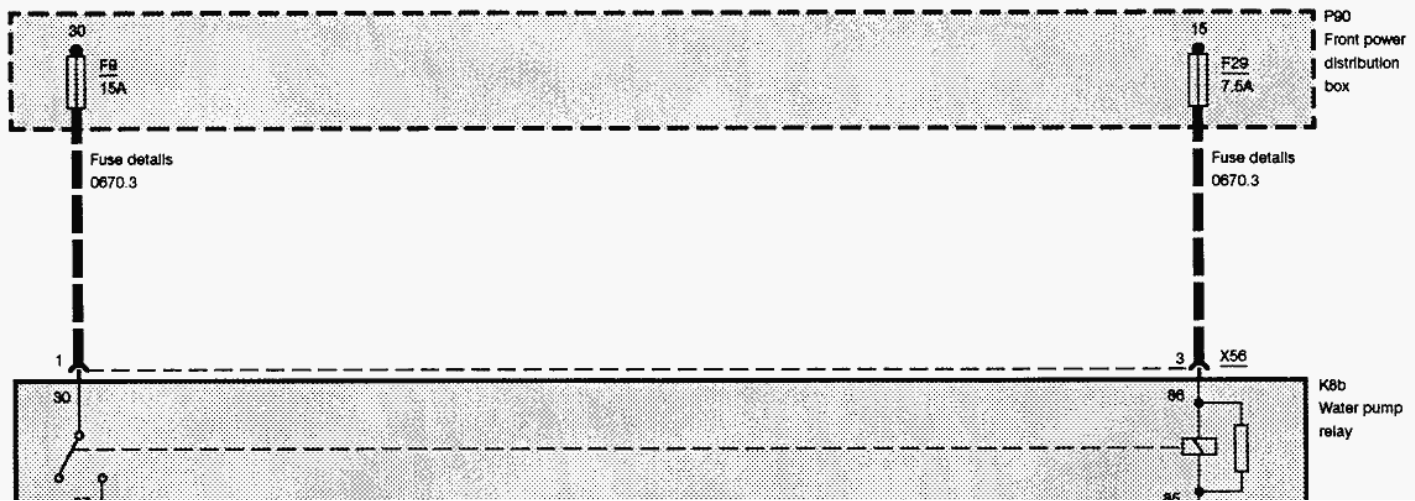

09/93  
64



10.1-03  
1994

**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Automatic heating control (IHRF3)


Scheme 6410.6

Pin Assignment X899

Pin	Type	Description/Function	Connection
1	E	Left footwell temperature	Left footwell sensor
2	E	Right footwell temperature	Right footwell sensor
3	E	Right heat exchanger temperature	Right heat exchanger sensor
4	E	Outside temperature	Outside temperature sensor
5	E	Terminal 15	Fuse
6	M	Ground	Ground connection
7	E	Signal, rear window defogger ON	Rear window defogger switch
8	A	Signal, rear window defogger ON	Rear window defogger relay
9	A	Function light, rear window defogger	Rear window defogger switch
10	E	Left heat exchanger temperature	Left heat exchanger sensor
11	A	Activation, right water valve	Right water valve
12	A	Signal, auxiliary water pump	Relay, auxiliary water pump
13	E	Lights, terminal 58 g	Dimmer
14	M	Ground	Ground connection
15	A	Activation, left water valve	Left water valve
16	E	Tacho/speed signal	DME control unit/DDE control unit
17	M	518i/t, 520i/t: not used 525td/t, 525tds/t: Ground	Ground connection
18		not used	



E = Input, A = Output, M = Ground

**BMW 5** Automatic heating control (IHRF3)

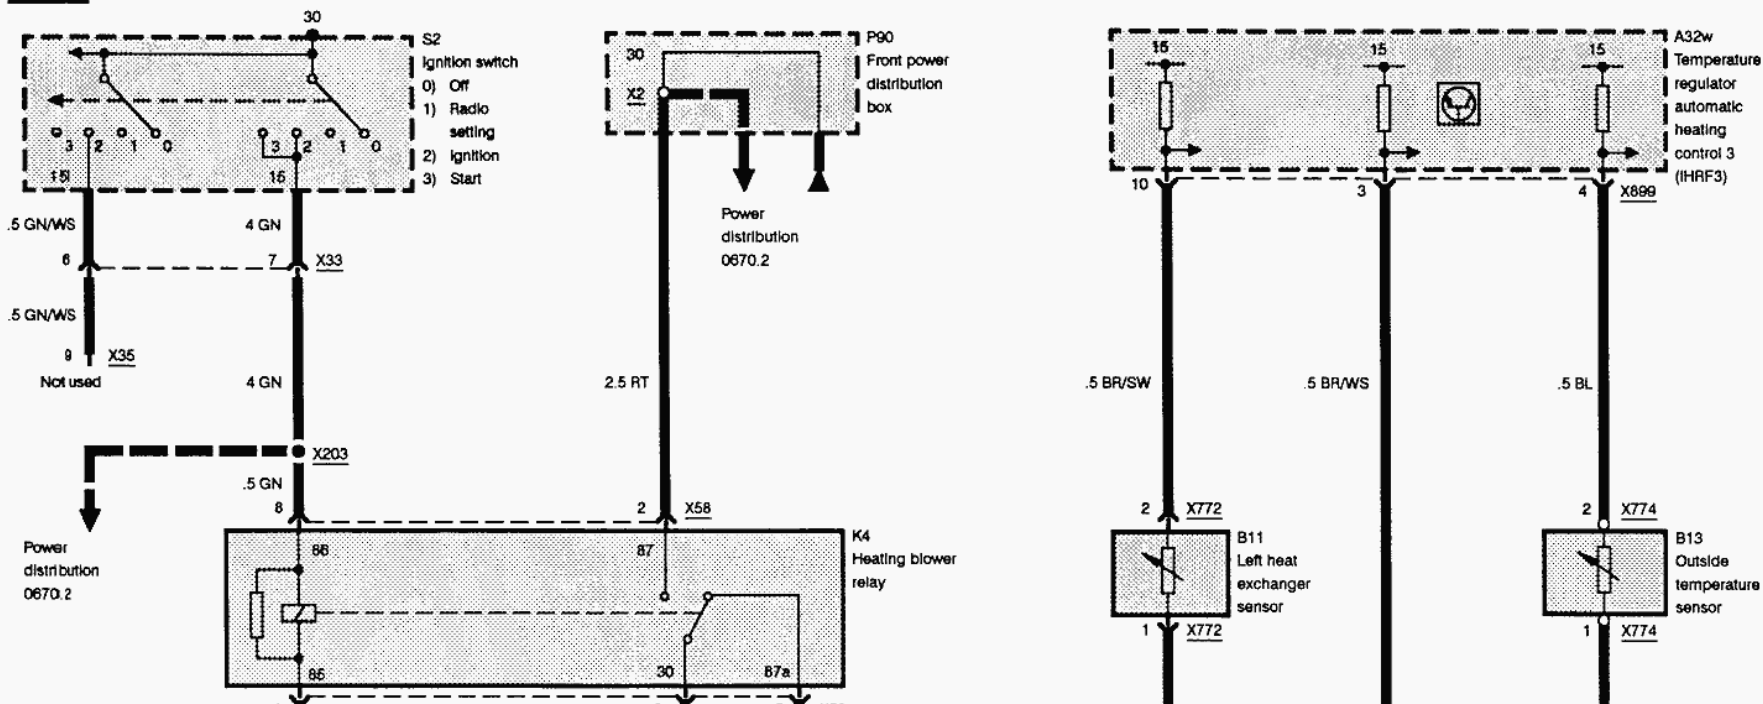


09/93

6410.6-00

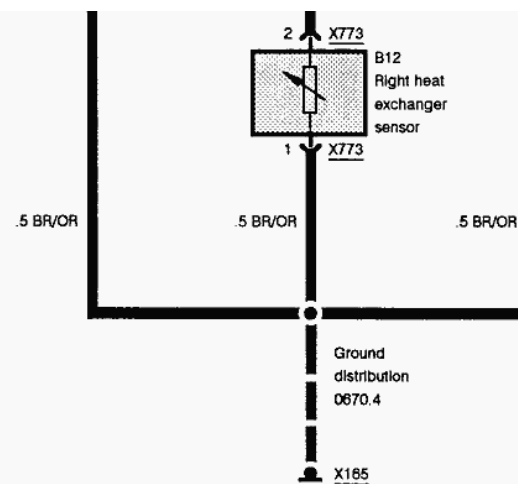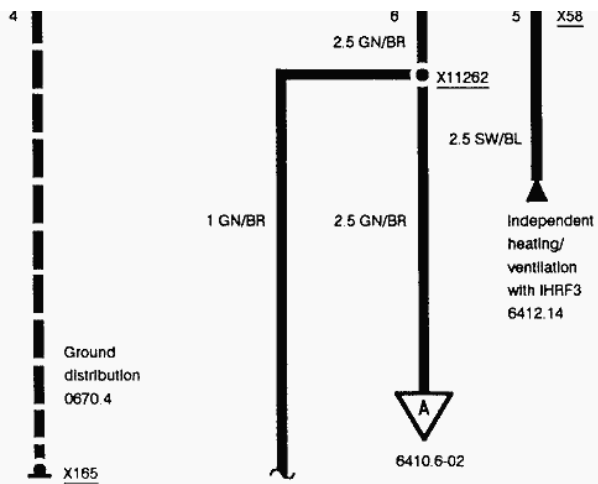


1994

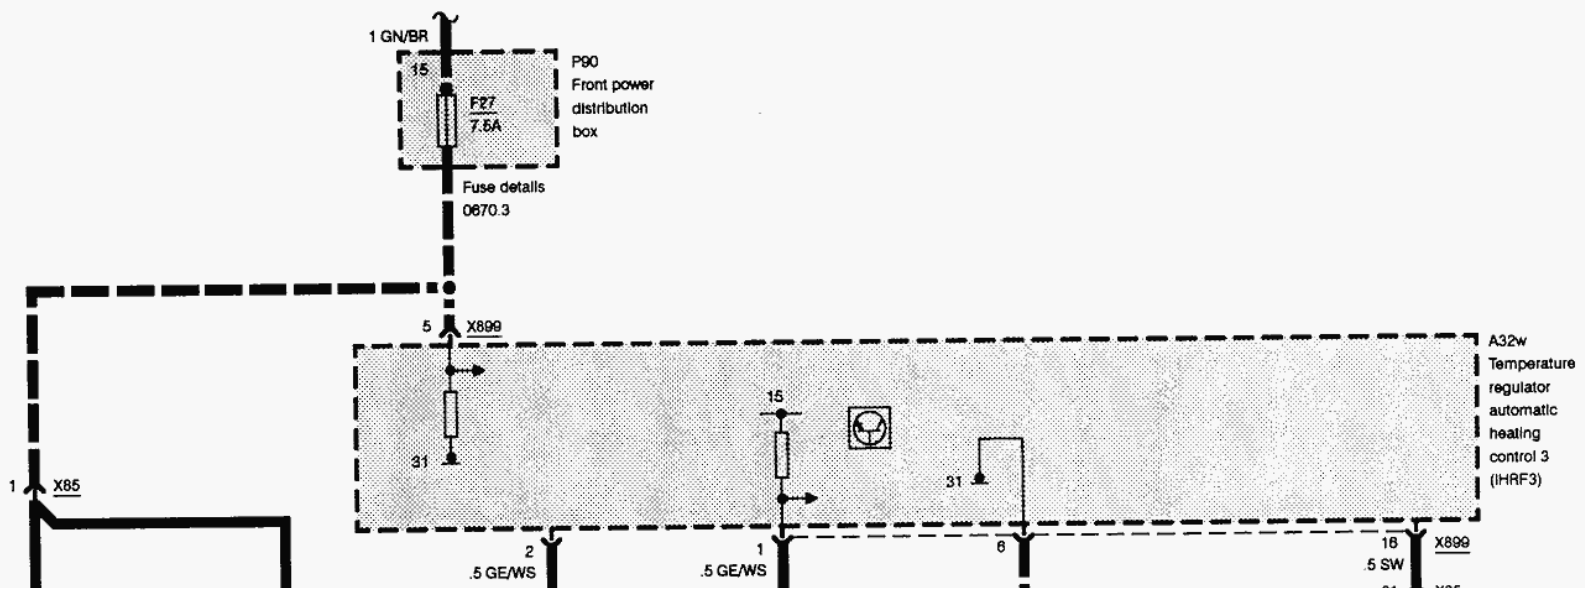

09/93


6410.6-

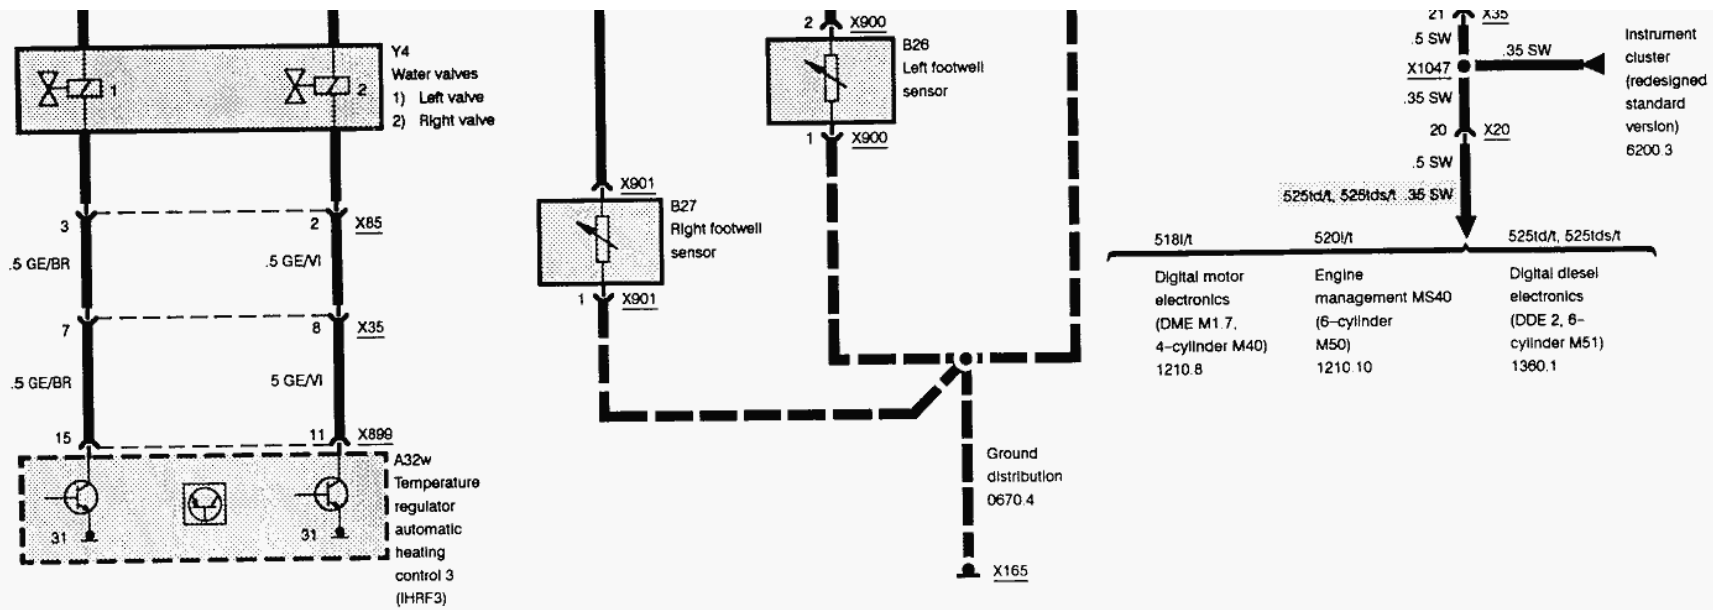


01  
1994

**BMW 5 Automatic heating control (IHRF3)**



**Air volume control**

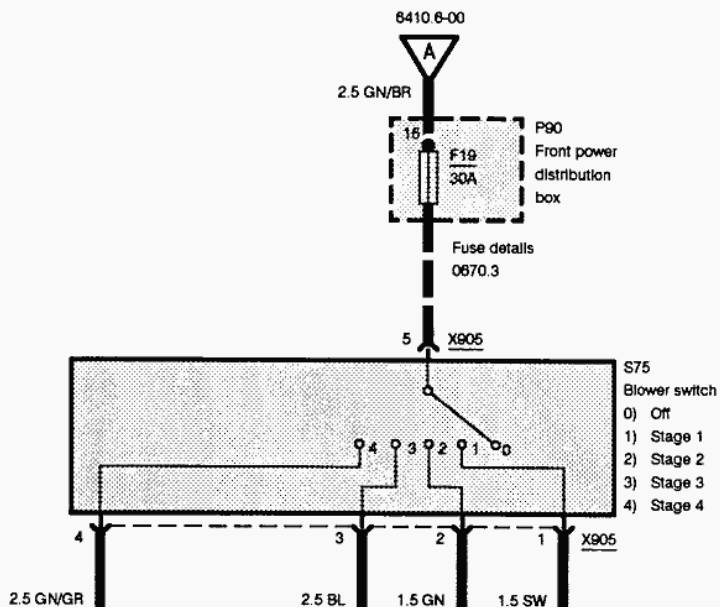

**Rear window defogger**

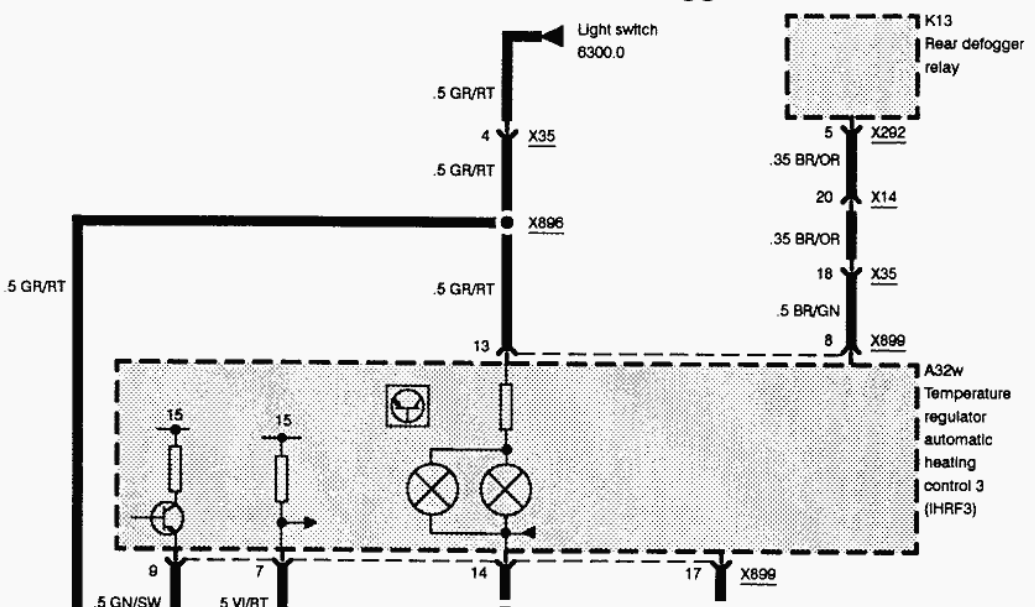


09/93  
6410.6-

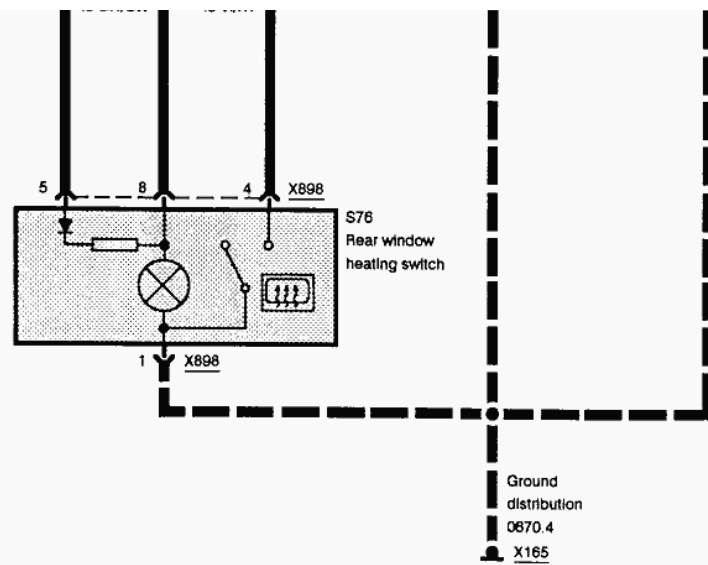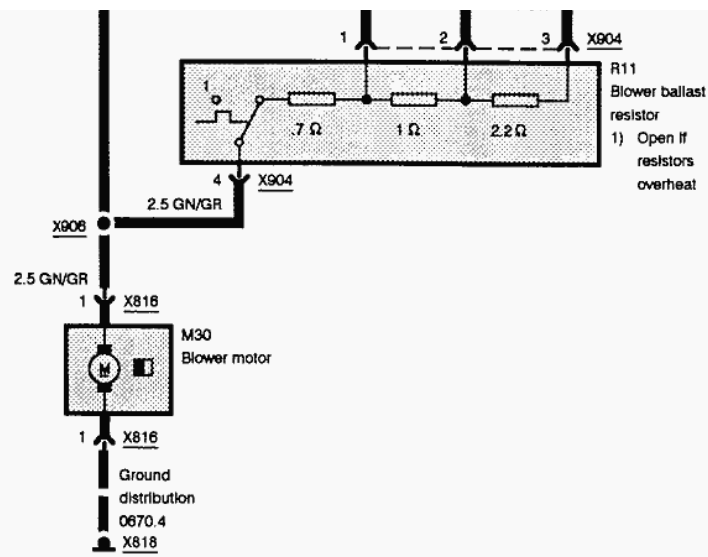

02  
1994

**BMW 5** Automatic heating control (IHRF3)  
**Water pump**

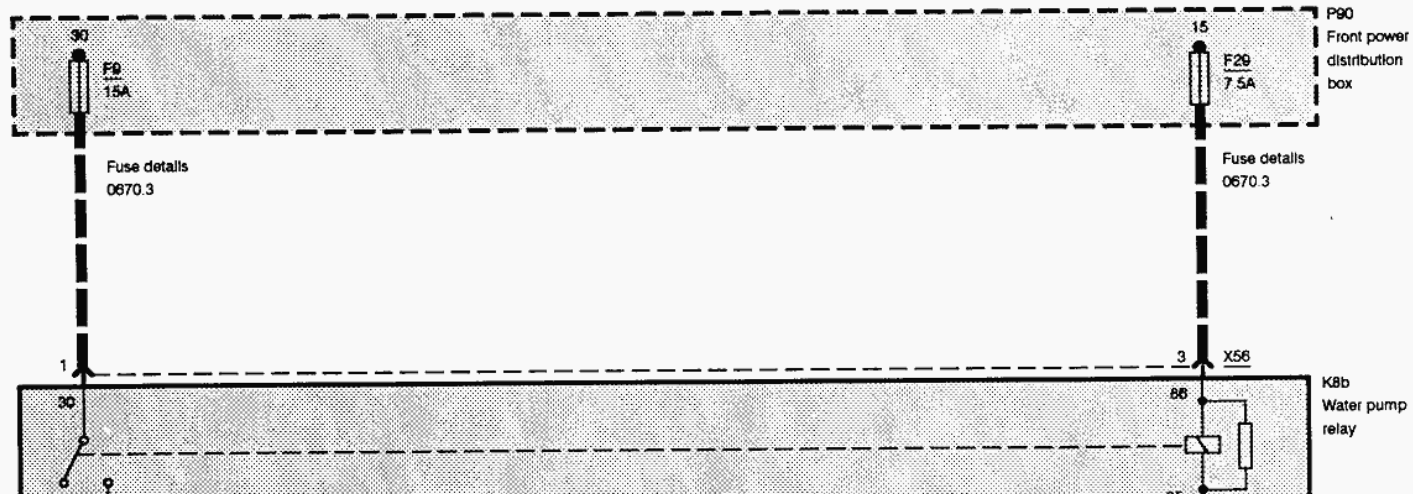

09/93  
64








# Power distribution Front power distribution box

518i/t

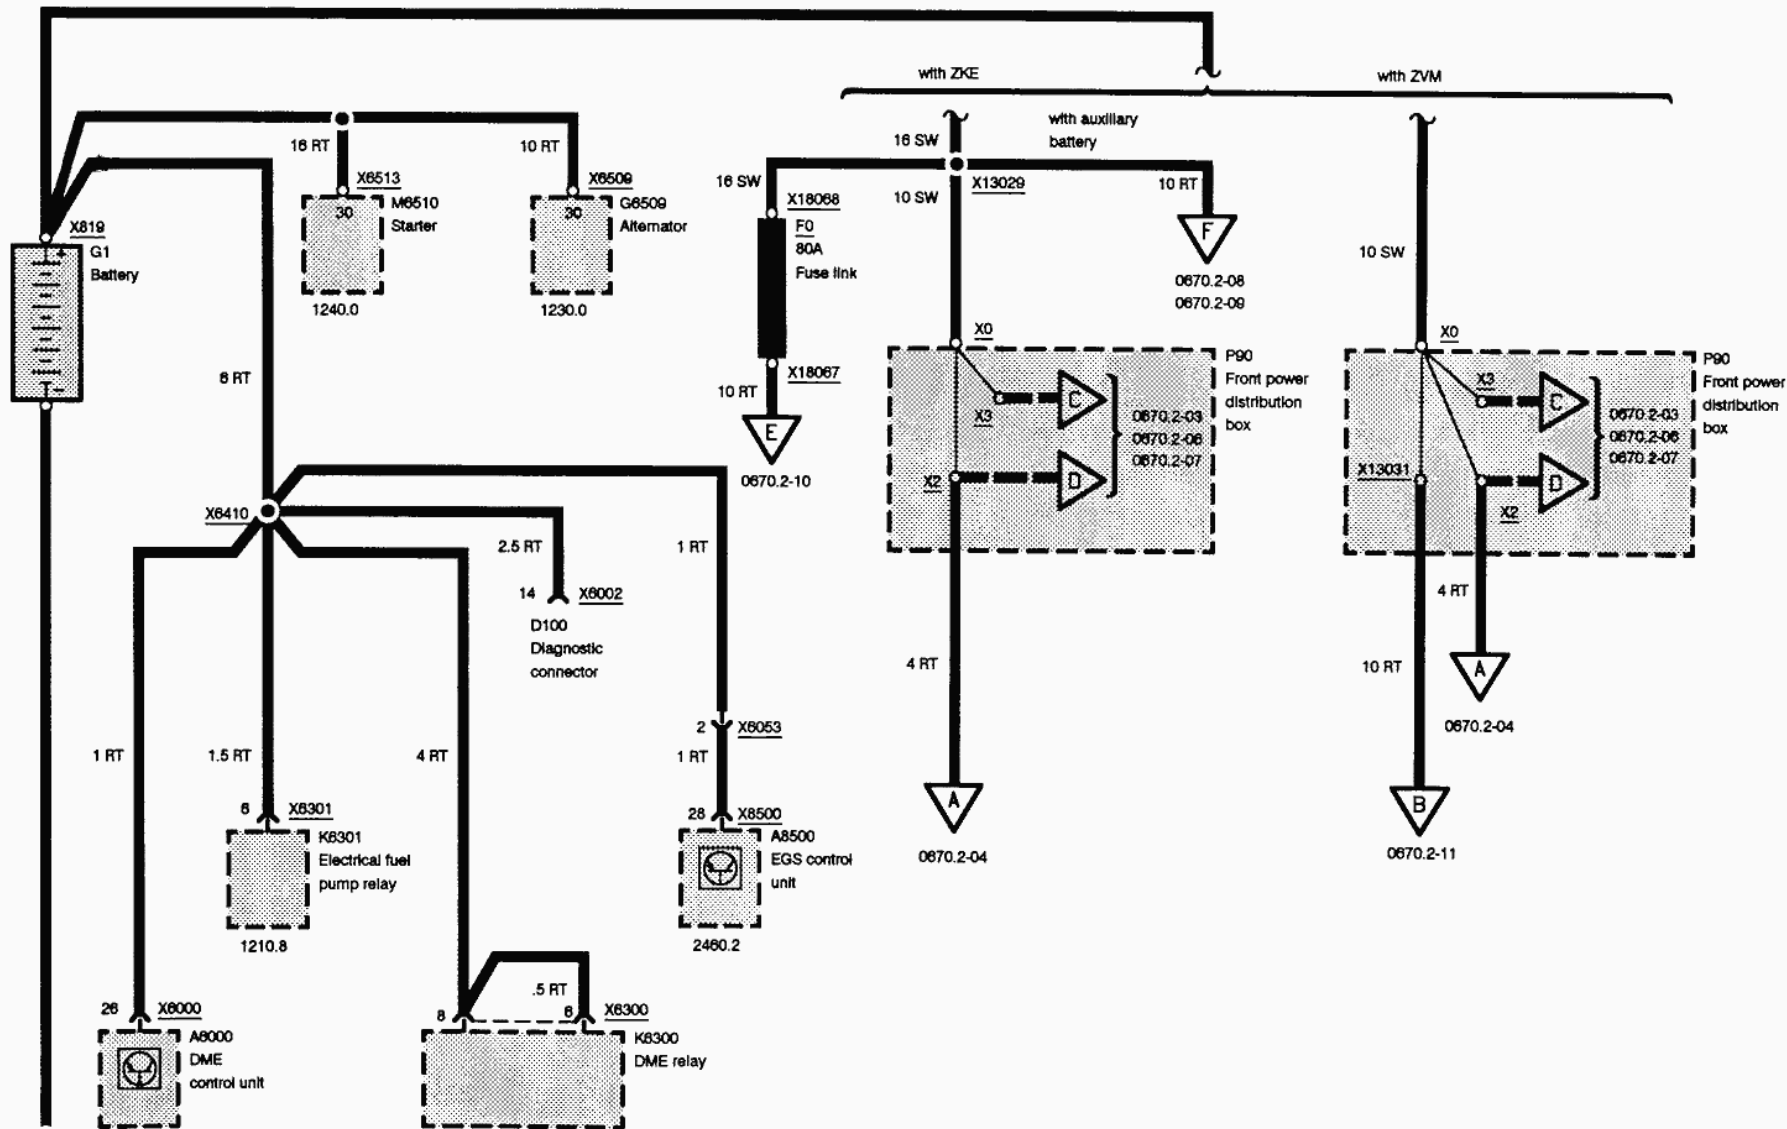


09/93

0670.2-00

19

# BMW 5 Power distribution Front power distribution box

520i/t

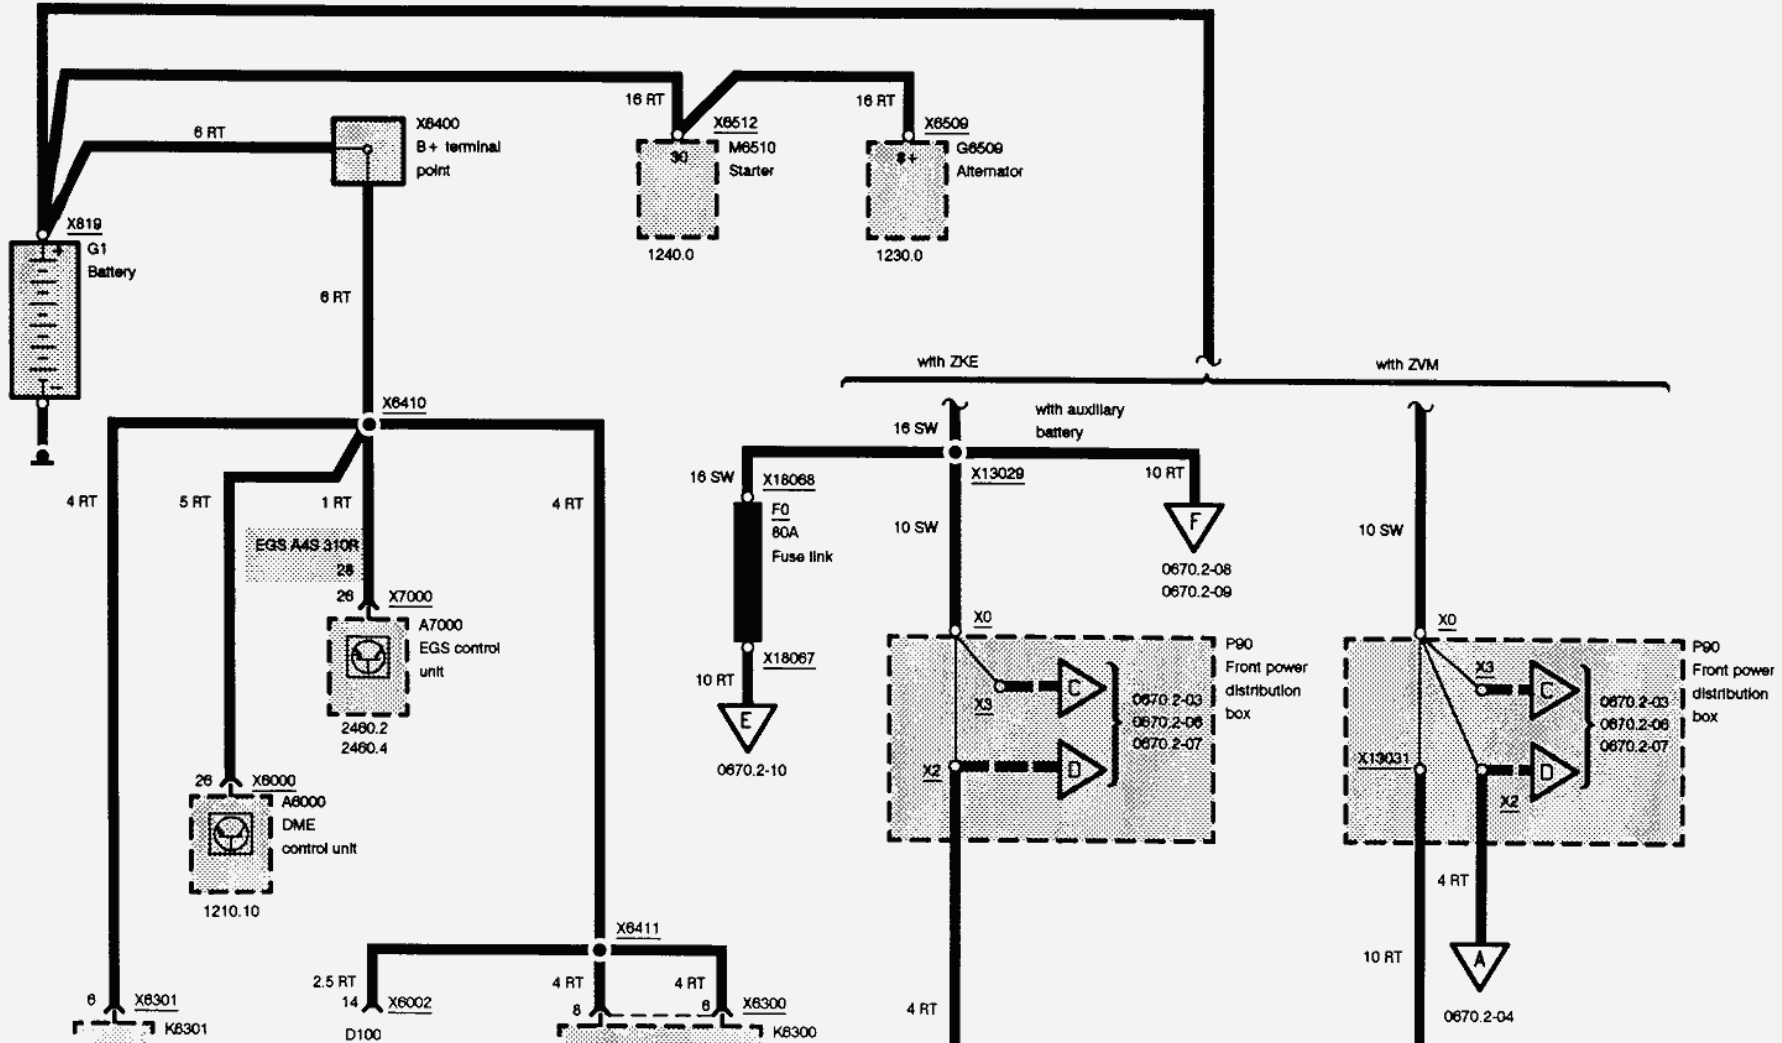

09/93

 
0670.2-01



Electrical fuel pump relay

1210.10

Diagnostic connector



DME relay

1210.10



0670.2-04



0670.2-11

1994




# Power distribution

## Front power distribution box

525td/t, 525tds/t


09/93


0670.2-02

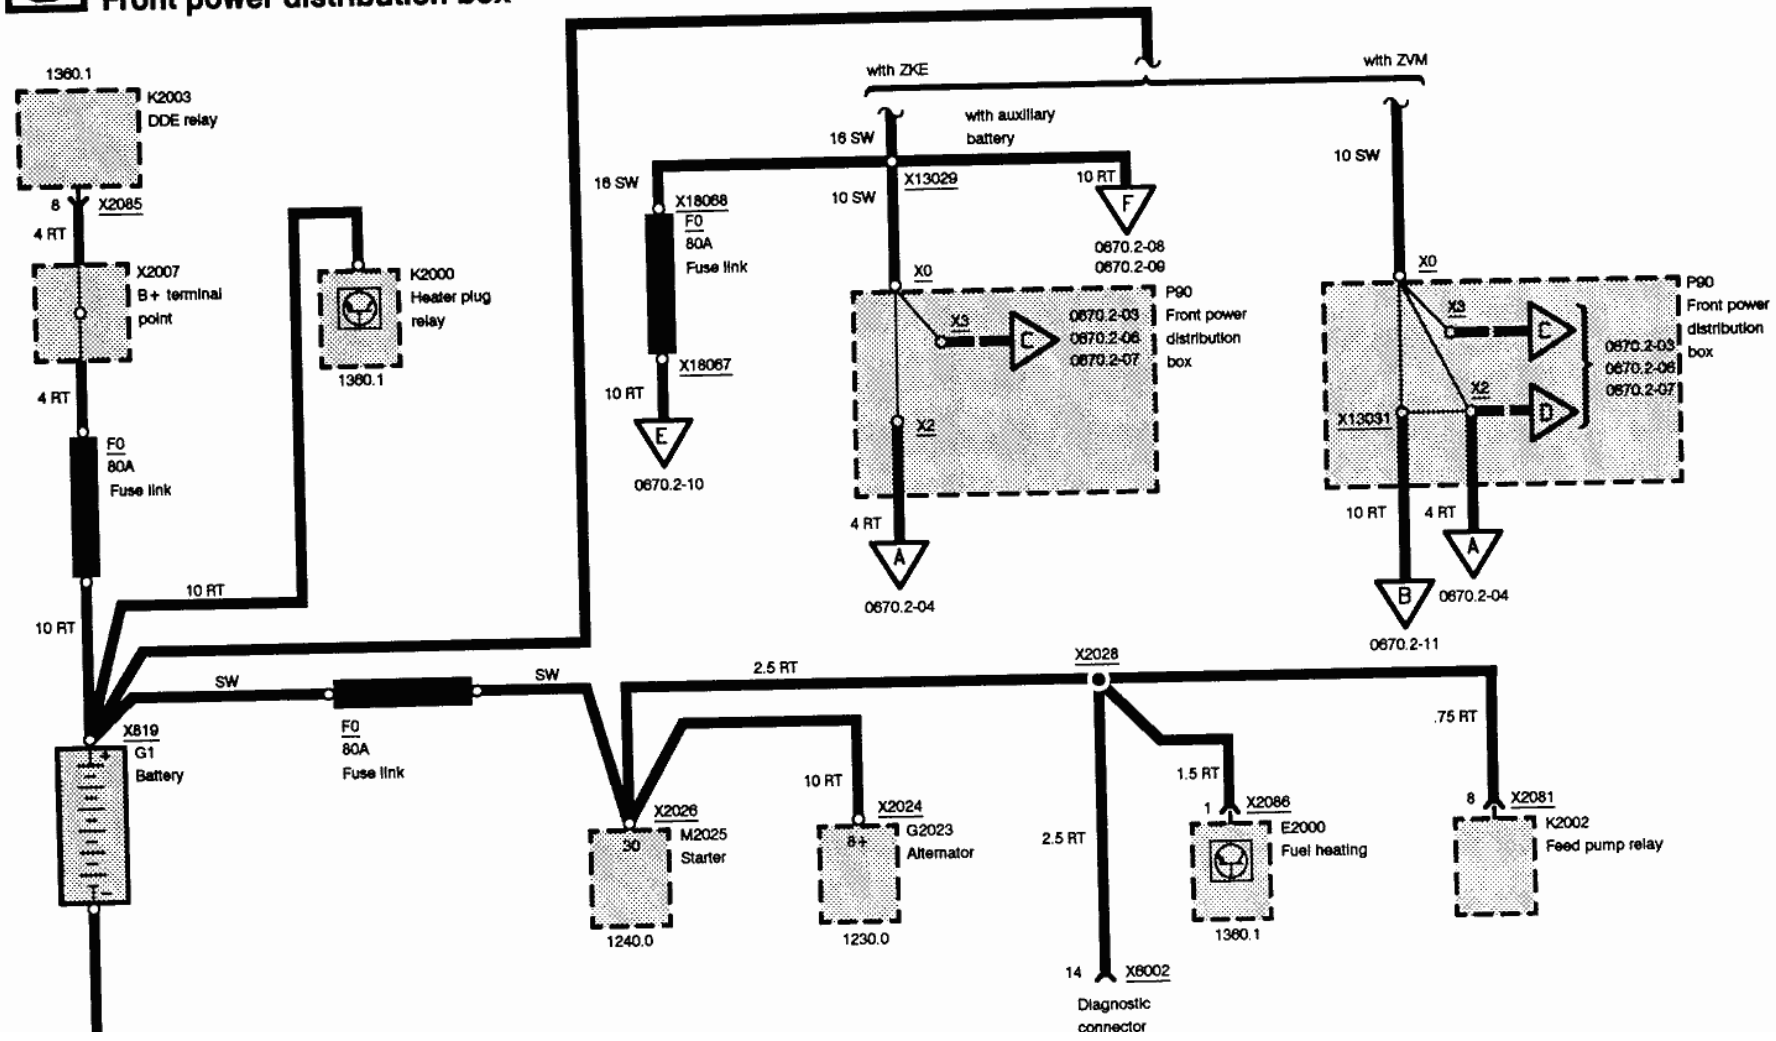



# Power distribution Front power distribution box

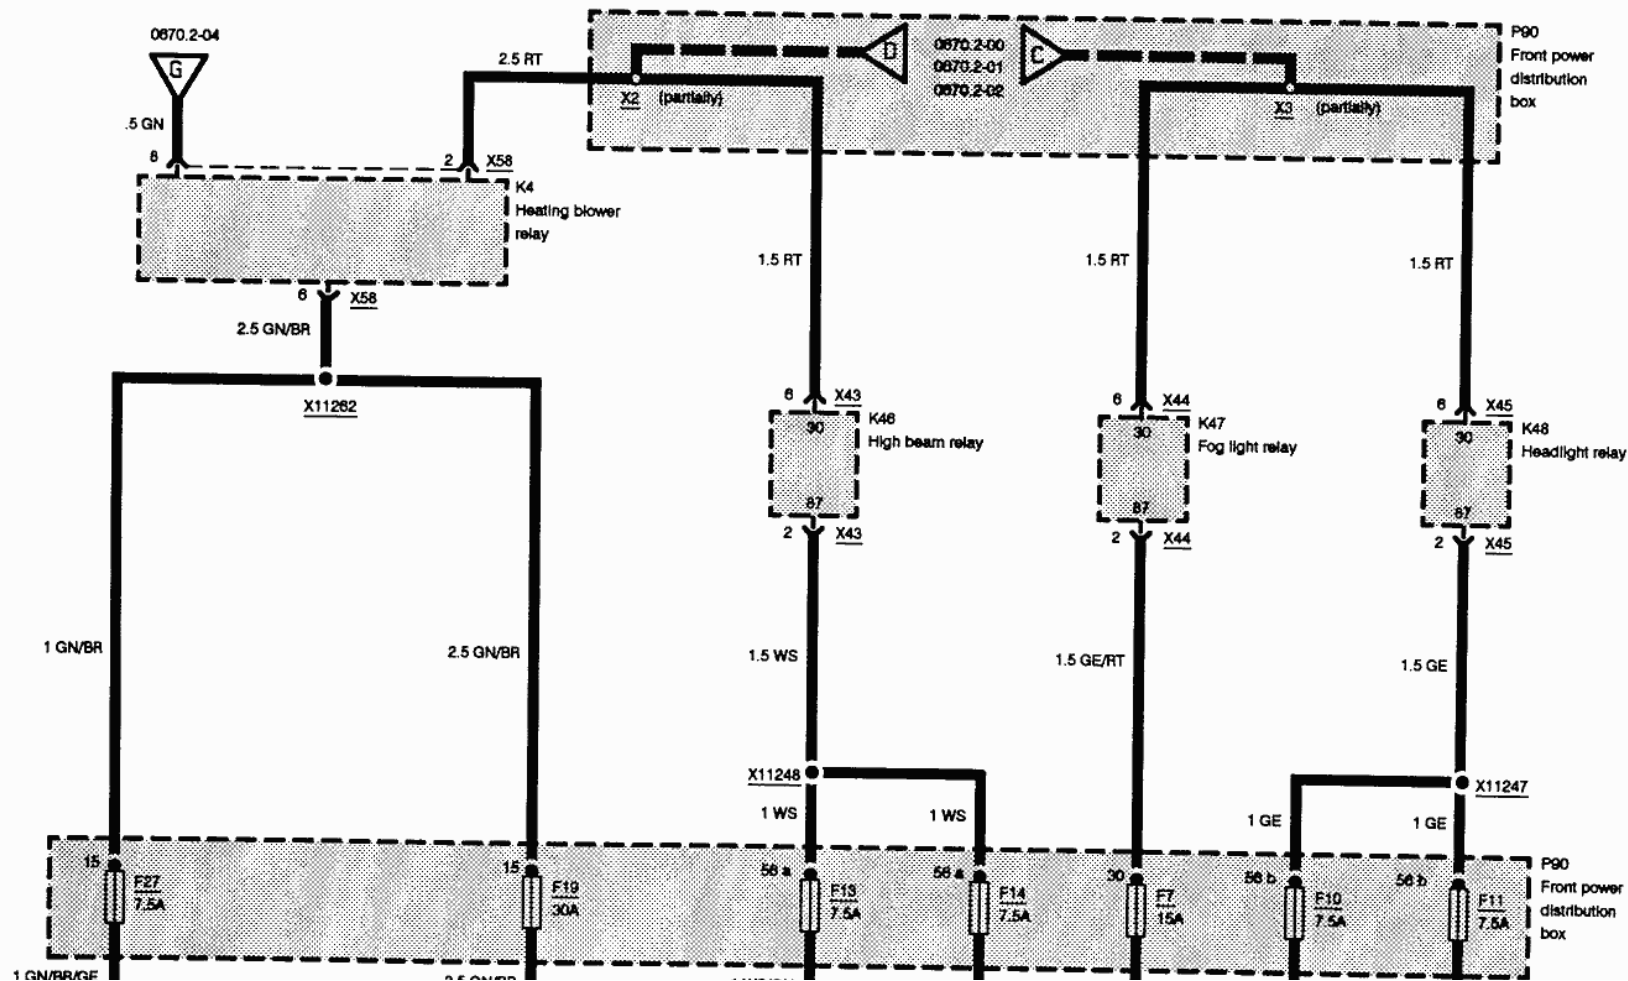

 



1994

**BMW 5** Power distribution


09/93

0670.2-04

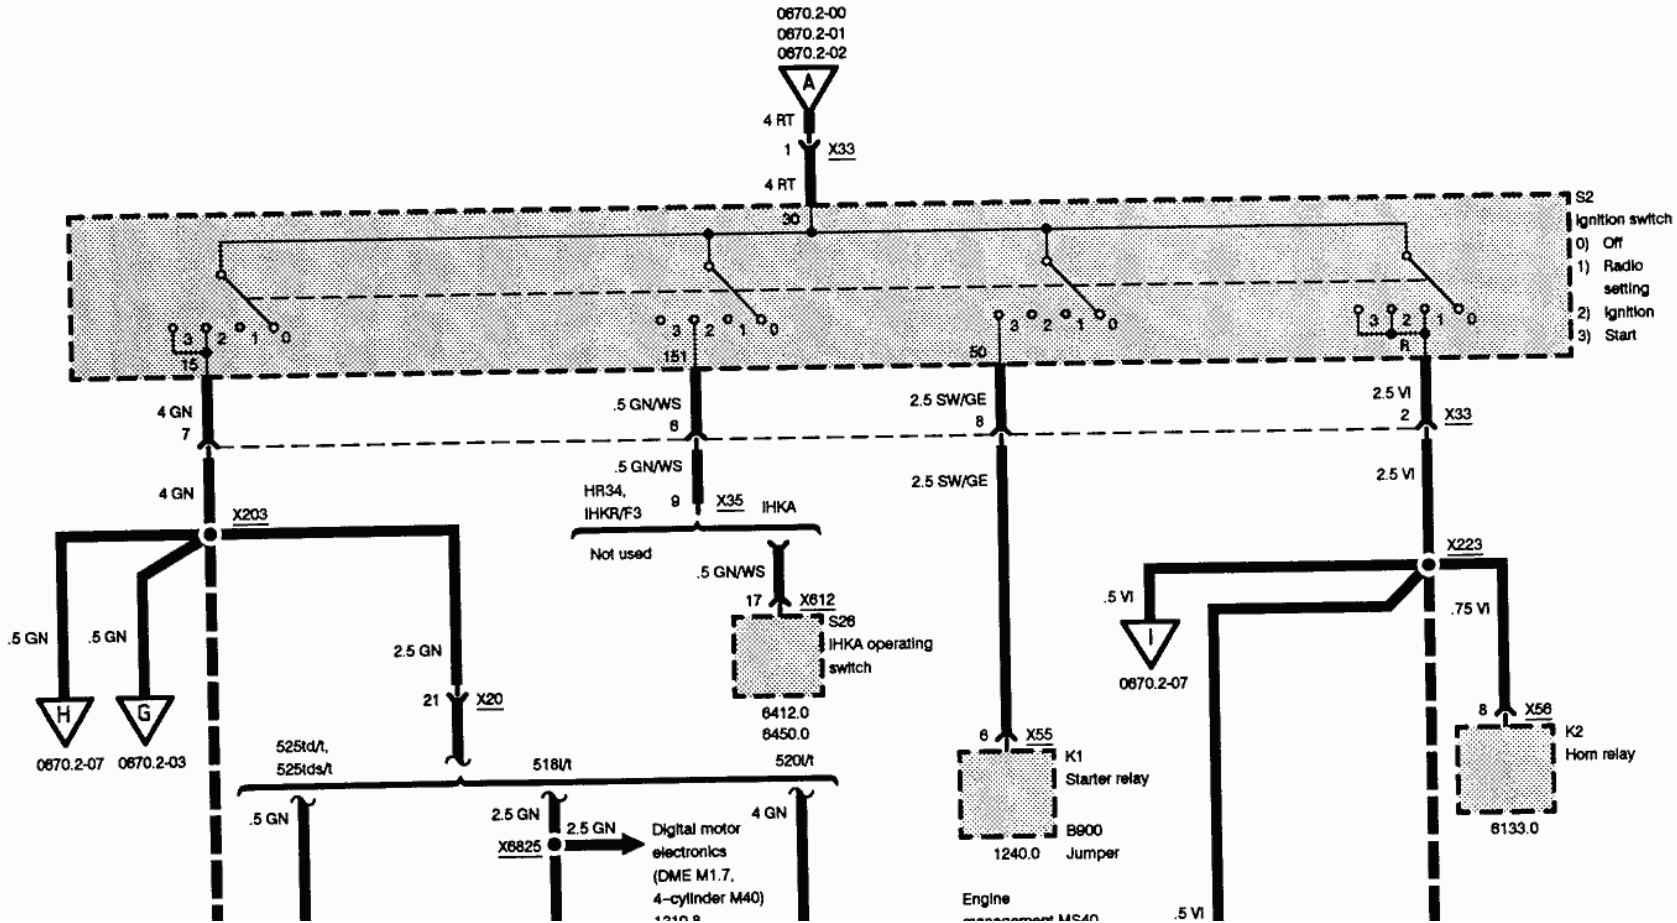

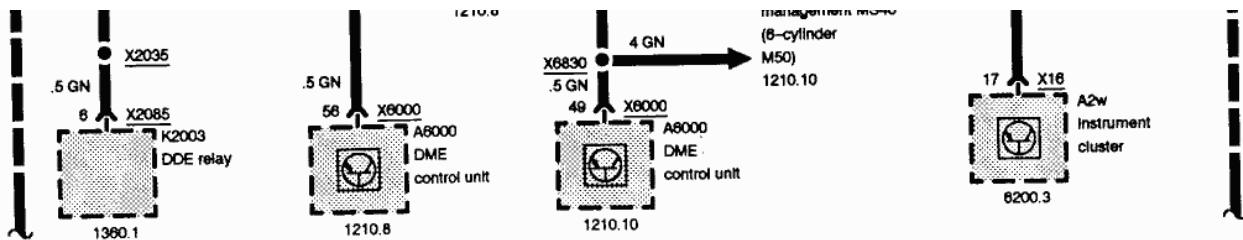


1994

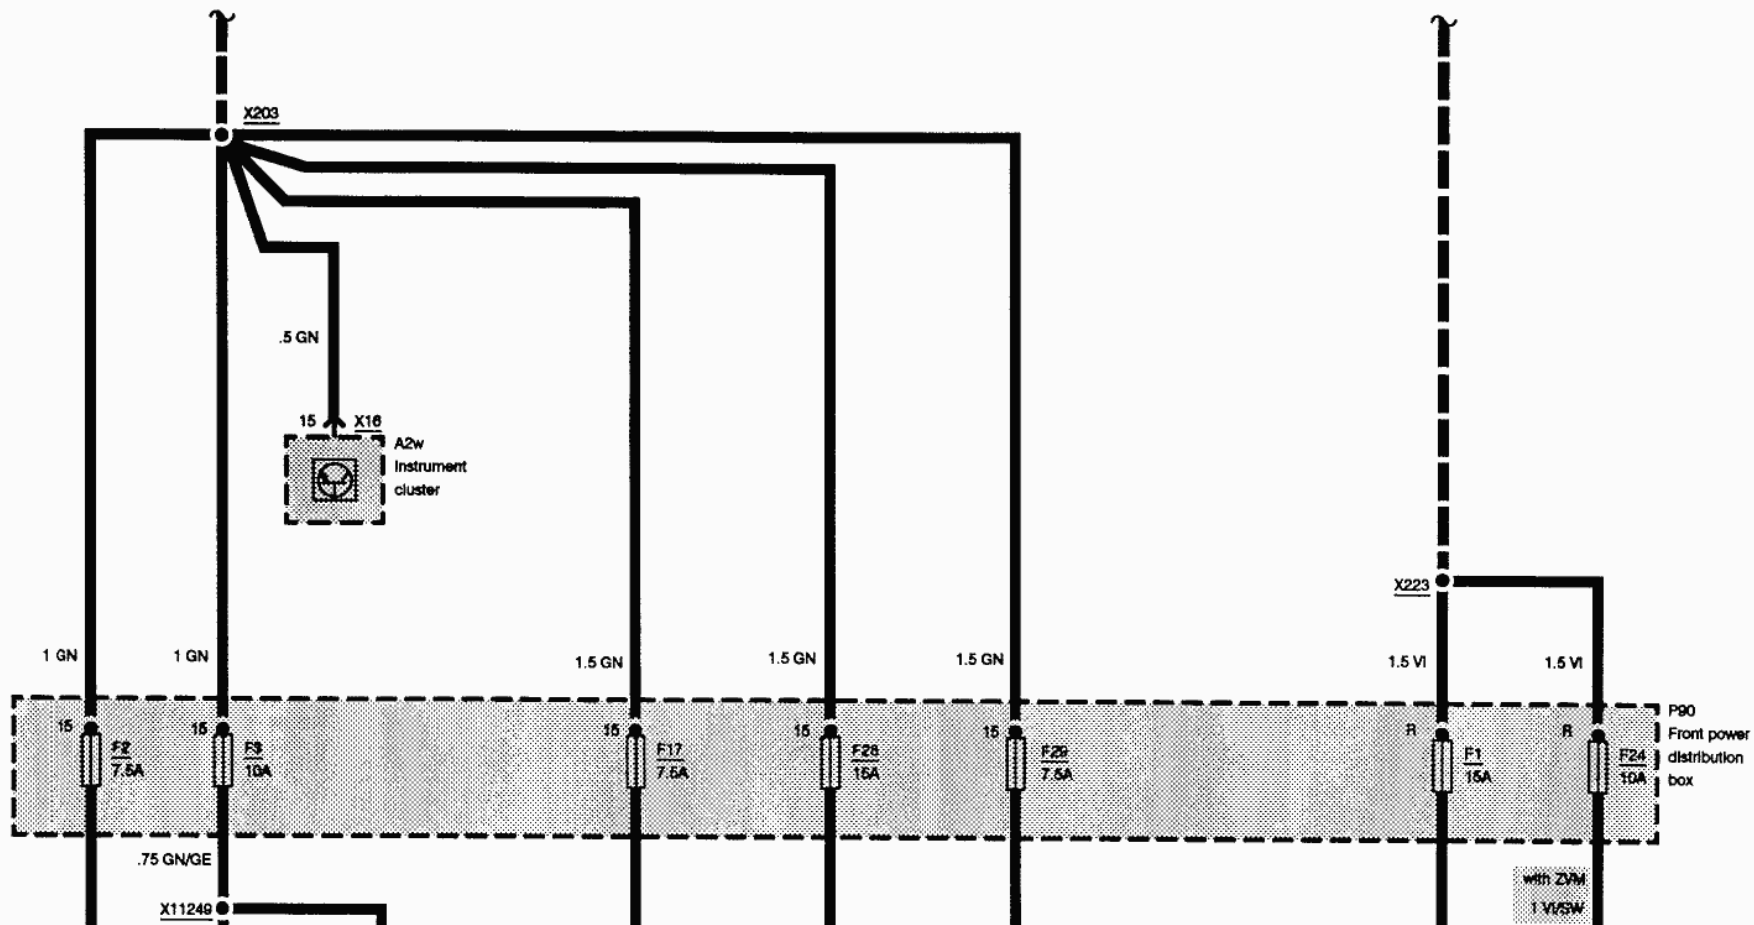


09/93

0670.2-05

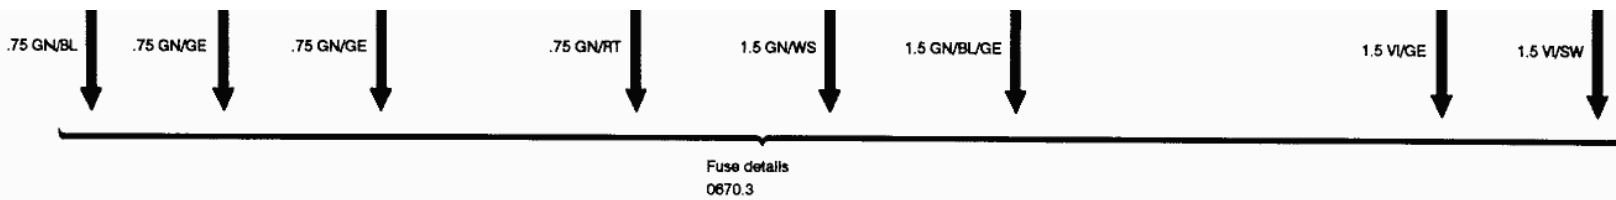


1994

**BMW 5** **Power distribution**  
**Front power distribution box**

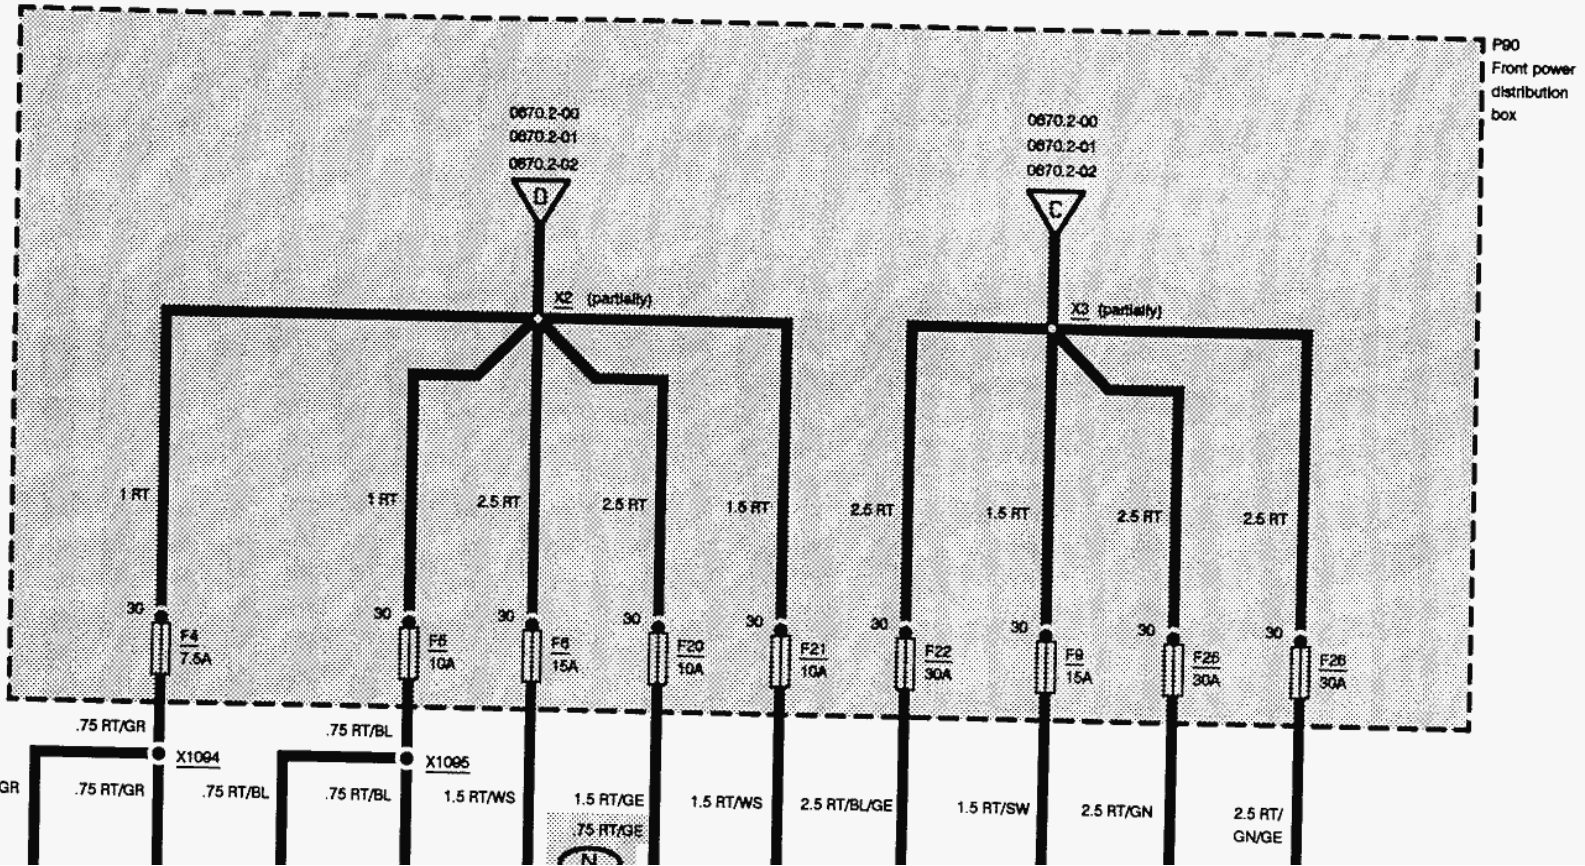

09/93


0670.2-06

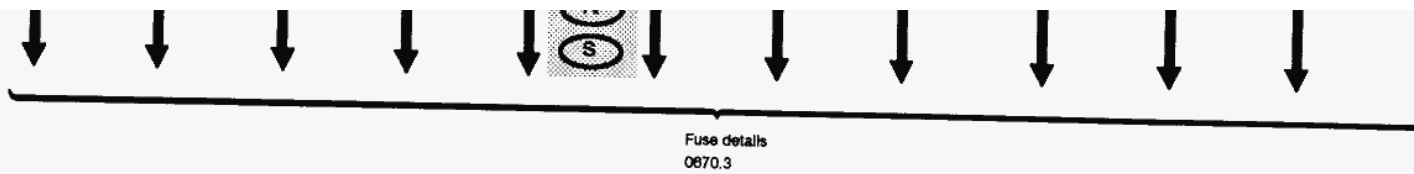

1994




## Power distribution Front power distribution box

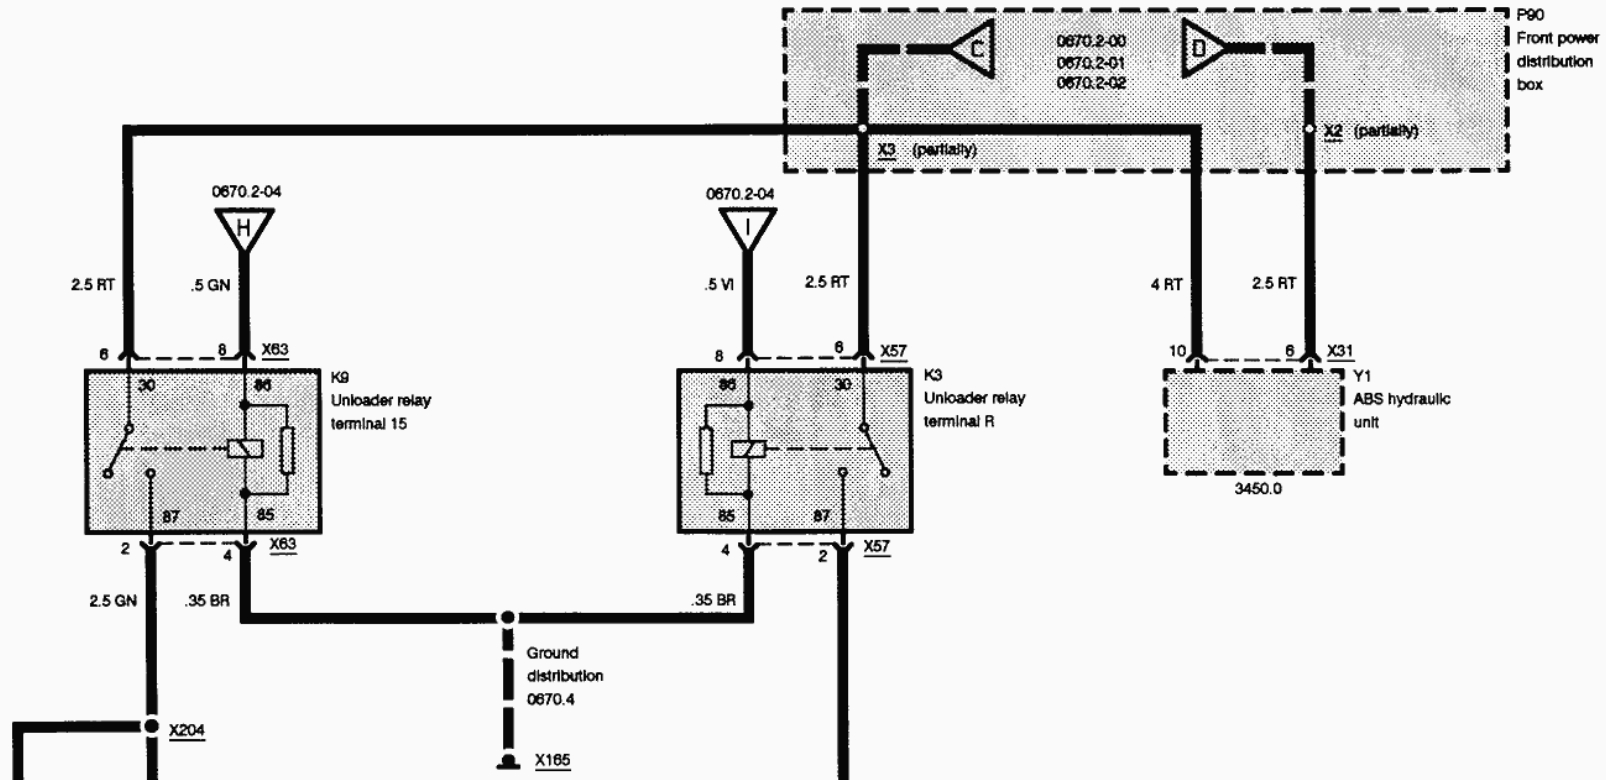

09/93

0670.2-07



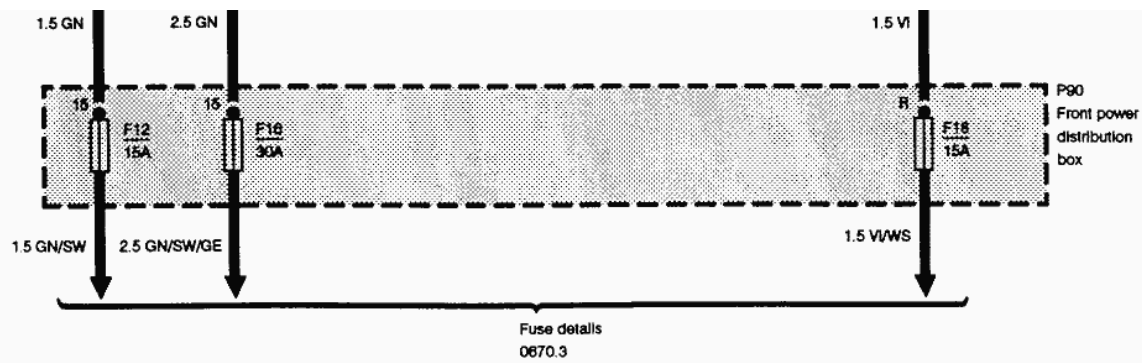


1994



## Power distribution


Saloon

### Power distribution box under rear seat with auxiliary battery

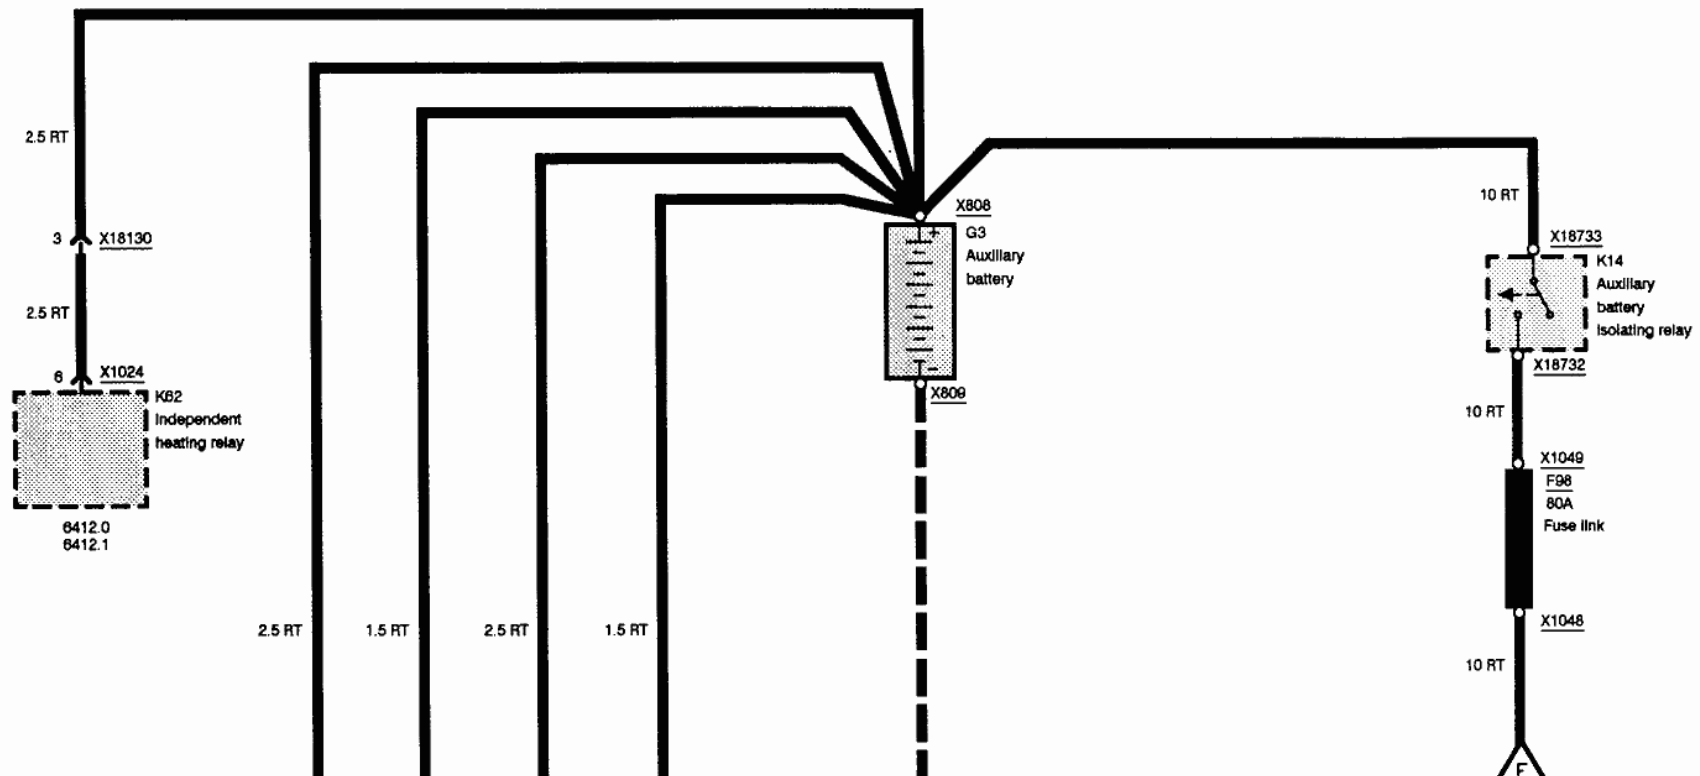

09/93

0670.2-08

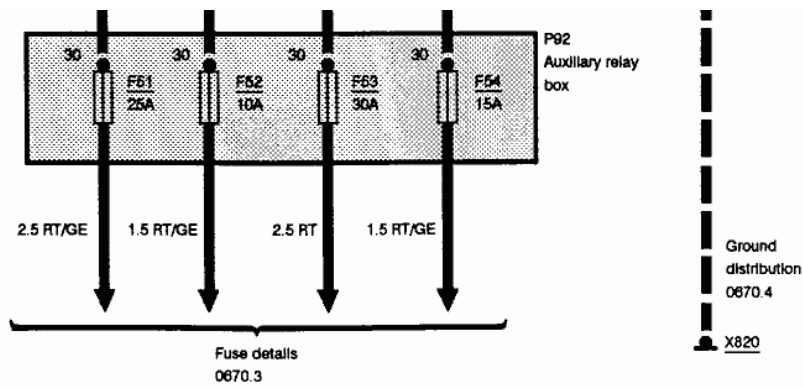

0670.2-00  
0670.2-01  
0670.2-02


1994



## Power distribution



Touring

### Power distribution box under rear seat with auxiliary battery

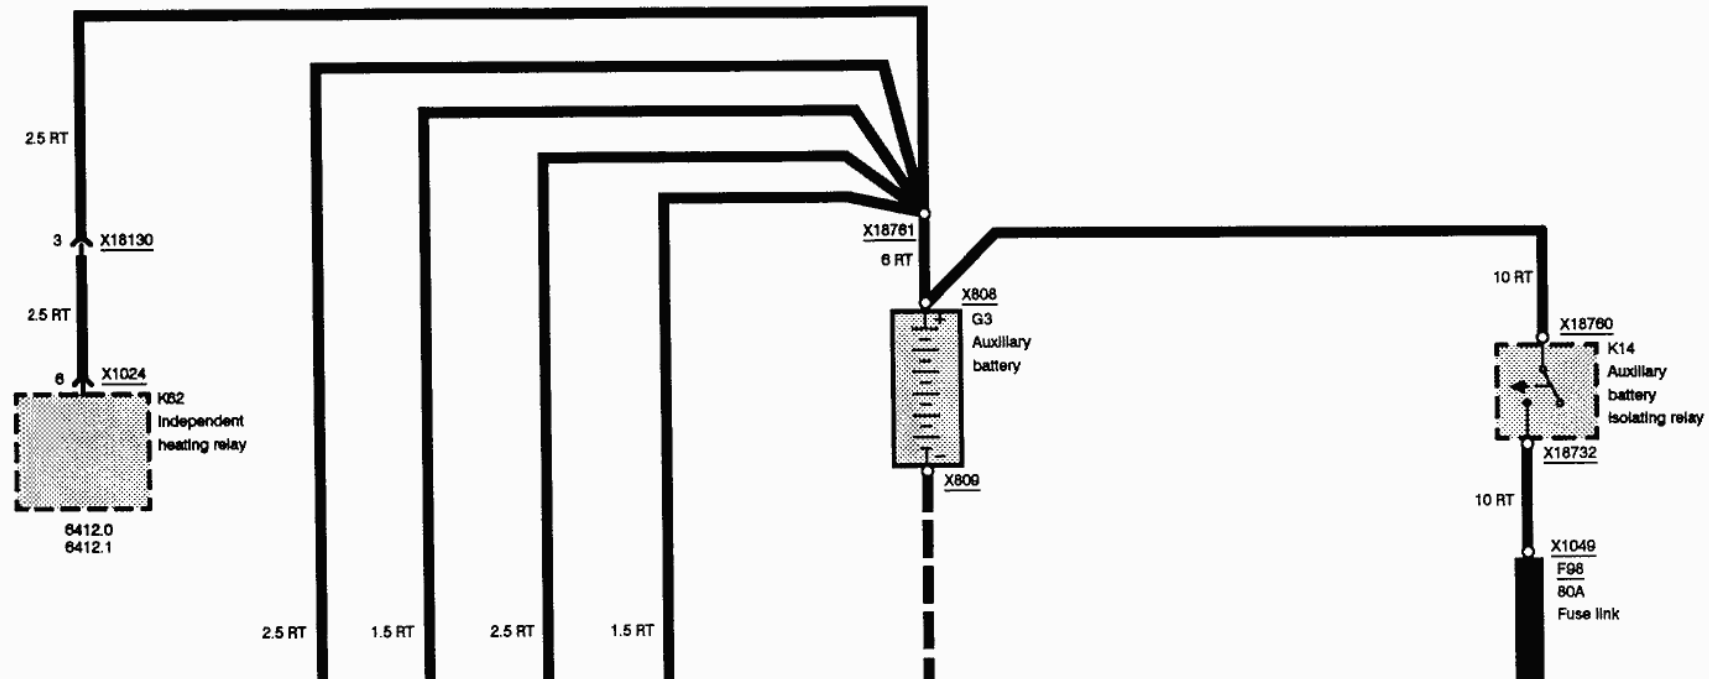

09/93

0670.2-09

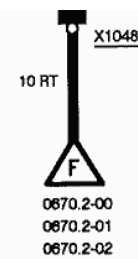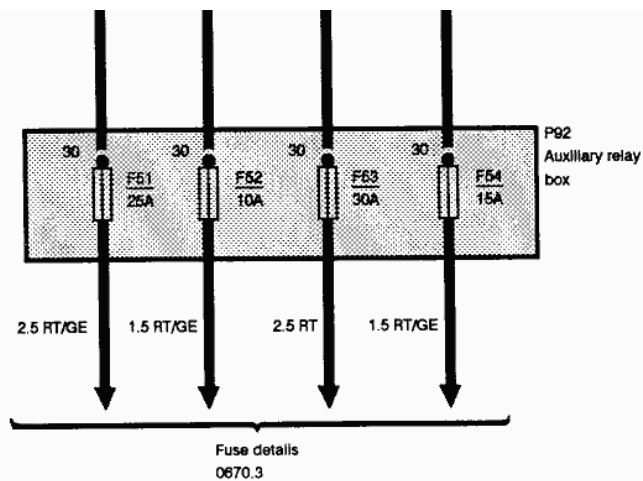


1994





## Power distribution

### Auxiliary relay box and rear power distribution box with ZKE

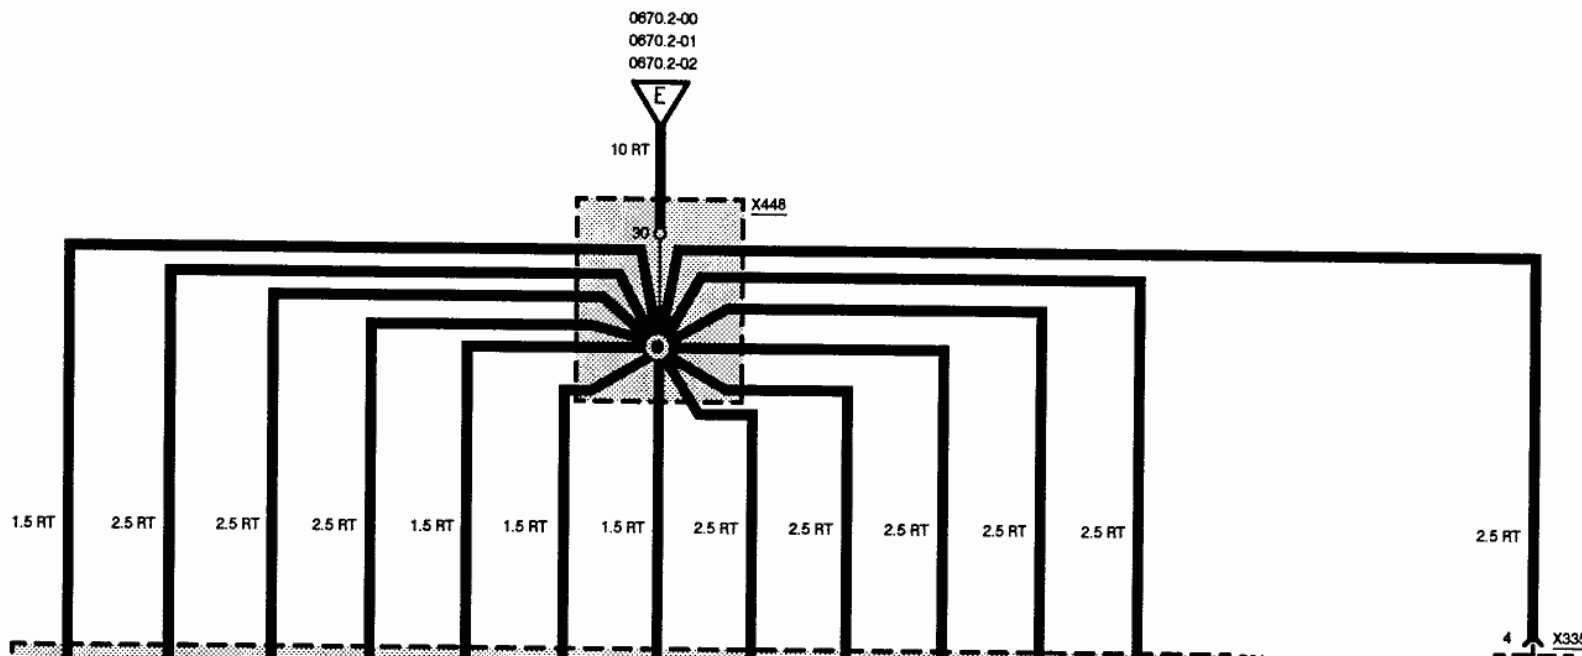


09/93

0670.2-10

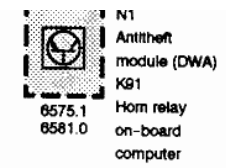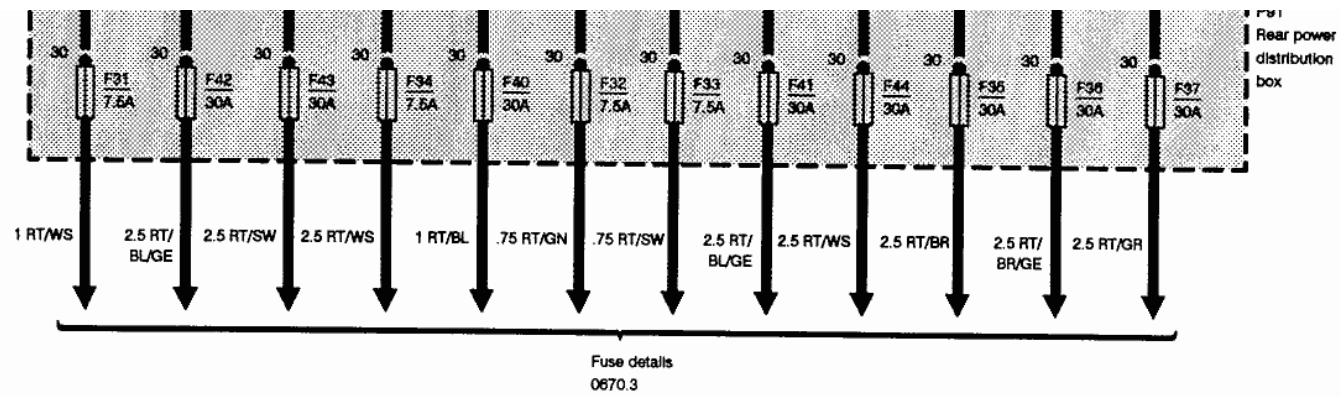


1994

**BMW 5** Power distribution  
Rear power distribution box with ZVM

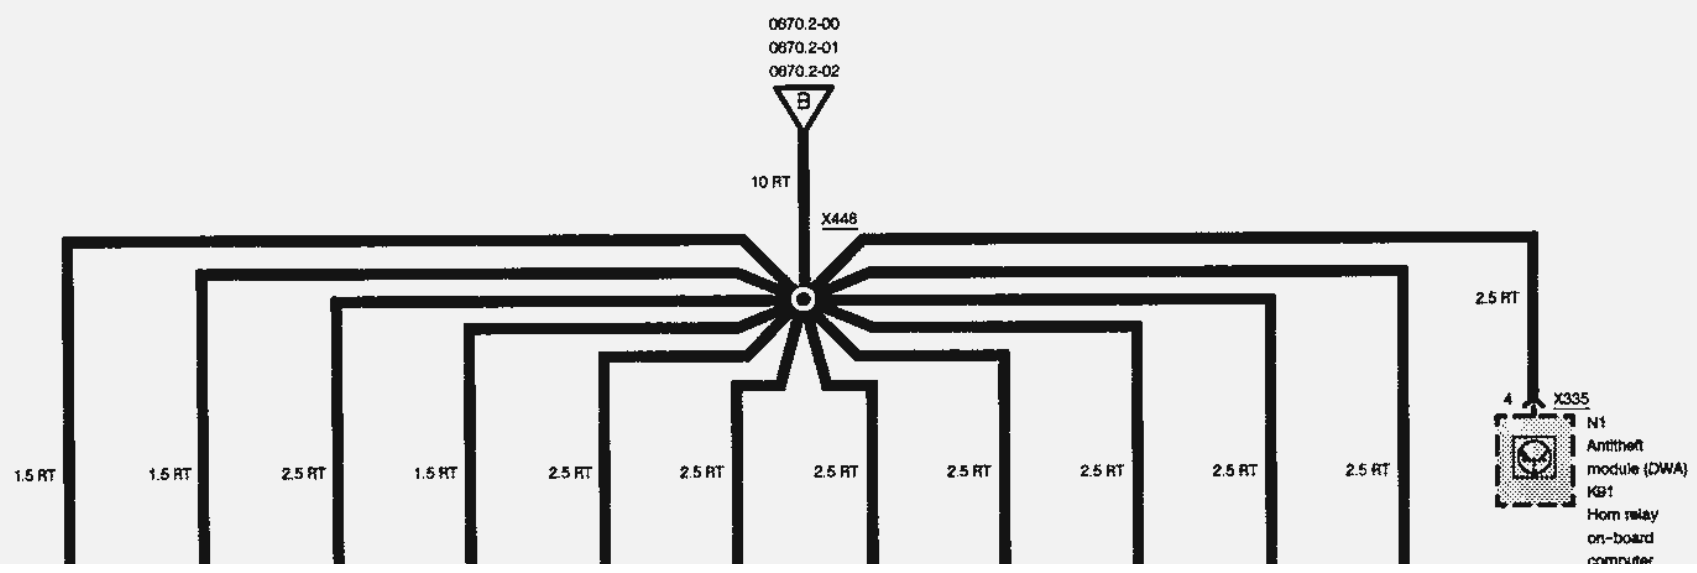


09/93

0670.2-1

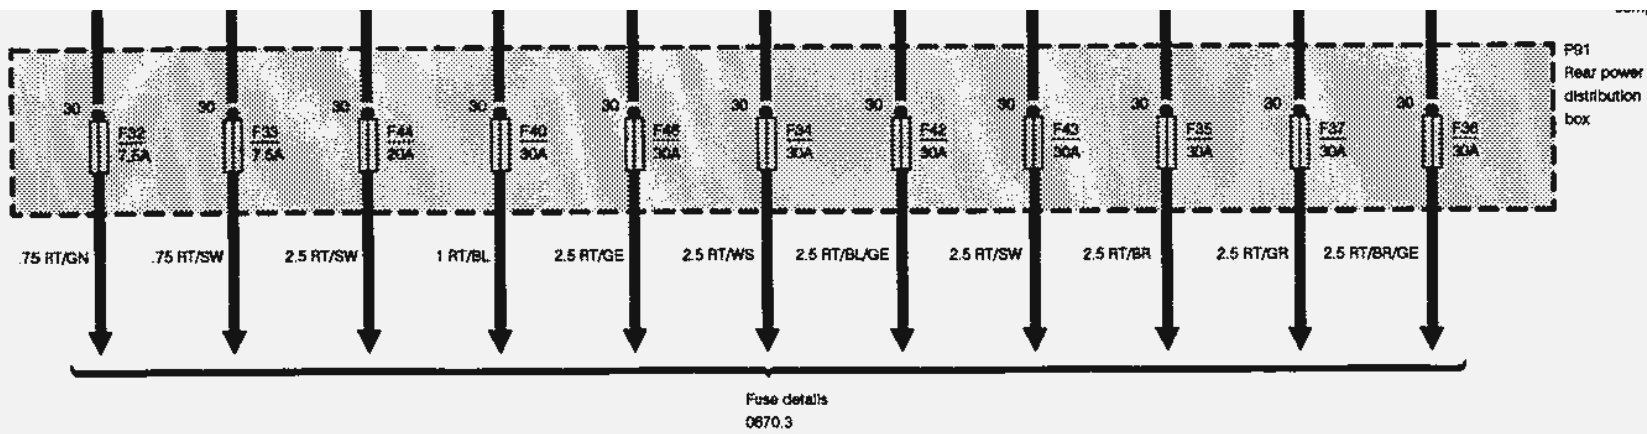

**BMW**  
**5** Cellular telephone

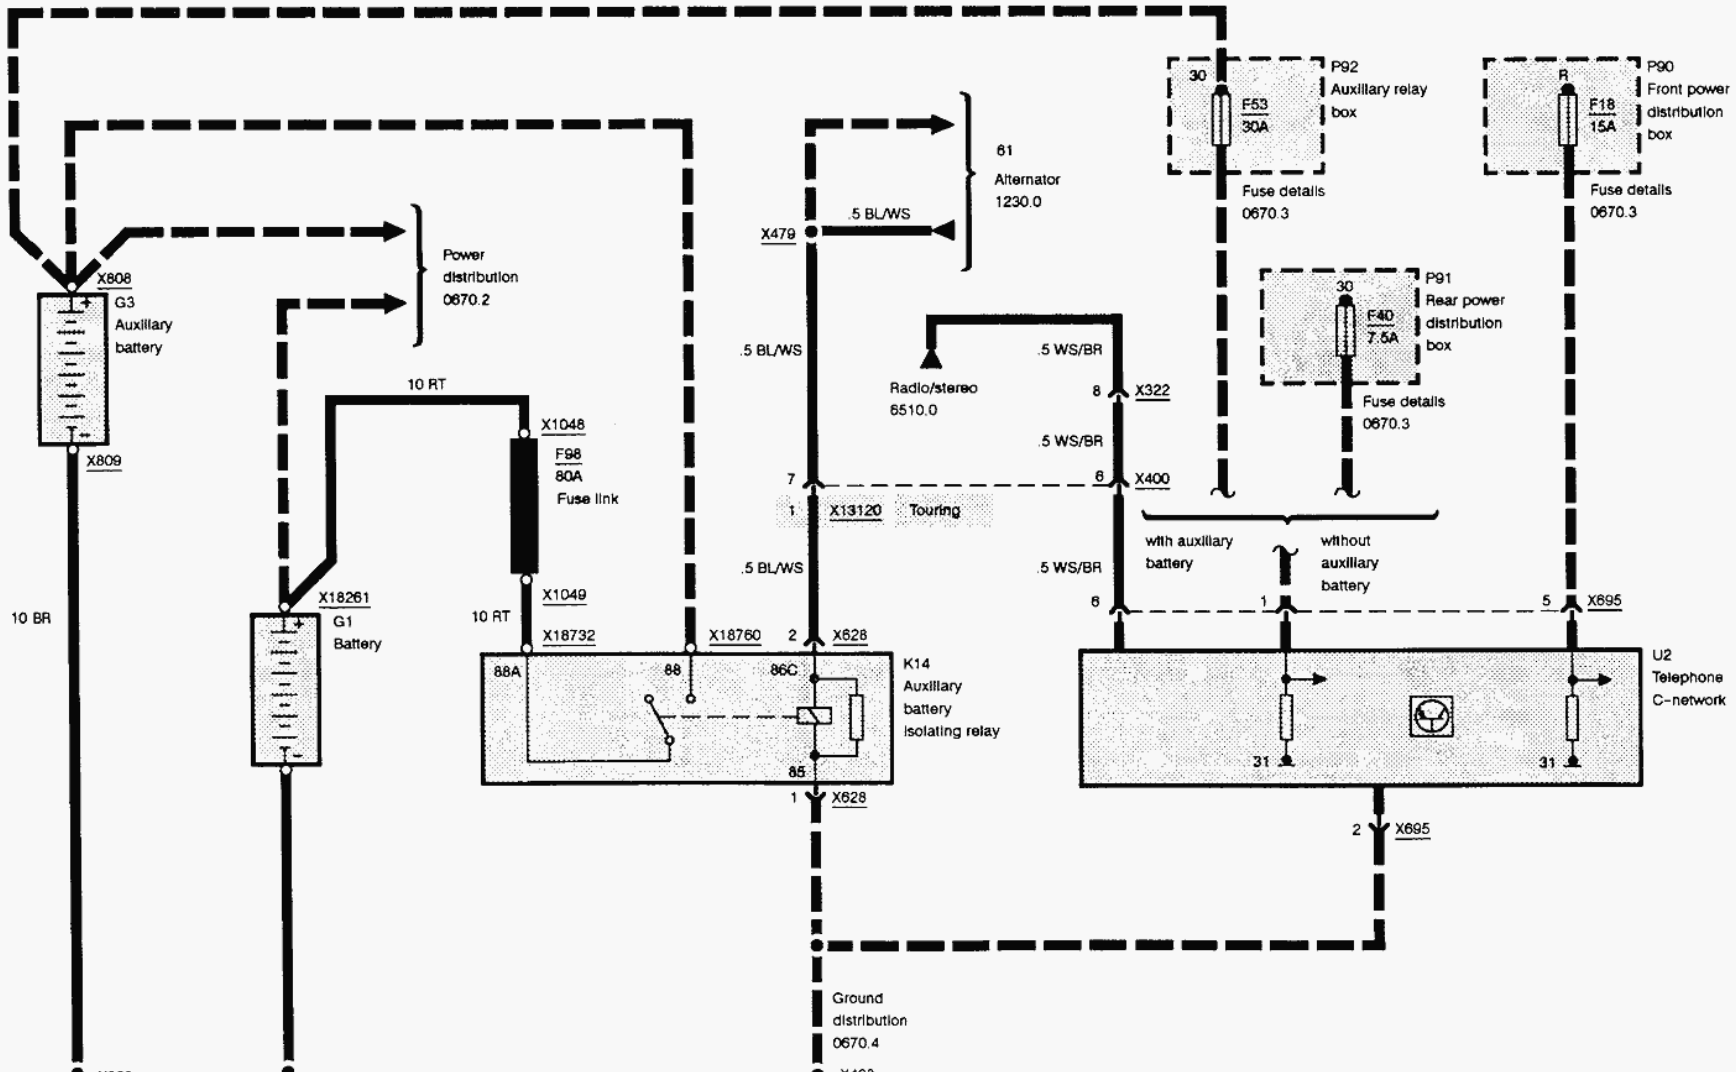

 X820



 X493

(

(

(

(

**BMWAG**


Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Auxiliary fan  
Scheme 6454.0


09/93 ————— 6454.0-00 ————— 1994

518i/t, 520i/t

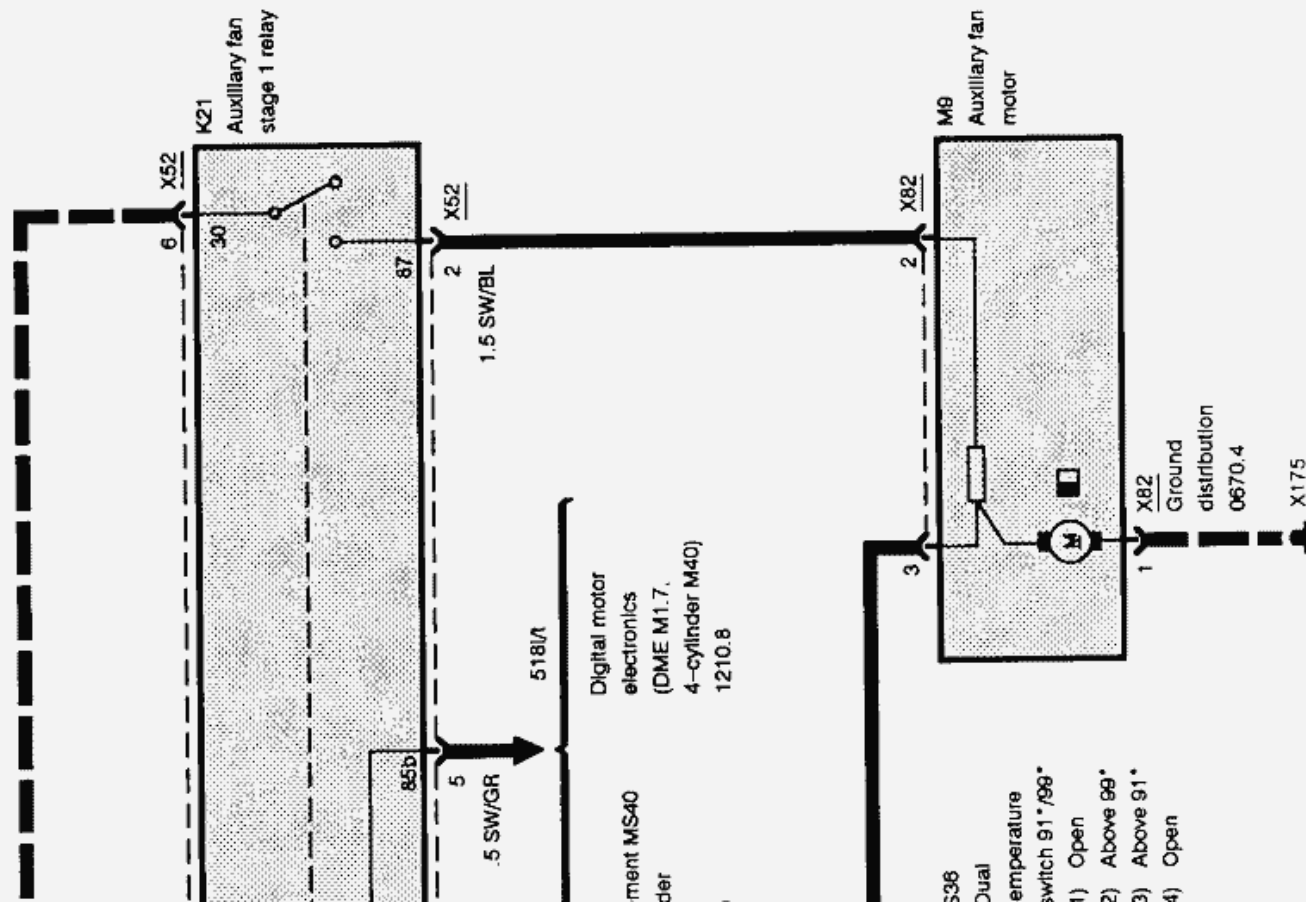



# Auxiliary fan

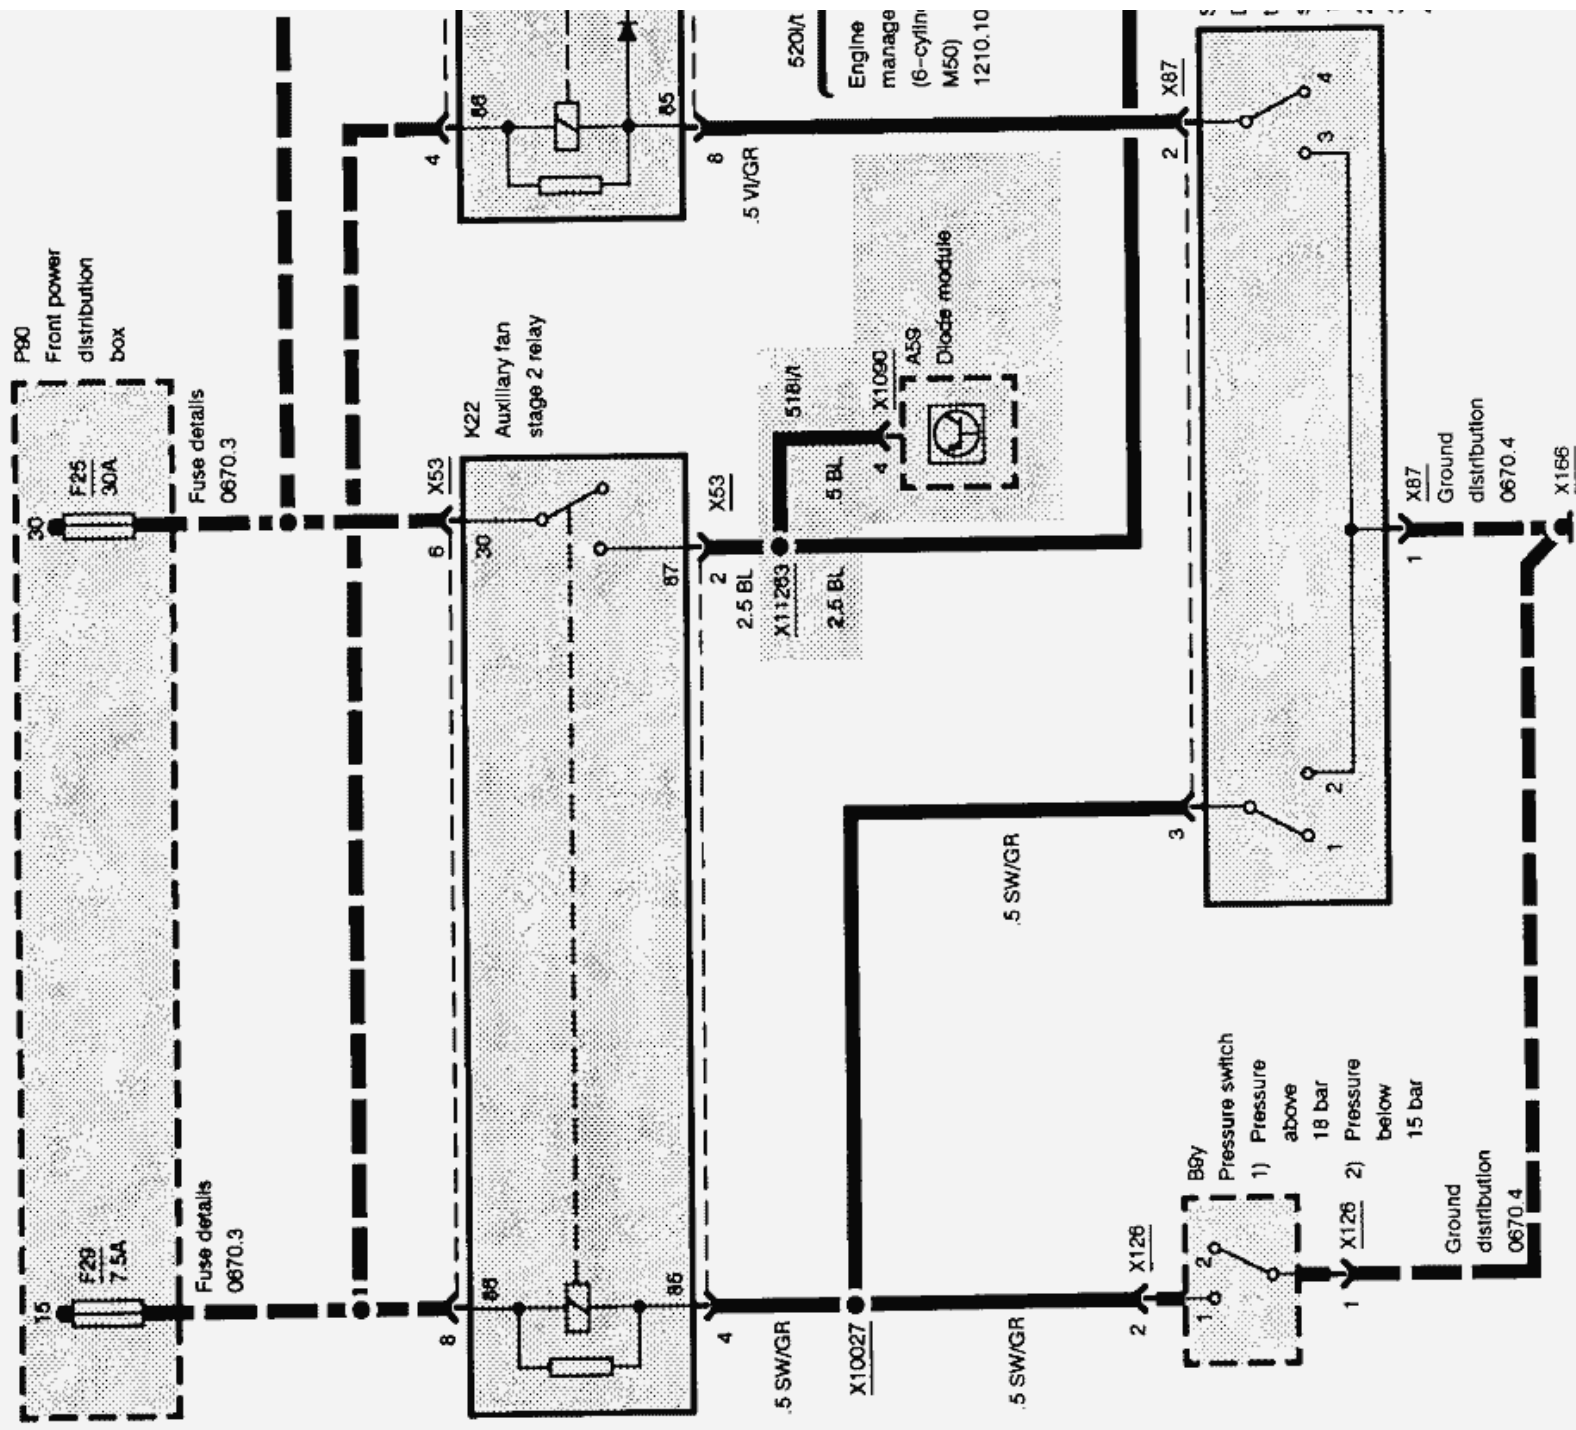




525td/t, 525tds/t


09/93

6454.0-01

1994

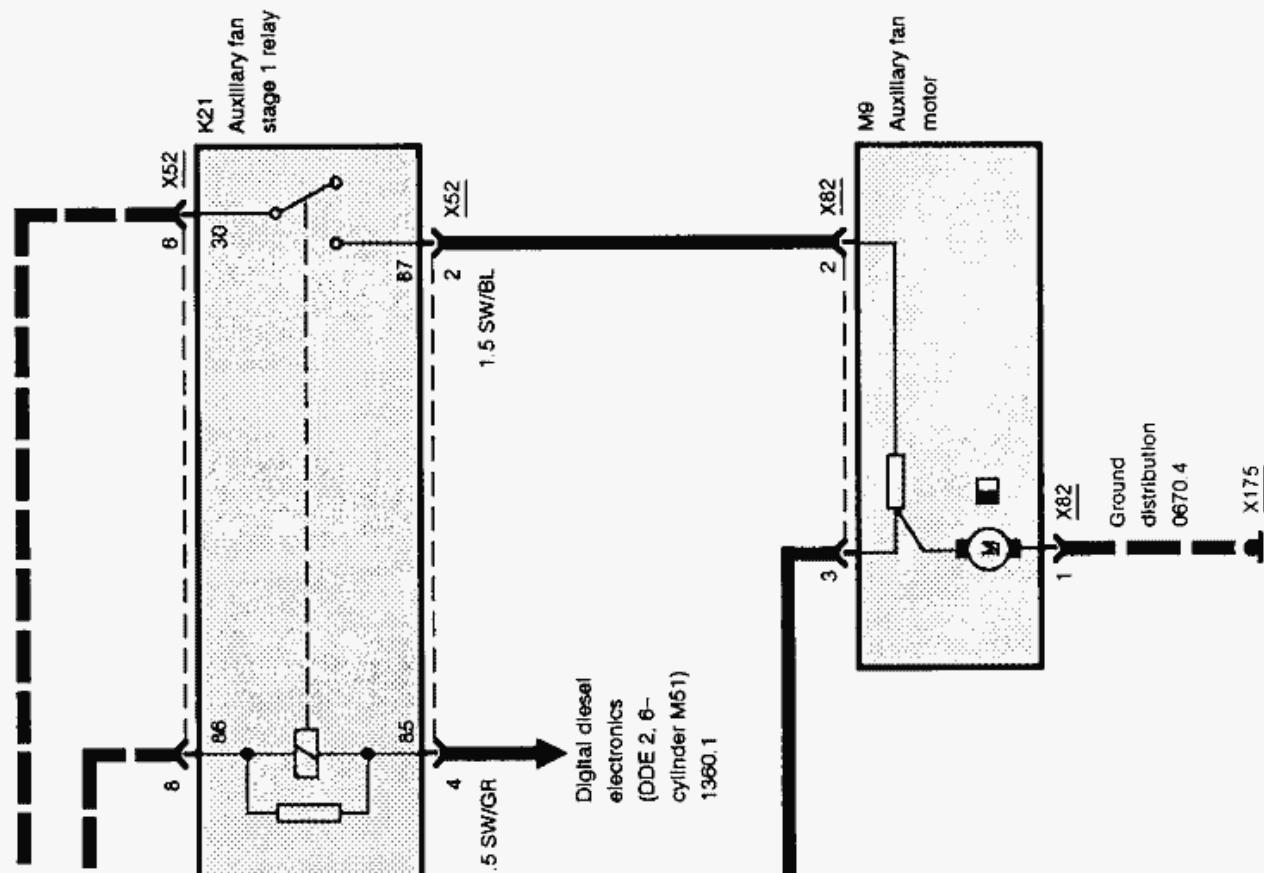


# Auxiliary fan

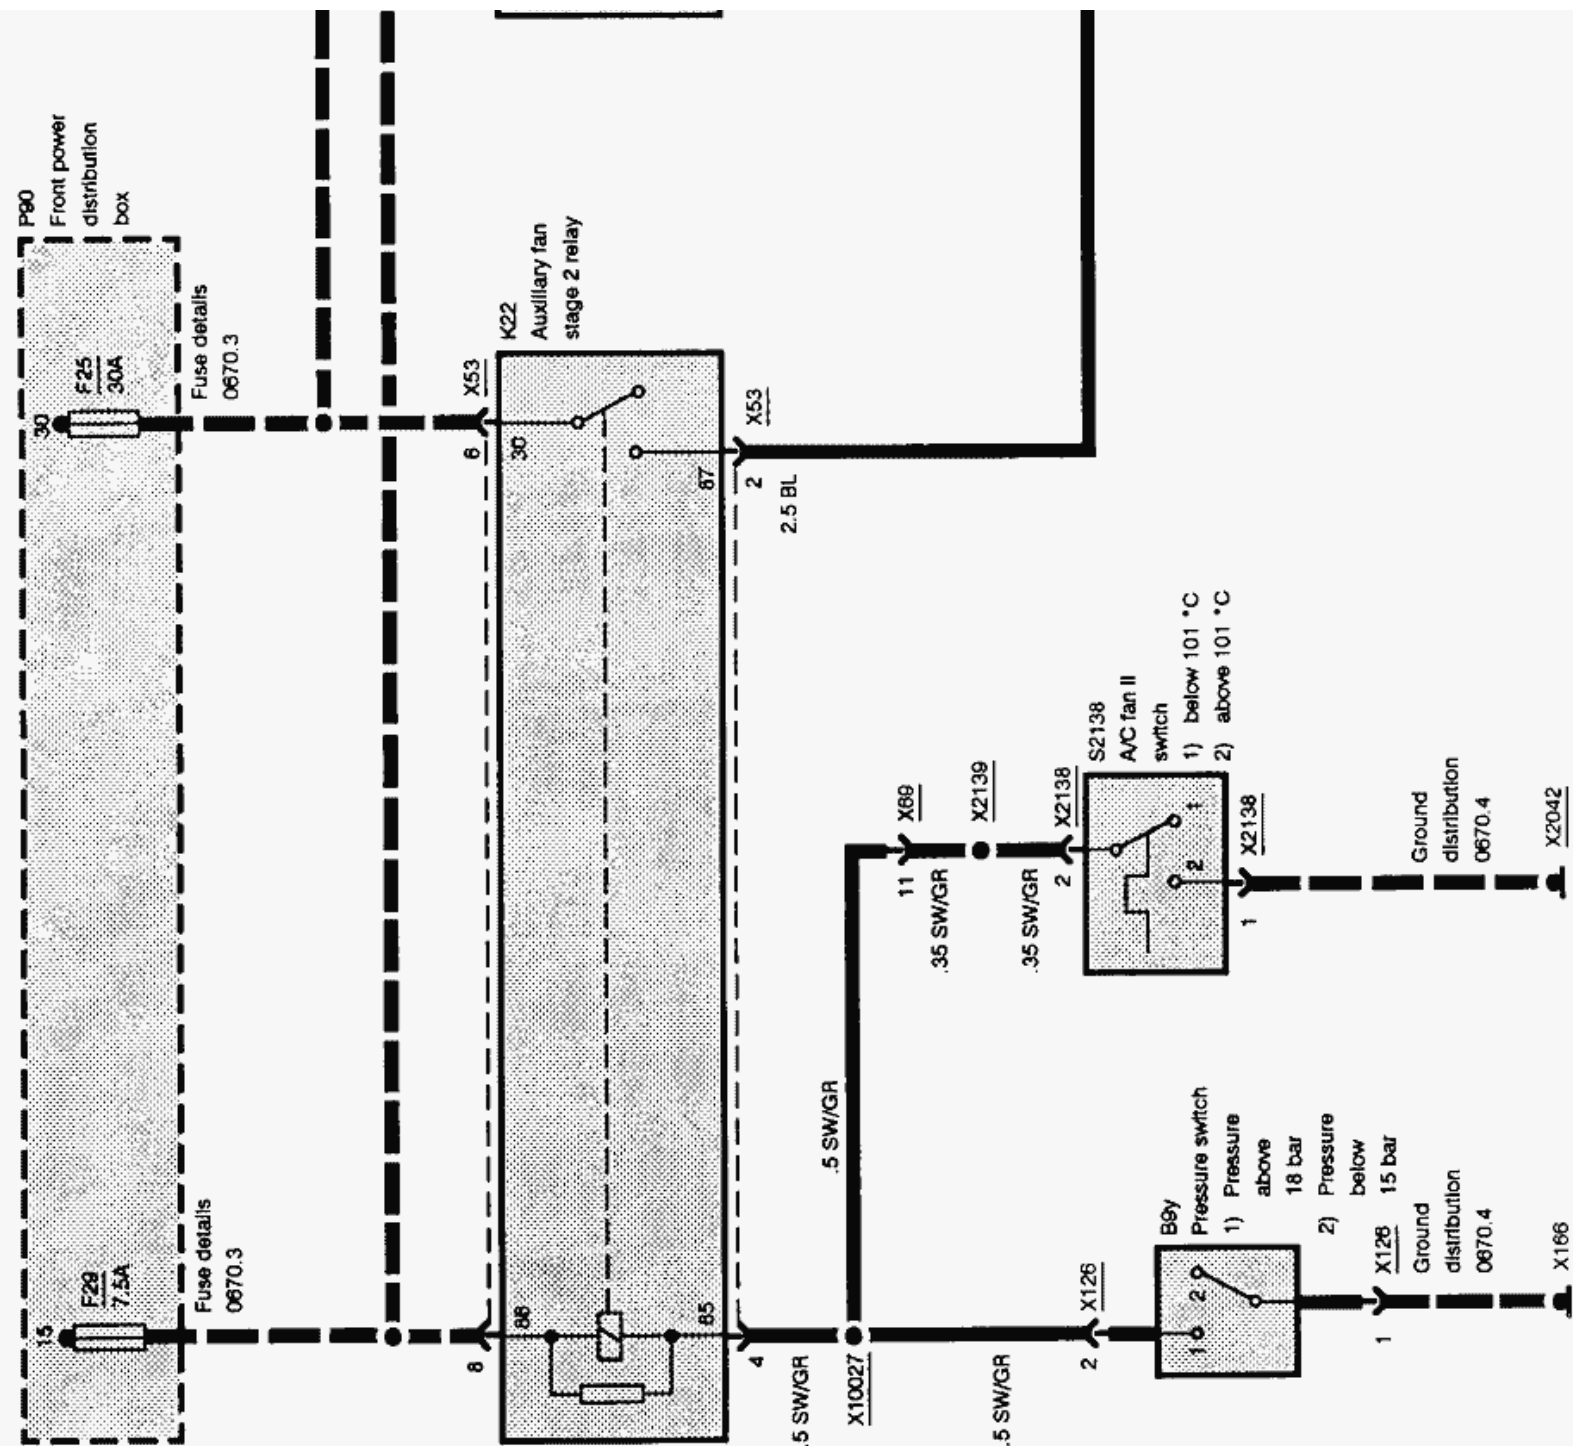




**BMW** Fuse details  
**5** Fuse 1

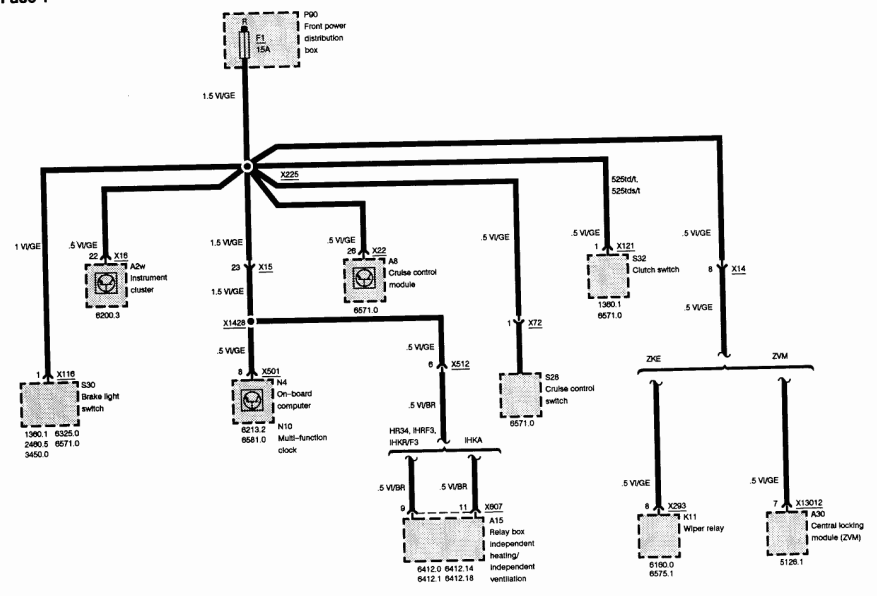

0670.3-00  
1994

**BMW** Fuse details  
**5** Fuses 2, 3, 4, 5 and 6

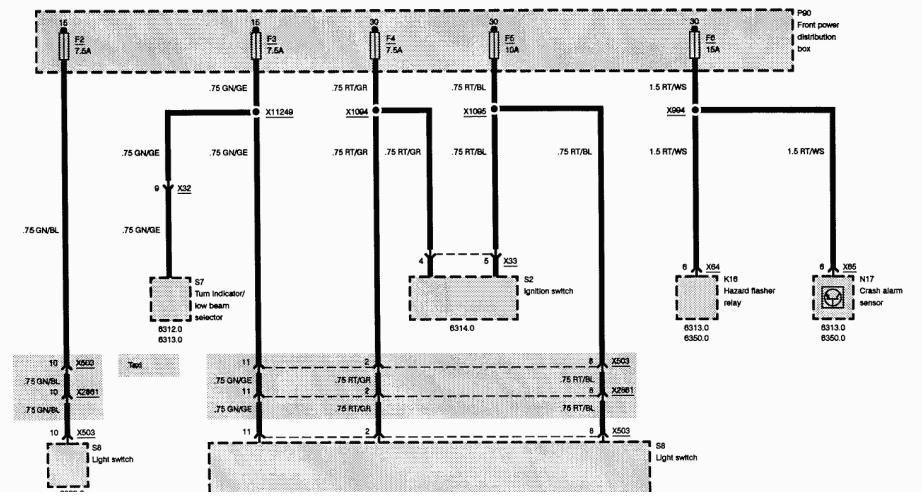


0670.3-01

8300.0  
8312.0  
8350.0

8100.0	8100.0	8100.0	8312.0
8107.0	8300.0	8107.0	8314.0
8300.0	8314.0	8300.0	8320.0
8312.0	8740.0	8330.1	8330.0
8740.0		8740.0	8332.0

1984

**BMW** Fuse details  
**S** Fuses 2, 3, 4, 5 and 6

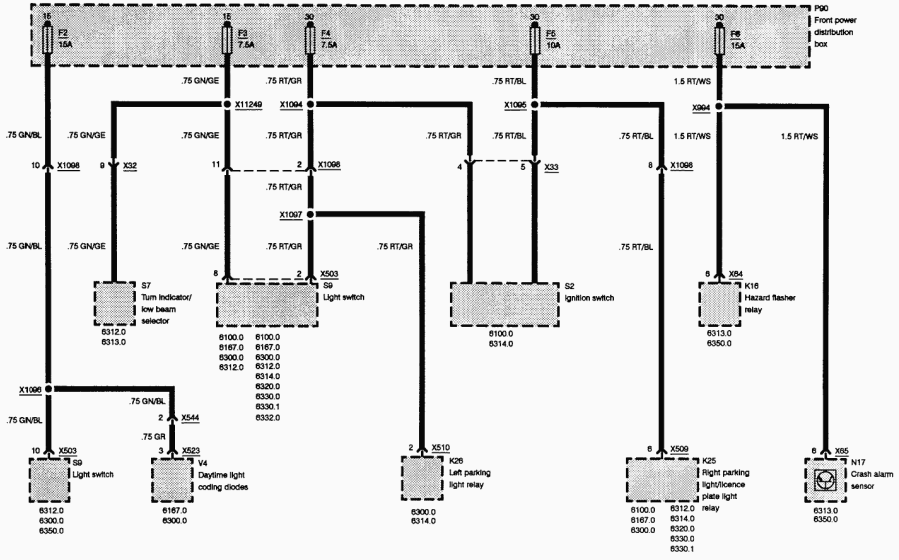


09/93

0670-3-02


1984

**BMW** Fuse details  
**S** Fuses 7, 9, 10 and 11

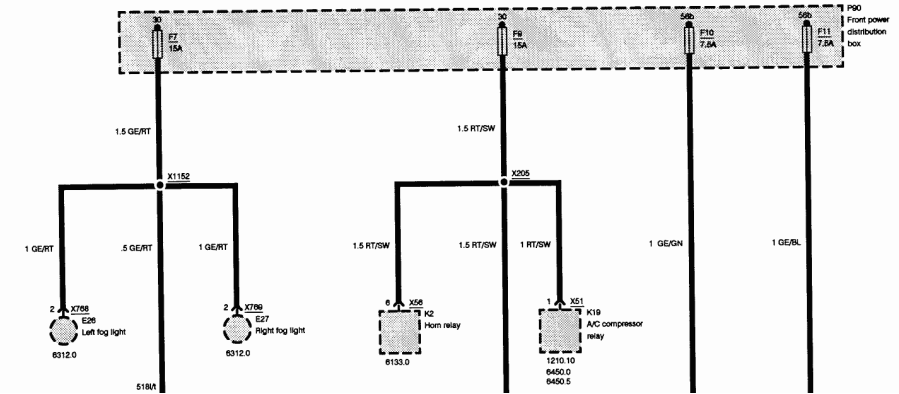


09/93

0670-3-03

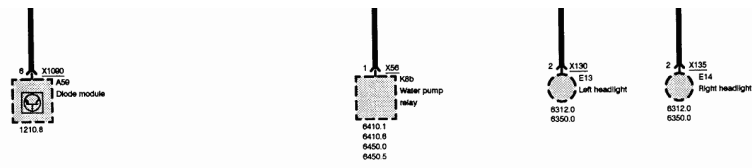

1994

### BMW 5 Fuse details

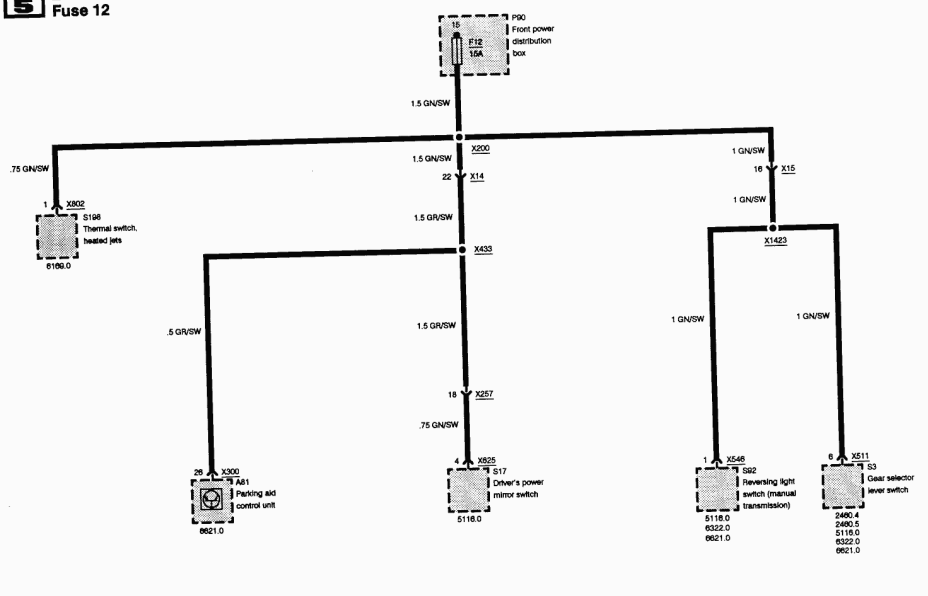


08/93

0670-3-04


1994

### BMW 5 Fuse details

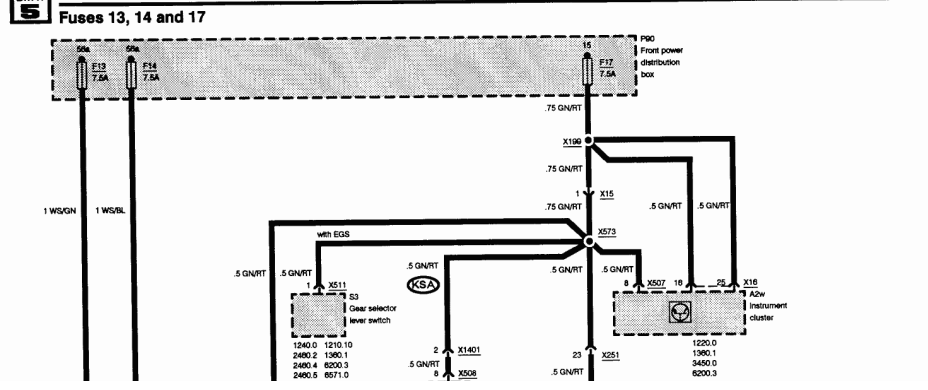


08/93

0670-3-05

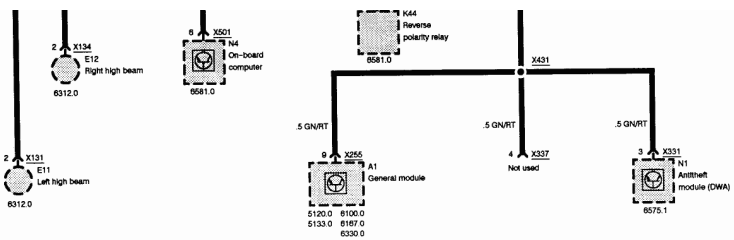

1994

**BMW 5** Fuse details  
**Fuse 16**

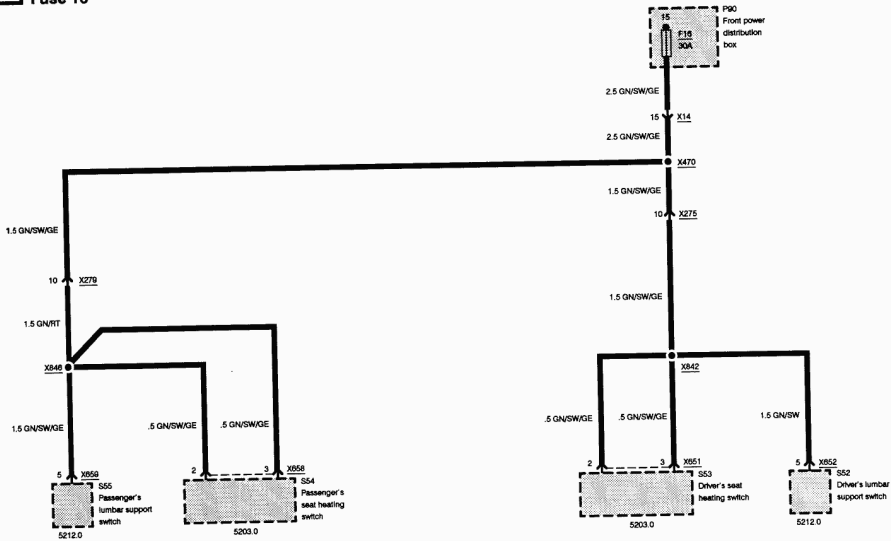


06/93

0670-3-06

1994


**BMW 5** Fuse details  
**Fuse 18**

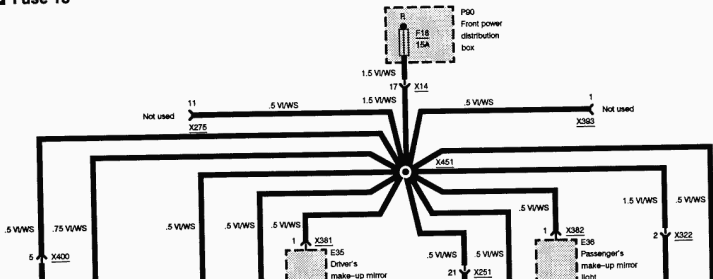

06/93

0670




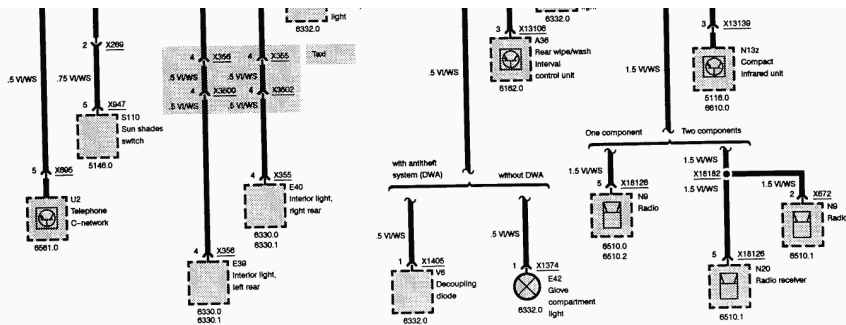

3-07  
1994

**BMW** Fuse details


**Fuses 19 and 20**

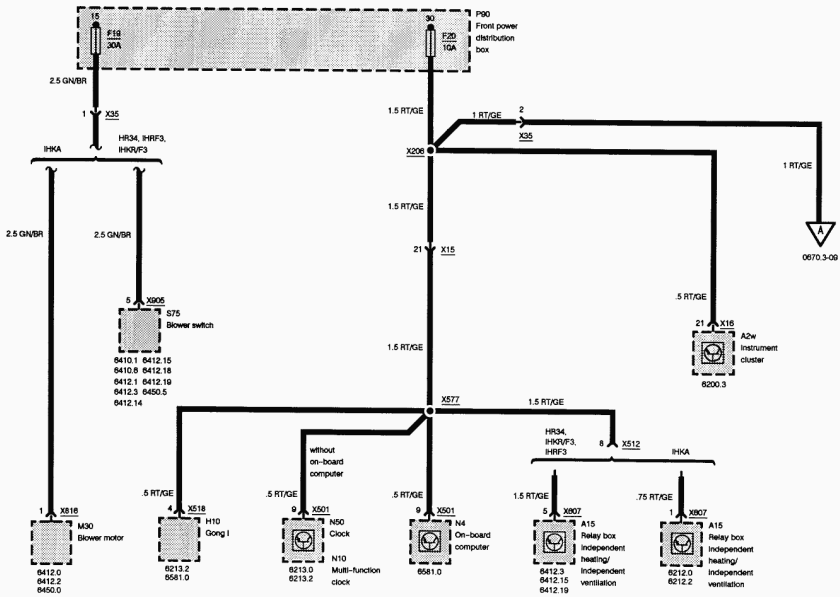


09/93  
0670-3-08  
1994

**BMW** Fuse details

**Fuse 20**

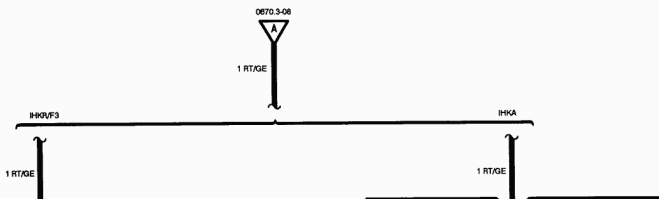


09/93  
1994

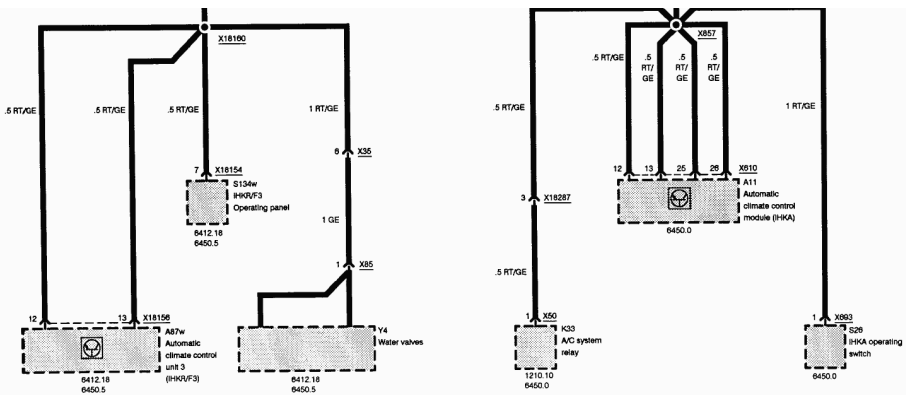


0670-3-09  
1994

**BMW 5** Fuse details  
**Fuse 21**

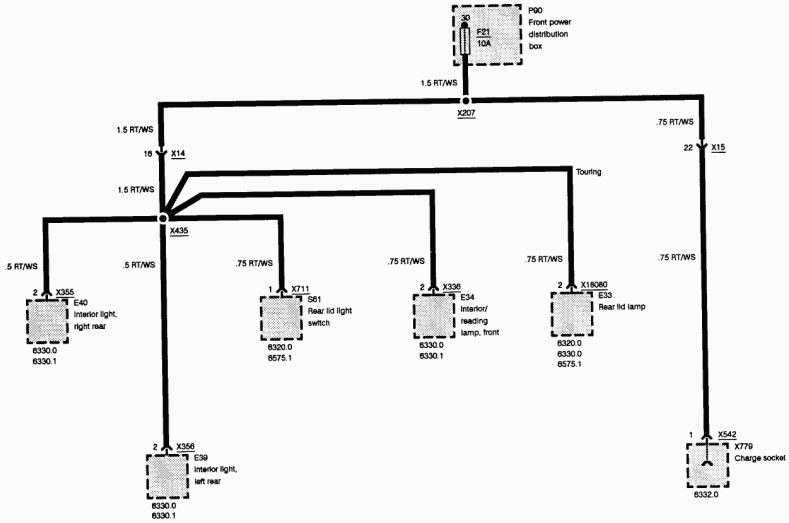


0670-3-10  
1994

### BMW 5 Fuse details Fuses 22, 23 and 24

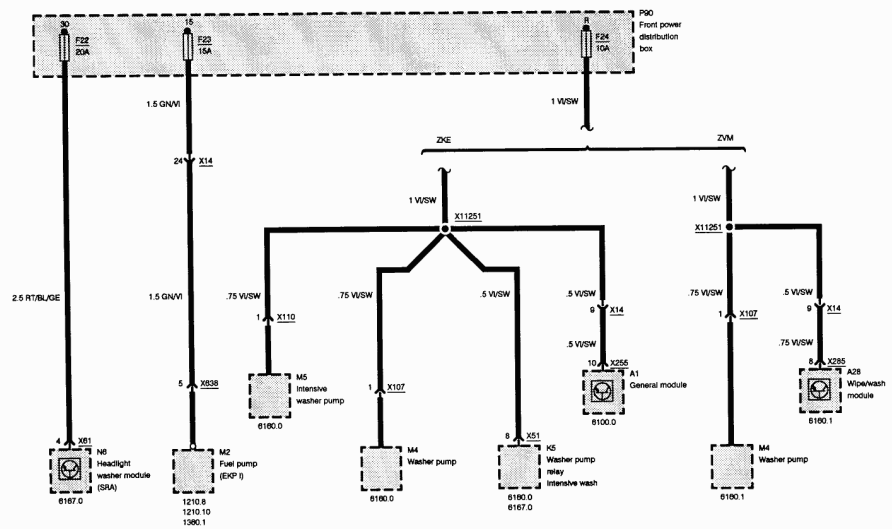


09/93 ————— 0670-3-11  
1994

### BMW 5 Fuse details Fuses 25, 26 and 28

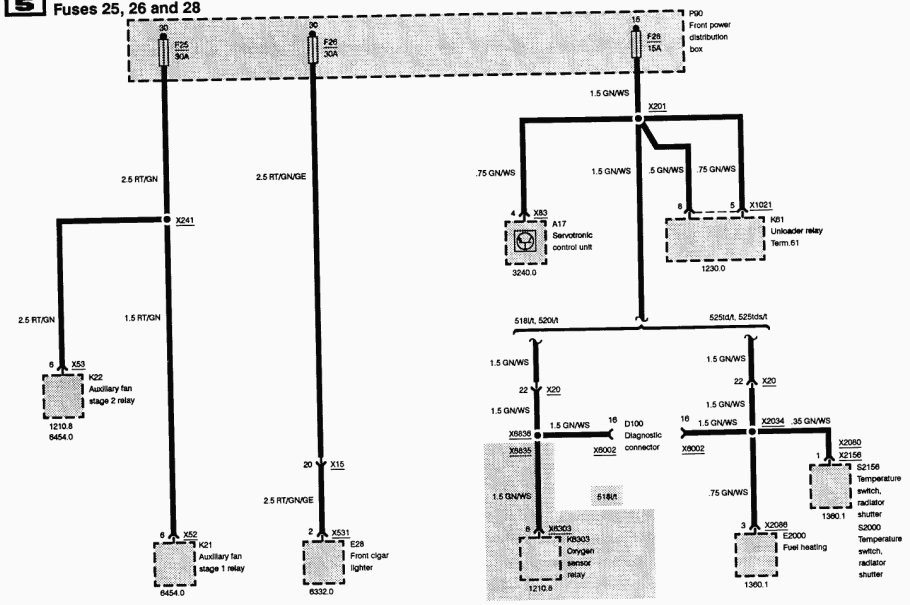


09/93 ————— 0670-3-12  
1994

**BMW**  
**5** Fuse details  
**Fuse 27**

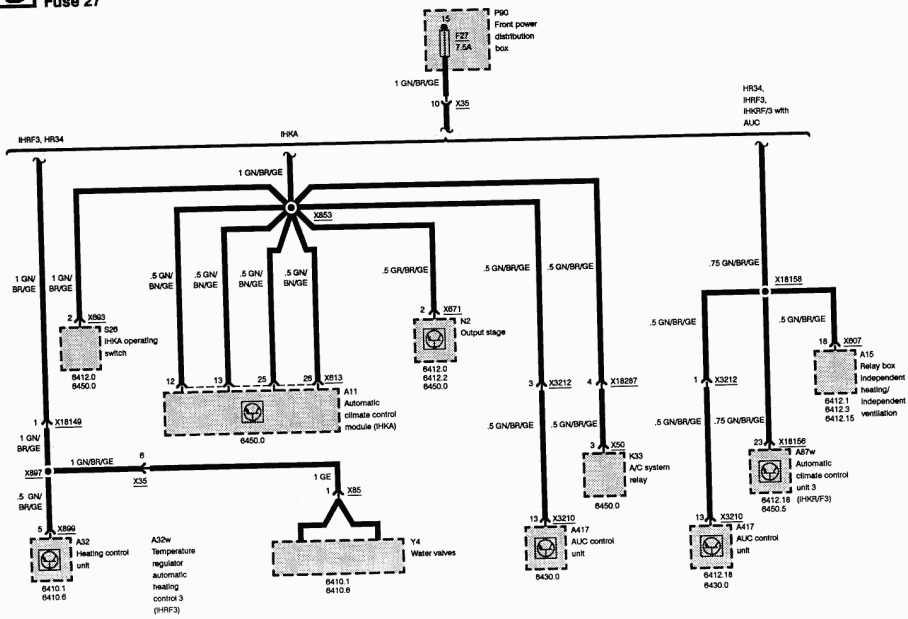

08/93  
0670-3-13  
1894


**BMW**  
**5** Fuse details  
**Fuse 29**

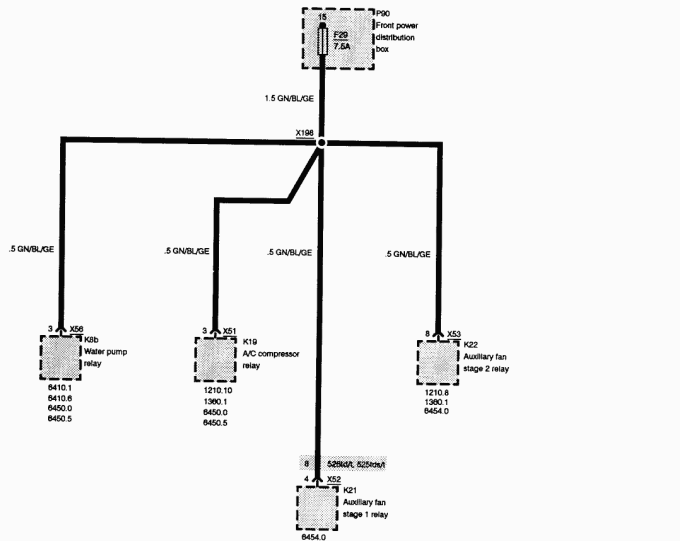

08/93  
0670-3-14


**BMW** Fuse details


**Fuses 31 and 32**

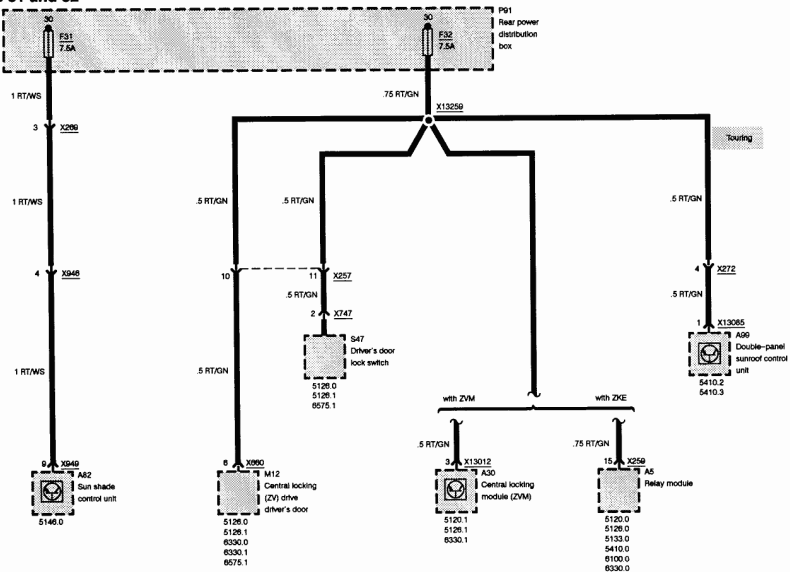


**BMW** Fuse details

**Fuses 33, 34 and 35**

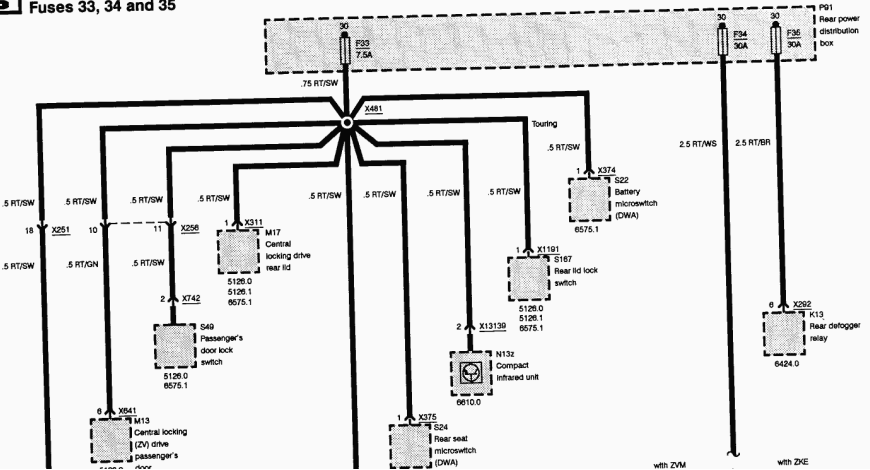


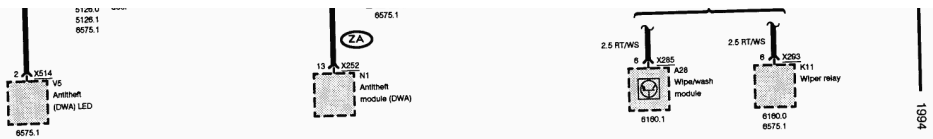


**BMW** Fuse details  
Fuses 36, 37, 40 and 41

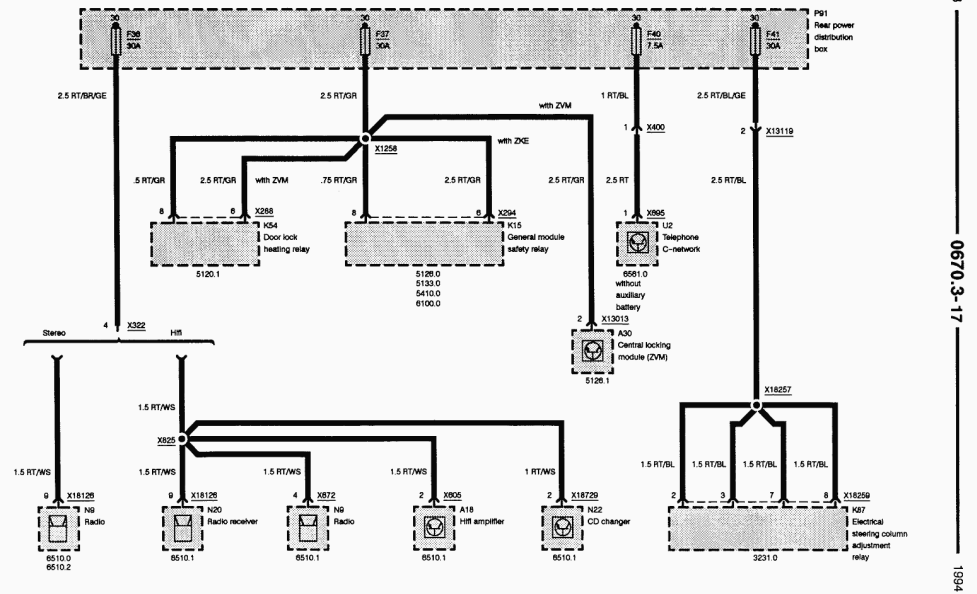

**BMW** Fuse details  
Fuses 42 and 43

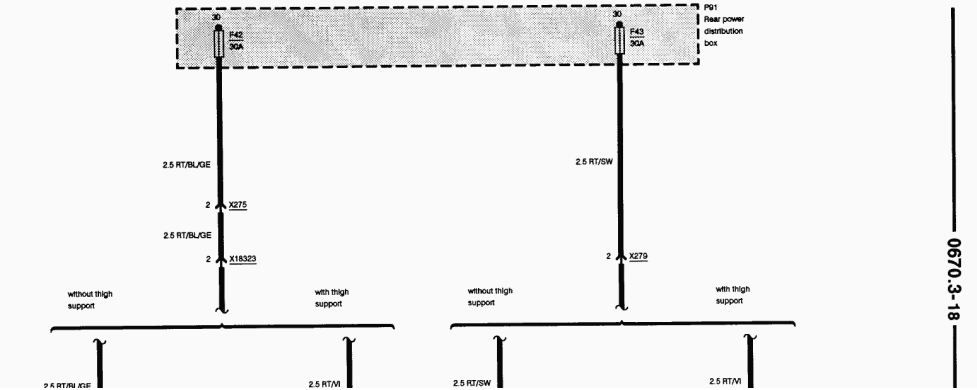


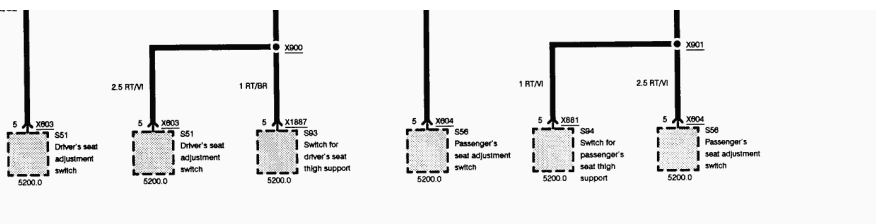

1994



**Fuse details**  
Fuses 44, 46, 47 and 50

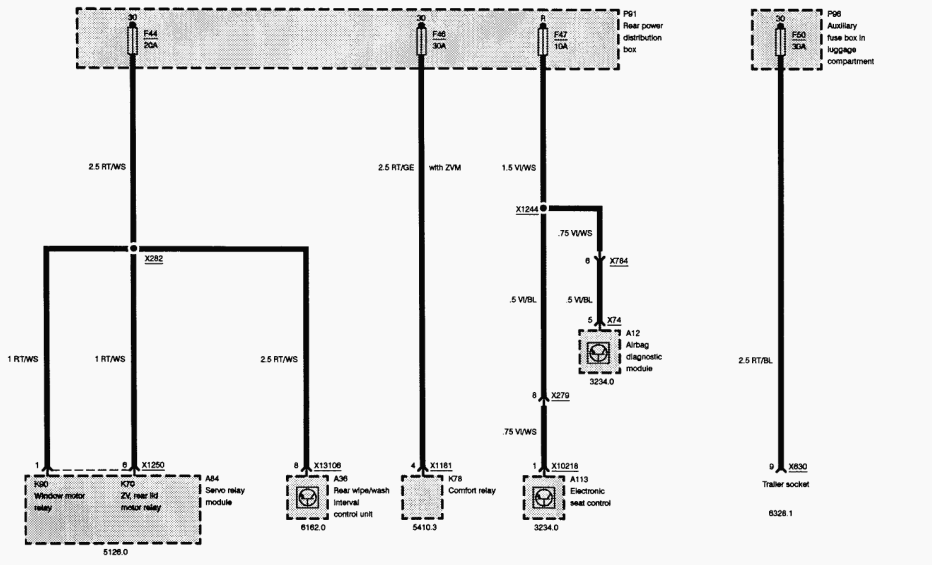


09/93

0670.3-19


1994



**Fuse details**  
Fuses 51, 52, 53 and 54

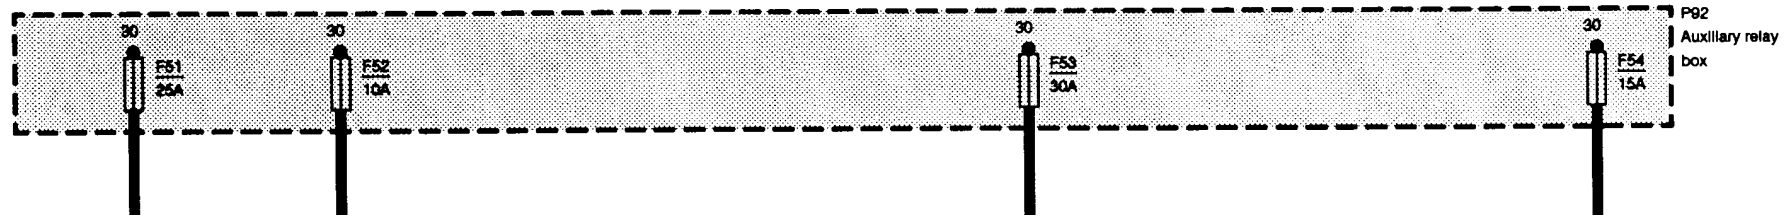

09/93

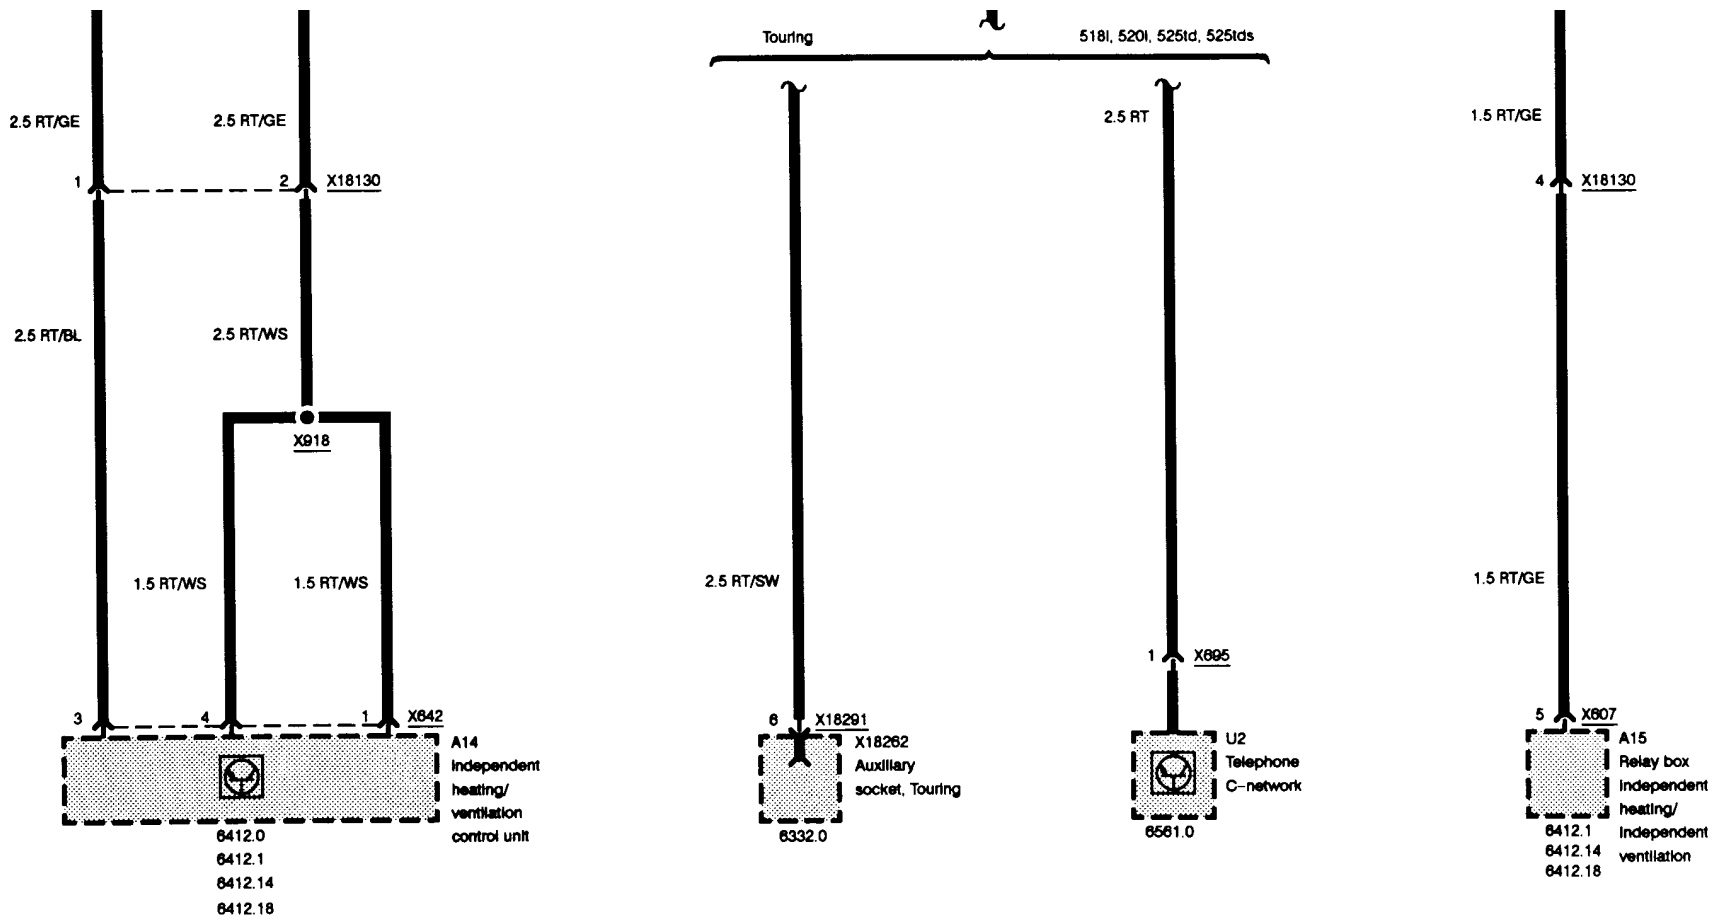

0670.3-20  
1994


**BMW 5 Fuse details**  
**Fuses 55, 56, 57, 58, 59, 60 and 61**

**Taxi**



09/93



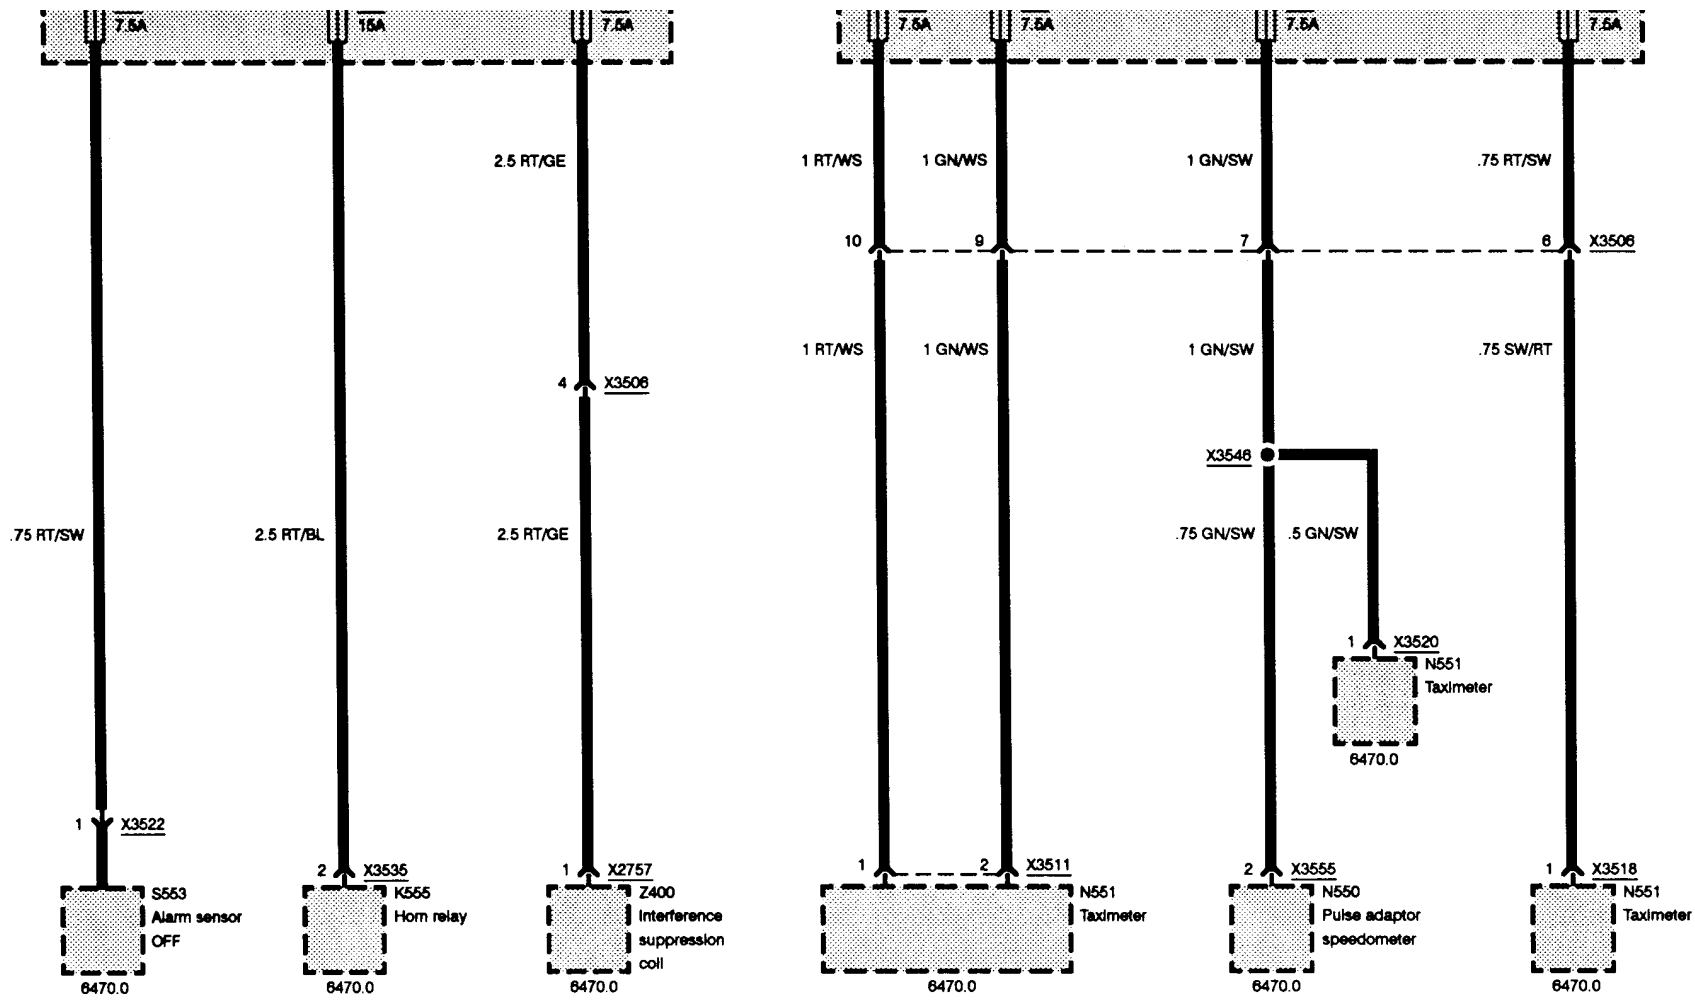

0670.3-21

1994

**BMWAG**Electrical troubleshooting manual

## 5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

## Instrument cluster (redesigned standard version)

## Scheme 6200.3

**Pin Assignment**

A=X16	26-pin, beige
B=X507	14-pin, black
C=X13060	26-pin, white

**Pin Assignment X16**

Pin	Type	Description/Function	Connection
1	E/A	TxD diagnosis line	Diagnostic connector
2	E	ABS indicator lamp	ABS control unit
3	E	Brake fluid level	Brake fluid level switch
4	E	Coolant temperature sensor	Remote thermometer sensor
5	E	Oil pressure signal	Oil pressure switch
6		not used	
7	E	Preheating, diesel	DDE control unit
8	A	SIA-Reset	Diagnostic connector
9	E	Charge indicator lamp, terminal 61	Unloader relay
10	E	Start clear diesel	DDE control unit
11		not used	
12	A	RxD diagnosis line	Diagnostic connector
13		not used	
14	E	Airbag indicator lamp	Airbag diagnostic module
15	E	Ignition lock	Ignition switch
16	E	Terminal 15	Fuse
17	A	Terminal R for airbag indicator lamp	Ignition switch
18	M	Ground	Ground connection
19		not used	
20	E	ti signal	DME/DDE control unit
21	E	Terminal 30	Fuse
22	E	Terminal R	Fuse
23	E	Main beam indicator lamp	Direction switch
24	E	Turn signal indicator lamp for trailer	Hazard warning relay
25	E	Terminal 15	Fuse
26	E	TD signal	DME/DDE control unit

**Pin Assignment X507**

Pin	Type	Description/Function	Connection
1	E	EGS program indicator	EGS control unit
2	E	EGS program indicator	EGS control unit
3	E	Automatic gear indicator	Selector lever switch
4	E	Automatic gear indicator	Selector lever switch
5	E	Automatic gear indicator	Selector lever switch
6	E	Automatic gear indicator	Selector lever switch
7		not used	

8	E	Terminal 15	Fuse
9		not used	
10	A	Connecting line	Instrument cluster
11		not used	
12		not used	
13	A	Automatic signal	EGS control unit
14	M	Ground	Ground connection

**Pin Assignment X13060**

Pin	Type	Description/Function	Connection
1	E	Instrument cluster lights	Light switch
2	E	Position pulse	Rear axle reed contact
3	E	Fuel reserve lamp	Fuel level sending unit
4		not used	
5	A	Position pulse DWA	DWA module
6		not used	
7	E	Indicator lamp, rear fog light	Fog light switch
8	E	Indicator lamp, front fog lamp	Fog light switch
9	E	Brake pad wear indicator	Front left brake pad sensor
10	A	Brake pad wear indicator	Rear right brake pad sensor
11	M	Ground	Ground connection
12	A	Tacho A signal	Control units
13	A	Position pulse	Rear axle reed contact
14	E	Fuel gauge	Fuel level sending unit
15	E	Connecting line	Instrument cluster
16		not used	
17		not used	
18		not used	
19	E	Right turn signal indicator	Hazard warning relay
20	E	Left turn signal indicator	Hazard warning relay
21		not used	
22		not used	
23		not used	
24	E	Handbrake indicator lamp	Handbrake switch
25		not used	
26	A	Gong signal	Gong


**E = Input, A = Output, M = Ground**

09/93

**6200.3-00**


1994

**standard version)**

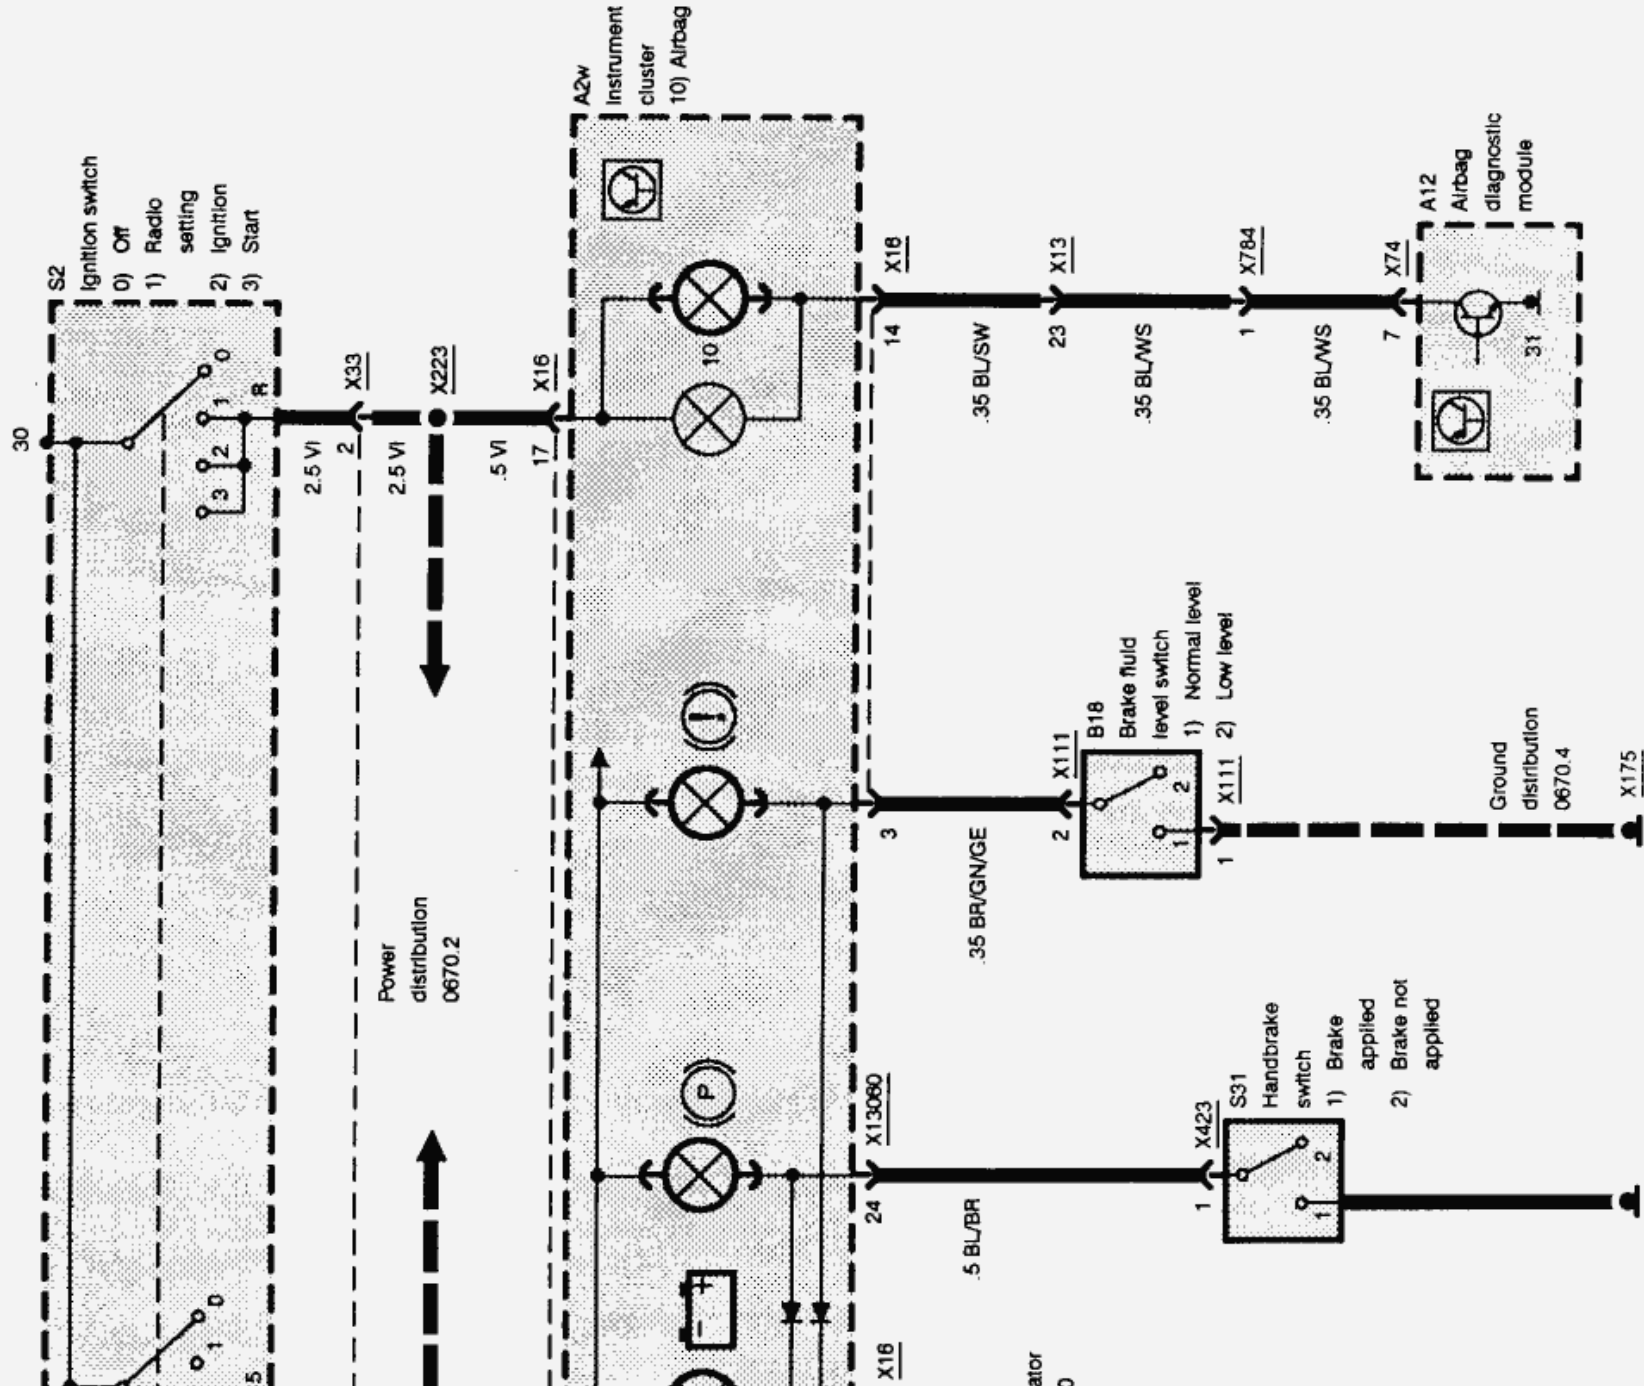



# Instrument cluster (redesigned) Instrument cluster gauges

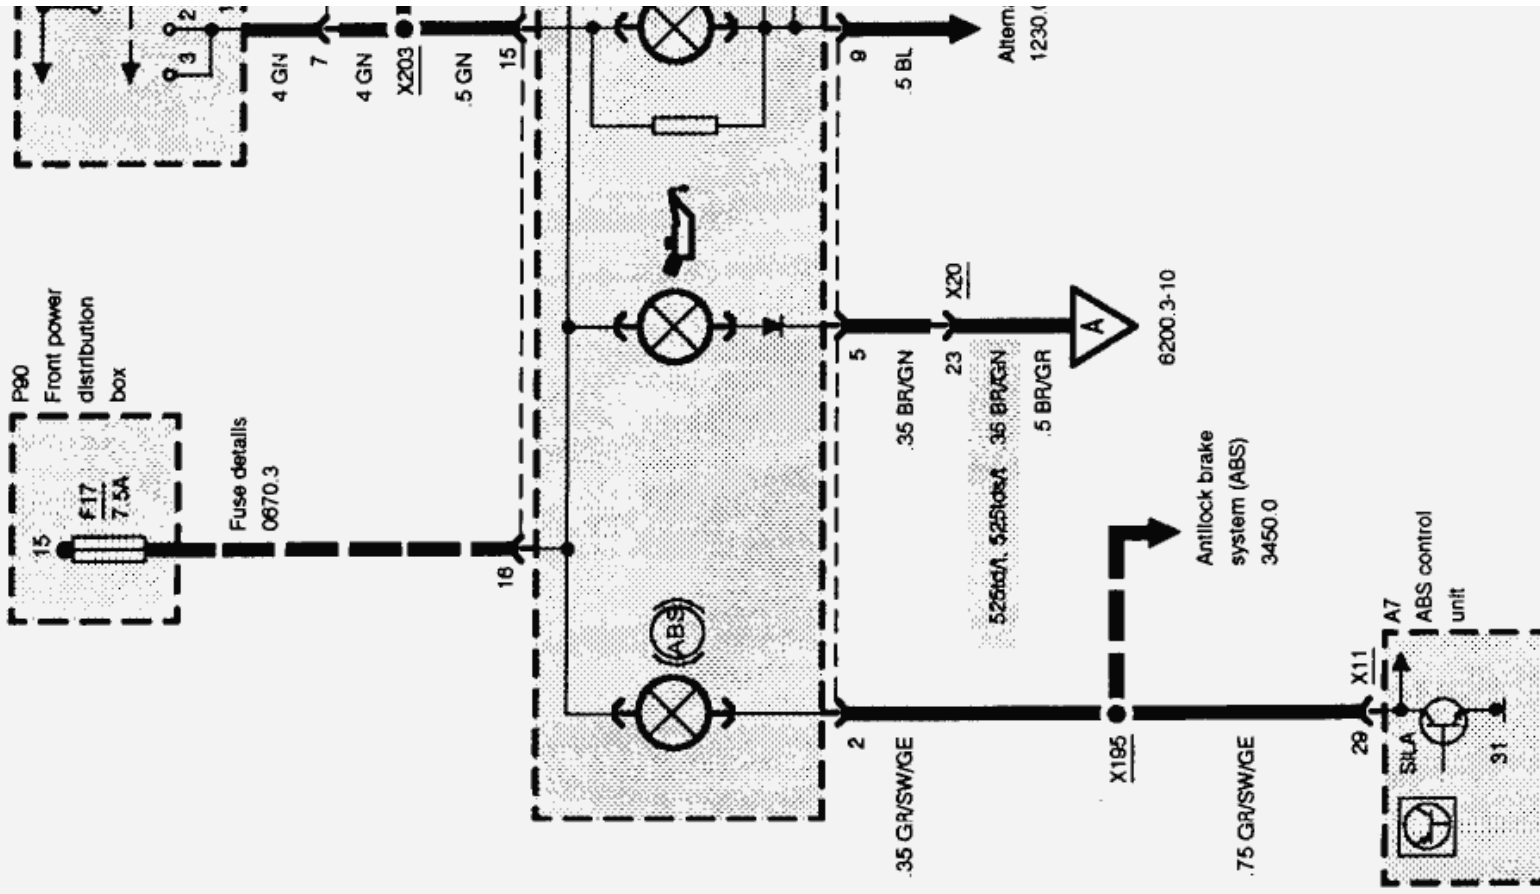


09/93

6200.3-01


1994

Standard version)

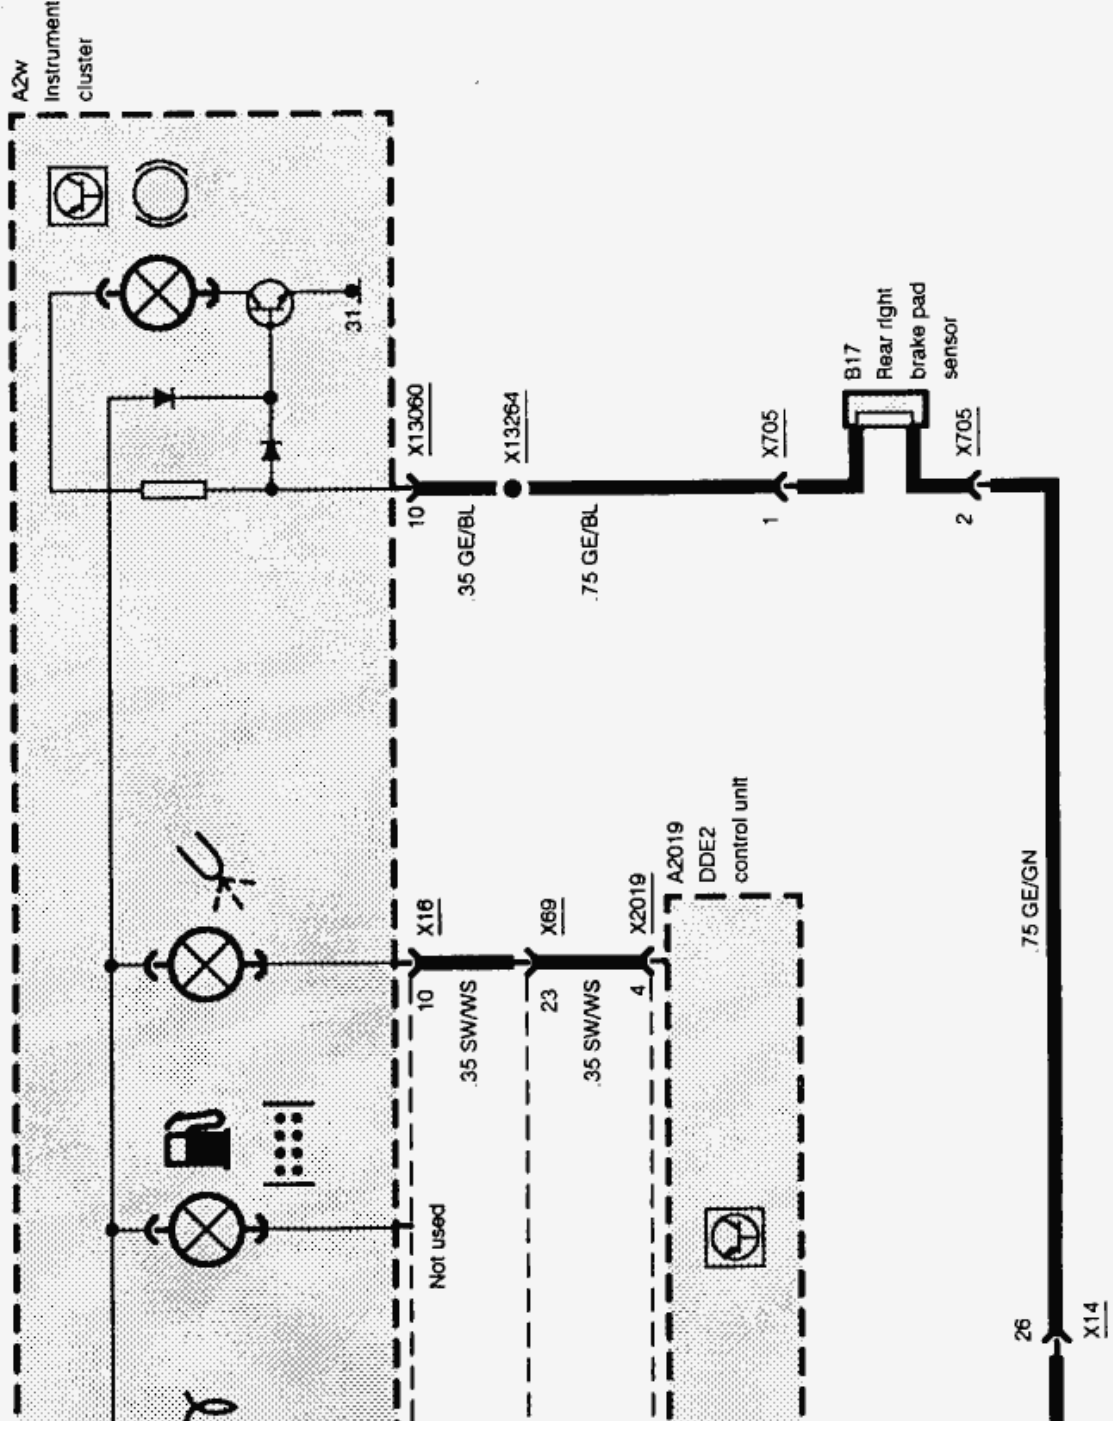




# Instrument cluster (redesigned sta Instrument cluster gauges

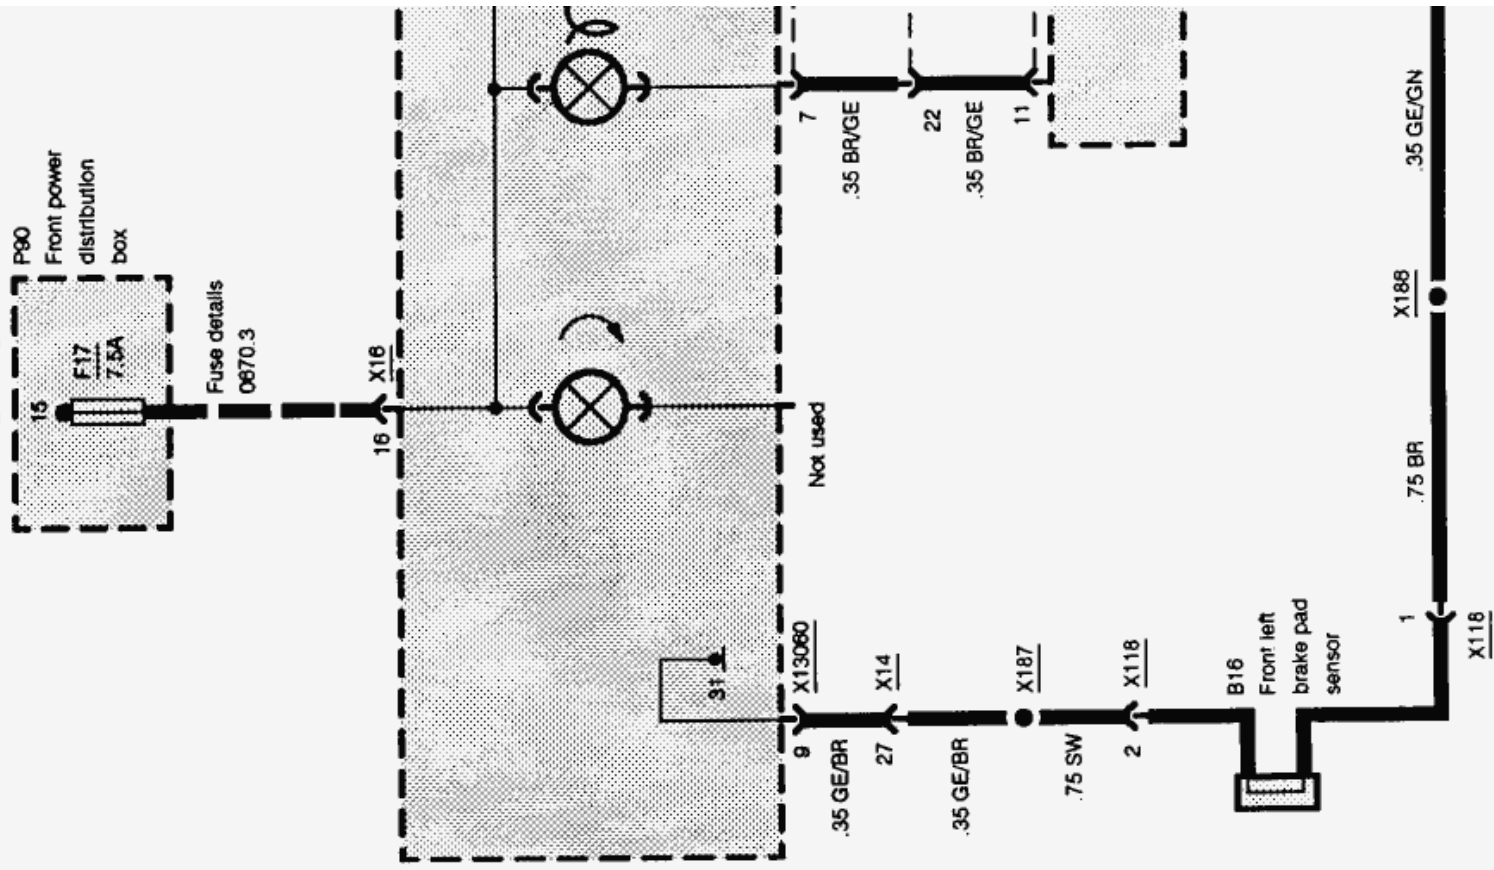


Standard version)

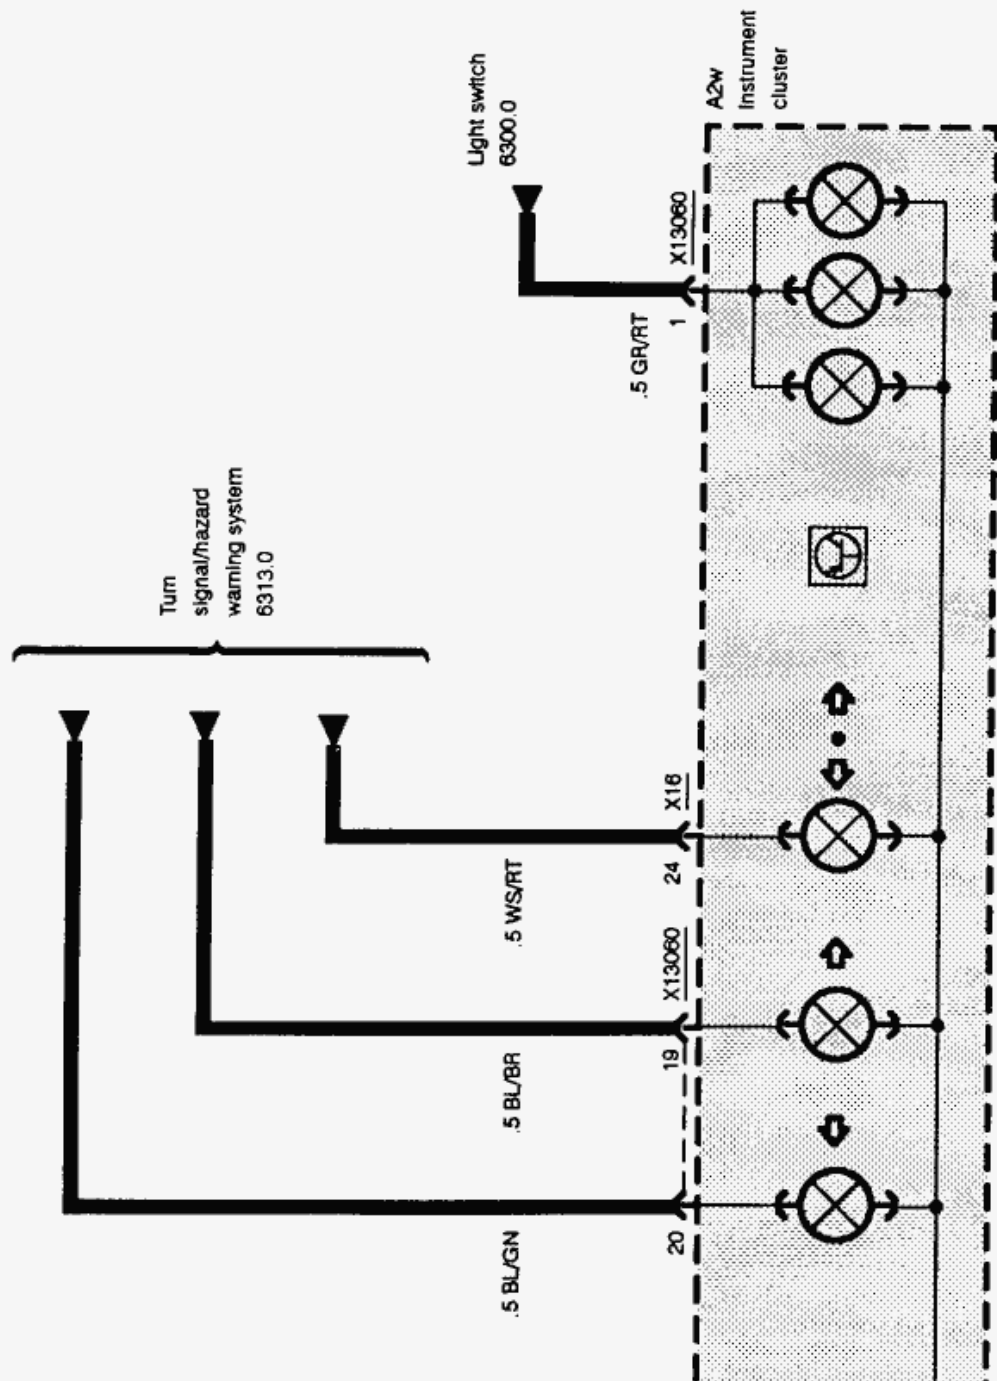






# Instrument cluster (redesigned stan Instrument cluster gauges

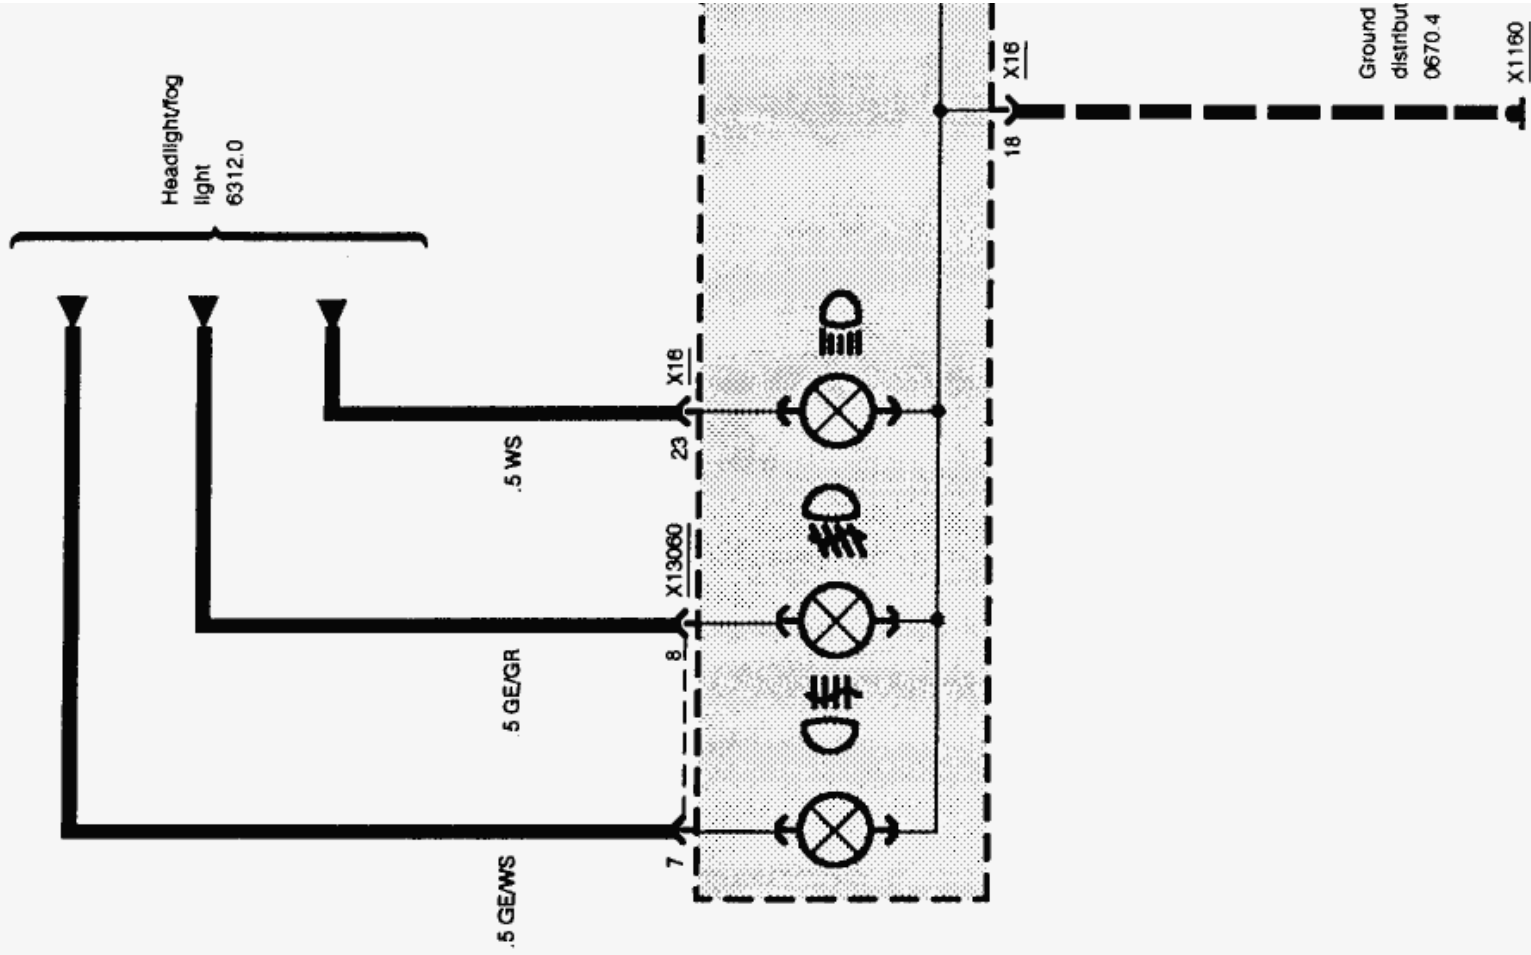


**Third version)**

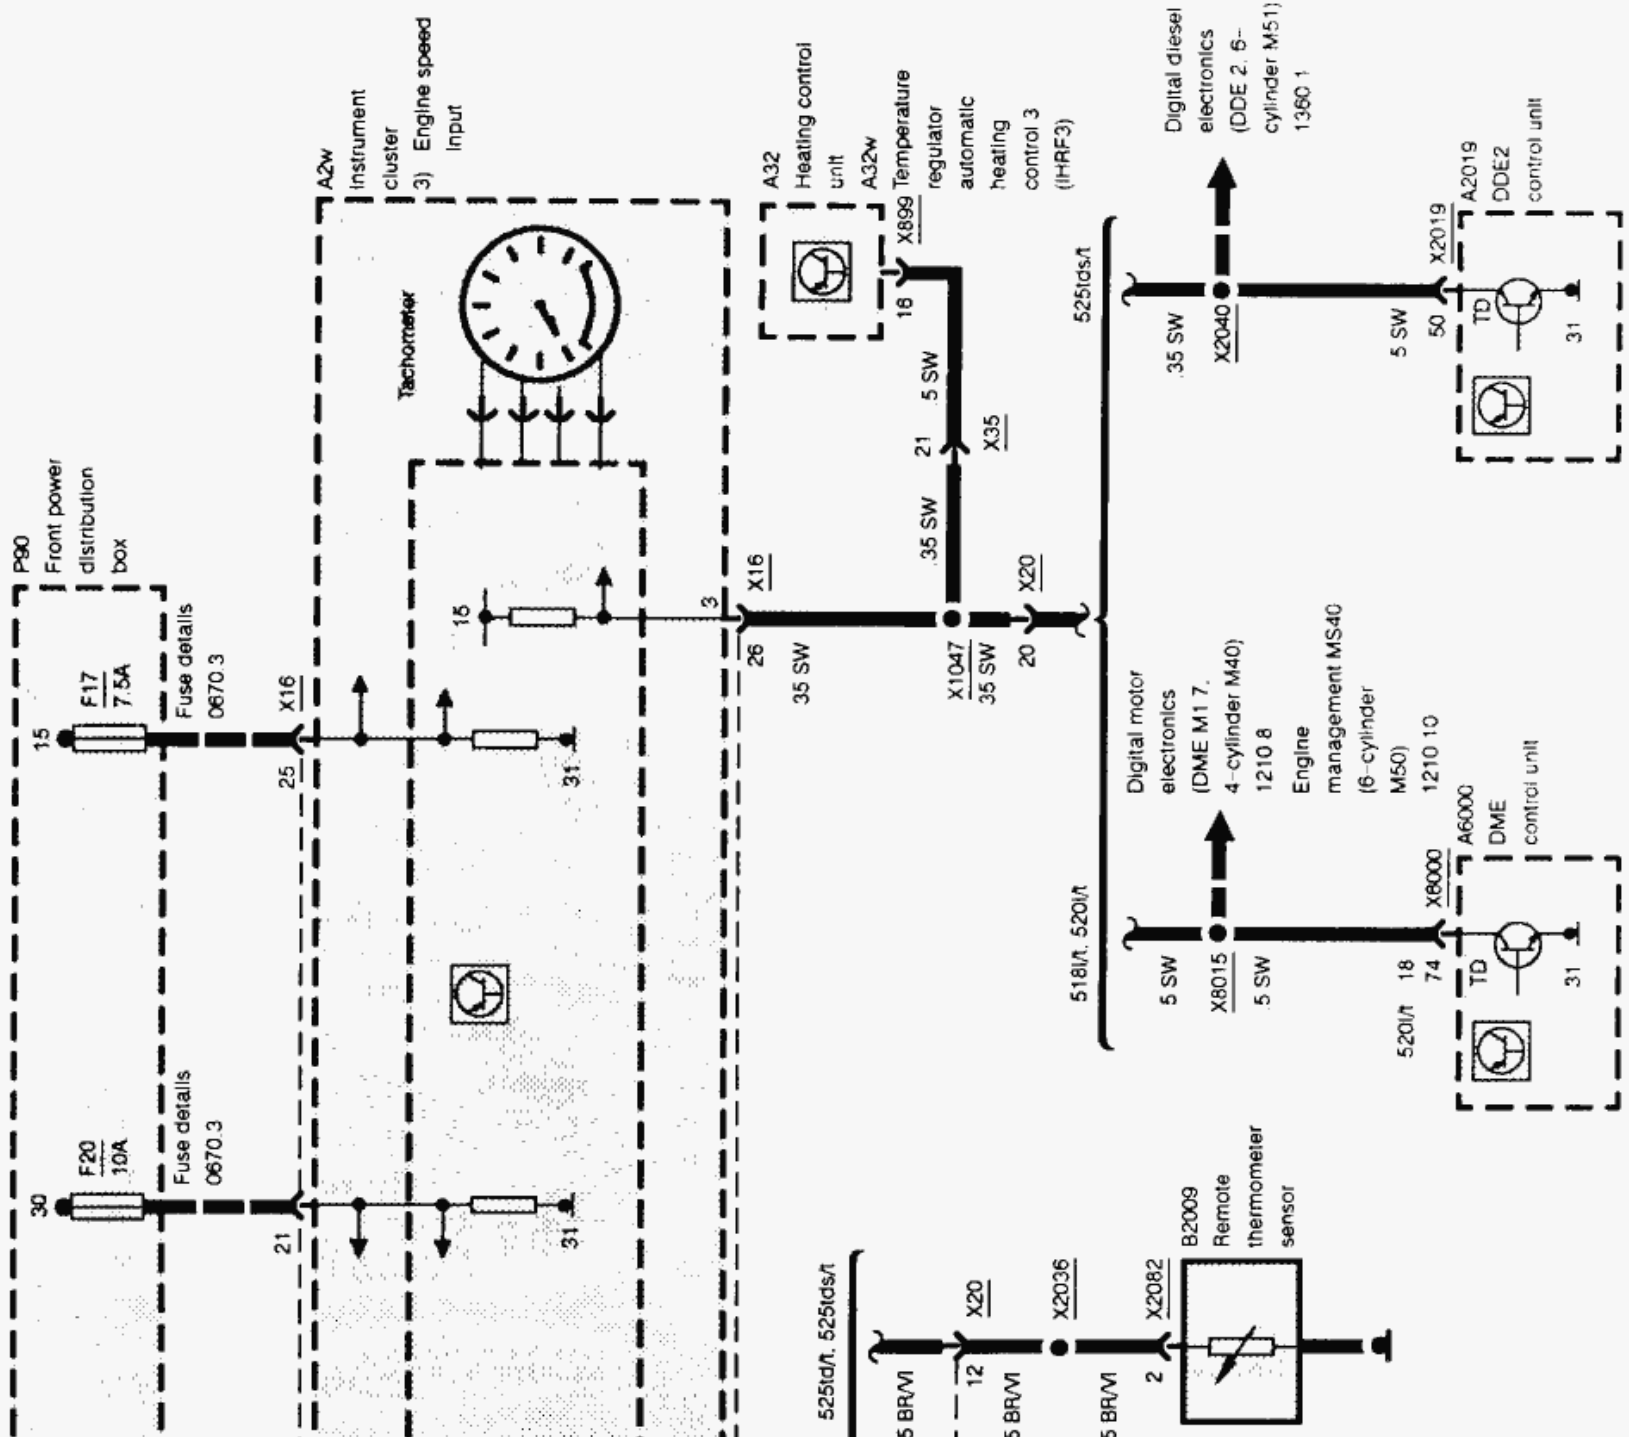




# Instrument cluster (redesigned standard instrument cluster)

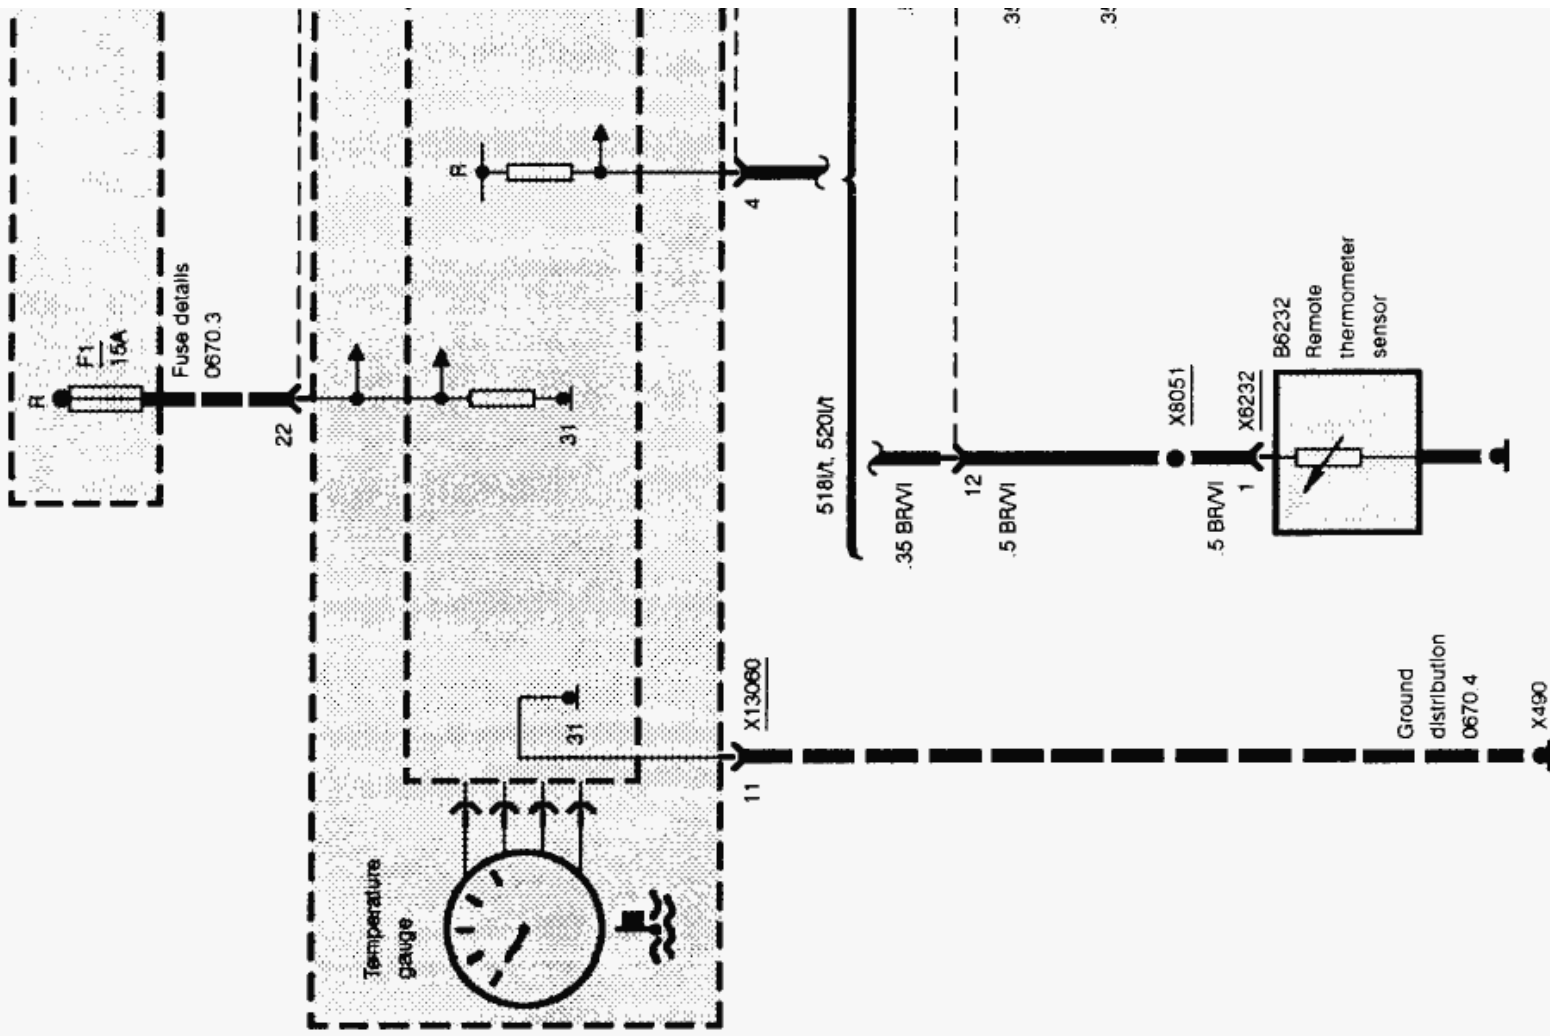


1 version)

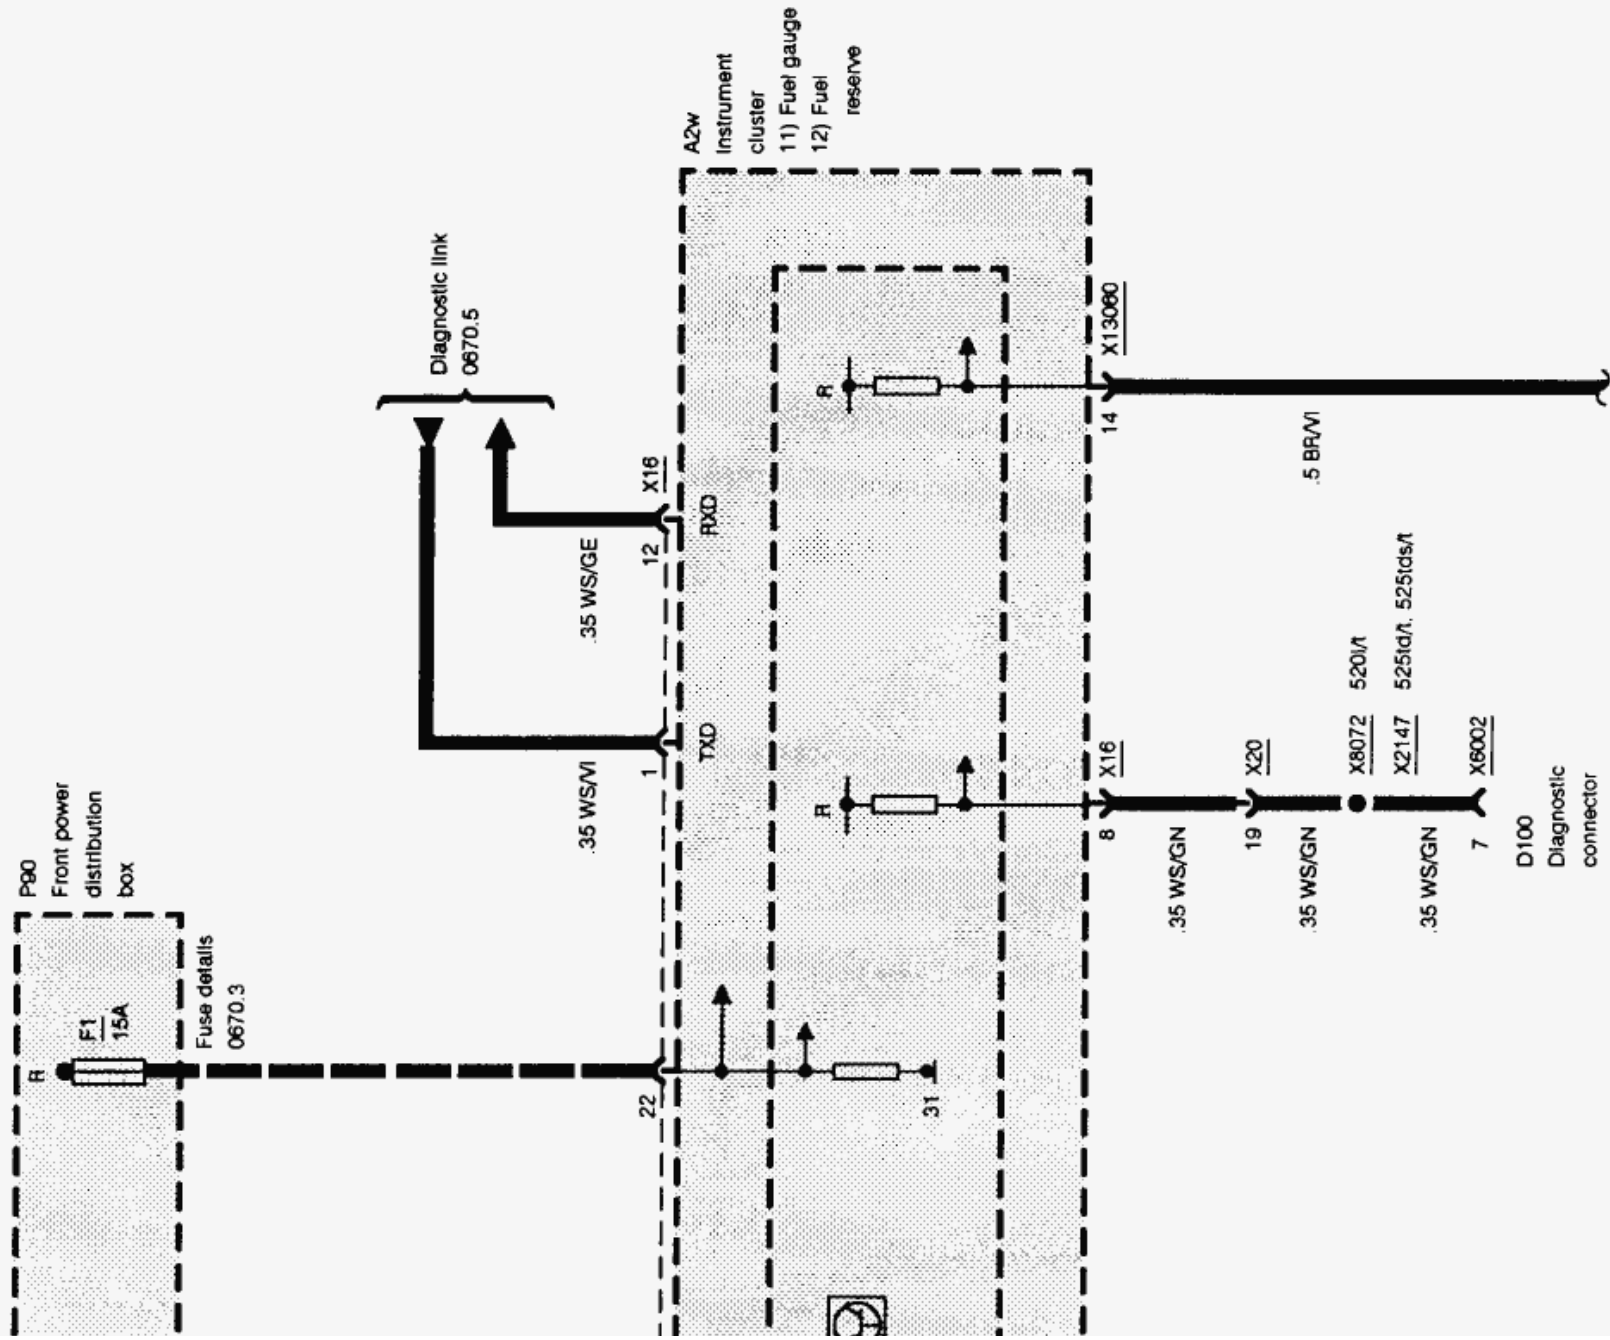





# Instrument cluster (redesigned standard)

## Instrument cluster

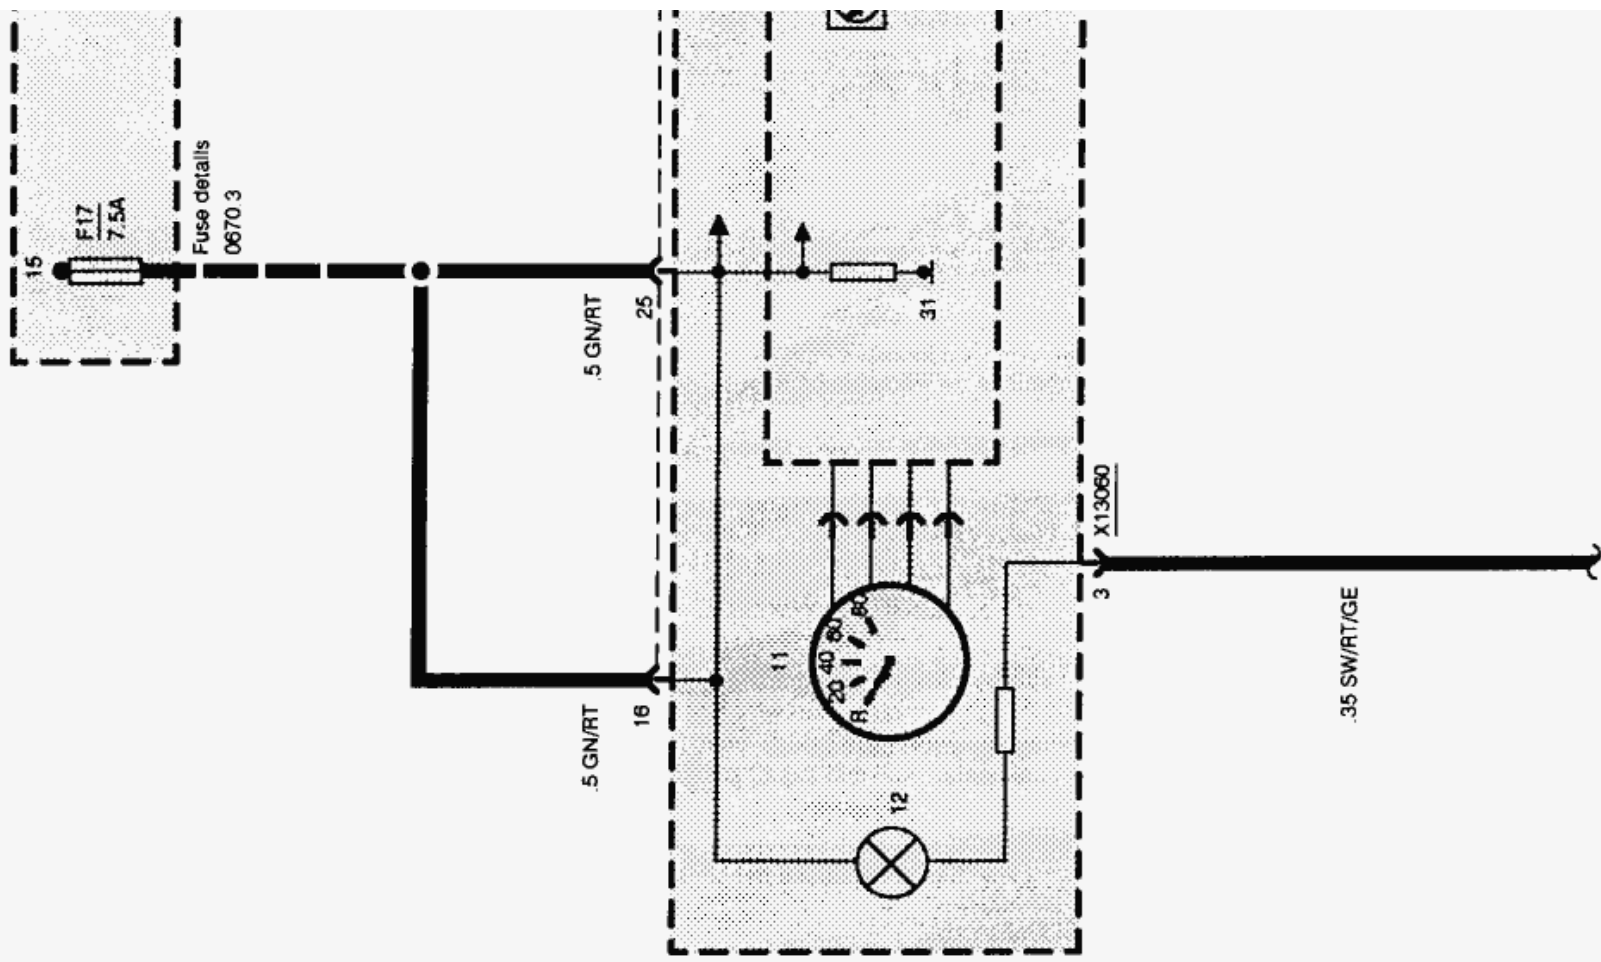

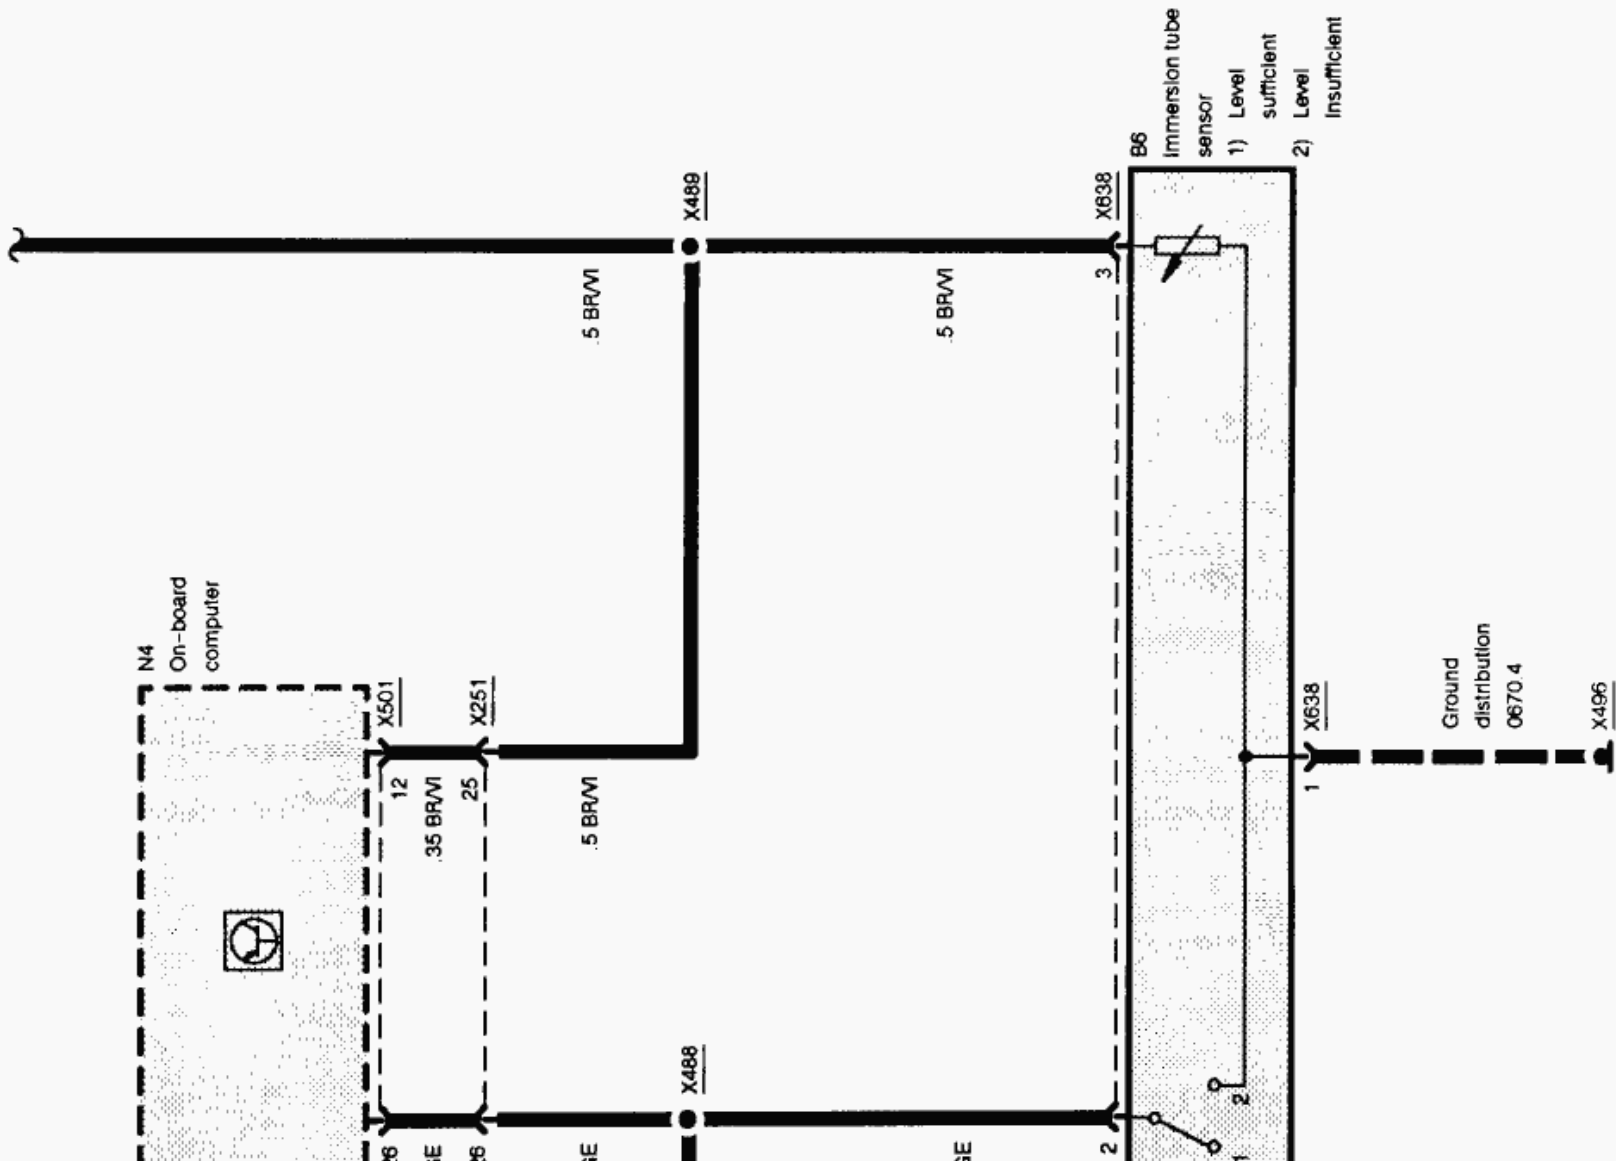


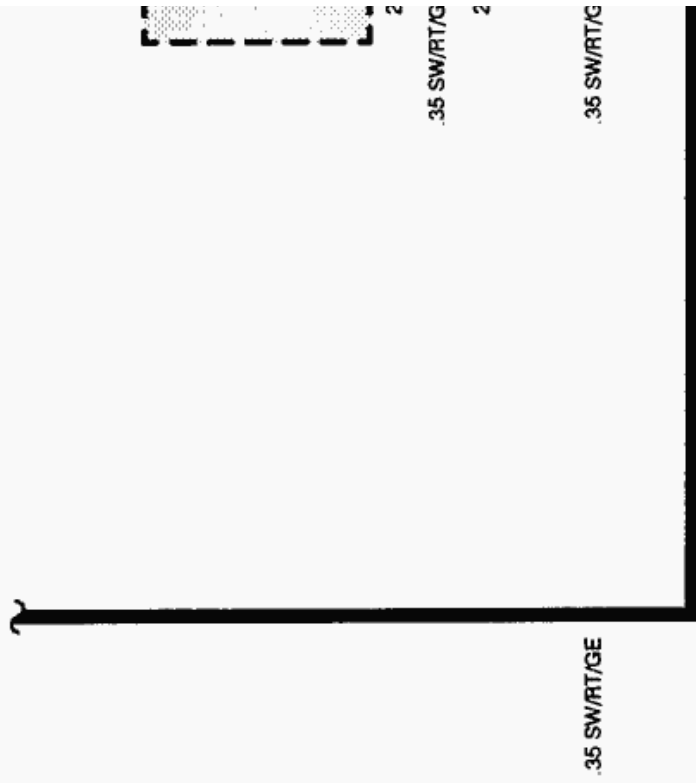


.35 SW/RT/G  
2

.35 SW/RT/G

.35 SW/RT/G

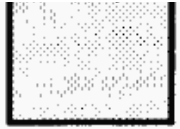

ersion)

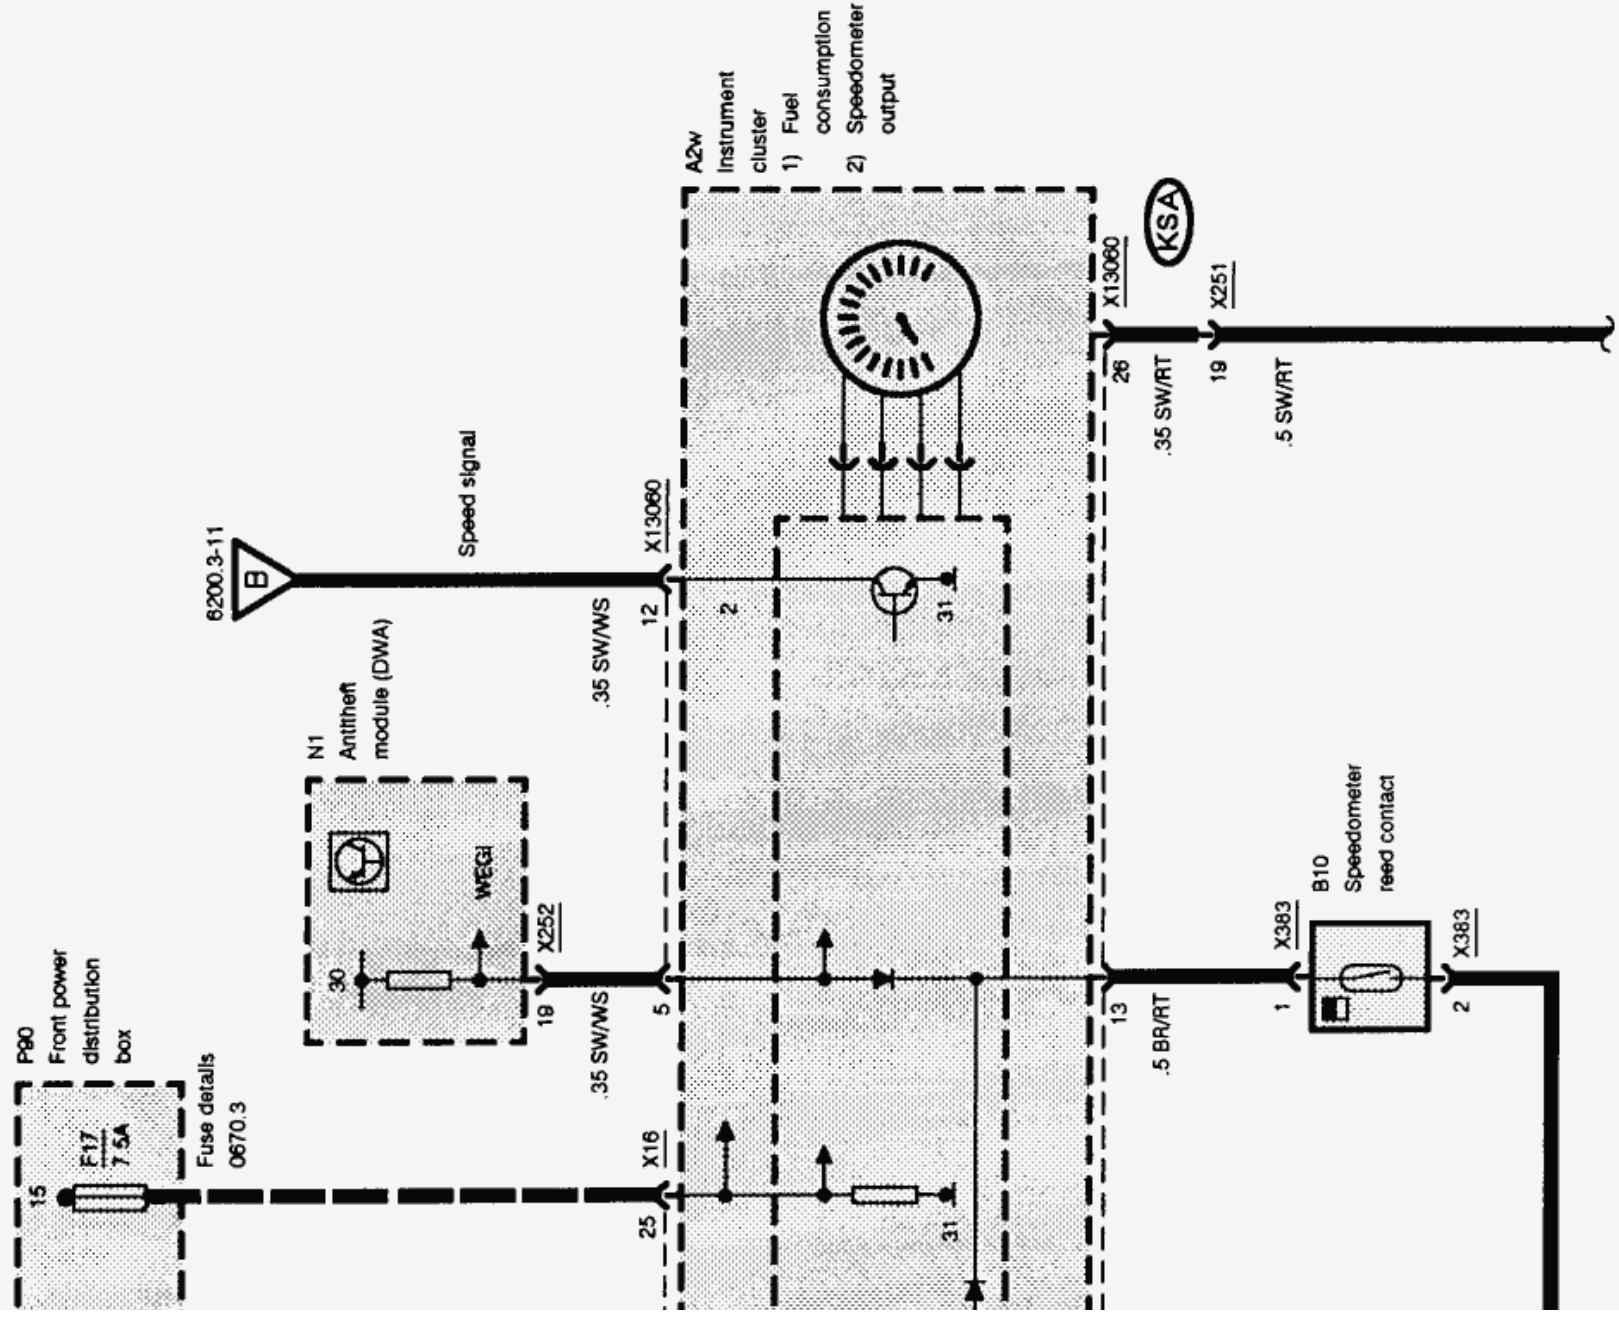






# Instrument cluster (redesigned standard version)


## Instrument cluster

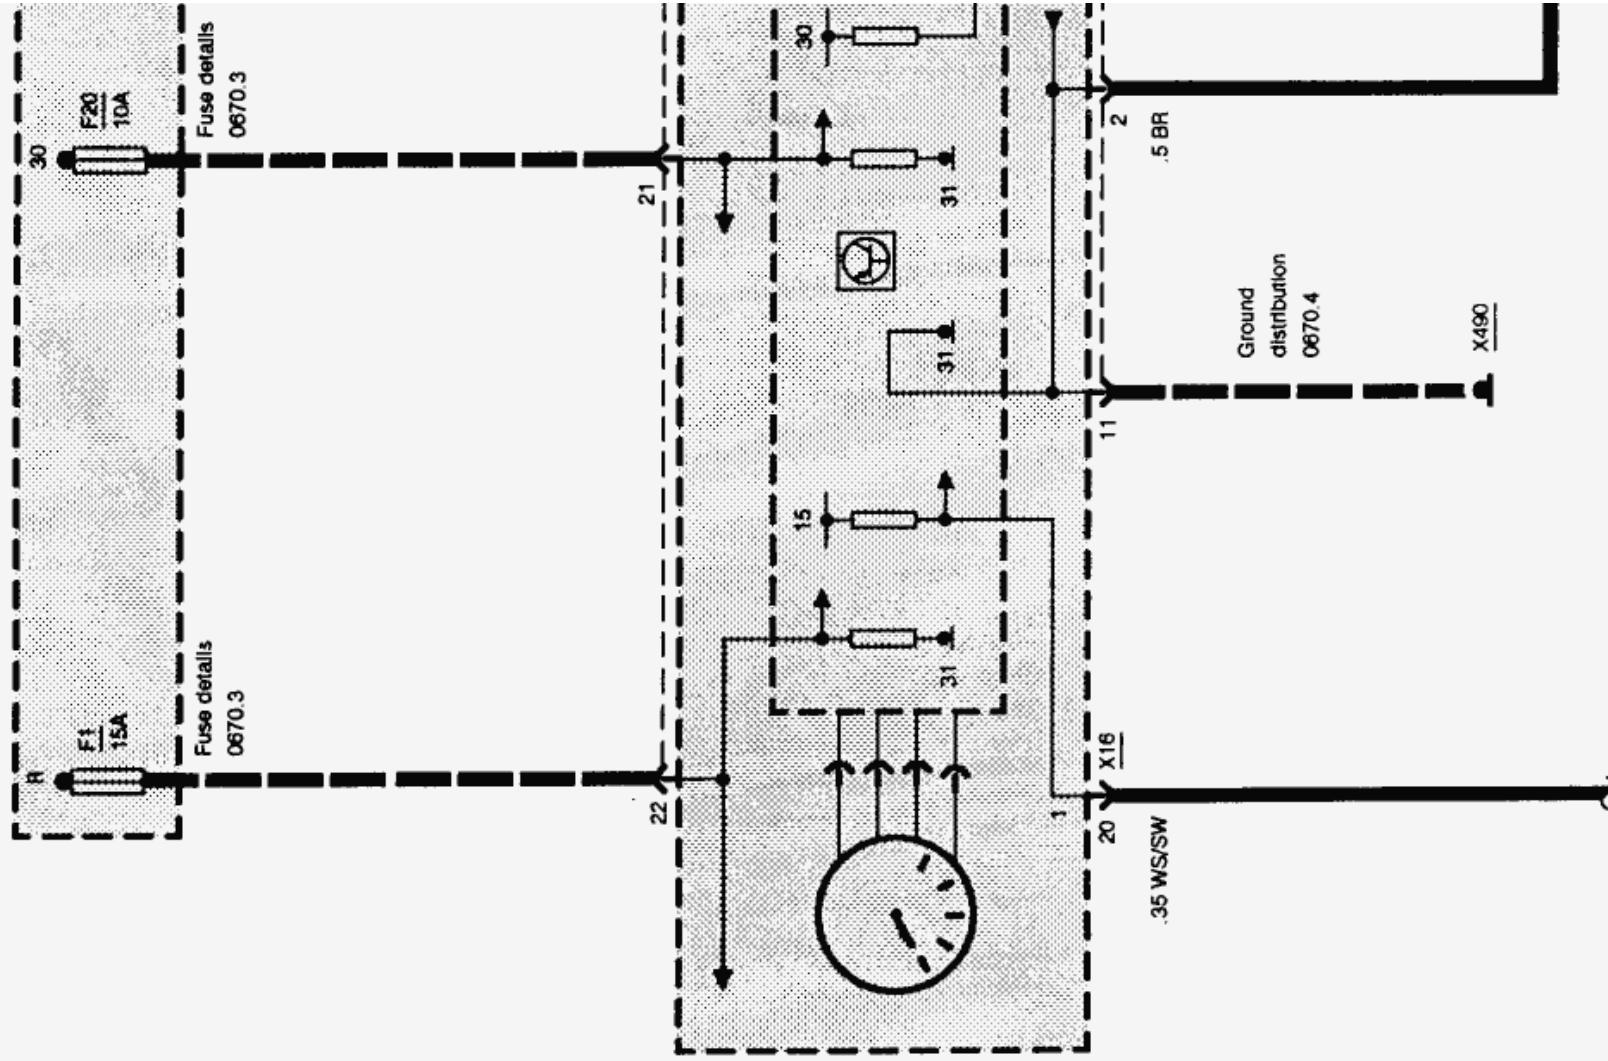


09/93


6200.3-07

1994

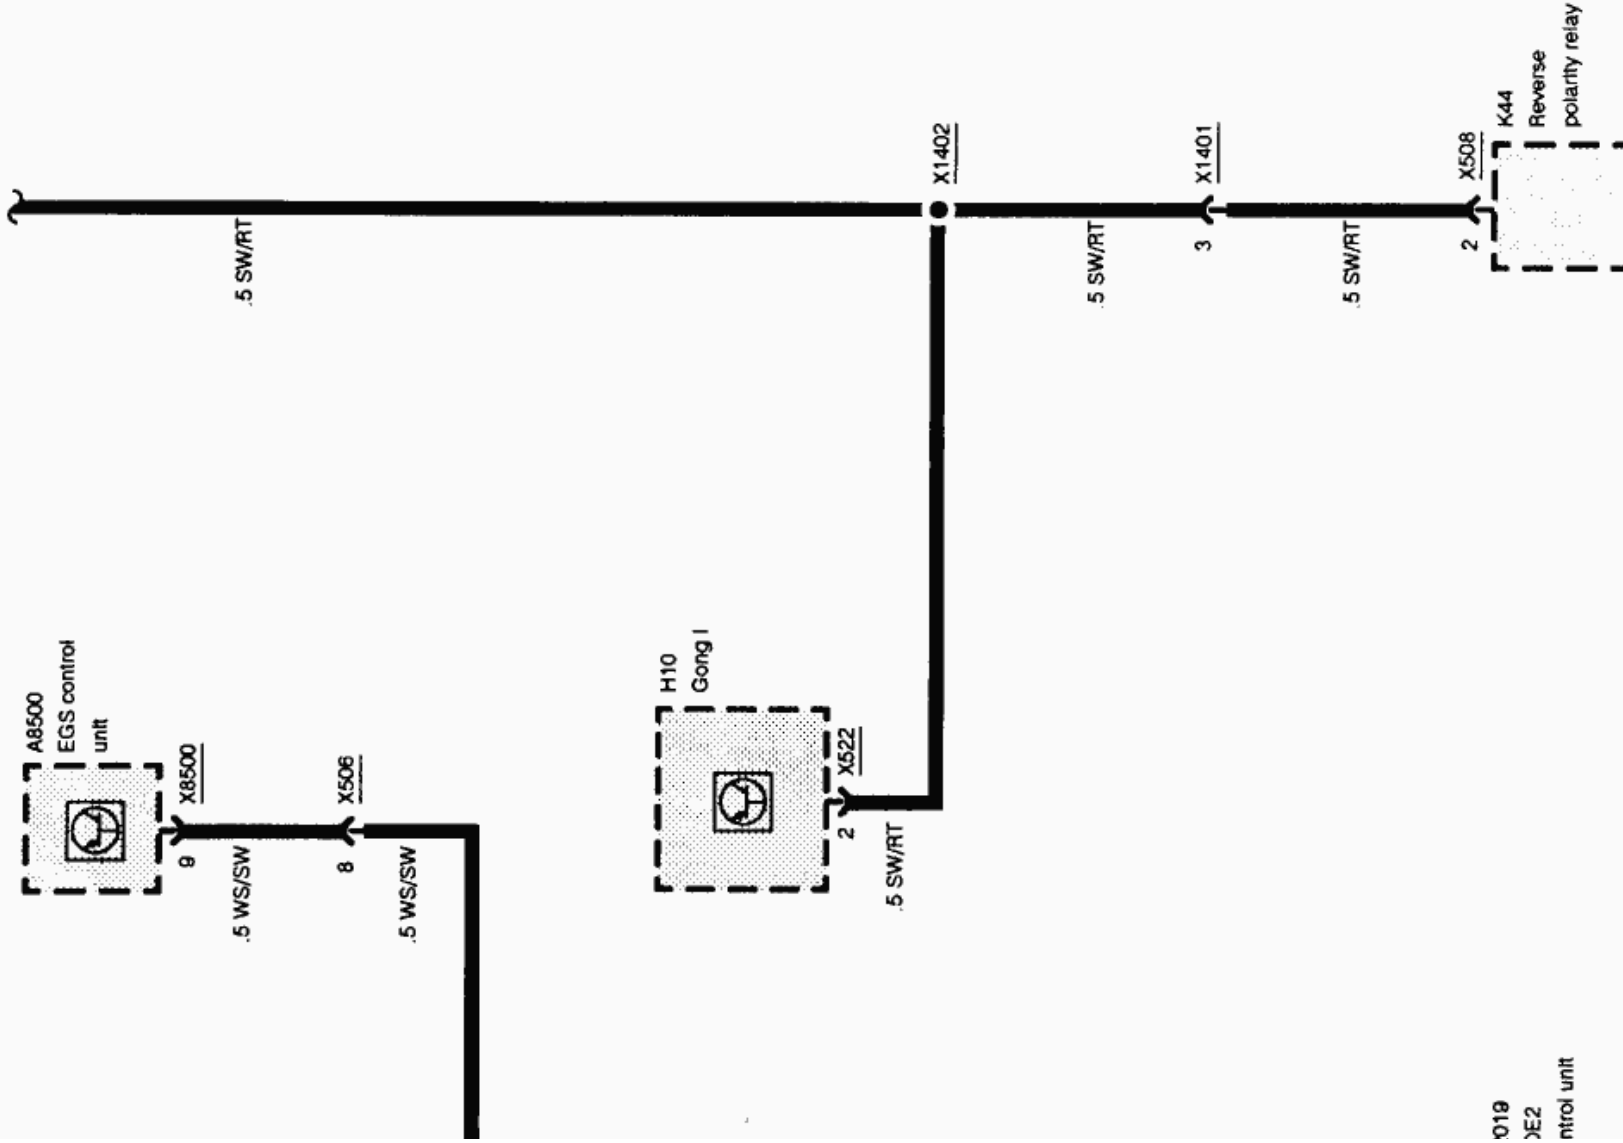

019  
E2  
ntrol unit

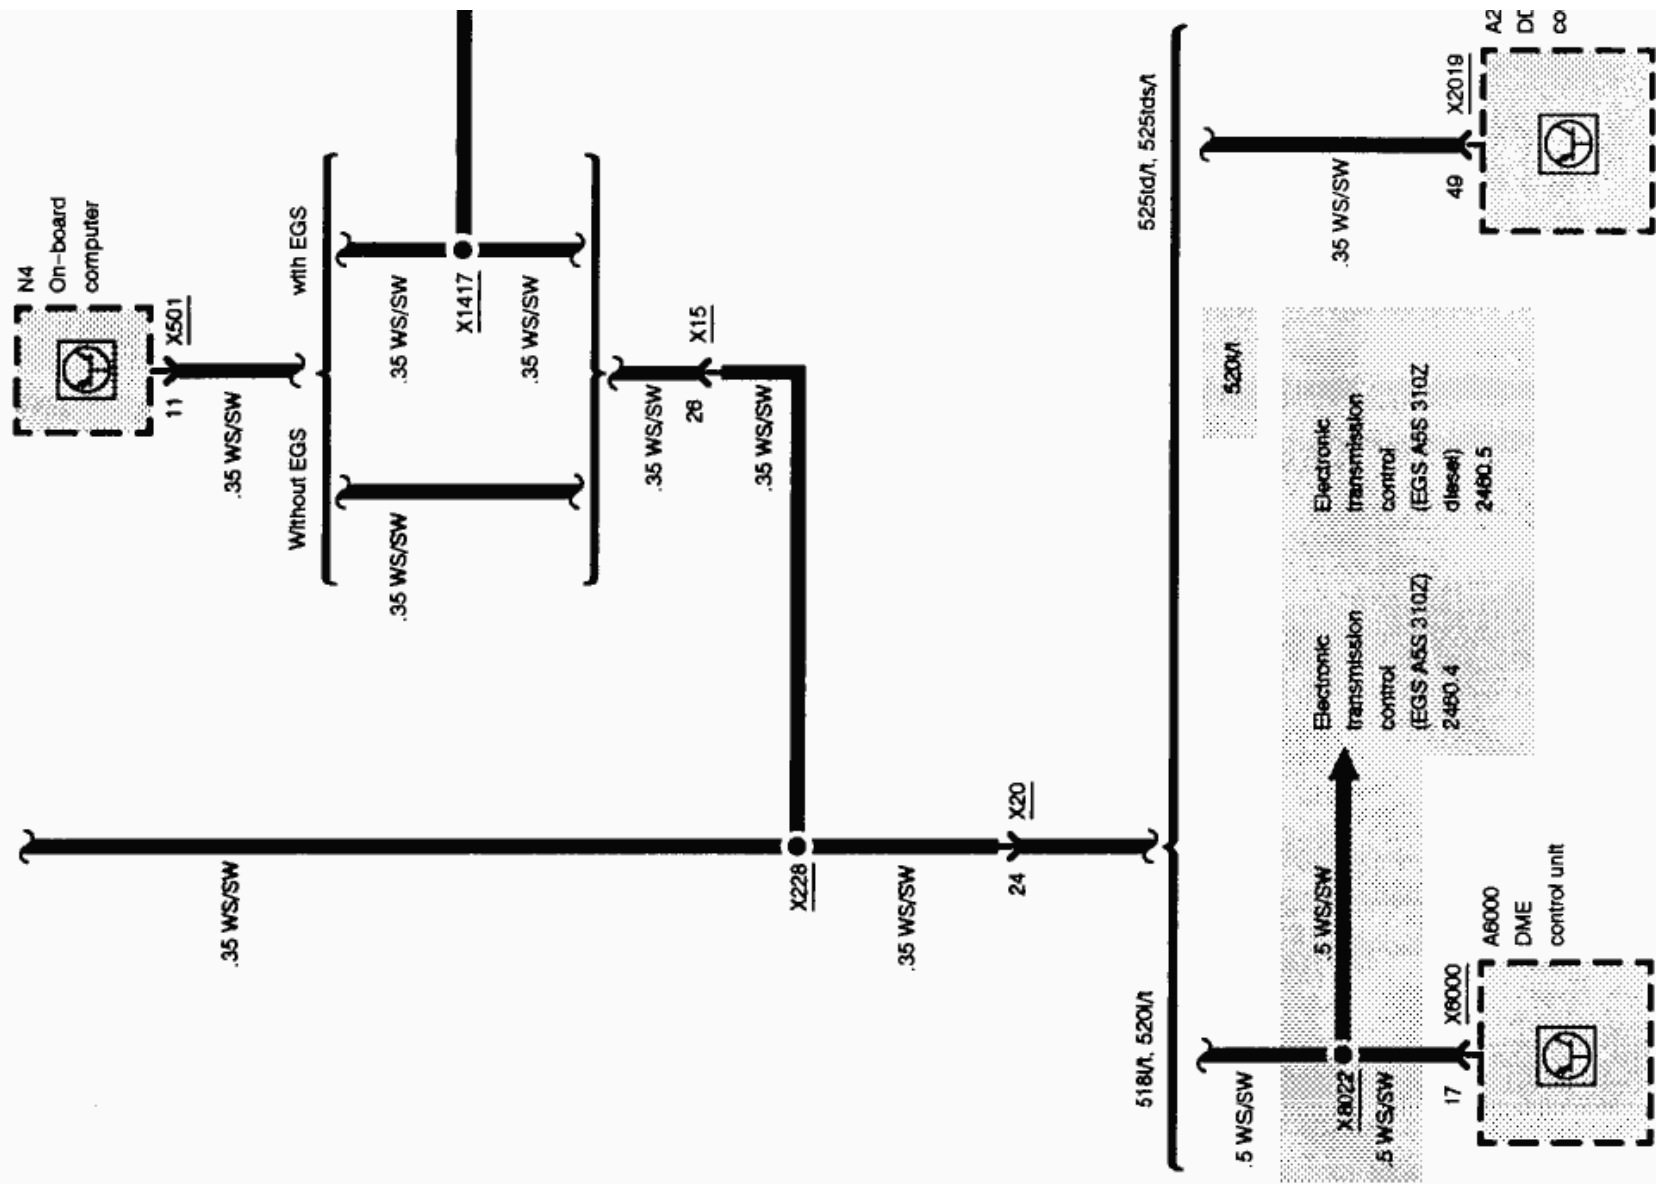

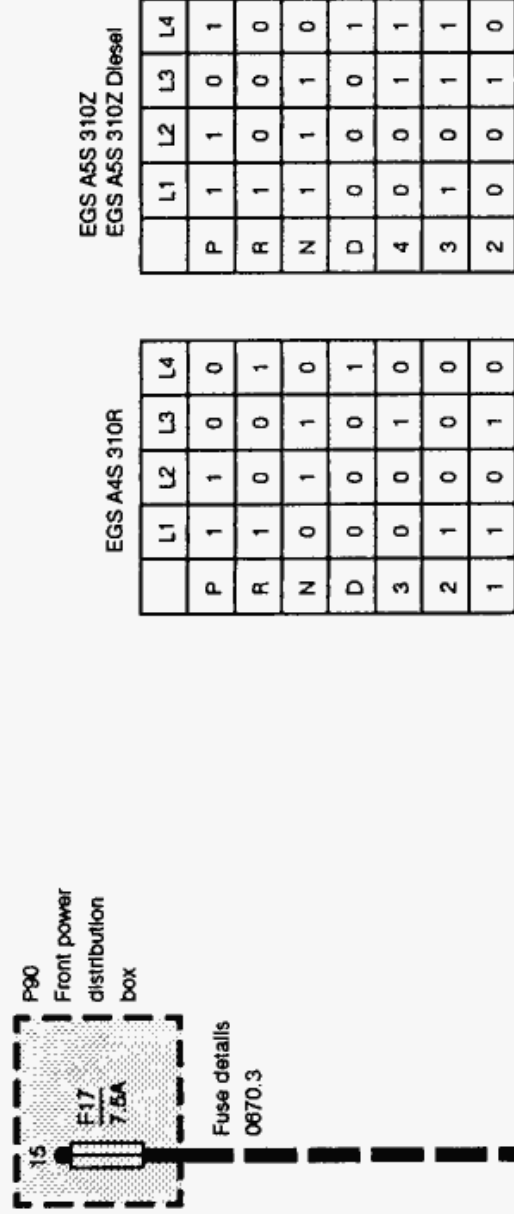


EGS A4S 310R

	L1	L2	L3	L4
P	1	1	0	0
R	1	0	0	1
N	0	1	1	0
D	0	0	0	1
3	0	0	1	0
2	1	0	0	0
1	1	0	1	0

EGS A5S 310Z  
EGS A5S 310Z Diesel


	L1	L2	L3	L4
P	1	1	0	1
R	1	0	0	0
N	1	1	1	0
D	0	0	0	1
4	0	0	1	1
3	1	0	1	1
2	0	0	1	0

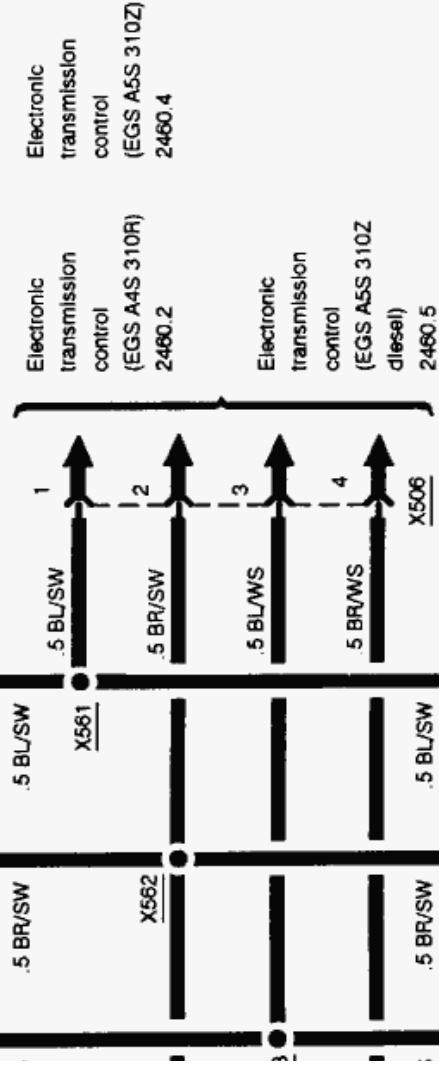



# Instrument cluster (redesigned standard versio


## Gear selector lever

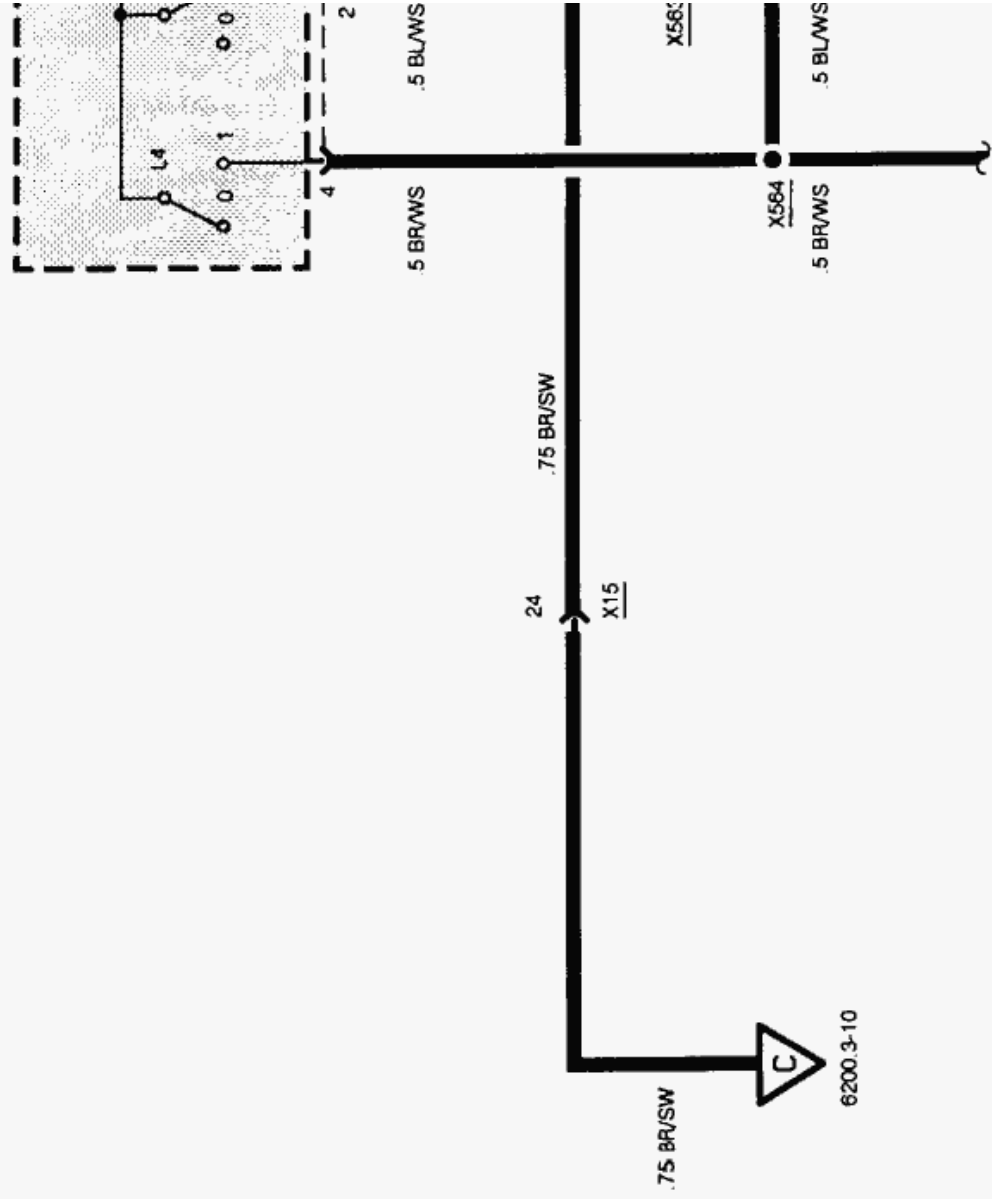


09/93

6200.3-09

1994

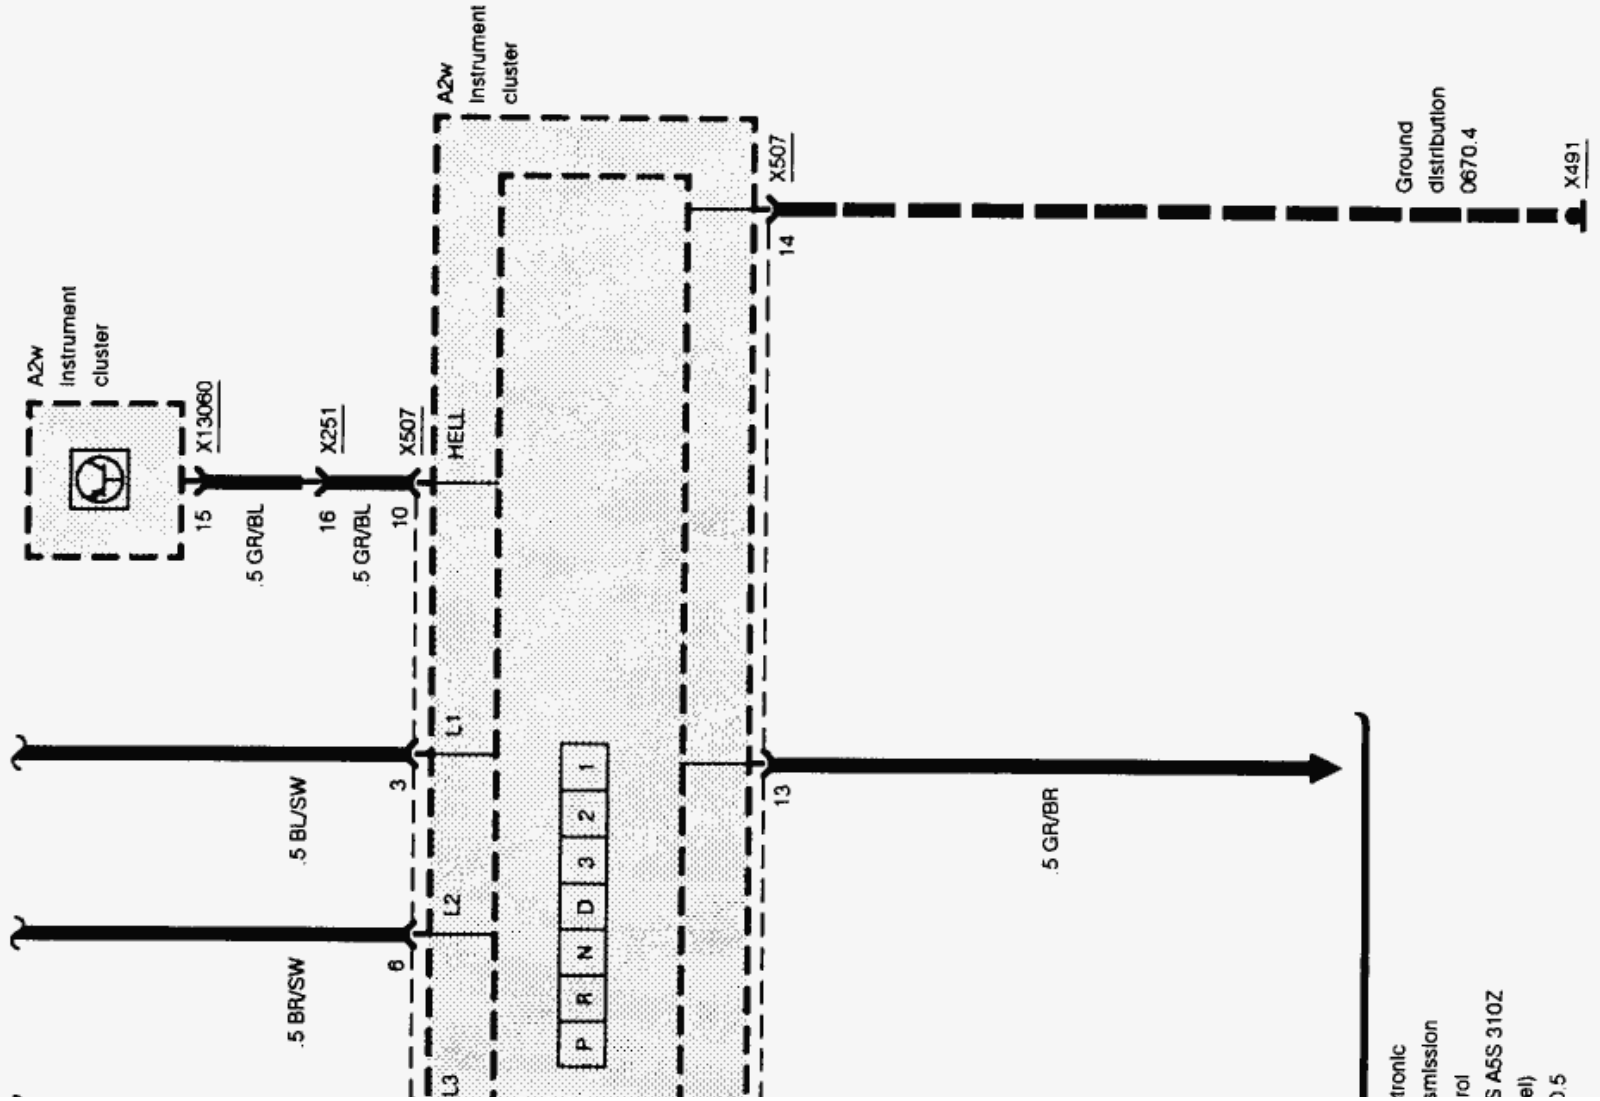


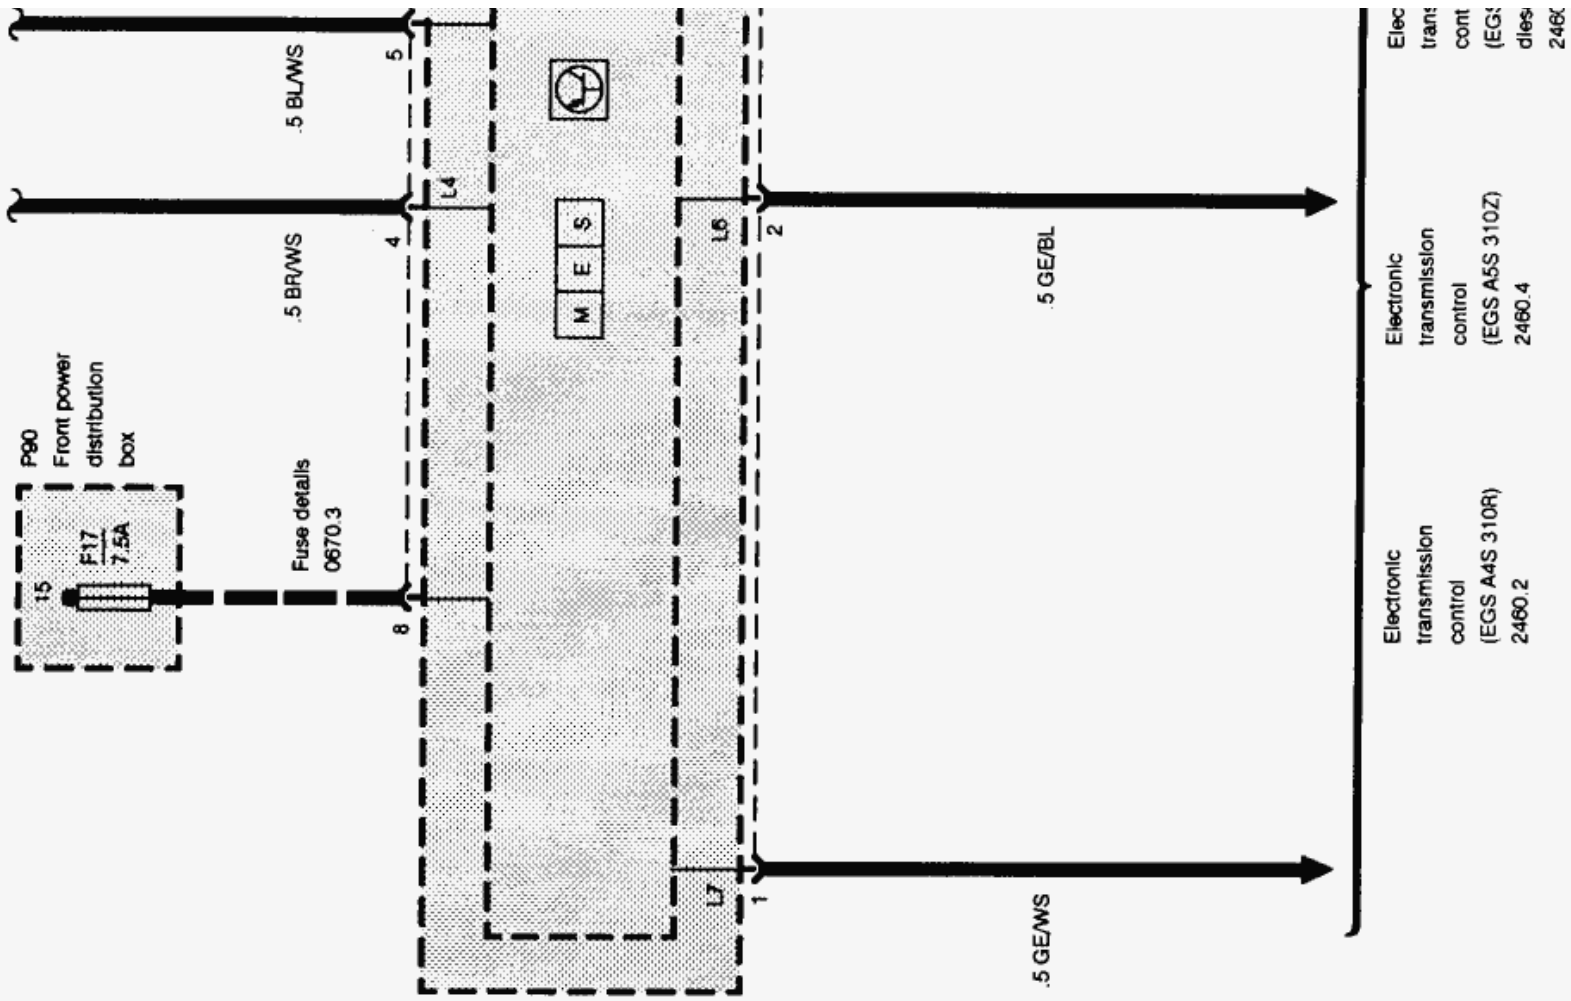

09/93

6200.3-10



1992

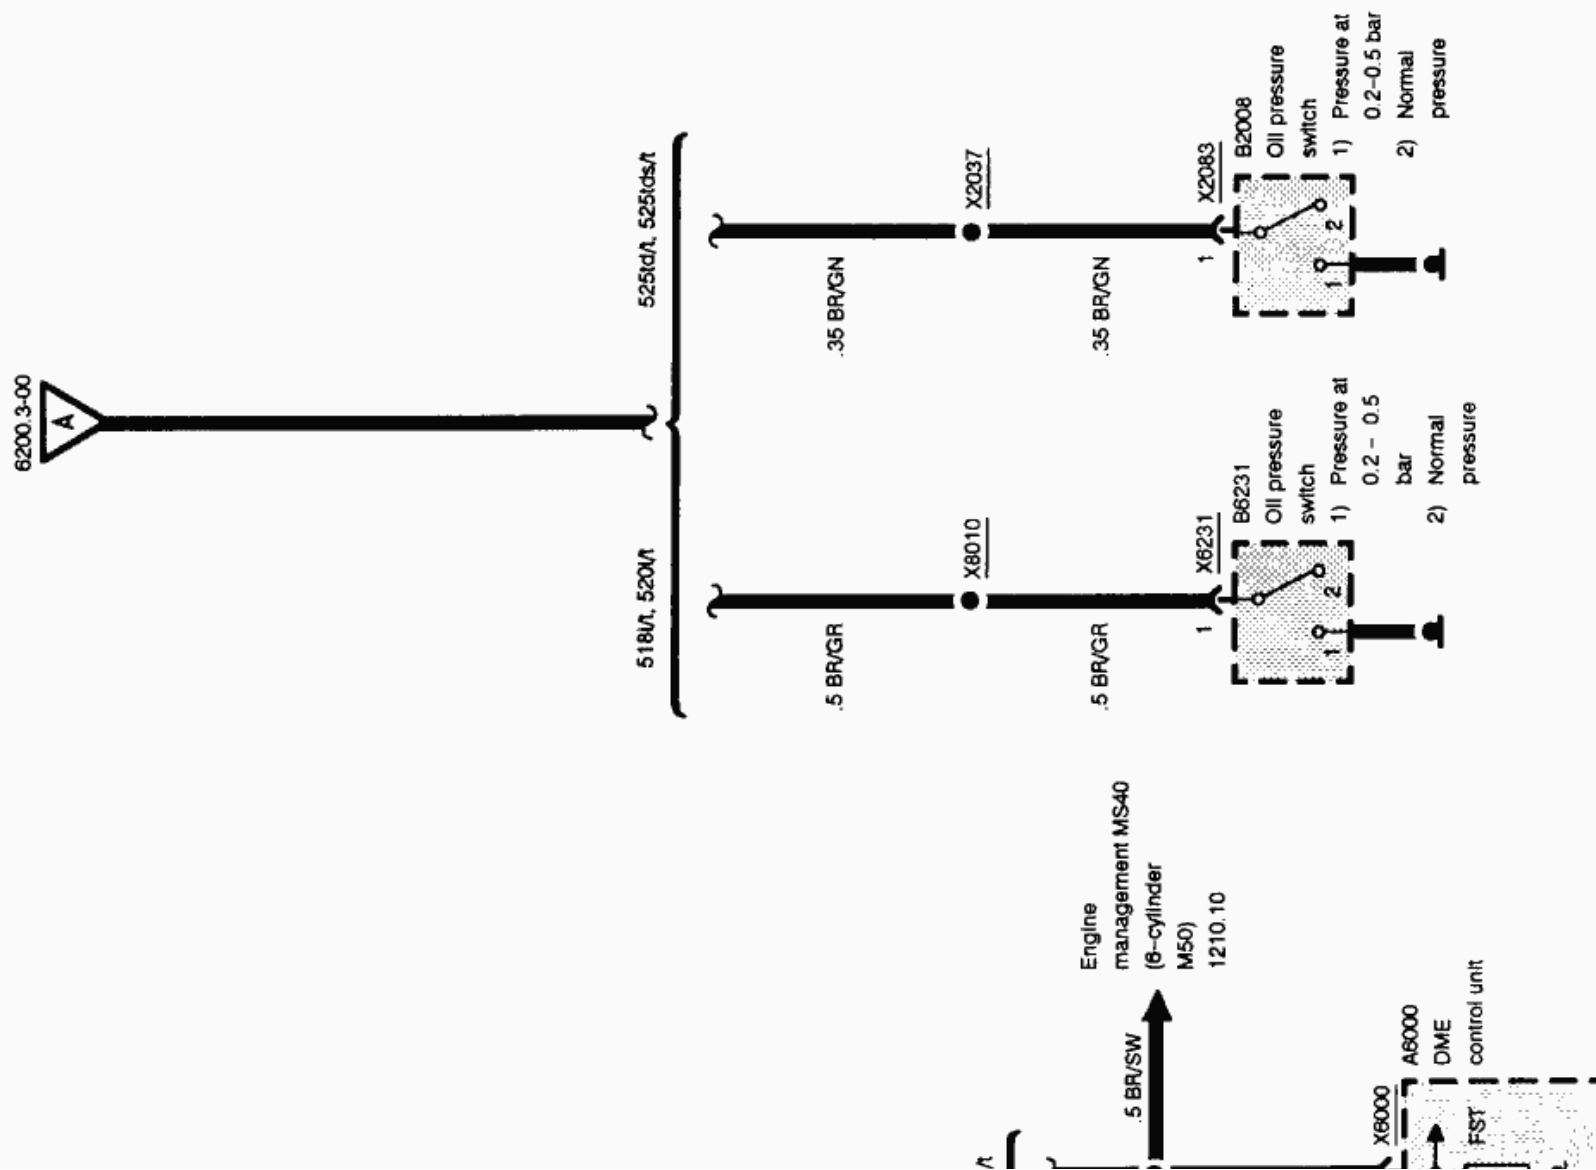







# Instrument cluster (redesigned standard version)

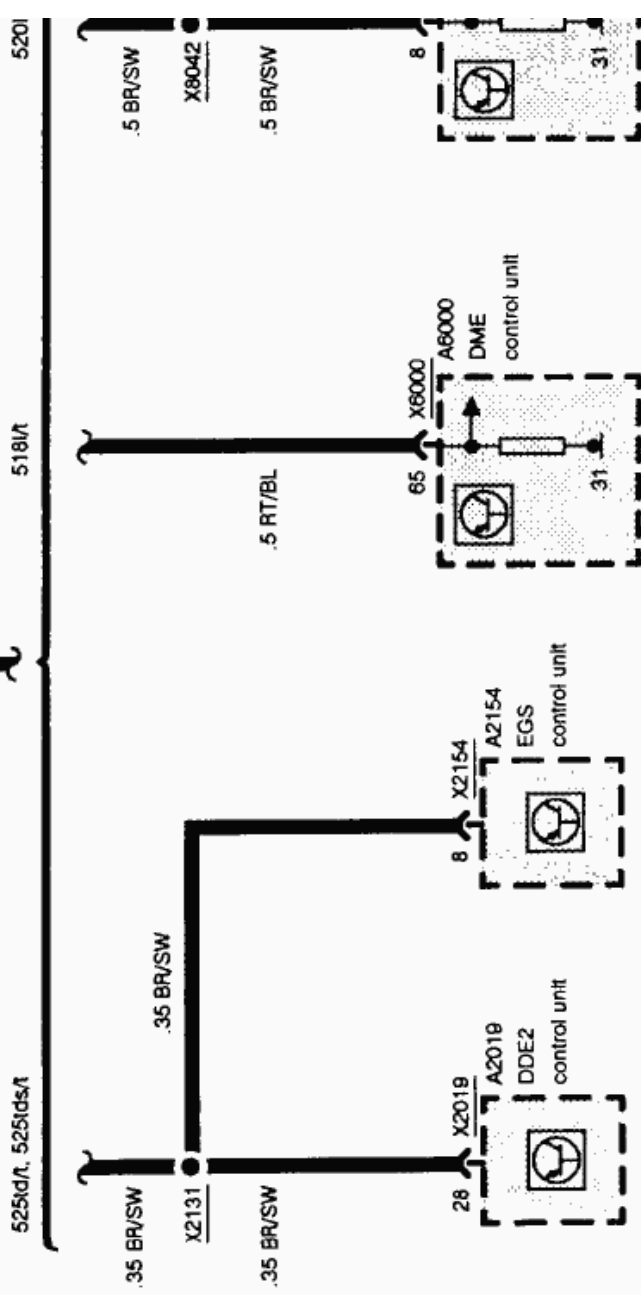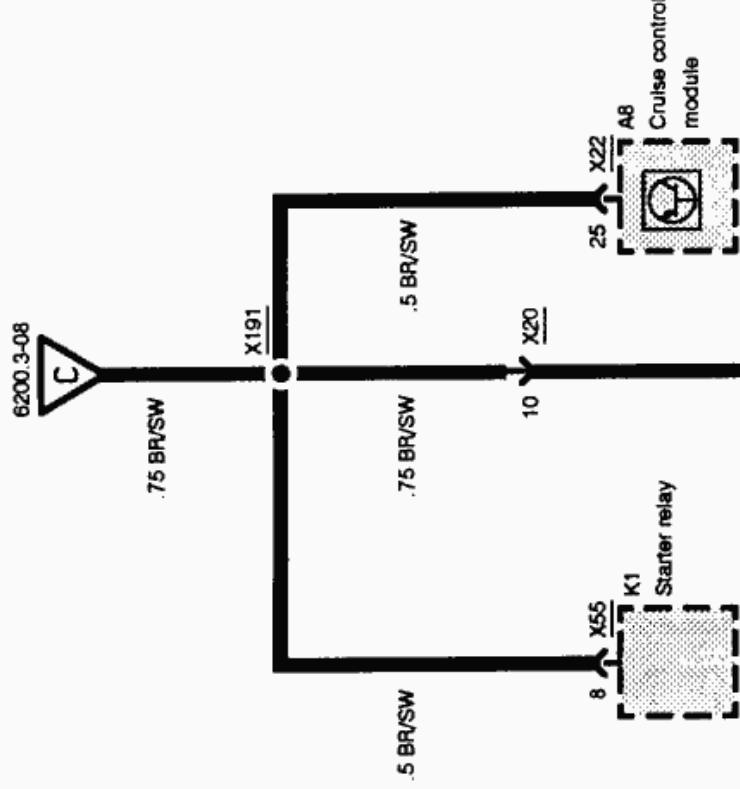

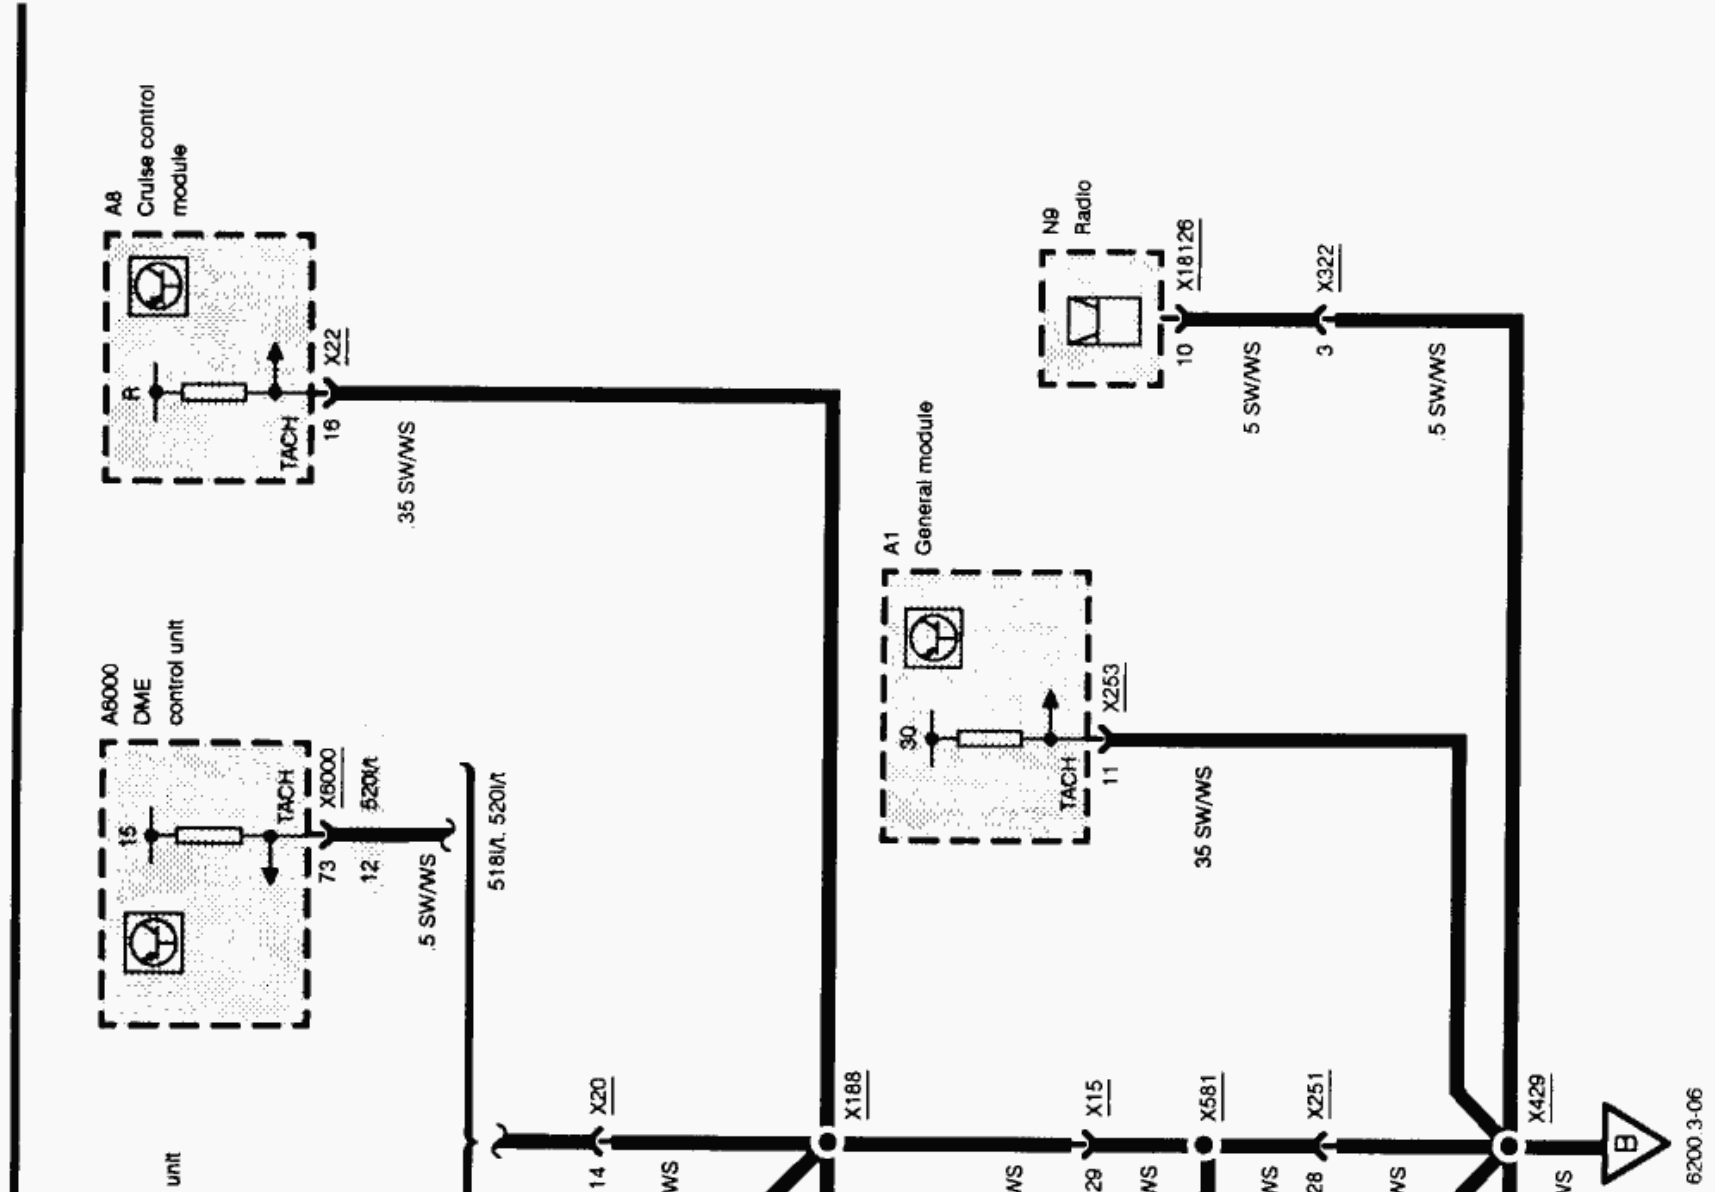

# Instrument cluster (redesigned standard version)

## Speed output signal

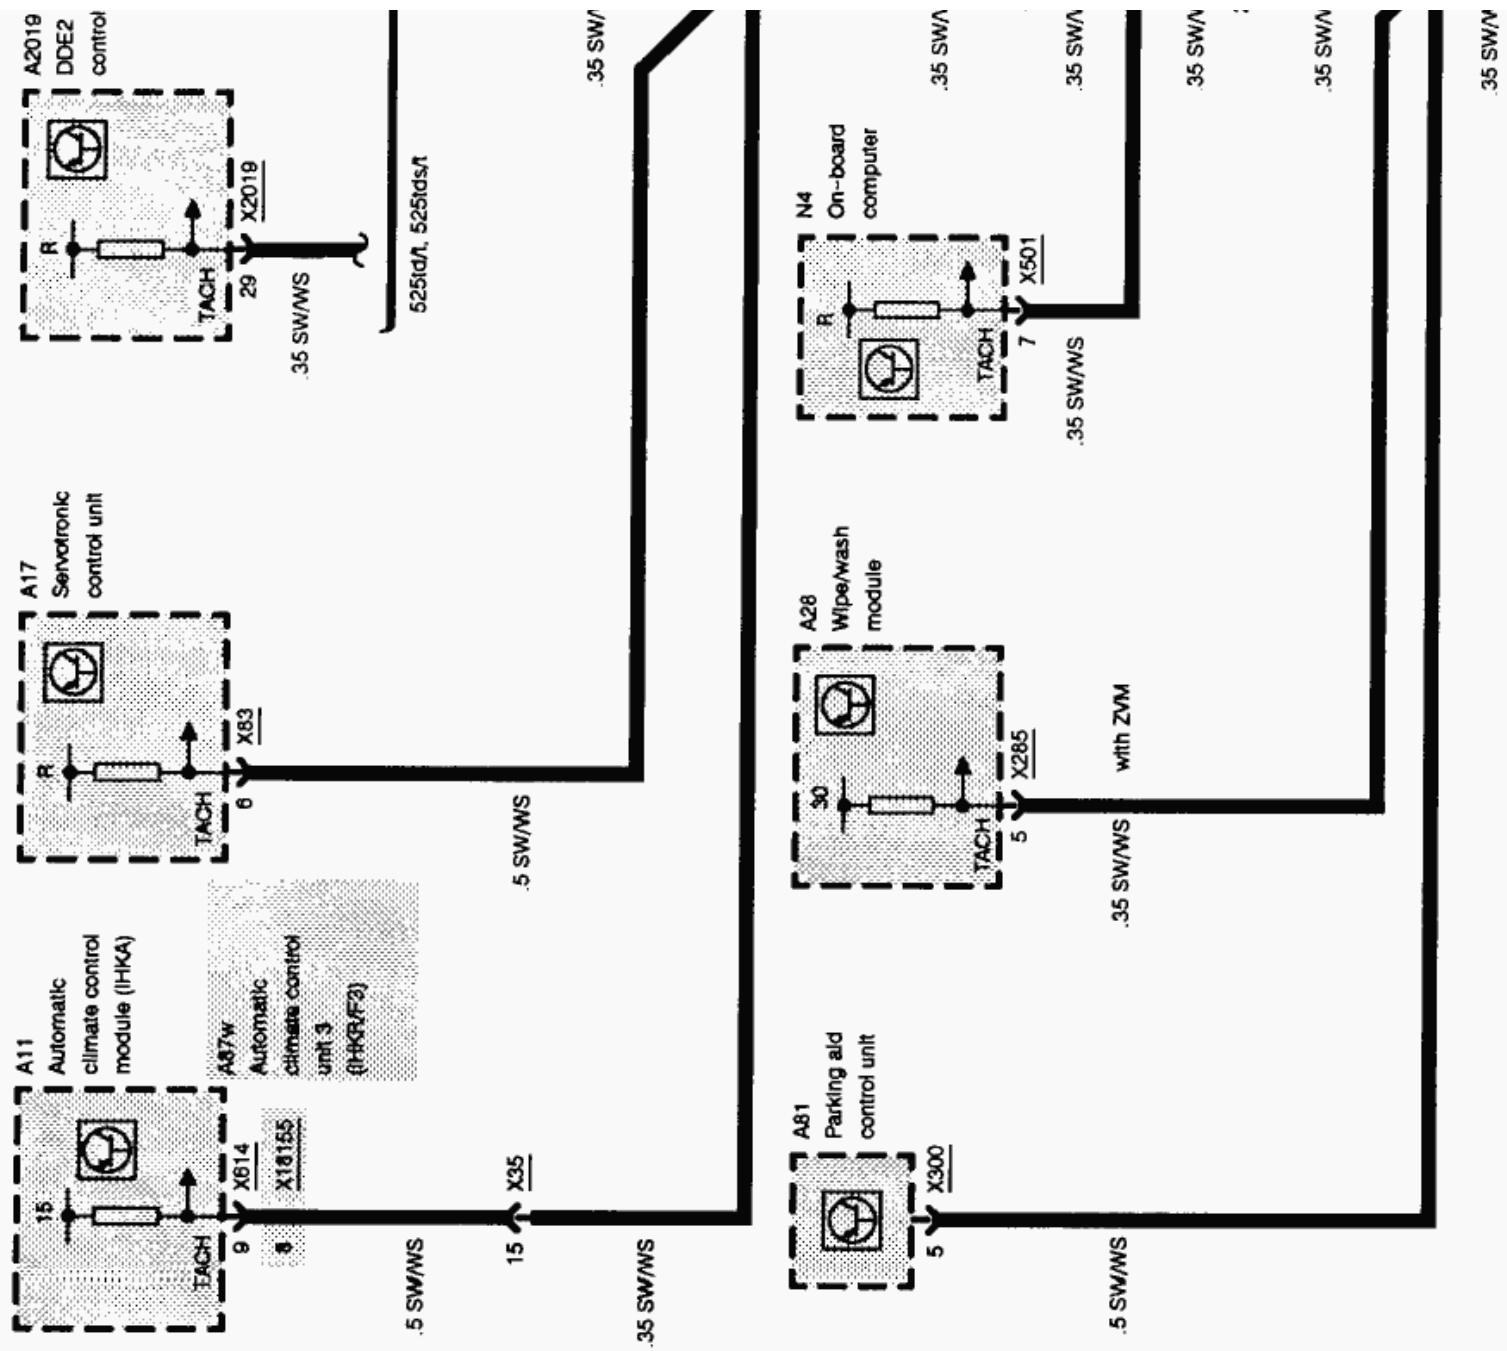




# BMWAG

## Electrical troubleshooting manual

### 5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

#### Trailer coupling Scheme 6325.0


09/93 ————— 6325.0-00 ————— 1994

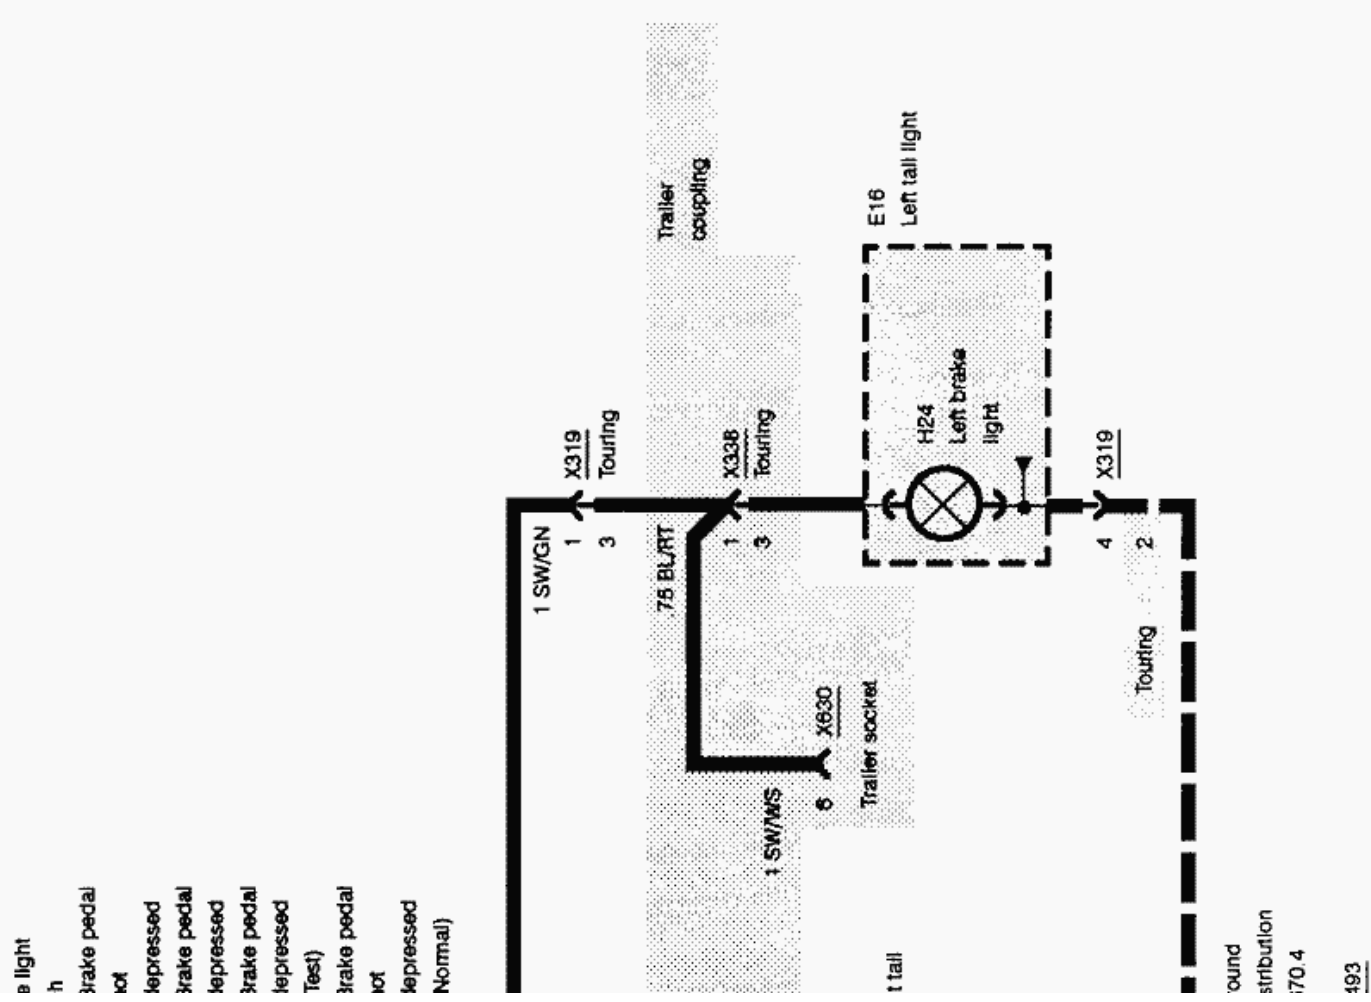

Left light  
h  
Brake pedal  
not  
Depressed  
Brake pedal  
Depressed  
Brake pedal  
Depressed  
Test)  
Brake pedal  
not  
Depressed  
Normal)

t tail  
ground  
distribution  
170.4  
193

# Brake lights

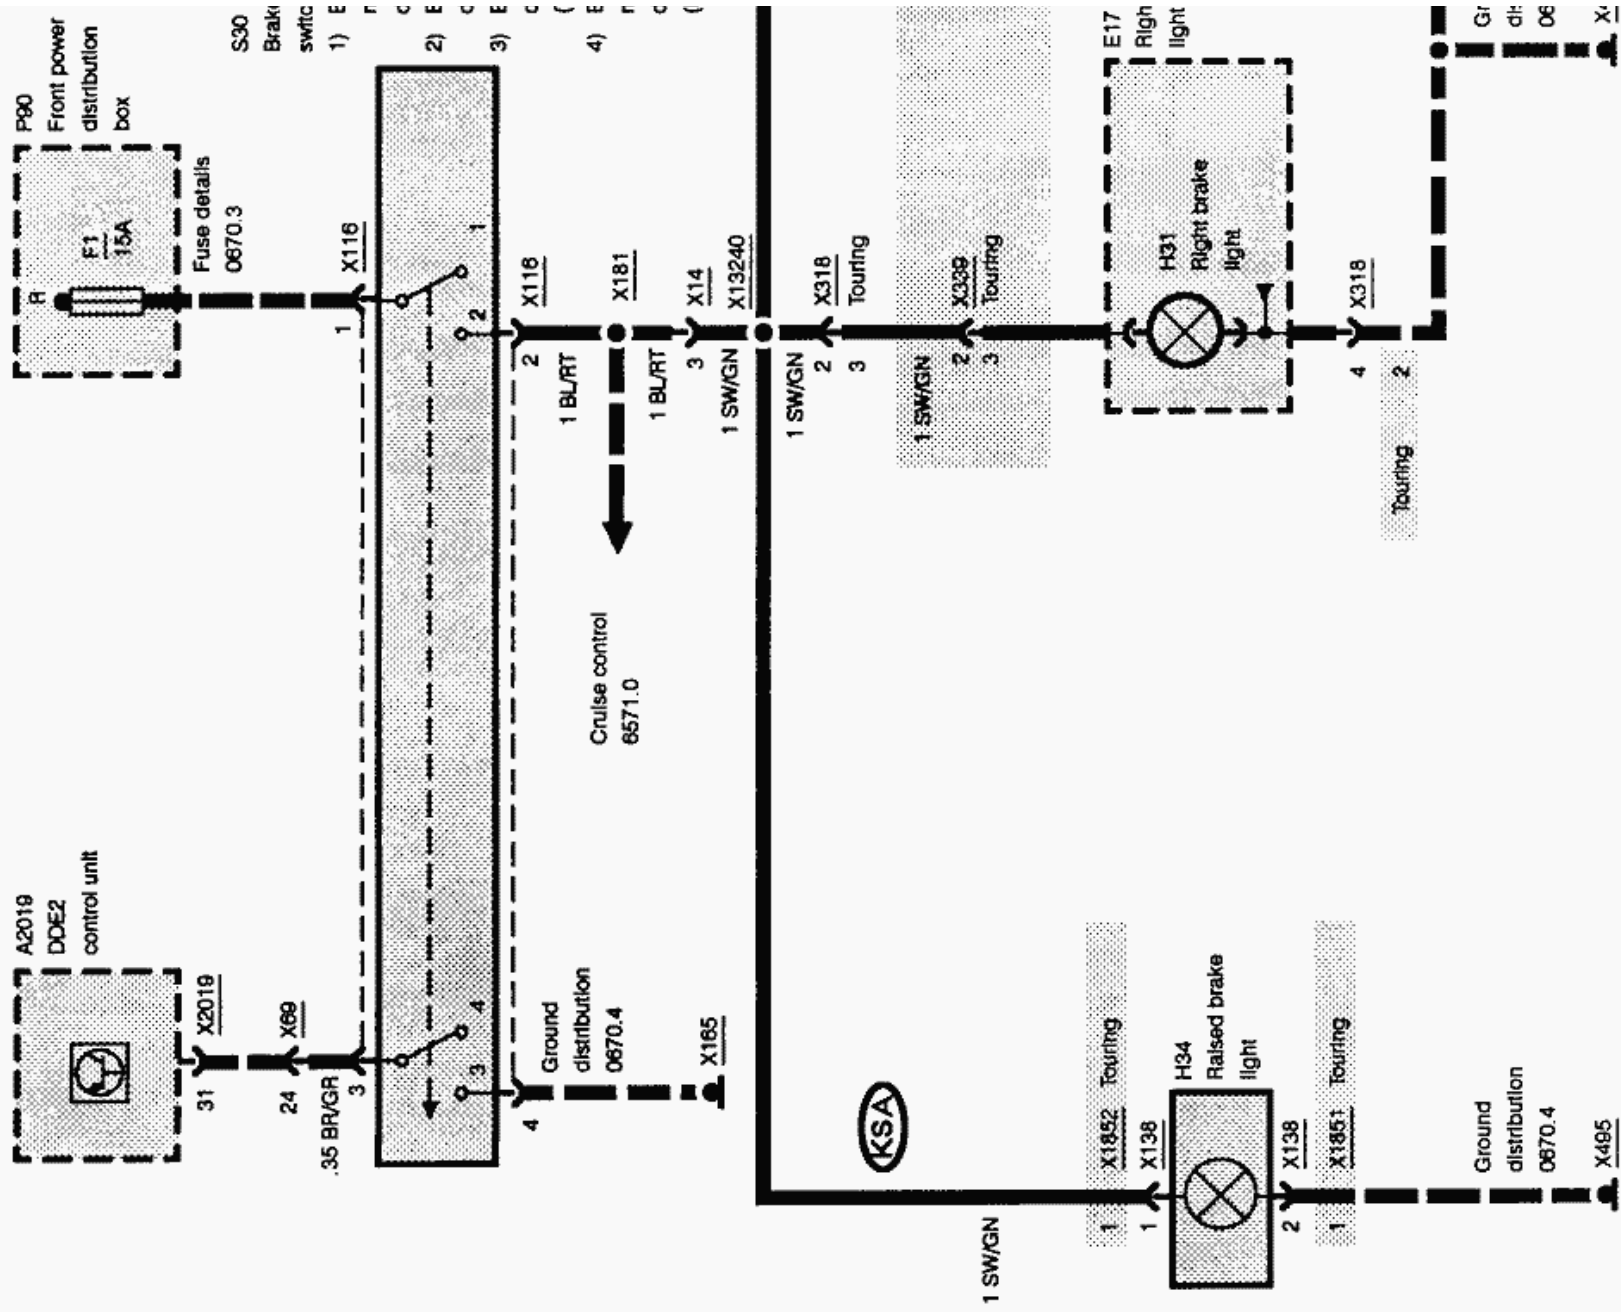



**BMWAG****Electrical troubleshooting manual**

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Engine management MS40 (6-cylinder M50)

Scheme 1210.10

**Pin Assignment X6000**


Pin	Type	Description/Function	Connection
1	A	Ignition, terminal 1	Ignition coil for cyl. 1
2	A	Ignition, terminal 1	Ignition coil for cyl. 3
3	A	Ignition, terminal 1	Ignition coil for cyl. 5
4	M	Ground	Ground connection
5	A	Injection valve, cylinder 6	Injection valve
6	A	Injection valve, cylinder 4	Injection valve
7			
8	E	Drive range P/N	Gear selector lever switch
9	A	Signal, air condition ON	Pressure switch
10	A A	IHKR/F3: Auxiliary fan signal IHKA: Auxiliary fan signal	A/C control unit A/C system relay
11		not used	
12	A	Vehicle speed signal	Instrument cluster
13		not used	
14	A	Throttle-valve position	EGS control unit
15	E	Immobilizing device	On-board computer
16		not used	
17	A	TI signal,	Instrument cluster
18	A	TD speed signal	Instrument cluster
19		not used	
20	E	Ignition timing intervention	EGS control unit
21		not used	
22	A	Injection valve, cylinder 3	Injection valve
23	A	Injection valve, cylinder 1	Injection valve
24	E	A/C compressor ON	A/C compressor relay
25	E	Signal, camshaft control	Camshaft control
26	E	Continuous pos. voltage, terminal 30	B+ terminal point
27	A	Idle actuator signal	Idle actuator
28	M	Ground	Ground connection
29	A	Ignition, terminal 1	Ignition coil forcyl. 2
30	A	Ignition, terminal 1	Ignition coil forcyl. 4
31	A	Ignition, terminal 1	Ignition coil for cyl. 6
32	M	Ground	Ground connection
33	A	Injection valve, cylinder 5	Injection valve
34	M	Ground	Ground connection
35	M	Shieldings, crankshaft sensor	Shielding
36		not used	
37		not used	
38	M	Shieldings, camshaft sensor	Shielding
39	M	Shieldings, knock sensor	Knock sensor 1
40	M	Shieldings, knock sensor	Knock sensor 2
41		not used	
42	M	Shieldings, oxygen sensor	Shielding
43		not used	
44		not used	
45		not used	
46		not used	
47		not used	
48	E	>10V from DME main relay	Main relay
49	E	Ignition, terminal 15	Ignition lock
50	A	Injection valve, cylinder 2	Injection valve
51	A	Tank ventilation valve	Tank ventilation valve
52	A	EKP relay and TR signal (crank angle reference)	Electrical fuel pump relay and electrical transmission
53	M	Ground oxygen sensor heater	Oxygen sensor
54	E	>10V from DME main relay	Main relay
55	A	DME main relay	DME main relay
56		not used	
57		not used	
58		not used	
59		not used	




60	E	Programming voltage	Diagnostic connector
61		not used	
62	M	Ground	Ground connection
63	E	Signal -	Knock sensor 2
64	E	Signal -	Knock sensor 1
65	A	Signal +	Knock sensor 1
66	A	Signal +	Knock sensor 2
67		not used	
68	M	Ground, air mass meter	Air mass meter
69	E	Signal, air mass meter	Hot wire air mass meter
70		not used	
71		not used	
72	A	Signal +	Throttle potentiometer
73	E	Signal, oxygen sensor	Oxygen sensor
74	M	Component ground	Camshaft sensor
75	M	Ground, oxygen sensor	Oxygen sensor
76	E	Signal	Throttle potentiometer
77	E	Throttle-valve position	Throttle potentiometer
78	E	Signal -	Crankshaft sensor
79	A	Signal +	Crankshaft sensor
80	E	Signal -	Coolant temperature sensor
81	A	Signal +	Coolant temperature sensor
82	M	Component ground	Crankshaft sensor
83	E	Signal -	Camshaft sensor
84	A	Signal +	Camshaft sensor
85	E	Intake air temperature sensor	Intake air temperature sensor
86	M	Component ground	Intake air temperature sensor
87	E	RxD diagnostic data link	Diagnostic connector
88	E/A	TxD diagnostic data link	Diagnostic connector

E = Input, A = Output, M = Ground

**BMW 5** Engine management MS40 (6-cylinder M50)  
Current

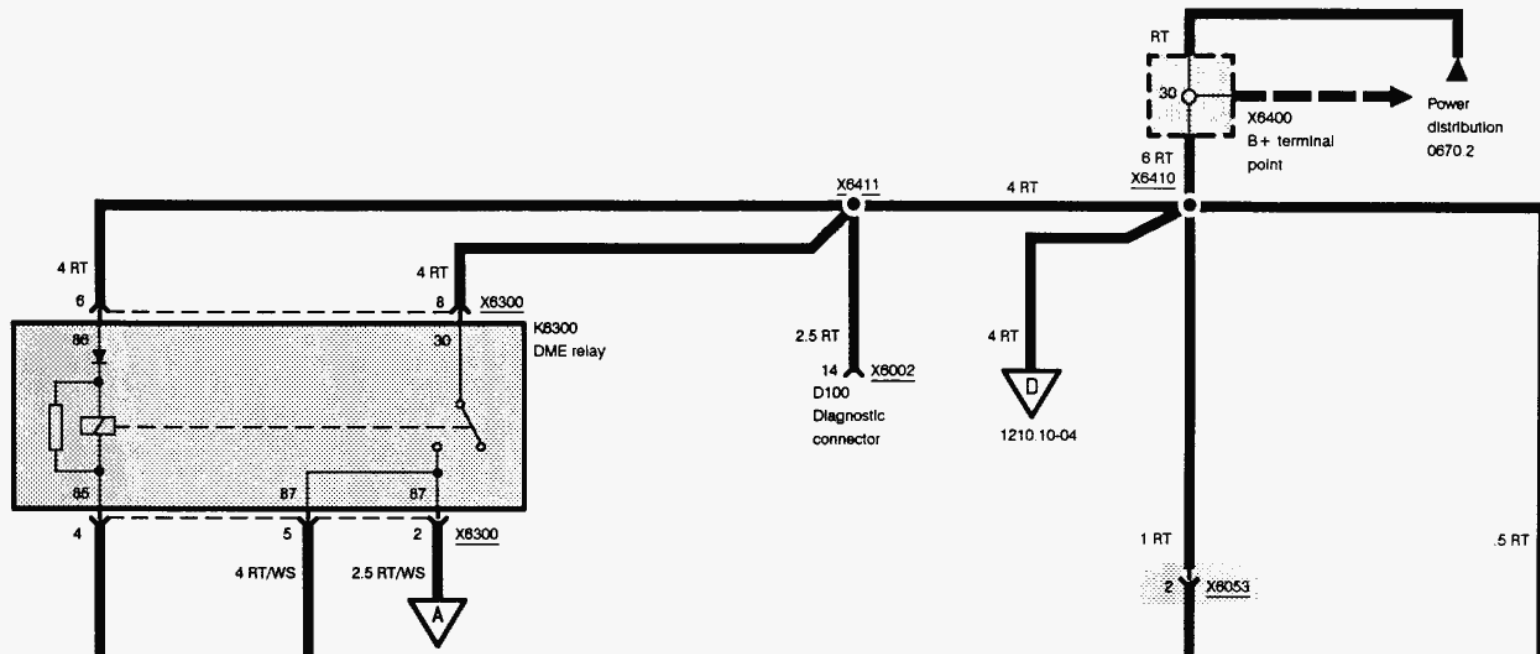


09/93  
1210.10-00-

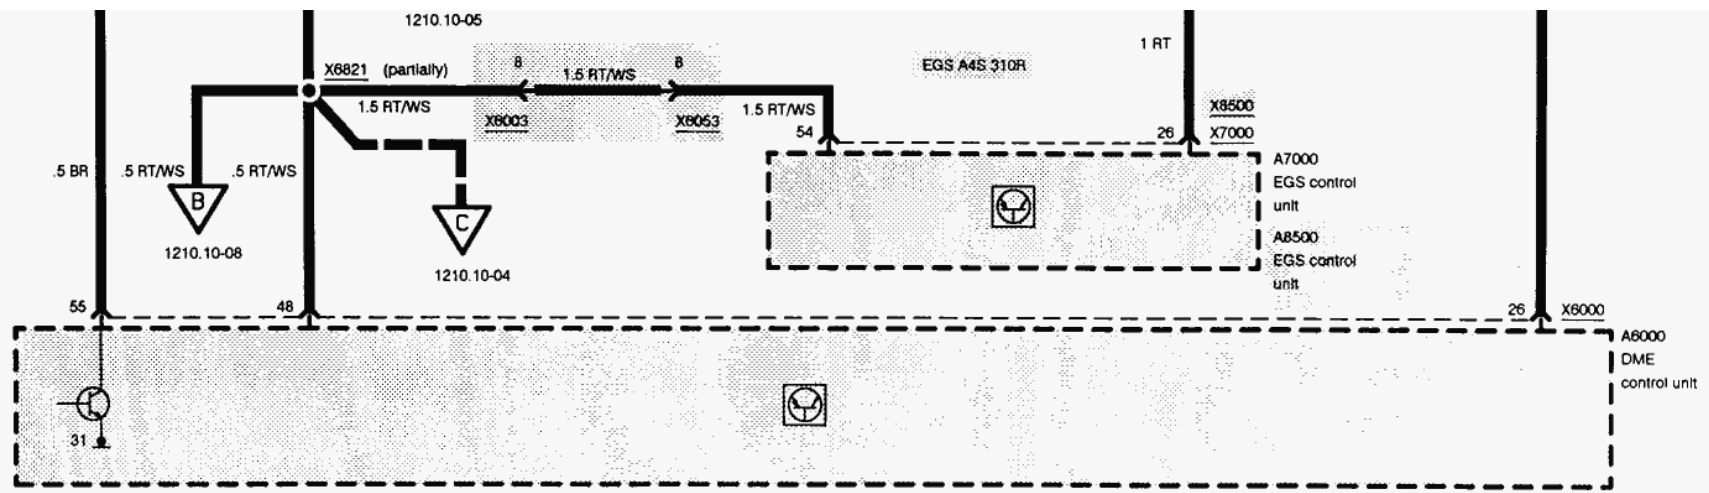

1994


**BMW 5** Engine management MS40 (6-cylinder M50)

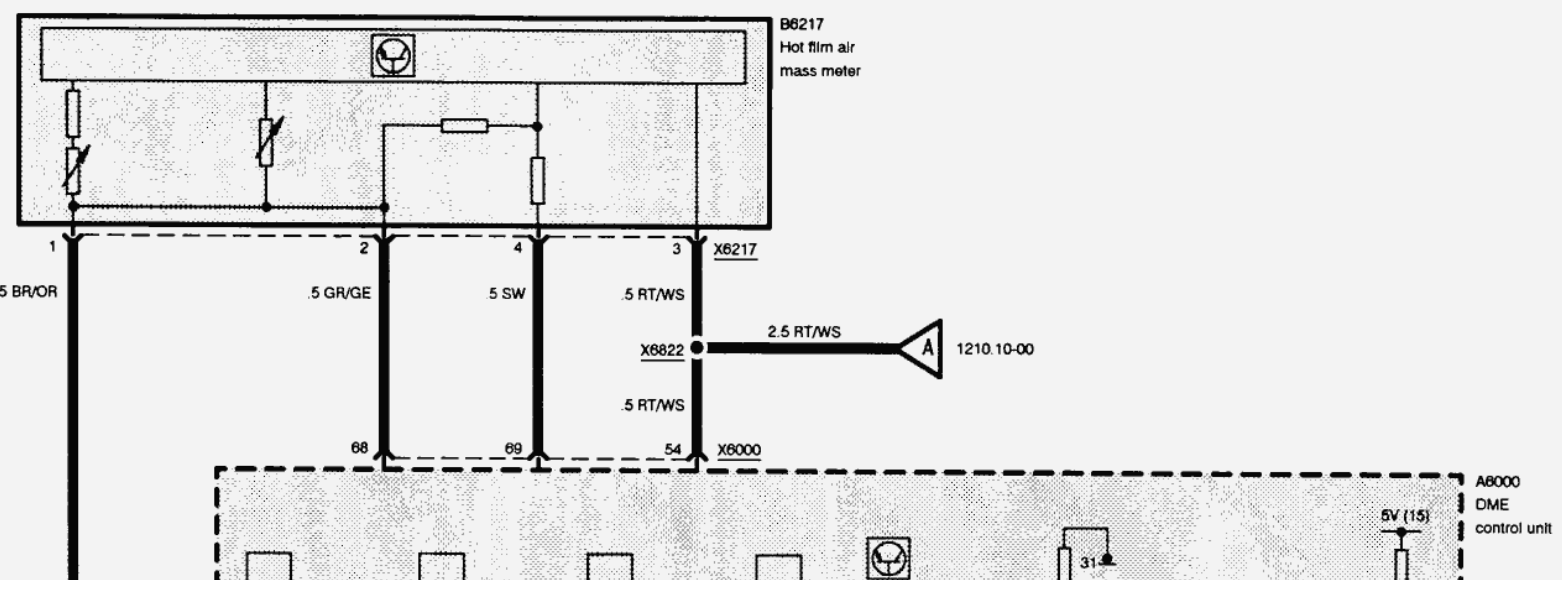

D100  
Diagnostic  
connector

09/93


1210.1

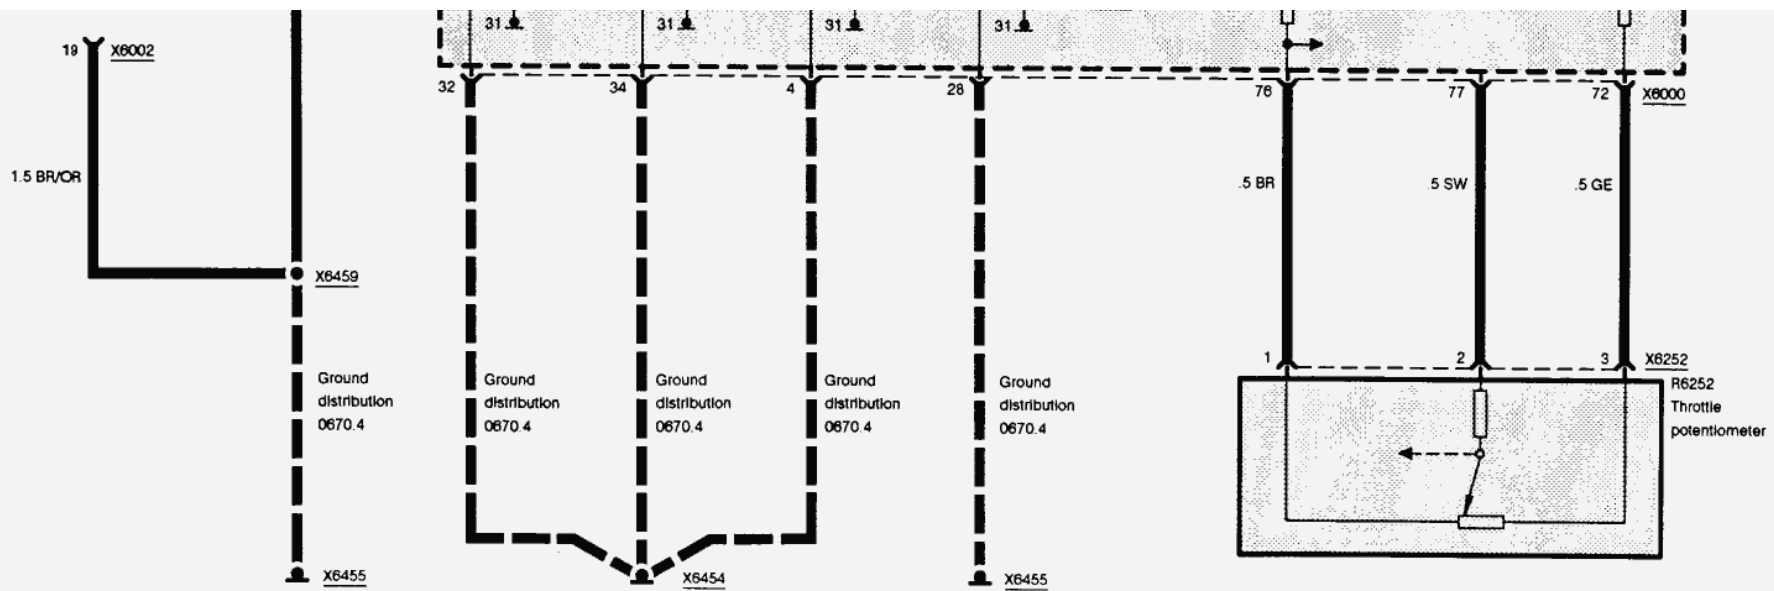


0-01  
1994




## Engine management MS40 (6-cylinder M50)

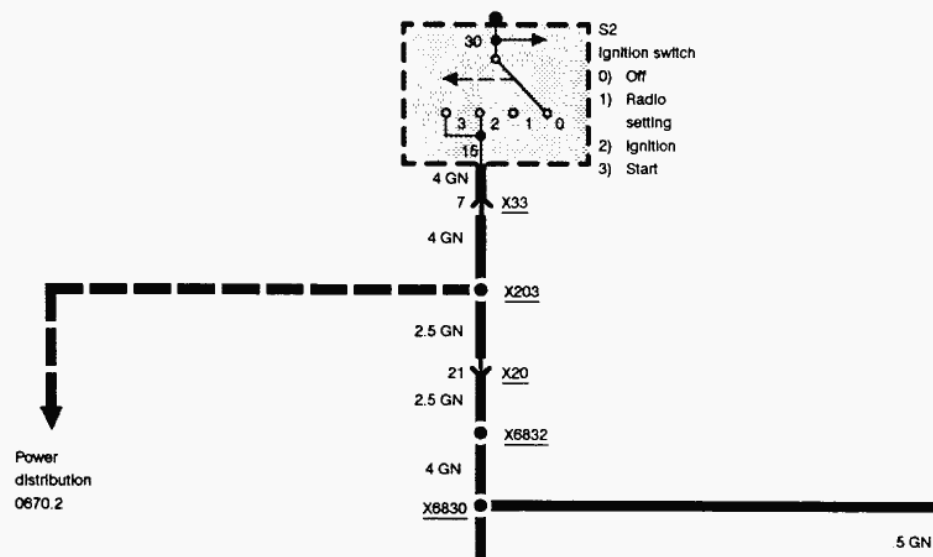


09/93  
1210.1

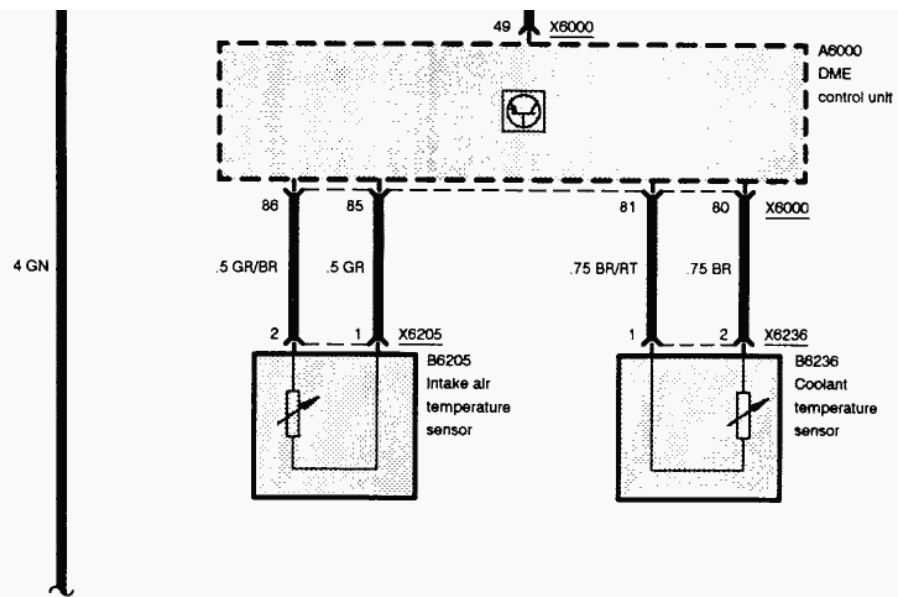


10-02  
1994


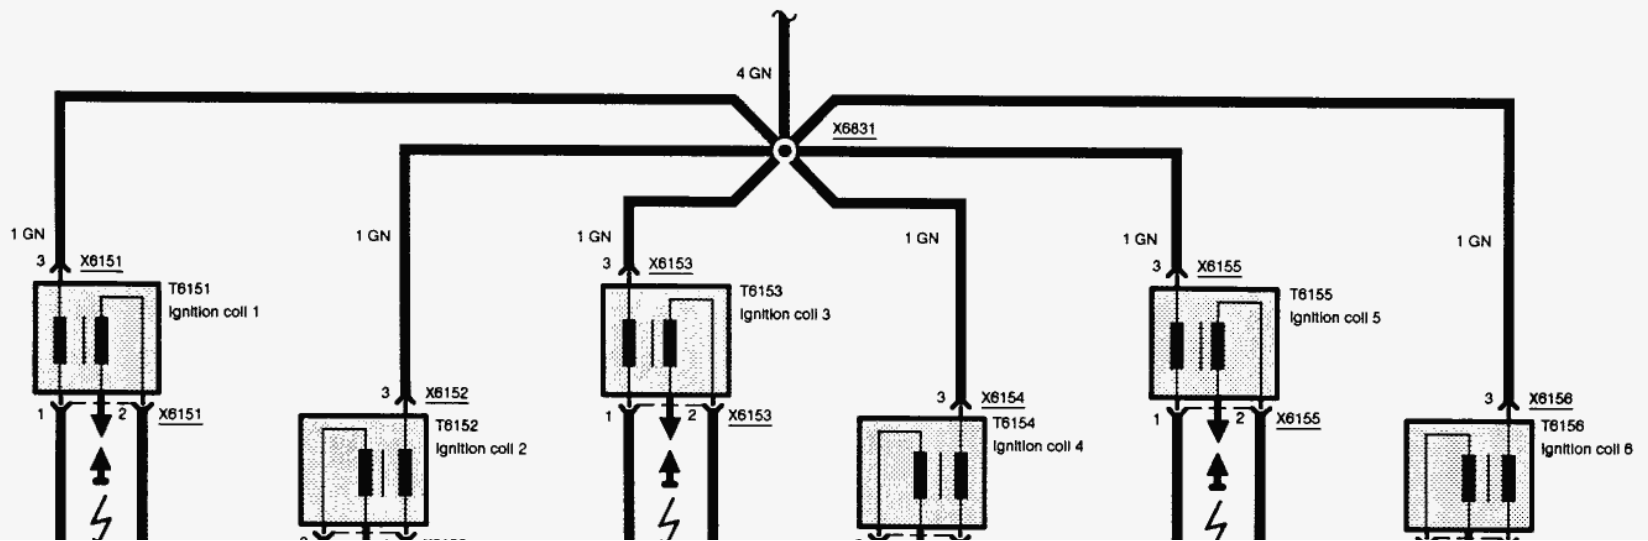


09/93

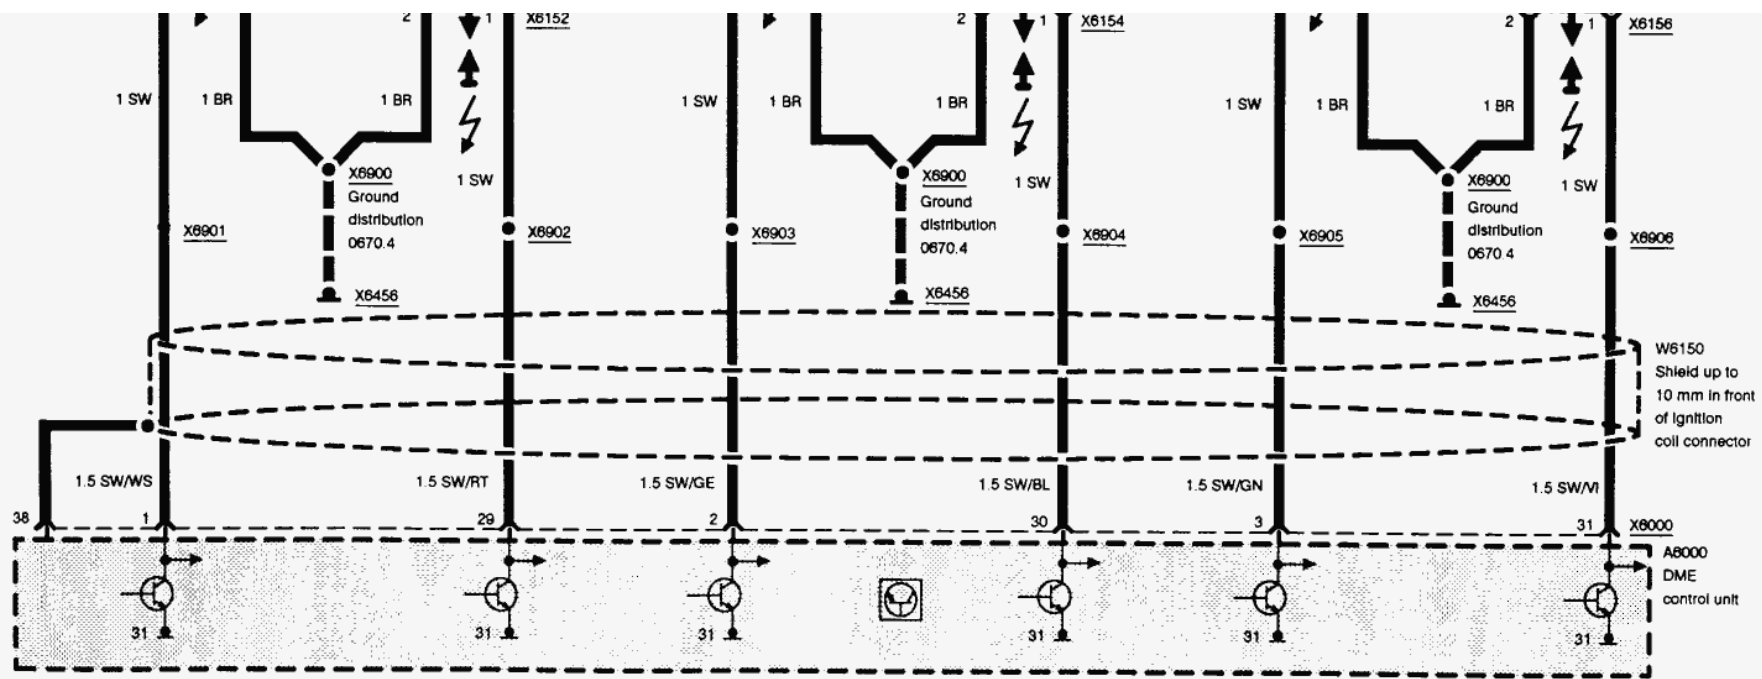



**BMW 5 Engine management MS40 (6-cylinder M50)**

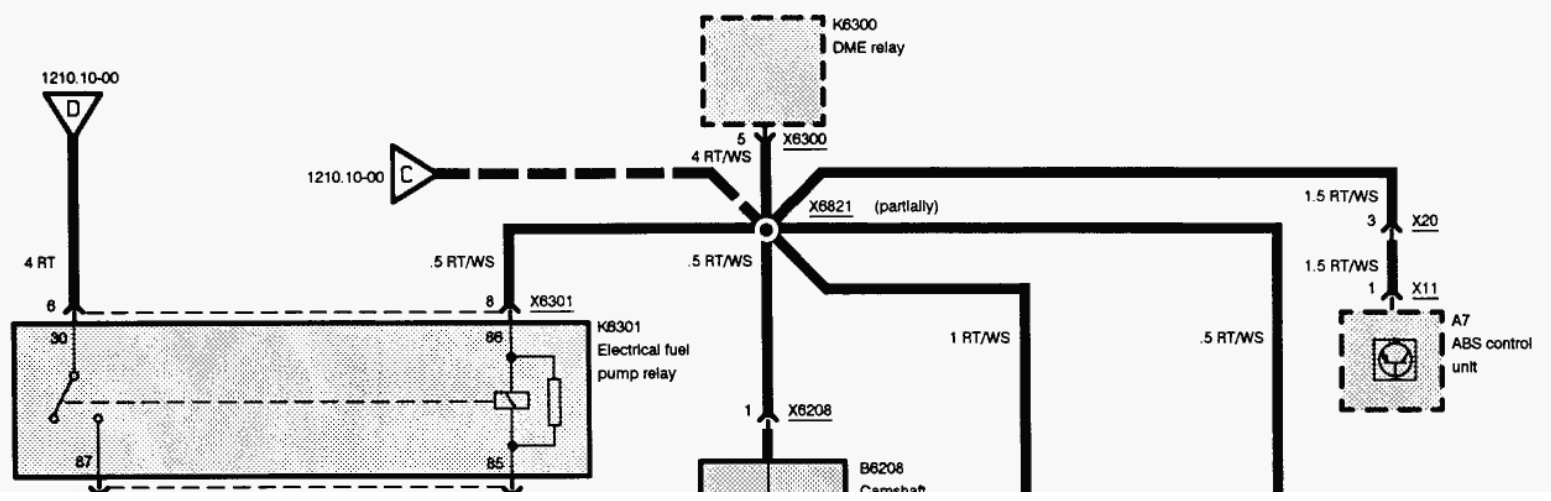

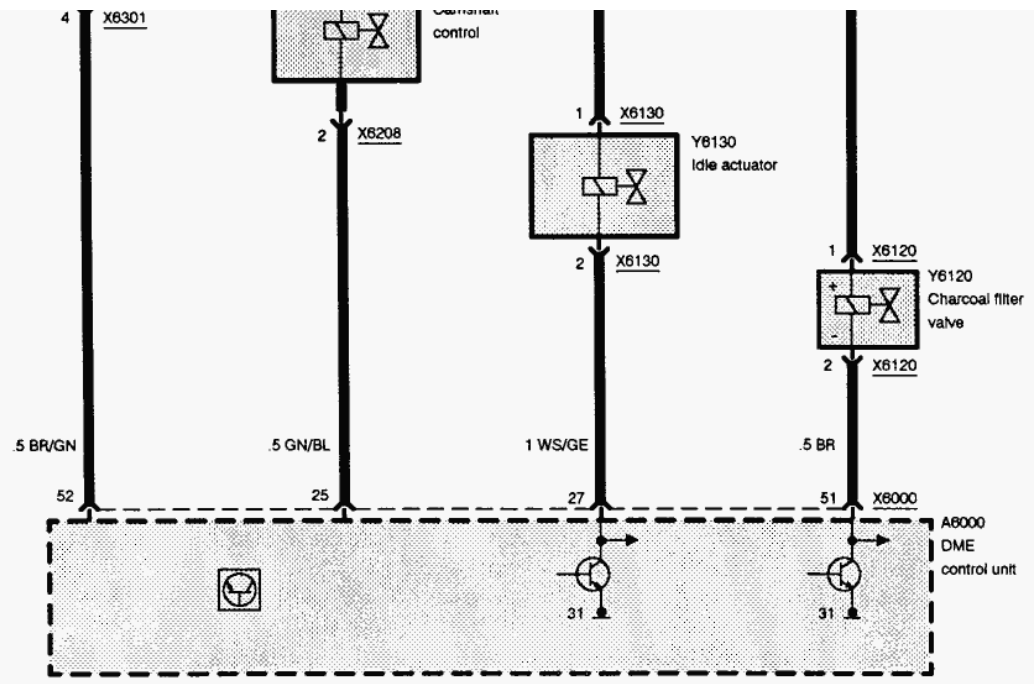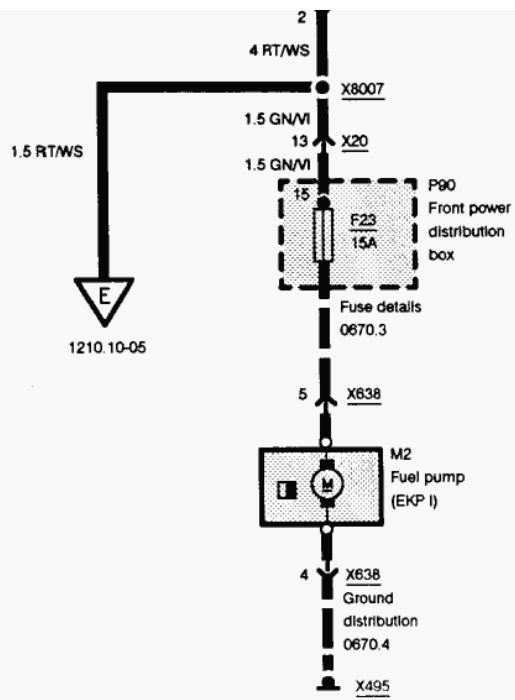

**BMW 5 Engine management MS40 (6-cylinder M50)**

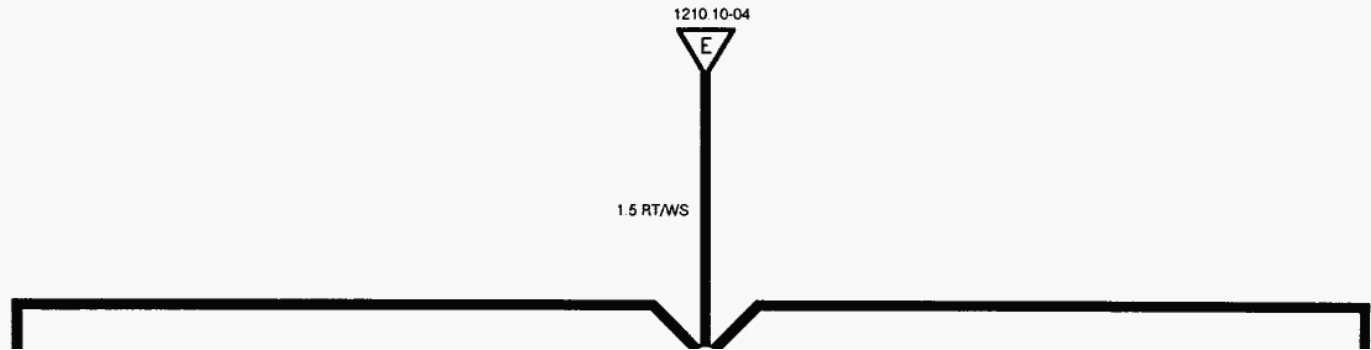

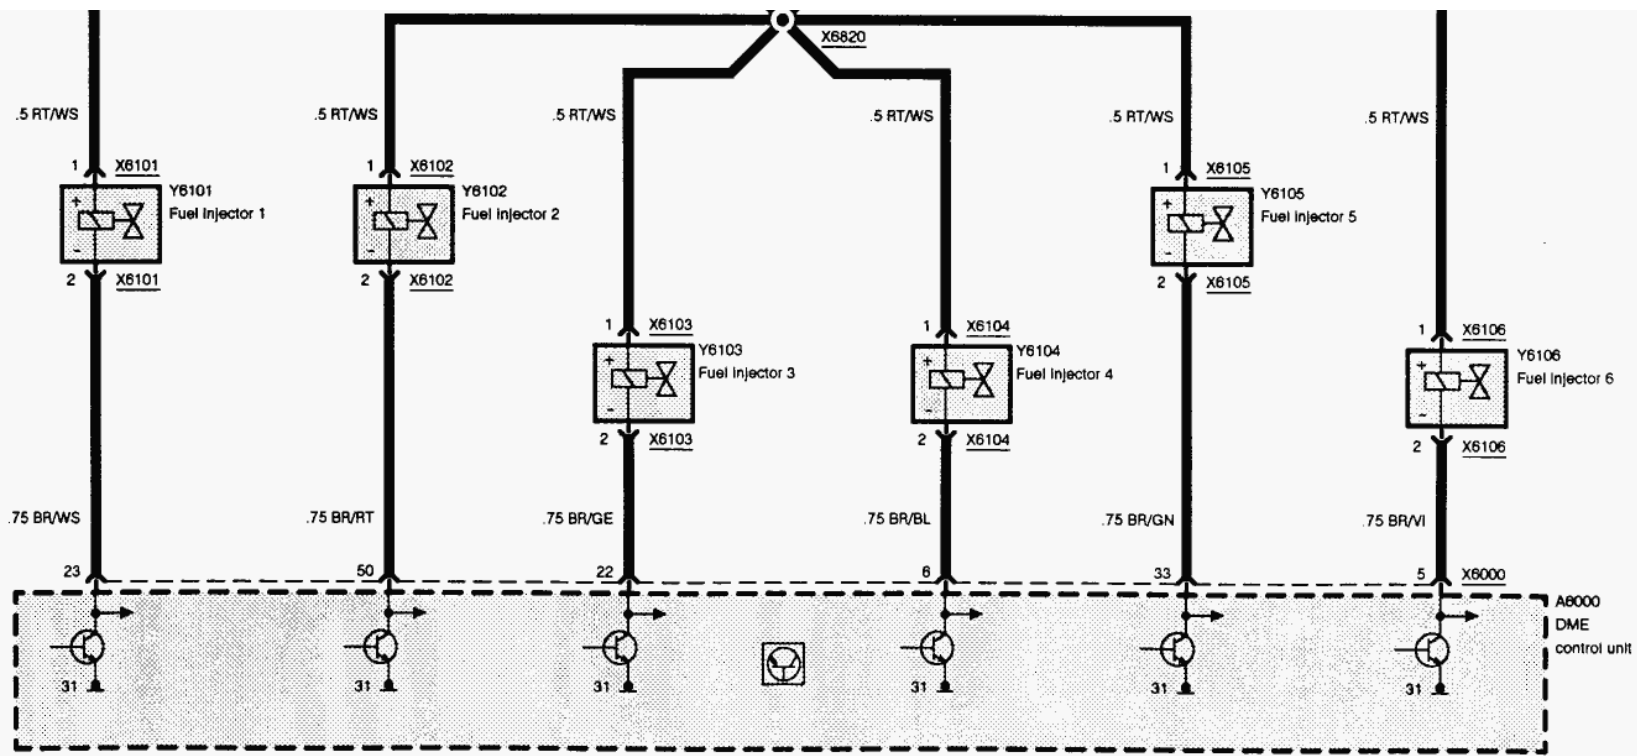


1210.10-05


1994



### Engine management MS40 (6-cylinder M50)

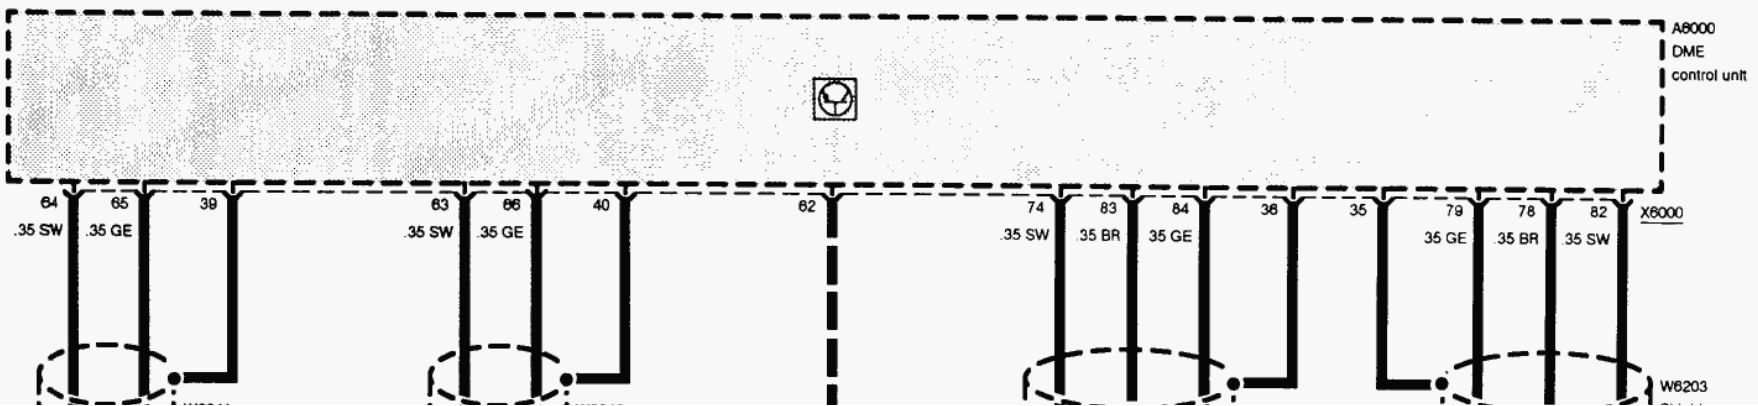


09/93

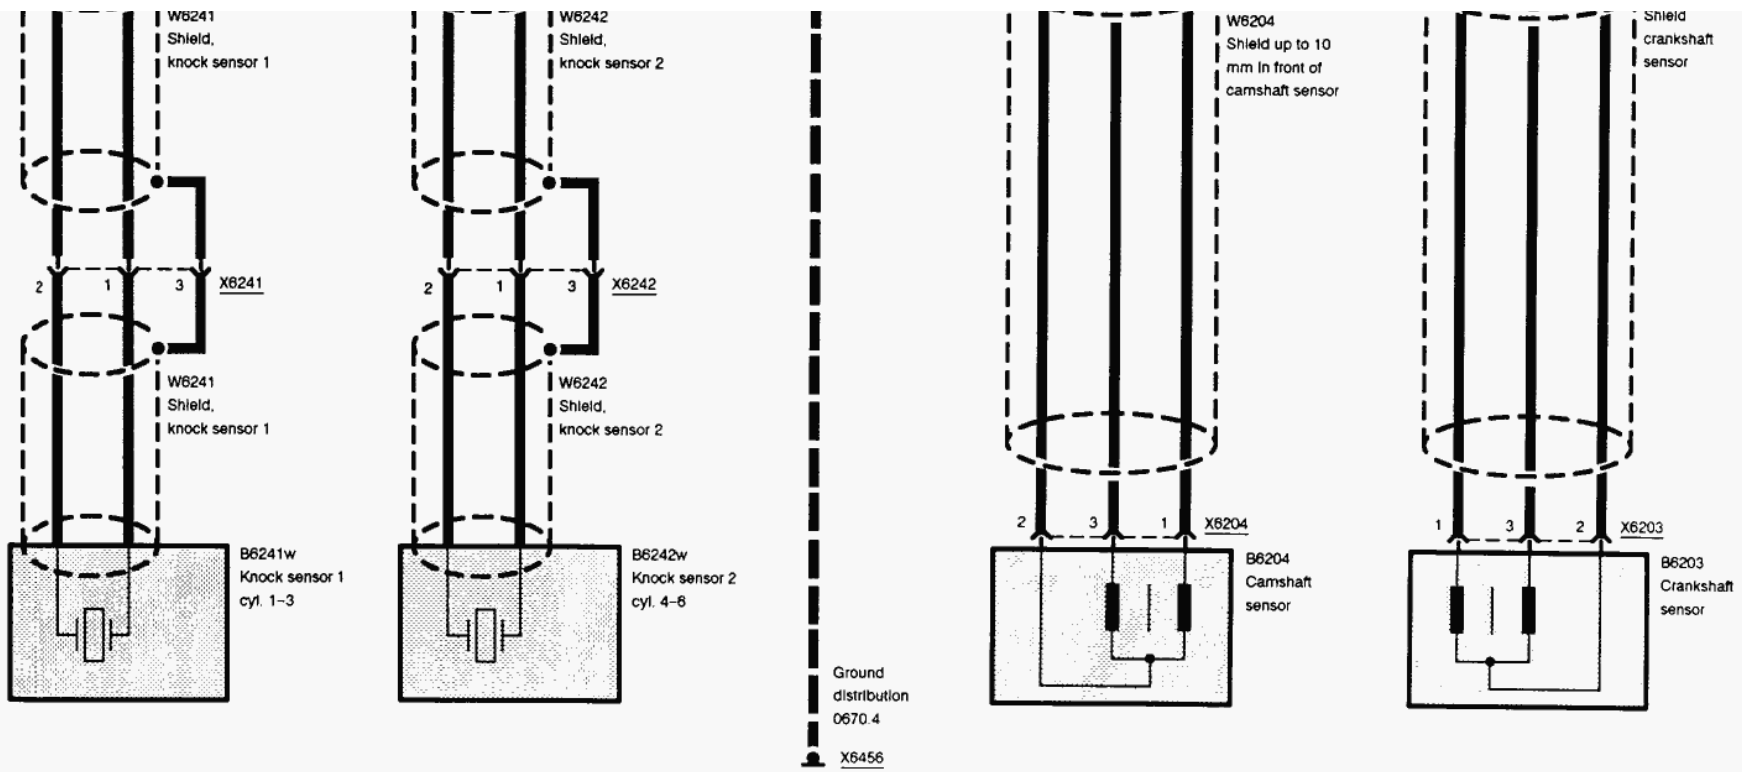

1210.10-06


1994

**BMW 5 Engine management MS40 (6-cylinder M50)**

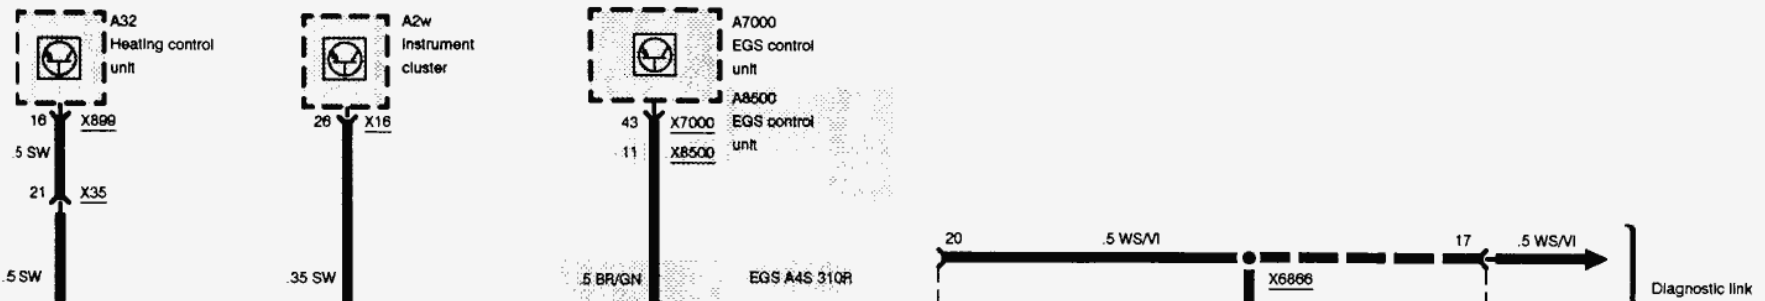

09/93




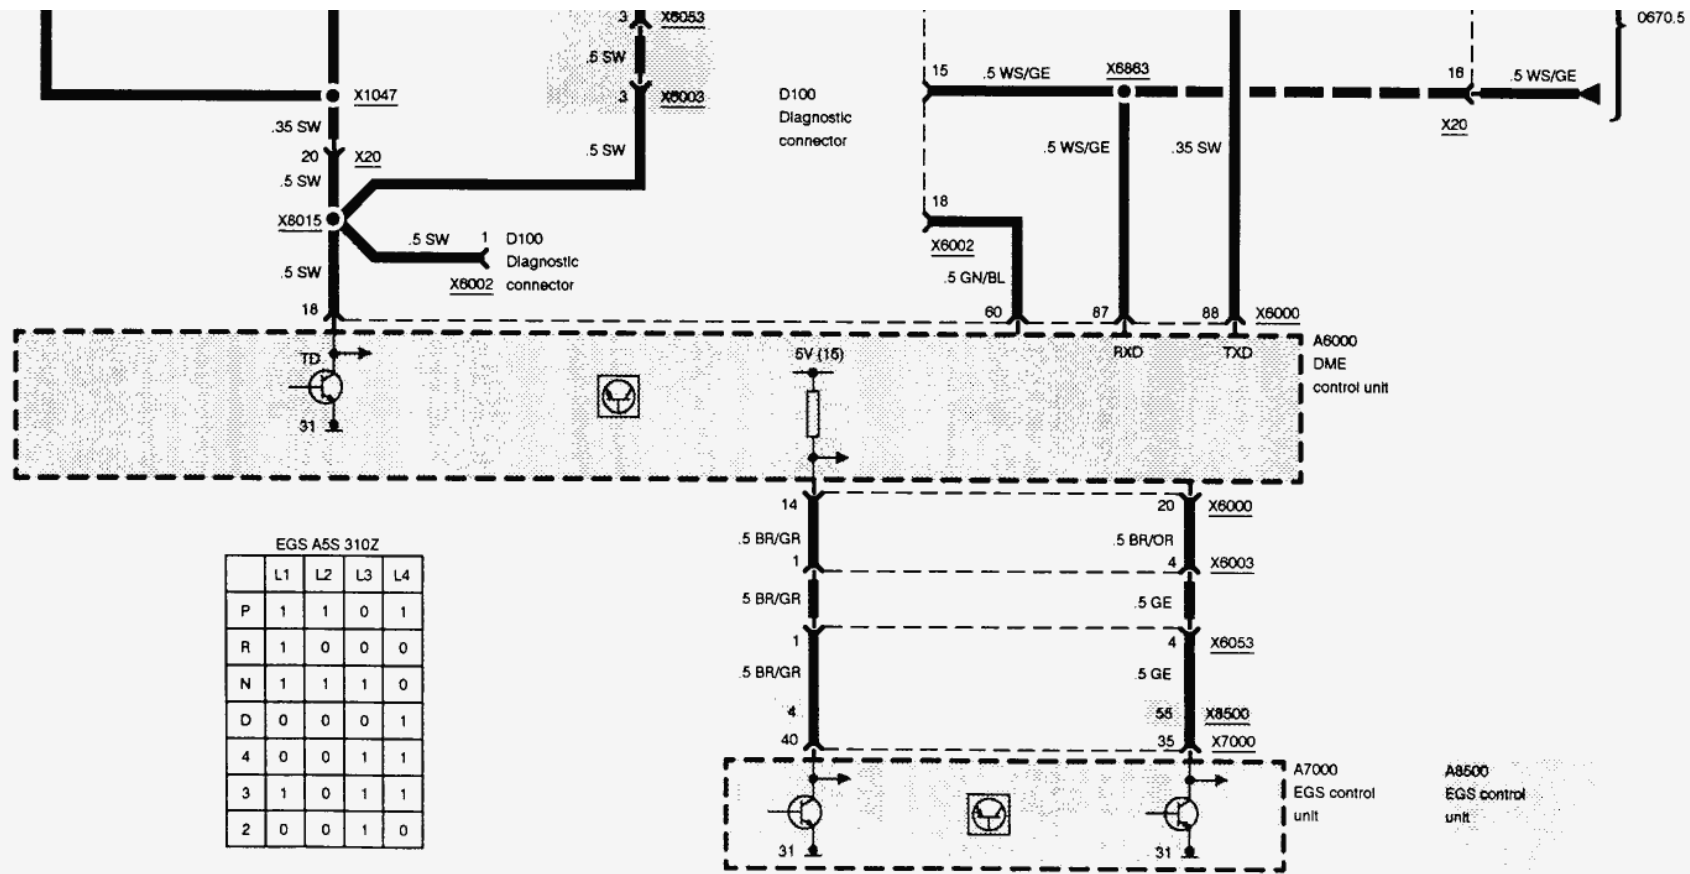


EGS A5S 310Z



	L1	L2	L3	L4
P	1	1	0	1
R	1	0	0	0
N	1	1	1	0
D	0	0	0	1
4	0	0	1	1
3	1	0	1	1
2	0	0	1	0


**BMW 5** Engine management MS40 (6-cylinder M50)

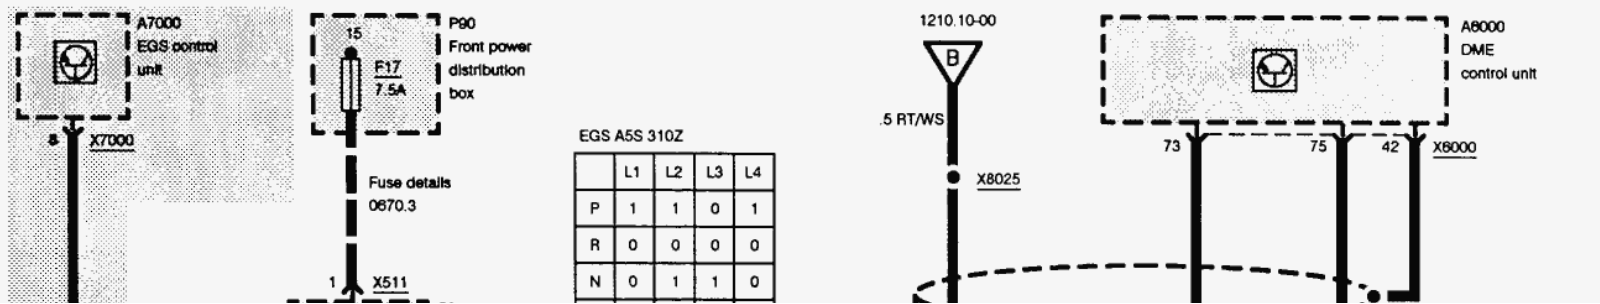

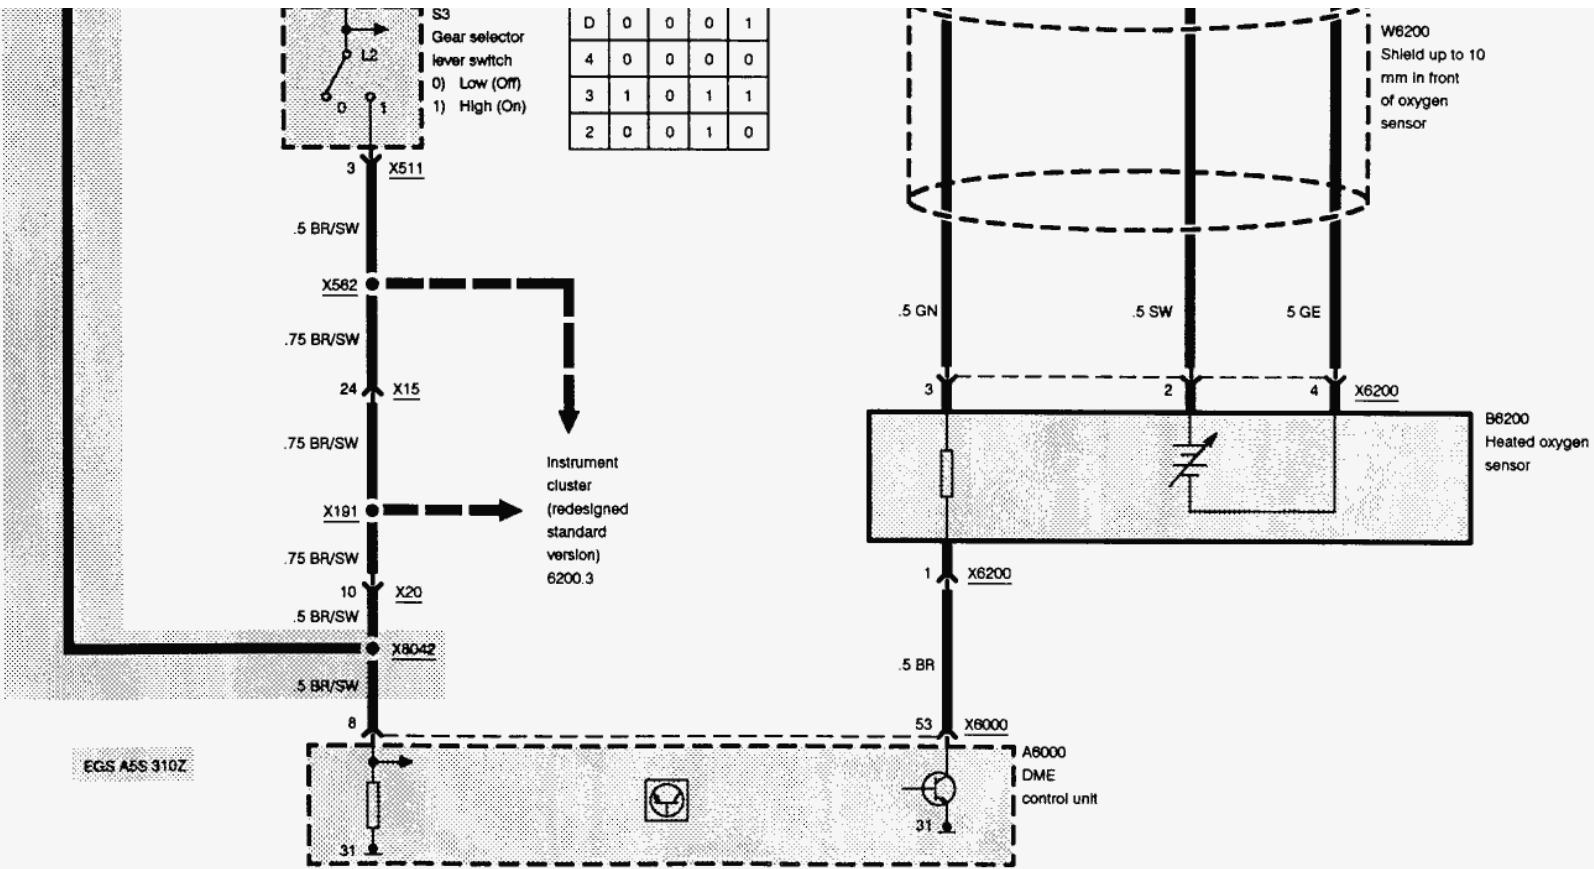

**BMW 5 Engine management MS40 (6-cylinder M50)**



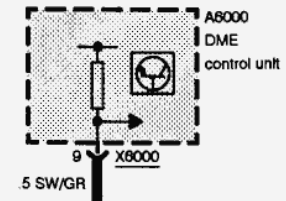
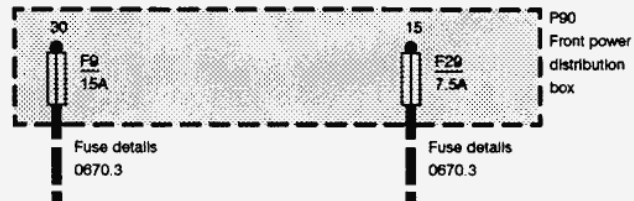


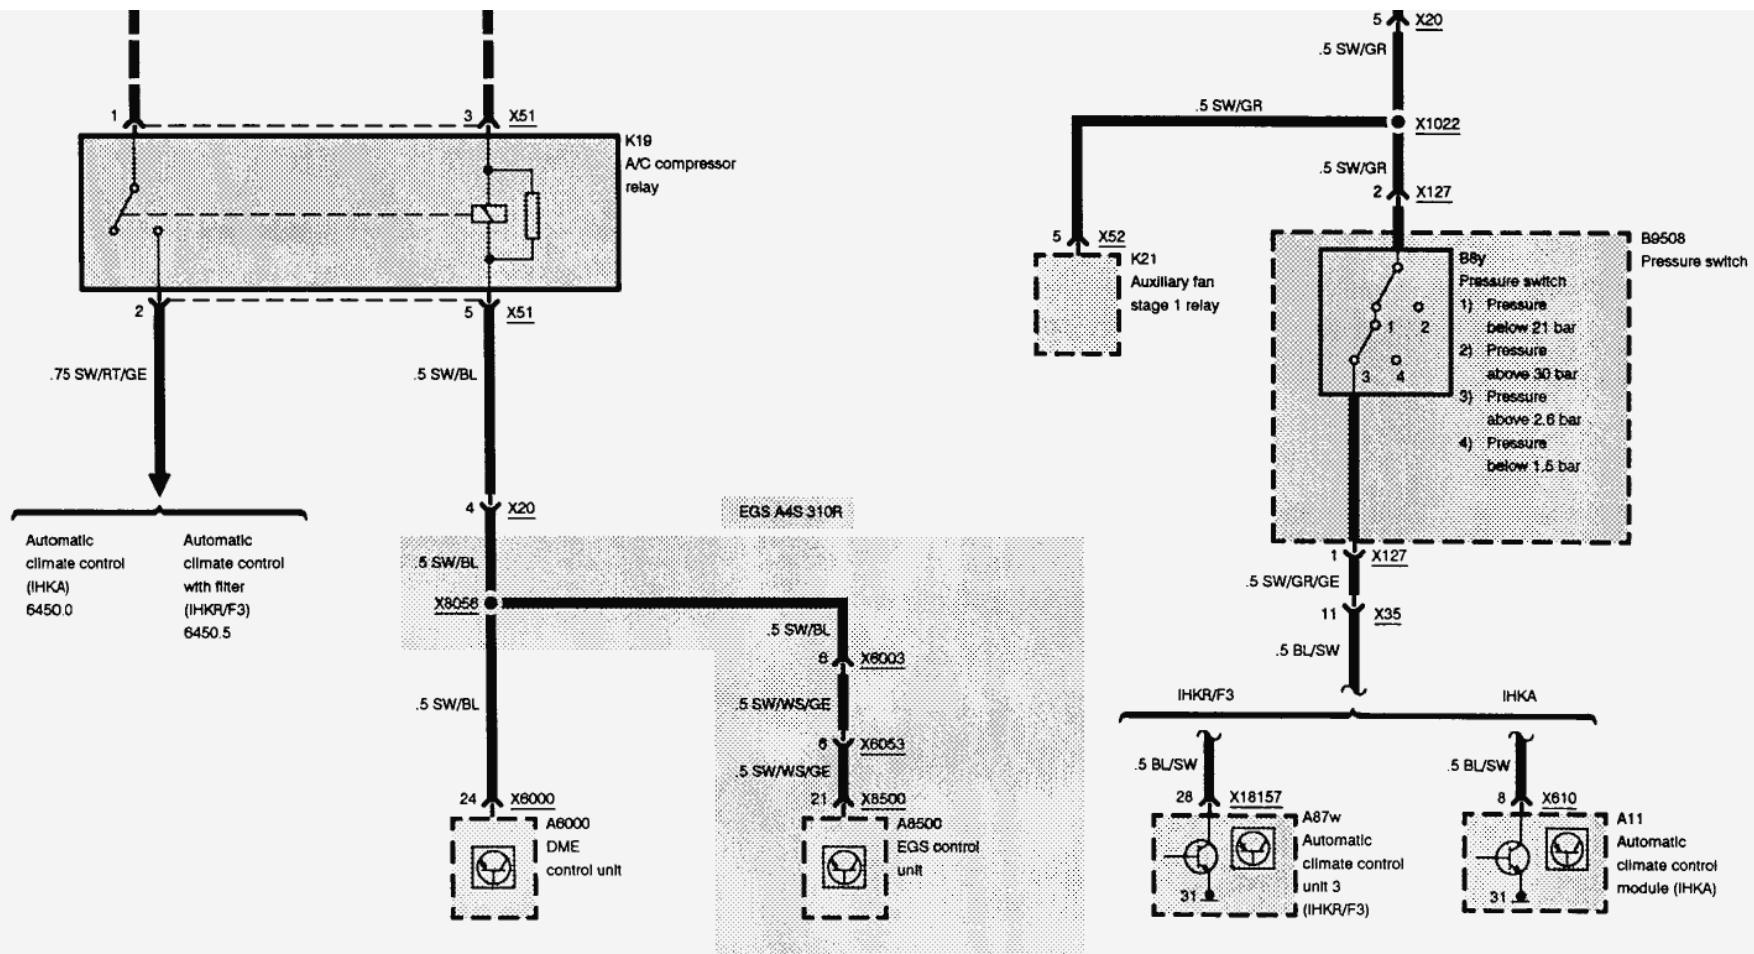


1210.10-09

1994

**BMW 5** Engine management MS40 (6-cylinder M50)

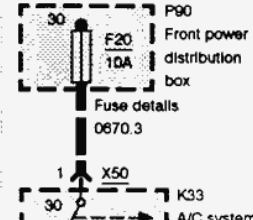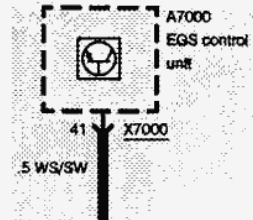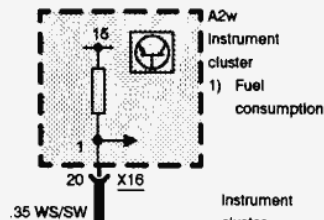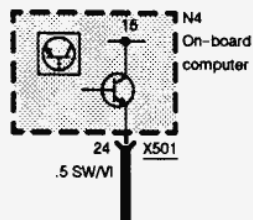

09/93

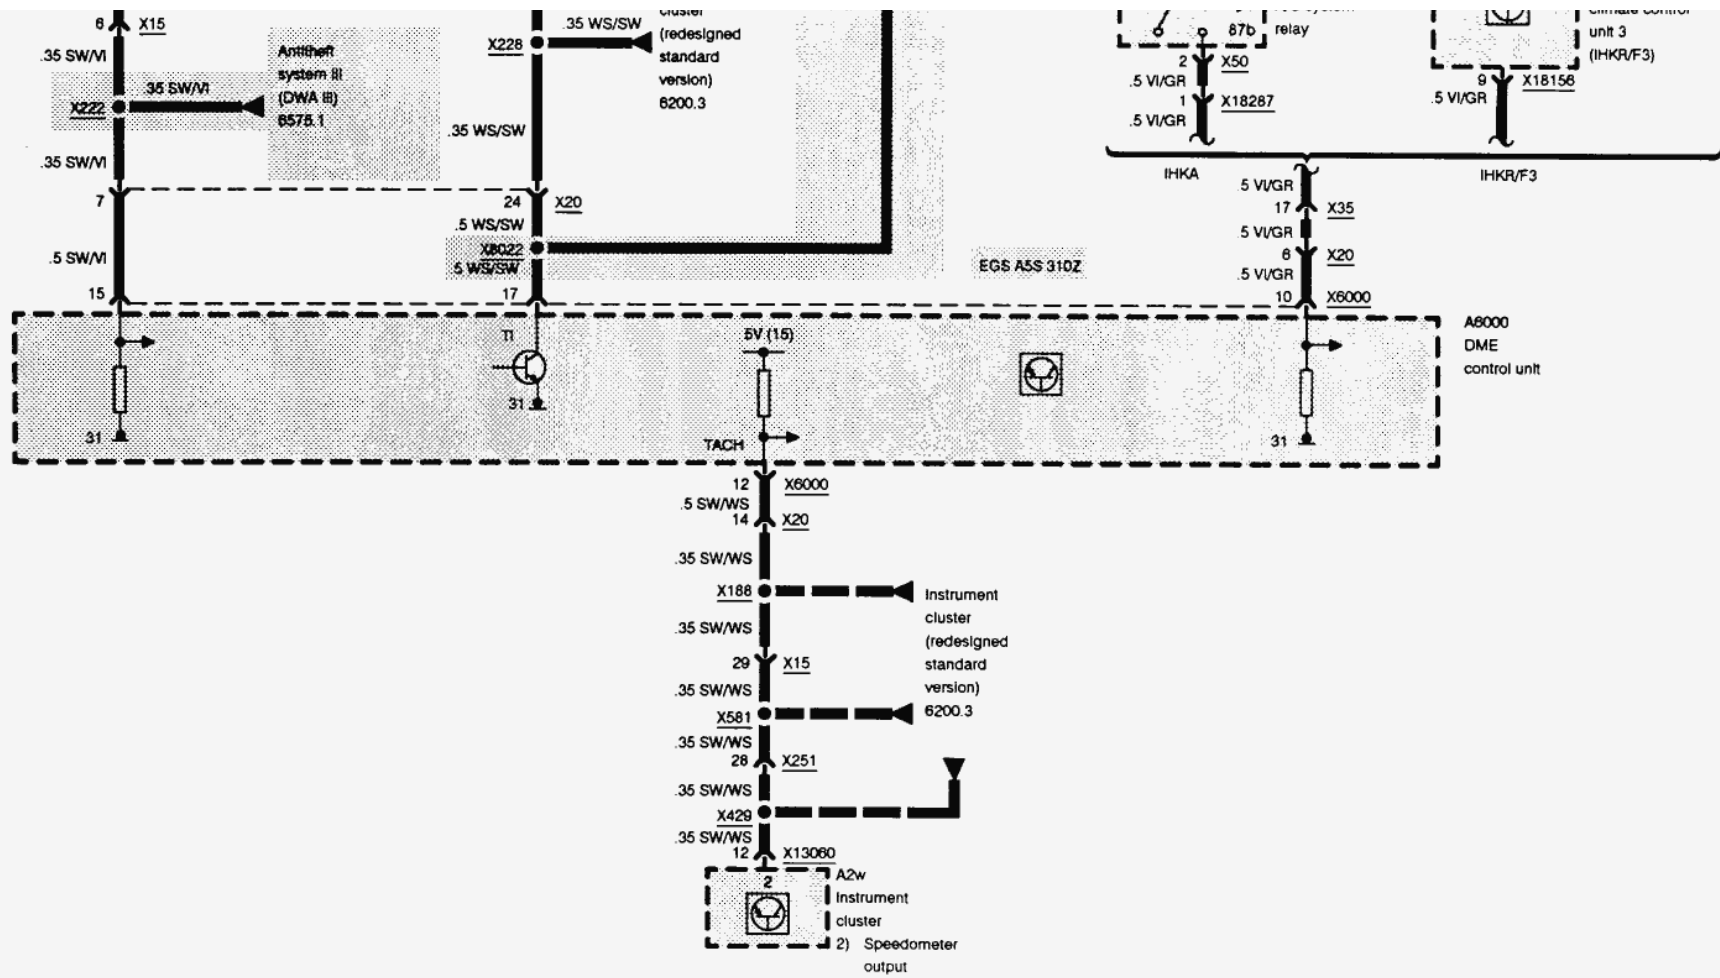

1210.10-10

1994

**BMWAG**


Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


Light switch

Scheme 6300.0

09/93 ————— **6300.0-00** ————— 1994

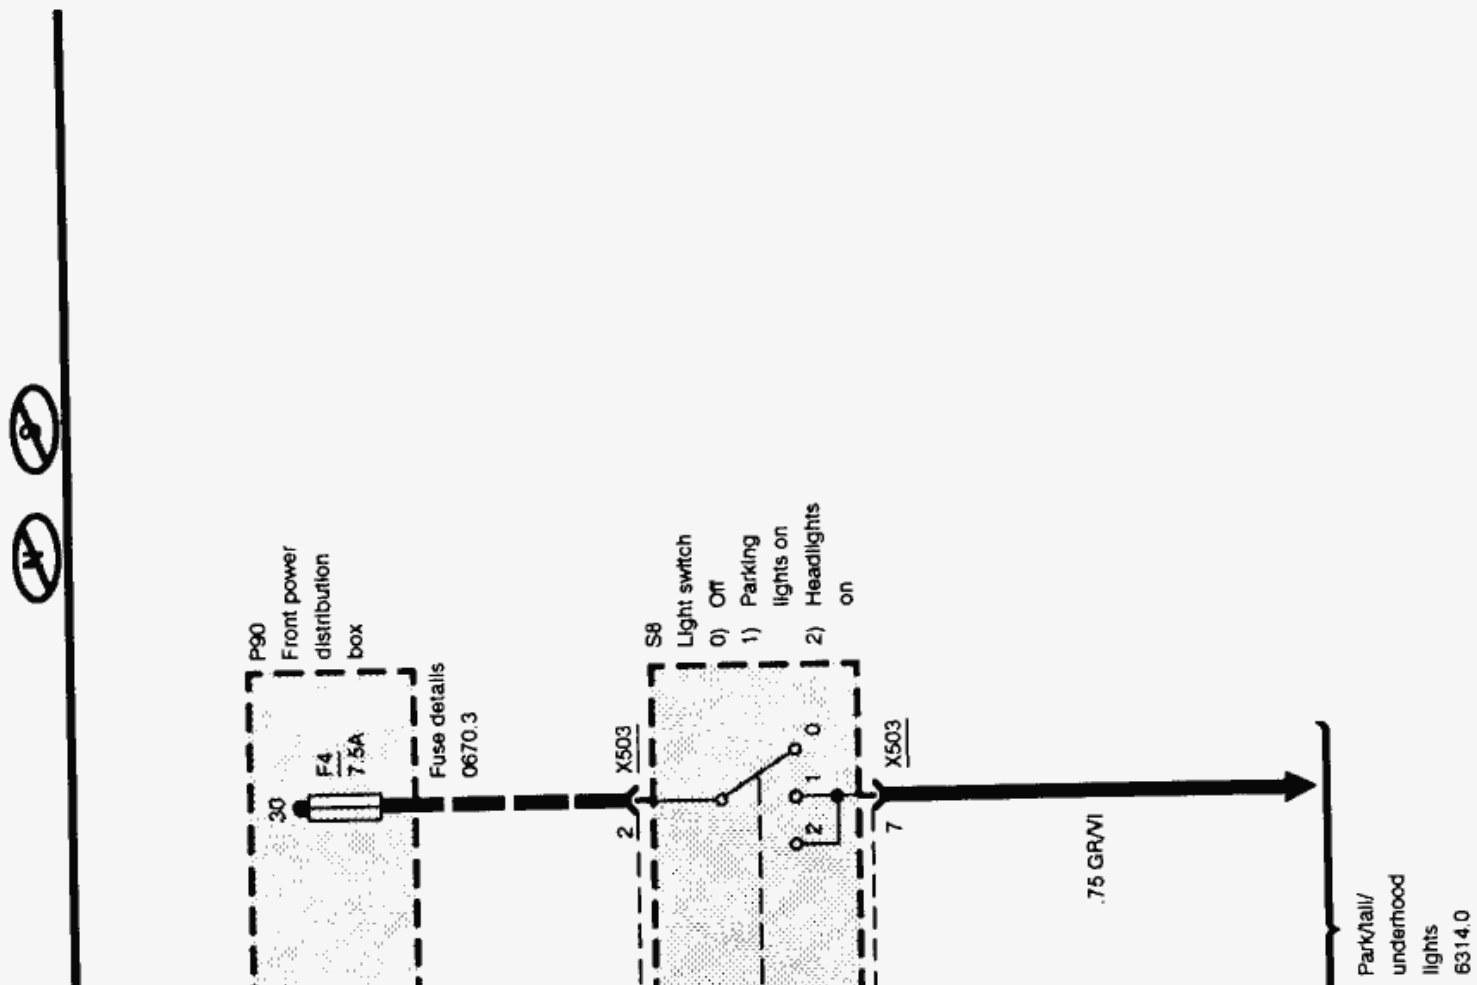

# Light switch

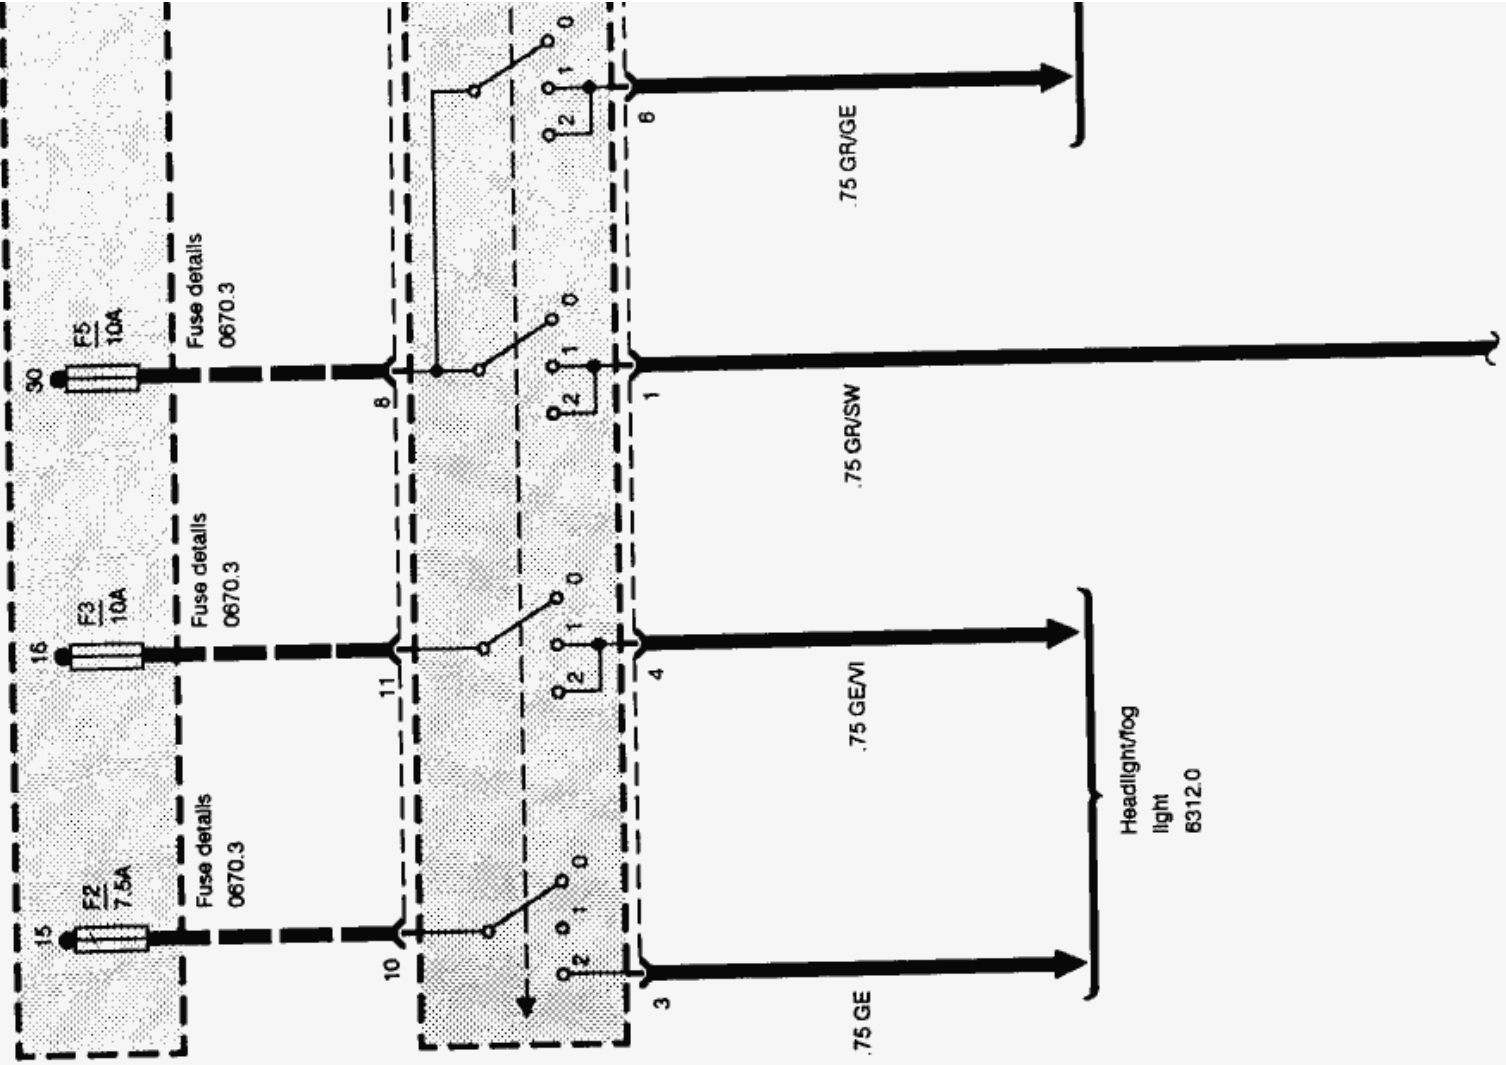





09/93

6300.0-01

1994

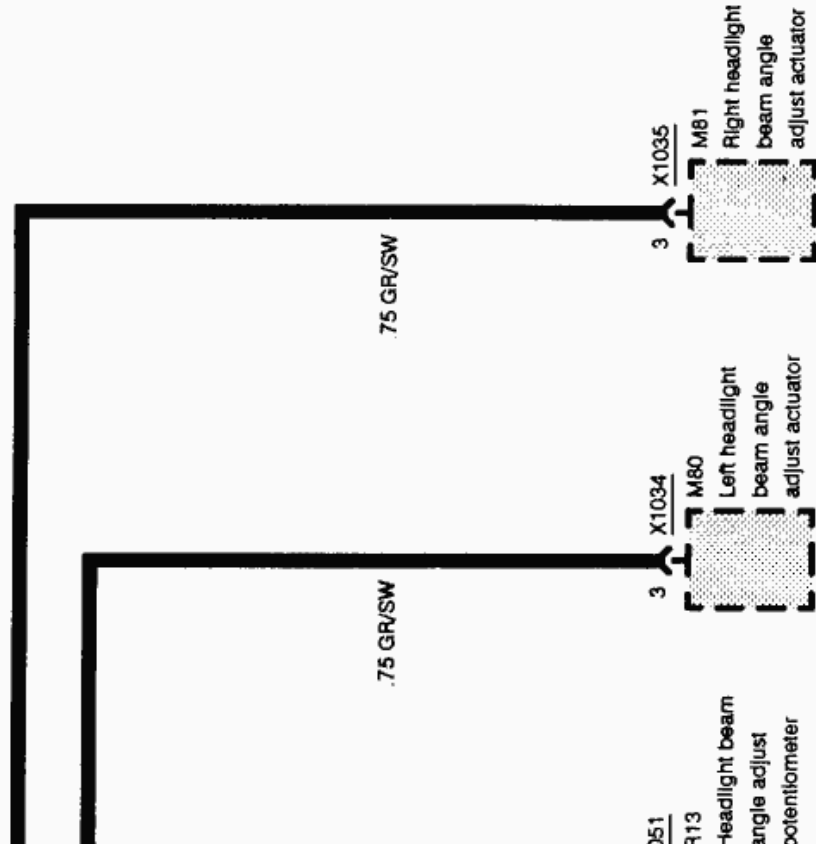

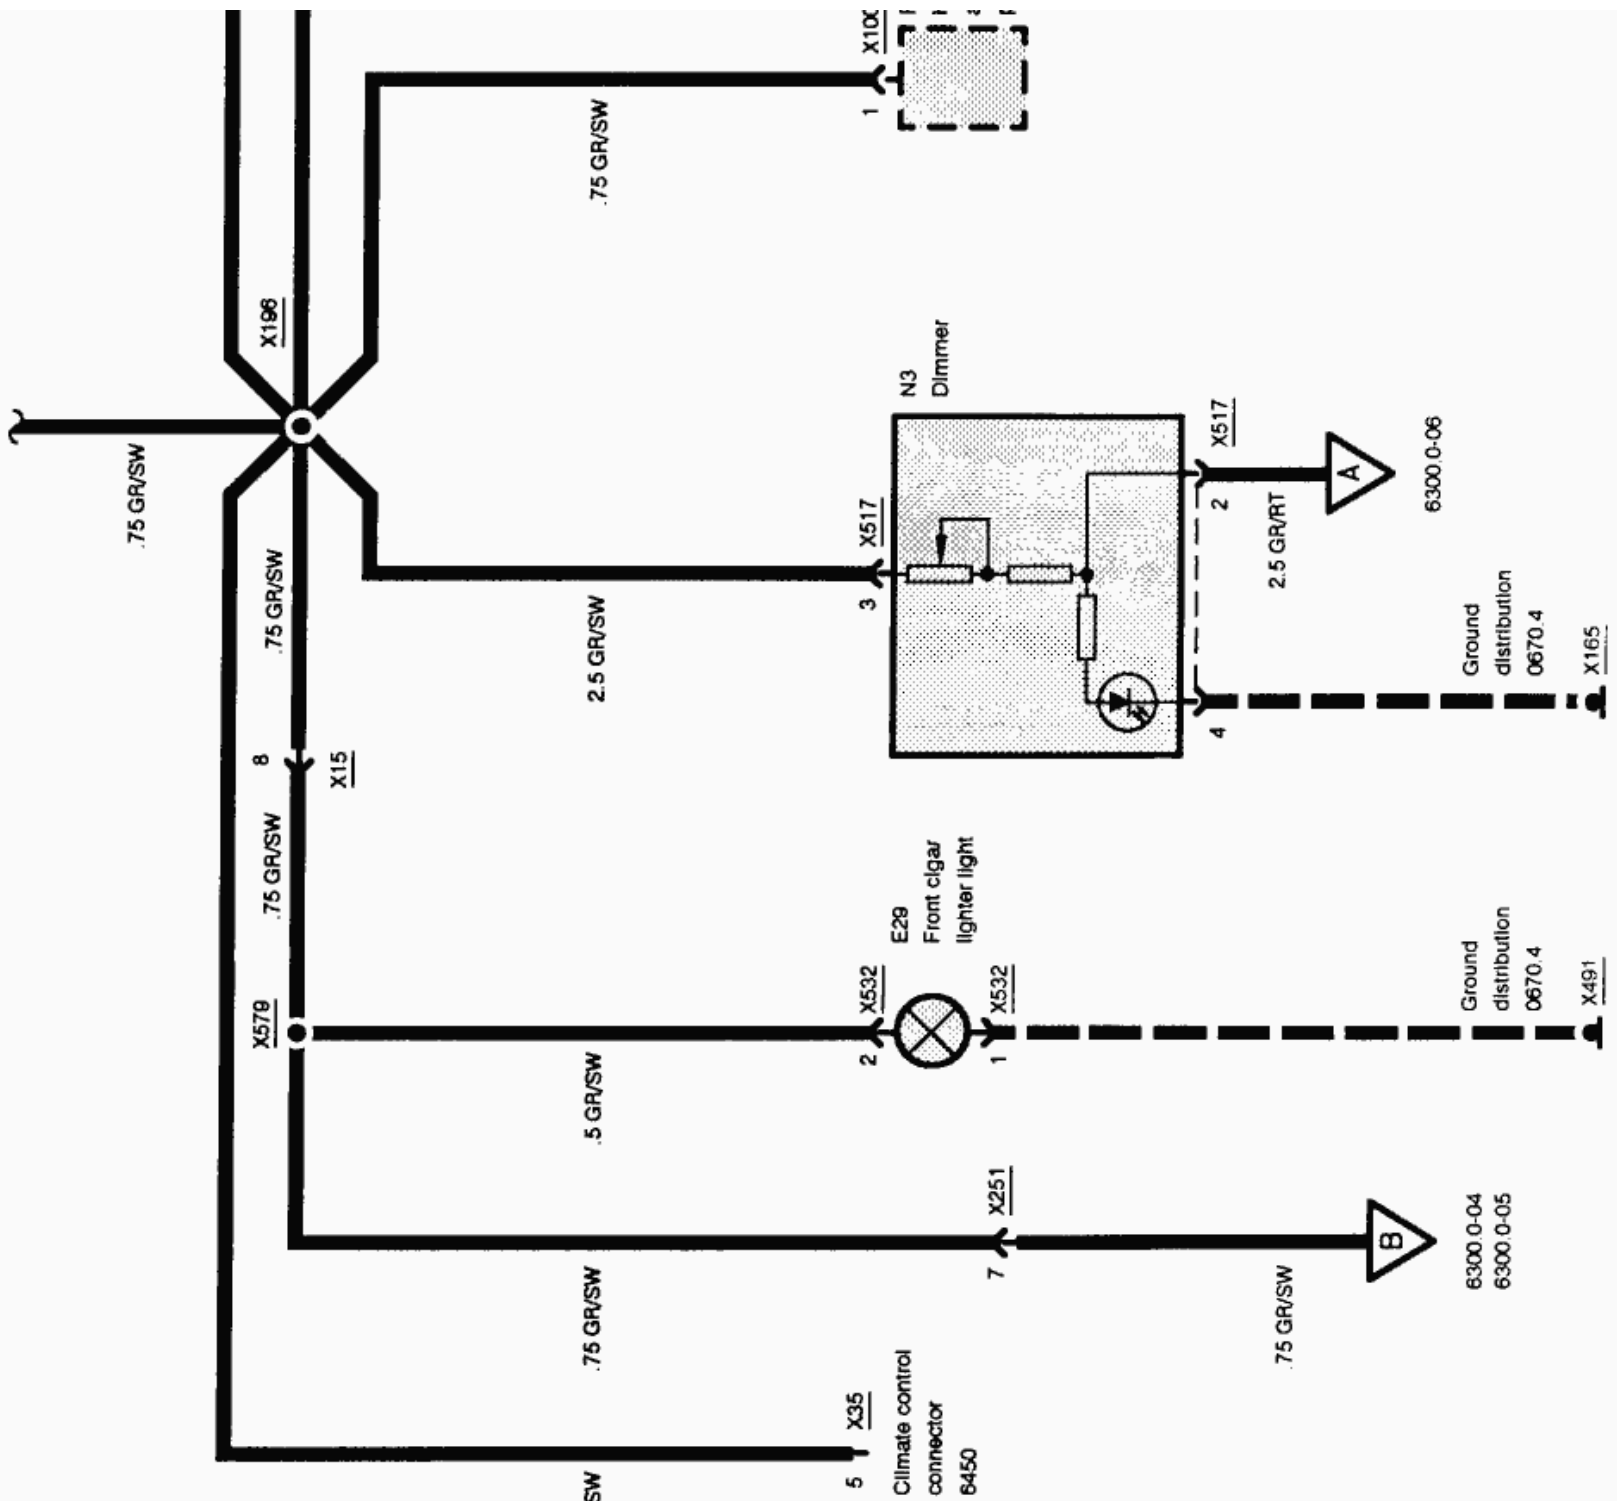




.5 GR/

(N) (S)


09/93

6300.0-02

1994

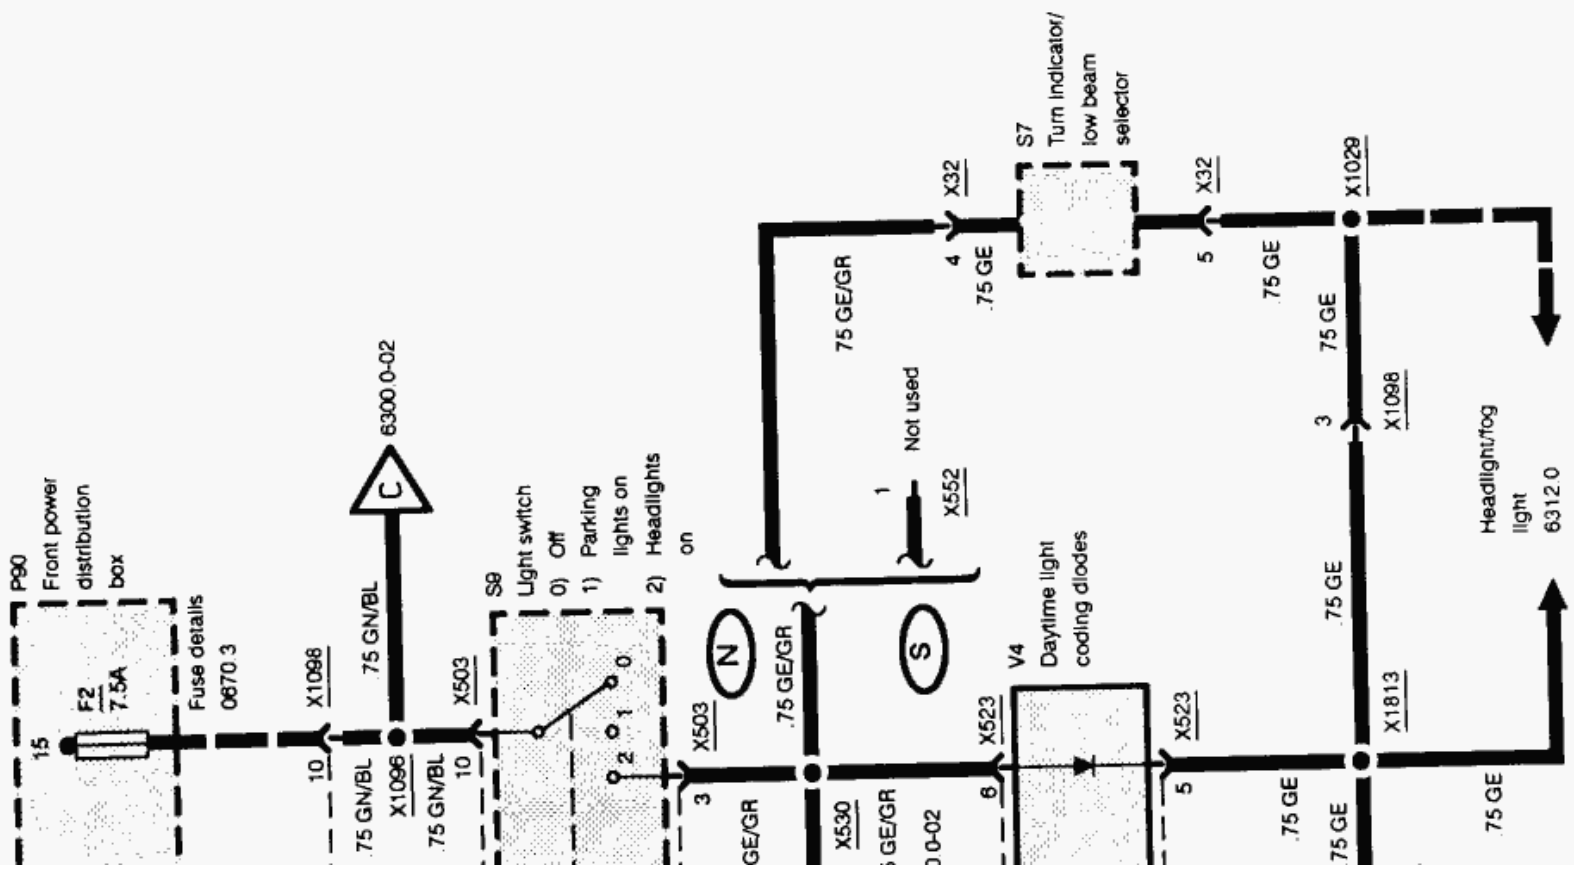

# Light switch

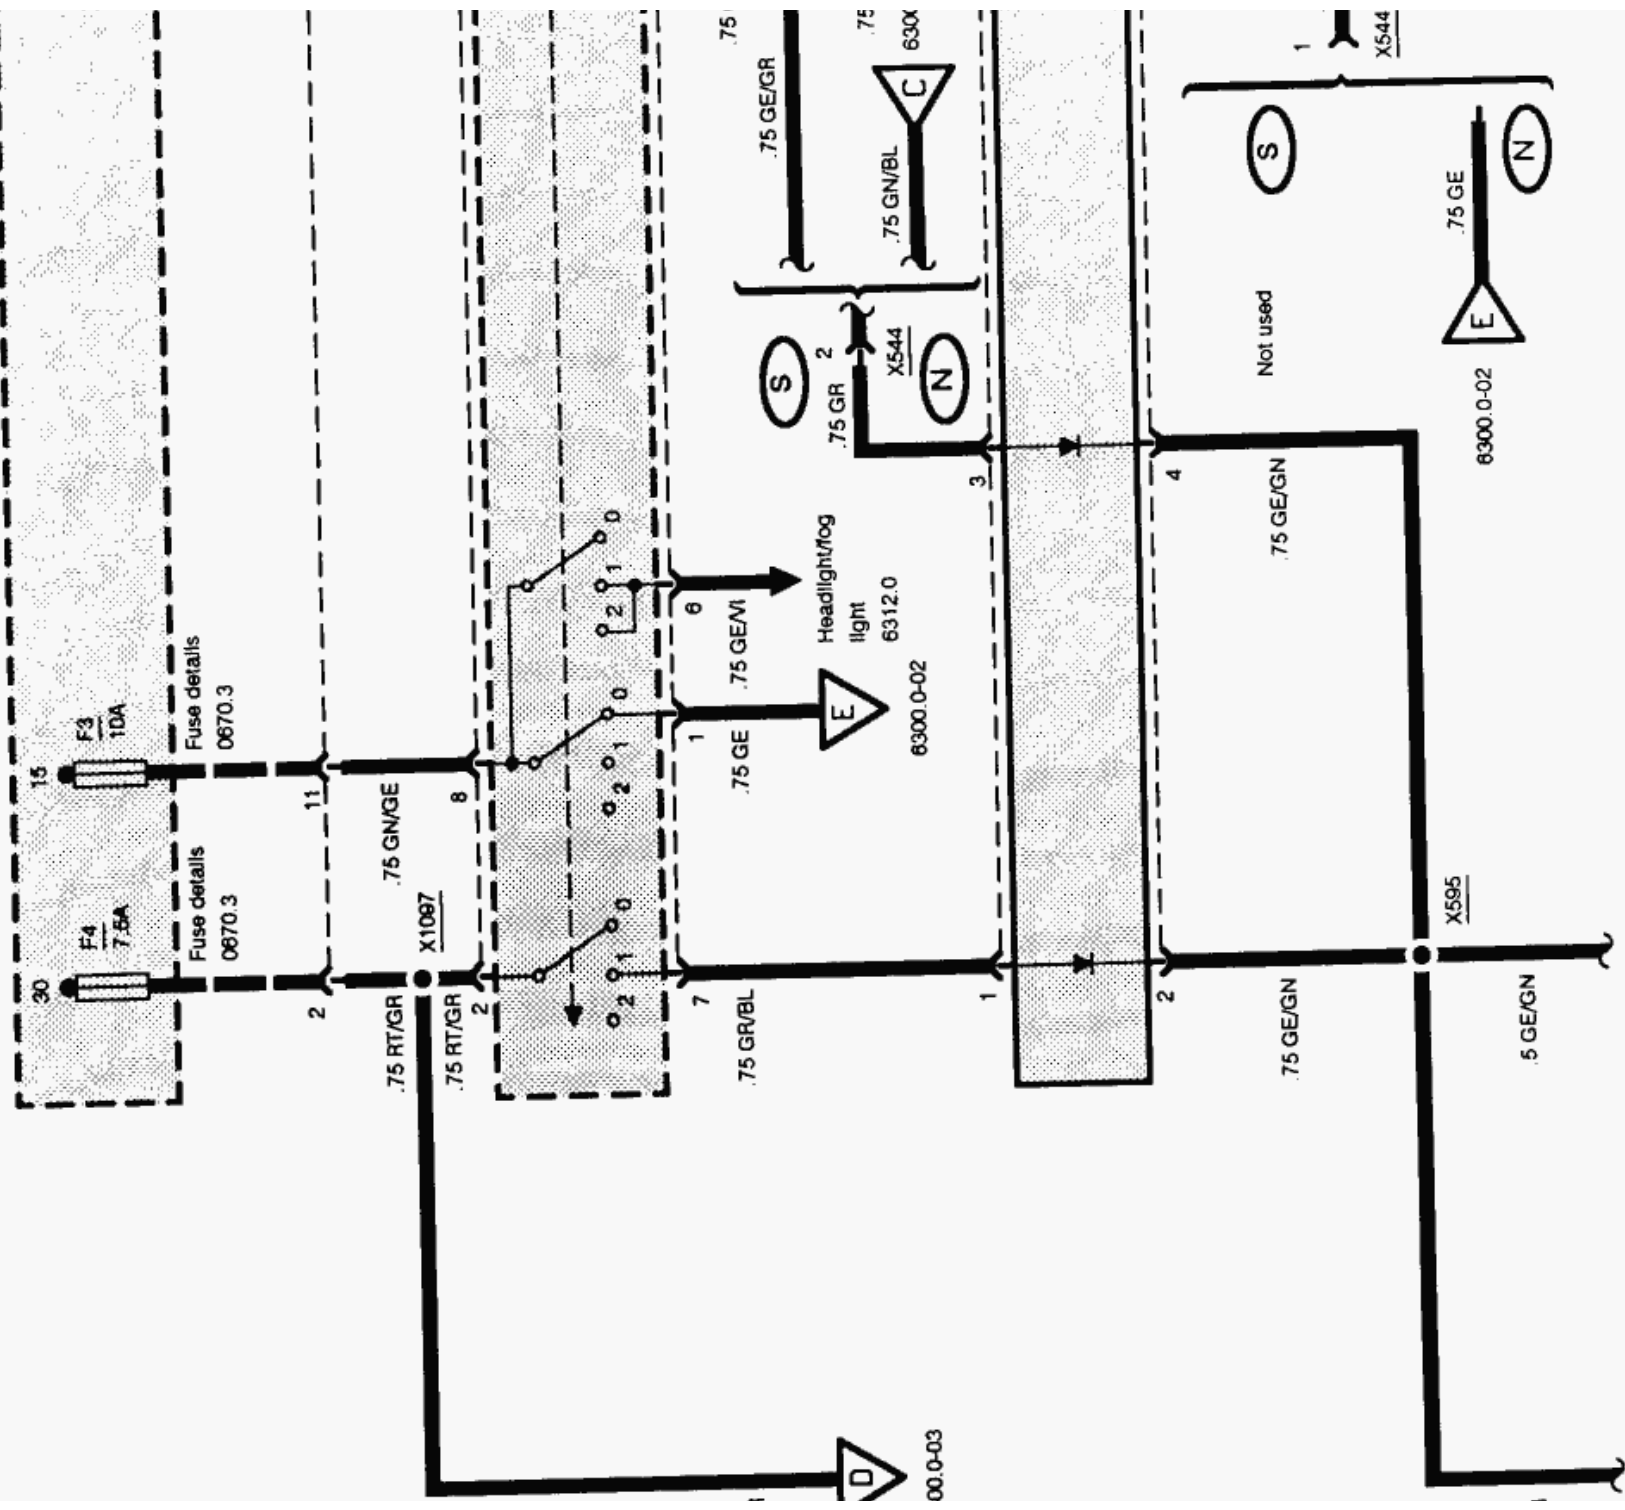




09/93

6300.0-03


1994

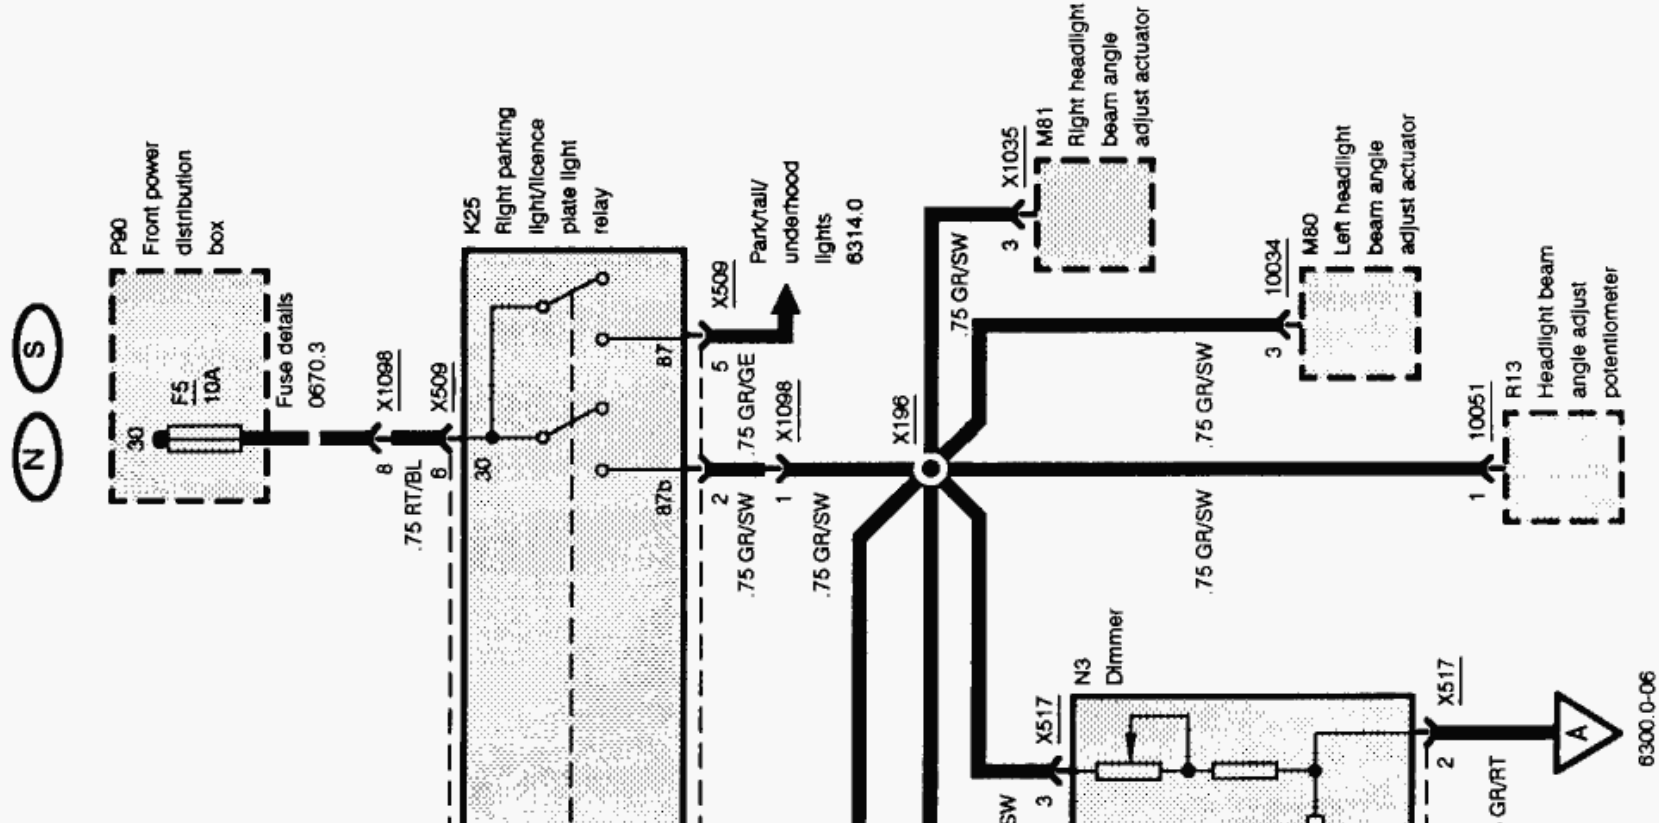

.75 RT/GR

63



.5 GE/GN

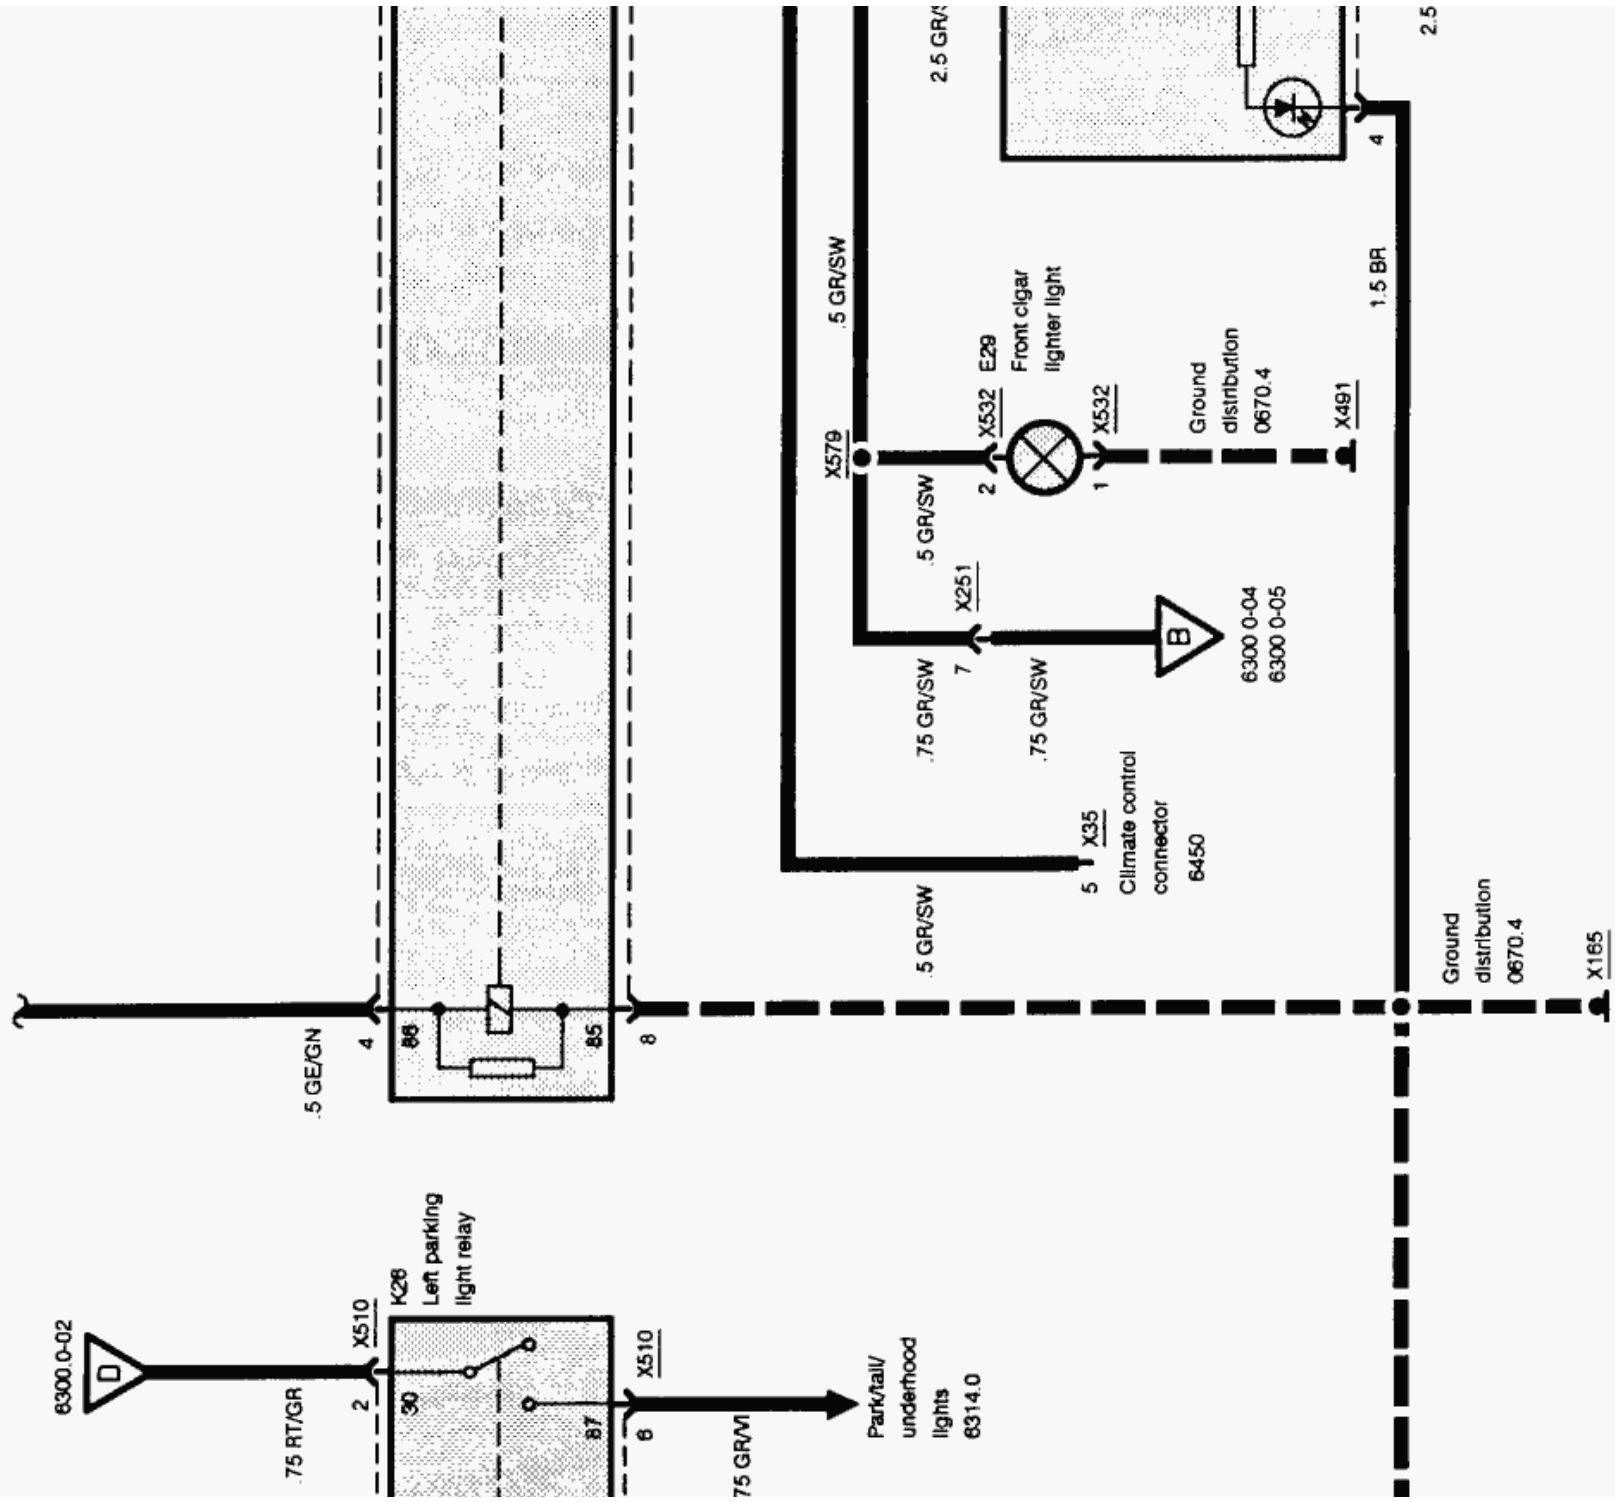


09/93

6300.0-04

1994

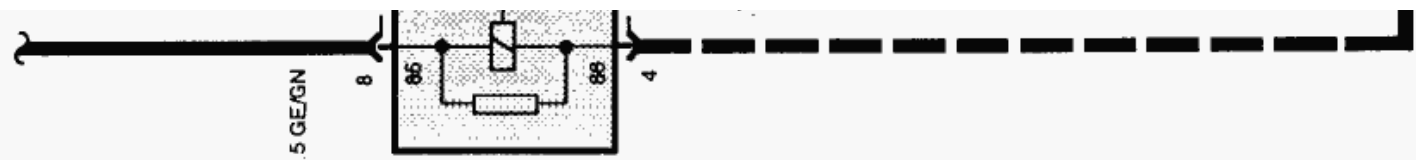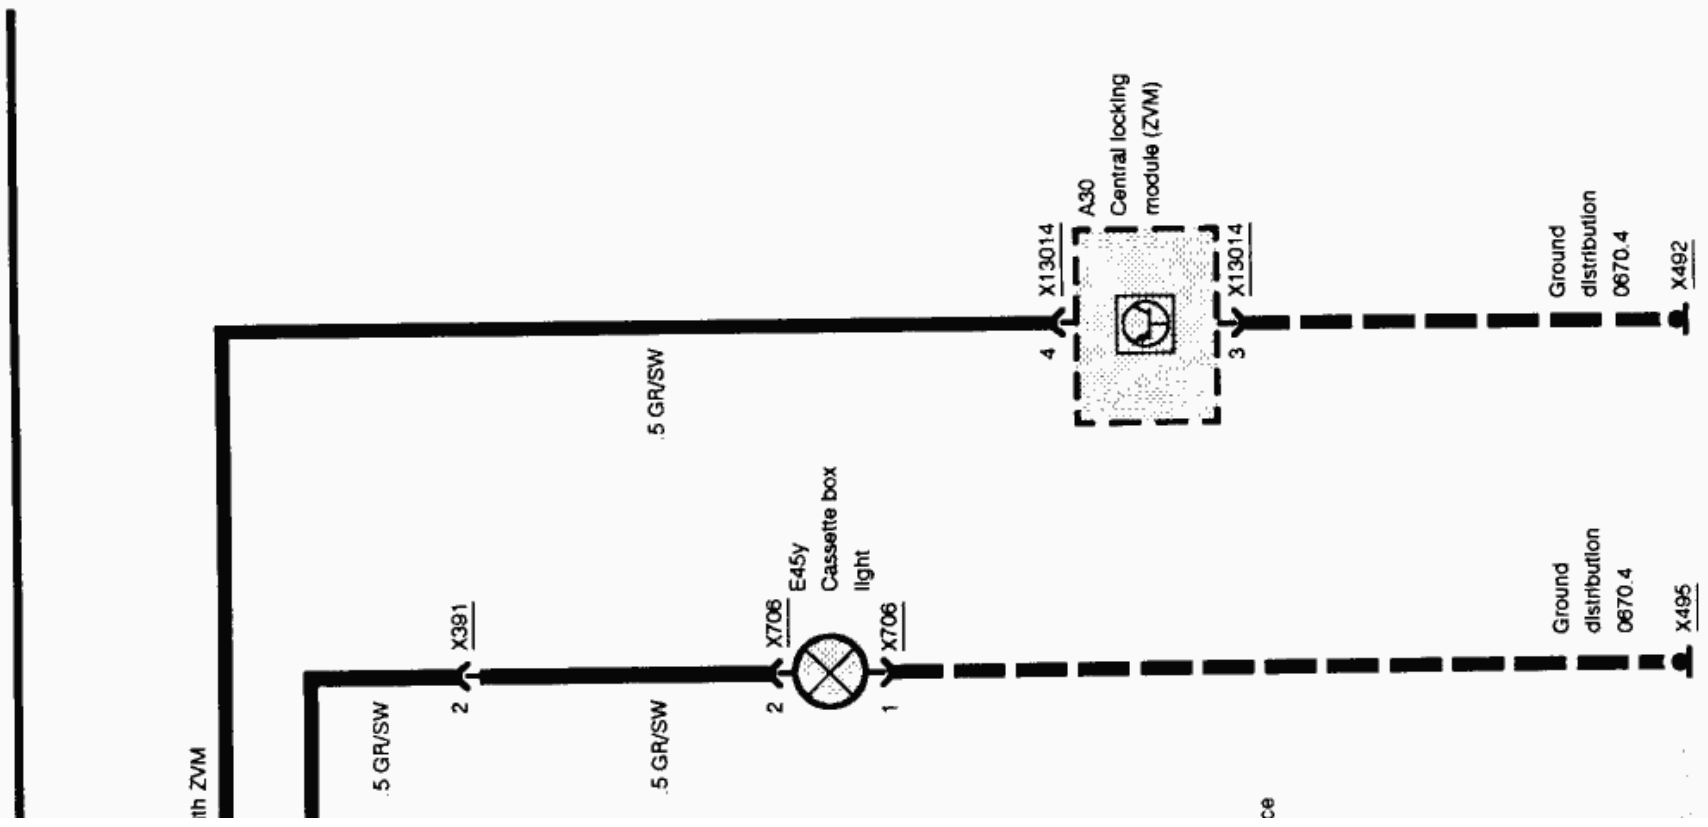

# nt switch

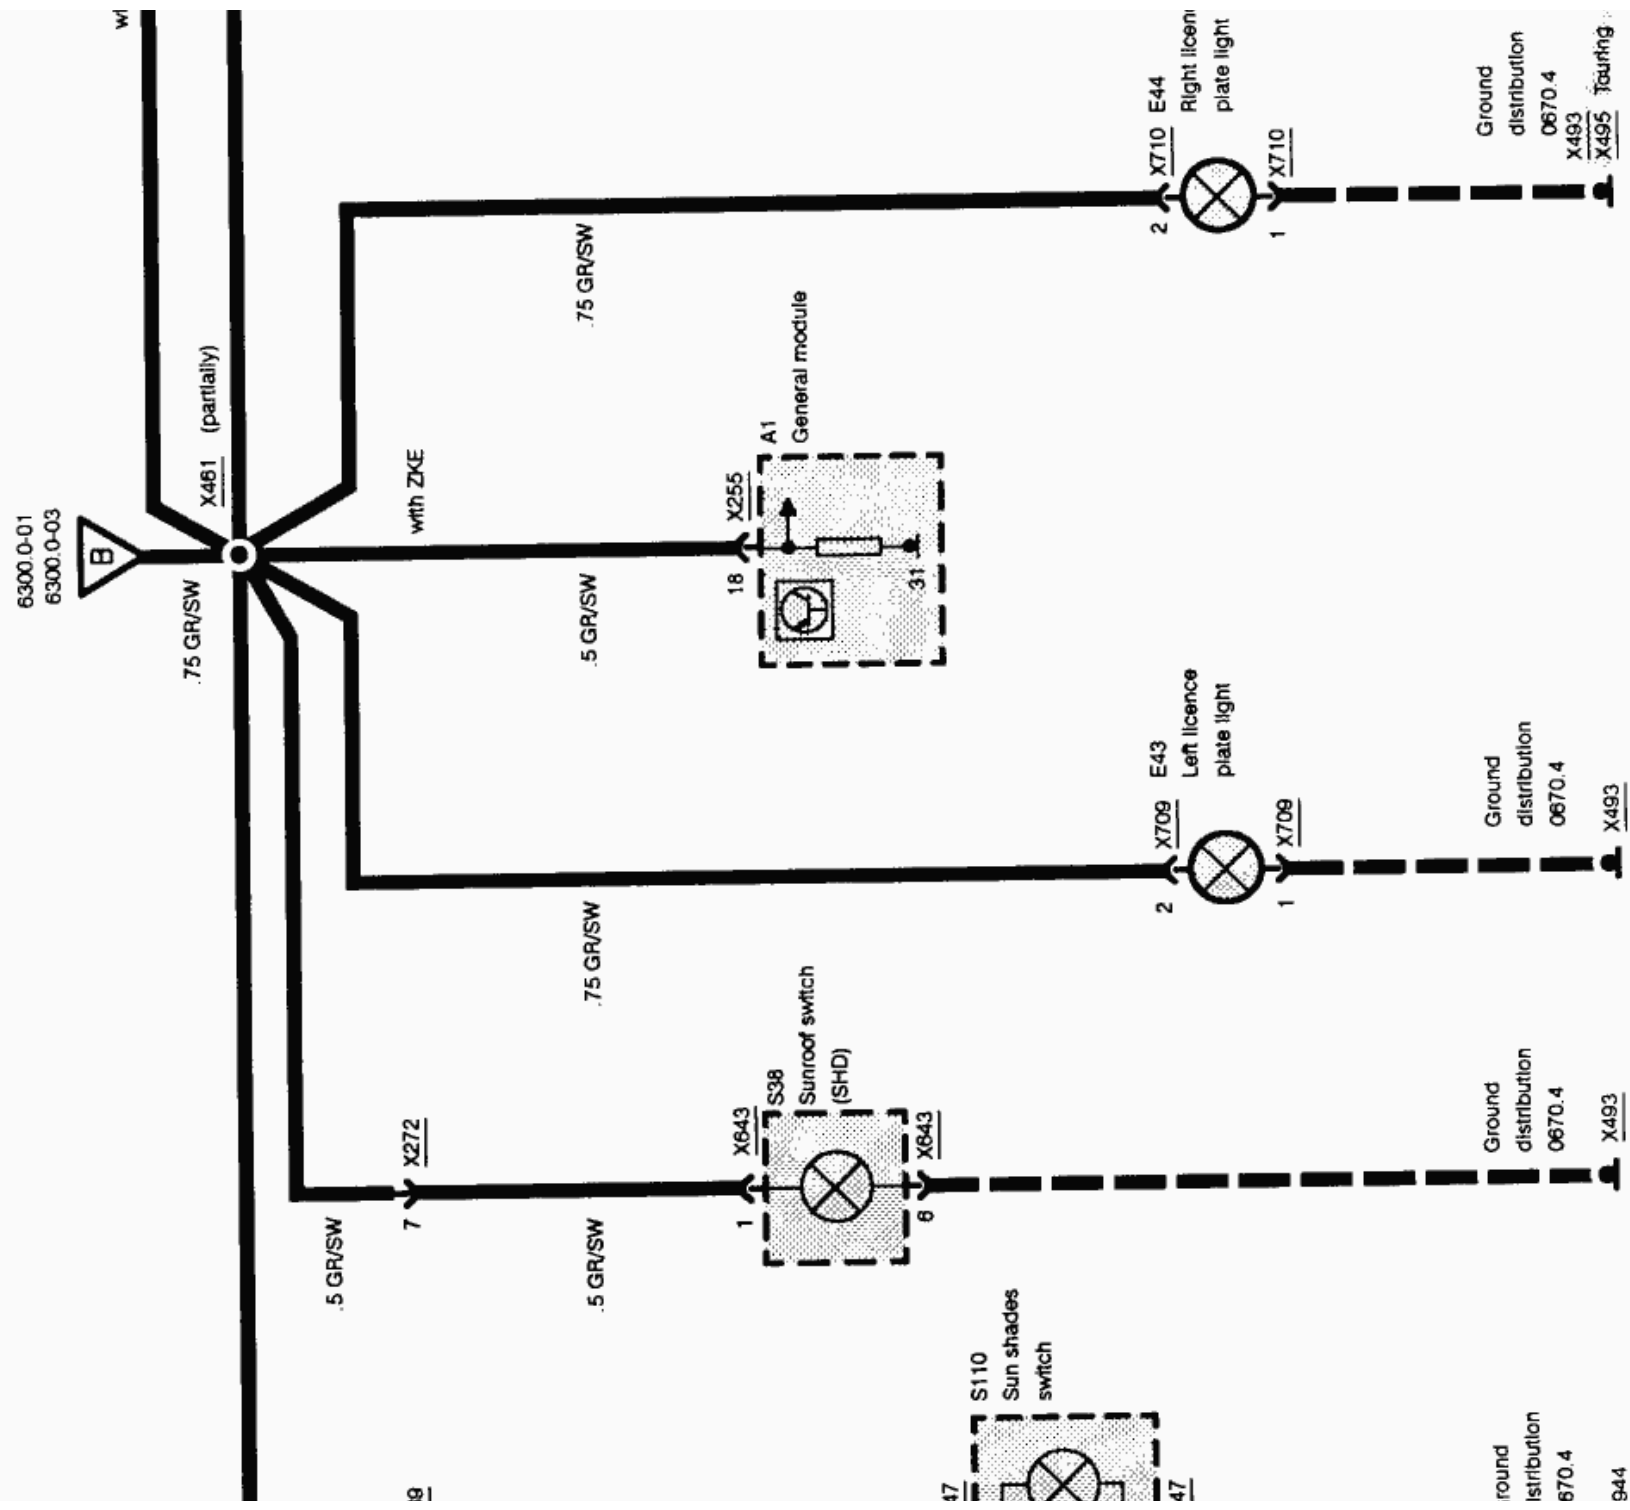





Light


09/93

6300.0-05

1994

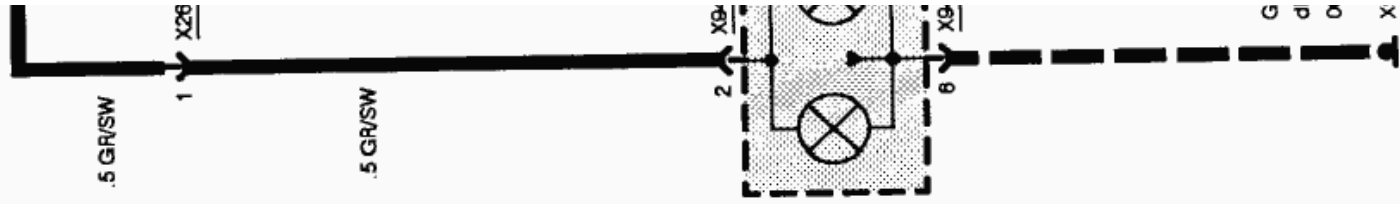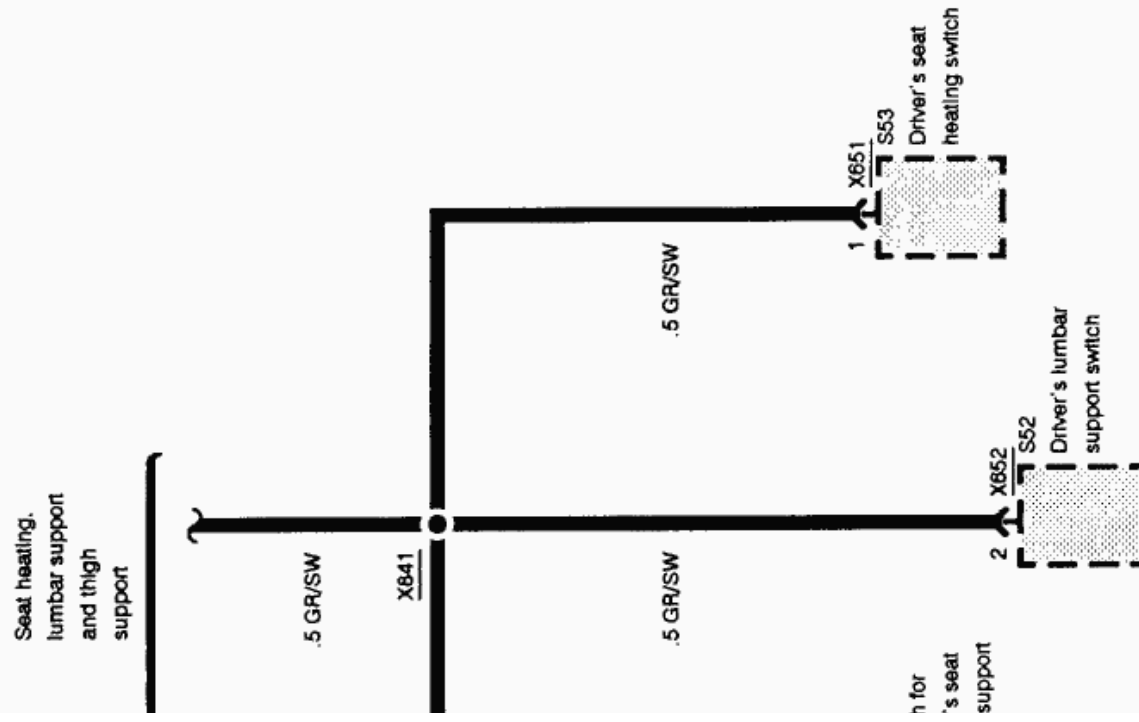

# switch

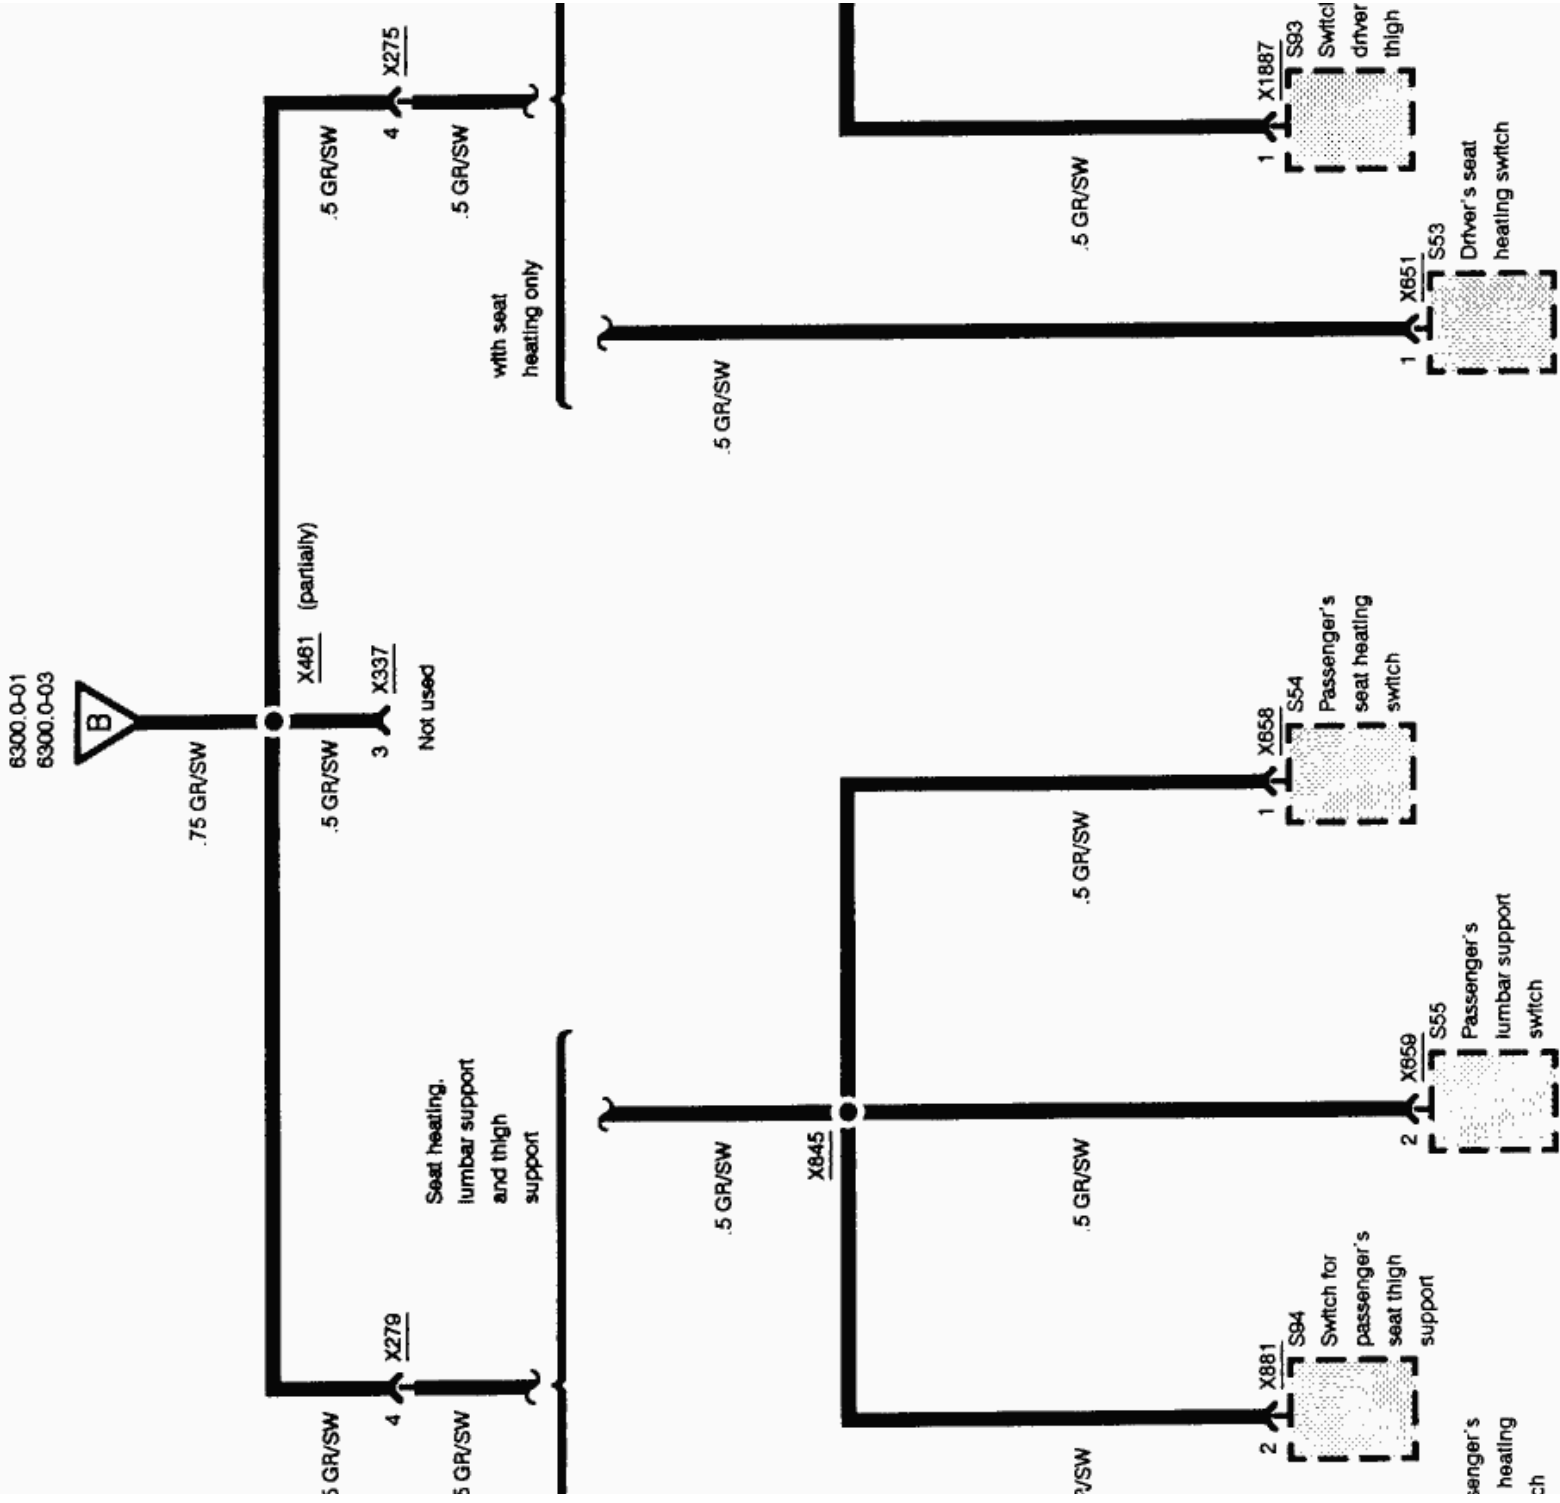







09/93

6300.0-06

1994

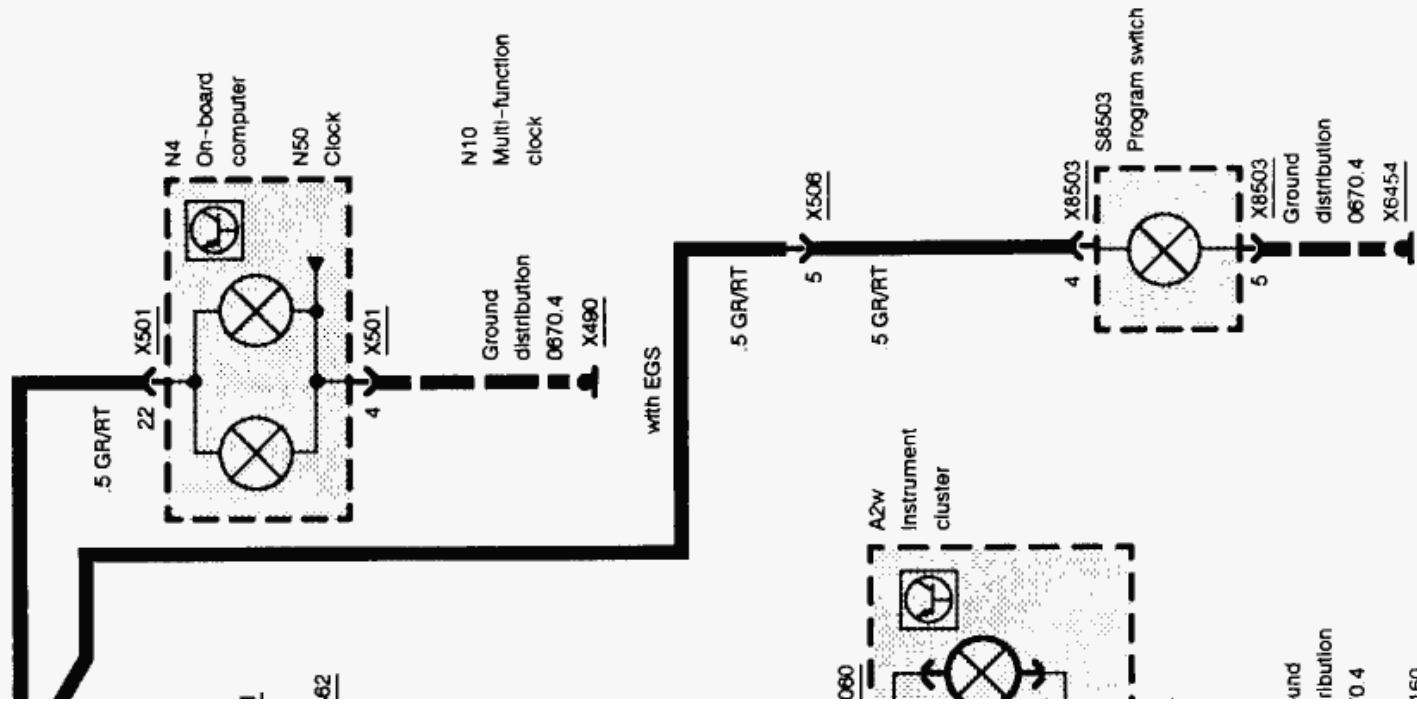


**witch**

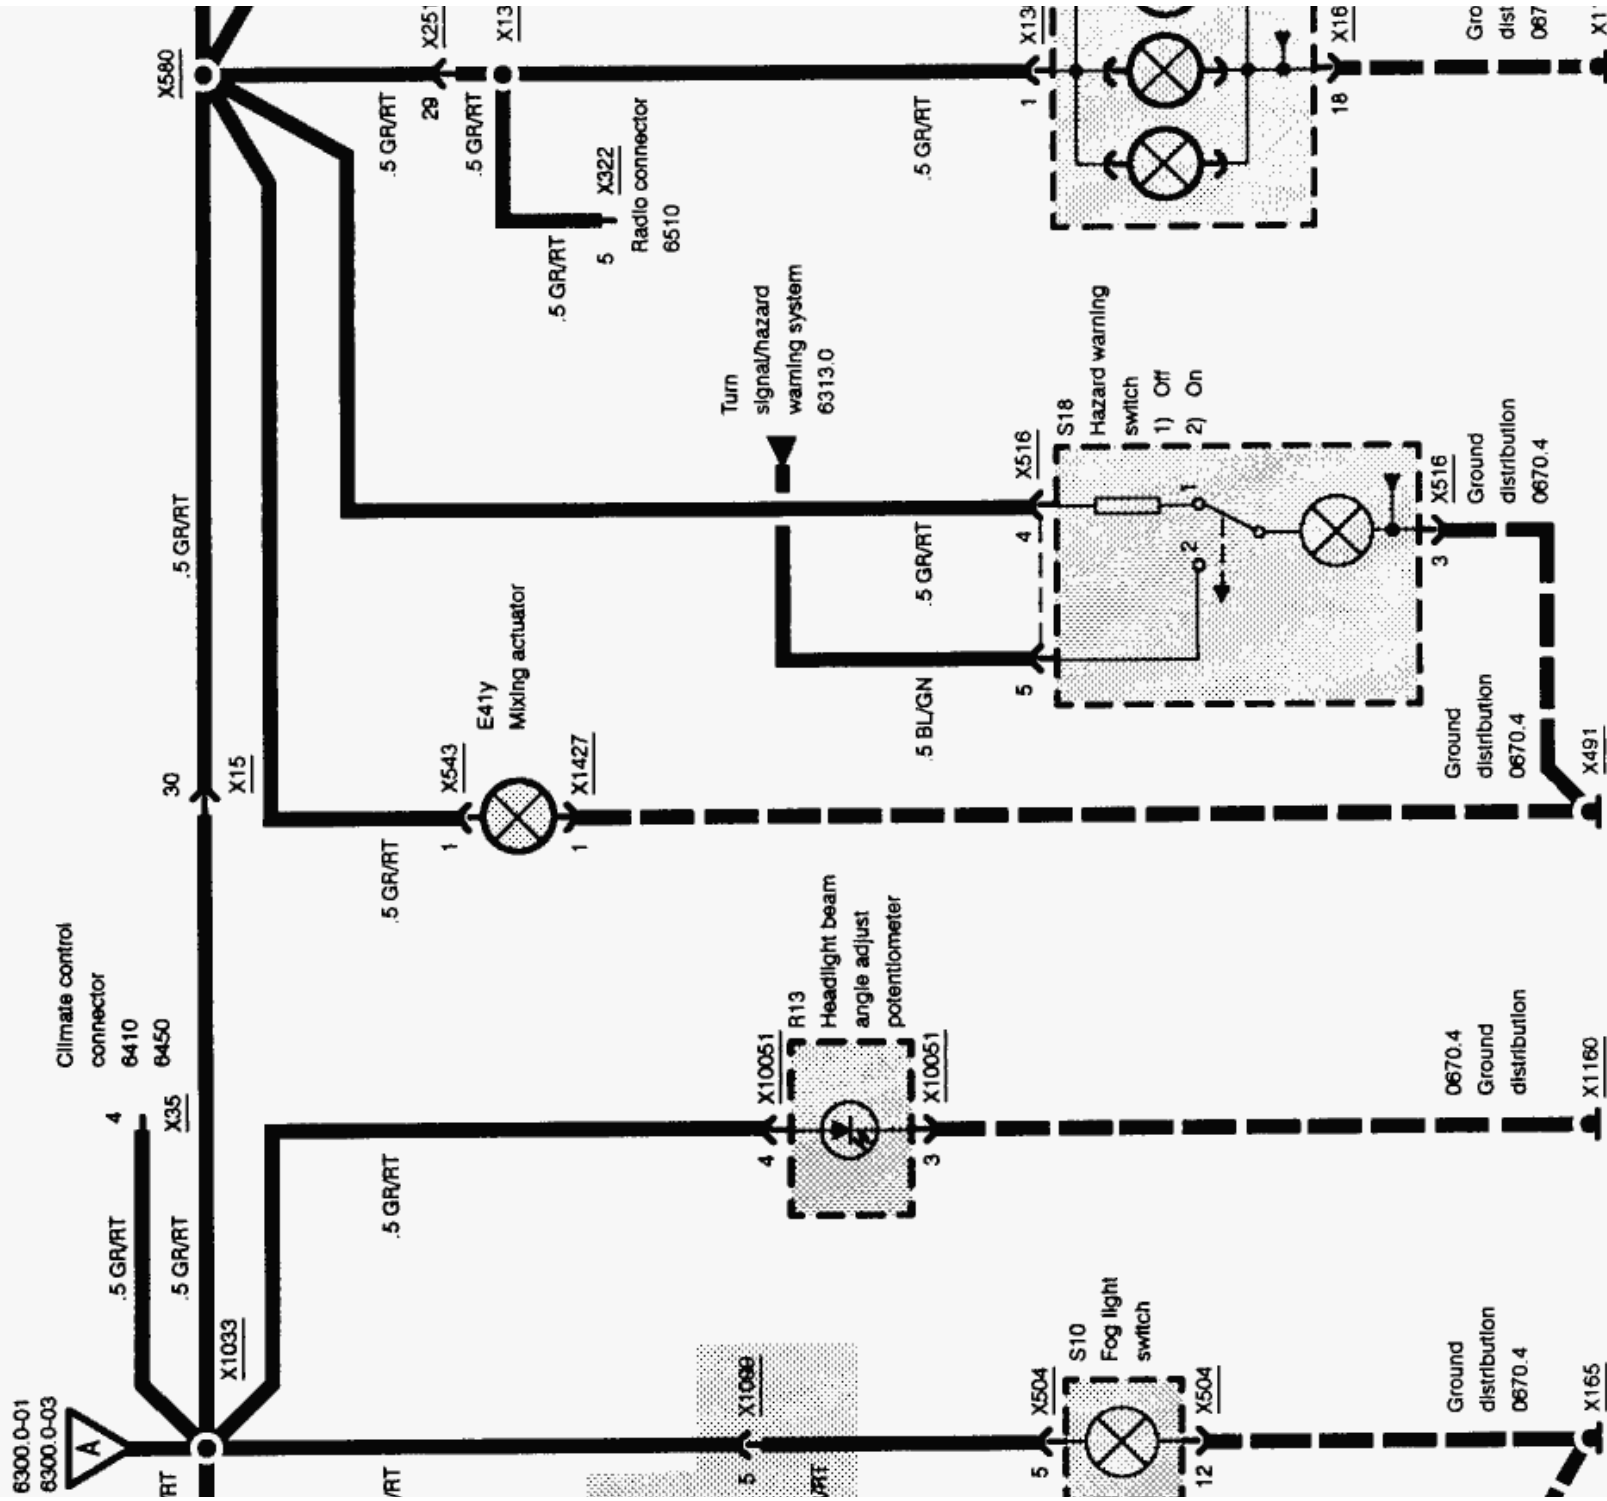




# Light s

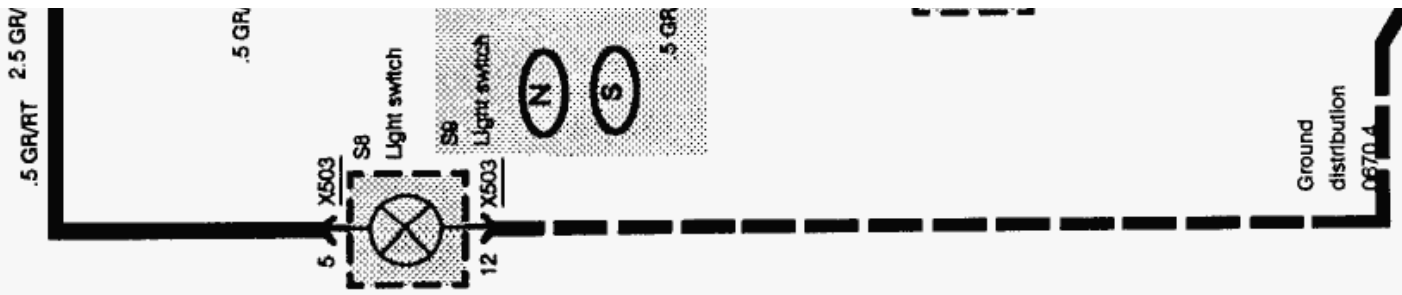




# Radio/HiFi One component


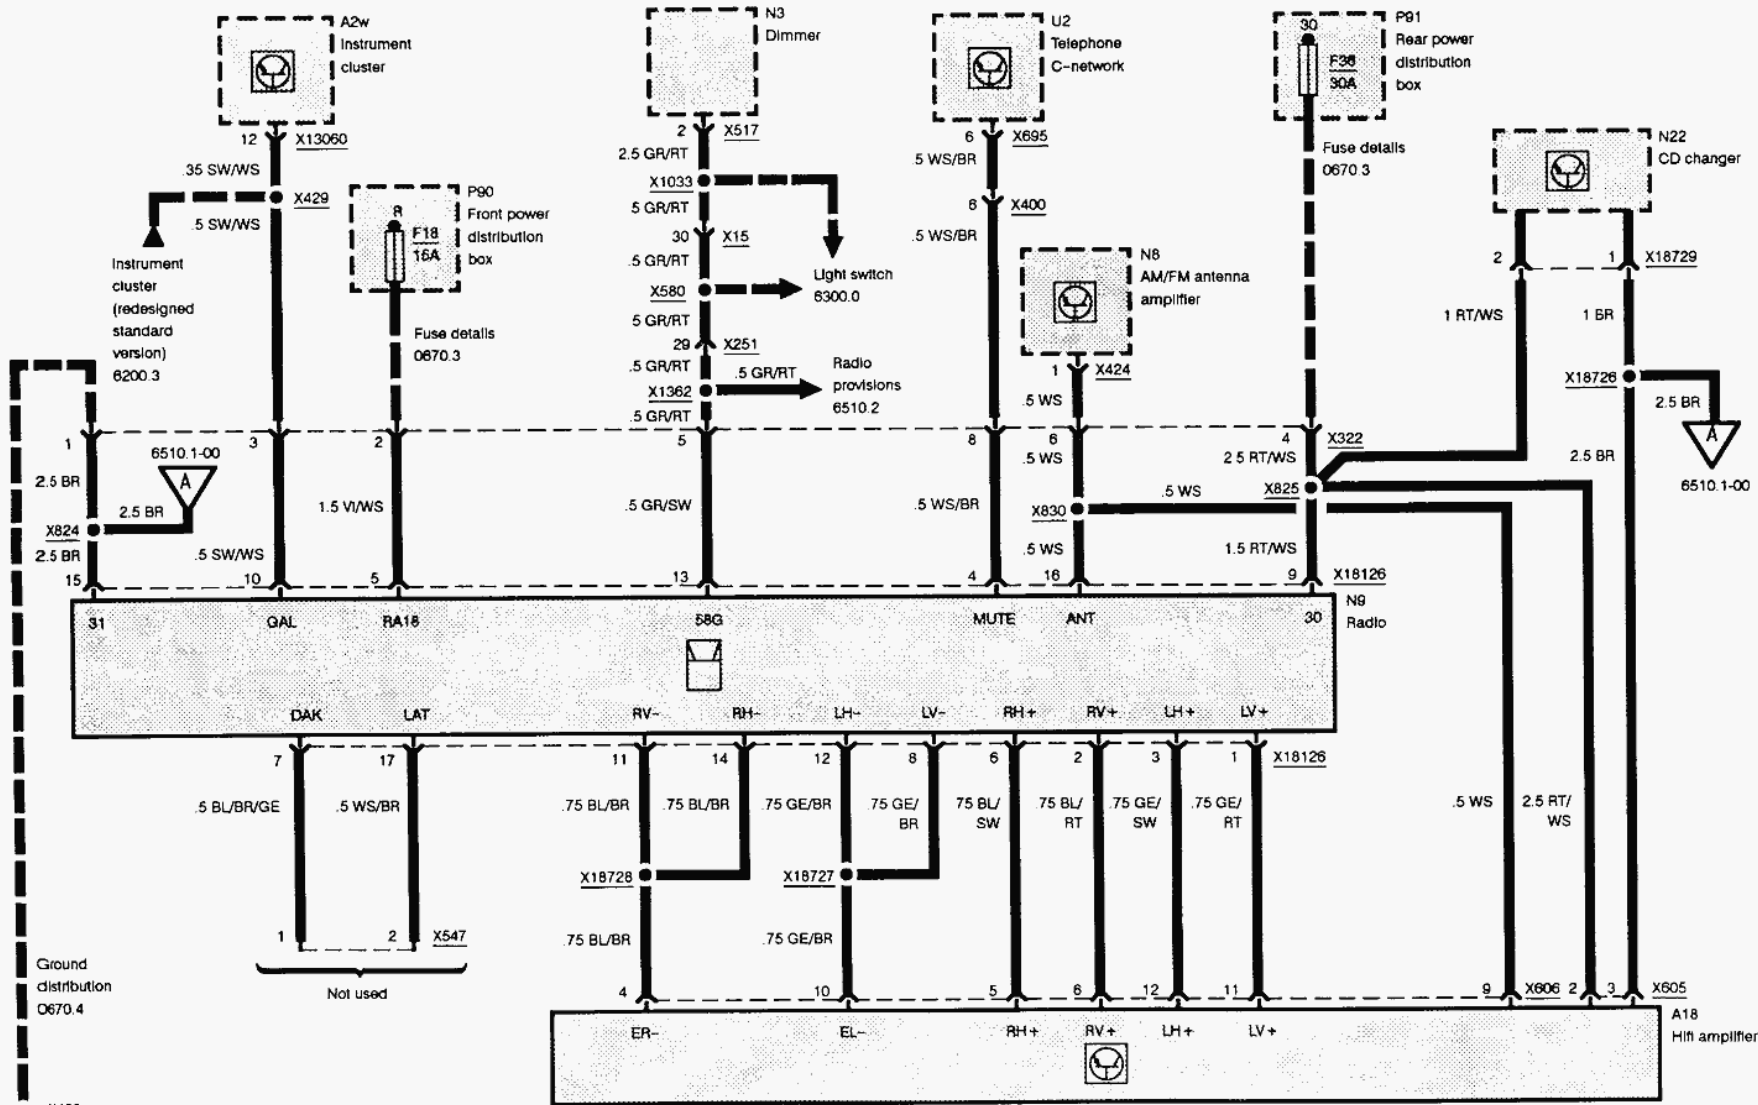


# BMW 5 Radio/HiFi Two components


09/93

  6510.1-01

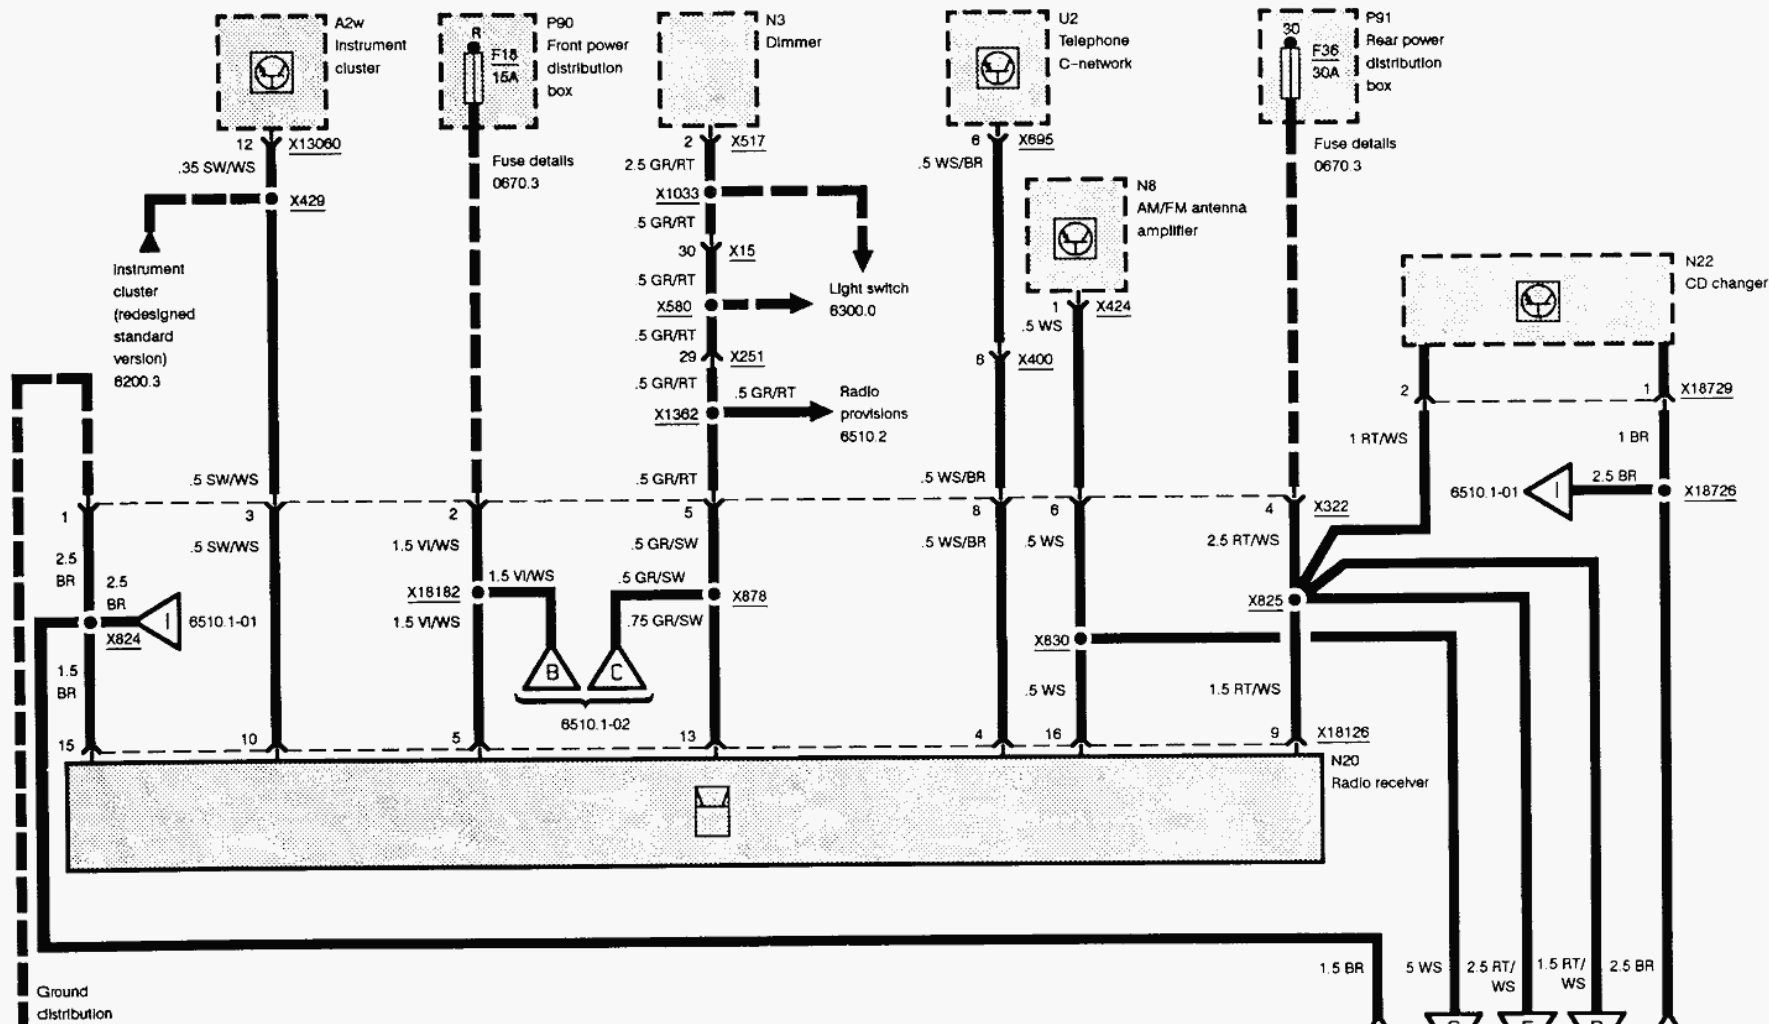





# BMW 5 Radio/HiFi Two components

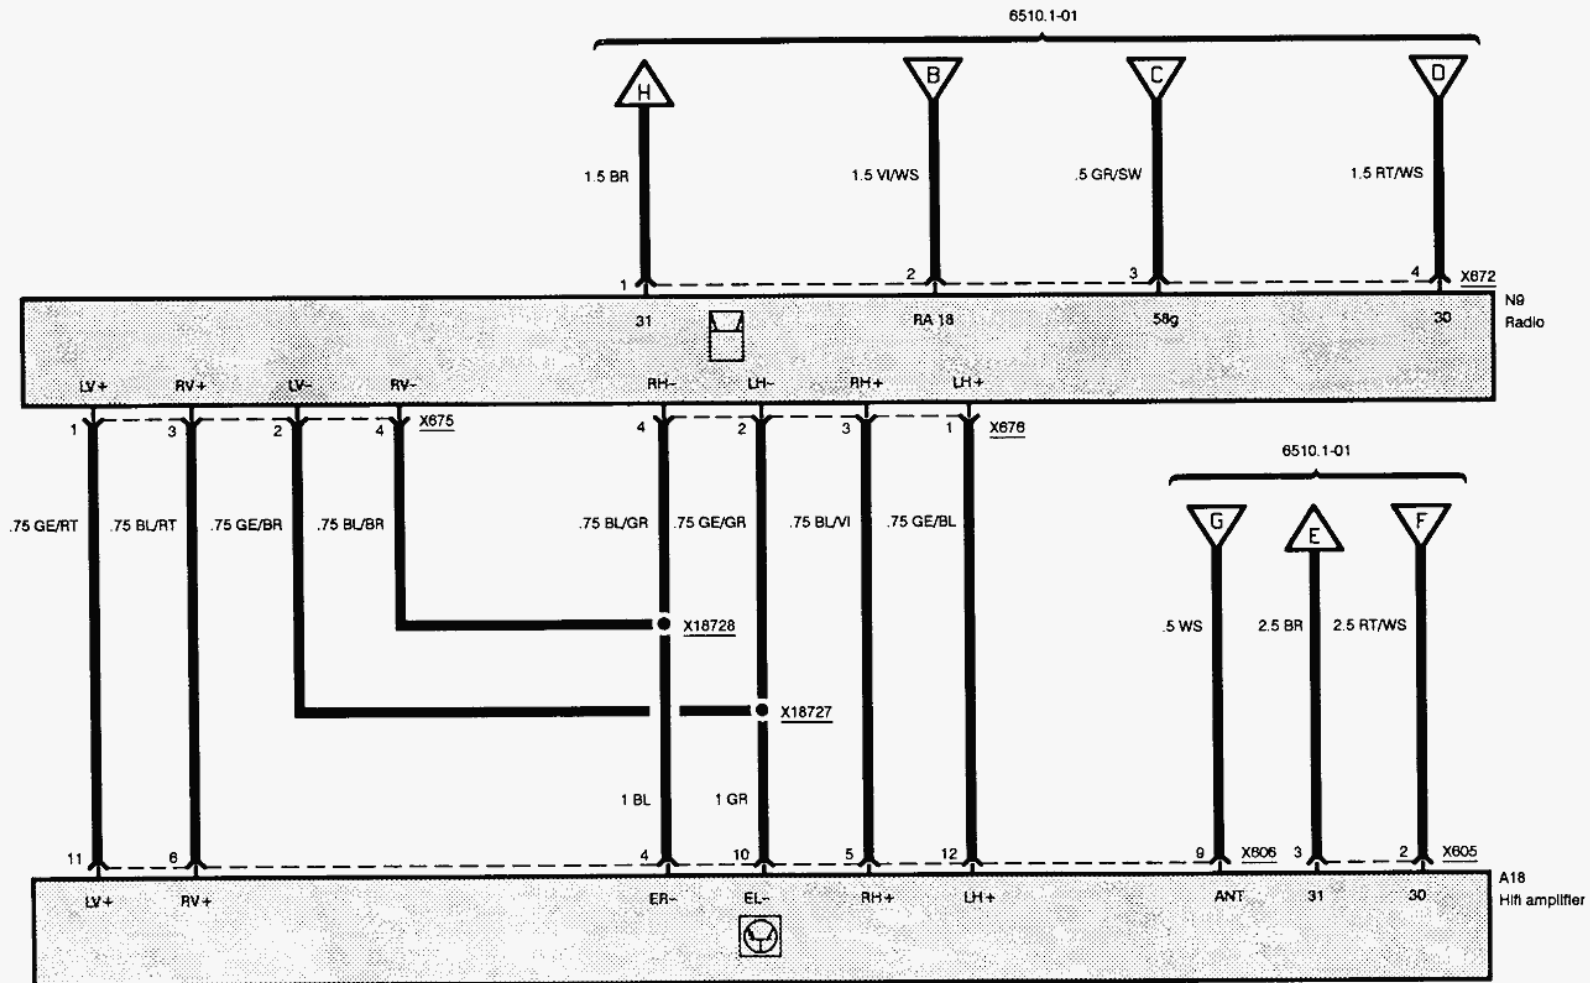


**BMW 5** **Radio/HiFi**  
**Speaker activation (front speaker)**

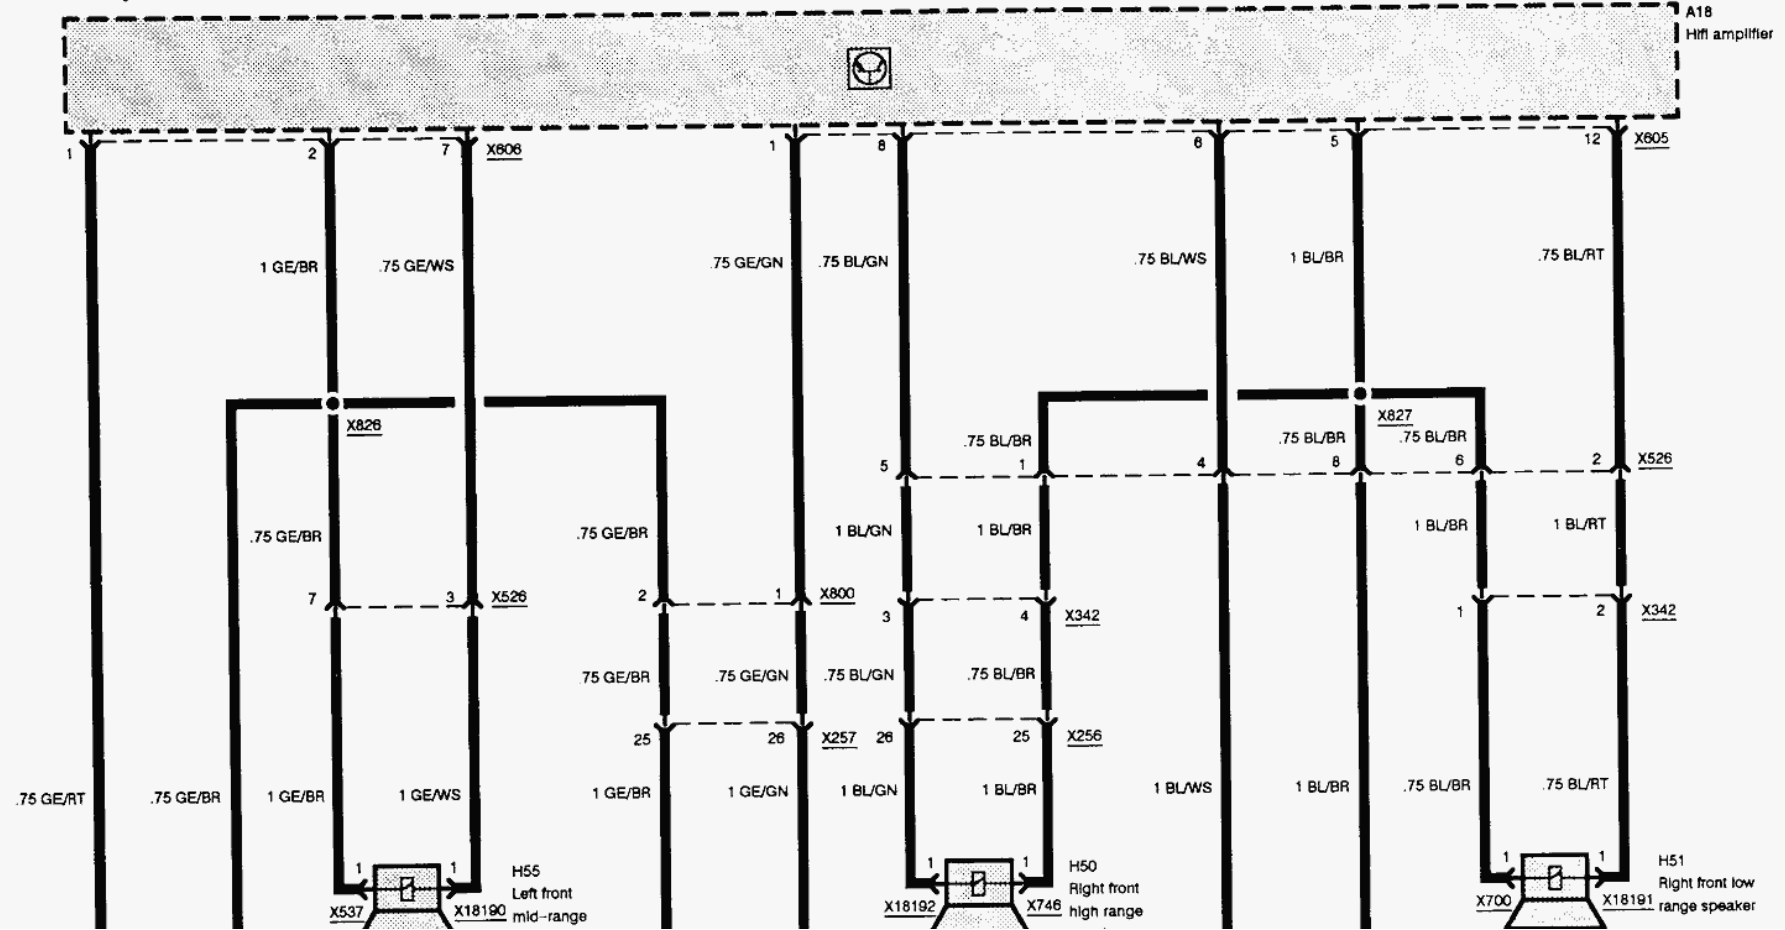


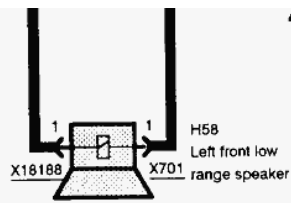

speaker

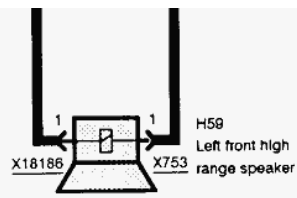

speaker

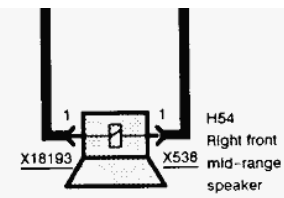


1994



## Radio/HiFi


### Speaker activation (rear speaker)

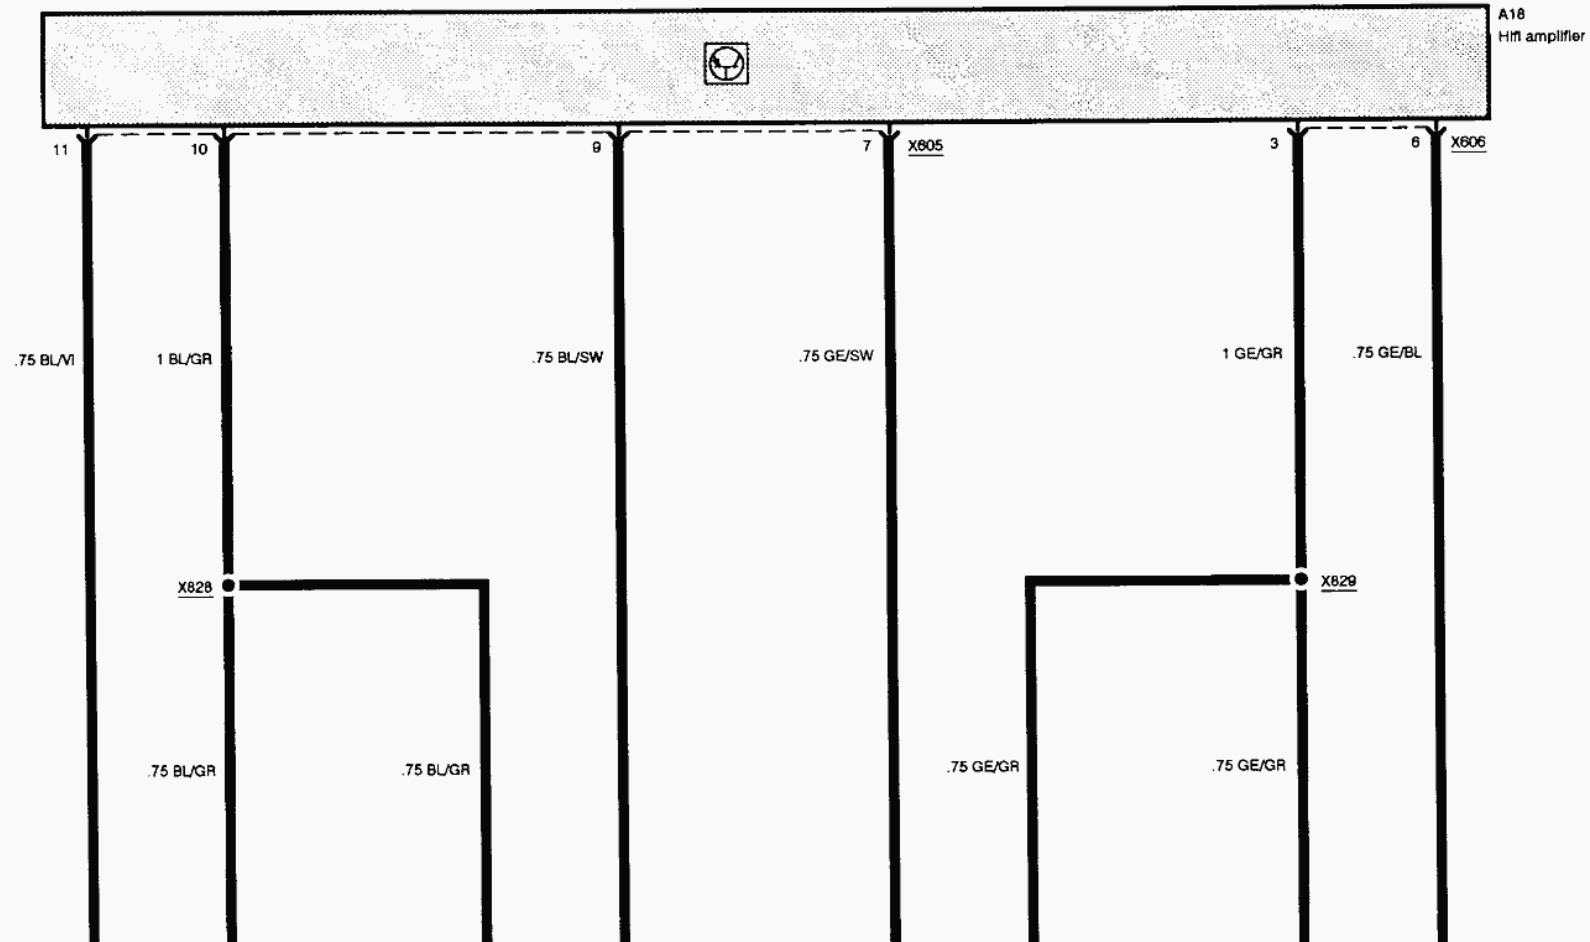

09/93

 6510.1-04





**BMWAG****Electrical troubleshooting manual**

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Central body electronics (ZKE)

Scheme 6100.0

**Pin Assignment**

A=X253	26-pin, green
B=X254	26-pin, white
C=X255	26-pin, yellow
D=X332	5-pin, white
E=X258	20-pin, black
F=X259	20-pin, white

**Pin Assignment X253**

Pin	Type	Description/Function	Connection
1	A	Activation, FH relay in RM	Relay module (RM) Pin E3
2	A	Activation, FH relay in RM	Relay module (RM) Pin E1
3	A	Activation, wiper relay	Relay module (RM) Pin F9
4	A	Activation, TSH relay in RM	Relay module (RM) Pin F17
5	A	Activation, relay arrest	Relay module (RM) Pin F4
6		not used	
7	A	Lock signal	Rear lid lock switch
8	A	OZV signal of ZV	DWA module
9	A	Crash information output	Crash alarm generator
10	A	Electronic power fuse	Fuse relay
11	E	Position signal	Instrument cluster
12	E/A	TxD diagnostic link	Diagnostic connector
13	E	Diagnostic link for ZV relay	Relay module (RM) Pin E9
14	A	Activation, SHD relay in RM	Relay module (RM) Pin E4
15	A	Activation, IA relay in RM	Relay module (RM) Pin E2
16	A	Activation, IB relay in RM	Relay module (RM) Pin E7
17	A	Activation, relay lock	Relay module (RM) Pin F3
18	A	Activation, relay unlock	Relay module (RM) Pin F2
19	A	Activation, SRA relay fog light	SRA module
20		not used	
21		not used	
22	A	Activation, washer pump relay	Washer pump relay
23	E	Crash sensor	Inertia switch
24	A	RxD diagnosis line	Diagnostic connector
25	E	Diagnosis line for wiper relay in RM	Relay module (RM) Pin E10
26	E	Diagnosis line for door lock heating	Relay module (RM) Pin E19

**Pin Assignment X254**

Pin	Type	Description/Function	Connection
1		not used	
2	E	Rear position sensor	Position sensor
3	E	Diagnostic link for FH/SHD relay in RM	Relay module (RM) Pin E8
4	E	FH switch, FH passenger's side rear open	Power window switch (FH)
5	E	FH switch, FH driver's side rear open	Power window switch (FH)
6	E	FH switch, FH passenger's side open	Power window switch (FH)
7	E	Rear end position sensor, driver's side	End position sensor
8	E	FH switch, FH passenger's side closed	Power window switch (FH)
9	E	End position sensor, passenger's door	End position sensor
10	E	FH switch, FH passenger's side rear closed	Power window switch (FH)
11	E	End position sensor, driver's door	End position sensor
12	E	FH switch, FH driver's side rear closed	Power window switch (FH)
13	A	Activation, FH relay in RM	Relay module (RM) Pin E5
14		not used	
15		not used	
16	E	Diagnostic link for FH/SHD relay in RM	Relay module (RM) Pin E18
17	E	SHD switch lift open	Sunroof switch (SHD)
18	E	SHD switch close	Sunroof switch (SHD)
19	E	SHD switch slide open	Sunroof switch (SHD)
20	E	FH switch, FH driver's side open	Power window switch (FH)
21	E	FH switch, FH driver's side closed	Power window switch (FH)
22	E	Rear end position sensor, passenger's side	End position sensor
23	E	FH switch, FH passenger's side rear closed	Power window switch (FH)
24	E	FH switch, driver's side rear closed	Power window switch (FH)

25	A	Activation, FH relay in RM	Relay module (RM) Pin E7
26	A	Activation, FH relay in RM	Relay module (RM) Pin E6

**Pin Assignment X255**

Pin	Type	Description/Function	Connection
1	E	Passenger's door contact	Door contact switch
2	E	Driver's door handle contact	Power window switch (FH)
3	E	Rear door contact	Door contact switch
4	E	Switch stage 1 , 2, single wipe	Wiper switch
5	E	Switch position, intermittent wipe	Wiper switch
6	E	Switch position, wash	Wiper switch
7	E	Detection, lock	Infrared module
8	E	Switch position, intensive wash	Wiper switch
9	E	Terminal 15 for GM	Fuse
10	E	Terminal R for GM	Fuse
11	E	Detection, lock	Central locking drive
12		not used	
13		not used	
14	E M	Sedan: Front position sensor Touring: Ground	Position sensor Ground connection
15	E	Driver's door contact	Door contact switch
16	E	Detection, arrest/unlock	Infrared module
17	E	Detection, unlock	Central locking drive
18	E	Parking light detection	Light switch
19	E	Terminal 50 load cutout	Starter
20	E	Detection, lock	Central locking drive
21	E	Diagnosis line for SRA module	Headlight washer system module
22	E	Reset contact	Wiper motor
23	E	Detection, unlock	Central locking drive
24	E	Detection, arrest/unlock	Lock contact, driver's/passenger's door
25		not used	
26	E	Detection, fog light	Fog light switch

**Pin Assignment X332**

Pin	Type	Description/Function	Connection
1	E	B+ for GM electronics	Relay module (RM) PinFS
2	E	Ground for GM electronics	Ground connection
3		not used	
4	E	Electronic fuse	Fuse relay
5	E	Electronic fuse	Relay module (RM) PinF11

**Pin Assignment X258**

Pin	Type	Description/Function	Connection
1	E	Activation, FH relay in RM	General module (GM) Pin A2
2	E	Activation, FH relay in RM	General module (GM) Pin A15
3	E	Activation, FH relay in RM	General module (GM) Pin A1
4	E	Activation, SHD relay in RM	General module (GM) Pin A14
5	E	Activation, FH relay in RM	General module (GM) Pin B13
6	E	Activation, FH relay in RM	General module (GM) Pin B26
7	E	Activation, FH relay in RM	General module (GM) Pin 25
8	A	Diagnosis line for FH/SHD relay in RM	General module (GM) Pin B3
9	A	Diagnosis line for ZV relay	General module (GM) Pin A13
10	A	Diagnosis line for wiper and ZV relay	General module (GM) Pin A25
11	A	Activation, FH motor drives passenger's side	Power window motor (FH)
12	A	Activation, FH motor drives passenger's side	Power window motor (FH)
13	A	Activation, FH motor drives passenger's side	Power window motor (FH)
14	A	Activation, SHD motor	Sunroof motor (SHD)
15	A	Activation, FH motor driver's side	Power window motor (FH)
16	A	Activation, FH motor drives driver's side and SHD	Power window/sunroof motor
17	A	Activation, FH motor drives driver's side	Power window motor (FH)
18	A	Diagnosis line for FH/SHD relay in RM	General module (GM) Pin B16
19	A	Diagnosis line forTSH	General module (GM) Pin B26
20	M	Ground for power windows and SHD	Ground connection

**Pin Assignment X259**

Pin	Type	Description/Function	Connection
1	A	Activation, actuator drives	Central locking actuator drives
2	E	Activation, relay unlock	General module (GM) Pin A18
3	E	Activation, relay lock	General module (GM) Pin A17
4	E	Activation, relay arrest	General module (GM) Pin A5
5	A	Terminal 30 for GM	General module (GM) Pin D1
6	A	Activation, IB lights	Interior lights (IB)
7	E	Activation, IB relay	General module (GM) Pin A16


8	E	Activation, wiper relay (stage 2)	Wiper switch
9	E	Activation, wiper relay (stage 1)	General module (GM) Pin A3
10	M	Ground for wiper and interior light	Ground connection
11	E	B+ for RM function circuits	General module (GM) Pin D5
12	M	Ground for central locking system	Ground connection
13	A	Activation, actuator drives	Central locking actuator drives
14	A	Activation, actuator drives	Central locking actuator drives
15	E	Terminal 30 for RM control circuits	Fuse
16	A	Activation, TSH heating	Door lock heating (BH)
17	E	Activation, TSH relay	General module (GM) Pin A4
18	A	B+ for wiper motor stage 1	Wiper motor
19	A	B+ for wiper motor stage 2	Wiper motor
20	E	Activation, wiper relay in RM	Wiper relay

E = Input, A = Output, M = Ground



## Central body electronics (ZKE)

### General module

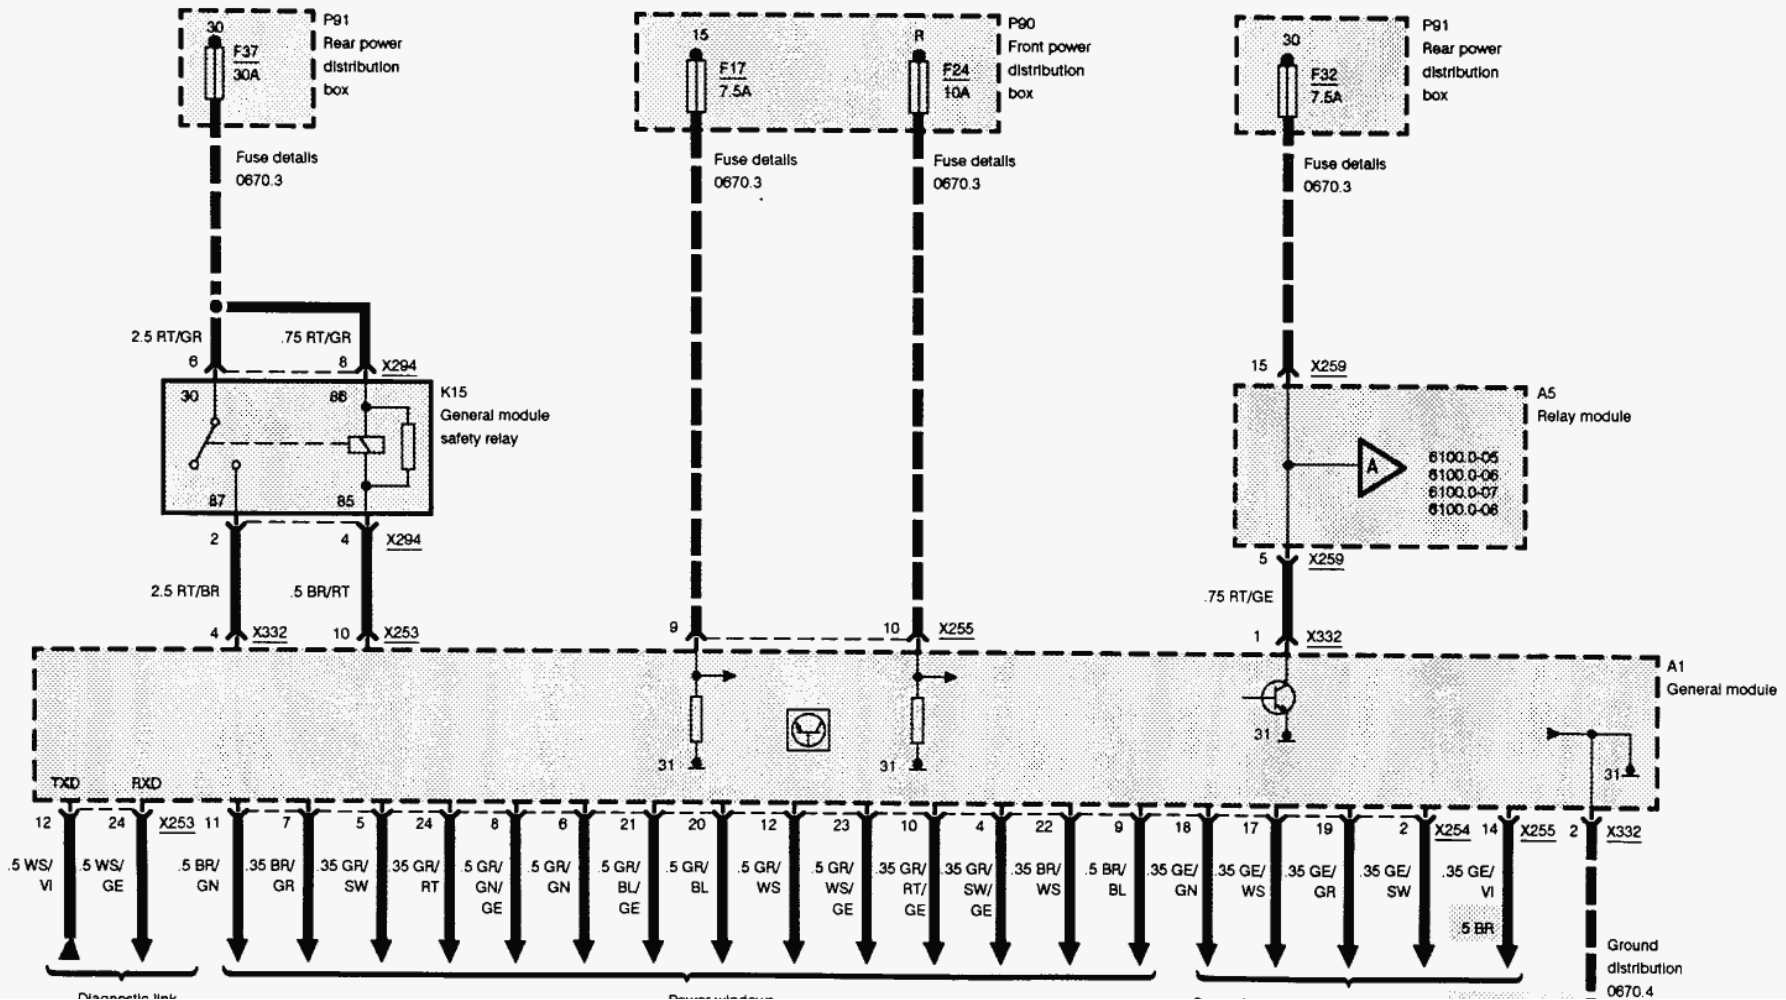

09/93

6100.0-00

Diagnostic link  
0670 5

Power windows  
(ZKE/FH)  
5133 0

Sunroof  
(ZKE/SHD)  
5410 0


Double-panel  
sunroof (ZKE)  
5410 2

Touring




1994

# BMW 5 Central body electronics (ZKE) General module

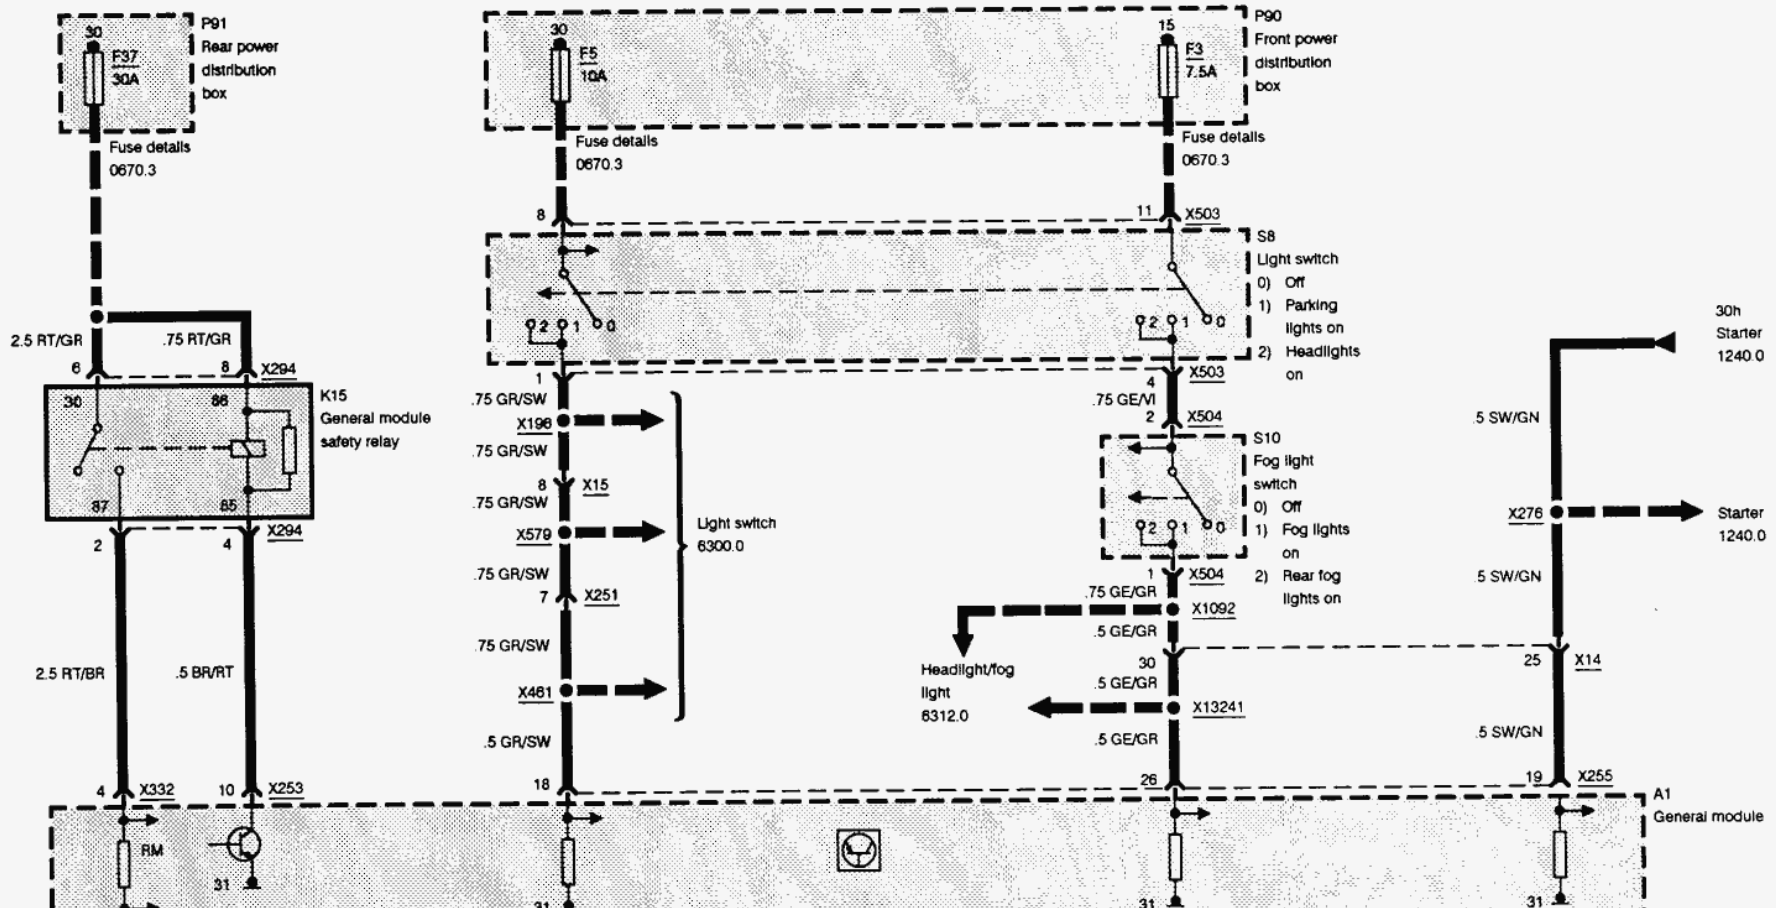

09/93

6100.0-01

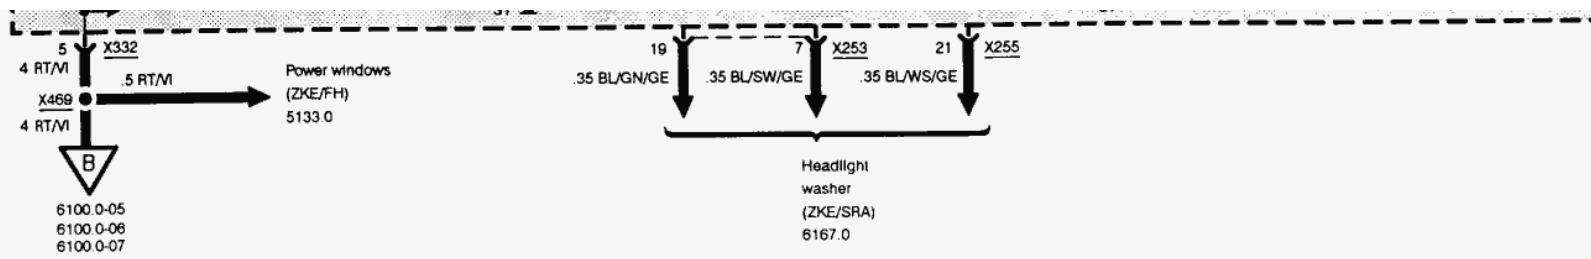


1994





# Central body electronics (ZKE) General module

S N

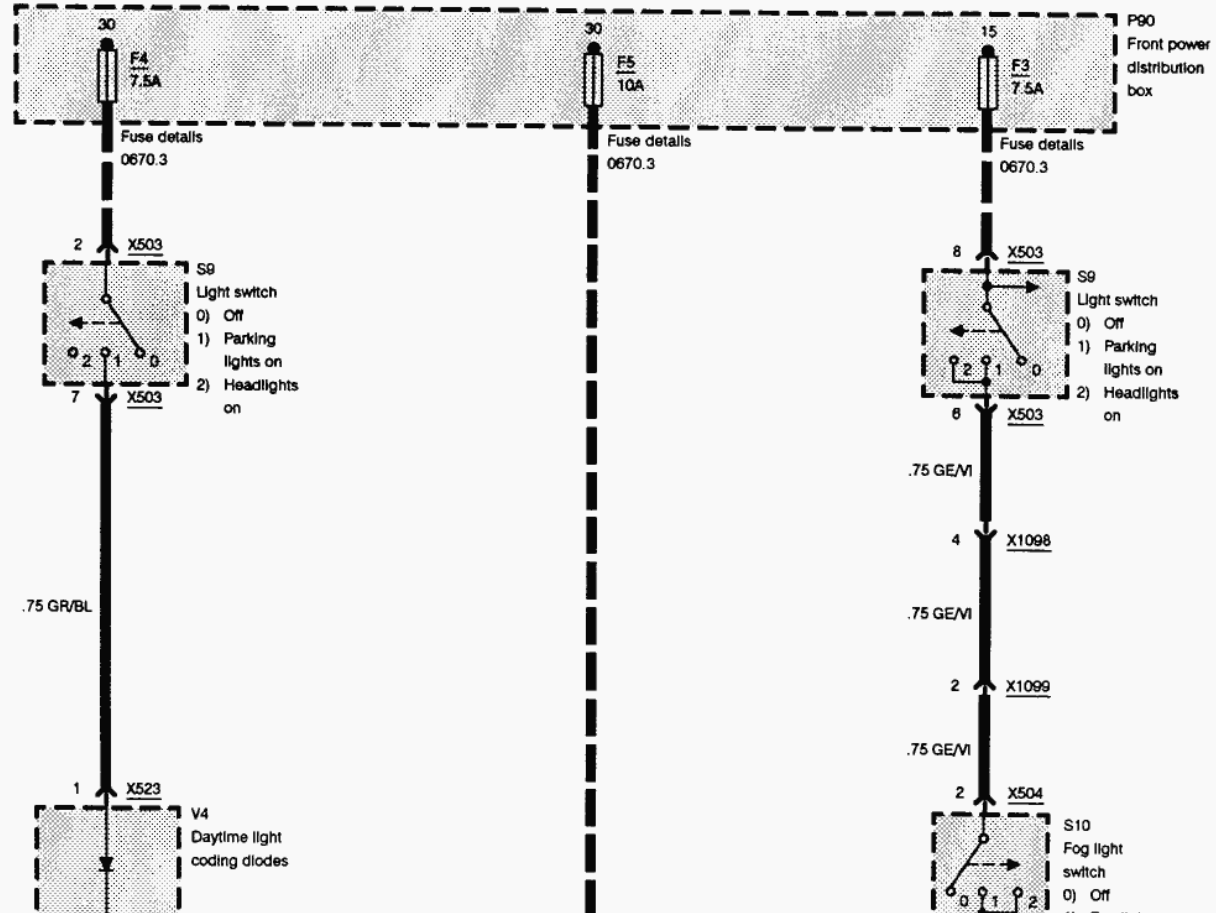


09/93

6100.0-02

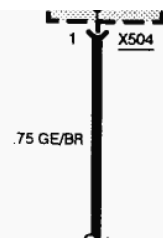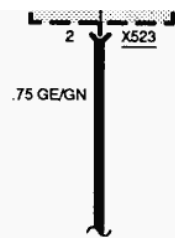


- 1) Fog lights on
- 2) Rear fog lights on

1994

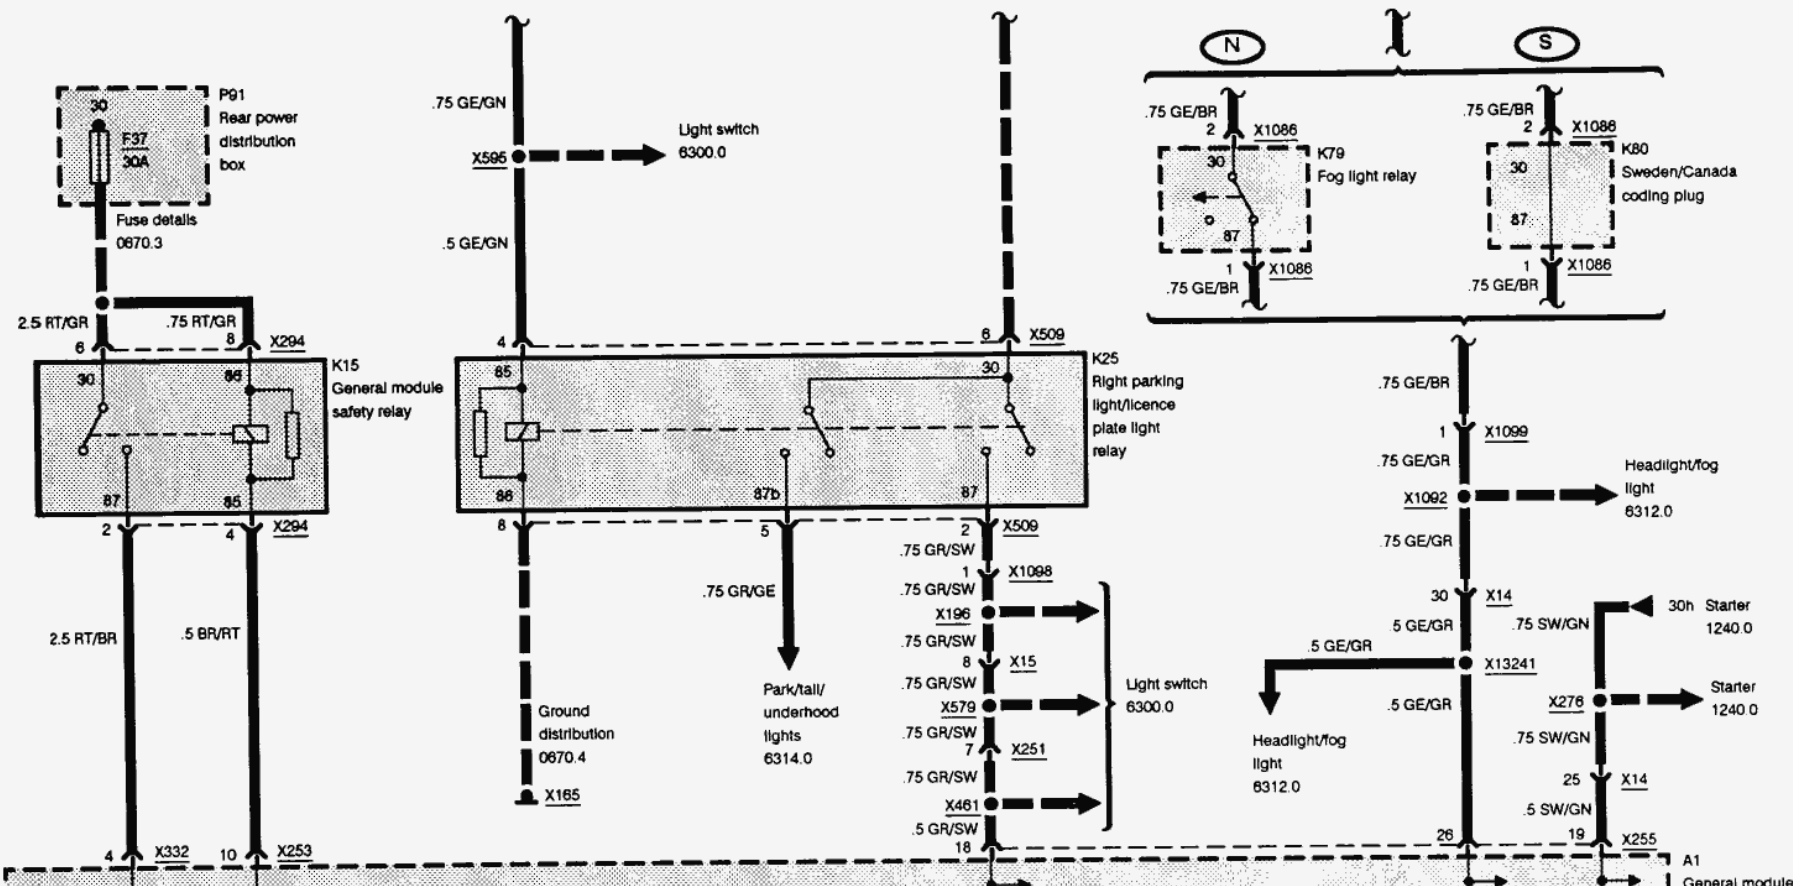


09/93

6100.0-03

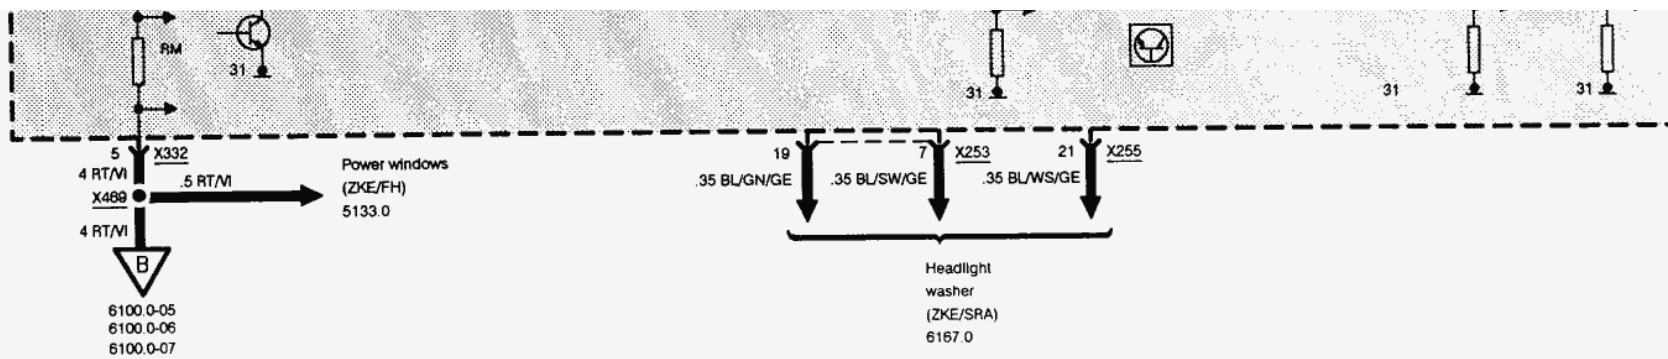

1994


**BMW 5** Central body electronics (ZKE)  
General module

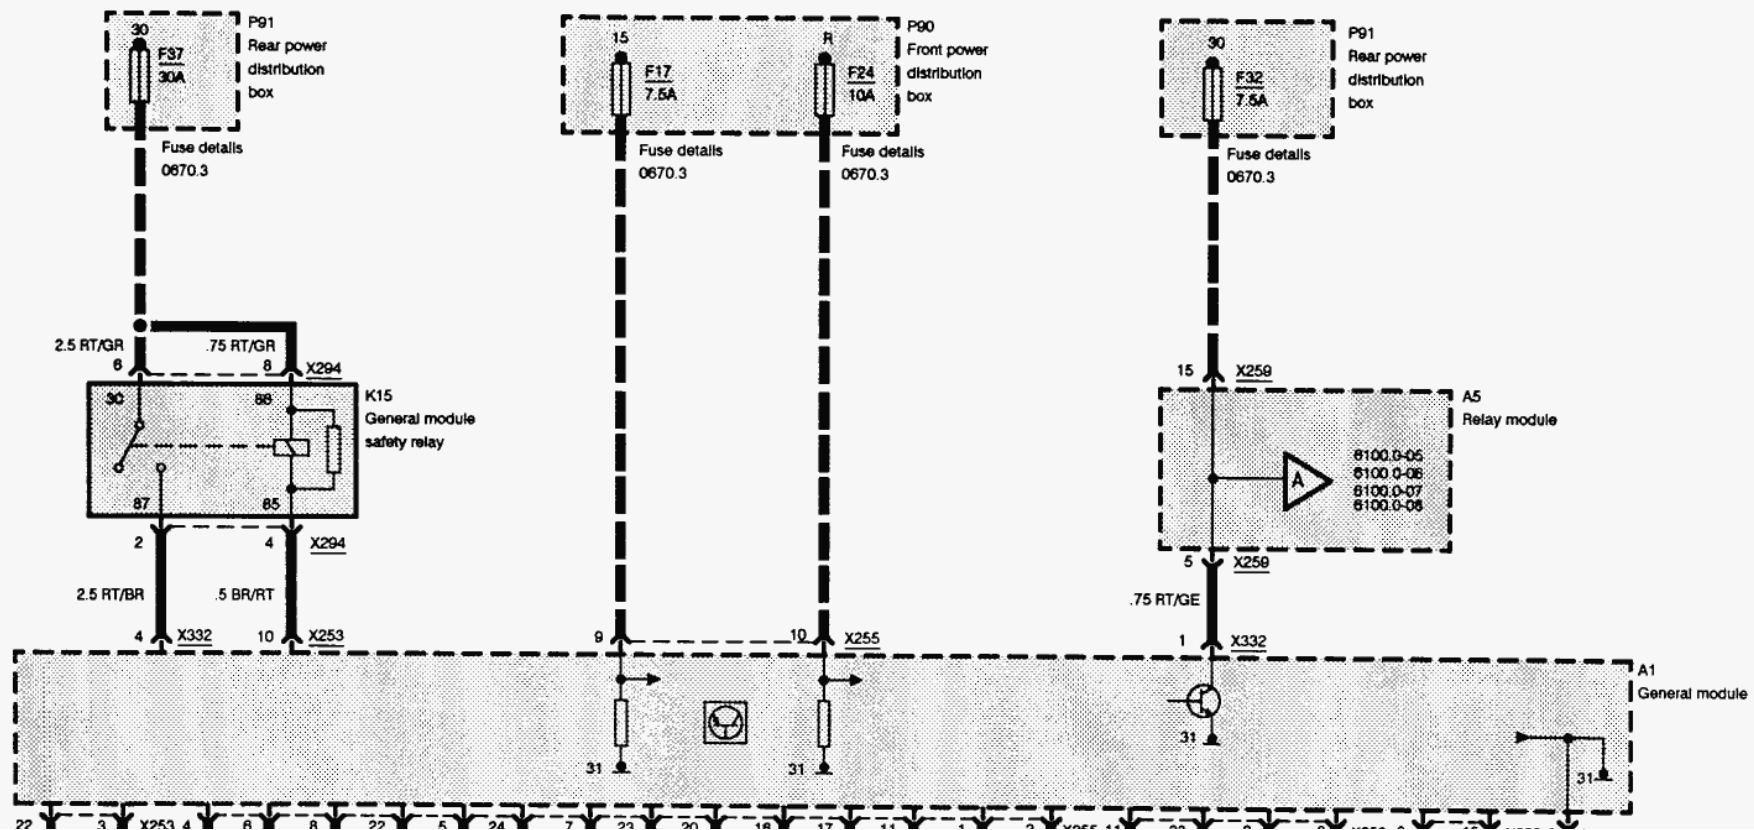

09/93


6100.0-04



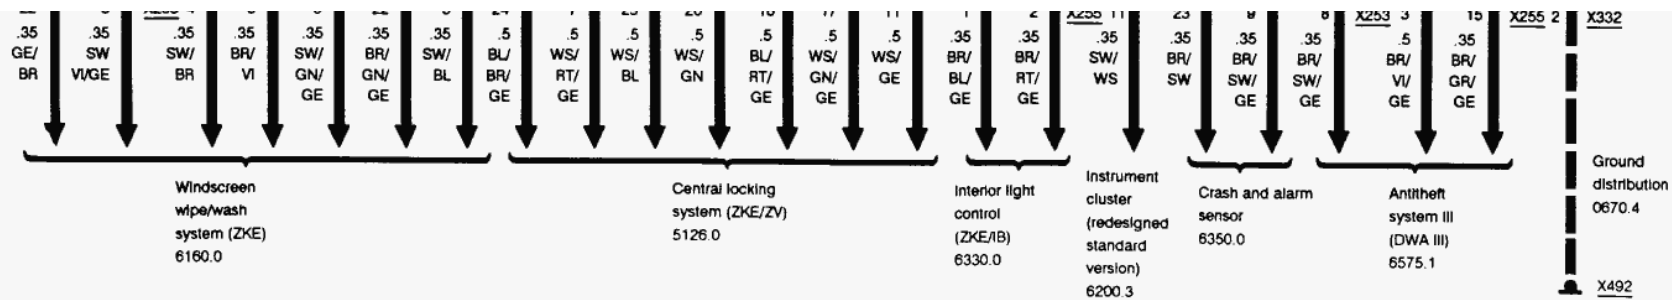


1994

**BMW 5** **Central body electronics (ZKE)**  
**Relay module**

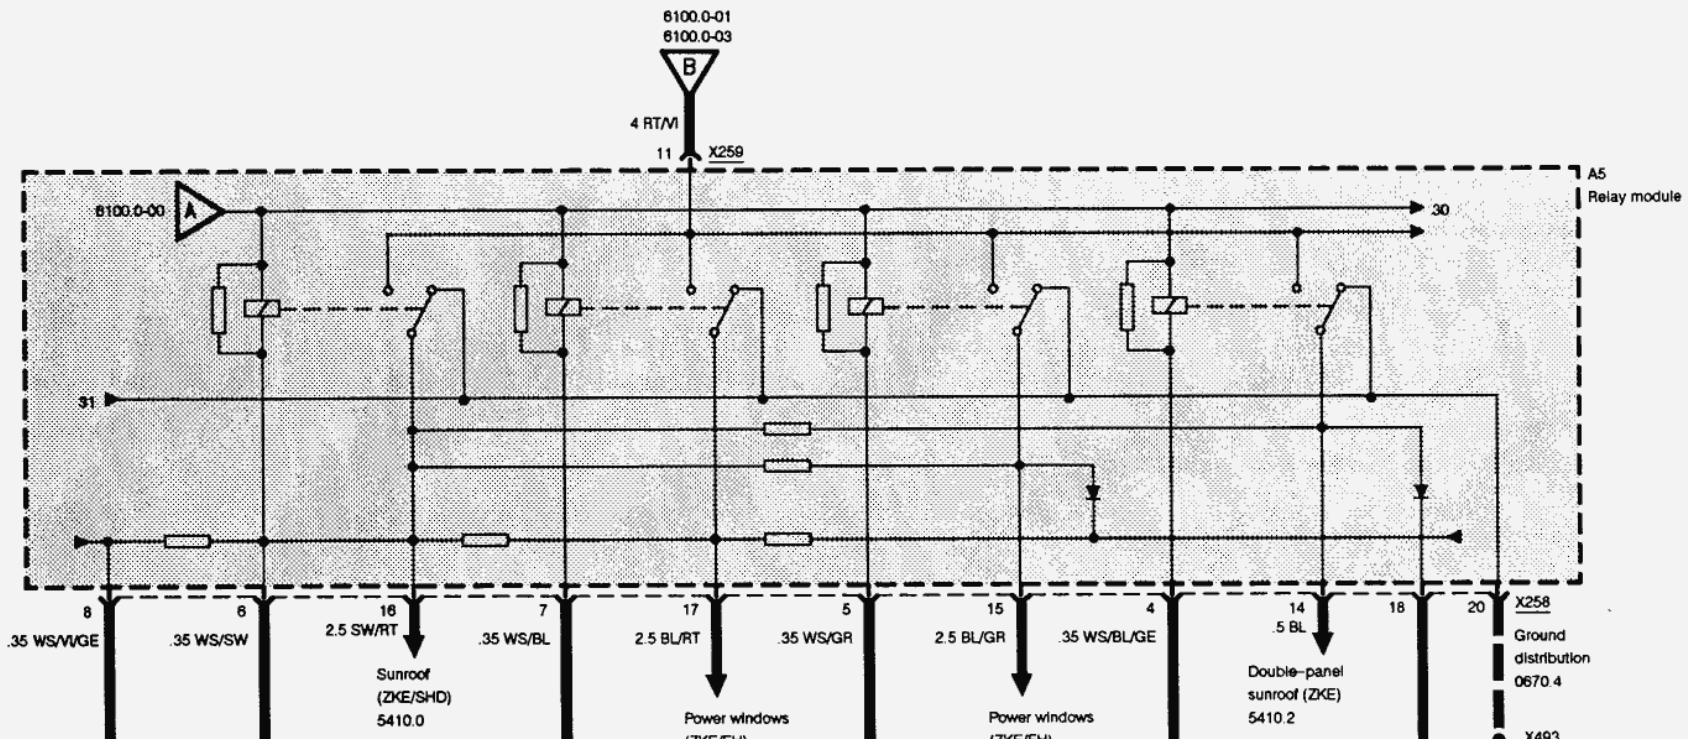

09/93

6100.0-05

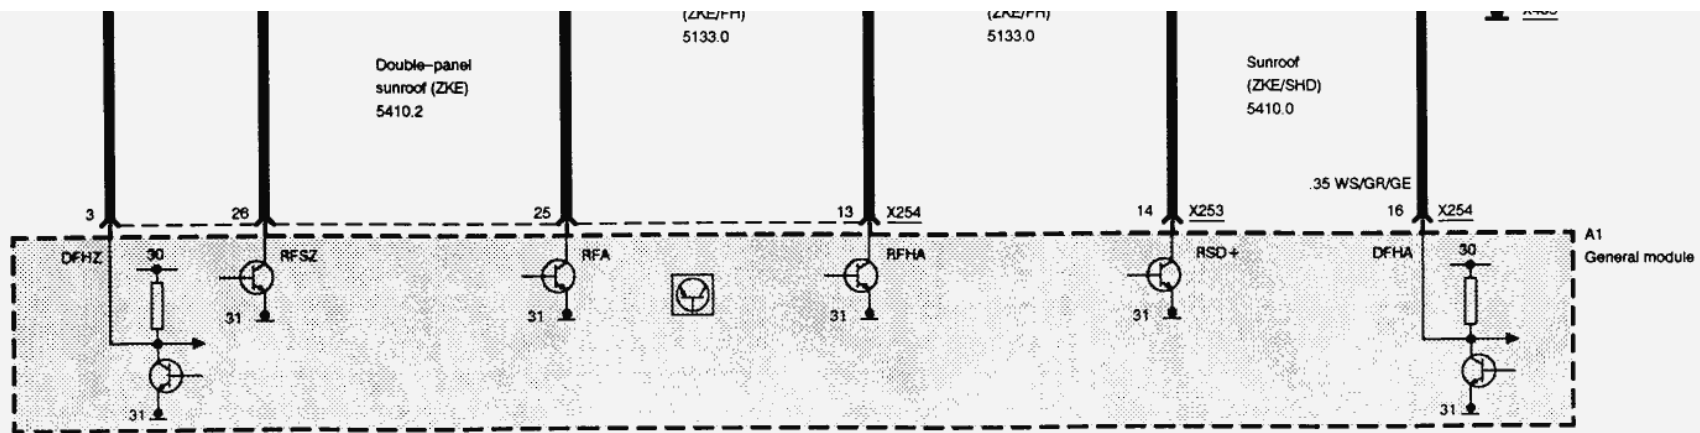


1994




## Central body electronics (ZKE)

### Relay module

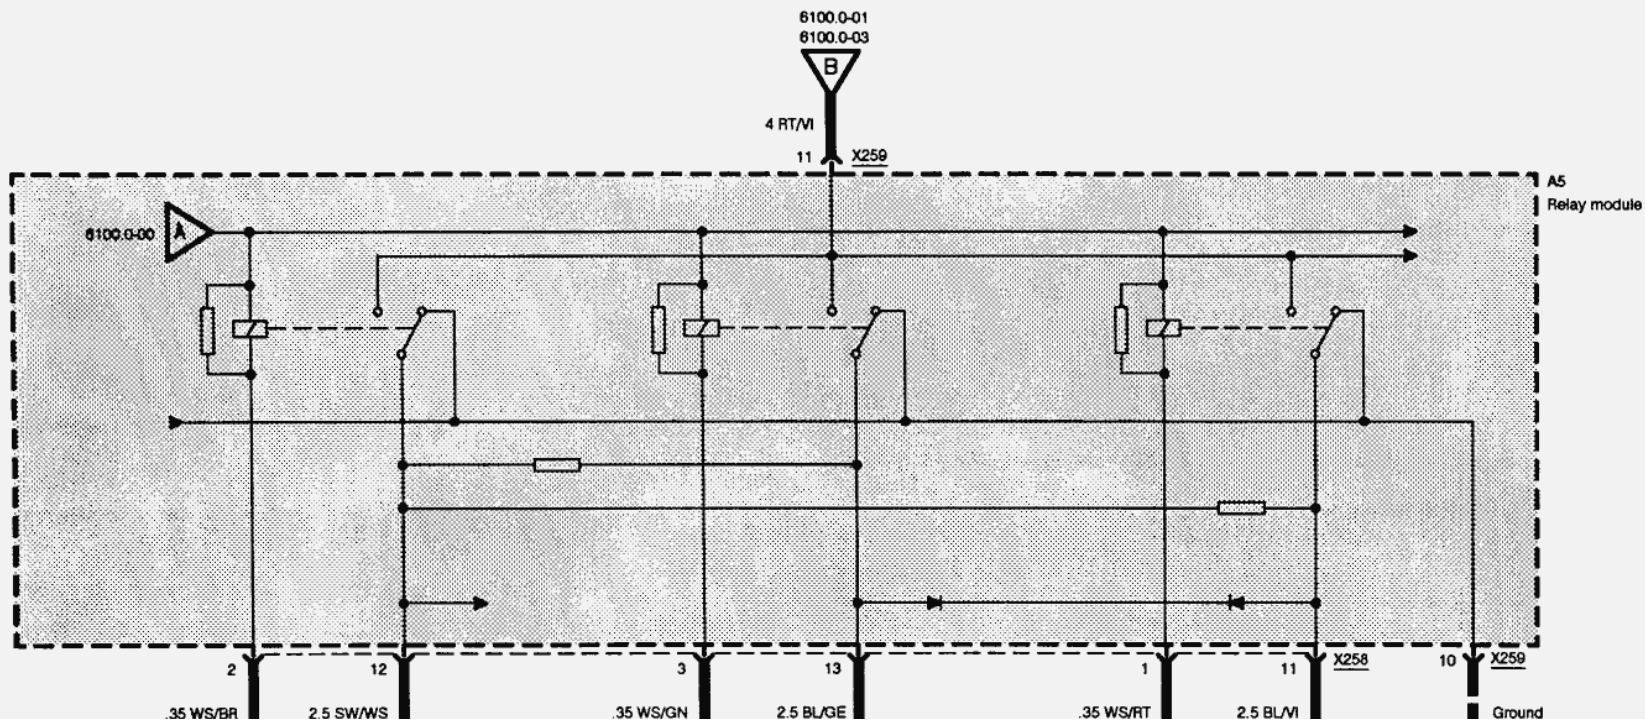


09/93

6100.0-06

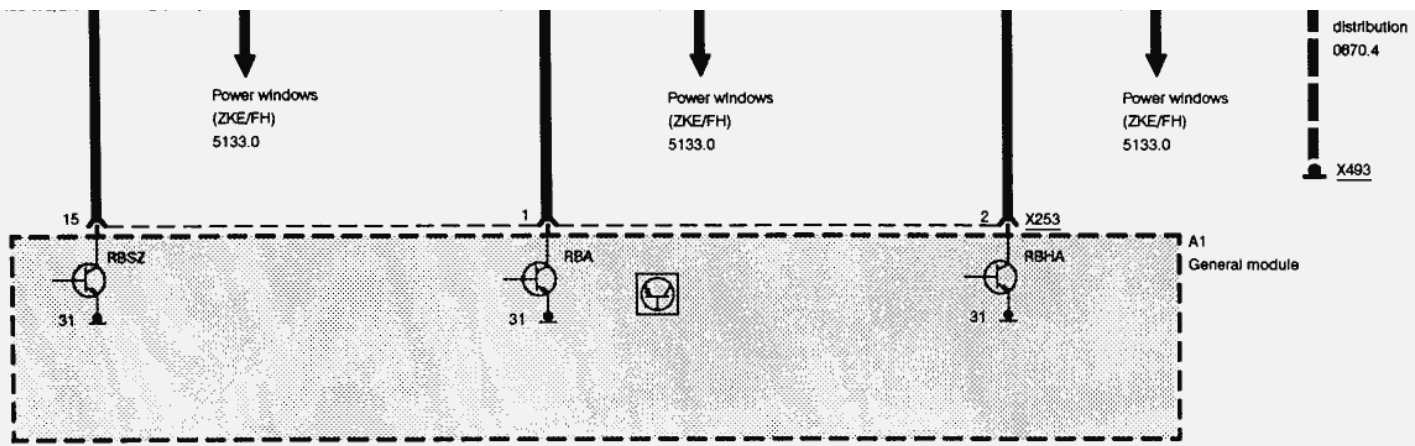


1994

**BMW 5** Central body electronics (ZKE)  
Relay module

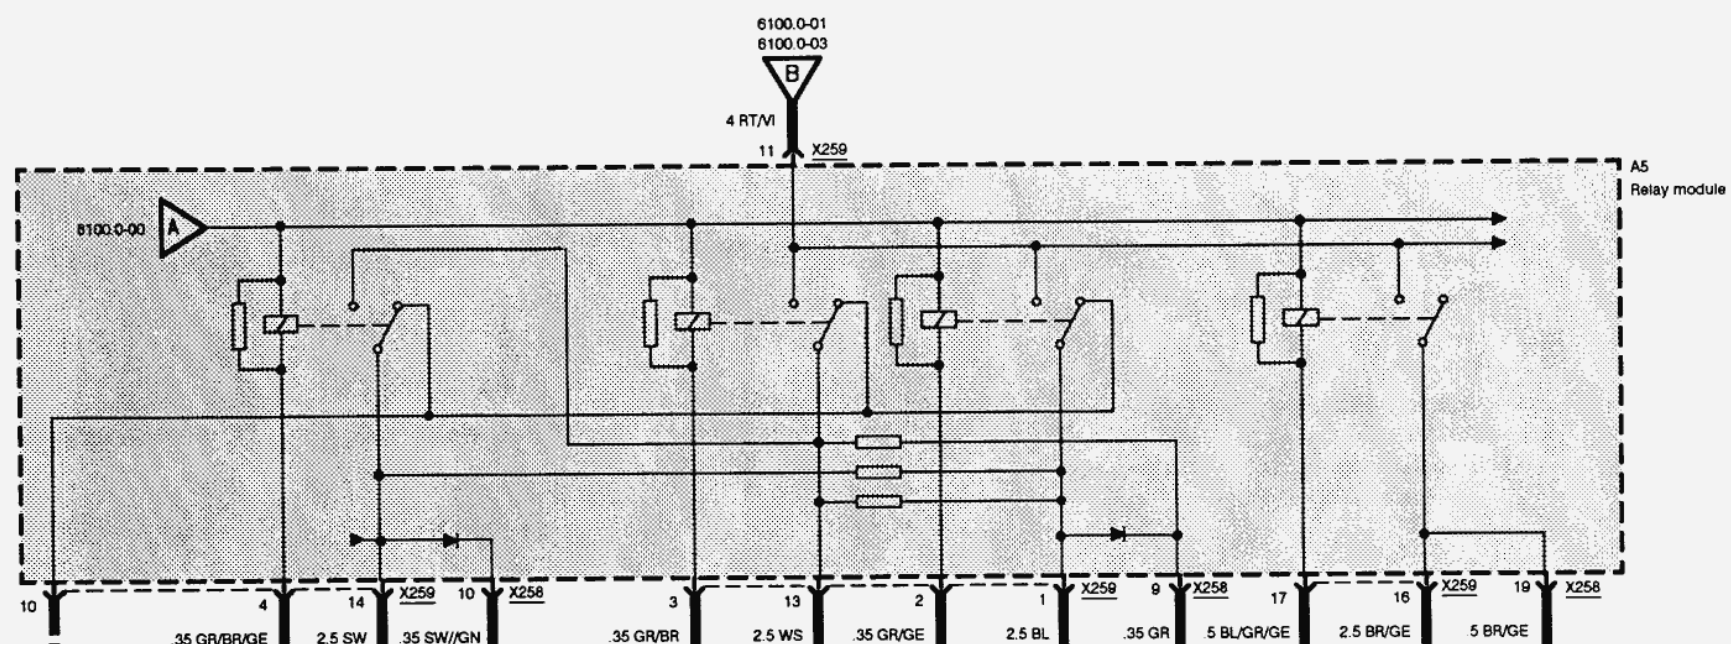

09/93

6100.0-07

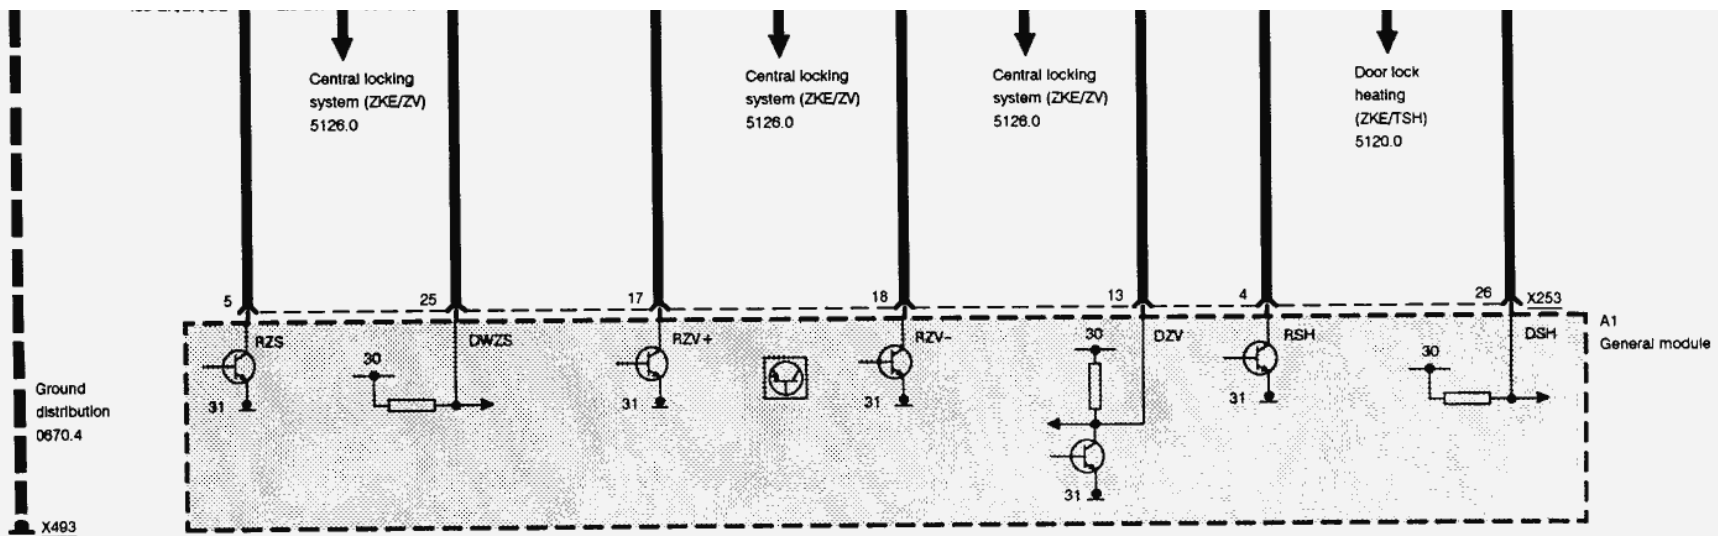


1994




## Central body electronics (ZKE)

### Relay module

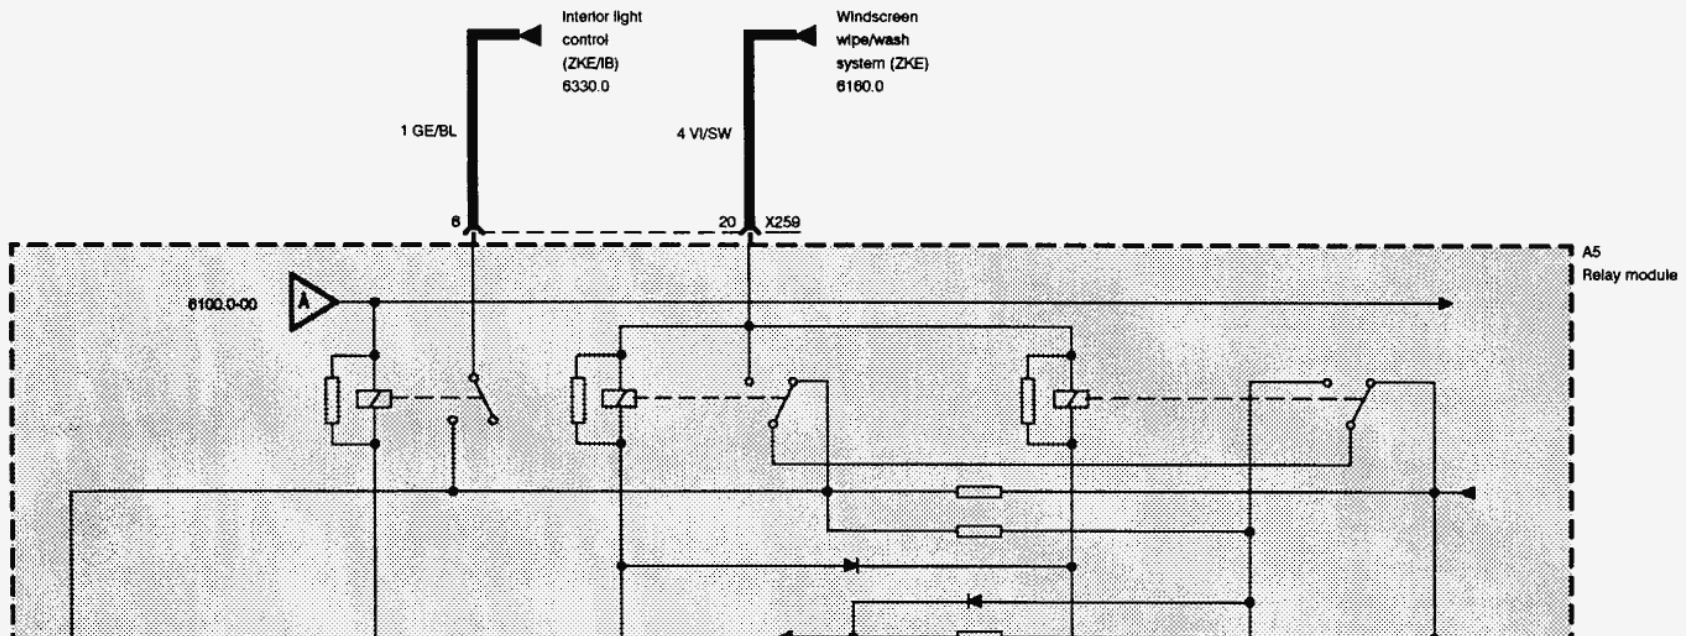



09/93

6100.0-08

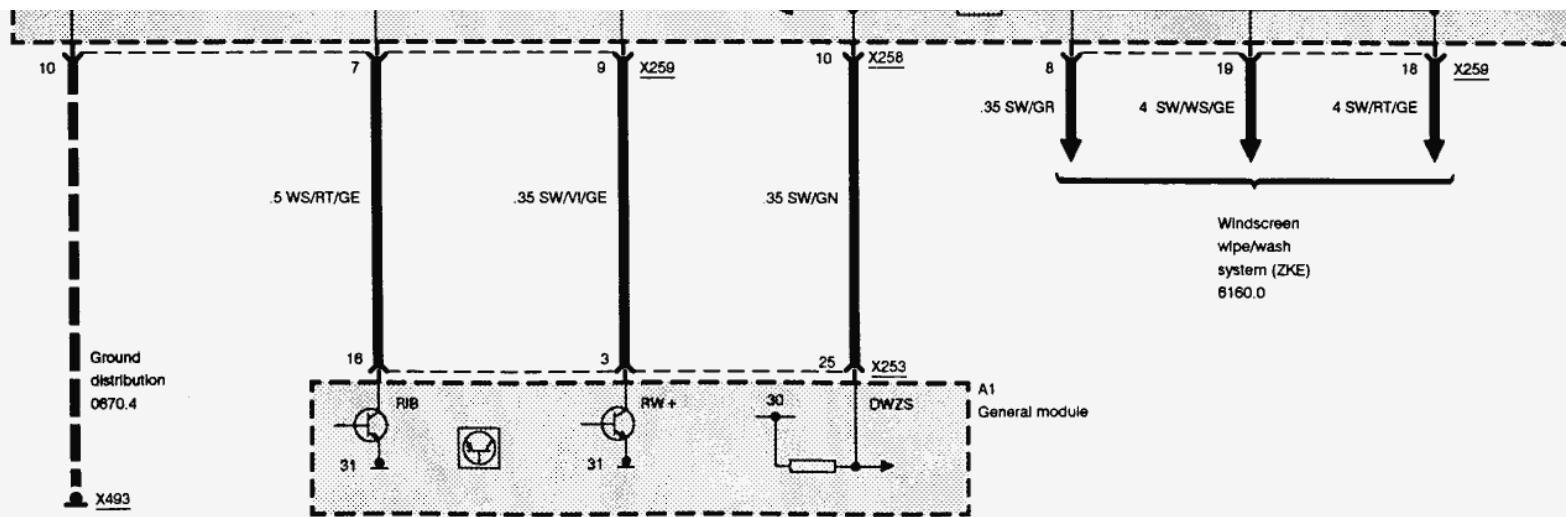

# BMW 5 Central locking system (ZKE/ZV) Inputs

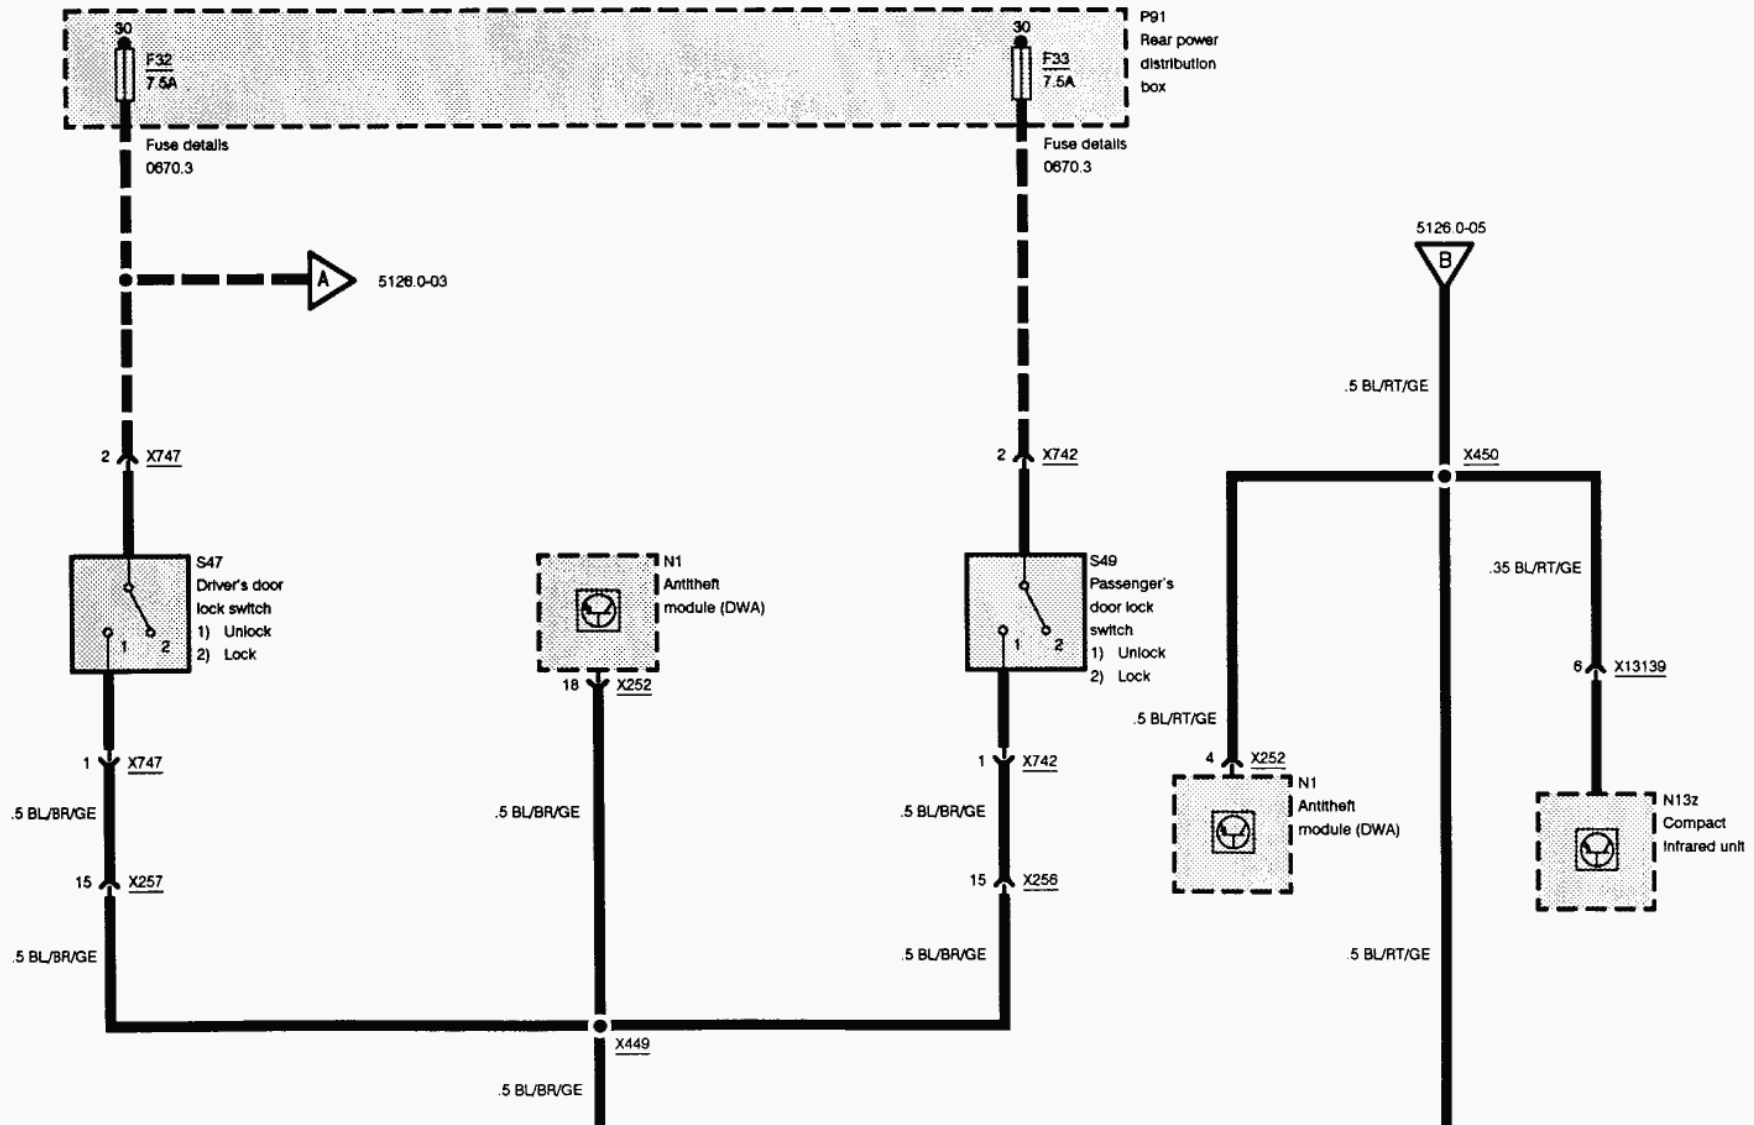

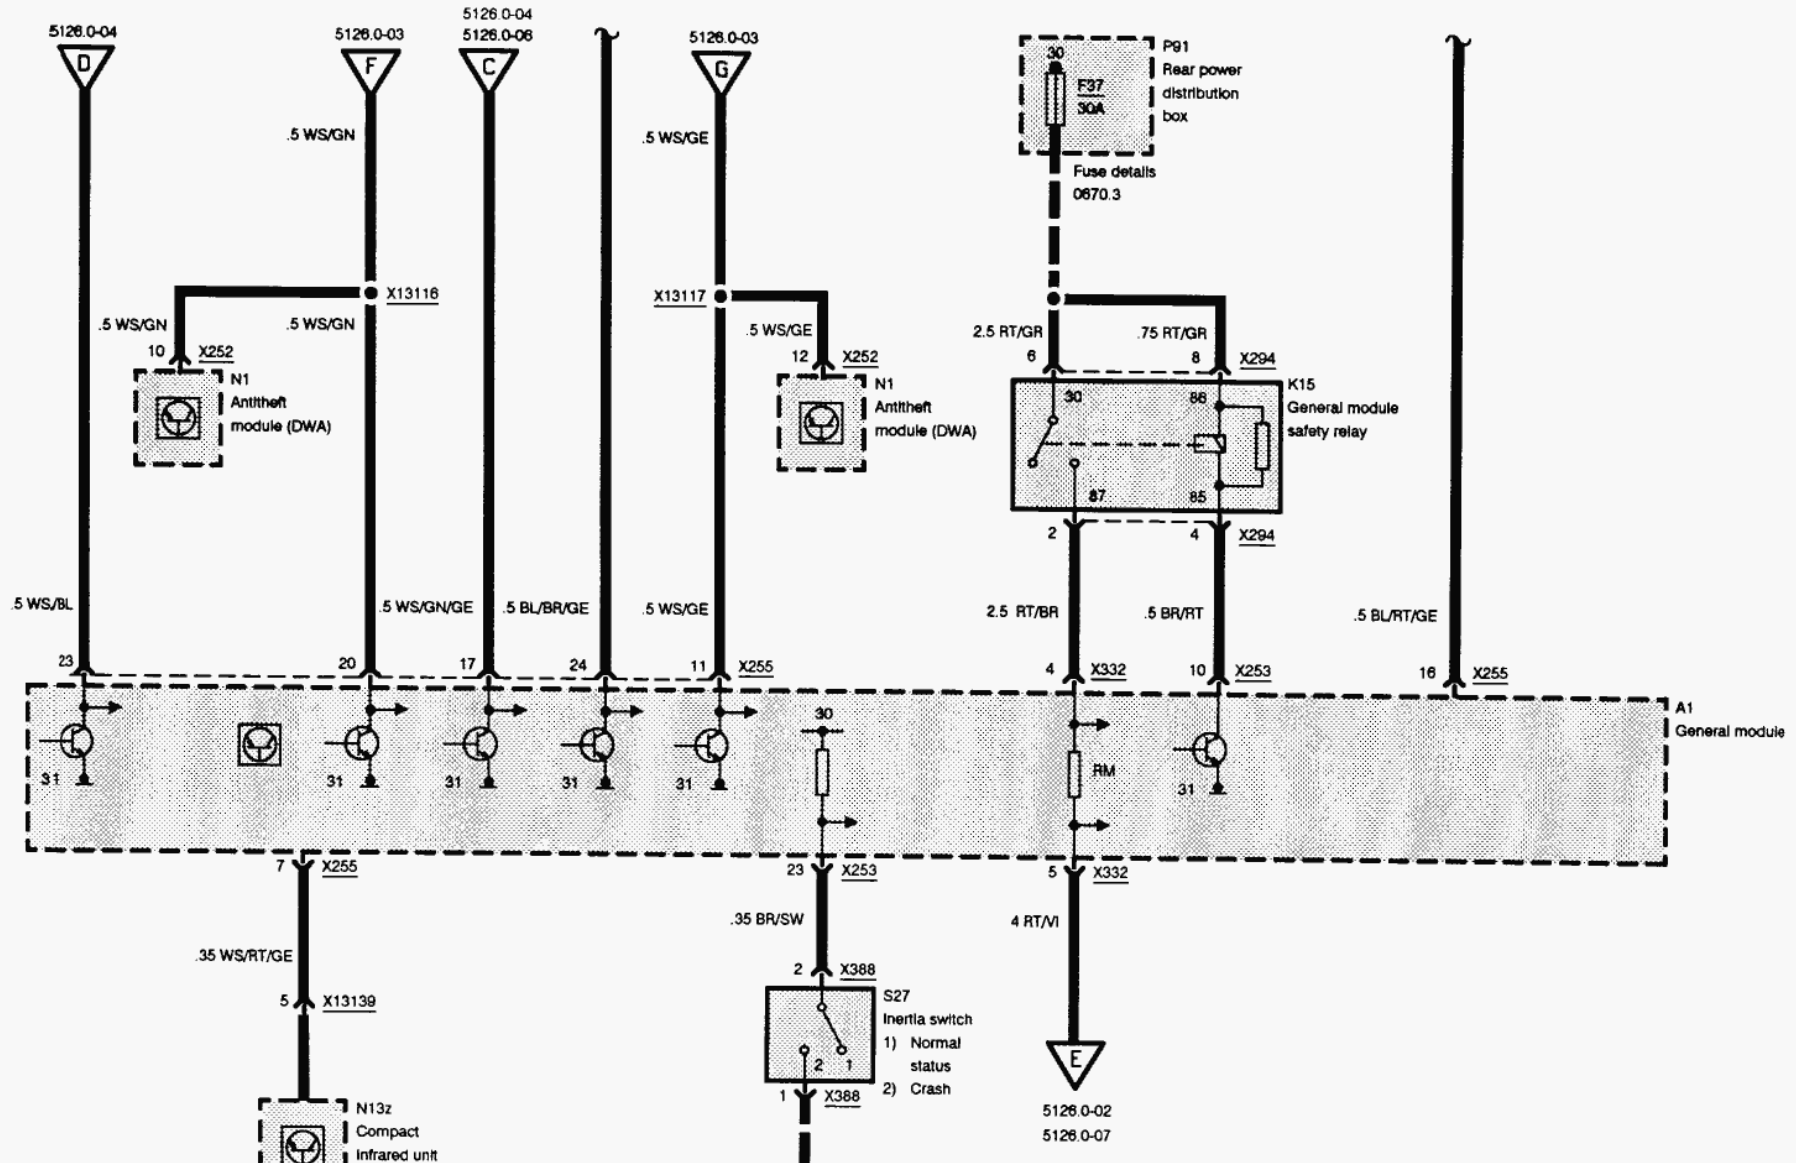

09/93

5126.0-01




Ground distribution  
0670.4  
X493

1994


# BMW 5 Central locking system (ZKE/ZV) Outputs

 09/93

5126.0-02

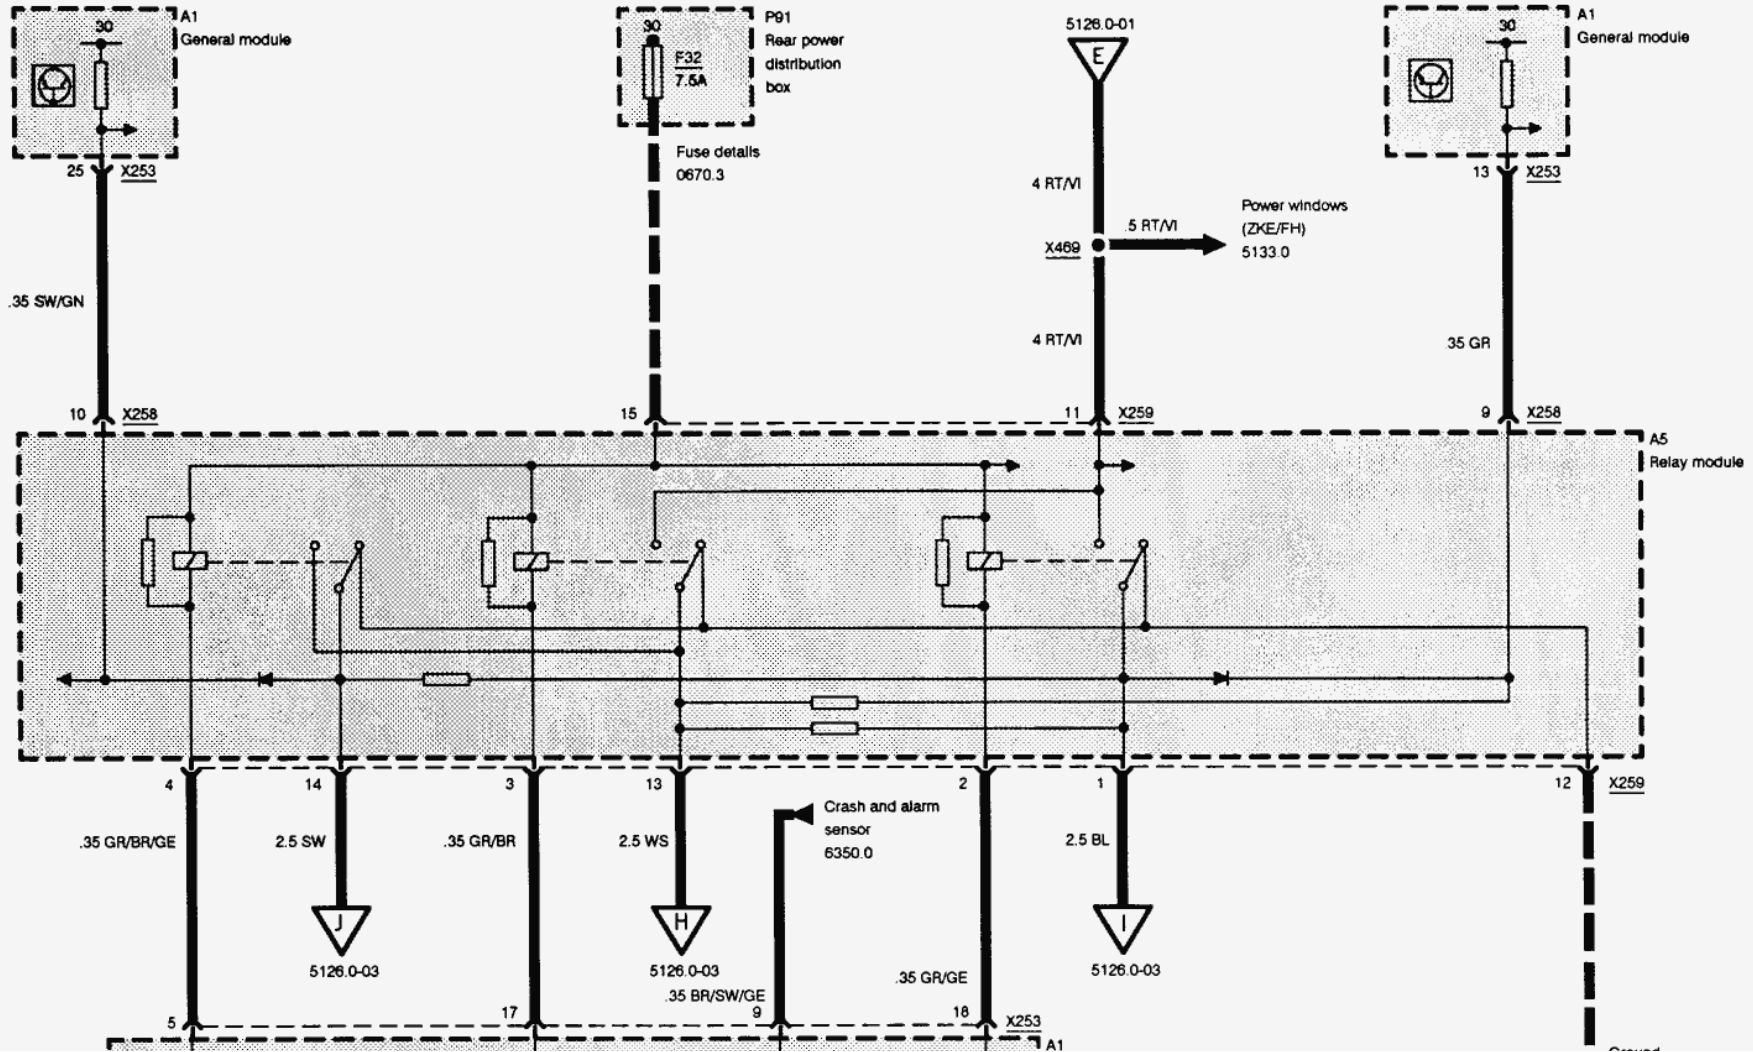






General module

Ground distribution  
0670.4  
X493


1994

**BMW 5** Central locking system (ZKE/ZV)  
Outputs

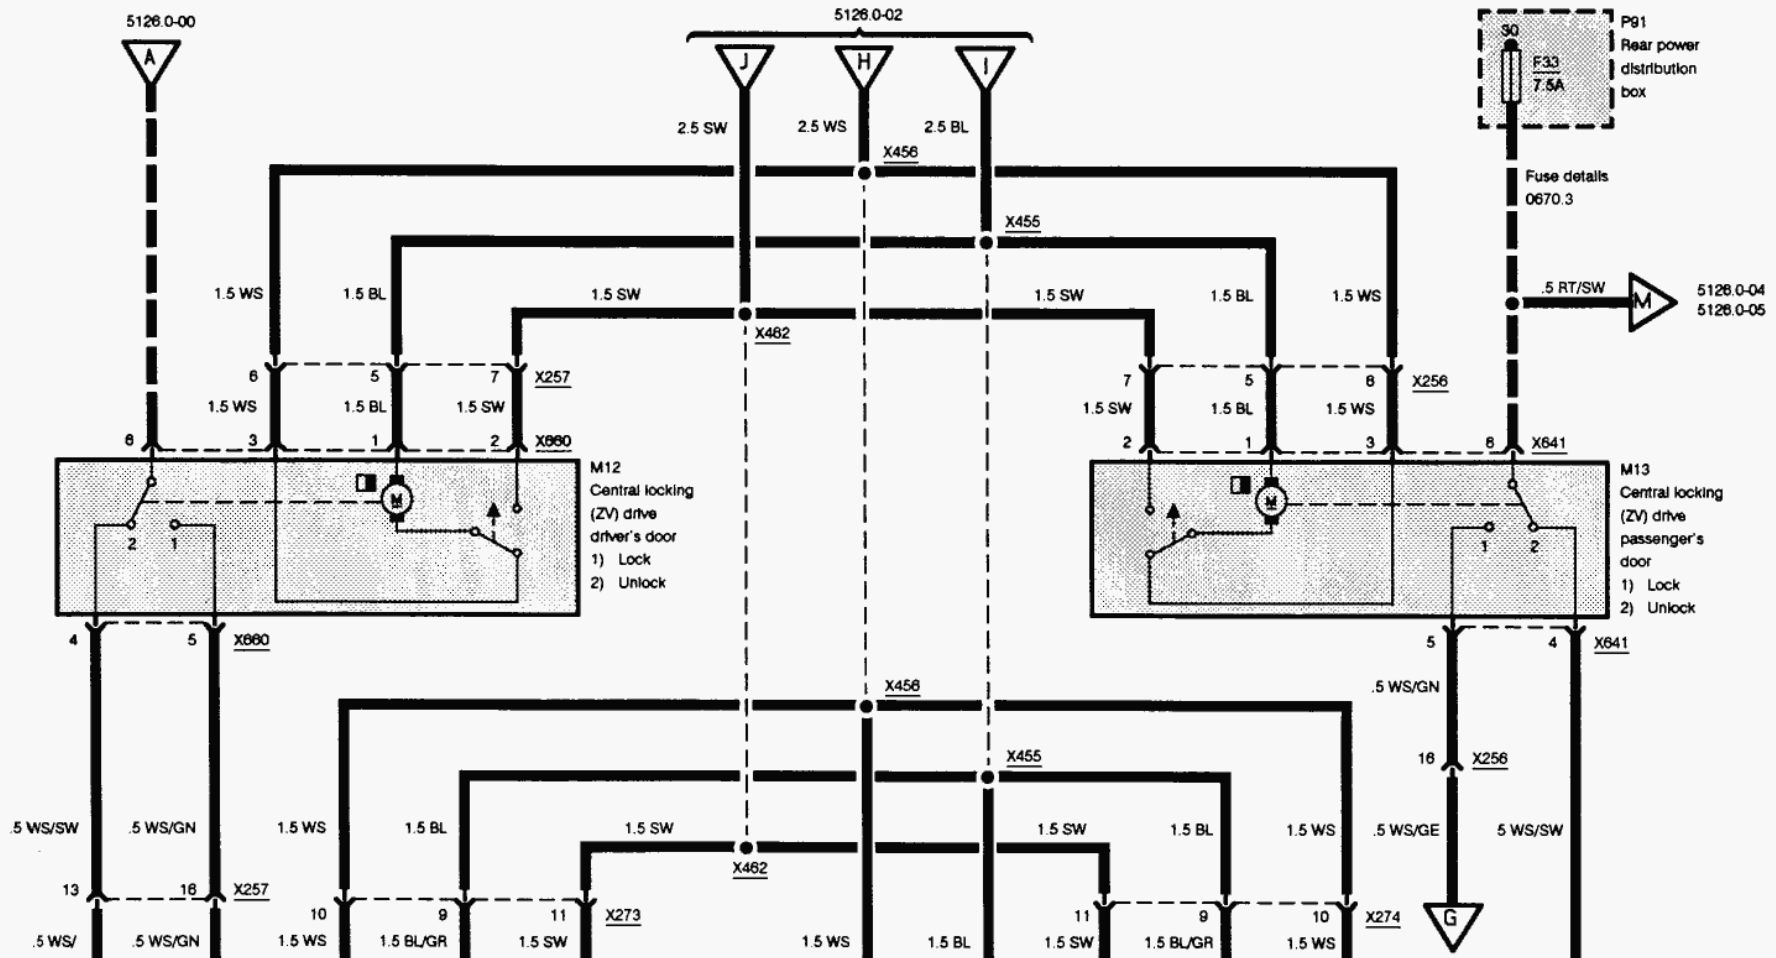

09/93

5126.0-03

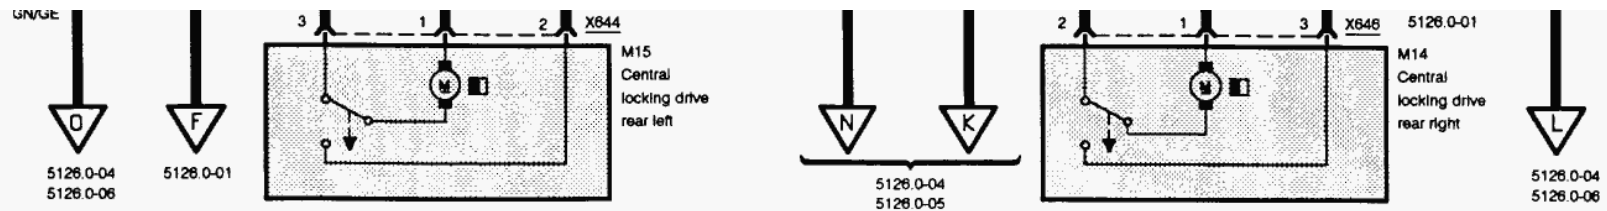


1994




## Central locking system (ZKE/ZV)

### Outputs

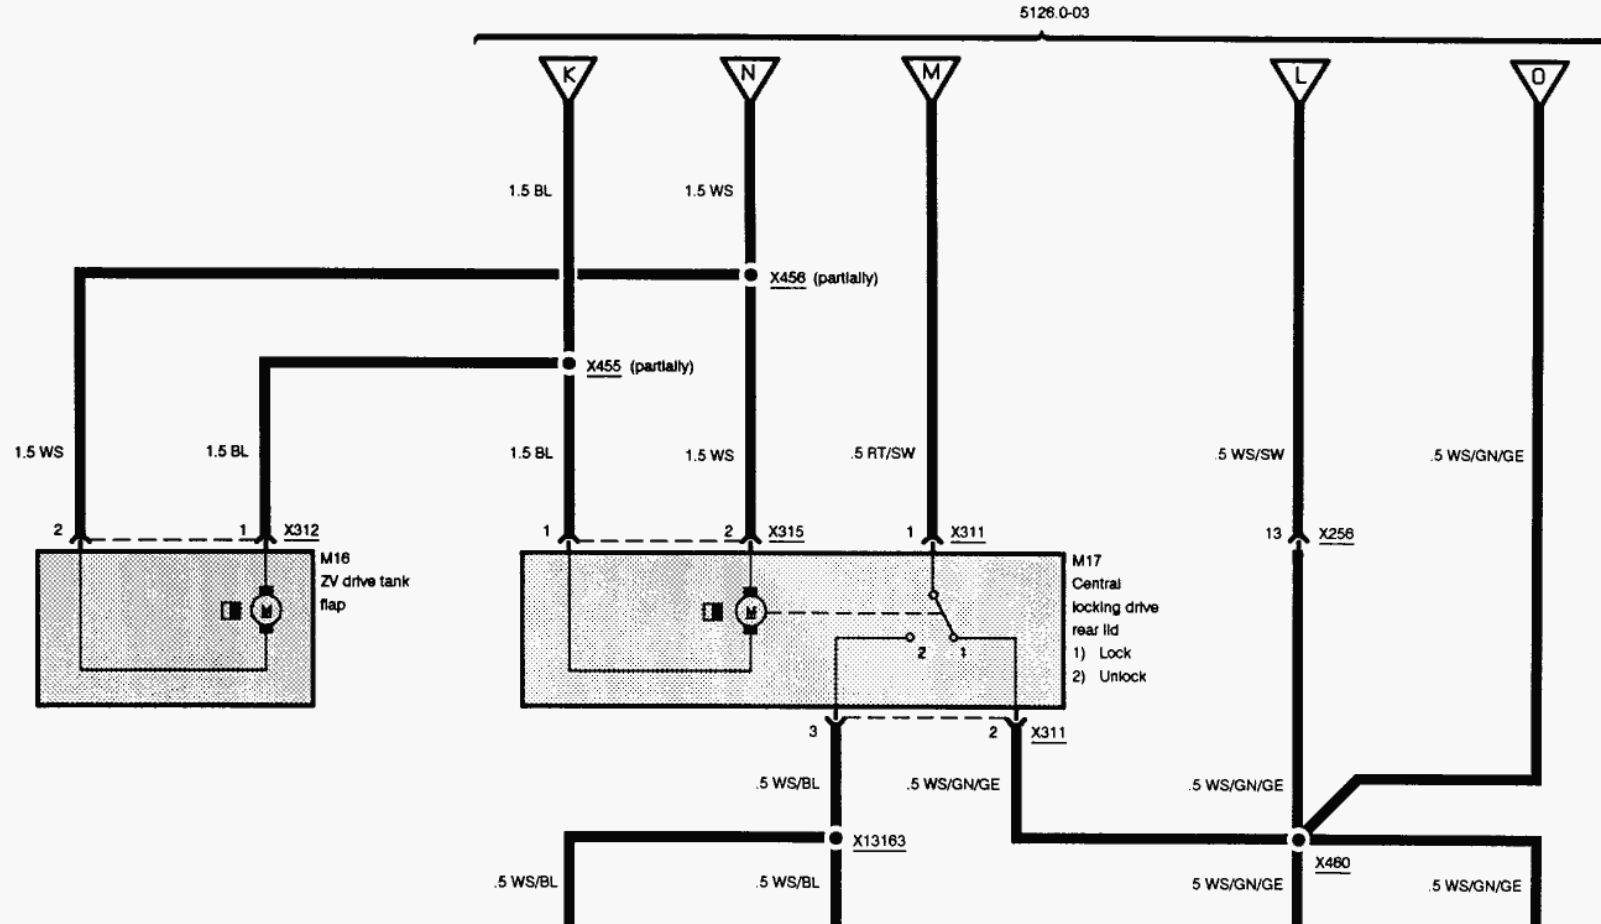

09/93


5126.0-04

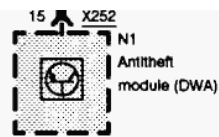

5126.0-01



5126.0-01

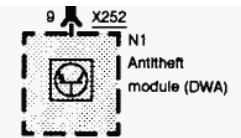



1994


**BMW 5** Central locking system (ZKE/ZV) Outputs

Touring

09/93

5126.0-05

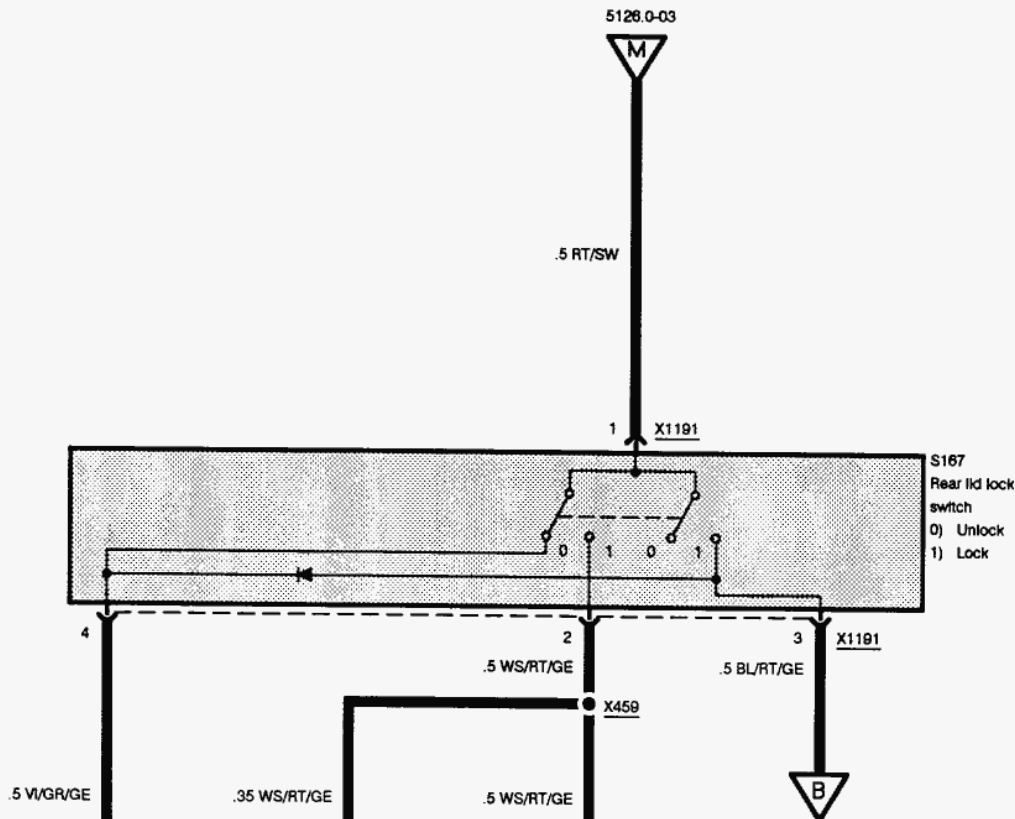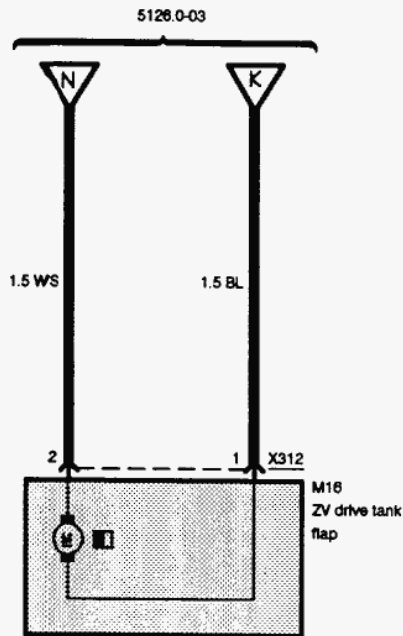

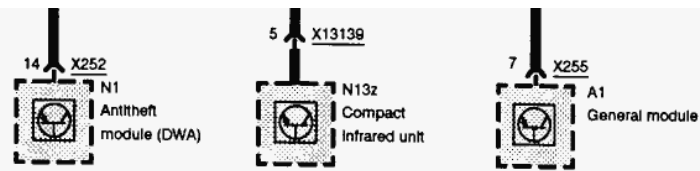

5126.0-00


1994



# Central locking system (ZKE/ZV)


Touring

## Outputs

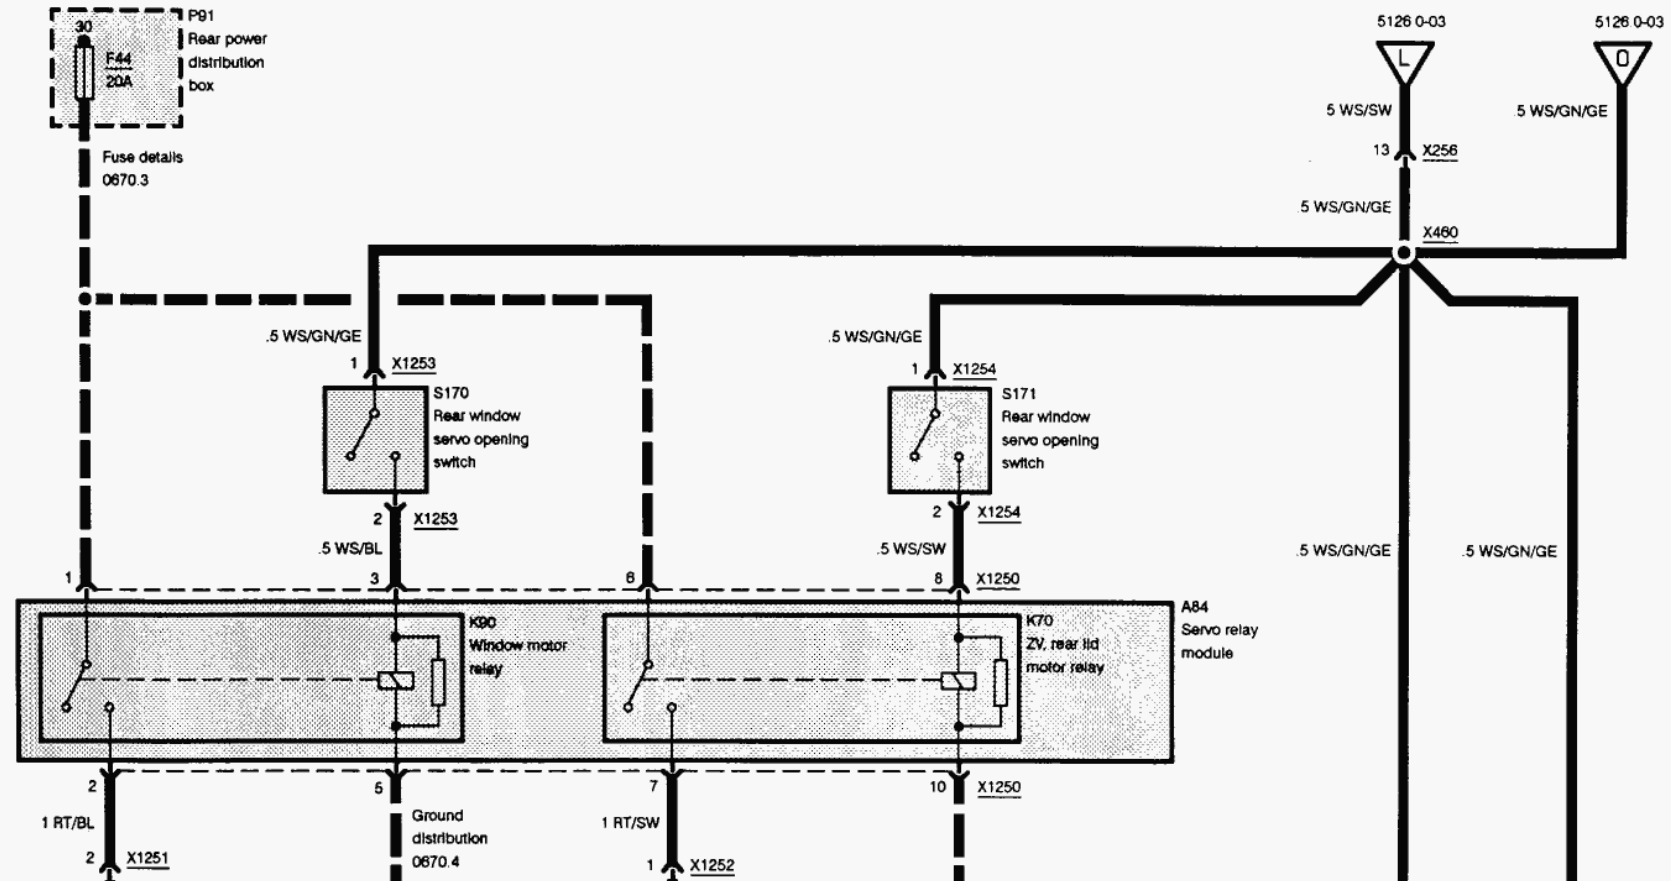


09/93

5126.0-06

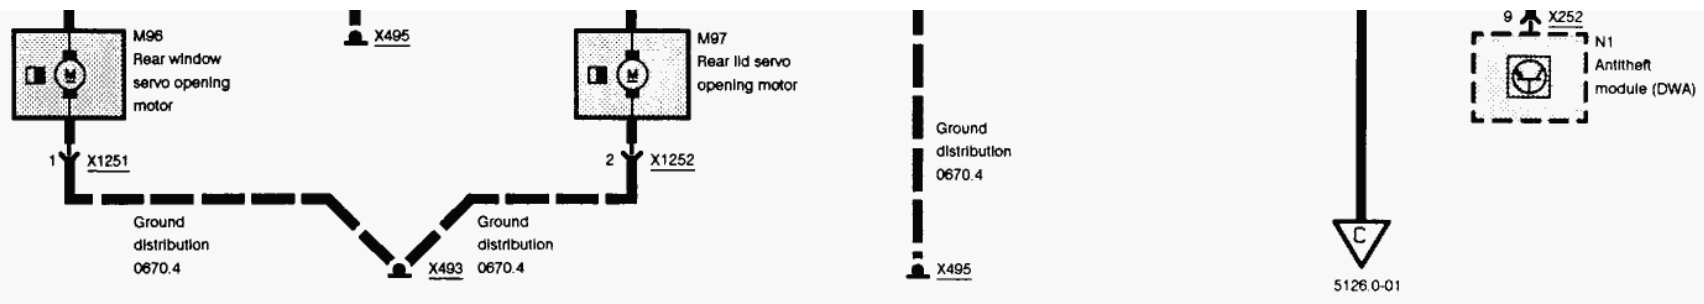

1994

**BMW 5** **Central locking system (ZKE/ZV)**  
**Outputs**

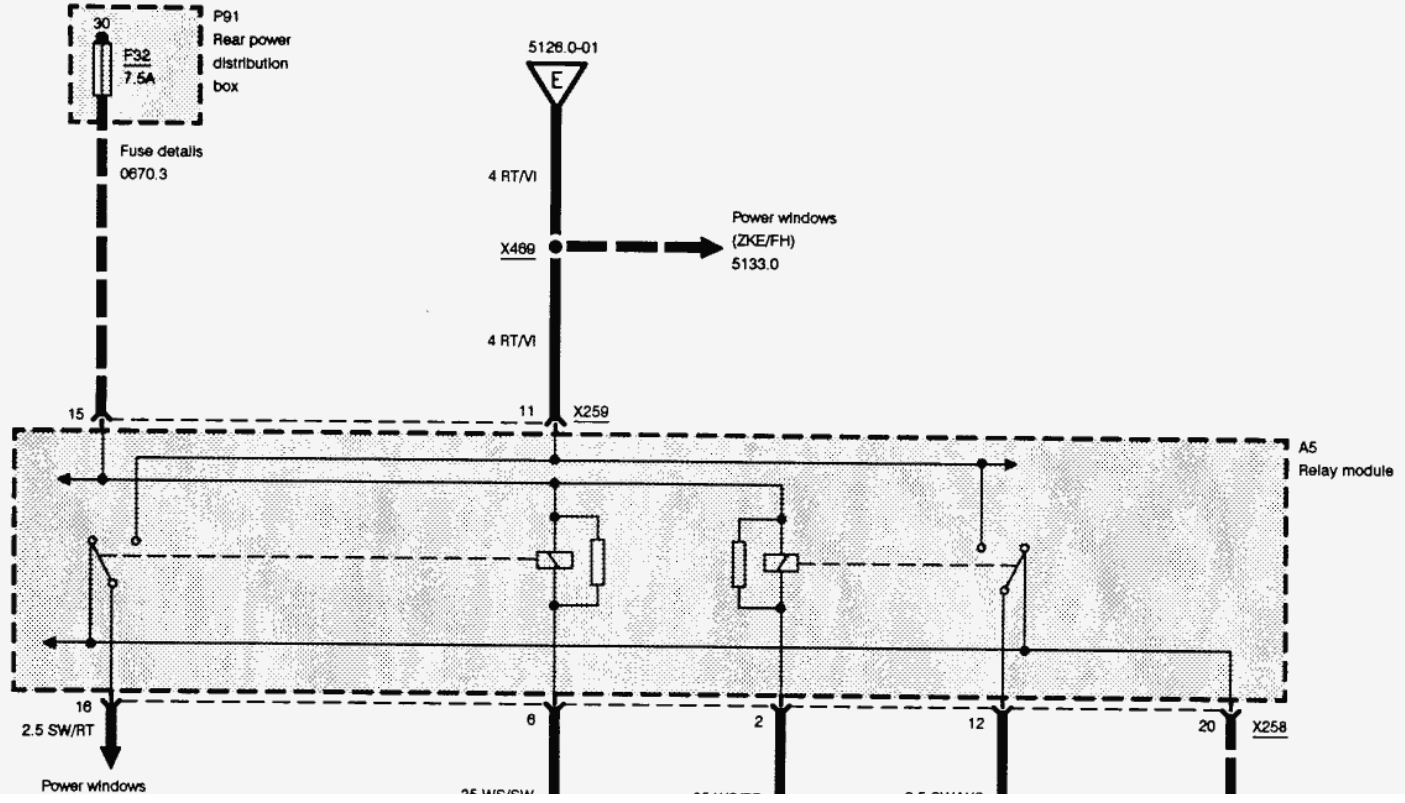

09/93


5126.0-07

(ZKE/FH)  
5133.0

Sunroof  
(ZKE/SHD)  
5410.0

Double-panel  
sunroof (ZKE)  
5410.2

Note: X254 is  
used only with  
power windows

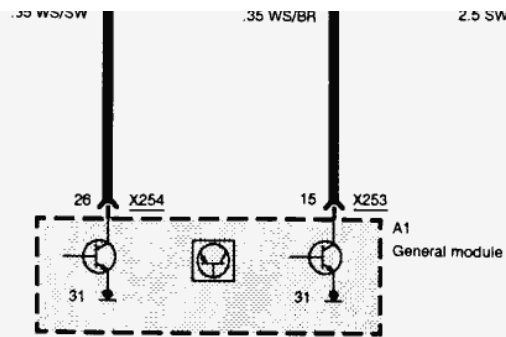

Power windows  
(ZKE/FH)  
5133.0

Ground  
distribution  
0670.4  
X493

# BMWAG


## Electrical troubleshooting manual

### 5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

#### Central locking module (ZVM)


##### Scheme 5126.1

09/93 ————— 5126.1-00 ————— 1994

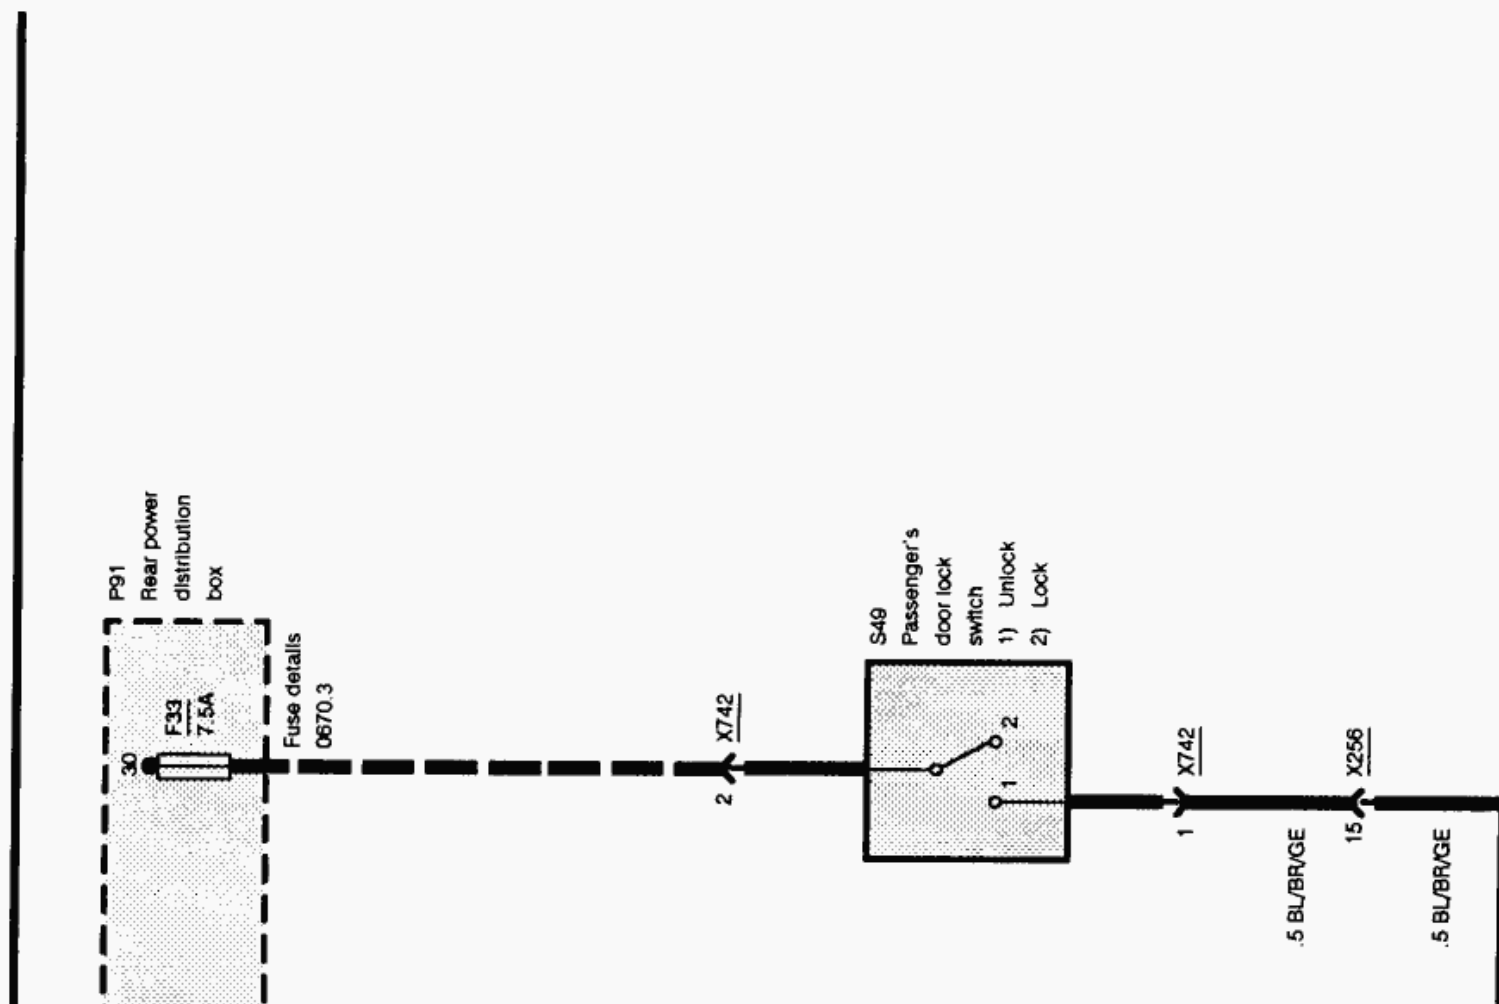

# Central locking module (ZVM)

## Inputs

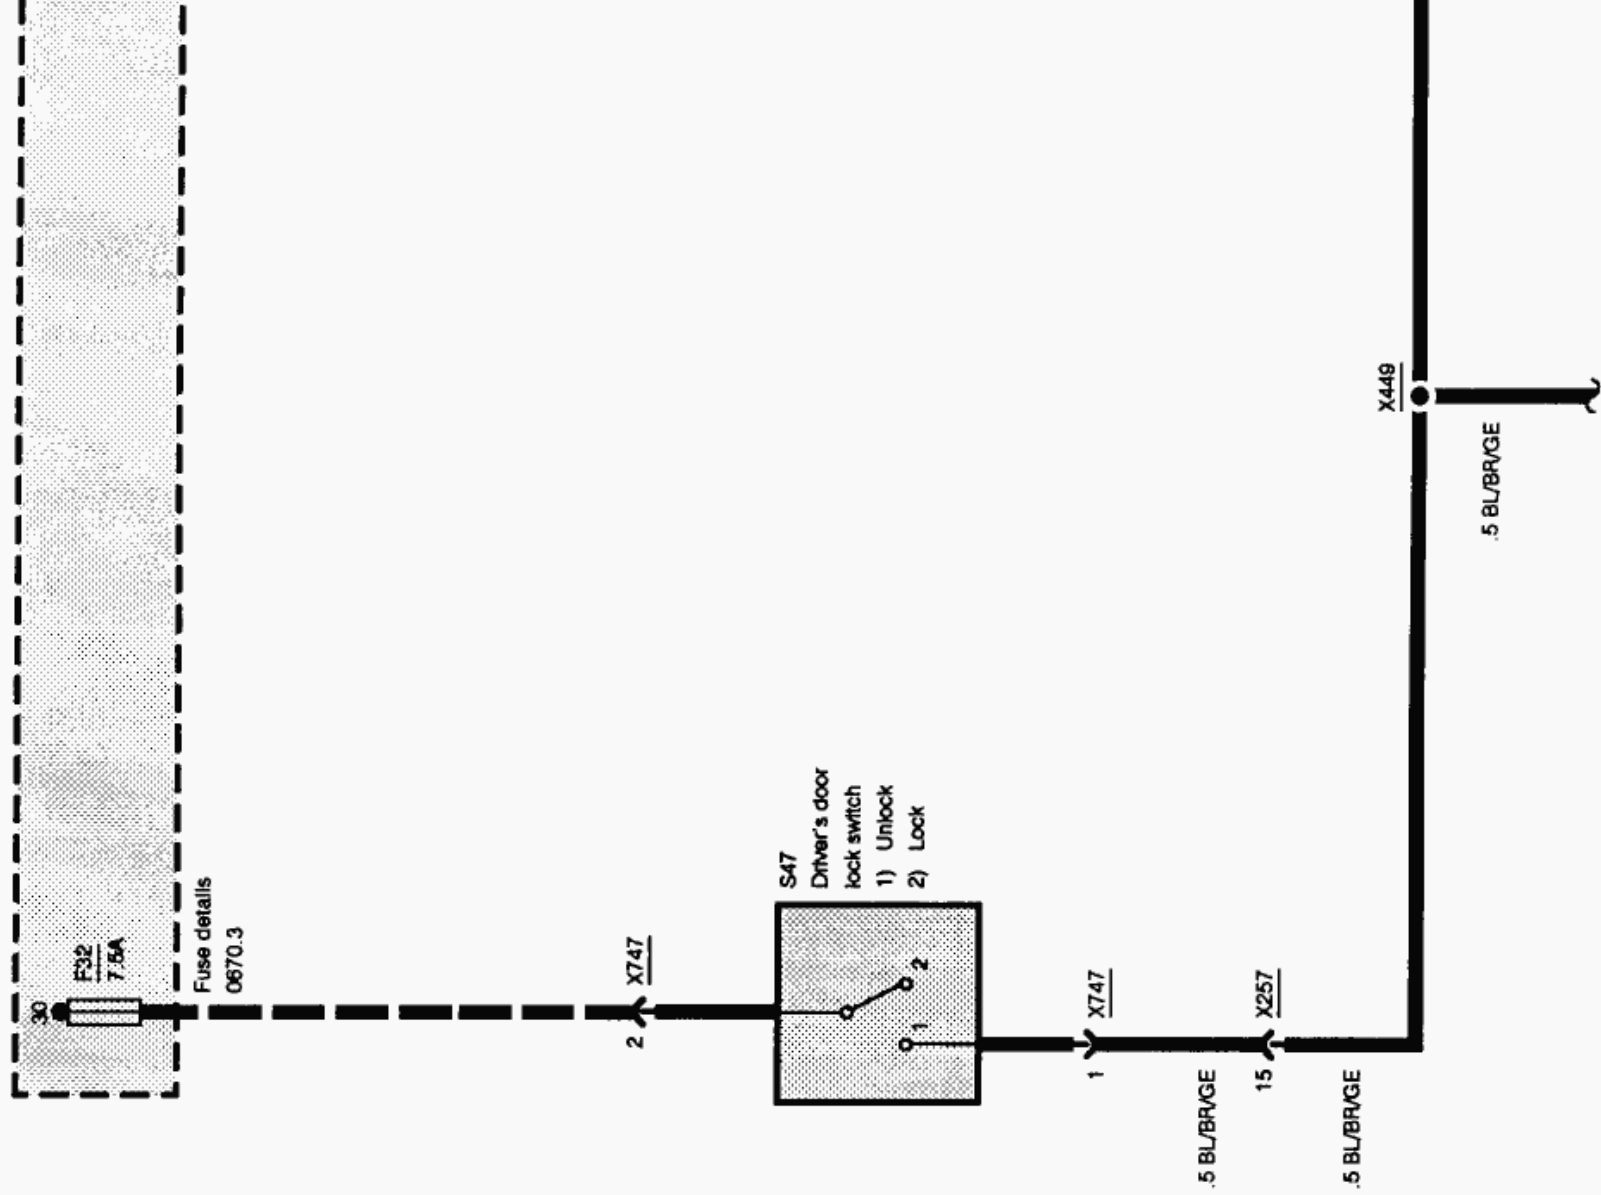







09/93

5126.1-01

1994

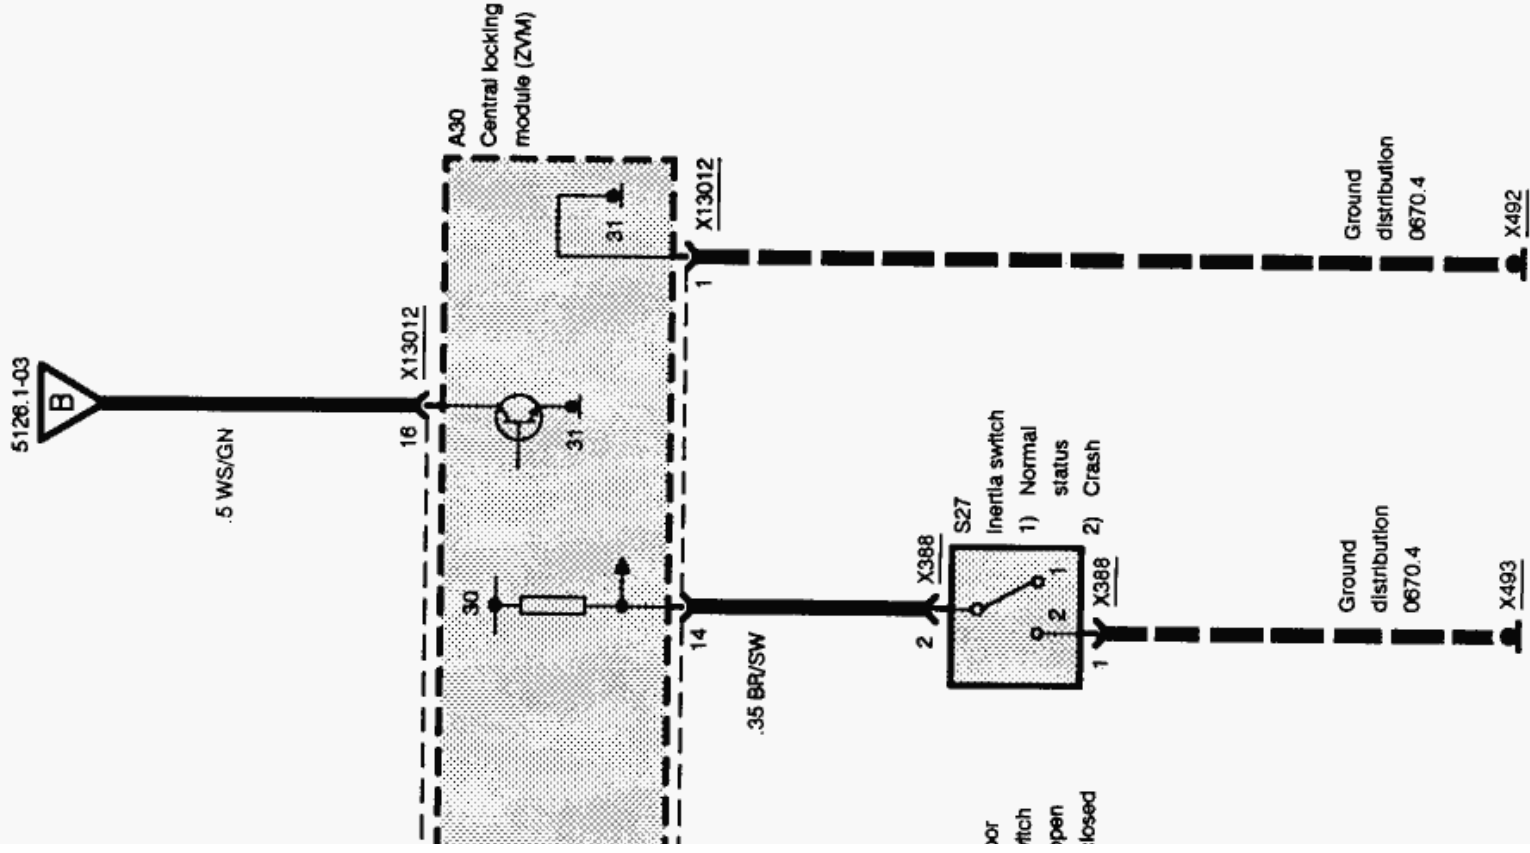


por  
ftch  
pen  
losed

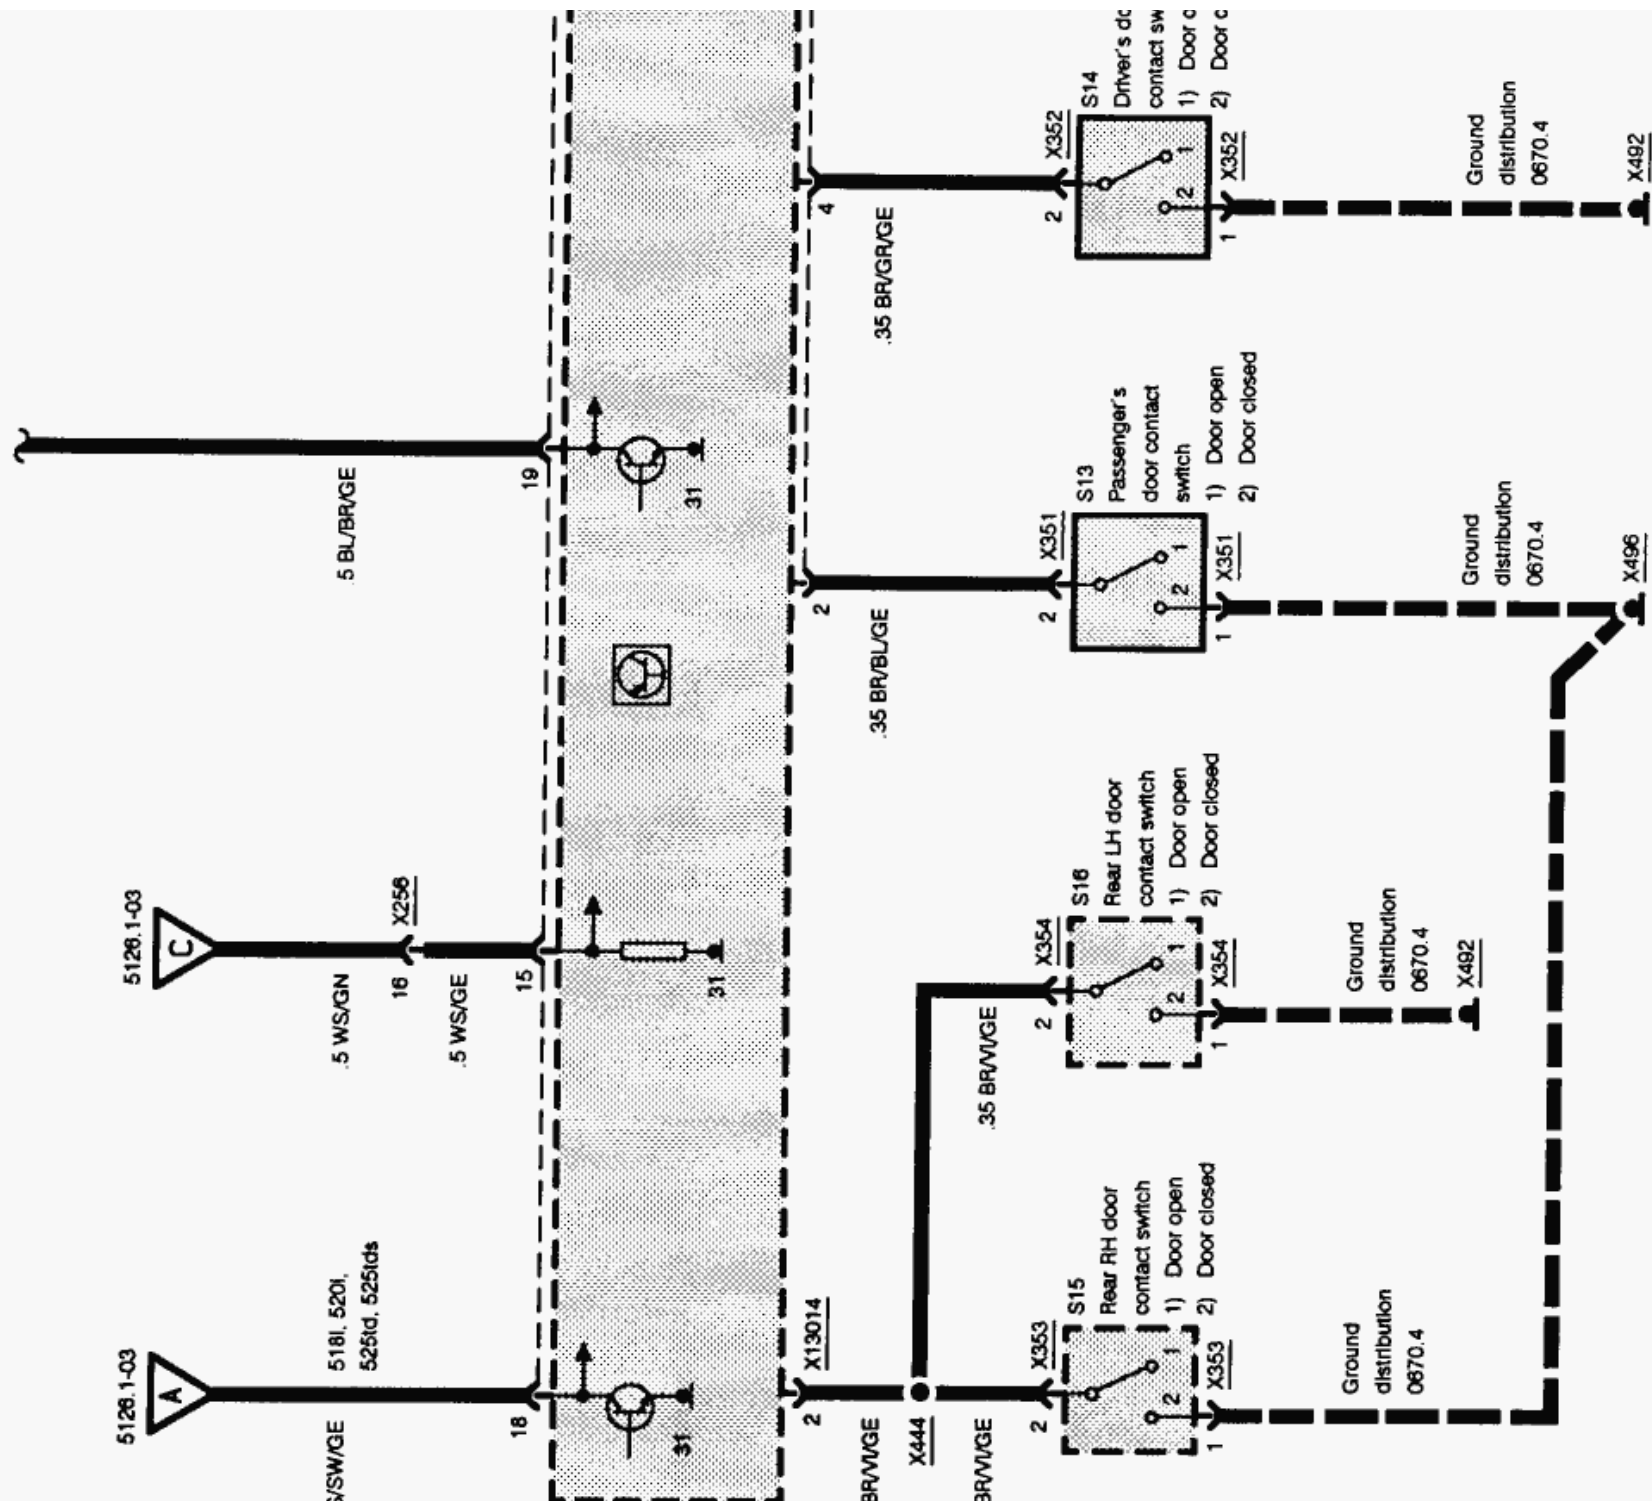

09/93



5126.1-02

1994

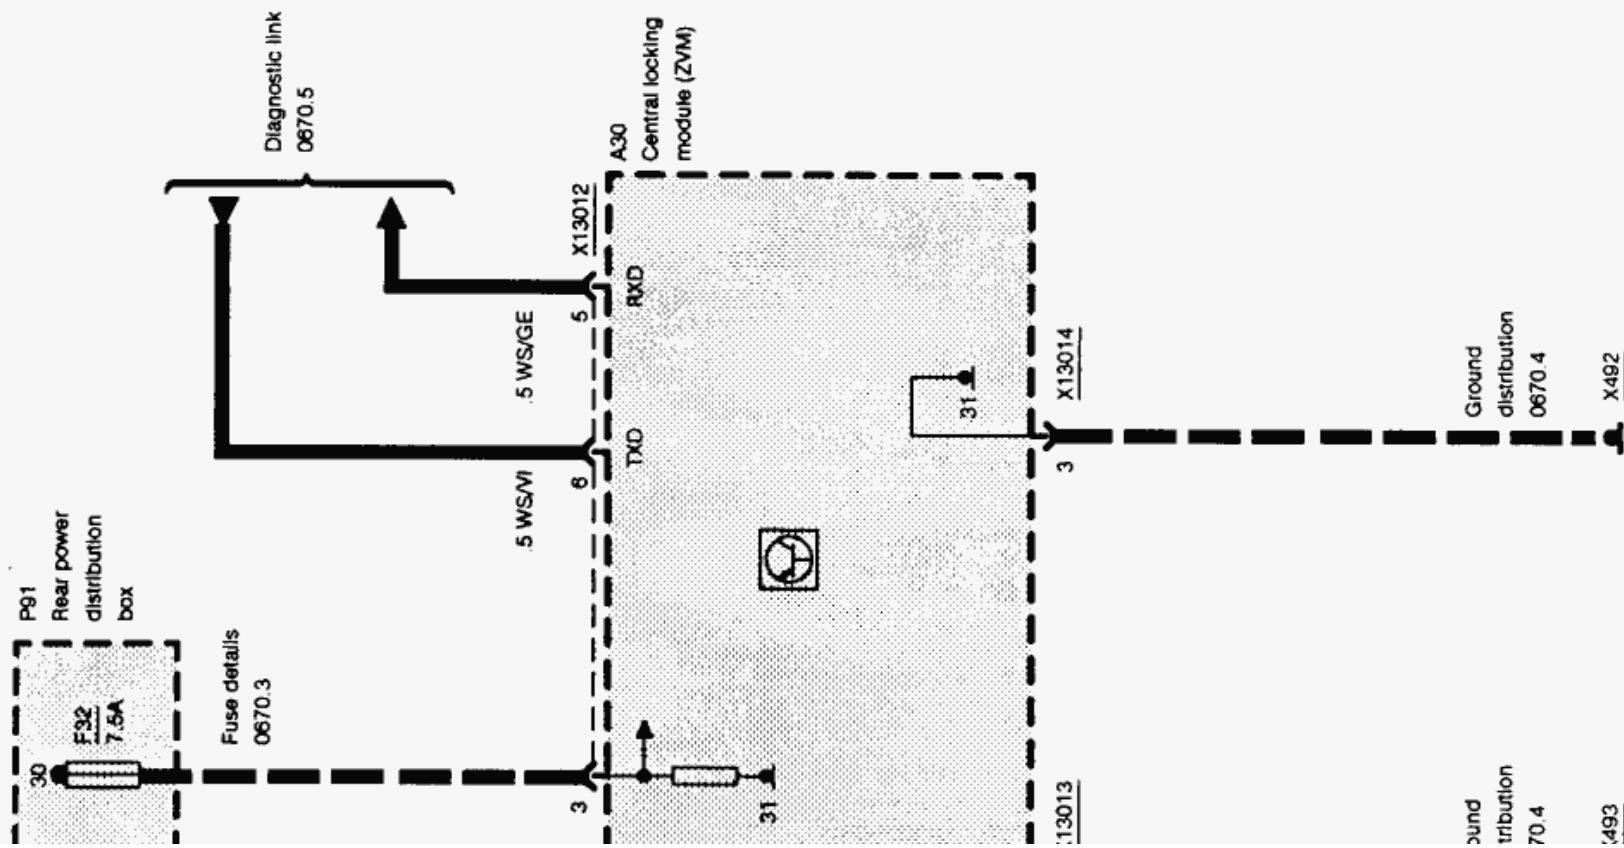


# Central locking module (ZVM)

## Outputs

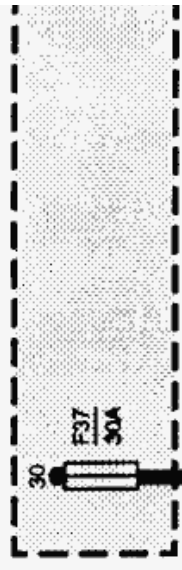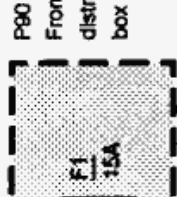


Fuse details  
0670.3

Fuse details  
0670.3

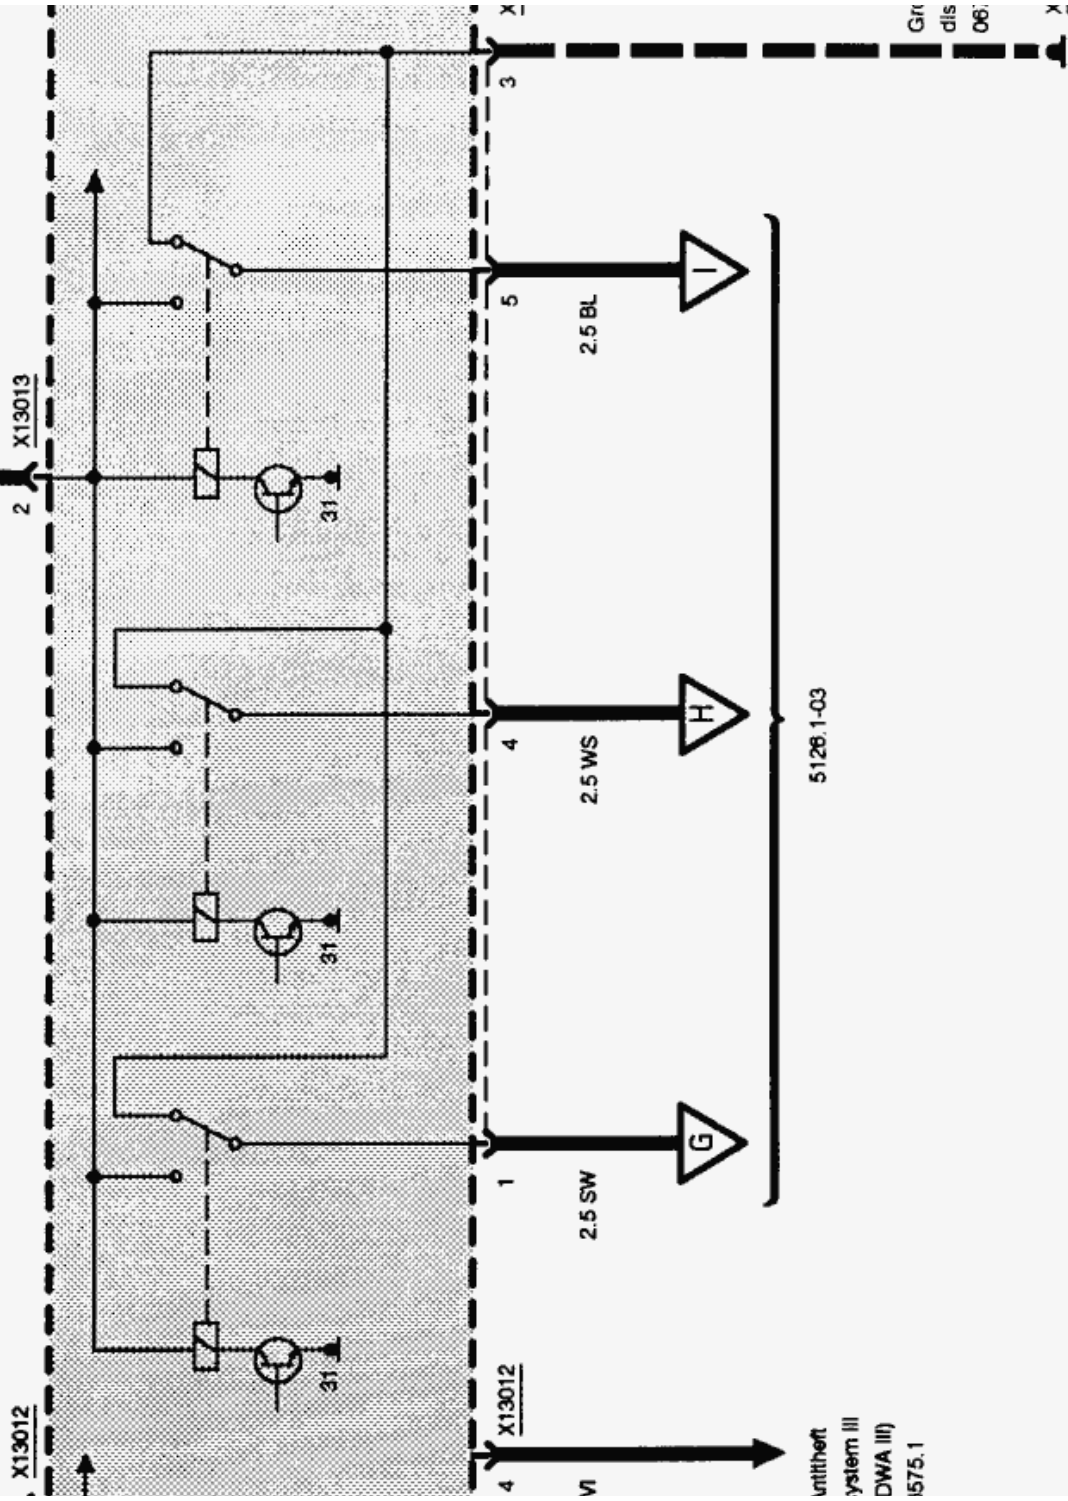

Unit theft  
system III  
DWA III)  
I575.1

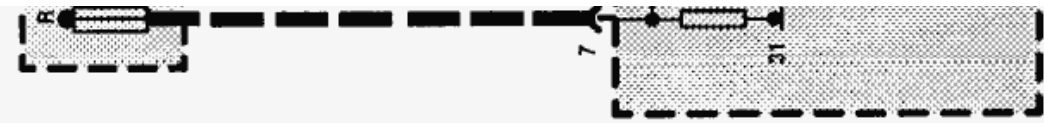


.35 SW/

A S ( B

09/93


5126.1-03

1994

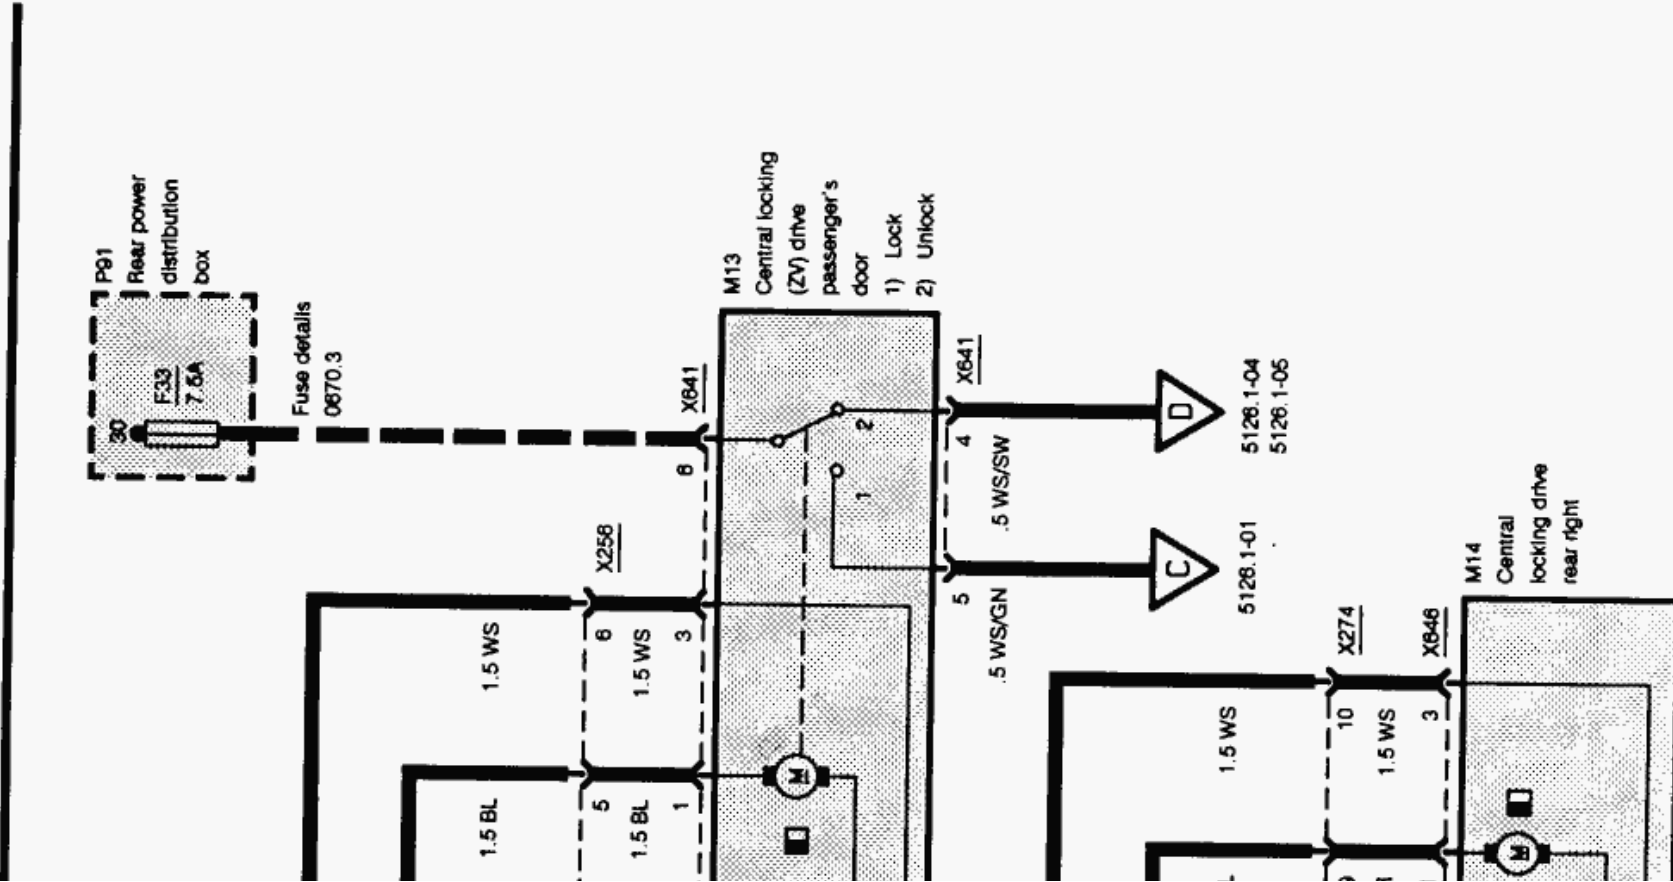

# Central locking module (ZVM)

## Outputs

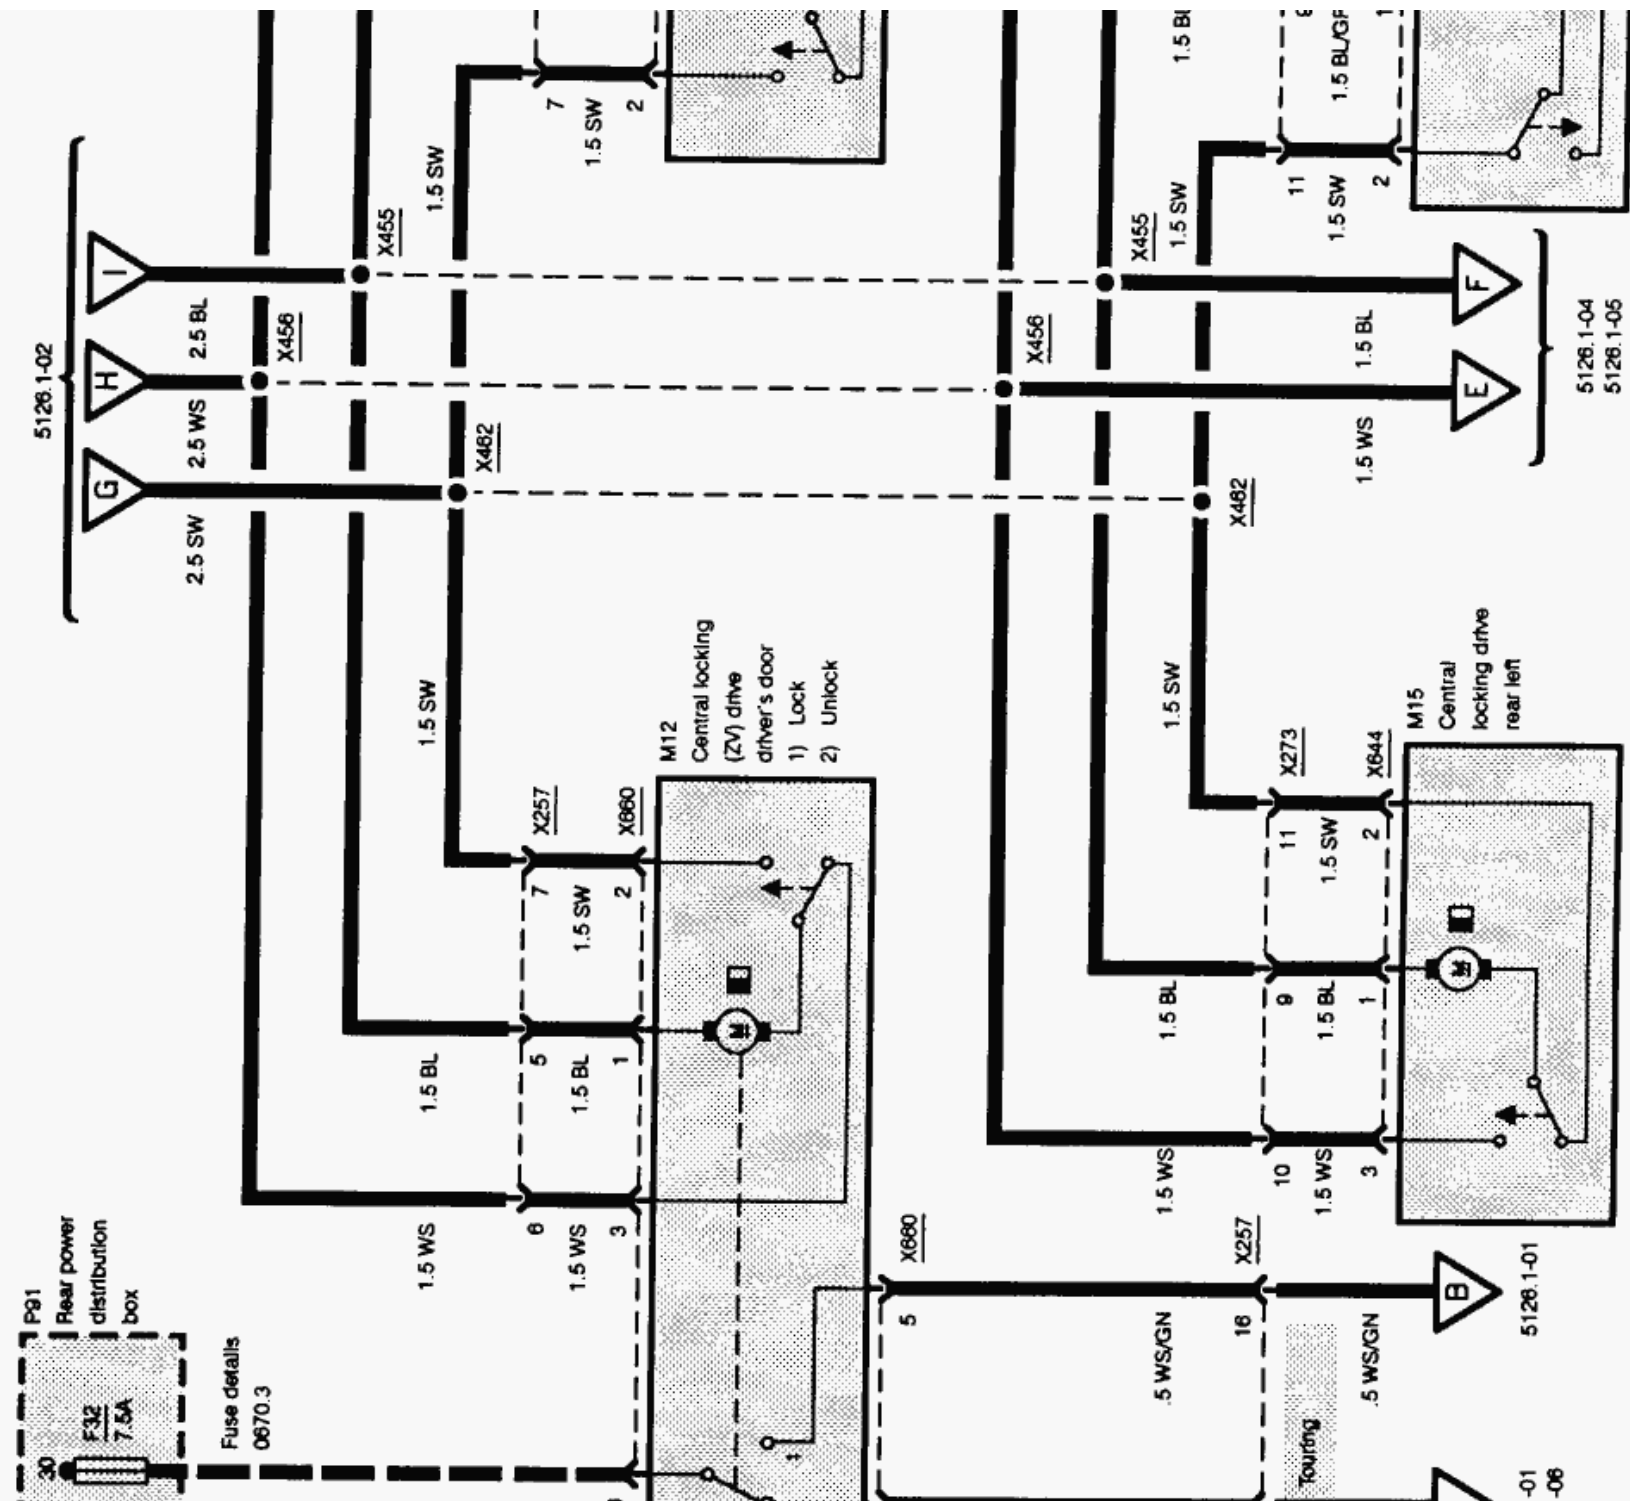




# Saloon

09/93

5126.1-04


1994

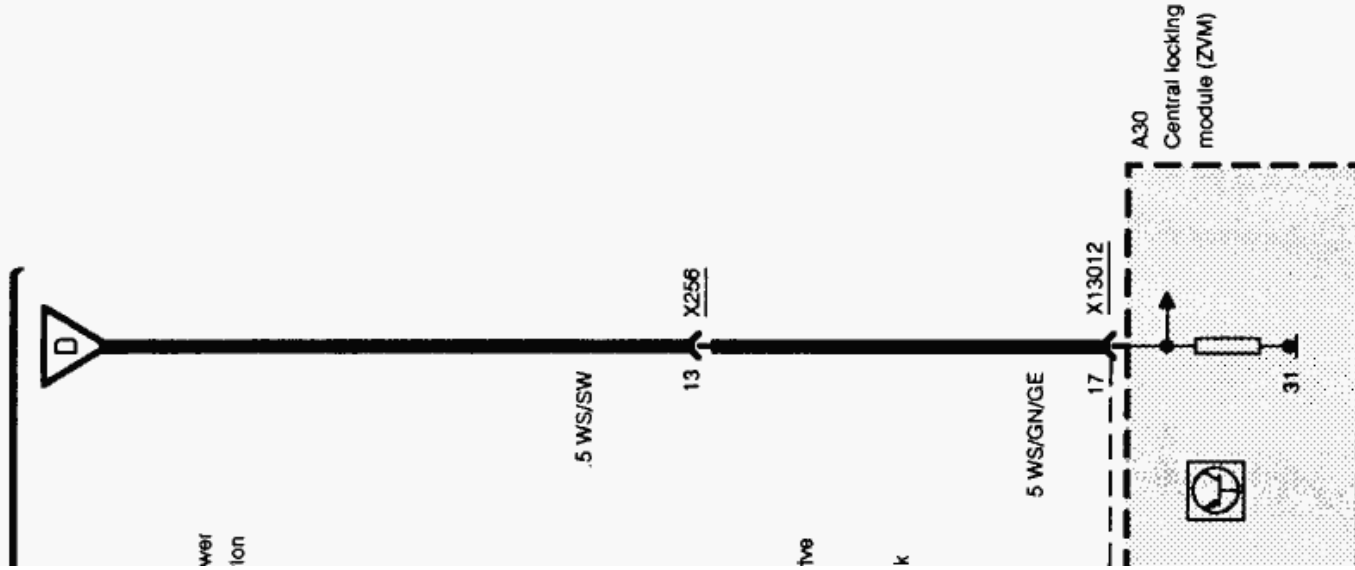

# Central locking module (ZVM)

Inputs

5126.1-03

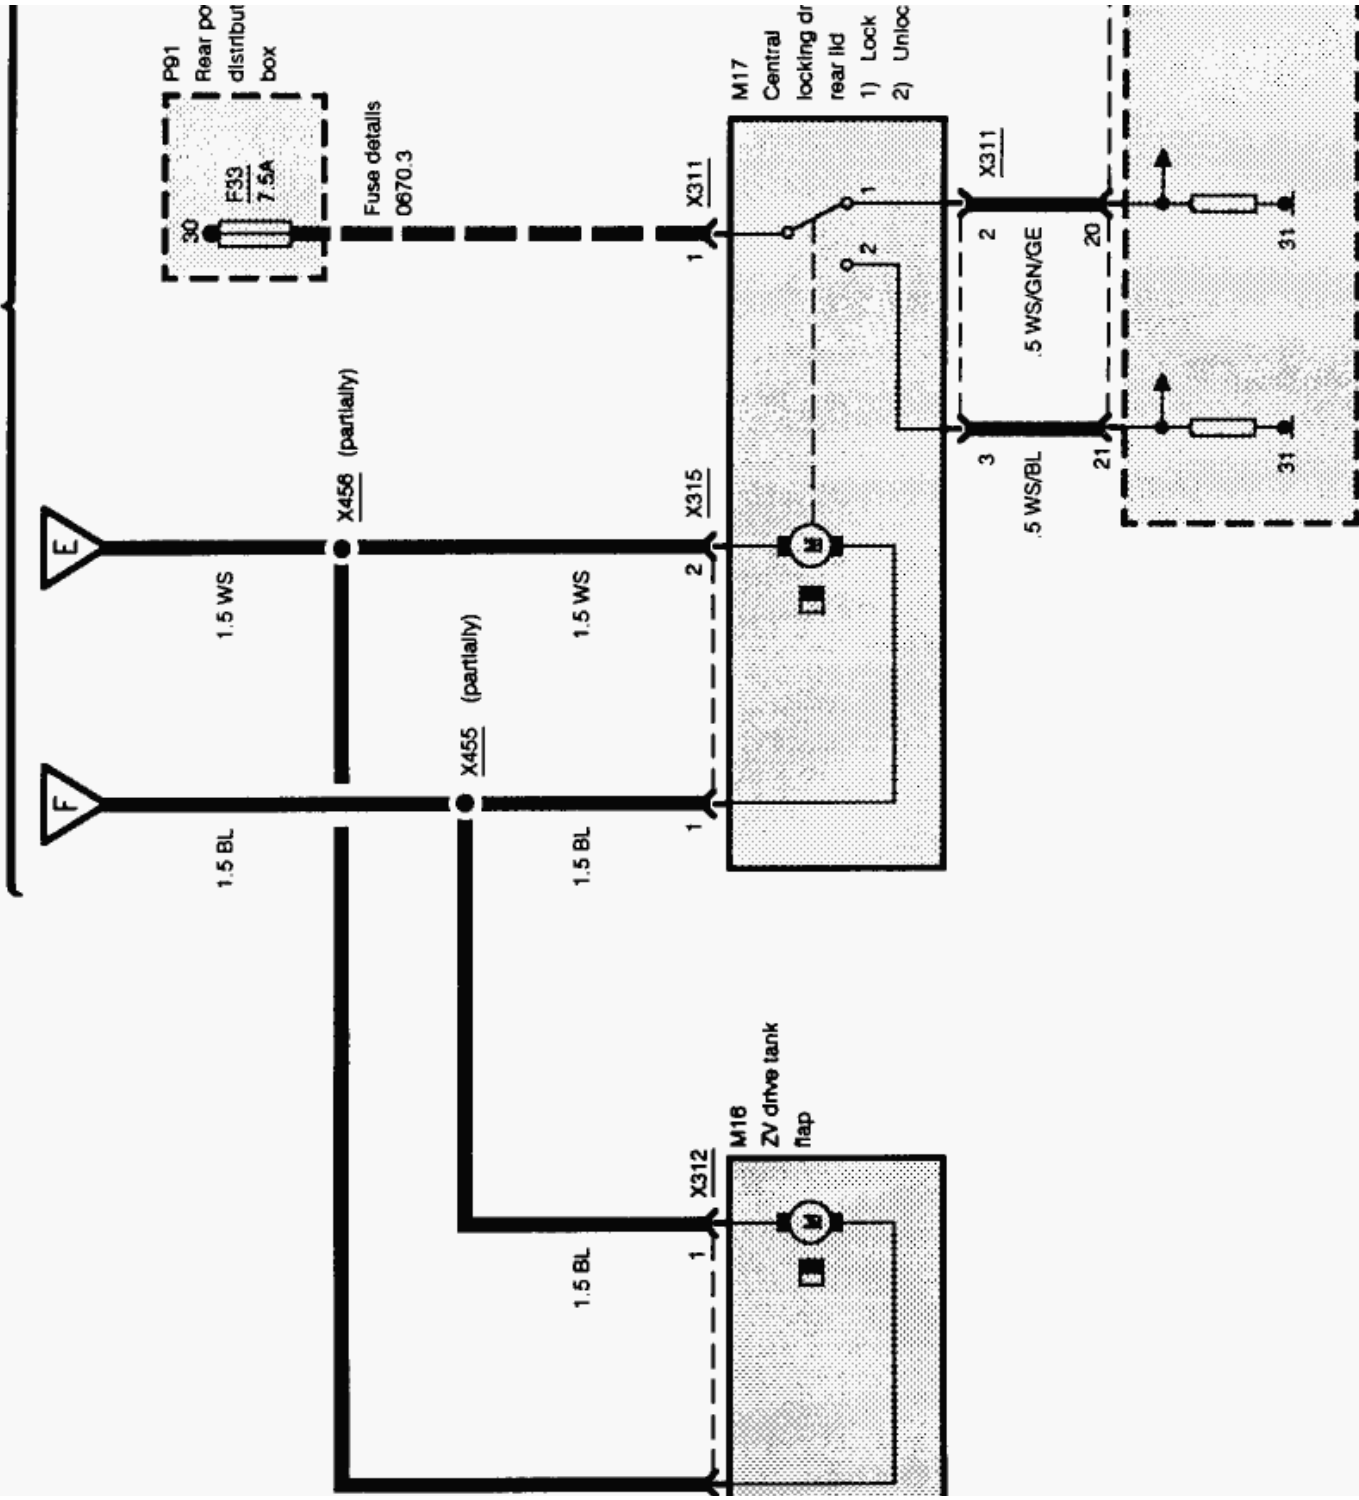






Cel  
Out

# Touring

09/93

5126.1-05

1994

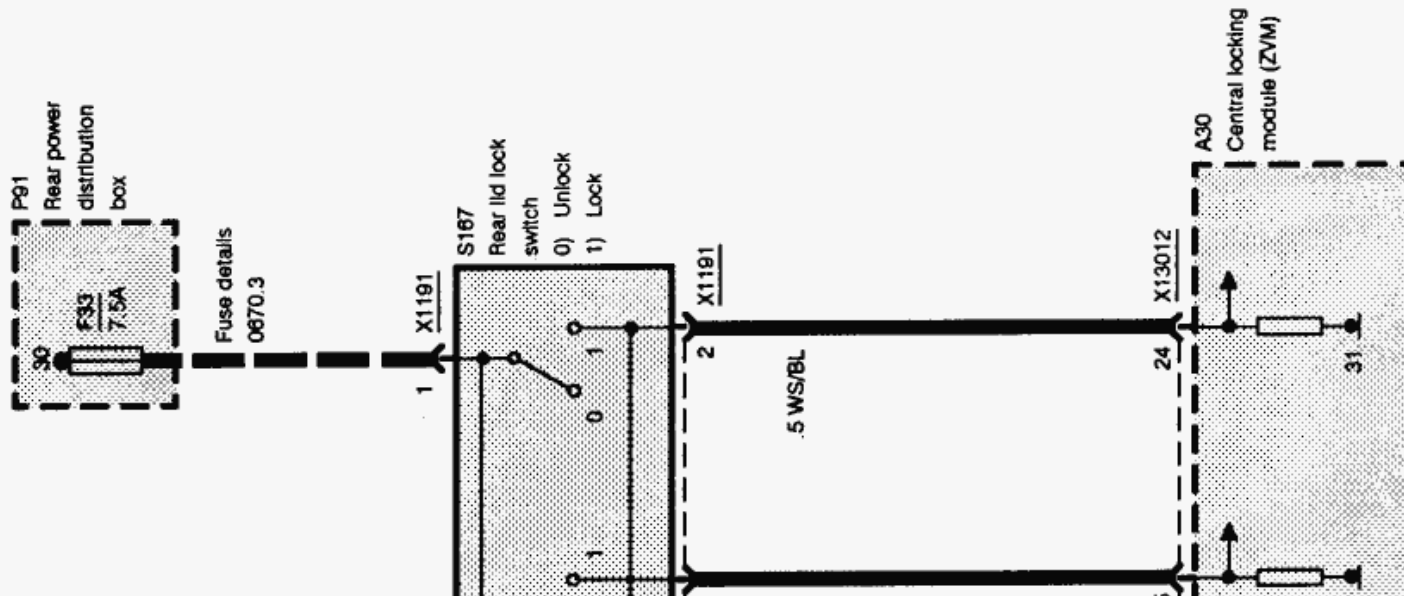


1.5 WS

2

# Central locking module (ZVM)

ts

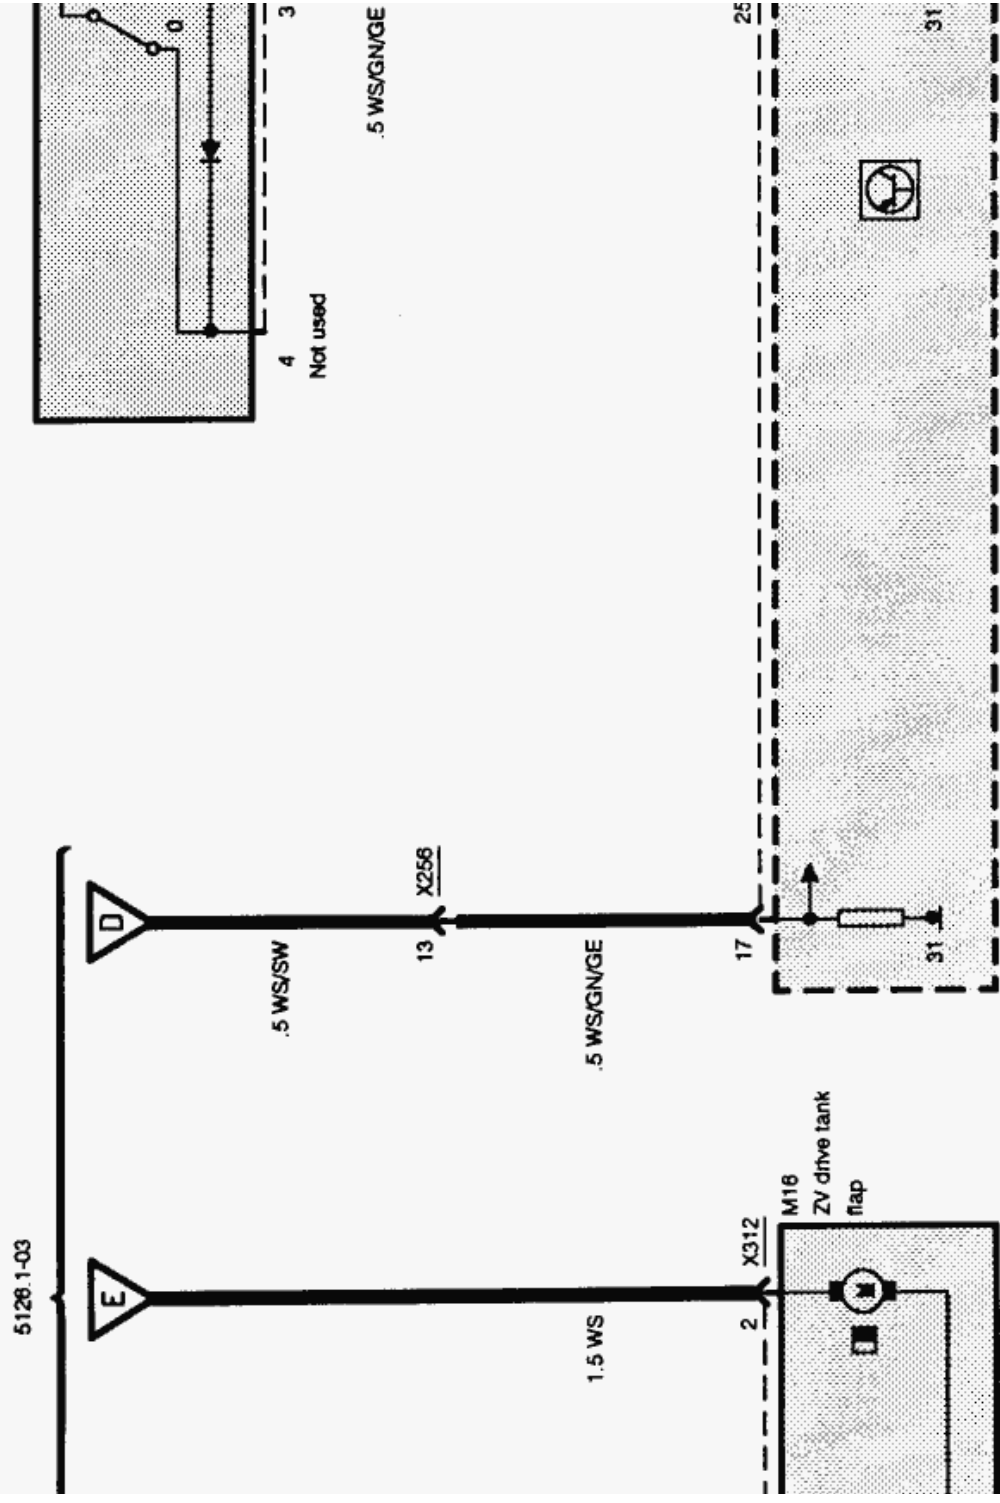





Touring


09/93

5126.1-06

1994

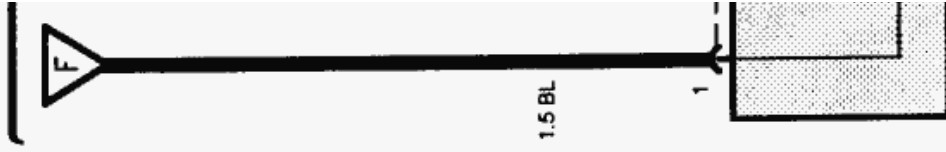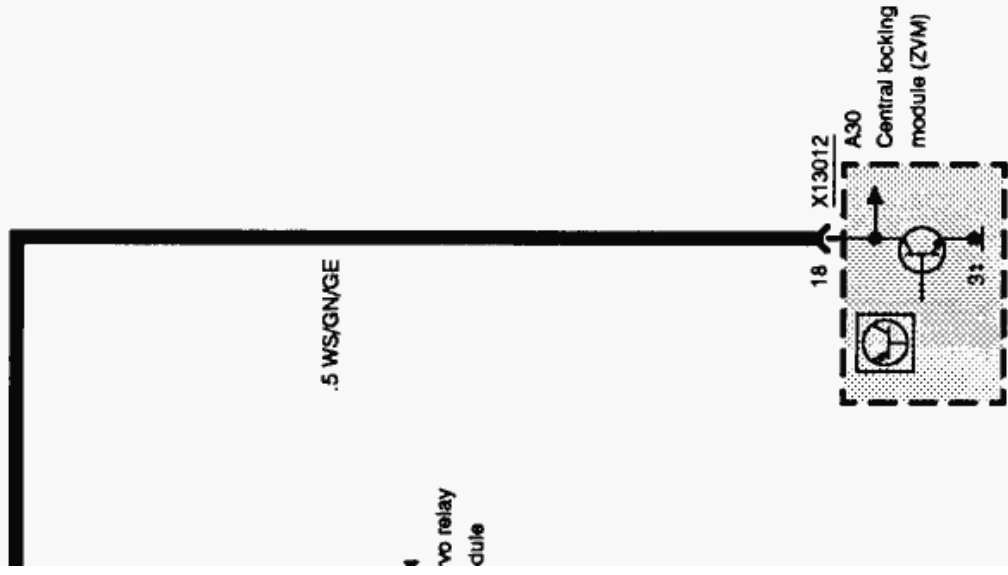

# locking module (ZVM)

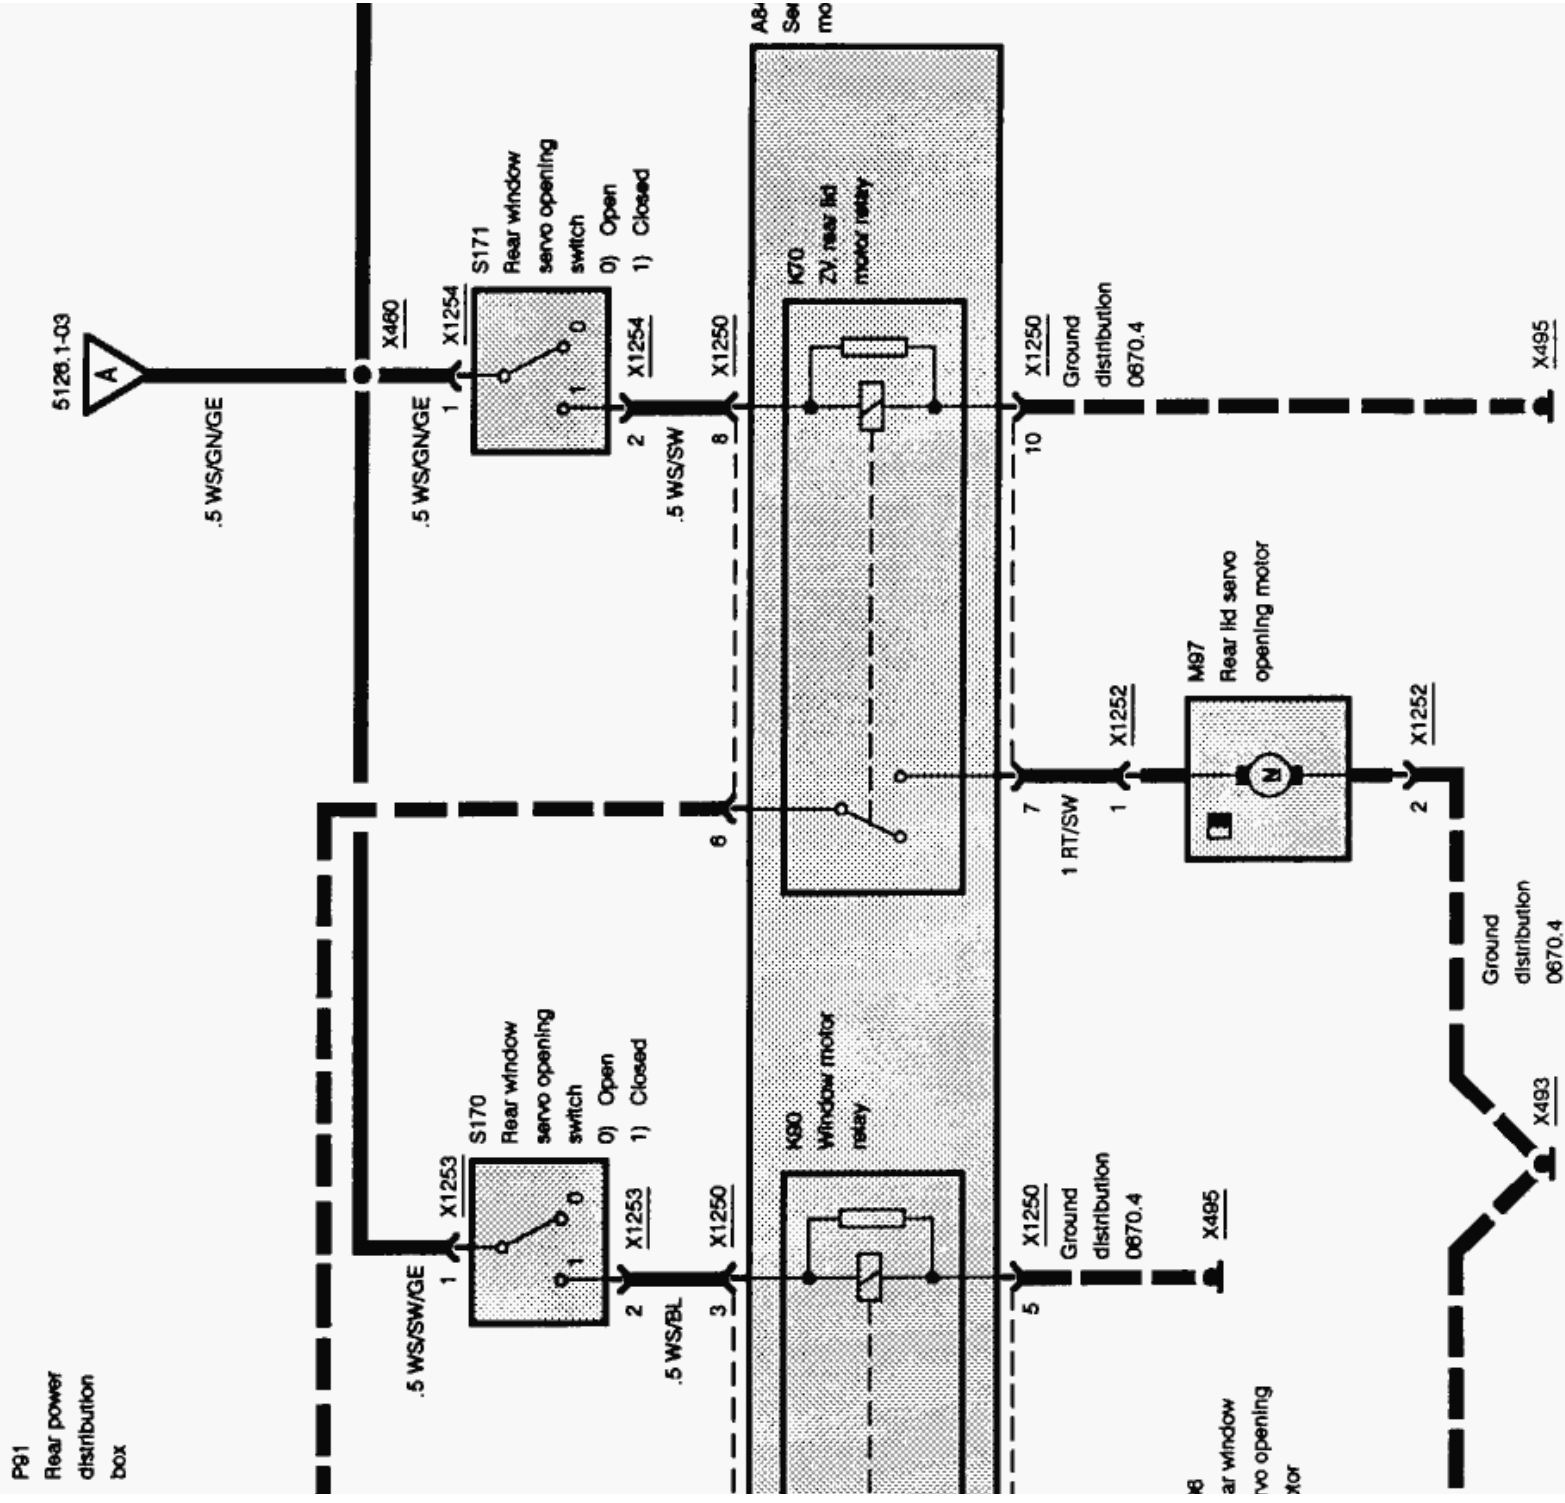


P81  
Rear power  
distribution  
box

K8  
Rear window  
servo opening  
motor



# Central Outputs

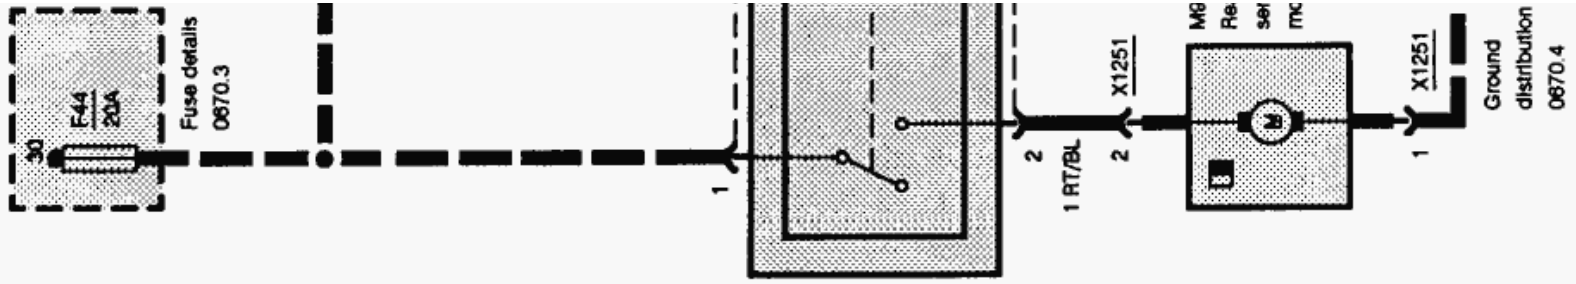

**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Clock

Scheme 6213.0

09/93

**6213.0-00**

1994

Light switch  
6900.0




N50  
Clock



# Clock

## Without on-board computer

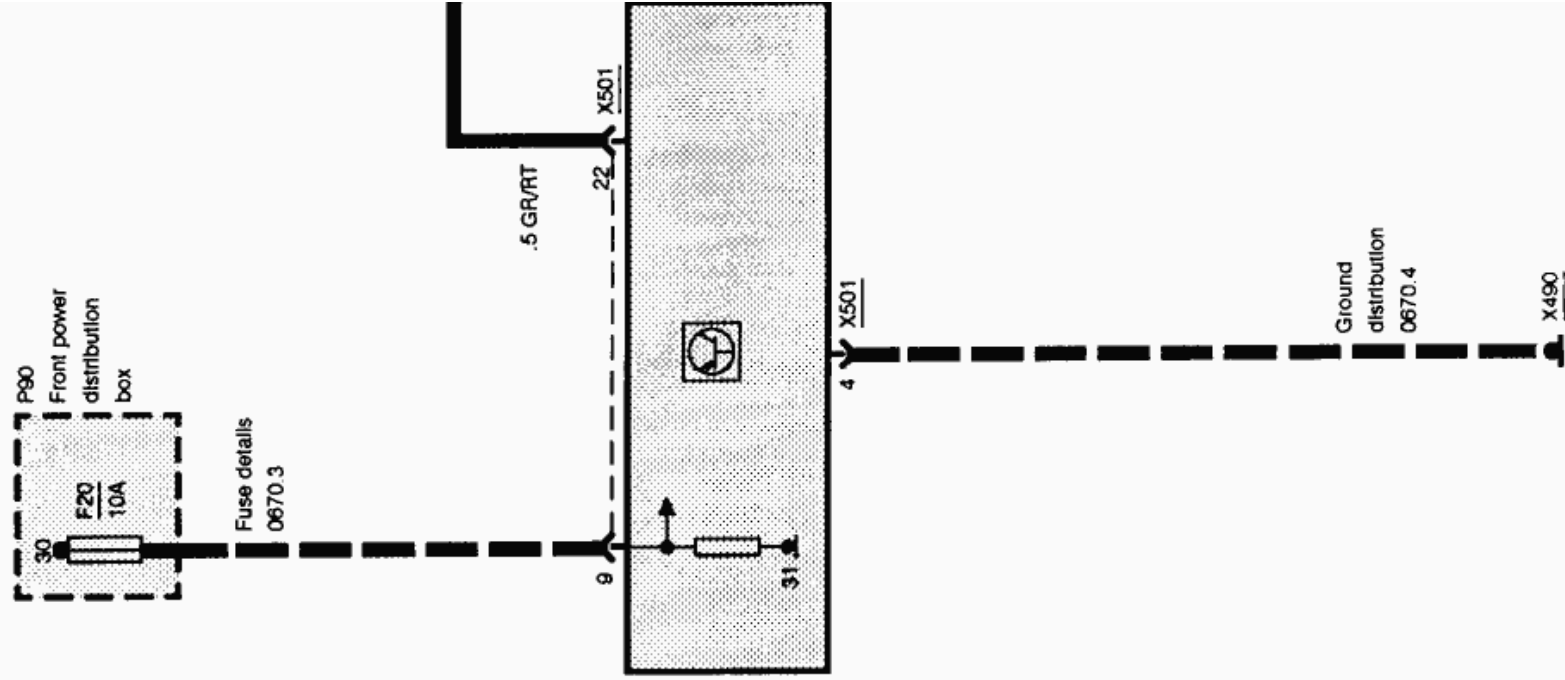











# Cruise control

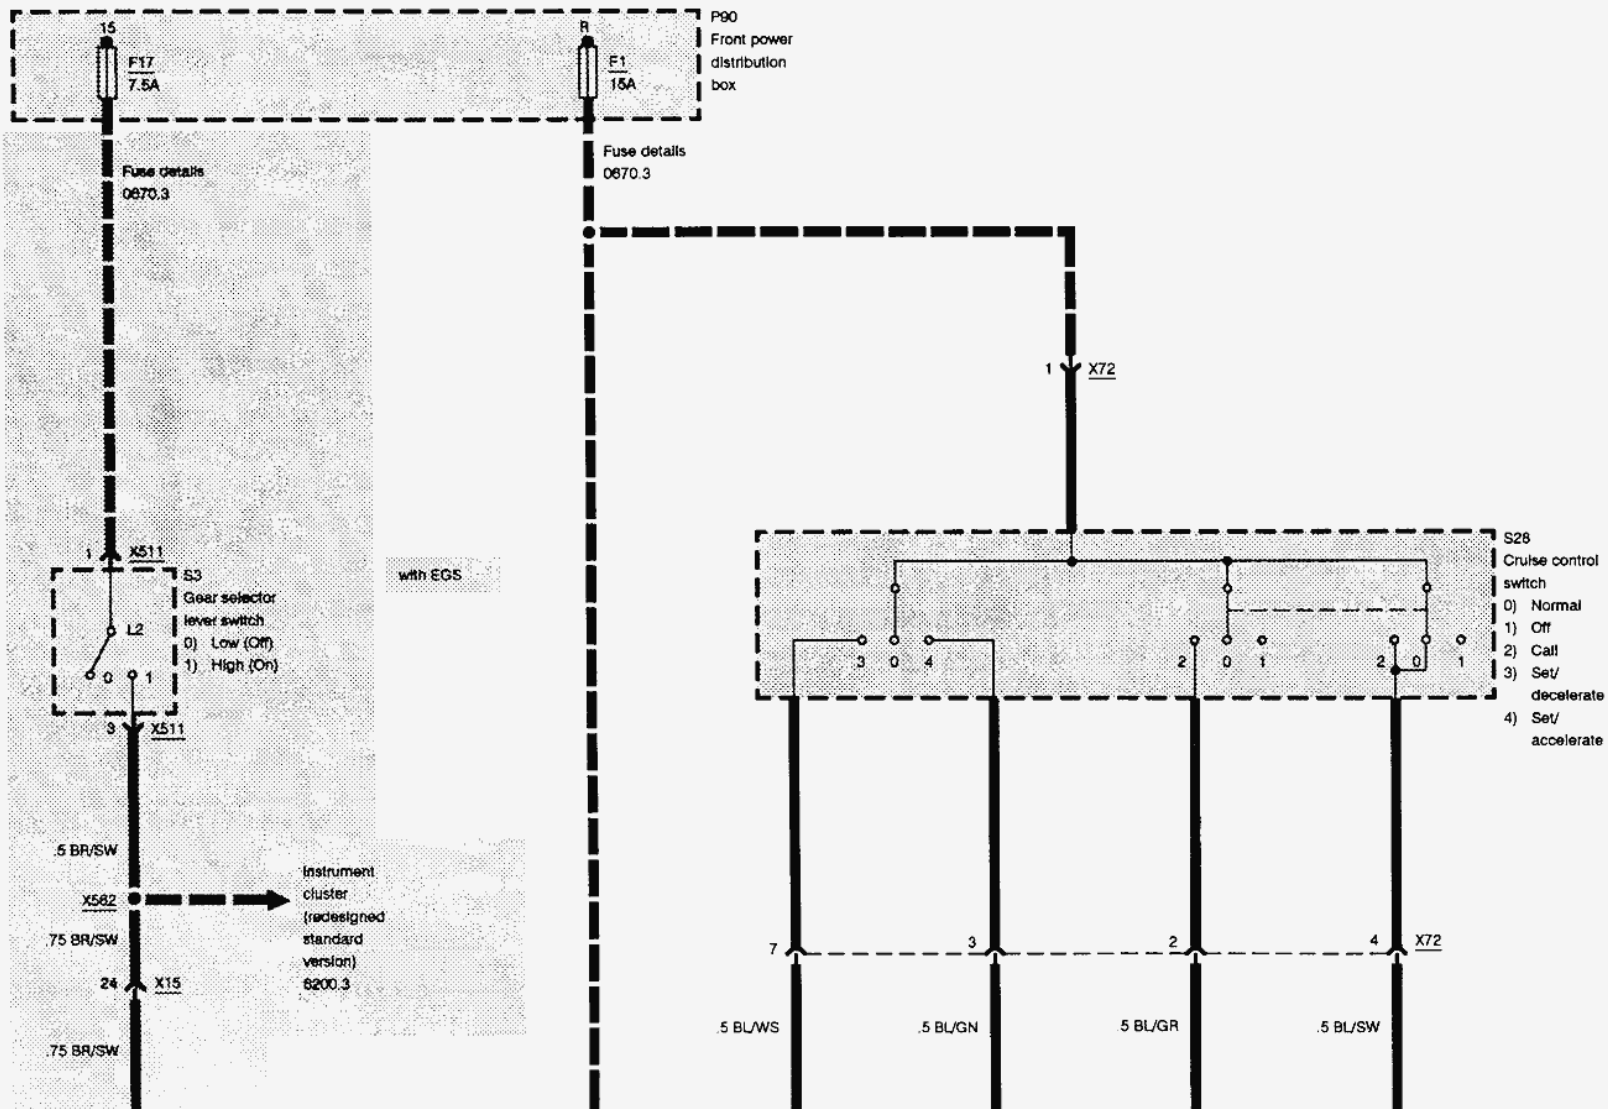

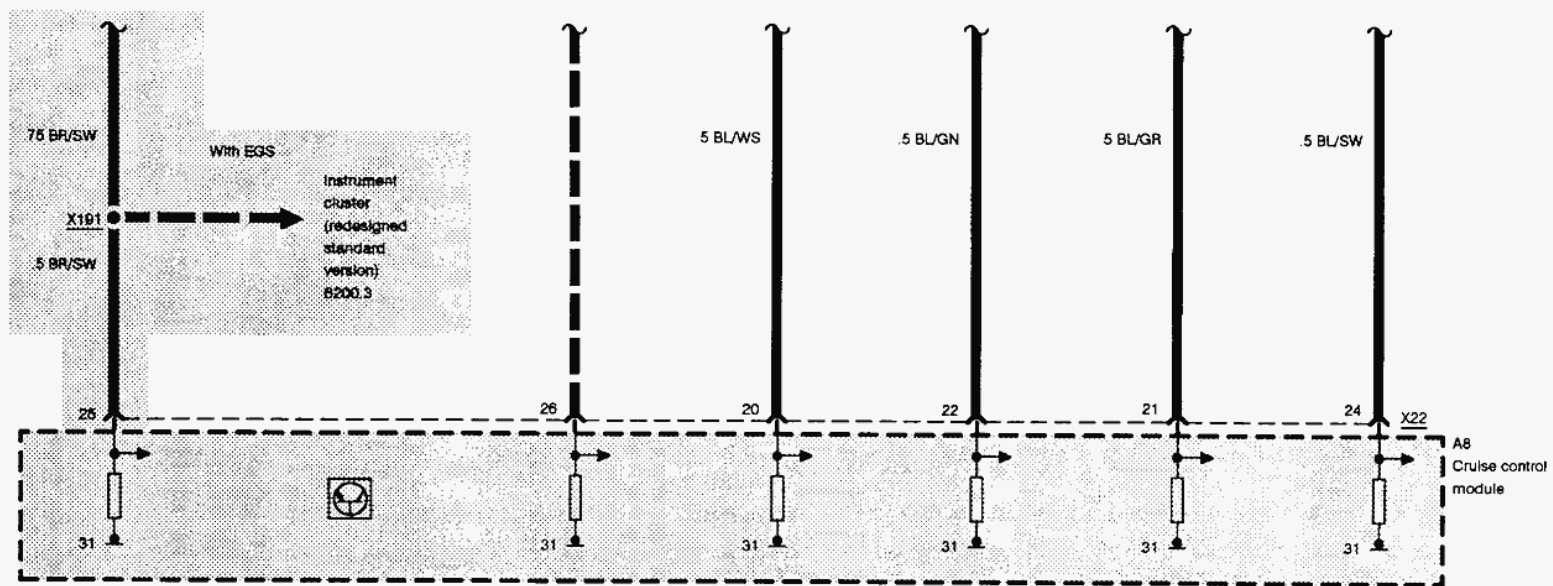


**BMW 5** Cruise control

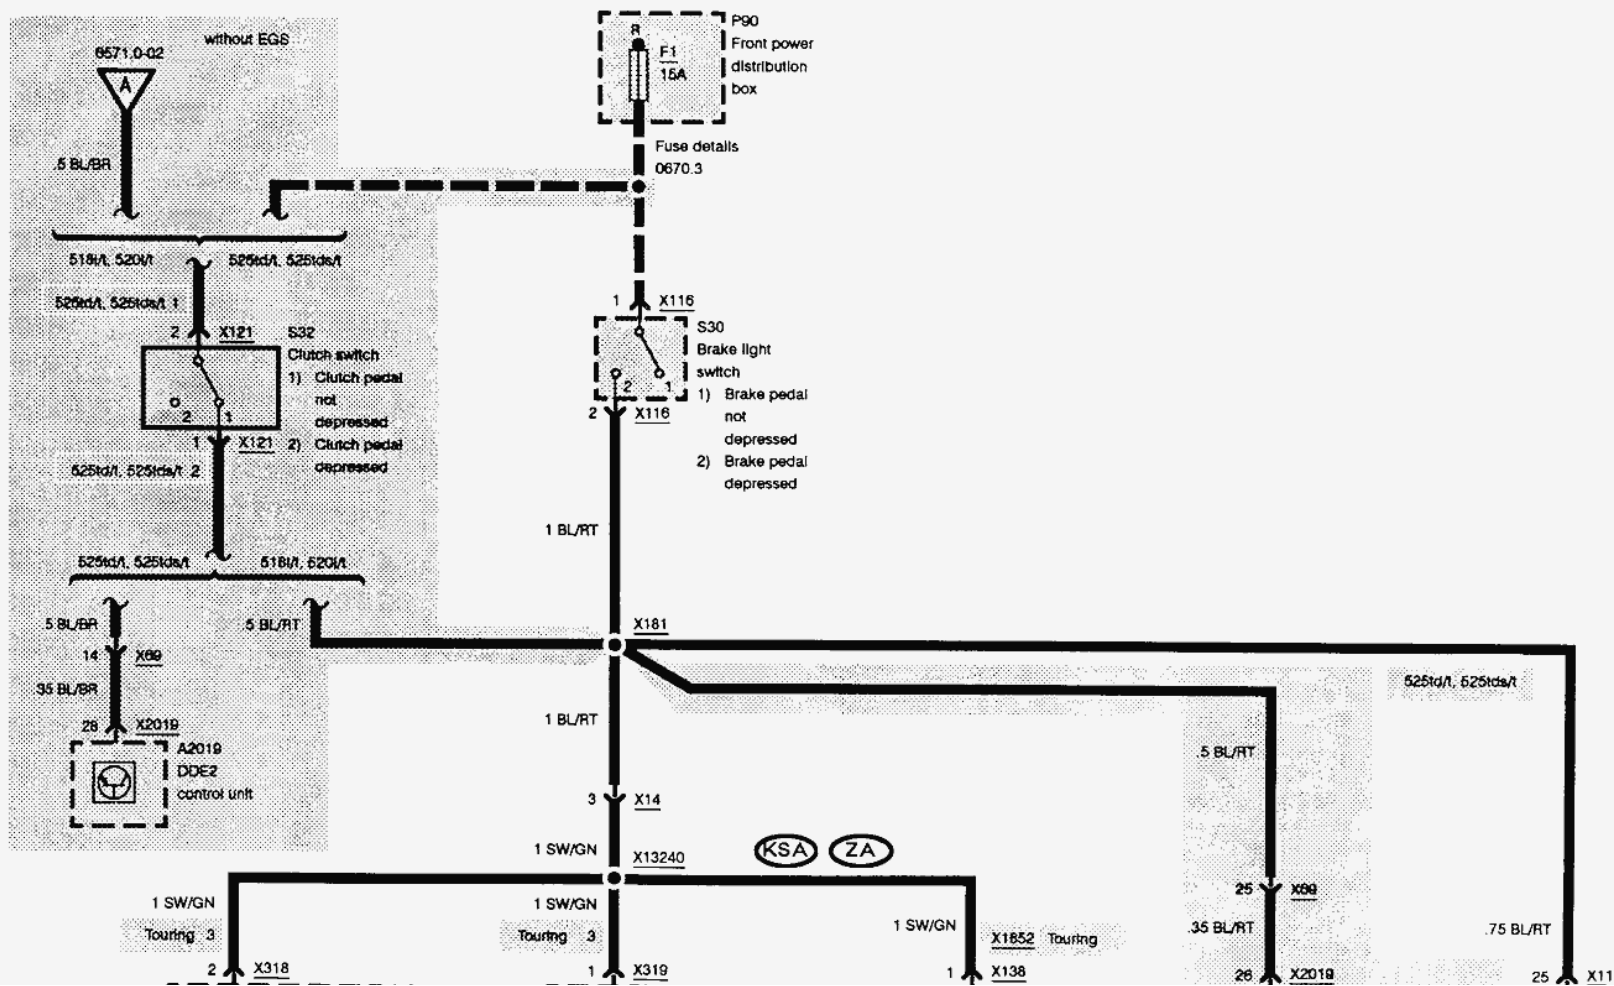

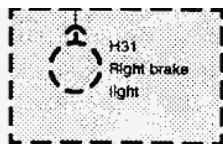

E17  
Right tall  
light

H31  
Right brake  
light

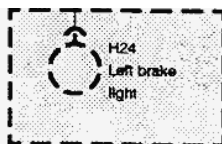


E16  
Left tall light

H24  
Left brake  
light



 H34  
Raised brake  
light



A2019  
DOE2  
control unit



A7  
ABS control  
unit

**BMWAG**Electrical troubleshooting manual

## 5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

## Double-panel sunroof (ZVM)

## Scheme 5410.3

**Pin Assignment**

X13085 10-pin

X13086 18-pin

**Pin Assignment X13085**


Pin	Type	Description/Function	Connection
1	E	Voltage terminal 30	Power distribution box
2	M	Ground signal -	Motor - front cover
3	A	Component supply +	Motor - front cover
4	M	Ground signal -	Motor - rear cover
5	A	Component supply +	Motor - rear cover
6	M	Control unit ground	Ground connection
7	A	Component supply +	Pulse generator - front lid
8	A	Component supply +	Pulse generator - rear lid
9	M	Ground	DDSHD switch
10	E	Voltage terminal 30 ES	General module

**Pin Assignment X13086**

Pin	Type	Description/Function	Connection
1	E	Position signal	Pulse generator - front lid
2		not used	
3	E	Position signal	Pulse generator - front lid
4	E	Position signal	Pulse generator - front lid
5		not used	
6	E	Control signal	Relay module
7	A	RxD signal	Diagnostic connector
8	E	Switch closed	DDSHD switch
9	E	Switch closed	DDSHD switch
10	E	Position signal	Pulse generator - rear lid
11		not used	
12	E	Position signal	Pulse generator - rear lid
13	E	Position signal	Pulse generator - rear lid
14		not used	
15	E/A	TxD signal	Diagnostic connector
16	E	MSD+	Relay module
17	E	Switch closed	DDSHD switch
18		not used	

**E = Input, A = Output, M = Ground**


# Touring

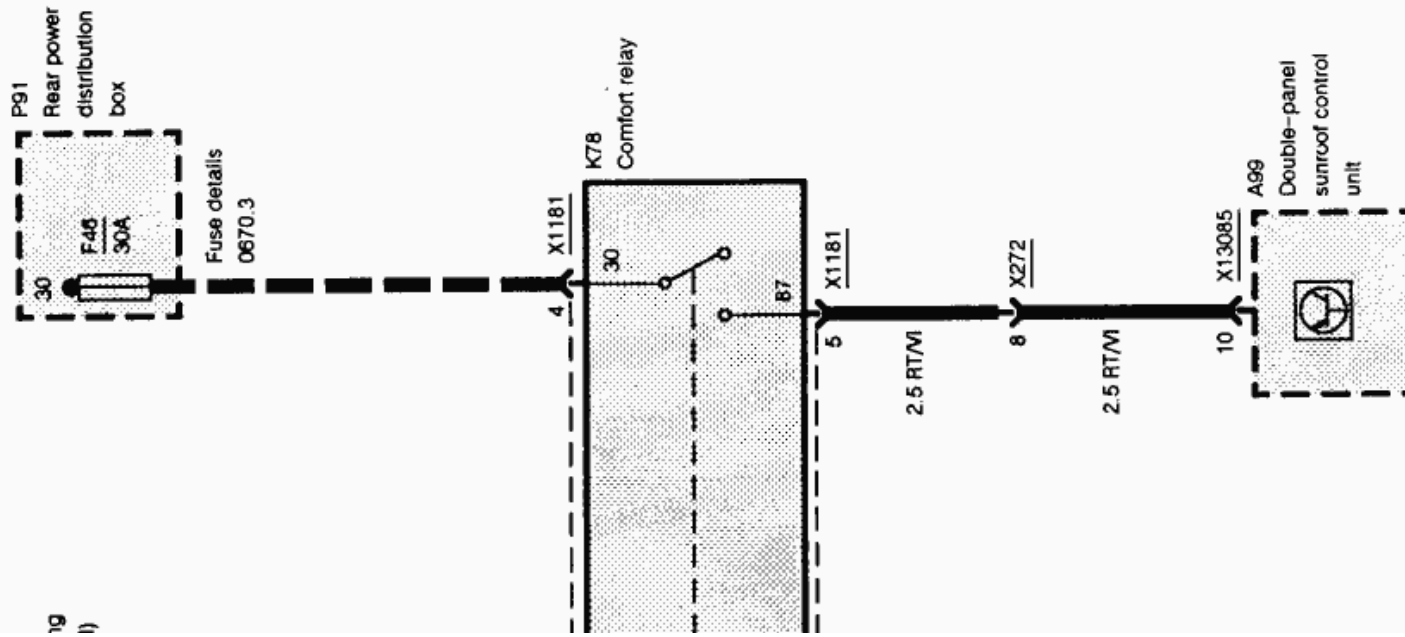


19  
1)



# Double-panel sunroof (ZVM)

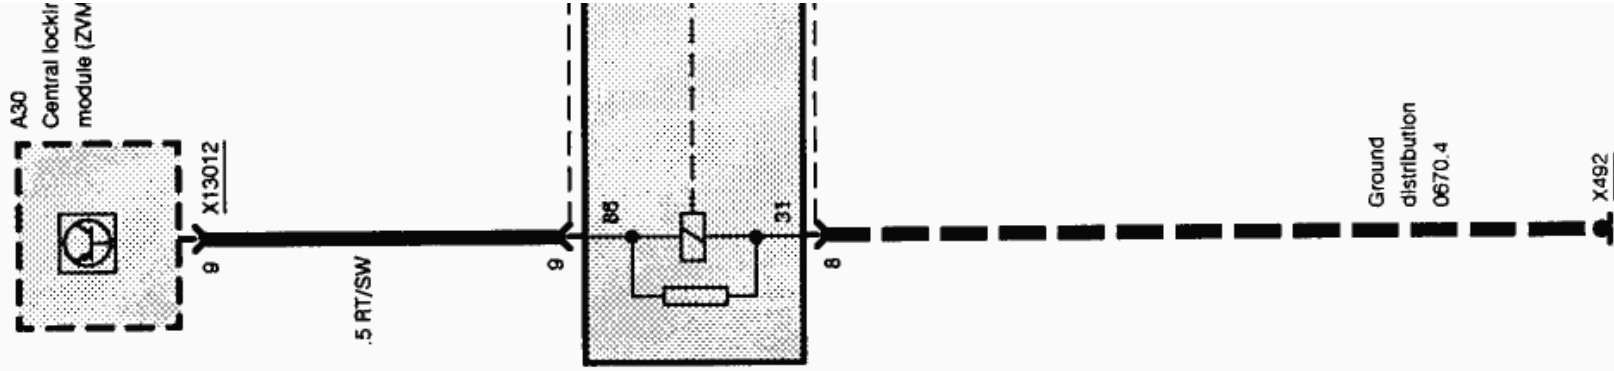


# Touring

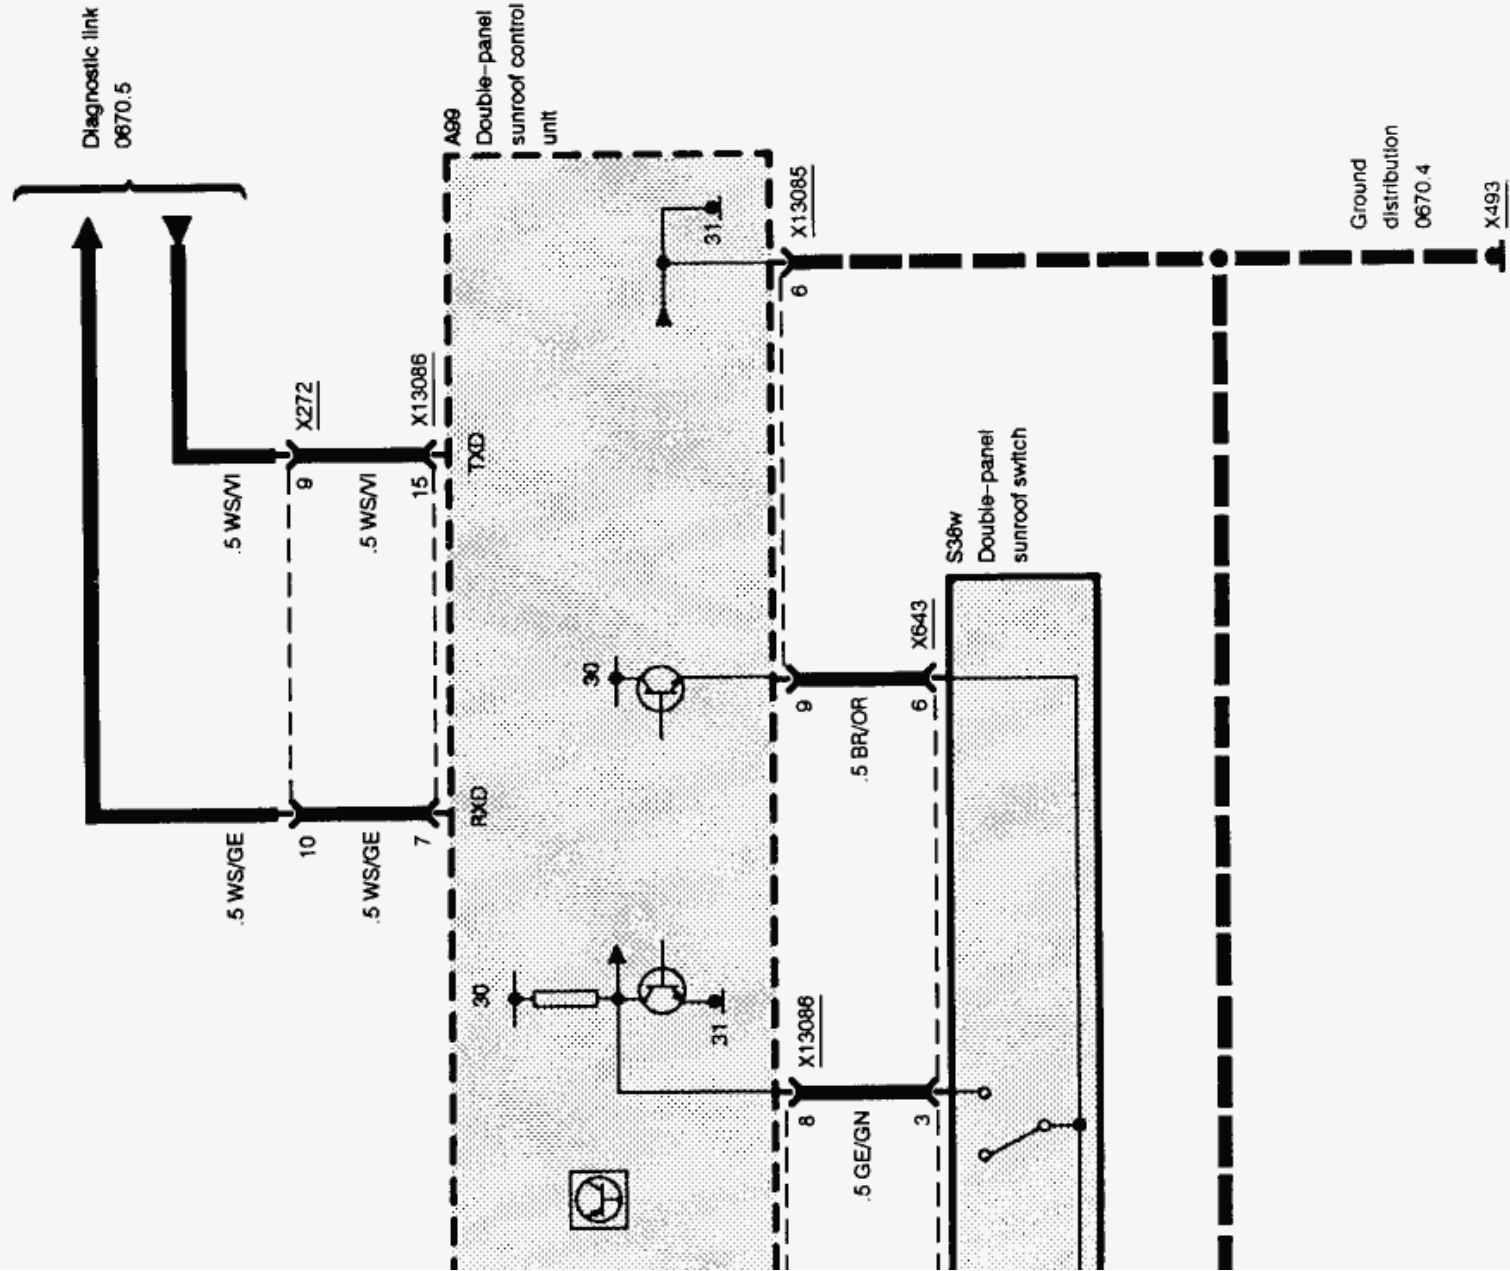





# Double-panel sunroof (ZVM)

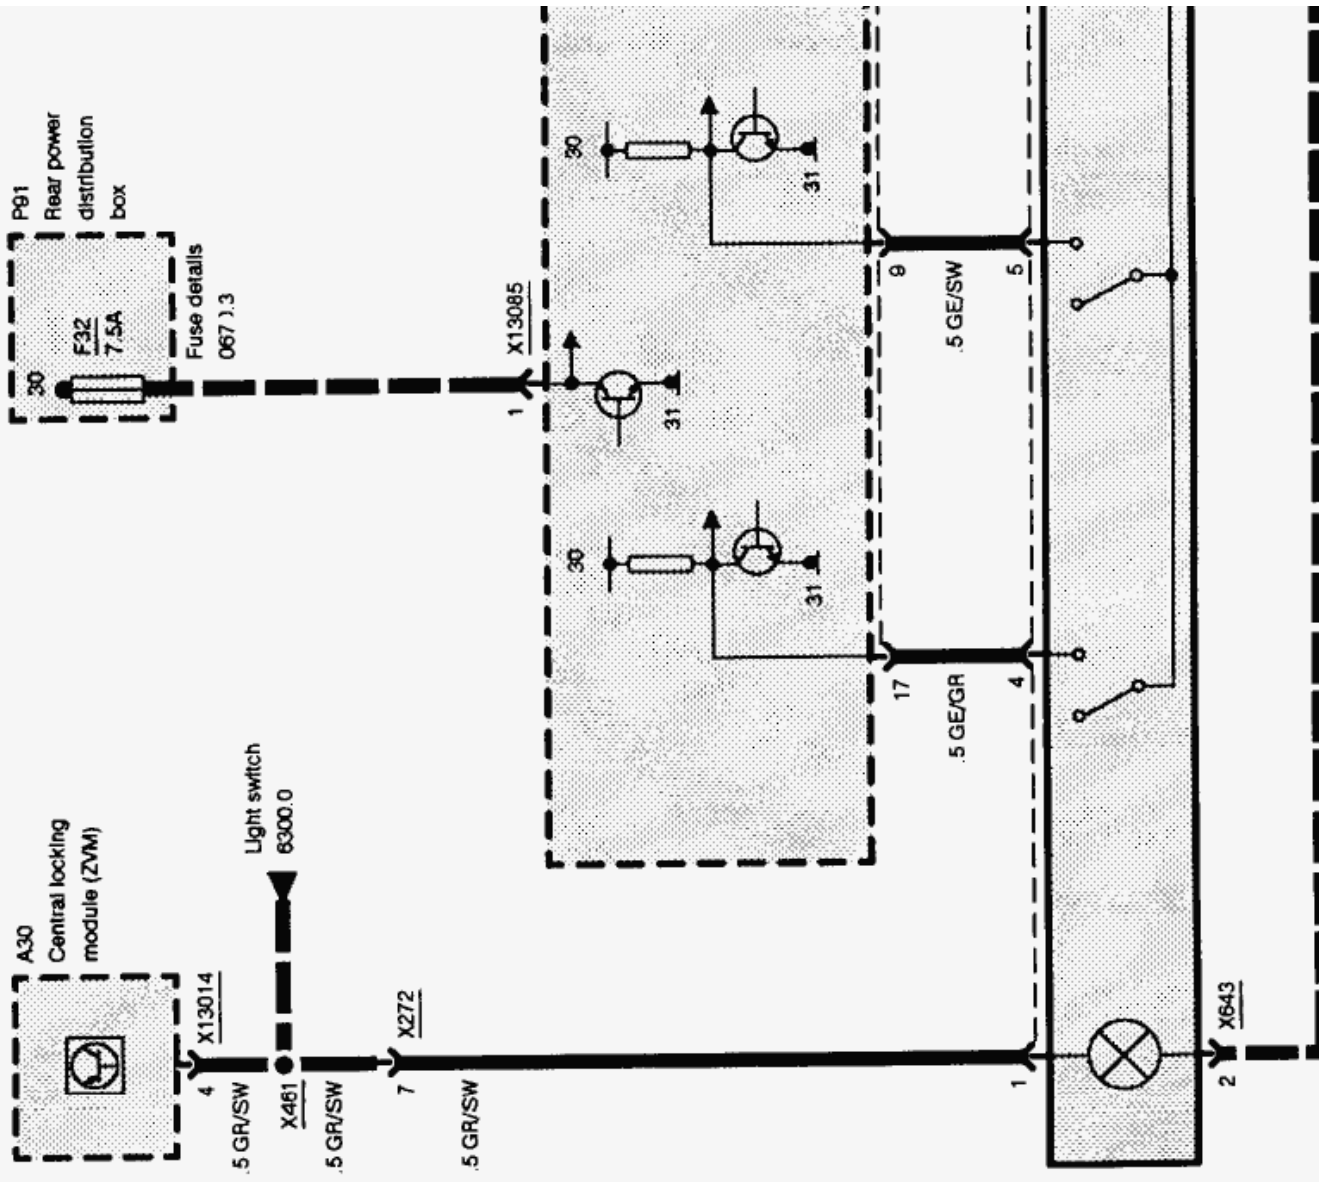

# Touring

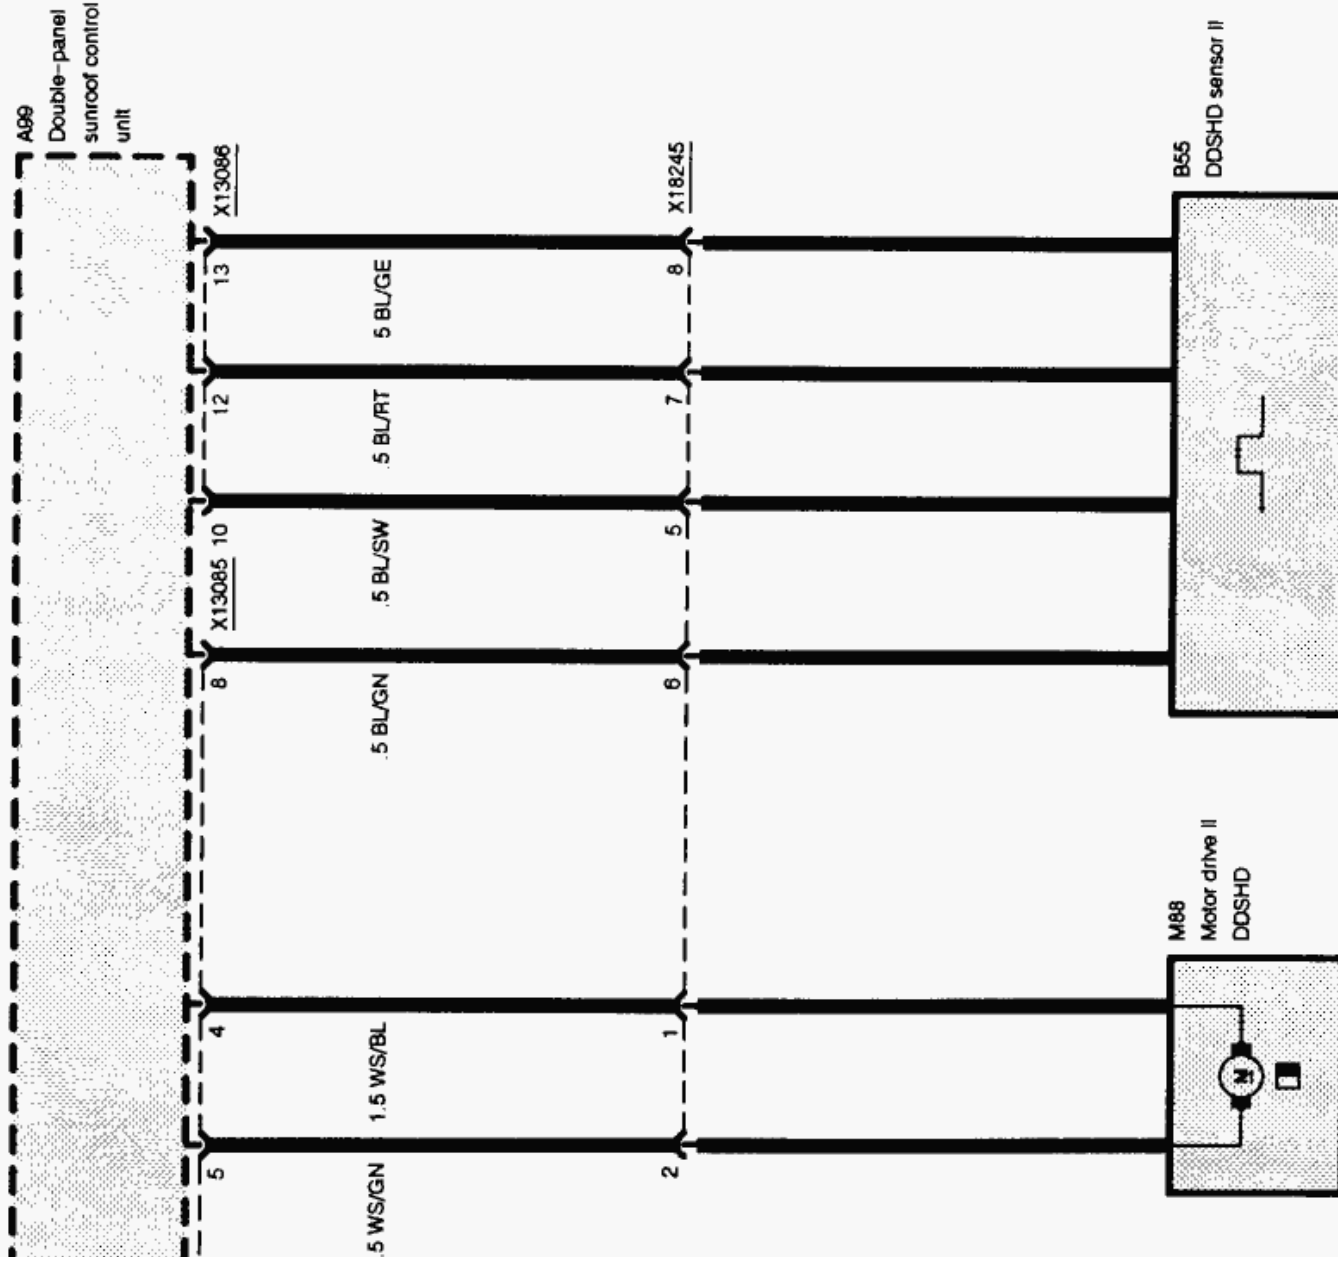


# Double-panel sunroof (ZVM)

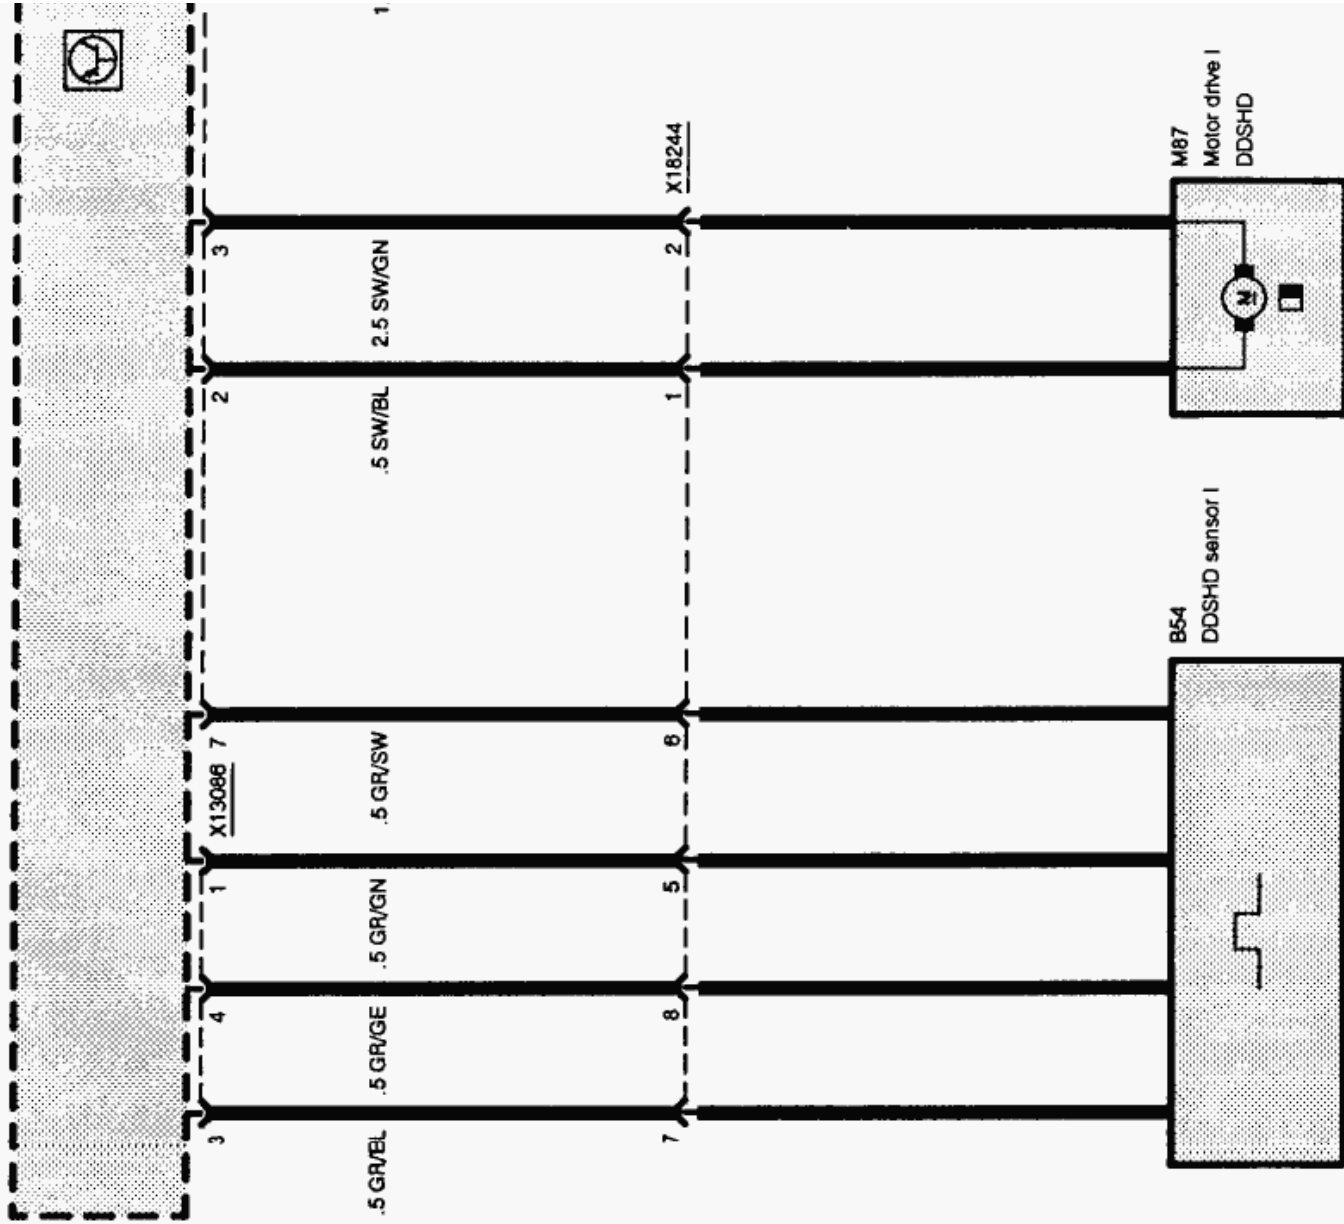



# Infrared locking system (IR)

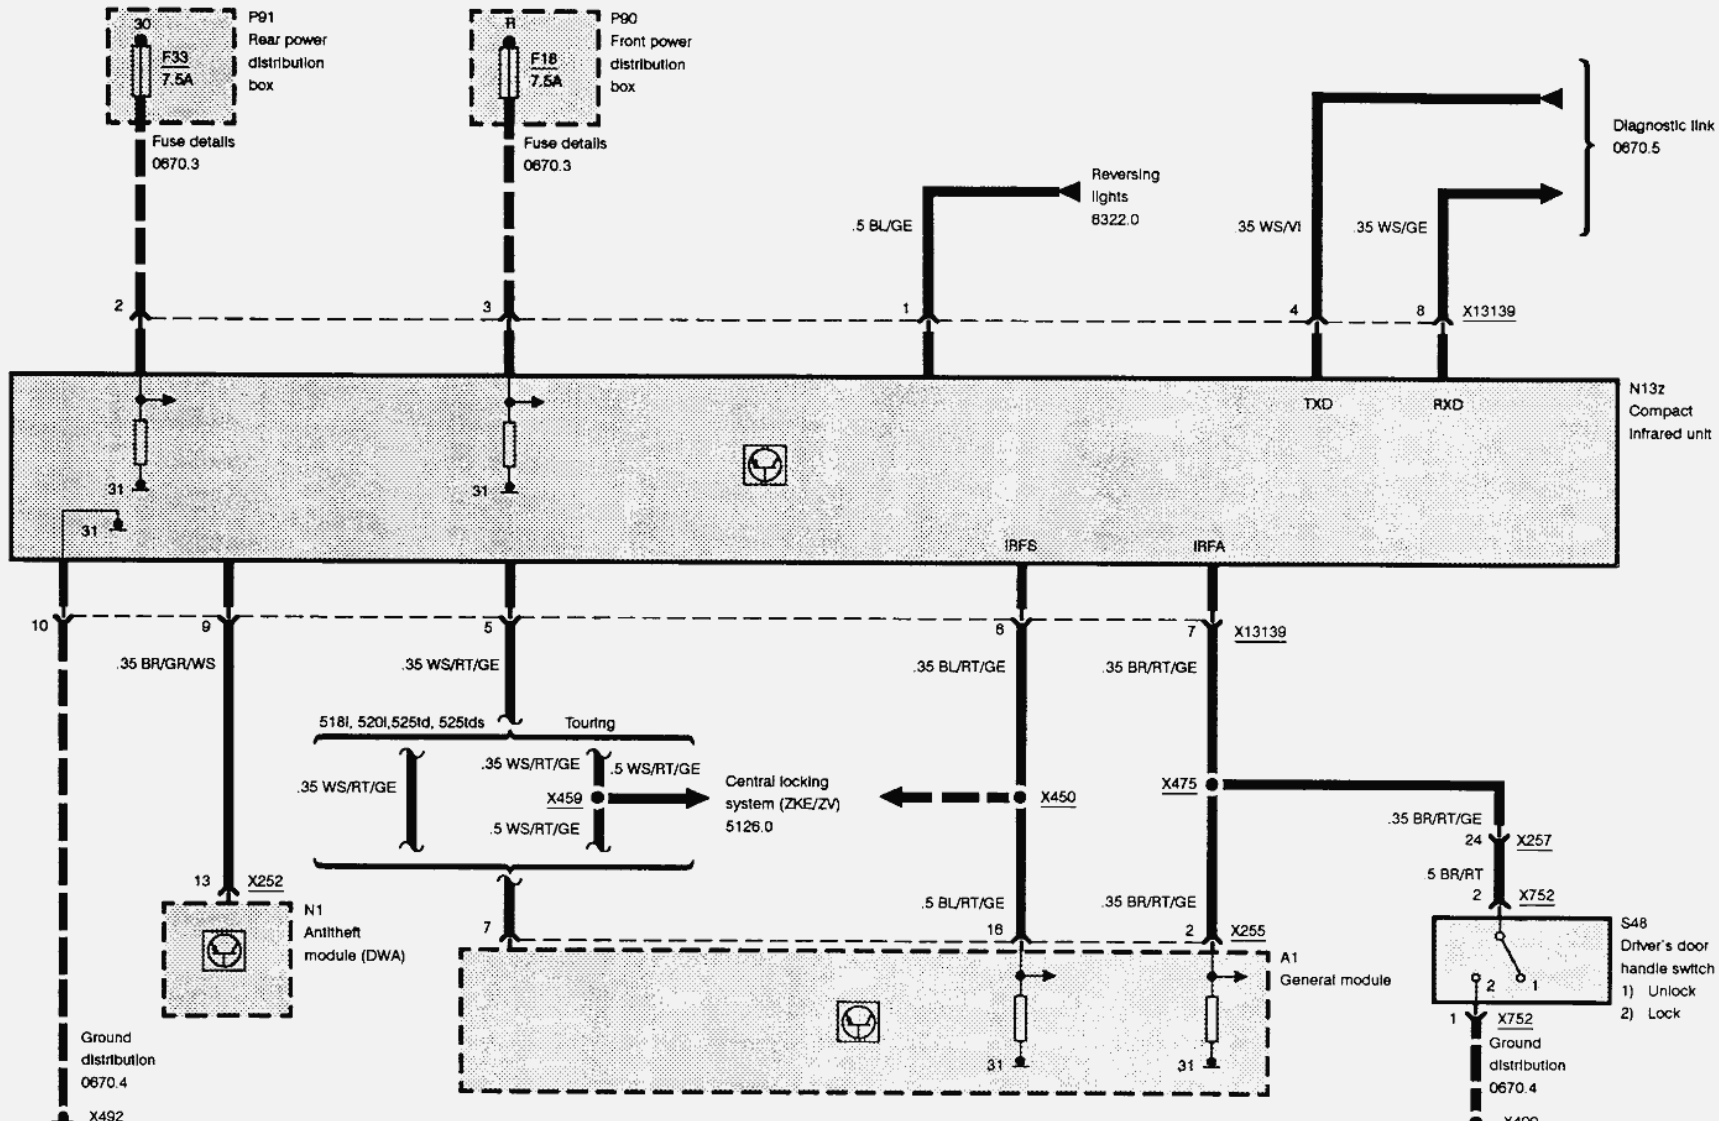

09/93

6610.0-00

195



**BMWAG****Electrical troubleshooting manual****5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994****Component location chart**

Scheme 7000.0

**BMW Component location chart**

<b>Com- ponent</b>	<b>Name</b>	<b>Location</b>	<b>Page - Fig. 7100.0 8500.0</b>
A1	General module	Under LH side of rear seat in rear power distributor box	00-3
A5	Relay module	Under LH side of rear seat in rear power distributor box	00-3
A6	Trailer module (AHM)	In rear LH side of glove compartment	
A7	ABS control unit	Rear RH side of engine compartment in electronics box	00-1
A8	Cruise control module	Rear RH side of engine compartment in electronics box	00-1
A11	Automatic climate control module (IHKA)	Between front footwell ahead of IHKA housing	
A12	Airbag diagnostic module	Under LH side of dash	19-1
A14	Independent heating/ventilation control unit	In RH side of luggage compartment	25-3
A15	Relay box independent heating/independent ventilation	Behind RH footwell speaker trim cover	
A17	Servotronic control unit	Behind LH footwell speaker trim cover	
A18	Hifi amplifier	In rear LH side of glove compartment	27-1
A18	Hifi amplifier	In rear LH side of glove compartment	27-2
A28	Wipe/wash module	Under LH side of rear seat in power distribution box with ZVM	21-3
A2w	Instrument cluster	LH side of dash behind steering wheel	
A30	Central locking module (ZVM)	Under LH side of rear seat in power distribution box with ZVM	21 -3
A32	Heating control unit	Centre of dash on RH side of heater control panel	
A36	Rear wipe/wash interval control unit	RH side of loading area	27-3
A59	Diode module	Rear LH side of engine compartment in power distribution box	04-3
A81	Parking aid control unit	In LH side of luggage compartment	
A82	Sun shade control unit	Under rear window shelf	
A84	Servo relay module	RH side of loading area behind side panel	
A99	Double-panel sunroof control unit	In head lining	26-1

A113	Electronic seat control	Under passenger's seat	
A22z	Electrochromatic rear view mirror	In windscreen header	
A32w	Temperature regulator automatic heating control 3 (IHRF3)	Centre of dash on RH side of heater control panel	
A400	Fuse box 1 (red)	In RH side of luggage compartment	29-1
A401	Fuse box 2 (blue)	In RH side of luggage compartment	29-1
A417	AUC control unit	Behind LH footwell speaker trim cover	
A87w	Automatic climate control unit 3 (IHKR/ F3)	LH side of RH footwell	17-3
A2019	DDE2 control unit	Rear RH side of engine compartment in electronics box	00-2
A2154	EGS control unit	Rear RH side of engine compartment in electronics box	
A6000	DME control unit	Rear RH side of engine compartment in electronics box (525i)	00-1
A7000	EGS control unit	In electronics box	11 -1
A8500	EGS control unit	In electronics box	11 -1
A8550	EGS control unit	In electronics box	11 -1
B1	Front right ABS sensor	Behind RH front wheel	
B2	Front left ABS sensor	Behind LH front wheel	14-1
B3	Rear right ABS sensor	Behind RH rear wheel	14-2
B4	Rear left ABS sensor	Behind LH rear wheel	
B6	Immersion tube sensor	In RH side of luggage compartment	25-1
B10	Speedometer reed contact	Under rear of vehicle	14-3
B11	Left heat exchanger sensor	On LH IHKR/F3 housing	17-1
B12	Right heat exchanger sensor	LH side of RH footwell	17-3
B13	Outside temperature sensor	Rear LH side of engine compartment	04-2
B14	Evaporator sensor	On LH IHKR/F3 housing	17-1
B15	Electrohydraulic converter of servotronic	Front LH side of engine compartment	
B16	Front left brake pad sensor	On LH front wheel, above brake calliper	14-1
B17	Rear right brake pad sensor	On RH front wheel, above brake calliper	14-2
B18	Brake fluid level switch	LH side of engine compartment	08-2
B21	On-board computer temperature sensor	Under front RH bumper	12-2
B26	Left footwell sensor	Above LH footwell-dash	
B27	Right footwell sensor	Above RH footwell-dash	
B28	Gradient monitor (DWA)	In front LH side of luggage compartment	
B34	Rear left converter	In LH side of rear bumper	
B35	Rear centre left converter	In LH side of rear bumper	
B36	Rear centre right converter	In RH side of rear bumper	
B37	Rear right converter	In RH side of rear bumper	
B54	DDSHD sensor I	In head lining	
B55	DDSHD sensor II	In head lining	26-1
B8y	Pressure switch	Front RH side of engine compartment ahead of wheel well	

B9y	Pressure switch	Front RH side of engine compartment ahead of wheel well	
B414	AUC sensor	Centre of dash	
B900	Jumper	Rear LH side of engine compartment in front power distributor	
B2009	Remote thermometer sensor	Front of engine on thermostat housing (525td/t, 525tds/t)	
B2011	Solenoid valve, injection timing device	LH side of engine (525td/t, 525tds/t)	
B2012	Charge air temperature sensor	LH side of engine (525td/t, 525tds/t)	
B2013	Engine speed sensor	LH side of engine (525td/t, 525tds/t)	
B2014	Charge pressure sensor	LH side of engine compartment ahead of LH spring start dome (525td/t, 525tds/t)	
B2015	Coolant temperature sensor	LH side of engine (525td/t, 525tds/t)	
B2016	Water level sensor Fuel filter	Front LH side of engine compartment (525td/t, 525tds/t)	
B2017	Changeover valve for exhaust gas recirculation (AGR)	LH side of engine compartment (525td/t, 525tds/t)	
B6200	Heated oxygen sensor	Under centre of car on catalytic converter	
B6203	Crankshaft sensor	RH front of engine	
B6204	Camshaft sensor	RH front of engine	
B6205	Intake air temperature sensor	Front of engine on thermostat housing (520i/t)	07-1
B6205	Intake air temperature sensor	Near throttle valve housing (518i/t)	08-3
B6208	Camshaft control	Front of engine	
B6209	Hall sensor, camshaft	Front of engine	08-1
B6217	Hot film air mass meter	Front top of engine	
B6231	Oil pressure switch	Front of engine compartment below intake manifold (5181)	06-1
B6231	Oil pressure switch	Front of engine	08-1
B6232	Remote thermometer sensor	On front LH side of engine (520i/t)	08-1
B6233	Air flow meter	Front LH side of engine compartment (518i)	
B6236	Coolant temperature sensor	Front of engine	08-1
B6241	Knock sensor 1 (cyl. 1 and 2)	LH side of engine	
B6242	Knock sensor 2 (cyl. 3 and 4)	LH side of engine	
B9508	Pressure switch	Front RH side of engine compartment	11 -3
C101	Volute spring	On steering wheel	13-1
C900	Lockout relay	In top of RH C-post	15-3
D100	Diagnostic connector	Rear LH side of engine compartment	04-1
D100	Diagnostic connector	Rear LH side of engine compartment (525td/t, 525tds/t)	12-1
E9	Rear window defogger I	In rear window	
E10	Rear defogger/antenna	In rear window	
E11	Left high beam		
E12	Right high beam		



E13	Left headlight		
E14	Right headlight		
E15	Left parking light		
E16	Left tail light	Rear of car left	
E17	Right tail light	Rear of car right	
E19	Right parking light		
E26	Left fog light		
E27	Right fog light		
E28	Front cigar lighter	Centre console	
E29	Front cigar lighter light	Centre console	
E33	Rear lid lamp	Underside of rear lid	
E34	Interior/reading lamp, front	In windscreen header	
E35	Driver's make-up mirror light	In windscreen header	
E36	Passenger's make-up mirror light	In windscreen header	
E39	Interior light, left rear	In top of LH C-post	15-1
E40	Interior light, right rear	In top of RH C-post	
E42	Glove compartment light	Right of glove compartment top	
E43	Left licence plate light	Underside of rear lid	
E44	Right licence plate light	Underside of rear lid	
E45	Cassette player lights	Centre of dash	
E46	Left rear lid light	In rear lid	
E47	Right rear lid light	In rear lid	
E48	Door lock heating	Driver's door next to door lock	
E50	Independent heating	Rear RH side of engine compartment	
E51	Left windscreen washer jet heater	Underside of front lid	12-3
E52	Right windscreen washer jet heater	Underside of front lid	12-3
E56	Driver's backrest heating	In bottom of LH backrest	
E57	Driver's seat heating	Driver's seat	
E58	Passenger's seat heating	Passenger's seat	
E59	Passenger's backrest heating	In bottom of RH backrest	
E41y	Mixing actuator	Centre of dash	
E45y	Cassette box light	Centre of dash	
E2000	Fuel heating	Rear LH side of engine compartment (525td/t, 525tds/t)	
F51	Fuse (25A)	In RH side of luggage compartment	25-3
F52	Fuse (10A)	In RH side of luggage compartment	25-3
F53	Fuse (15A)	In RH side of luggage compartment	25-2
F98	Fuse link (80A)	RH side of engine compartment	
G1	Battery	Under LH side of rear seat (520i/t)	21 -2
G1	Battery	Front RH side of engine compartment (518i/t)	
G3	Auxiliary battery	In RH side of luggage compartment	25-2
G5	Driver's airbag gas generator	On steering wheel	13-1

G6	Passenger's airbag gas generator 1	RH side of dash	
G2023	Alternator	LH bottom of engine compartment (525td/t, 525tds/t)	
G6430	B + external start terminal point	Rear RH side of engine compartment	01-3
G6509	Alternator	LH side of engine	06-1
H1	Antitheft horn (DWA)	Rear LH side of engine compartment	04-2
H2	Left horn	Front LH side of engine compartment	13-2
H3	Right horn	Front RH side of engine compartment	13-2
H4	Front right flasher unit		
H5	Rear right flasher unit		
H6	Rear left flasher unit		
H7	Front left flasher unit		
H8	Front right auxiliary flasher unit		
H9	Front left auxiliary flasher unit		
H10	Gong I	LH footwell	19-2
H24	Left brake light	LH side of body rear end	
H25	Tail light, left	LH side of body rear end	
H26	Left rear fog light	LH side of body rear end	
H27	Left reversing light	LH side of body rear end	
H28	Right reversing light	RH side of body rear end	
H29	Right rear fog light	RH side of body rear end	
H30	Tail light, right	RH side of body rear end	
H31	Right brake light	RH side of body rear end	
H34	Raised brake light	Rear parcel shelf	
H40	Parking aid speaker	Rear parcel shelf right	
H50	Right front high range speaker	Passenger's door	
H51	Right front low range speaker	Behind RH footwell speaker cover	
H52	Right rear low range speaker	Under rear window shelf	
H53	Right rear high range speaker	Under rear window shelf	
H54	Right front mid-range speaker	Passenger's door	
H55	Left front mid-range speaker	Driver's door	
H56	Left rear high range speaker	Under rear window shelf	
H57	Left rear low range speaker	Under rear window shelf	
H58	Left front low range speaker	Behind LH footwell speaker cover	
H59	Left front high range speaker	Ahead of LH front door	
H90	Left trunk light	In front LH side of luggage compartment	
H91	Right luggage compartment lamp	In RH side of luggage compartment	
H550	Roof sign light	Roof	
H553	Indicator lamp for roof sign light	Centre of dash	
K1	Starter relay	Rear LH side of engine compartment in power distribution box	05-1
K2	Horn relay	Rear LH side of engine compartment in power distribution box	05-1

K3	Unloader relay terminal R	Rear LH side of engine compartment in power distribution box	05-2
K4	Heating blower relay	Rear LH side of engine compartment in power distribution box	05-2
K5	Washer pump relay Intensive wash	Rear LH side of engine compartment in front power distributor	
K9	Unloader relay terminal 15	Rear LH side of engine compartment in power distribution box	05-2
K11	Wiper relay	Under LH side of rear seat in rear power distributor box	20-3
K13	Rear defogger relay	Under LH side of rear seat in rear power distributor box	20-3
K14	Auxiliary battery isolating relay	In RH side of luggage compartment	25-2
K15	General module safety relay	Under LH side of rear seat in rear power distributor box	20-3
K16	Hazard flasher relay	Rear LH side of engine compartment in power distribution box	05-2
K19	A/C compressor relay	Rear LH side of engine compartment in power distribution box	05-1
K21	Auxiliary fan stage 1 relay	In auxiliary relay box, LH side of engine compartment	05-3
K22	Auxiliary fan stage 2 relay	Rear LH side of engine compartment in power distribution box (518i/t)	05-1
K22	Auxiliary fan stage 2 relay	In auxiliary relay box, LH side of engine compartment (520i/t)	05-3
K25	Right parking light/licence plate light relay	Under LH side of dash near front lid release lever	
K26	Left parking light relay	Under LH side of dash near front lid release lever	
K33	A/C system relay	In auxiliary relay box, LH side of engine compartment with IHKA	
K44	Reverse polarity relay	Under LH side of rear seat	
K46	High beam relay	Rear LH side of engine compartment in power distribution box	04-3
K47	Fog light relay	Rear LH side of engine compartment in power distribution box	04-3
K48	Headlight relay	Rear LH side of engine compartment in power distribution box	04-3
K54	Door lock heating relay	Under LH side of rear seat in power distribution box	21-3
K61	Unloader relay Term.61	Rear LH side of engine compartment in power distribution box	05-1
K62	Independent heating relay	In front RH side of glove compartment	
K70	ZV, rear lid motor relay	RH side of loading area	27-3
K78	Comfort relay	Under LH side of rear seat in power distribution box	
K79	Fog light relay	Under LH side of dash	
K80	Sweden/Canada coding plug	Under LH side of dash	

K87	Electrical steering column adjustment relay	Under LH side of dash	
K8b	Water pump relay	Rear LH side of engine compartment in power distribution box	05-1
K90	Window motor relay	RH side of loading area	27-3
K91	Horn relay on-board computer	RH side of loading area behind side panel	
K92	Rear wiper relay II	RH side of loading area behind side panel	
K551	Alarm system relay	In RH side of luggage compartment	29-1
K552	Light relay	In RH side of luggage compartment	29-2
K554	Roof sign light relay	In RH side of luggage compartment	29-2
K555	Horn relay	In RH side of luggage compartment	29-1
K2000	Heater plug relay	Rear RH side of engine compartment in electronics box (525td/t, 525tds/t)	
K2002	Feed pump relay	Rear RH side of engine compartment in electronics box (525td/t, 525tds/t)	10-2
K2003	DDE relay	Rear RH side of engine compartment in electronics box (525td/t, 525tds/t)	10-2
K6300	DME relay	Rear RH side of engine compartment in electronics box	10-1
K6301	Electrical fuel pump relay	Rear RH side of engine compartment in electronics box	10-3
K6303	Oxygen sensor relay	Rear RH side of engine compartment in electronics box	10-1
M2	Fuel pump (EKP I)	In RH side of luggage compartment	25-1
M3	Wiper motor	Under LH fresh air trim	13-3
M4	Washer pump	Front RH side of engine compartment on washer fluid reservoir	
M5	Intensive washer pump	Front RH side of engine compartment on washer fluid reservoir	
M7	Headlight washer pump	Front RH side of engine compartment near windscreen washer reservoir	
M9	Auxiliary fan motor	Vehicle front, behind grille	13-2
M9	Auxiliary fan motor	Vehicle front, behind grille	
M12	Central locking (ZV) drive driver's door	Driver's door	24-1
M13	Central locking (ZV) drive passenger's door	Passenger's door	24-3
M14	Central locking drive rear right	In RH rear door	
M15	Central locking drive rear left	In RH rear door	
M16	ZV drive tank flap	In RH side of luggage compartment	28-1
M17	Central locking drive rear lid	Underside of rear lid	26-2
M20	Power window motor, rear left	In LH rear door	
M21	Driver's window motor	Driver's door	24-2
M22	Power window motor, rear right	In RH rear door	
M23	Passenger's window motor	Inside under cover of RH frame side member	
M24	Sun roof motor	In windscreen header near rear view mirror	15-2

M24	Sun roof motor	In windscreen header near rear view mirror	16-3
M25	Cruise control actuator (Tempomat)	LH side of engine compartment ahead of LH spring strut dome	06-3
M30	Blower motor	Rear LH side of engine compartment	04-2
M31	Left footwell flap motor	RH side of LH footwell	
M32	Right footwell flap motor	RH side of dash on RH side of IHKA housing	
M33	Right ventilation flap motor	RH side of dash on RH side of IHKA housing	
M34	Right mixing flap motor	LH side of RH footwell	17-3
M35	Defroster flap motor	Under LH side of dash on LH IHKR/F3 housing	
M36	Fresh air flap motor	On LH IHKR/F3 housing	17-1
M36	Fresh air flap motor	On LH side of IHKA housing	
M38	Left ventilation flap motor	Under LH side of dash on LH side of IHKA housing	
M39	Left mixing flap motor	LH side of dash on LH side of IHKA housing	
M40	Circulation air flap motor	On LH IHKR/F3 housing	17-1
M40	Circulation air flap motor	On LH side of IHKA housing	
M41	Footwell/rear compartment actuator motor	RH side of LH footwell	
M50	Driver's seat cushion tilt motor	Driver's seat	22-2
M51	Driver's seat movement motor	Driver's seat	22-2
M52	Driver's seat height adjustment motor	Driver's seat	22-2
M53	Driver's backrest recliner motor	Driver's seat	22-2
M54	Driver's headrest motor	In top of LH backrest	
M55	Driver's seat lumbar support motor	Under LH front seat	
M56	Passenger's seat lumbar support motor	Passenger's seat	
M57	Passenger's headrest motor	In top of RH backrest	
M58	Passenger's backrest recliner motor	Passenger's seat	
M59	Passenger's seat height adjustment motor	Passenger's seat	
M60	Passenger's seat movement motor	Passenger's seat	
M61	Passenger's seat cushion tilt motor	Passenger's seat	
M65	Driver's thigh support motor	Driver's seat	22-2
M66	Passenger's thigh support motor	Passenger's seat	
M74	Sun shades motor	Rear parcel shelf	
M80	Left headlight beam angle adjust actuator	Near front LH headlight	

M81	Right headlight beam angle adjust actuator	Near front RH headlight	
M82	Steering column adjustment motor	Bottom of steering column	17-2
M87	Motor drive I DDSHD	In head lining	
M88	Motor drive II DDSHD	In head lining	26-1
M94	Rear wiper motor	Rear loading area on rear lid behind trim	
M95	Rear washer pump	RH side of loading area behind side panel	28-2
M96	Rear window servo opening motor	In rear lid	26-3
M97	Rear lid servo opening motor	In rear lid	26-3
M37a	Auxiliary water pump	Rear LH side of engine compartment (518i/t)	04-1
M37b	Auxiliary water pump	Rear LH side of engine compartment (525td/t, 525tds/t)	12-1
M2025	Starter	LH side of engine (525td/t, 525tds/t)	
M6510	Starter	LH side of engine (518i/t) (520i/t)	
N1	Antitheft module (DWA)	Under LH side of rear seat	
N2	Output stage	LH side of RH footwell	
N3	Dimmer	LH side of dash	
N4	On-board computer	Centre of dash	
N6	Headlight washer module (SRA)	In auxiliary relay box, LH side of engine compartment	05-3
N8	AM/FM antenna amplifier	In top of LH C-post	15-1
N9	Radio	Centre of dash	
N10	Multi-function clock	Centre of dash	
N17	Crash alarm sensor	Rear LH side of engine compartment in power distribution box	04-3
N20	Radio receiver	In front LH side of luggage compartment	
N22	CD changer	In luggage compartment	27-2
N50	Clock	Centre of dash	
N13z	Compact infrared unit	Under LH side of rear seat in power distribution box	20-2
N404	Diversity	In top of LH C-post	
N444	FM amplifier HLO	In top of LH C-post	
N550	Pulse adaptor speedometer	Behind dash	
N551	Taximeter	Centre of dash	
P90	Front power distribution box	Rear LH side of engine compartment	01 -3
P91	Rear power distribution box	Under LH side of rear seat	
P92	Auxiliary relay box	LH side of engine compartment	06-3
P96	Auxiliary fuse box in luggage compartment	Below RH luggage compartment trim panel	
R1	Temperature distribution potentiometer	RH side of LH footwell	
R10	Pedal value sensor	Behind accelerator pedal	18-1
R11	Blower ballast resistor	On LH IHKR/F3 housing	17-1
R13	Headlight beam angle adjust potentiometer	Behind LH side of dash	

R21	Rear left door DWA conductor loop	In LH rear door	
R22	Rear right door DWA conductor loop	In RH rear door	
R6240	Resistor	Top centre of engine	11-2
R6252	Throttle potentiometer	Front of engine	
S2	Ignition switch	Top of steering column behind steering wheel	
S3	Gear selector lever switch	Centre console	16-2
S4	Horn switch	Top of steering column	
S5	Windscreen wiper switch	Top of steering column	
S7	Turn indicator/low beam selector	Top of steering column	
S8	Light switch	LH side of dash	
S9	Light switch	LH side of dash	
S10	Fog light switch	LH side of dash	
S13	Passenger's door contact switch	Ahead of RH rear door	
S14	Driver's door contact switch	Ahead of LH rear door	
S15	Rear RH door contact switch	Rear right door post	
S16	Rear LH door contact switch	LH rear door jamb	
S17	Driver's power mirror switch	Driver's door	
S18	Hazard warning switch	Centre console bottom	
S20	Antitheft (DWA) radio microswitch	Centre of dash	
S21	Front lid microswitch	Rear LH side of engine compartment behind LH spring strut dome	
S22	Battery microswitch (DWA)	Under RH side of rear seat near battery	
S24	Rear seat microswitch (DWA)	Under RH side of rear seat	
S26	IHKA operating switch	Centre of dash	
S27	Inertia switch	Under LH side of rear seat	21 -1
S28	Cruise control switch	Top of steering column	
S30	Brake light switch	On brake pedal support bracket	18-1
S31	Handbrake switch	Centre console	
S32	Clutch switch	On clutch pedal support bracket	18-1
S36	Dual temperature switch 91 °/990	RH top of radiator	09-1
S37	Glove compartment light switch	Left of glove compartment	16-1
S38	Sunroof switch (SHD)	In windscreen header near rear view mirror	16-3
S39	Sunroof position sensor (SHD)	In windscreen header near rear view mirror	15-2
S40	Power window switch (centre console)	Centre console	
S41	Rear left power window switch	In LH rear door	
S42	Rear right power window switch	In RH rear door	
S43	Driver's window end position sensor	Driver's door behind trim	
S44	Passenger's window end position sensor	Passenger's door behind trim	
S45	Power window end position sensor, rear left	In LH rear door behind trim	

S46	Power window end position sensor, rear right	In RH rear door behind trim
S47	Driver's door lock switch	Driver's door behind door trim panel
S48	Driver's door handle switch	Driver's door behind door trim panel
S49	Passenger's door lock switch	Passenger's door
S51	Driver's seat adjustment switch	Driver's seat
S52	Driver's lumbar support switch	Driver's seat
S53	Driver's seat heating switch	Driver's seat
S54	Passenger's seat heating switch	Passenger's seat
S55	Passenger's lumbar support switch	Passenger's seat
S56	Passenger's seat adjustment switch	Passenger's seat
S58	Driver's seat belt buckle switch	In LH front seat belt buckle
S61	Rear lid light switch	Underside of rear lid left
S63	Coolant level switch	Under radiator
S64	Wash water level switch	Front RH side of engine compartment on washer fluid reservoir
S75	Blower switch	Centre of dash in centre of heater control panel
S76	Rear window heating switch	Centre of dash
S77	Driver's make-up mirror switch	Above LH sun visor
S78	Passenger's make-up mirror switch	Above RH sun visor
S92	Reversing light switch (manual transmission)	Below centre console
S93	Switch for driver's seat thigh support	Driver's seat
S94	Switch for passenger's seat thigh support	Passenger's seat
S99	Passenger's window monitoring switch (DWA)	Passenger's door
S100	Driver's window monitoring switch (DWA)	Driver's door
S101	Rear right window monitoring switch (DWA)	In RH rear door
S102	Rear left window monitoring switch (DWA)	In LH rear door
S110	Sun shades switch	Centre of console
S147	Rear window opening switch	On rear lid
S148	DWA conductor loop, rear left side window	In LH rear door
S149	DWA conductor loop, rear right side window	In RH rear door
S167	Rear lid lock switch	On rear lid
S170	Rear window servo opening switch	On rear lid



S171	Rear window servo opening switch	On rear lid	
S172	Rear lid switch	On rear lid	
S198	Thermal switch, heated jets	Front LH side of engine compartment	
S38w	Double-panel sunroof switch	In windscreen header near rear view mirror	16-3
S551	Roof sign light switch	Centre of dash	
S552	Alarm sensor ON	LH side of dash	
S553	Alarm sensor OFF	LH side of dash	
S119z	Steering column adjustment switch	LH side of dash	
S134w	IHKR/F3 Operating panel	Centre of dash	
S135w	IHKR/F3 switch unit	Centre of dash	
S2000	Temperature switch, radiator shutter	Front of engine on thermostat housing	
S2001	Changeover valve radiator shutter	LH side of engine compartment	
S2138	A/C fan II switch	RH side of engine compartment	
S2156	Temperature switch, radiator shutter	Rear RH side of engine compartment in electronics box	
S8503	Program switch	Centre console	
S8507	Kick-down switch	Behind accelerator pedal	
T6150	Ignition coil	Rear RH side of engine compartment (518i/t)	
T6151	Ignition coil 1	RH side of engine (520i/t)	07-2
T6152	Ignition coil 2	RH side of engine (520i/t)	07-2
T6153	Ignition coil 3	RH side of engine (520i/t)	07-2
T6154	Ignition coil 4	RH side of engine (520i/t)	07-2
T6155	Ignition coil 5	RH side of engine (520i/t)	07-2
T6156	Ignition coil 6	RH side of engine (520i/t)	07-2
U2	Telephone C-network	In front LH side of luggage compartment	
V4	Daytime light coding diodes	Behind LH side of dash	
V5	Antitheft (DWA) LED	Centre of console	
V6	Decoupling diode	RH side of dash behind glove compartment	
XO	B + terminal point	Under LH side of dash	01 -2
X1	B+ terminal point	Rear LH side of engine compartment Front power distribution box, P90	01-3
X2	B + terminal point	Rear LH side of engine compartment Front power distribution box, P90	01 -3
X3	B + terminal point	Rear LH side of engine compartment Front power distribution box, P90	01 -3
X11	Connector (35-Pins, Natural)	Rear RH side of engine compartment in electronics box	00-3
X13	Connector (21-Pins, White)	Under LH side of dash	18-3 01-3
X14	Connector (30-Pins, Yellow)	Under LH side of dash	18-3 00-4
X15	Connector (30-Pins, White)	LH footwell	19-1 00-4
X16	Connector (26-Pins, Yellow)	Rear of A2w instrument cluster	20-1 01 -1

X20	Connector (25-Pins, Black)	Rear LH side of engine compartment	04-1 03-4
X20	Connector (25-Pins, Black)	Rear LH side of engine compartment	12-1 03-4
X22	Connector (26-Pins, Blue)	Rear RH side of engine compartment in electronics box	01-1
X26	Connector (1-Pins, (—))	RH side of loading area behind side panel	
X31	Connector (12-Pins, Black)	LH side of engine compartment	08-2 01-6
X32	Connector (12-Pins, White)	LH footwell	19-3 07-3
X33	Connector (12-Pins, Black)	LH footwell	19-3 06-4
X34	Connector (12-Pins, White)	LH footwell	19-1 07-3
X35	Connector (21-Pins, Black)	LH footwell	19-1 01-3
X43	Connector (9-Pins, Black)	Rear LH side of engine compartment in front power distributor	02-3
X44	Connector (9-Pins, Black)	Rear LH side of engine compartment in front power distributor	02-3
X45	Connector (9-Pins, Black)	Rear LH side of engine compartment in front power distributor	02-3
X50	Connector (9-Pins, Black)	In auxiliary relay box, LH side of engine compartment	02-3
X51	Connector (10-Pins, Black)	Rear LH side of engine compartment in front power distributor	15-2
X52	Connector (9-Pins, Black)	In auxiliary relay box, LH side of engine compartment	02-3
X53	Connector (9-Pins, Black)	Rear LH side of engine compartment in front power distributor	02-3
X55	Connector (9-Pins, Black)	Rear LH side of engine compartment in front power distributor	02-3
X56	Connector (10-Pins, Black)	Rear LH side of engine compartment in front power distributor	15-2
X57	Connector (9-Pins, Black)	Rear LH side of engine compartment in front power distributor	02-3
X58	Connector (9-Pins, Black)	Rear LH side of engine compartment in front power distributor	02-3
X61	Connector (9-Pins, Black)	LH side of engine compartment in auxiliary relay box, LH side of engine compartment	05-3 02-3
X63	Connector (9-Pins, Black)	Rear LH side of engine compartment in front power distributor	02-3
X64	Connector (9-Pins, Black)	Rear LH side of engine compartment in front power distributor	02-3
X65	Connector (9-Pins, Black)	Rear LH side of engine compartment in front power distributor	02-3
X69	Connector (25-Pins, White)	Rear LH side of engine compartment right of LH spring strut dome	12-1 03-4
X70	Connector (8-Pins, Black)	LH side of engine compartment ahead of LH spring strut dome	01-5
X72	Connector (8-Pins, White)	LH footwell	19-3 13-2
X73	Connector (8-Pins, Black)	In bottom of LH backrest	03-1
X74	Connector (12-Pins, Orange)	LH side of dash above footrest	18-2 08-2

X82	Connector (3-Pins, Black)	Vehicle front, behind grille	02-5
X83	Connector (9-Pins, Black)	Behind RH footwell speaker cover	02-3
X84	Connector (3-Pins, Yellow)	LH footwell	04-3
X85	Connector (3-Pins, Black)	LH side of engine compartment	01-4
X87	Connector (3-Pins, Black)	Front RH side of engine compartment near windscreen washer reservoir RH top of radiator	09-1 02-5
X88	Connector (2-Pins, Black)	Under LH side of dash left of steering column	
X105	Connector (2-Pins, Grey)	Underside of front lid	
X106	Connector (2-Pins, Grey)	Underside of front lid	
X107	Connector (2-Pins, Grey)	Front RH side of engine compartment on washer fluid reservoir	
X109	Connector (2-Pins, Black)	Front RH side of engine compartment on washer fluid reservoir	
X110	Connector (2-Pins, Grey)	Front RH side of engine compartment on washer fluid reservoir	
X111	Connector (2-Pins, Black)	LH side of engine compartment on break fluid reservoir	08-2
X112	Connector (2-Pins, Black)	Centre top of engine	
X113	Connector (2-Pins, Natural)	On base of spring strut dome	
X114	Connector (2-Pins, Black)	LH side of engine compartment	08-2
X116	Connector (4-Pins, Black)	LH side of dash on brake pedal support bracket	06-3
X118	Connector (2-Pins, Black)	Behind LH front wheel	14-1
X120	Connector (2-Pins, Black)	Behind LH front wheel	
X121	Connector (2-Pins, White)	LH footwell on clutch pedal support bracket	
X122	Connector (2-Pins, Black)	Rear LH side of engine compartment	
X123	Connector (2-Pins, Grey)	Front RH side of engine compartment near windscreen washer reservoir	
X126	Connector (2-Pins, White)	Front RH side of engine compartment ahead of wheel well	
X127	Connector (2-Pins, Black)	Front RH side of engine compartment ahead of wheel well	
X128	Connector (2-Pins, Black)	Front left flasher unit, H7	
X129	Connector (2-Pins, Grey)	Left parking light, E15	
X130	Connector (2-Pins, Yellow)	Left headlight, E13	
X131	Connector (2-Pins, White)	Left high beam, E11	
X132	Connector (2-Pins, Black)	Vehicle front, behind grille Left horn, H2	
X133	Connector (2-Pins, Black)	Vehicle front, behind grille Right horn, H3	
X134	Connector (2-Pins, White)	Right high beam, E12	
X135	Connector (2-Pins, Yellow)	Right headlight, E14	
X136	Connector (2-Pins, Grey)	Right parking light, E19	
X137	Connector (10-Pins, Black)	Front right flasher unit, H4	11-3
X138	Connector (2-Pins, Black)	Raised brake light, H34	

X163	Connector (3-Pins, Black)	Front RH side of engine compartment on A/C compressor	02-5
X165	Ground	LH side of dash	03-3
X166	Ground	Front RH side of engine compartment ahead of wheel well	02-1
X167	Ground	Front LH side of engine compartment	
X168	Connector (1-Pins, Black)	LH side of dash top of steering column	
X170	Case Ground	LH side of engine compartment below brake fluid reservoir	03-2
X175	Ground	Front LH side of engine compartment	
X179	Ground	Front RH side of engine compartment ahead of wheel well	02-1
X250	Ground	Underside of steering column	
X251	Connector (30-Pins, Black)	LH footwell	19-1 14-4
X252	Connector (26-Pins, Black)	Under LH side of rear seat	10-4
X253	Connector (26-Pins, Green)	Under LH side of rear seat in power distribution box	01-1
X254	Connector (26-Pins, White)	Under LH side of rear seat in power distribution box	01-1
X255	Connector (26-Pins, Yellow)	Under LH side of rear seat in power distribution box	01-1
X256	Connector (26-Pins, Black)	Ahead of RH front door	23-2 08-1
X257	Connector (26-Pins, Black)	LH A-pillar	23-2 08-1
X258	Connector (20-Pins, White)	Under LH side of rear seat in power distribution box	08-4
X259	Connector (20-Pins, Black)	Under LH side of rear seat in power distribution box	08-4
X269	Connector (6-Pins, Black)	Under LH side of rear seat	15-3
X272	Connector (12-Pins, Black)	Under LH side of rear seat in power distribution box	20-2 06-4
X273	Connector (12-Pins, Black)	Ahead of LH rear door in wire grommet	23-3 14-3
X274	Connector (12-Pins, Black)	Ahead of RH rear door in wire grommet	23-3 14-3
X275	Connector (12-Pins, White)	Driver's seat	23-1 07-2
X279	Connector (12-Pins, White)	Passenger's seat	07-2
X285	Connector (15-Pins, Blue)	In auxiliary relay box, LH side of engine compartment	12-3
X288	Connector (9-Pins, White)	Under LH side of rear seat in power distribution box	02-3
X292	Connector (9-Pins, White)	Under LH side of rear seat in power distribution box	02-3
X293	Connector (9-Pins, White)	Under LH side of rear seat in power distribution box	02-3
X294	Connector (9-Pins, White)	Under LH side of rear seat in power distribution box	02-3
X295	Connector (8-Pins, Black)	LH footwell	19-3 13-2
X300	Connector (26-Pins, Black)	In LH side of luggage compartment Parking aid control unit, A81	01-1

X311	Connector (6-Pins, Black)	Underside of rear lid	26-2 14-1
X312	Connector (6-Pins, Black)	In RH side of luggage compartment	14-1
X315	Connector (2-Pins, White)	Underside of rear lid	26-2
X316	Connector (6-Pins, White)	Power window switch (centre console), S40	05-5
X317	Connector (6-Pins, Black)	Power window switch (centre console), S40	05-4
X318	Connector (4-Pins, Black)	In rear LH side of glove compartment	06-3
X319	Connector (4-Pins, Black)	In rear LH side of glove compartment	06-3
X322	Connector (8-Pins, Black)	Under LH side of rear seat in power distribution box	20-2 13-2
X328	Connector (4-Pins, Black)	Underside of rear lid	26-2 06-3
X328	Connector (4-Pins, Black)	In rear lid	26-3 06-3
X329	Connector (4-Pins, Black)	Left rear lid light, E46	06-3
X331	Connector (5-Pins, Black)	Under LH side of rear seat in power distribution box	02-4
X332	Connector (5-Pins, Natural)	Under LH side of rear seat in power distribution box	03-2
X333	Connector (4-Pins, Black)	Under LH fresh air trim	13-3 08-6
X335	Connector (4-Pins, Black)	Under LH side of rear seat in power distribution box	02-6
X336	Connector (4-Pins, White)	Interior/reading lamp, front, E34	16-3 06-5
X337	Connector (4-Pins, Black)	Under LH side of rear seat	20-3 06-3
X338	Connector (4-Pins, Black)	In rear LH side of glove compartment Left tail light, E16	06-3
X339	Connector (4-Pins, Black)	In rear LH side of glove compartment Right tail light, E17	06-3
X342	Connector (4-Pins, White)	Above RH footwell speaker trim panel	19-3 06-3
X346	Connector (4-Pins, Black)	In rear LH side of glove compartment Left tail light, E16	06-5
X347	Connector (4-Pins, Black)	In rear LH side of glove compartment Right tail light, E17	06-5
X351	Connector (2-Pins, Black)	Ahead of RH rear door	
X352	Connector (2-Pins, Black)	Ahead of LH rear door	
X353	Connector (2-Pins, Black)	Rear RH door contact switch, S15	
X354	Connector (2-Pins, Black)	LH rear door jamb	
X355	Connector (3-Pins, White)	Interior light, right rear, E40	05-2
X356	Connector (4-Pins, Black)	In bottom of RH C-post	15-1 13-6
X362	Connector (2-Pins, Black)	Rear parcel shelf right	
X371	Connector (2-Pins, Black)	LH side of windscreen header	
X372	Connector (2-Pins, Grey)	Rear RH side of engine compartment	
X374	Connector (2-Pins, Black)	Under RH side of rear seat near battery	
X375	Connector (2-Pins, Black)	Under RH side of rear seat	
X376	Connector (2-Pins, White)	Under LH side of rear seat	21 -1
X377	Connector (1 -Pins, Natural)	Behind LH rear wheel	
X379	Connector (1 -Pins, Black)	In top of LH C-post	

X380	Connector (1-Pins, Brown)	In top of RH C-post	15-3
X381	Connector (2-Pins, Black)	Driver's make-up mirror light, E35	
X382	Connector (2-Pins, Black)	Passenger's make-up mirror light, E36	
X383	Connector (2-Pins, Yellow)	Under rear of vehicle near differential	14-3
X388	Connector (2-Pins, Black)	Under LH side of rear seat	
X389	Connector (2-Pins, Black)	Front left auxiliary flasher unit, H9	
X390	Connector (2-Pins, Black)	Behind RH footwell speaker trim cover	
X391	Connector (2-Pins, Black)	Centre console	
X393	Connector (6-Pins, Black)	In rear LH side of glove compartment	04-1
X400	Connector (8-Pins, Black)	In front LH side of luggage compartment	13-2
X401	Connector (1-Pins, Black)	Above LH sun visor	
X402	Connector (1 -Pins, Black)	Under roof centre panel	
X413	Connector (2-Pins, Black)	Rear parcel shelf	
X416	Connector (1-Pins, Black)	Above LH sun visor	
X417	Connector (1-Pins, Black)	Under roof centre panel	
X423	Connector (1-Pins, (—))	Centre console	
X424	Connector (1 -Pins, Brown)	In top of LH C-post	15-1
X490	Ground	LH side of dash	03-3
X491	Ground	LH side of dash	03-3
X492	Ground	Under RH side of rear seat near battery	02-3
X493	Ground	Under RH side of rear seat near battery	02-3
X495	Ground	Under RH side of rear seat	02-2
X496	Ground	Under RH side of rear seat	02-2
X501	Connector (26-Pins, Green)	Centre of dash	01-1
X502	Connector (26-Pins, Black)	LH side of dash behind steering wheel	01-1
X503	Connector (12-Pins, Black)	LH side of dash	05-6
X504	Connector (12-Pins, Black)	LH side of dash Fog light switch, S10	05-6
X506	Connector (12-Pins, Black)	Centre console	16-2 06-4
X507	Connector (14-Pins, Green)	LH side of dash behind steering wheel	20-1 11-1
X508	Connector (9-Pins, Black)	Under LH side of rear seat	02-3
X509	Connector (9-Pins, Black)	Under LH side of dash near front lid release lever	02-3
X510	Connector (9-Pins, Black)	Under LH side of dash near front lid release lever	02-3
X511	Connector (8-Pins, Black)	Centre console	16-2 03-1
X512	Connector (8-Pins, Black)	Under RH side of dash	13-2
X514	Connector (6-Pins, Black)	Centre of console	06-1
X516	Connector (5-Pins, Black)	Centre of console Hazard warning switch, S18	06-2
X517	Connector (4-Pins, Black)	LH side of dash Dimmer, N3	06-3
X518	Connector (4-Pins, Black)	LH footwell	19-2 06-3
X522	Connector (3-Pins, White)	LH footwell	19-2 05-2
X523	Connector (6-Pins, Black)	Behind LH side of dash in windscreen header	09-2
X526	Connector (8-Pins, Black)	LH footwell	19-2 13-2

X531	Connector (2-Pins, White)	Front cigar lighter, E28	
X532	Connector (2-Pins, Natural)	Front cigar lighter light, E29	
X537	Connector (1-Pins, Natural)	Driver's door	
X538	Connector (1-Pins, Natural)	Passenger's door	
X539	Connector (2-Pins, Black)	Centre of dash Antitheft (DWA) radio microswitch, S20	
X540	Connector (2-Pins, Black)	RH side of dash Glove compartment light switch, S37	
X541	Connector (1 -Pins, Natural)	RH side of dash	
X542	Connector (2-Pins, Black)	LH side of glove box	
X543	Connector (1 -Pins, Natural)	LH side of dash	
X544	Connector (2-Pins, Black)	Behind dash	
X546	Connector (2-Pins, White)	Centre console	16-2
X547	Connector (2-Pins, Black)	Behind centre of dash Radio, N9	
X552	Connector (2-Pins, Black)	Behind LH side of dash	
X603	Connector (12-Pins, Black)	Under LH front seat	06-6
X604	Connector (12-Pins, Black)	Passenger's seat	06-6
X605	Connector (12-Pins, Black)	In rear LH side of glove compartment	27-1 02-1
X605	Connector (12-Pins, Black)	In rear LH side of glove compartment	27-2 02-1
X606	Connector (12-Pins, White)	In rear LH side of glove compartment	27-1 02-1
X606	Connector (12-Pins, White)	In rear LH side of glove compartment	27-2 02-1
X607	Connector (20-Pins, Black)	Behind RH footwell speaker trim cover	10-5
X608	Connector (12-Pins, Black)	Rear RH side of engine compartment	15-1
X610	Connector (26-Pins, White)	Under LH side of dash on LH side of IHKA housing	10-4
X612	Connector (26-Pins, Blue)	Behind centre of dash	01-1
X613	Connector (26-Pins, Blue)	Between front footwell ahead of IHKA housing	10-4
X614	Connector (26-Pins, Yellow)	Between front footwell ahead of IHKA housing	10-4
X623	Connector (4-Pins, Black)	Driver's door	24-2 13-6
X624	Connector (4-Pins, Black)	Passenger's door Right outside mirror, Y6	24-3 13-6
X625	Connector (6-Pins, Black)	Driver's door Power mirror switch (SM/SPM), S12	24-2 16-1
X627	Connector (8-Pins, Black)	In windscreen header	15-2 03-1
X628	Connector (5-Pins, Black)	In RH side of luggage compartment	25-2 15-6
X629	Connector (8-Pins, Natural)	In RH side of luggage compartment	13-1
X630	Connector (13-Pins, Black)	Under rear of vehicle	07-6
X638	Connector (6-Pins, Black)	In RH side of luggage compartment	25-1 09-4
X641	Connector (6-Pins, Black)	In RH side of luggage compartment	02-2
X642	Connector (8-Pins, Black)	Under RH side of rear seat	13-1
X643	Connector (6-Pins, Blue)	In windscreen header	08-3
X644	Connector (6-Pins, Black)	In RH side of luggage compartment	09-4
X645	Connector (6-Pins, Black)	In LH rear door	14-1
X646	Connector (6-Pins, Black)	In RH rear door	09-4

X647	Connector (6-Pins, Black)	In RH rear door	14-1
X648	Connector (6-Pins, Black)	Driver's seat	14-1
X651	Connector (6-Pins, Black)	Under LH front seat Driver's seat heating switch, S53	14-1
X652	Connector (6-Pins, Blue)	Under LH front seat Driver's lumbar support switch, S52	08-3
X658	Connector (6-Pins, Black)	Under LH front seat Passenger's seat heating switch, S54	14-1
X659	Connector (6-Pins, Black)	Passenger's seat	14-1
X660	Connector (6-Pins, Black)	Driver's door	24-1 09-4
X661	Connector (6-Pins, Black)	Under LH side of dash on LH side of IHKA housing	10-1
X662	Connector (6-Pins, Black)	Under LH side of dash on LH side of IHKA housing	10-1
X663	Connector (6-Pins, Black)	Under LH side of dash on LH side of IHKA housing	10-1
X664	Connector (6-Pins, Black)	Under LH side of dash on LH side of IHKA housing	10-1
X665	Connector (6-Pins, Black)	RH side of LH footwell	10-1
X666	Connector (6-Pins, Black)	Under LH side of dash on LH side of IHKA housing	10-1
X667	Connector (6-Pins, Black)	Under LH side of dash on LH side of IHKA housing	10-1
X66fi	Connector (6-Pins, Black)	Behind centre of dash	10-1
X669	Connector (6-Pins, Black)	Behind centre of dash	10-1
X670	Connector (6-Pins, Black)	RH side of dash on RH side of IHKA housing	10-1
X671	Connector (5-Pins, Black)	Behind centre of dash	02-4
X672	Connector (4-Pins, Black)	In front LH side of luggage compartment	10-2
X675	Connector (4-Pins, White)	In front LH side of luggage compartment	07-1
X676	Connector (4-Pins, Black)	In front LH side of luggage compartment	16-2
X682	Connector (3-Pins, Natural)	In front RH side of glove compartment	05-3
X692	Connector (3-Pins, Black)	Behind centre of dash	03-3
X693	Connector (3-Pins, Black)	Centre of dash	05-2
X695	Connector (8-Pins, Black)	LH bottom of engine	03-1
X700	Connector (1-Pins, (—))	Behind RH footwell speaker cover	
X701	Connector (1-Pins, (—))	Behind LH footwell speaker cover	
X705	Connector (2-Pins, Black)	Near RH rear wheel well	14-2
X706	Connector (2-Pins, (—))	Cassette player lights, E45	
X709	Connector (2-Pins, Black)	Left licence plate light, E43	
X710	Connector (2-Pins, Black)	Right licence plate light, E44	
X711	Connector (2-Pins, Black)	Underside of rear lid left	
X712	Connector (1-Pins, Natural)	Rear lid lamp, E33	
X714	Connector (2-Pins, Grey)	In LH rear door	
X715	Connector (2-Pins, Black)	In LH rear door	
X720	Connector (2-Pins, Grey)	In RH rear door	



X721	Connector (2-Pins, Black)	In RH rear door	
X726	Connector (2-Pins, Black)	Driver's seat	23-1
X727	Connector (2-Pins, White)	Driver's seat	22-1
X728	Connector (2-Pins, White)	Driver's seat	23-1
X729	Connector (2-Pins, Black)	Driver's seat	23-1
X730	Connector (2-Pins, (—))	Under LH front seat	
X731	Connector (2-Pins, (—))	In top of LH backrest	
X732	Connector (2-Pins, White)	In top of LH backrest	
X733	Connector (2-Pins, White)	Under LH front seat	
X734	Connector (2-Pins, Black)	Passenger's seat	
X735	Connector (2-Pins, White)	Driver's seat	22-1
X736	Connector (2-Pins, Black)	Passenger's seat	
X737	Connector (2-Pins, White)	Passenger's seat	
X738	Connector (2-Pins, (—))	In top of RH backrest	
X739	Connector (2-Pins, Yellow)	Passenger's seat	
X740	Connector (2-Pins, White)	Driver's seat	22-3
X741	Connector (2-Pins, White)	In top of RH backrest	
X742	Connector (2-Pins, Yellow)	Passenger's door	24-3
X743	Connector (2-Pins, Black)	Passenger's door	
X744	Connector (2-Pins, Grey)	Passenger's door	24-3
X746	Connector (1-Pins, (—))	Passenger's door	
X747	Connector (2-Pins, Yellow)	Driver's door	24-1
X749	Connector (2-Pins, Grey)	Driver's door	24-2
X750	Connector (1 -Pins, (—))	Driver's door	24-2
X751	Connector (2-Pins, White)	Driver's door	24-1
X752	Connector (2-Pins, Grey)	Driver's door	24-1
X753	Connector (1-Pins, (—))	Driver's door	
X756	Connector (2-Pins, Black)	Near RH rear wheel well behind RH rear wheel	
X757	Connector (2-Pins, Black)	Rear RH side of engine compartment	
X760	Connector (1 -Pins, (—))	Under rear window shelf	
X761	Connector (1-Pins, (—))	Under rear window shelf	
X762	Connector (1-Pins, (—))	Under rear window shelf	
X763	Connector (1-Pins, (—))	Under rear window shelf	
X764	Connector (2-Pins, White)	In RH side of luggage compartment	
X765	Connector (2-Pins, White)	In RH side of luggage compartment	
X768	Connector (2-Pins, White)	Left fog light, E26	
X769	Connector (2-Pins, Grey)	Right fog light, E27	
X770	Connector (2-Pins, White)	Under front RH bumper	12-2
X771	Connector (2-Pins, Black)	Under LH side of dash on LH side of IHKA housing	
X772	Connector (2-Pins, White)	RH side of LH footwell	
X773	Connector (2-Pins, White)	RH side of dash LH side of RH footwell	
X774	Connector (1-Pins, Grey)	Near front LH headlight	
X778	Connector (2-Pins, Black)	Driver's seat belt buckle switch, S58	22-1

X779	Charge socket	Left of glove compartment	16-1
X782	Connector (3-Pins, Orange)	Passenger's airbag gas generator 1, G6	
X784	Connector (2-Pins, Orange)	Under RH side of dash	
X785	Connector (2-Pins, Black)	LH side of engine compartment	
X800	Connector (2-Pins, White)	Behind LH footwell speaker trim cover	
X802	Connector (2-Pins, Grey)	Front RH side of engine compartment	
X808	Connector (1-Pins, (—))	In RH side of luggage compartment	
X809	Connector (1-Pins, (—))	In RH side of luggage compartment	
X811	Ground	Under RH side of rear seat	02-2
X816	Connector (1-Pins, Black)	Between front footwell	
X817	Connector (1-Pins, Black)	Between front footwell	
X818	Ground	LH side of dash	03-3
X819	B + terminal point	Under RH side of rear seat	
X820	Ground	Under RH side of rear seat	02-2
X820	Ground	In RH side of luggage compartment	25-2
X881	Connector (6-Pins, White)	Passenger's seat	14-2
X882	Connector (2-Pins, Black)	Driver's seat	23-1
X883	Connector (2-Pins, Black)	Passenger's seat	
X898	Connector (8-Pins, Black)	Centre of dash on LH side of heater control panel	03-1
X899	Connector (18-Pins, Black)	Centre of dash on RH side of heater control panel	13-3
X900	Connector (2-Pins, White)	Above LH footwell-dash	
X901	Connector (2-Pins, White)	Above RH footwell-dash	
X904	Connector (4-Pins, Black)	LH side of RH footwell	06-3
X905	Connector (5-Pins, Black)	Centre of dash in centre of heater control panel	09-3
X912	Connector (2-Pins, White)	In LH rear door	
X944	Ground	Under rear window shelf	
X946	Connector (4-Pins, Black)	Under rear window shelf	06-3
X947	Connector (6-Pins, Black)	Under rear window shelf	10-3
X948	Connector (2-Pins, Black)	Under rear window shelf	
X949	Connector (5-Pins, Black)	Under rear window shelf	02-4
X997	Connector (2-Pins, White)	Under rear of vehicle behind RH rear wheel	
X998	Connector (4-Pins, Black)	Centre of dash	06-5
X999	Connector (4-Pins, Black)	Centre of dash	06-3
X1021	Connector (9-Pins, Black)	Rear LH side of engine compartment in front power distributor	02-3
X1024	Connector (9-Pins, Black)	in front RH side of glove compartment	02-3
X1034	Connector (3-Pins, Black)	Under LH side of dash	07-5
X1035	Connector (3-Pins, Black)	Near front RH headlight	07-5
X1048	Connector (1-Pins, (—))	RH side of engine compartment	
X1049	Connector (1-Pins, (—))	RH side of engine compartment	
X1086	Connector (9-Pins, Black)	Under LH side of dash	02-3

X1087	Connector (9-Pins, White)	Under LH side of dash	02-3
X1090	Connector (9-Pins, Black)	Rear LH side of engine compartment in front power distributor	02-3
X1098	Connector (12-Pins, Black)	Front of engine compartment	05-6
X1099	Connector (12-Pins, Black)	Front of engine compartment	05-6
X1160	Ground	LH side of dash	03-3
X1161	Connector (9-Pins, Black)	Rear LH side of engine compartment	
X1181	Connector (9-Pins, Black)	Under LH side of rear seat in power distribution box	02-3
X1191	Connector (4-Pins, Black)	On rear lid	06-3
X1221	Connector (26-Pins, Green)	Under LH side of rear seat in power distribution box	10-4
X1222	Connector (6-Pins, White)	In front LH side of luggage compartment	04-1
X1250	Connector (10-Pins, Black)	RH side of loading area behind side panel	15-2
X1251	Connector (2-Pins, Black)	In rear lid behind trim	26-3
X1252	Connector (2-Pins, Black)	In rear lid behind trim	26-3
X1253	Connector (2-Pins, Black)	On rear lid	
X1254	Connector (2-Pins, Black)	On rear lid	
X1374	Connector (1-Pins, Natural)	Glove compartment light, E42	
X1401	Connector (4-Pins, White)	Under LH side of dash	06-3
X1405	Connector (1-Pins, Natural)	RH side of dash behind glove compartment	
X1406	Connector (1-Pins, Black)	RH side of dash behind glove compartment	
X1427	Connector (1-Pins, Natural)	Instrument lights, E41	
X1441	Ground	LH side of dash	
X1851	Connector (1-Pins, Black)	Rear parcel shelf	
X1852	Connector (1-Pins, White)	Rear parcel shelf	
X1887	Connector (6-Pins, Yellow)	Under LH front seat	07-4
X2000	Connector (12-Pins, Black)	Rear RH side of engine compartment in electronics box (525td/t, 525tds/t)	08-2
X2007	B+ terminal point	Rear RH side of engine compartment in electronics box (525td/t, 525tds/t)	01-1
X2008	Connector (2-Pins, Black)	LH side of engine (525td/t, 525tds/t)	
X2009	Connector (1-Pins, (—))	LH side of engine (525td/t, 525tds/t)	
X2010	Connector (7-Pins, (—))	LH side of engine (525td/t, 525tds/t)	13-4
X2011	Connector (2-Pins, Black)	Front LH side of engine compartment (525td/t, 525tds/t)	
X2012	Connector (2-Pins, Black)	LH side of engine (525td/t, 525tds/t)	
X2013	Connector (2-Pins, Black)	LH side of engine (525td/t, 525tds/t)	
X2014	Connector (3-Pins, Black)	LH side of engine compartment (525td/t, 525tds/t)	03-5
X2015	Connector (2-Pins, Black)	LH side of engine (525td/t, 525tds/t)	
X2016	Connector (2-Pins, Black)	Front LH side of engine compartment (525td/t, 525tds/t)	

X2017	Connector (2-Pins, Black)	LH side of engine compartment (525td/t, 525tds/t)	
X2019	Connector (55-Pins, Black)	In electronics box (525td/t, 525tds/t) DDE2 control unit, A2019	00-1
X2023	Connector (1-Pins, (—))	LH bottom of engine compartment Alternator, G2023	
X2024	Connector (1-Pins, (—))	LH bottom of engine compartment Alternator, G2023	
X2025	Connector (1-Pins, (—))	Rear LH side of engine compartment Starter, M6510	
X2026	Connector (1-Pins, (—))	Rear LH side of engine compartment Starter, M6510	
X2027	Connector (1-Pins, (—))	Rear LH side of engine compartment Starter, M6510	
X2042	Ground	Rear RH side of engine compartment (525td/t, 525tds/t)	03-1
X2080	Connector (2-Pins, Blue)	Front of engine on thermostat housing (525td/t, 525tds/t)	
X2081	Connector (9-Pins, Black)	Rear RH side of engine compartment in electronics box (525td/t, 525tds/t)	02-3
X2082	Connector (2-Pins, Black)	Front of engine on thermostat housing (525td/t, 525tds/t)	
X2083	Connector (2-Pins, Brown)	Front LH side of engine compartment (525td/t, 525tds/t)	
X2085	Connector (9-Pins, Black)	Rear RH side of engine compartment in electronics box (525td/t, 525tds/t)	02-3
X2086	Connector (3-Pins, Black)	Rear LH side of engine compartment (525td/t, 525tds/t)	03-6
X2090	Connector (2-Pins, Black)	Rear LH side of engine compartment (525td/t, 525tds/t)	
X2091	Connector (1-Pins, (—))	Centre top of engine (525td/t, 525tds/t)	
X2092	Connector (1 -Pins, (—))	Centre top of engine (525td/t, 525tds/t)	
X2093	Connector (1 -Pins, (—))	Centre top of engine (525td/t, 525tds/t)	
X2094	Connector (1-Pins, (—))	Centre top of engine (525td/t, 525tds/t)	
X2095	Connector (1-Pins, (—))	Centre top of engine (525td/t, 525tds/t)	
X2096	Connector (1-Pins, (—))	Centre top of engine (525td/t, 525tds/t)	
X2138	Connector (2-Pins, Black)	Behind radiator (525td/t, 525tds/t)	
X2153	Connector (8-Pins, Black)	On LH side of transmission (525td/t, 525tds/t)	11-2
X2154	Connector (88-Pins, Black)	Behind RH footwell speaker trim cover (525td/t, 525tds/t)	12-1
X2156	Connector (2-Pins, Black)	Rear RH side of engine compartment in electronics box (525td/t, 525tds/t)	
X2861	Connector (12-Pins, Black)	LH side of dash	05-6
X3210	Connector (26-Pins, Blue)	LH side of dash left of steering column	01-1
X3211	Connector (4-Pins, Black)	Centre of dash	05-1
X3212	Connector (4-Pins, Black)	LH footwell	19-2 03-3

X3500	Connector (4-Pins, Black)	In bottom of LH C-post	17-4
X3502	Connector (3-Pins, White)	In top of LH C-post	05-2
X3505	Connector (4-Pins, Black)	LH side of dash	06-3
X3538	Ground	In RH side of luggage compartment	29-3
X6000	Connector (55-Pins, Black)	Rear RH side of engine compartment in electronics box	00-1
X6002	Connector (20-Pins, Black)	Rear LH side of engine compartment right of LH spring strut dome	04-1 04-6
X6002	Connector (20-Pins, Black)	Rear LH side of engine compartment right of LH spring strut dome	12-1 04-6
X6003	Connector (8-Pins, Black)	Rear RH side of engine compartment in electronics box	02-1
X6053	Connector (12-Pins, Black)	RH side of dash behind glove compartment	02-1
X6100	Connector (3-Pins, Black)	Rear LH side of engine compartment below intake manifold	17-1
X6101	Connector (2-Pins, Black)	LH top of engine Fuel injector 1, Y6101	
X6102	Connector (2-Pins, Black)	LH top of engine Fuel injector 2, Y6102	
X6103	Connector (2-Pins, Black)	LH top of engine Fuel injector 3, Y6103	
X6104	Connector (2-Pins, Black)	LH top of engine Fuel injector 4, Y6104	
X6105	Connector (2-Pins, Black)	LH top of engine Fuel injector 5, Y6105	
X6106	Connector (2-Pins, Black)	LH top of engine Fuel injector 6, Y6106	
X6120	Connector (2-Pins, Black)	LH side of engine	
X6130	Connector (3-Pins, Black)	Front top of engine	09-5
X6151	Connector (3-Pins, Grey)	Cylinder head	15-4
X6152	Connector (3-Pins, Grey)	Cylinder head	15-4
X6153	Connector (3-Pins, Grey)	Cylinder head	15-4
X6154	Connector (3-Pins, Grey)	Cylinder head	15-4
X6155	Connector (3-Pins, Grey)	Cylinder head	15-4
X6156	Connector (3-Pins, Grey)	Cylinder head	15-4
X6200	Connector (4-Pins, Black)	Rear of engine left	13-5
X6203	Connector (3-Pins, Black)	Front of engine compartment	03-5
X6204	Connector (3-Pins, Black)	Front of engine compartment	03-5
X6205	Connector (2-Pins, Black)	Near throttle valve housing (518i/t)	08-3
X6208	Connector (2-Pins, Black)	Front of engine (520i/t) Camshaft control, B6208	
X6217	Connector (4-Pins, Grey)	Front top of engine (520i/t)	17-3
X6231	Connector (2-Pins, Black)	Front of engine compartment below intake manifold	06-1
X6232	Connector (2-Pins, Black)	Cylinder head	
X6233	Connector (5-Pins, Black)	Front LH side of engine compartment (518i/t)	12-2
X6236	Connector (2-Pins, Black)	Cylinder head	
X6241	Connector (3-Pins, Black)	LH side of engine	08-5
X6242	Connector (3-Pins, Black)	LH side of engine	08-5
X6252	Connector (3-Pins, Black)	Front LH side of engine compartment	03-5

X6300	Connector (9-Pins, Black)	Rear RH side of engine compartment in electronics box	02-3
X6301	Connector (9-Pins, Black)	Rear RH side of engine compartment in electronics box	02-3
X6303	Connector (9-Pins, Black)	Rear RH side of engine compartment in electronics box	02-3
X6400	B+ terminal point	Rear RH side of engine compartment in electronics box	01-1
X6401	Connector (1 -Pins, (—))	Underside of rear seat	
X6454	Ground	Rear RH side of engine compartment	03-1
X6455	Ground	Rear RH side of engine compartment	03-1
X6456	Ground	Rear RH side of engine compartment	03-1
X6456	Ground	Front of engine (520i/t)	06-2
X6509	Connector (1 -Pins, (—))	Alternator, G6509	
X6510	Cable shoe, starter terminal 50	Starter, M6510	
X6511	Cable shoe, starter terminal 30h	Starter, M6510	
X6512	Cable shoe, starter terminal 30	Starter, M6510	
X6513	Connector (1-Pins, (—))	Starter, M6510	
X7000	Connector (88-Pins, Black)	Rear RH side of engine compartment in electronics box	12-1
X7150	Connector (1-Pins, (—))	Ignition coil, T6150	
X7509	Cable shoe, alternator D +	Alternator, G6509	
X8150	Connector (1-Pins, (—))	(518i/t) Ignition coil, T6150	
X8500	Connector (55-Pins, Black)	Behind RH footwell speaker trim cover	00-1
X8500	Connector (88-Pins, Black)	Behind RH footwell speaker trim cover	12-1
X8503	Connector (6-Pins, Blue)	Centre console near gear lever Program switch, S8503	08-3
X8505	Connector (8-Pins, Black)	On LH side of transmission	09-3 11 -2
X8507	Connector (1 -Pins, Black)	Rear RH side of engine compartment	
X8509	Connector (1-Pins, (—))	Centre console near gear lever	
X8516	Connector (2-Pins, Black)	Under centre of car	
X8550	Connector (48-Pins, Blue)	Behind RH footwell trim	17-5
X10034	Connector (2-Pins, (—))	Power distribution box rear LH side of engine compartment	
X10051	Connector (4-Pins, Black)	Behind LH side of dash	06-3
X10195	Connector (3-Pins, Black)	Driver's airbag gas generator, G5	
X10218	Connector (4-Pins, (—))	Passenger's seat	
X13012	Connector (26-Pins, White)	Under LH side of rear seat in power distribution box	14-5
X13013	Connector (4-Pins, Black)	Under LH side of rear seat in power distribution box	02-4
X13014	Connector (5-Pins, Black)	Under LH side of rear seat in power distribution box	02-6
X13018	Connector (1-Pins, Black)	In rear window	
X13022	Connector (4-Pins, Black)	In rear LH side of glove compartment	06-5
X13031	Connector (1-Pins, (—))	Front power distribution box, P90	

X13057	Connector (3-Pins, Black)	Rear loading area on rear lid behind trim	05-2
X13058	Connector (2-Pins, Green)	RH side of loading area behind side panel	
X13059	Connector (3-Pins, Black)	Rear loading area on rear lid behind trim	05-2
X13060	Connector (26-Pins, Blue)	Rear of A2w instrument cluster	20-1 10-4
X13085	Connector (10-Pins, Black)	Behind LH footwell speaker trim cover	26-1 00-2
X13086	Connector (18-Pins, Black)	Behind LH footwell speaker trim cover	26-1 13-3
X13105	Connector (3-Pins, Black)	Under LH side of dash	03-3
X13106	Connector (6-Pins, Black)	RH side of loading area behind side panel	15-5
X13107	Connector (2-Pins, White)	In front of luggage compartment Rear lid switch, S172	26-3
X13119	Connector (12-Pins, White)	Under LH side of dash	06-4
X13120	Connector (1-Pins, Black)	In front LH side of luggage compartment	
X13139	Connector (10-Pins, Black)	In windscreen header	11-3
X18013	Connector (26-Pins, Black)	In rear LH side of glove compartment	10-4
X18020	Connector (2-Pins, (—))	Under LH rear bumper	
X18021	Connector (2-Pins, (—))	Under centre of rear bumper	
X18022	Connector (2-Pins, (—))	Under centre of rear bumper	
X18023	Connector (2-Pins, (—))	Under RH rear bumper	
X18047	Connector (2-Pins, Black)	In RH rear door	
X18049	Connector (2-Pins, Yellow)	In LH rear door	
X18050	Connector (2-Pins, Black)	Passenger's door	
X18052	Connector (2-Pins, Yellow)	In RH rear door	
X18067	Cable shoe B +	Under RH side of rear seat	
X18068	Connector (9-Pins, Black)	Under RH side of rear seat	02-3
X18080	Connector (1-Pins, Natural)	Rear lid lamp, E33	
X18084	Connector (2-Pins, White)	Driver's door	24-1
X18097	Connector (2-Pins, Black)	Bottom of steering column	17-2
X18099	Connector (3-Pins, White)	Steering column adjustment switch, S119z	
X18109	Connector (1-Pins, Black)	Centre of dash	
X18126	Connector (17-Pins, Black)	Centre of dash behind radio	04-2
X18130	Connector (4-Pins, Black)	In front RH side of glove compartment	06-5
X18149	Connector (1-Pins, White)	Centre of dash	
X18150	Connector (1-Pins, White)	Centre of dash	
X18151	Connector (10-Pins, Black)	Centre of dash IHKR/F3 switch unit, S135w	09-1
X18153	Connector (3-Pins, Black)	Centre of dash	05-2
X18154	Connector (18-Pins, Black)	Centre of dash IHKR/F3 Operating panel, S134w	13-3
X18155	Connector (26-Pins, White)	LH side of RH footwell	17-3 10-4
X18156	Connector (26-Pins, Blue)	LH side of RH footwell	17-3 10-4
X18157	Connector (26-Pins, Blue)	LH side of RH footwell	17-3 10-4
X18184	Connector (1-Pins, (—))	Under rear window shelf	
X18185	Connector (1-Pins, (—))	Under rear window shelf	
X18186	Connector (1-Pins, (—))	Driver's door	
X18187	Connector (1-Pins, (—))	Under rear window shelf	

X18188	Connector (2-Pins, Natural)	Behind LH footwell speaker cover	
X18189	Connector (1-Pins, (—))	Under rear window shelf	
X18190	Connector (1-Pins, Natural)	Driver's door	
X18191	Connector (1-Pins, (—))	Behind RH footwell speaker cover	
X18192	Connector (1-Pins, White)	Passenger's door	
X18193	Connector (1-Pins, (—))	Passenger's door	
X18194	Ground	In LH side of luggage compartment	
X18242	Connector (2-Pins, Black)	In LH rear door DWA conductor loop, rear left side window, S148	
X18243	Connector (2-Pins, Black)	In LH rear door Rear window opening switch, S147	
X18244	Connector (8-Pins, Black)	Centre of dash	03-1
X18245	Connector (8-Pins, Black)	In head lining	26-1 03-1
X18259	Connector (10-Pins, Black)	Under LH side of dash	15-2
X18261	Cable shoe B +	Under RH side of rear seat	
X18262	Auxiliary socket, Touring	LH side of glove box	
X18264	Connector (1-Pins, White)	LH C-pillar	
X18265	Connector (1-Pins, Black)	In top of LH C-post	
X18287	Connector (4-Pins, Black)	Under LH side of dash	06-3
X18291	Connector (2-Pins, (—))	LH side of glove box	
X18323	Connector (4-Pins, (—))	Driver's door	
X18715	Connector (1-Pins, Black)	Behind centre of dash behind radio	
X18729	Connector (3-Pins, White)	In front LH side of luggage compartment	27-1 05-2
X18729	Connector (3-Pins, White)	In front LH side of luggage compartment	27-2 05-2
X18732	Connector (1-Pins, (—))	In RH side of luggage compartment	
X18733	Connector (1-Pins, (—))	In RH side of luggage compartment	
X18760	Connector (1-Pins, (—))	In RH side of luggage compartment	
Y1	ABS hydraulic unit	LH side of engine compartment	08-2
Y2	Solenoid clutch	RH side of engine	
Y4	Water valves	Rear LH side of engine compartment on engine bulkhead	12-1
Y5	Left outside mirror	Driver's door	
Y6	Right outside mirror	Passenger's door	
Y7	Metering pump (independent heating)	Under rear of vehicle behind RH rear wheel	
Y12	Solenoid valve independent heating/ventilation II	LH side of engine compartment	
Y2008	Needle lift sensor	LH side of engine	
Y2009	Electric cutout	LH side of engine	
Y2010	Injection quantity control unit	LH side of engine	
Y2153	Gear shift unit	In transmission	
Y6101	Fuel injector 1	Cylinder head	07-3
Y6102	Fuel injector 2	Cylinder head	07-3
Y6103	Fuel injector 3	Cylinder head	07-3
Y6104	Fuel injector 4	Cylinder head	07-3







Y6105	Fuel injector 5	Cylinder head	07-3
Y6106	Fuel injector 6	Cylinder head	07-3
Y6120	Charcoal filter valve	LH side of engine (near dipstick)	
Y6130	Idle actuator	Front of engine (520i/t)	08-1
Y6130	Idle actuator	Centre top of engine (518i/t)	09-2
Y8505	Gear-shift unit	LH side of transmission	09-3
Y8516	Speed sensor EGS	Under centre of car	
Y8505y	Gearshift unit	LH side of transmission	
Z400	Interference suppression coil	In RH side of luggage compartment	






## Component location views

### Location of control units

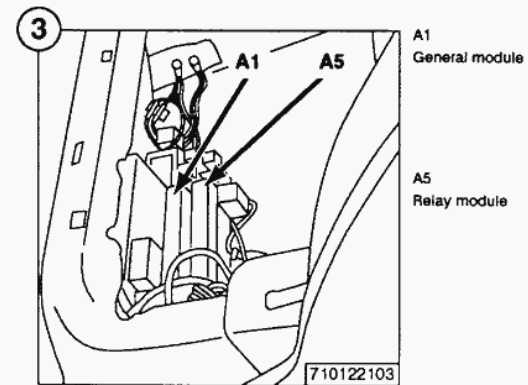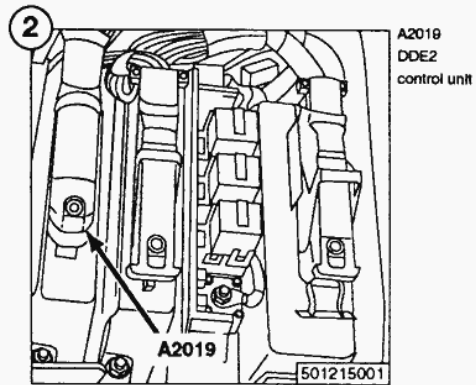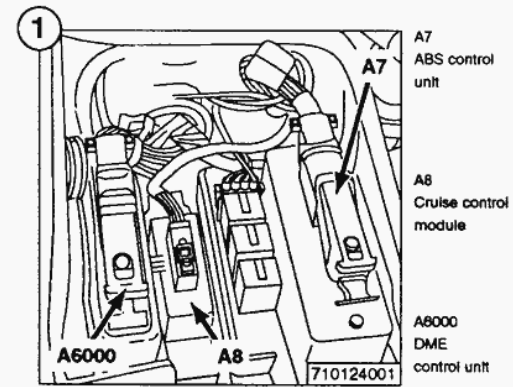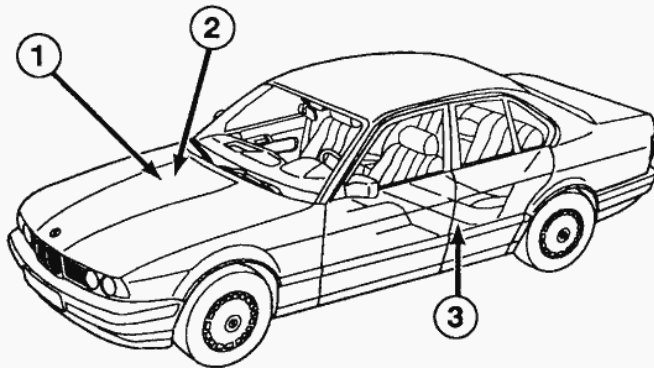


# BMW 5 Component location views

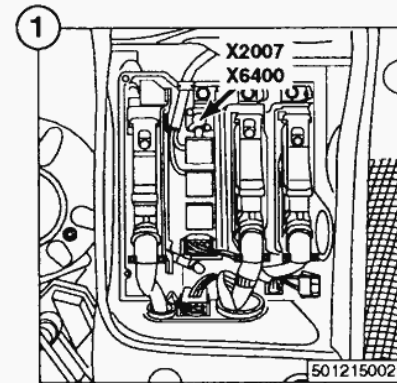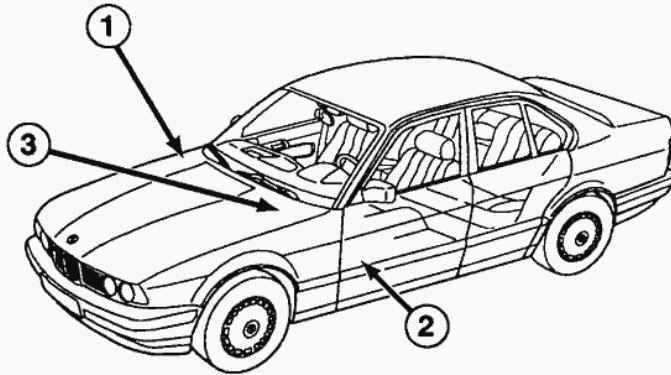 

X2007  
B+ terminal  
point

X6400  
B+ terminal  
point


501215002

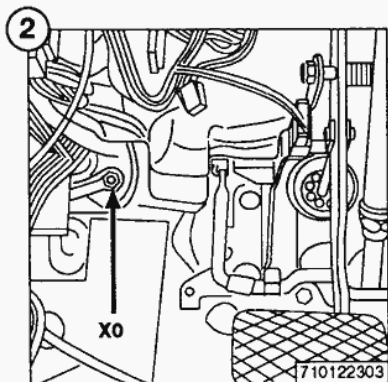

X0  
B+ terminal  
point

X0

710122303

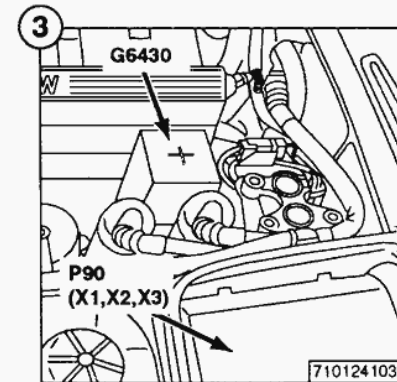

G6430  
B+ external  
start terminal  
point

P90  
Front power  
distribution  
box

710124103





X2  
B+ terminal  
point

X3  
B+ terminal  
point

X1  
B+ terminal  
point



### Component location views

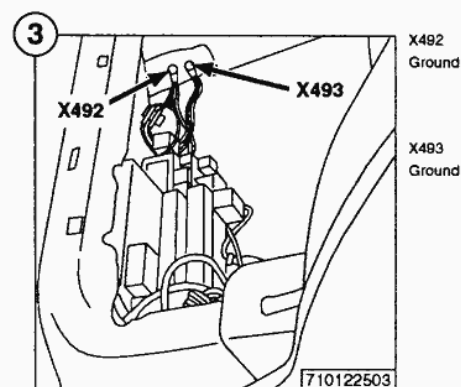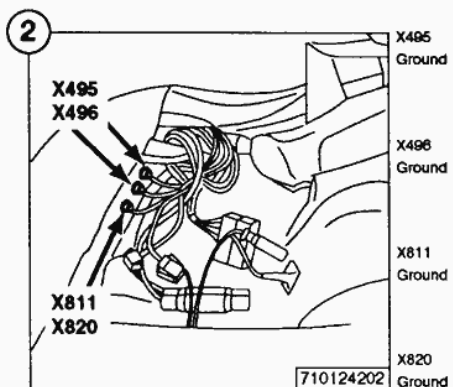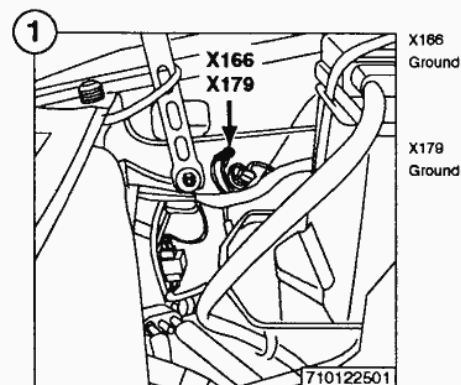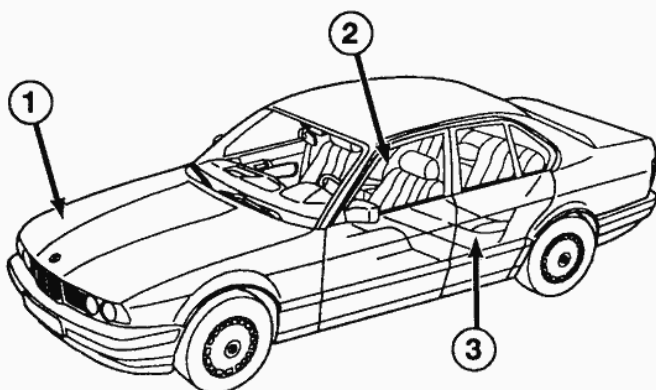

(

(

(


(



## Connector views


**Fig. 1**

B550001.00

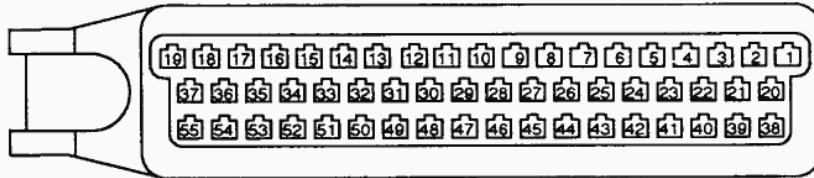


**Fig. 2**

B100007.00

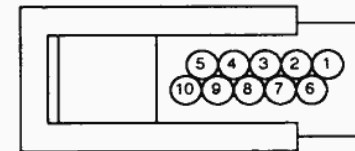


**Fig. 3**

B350002.00

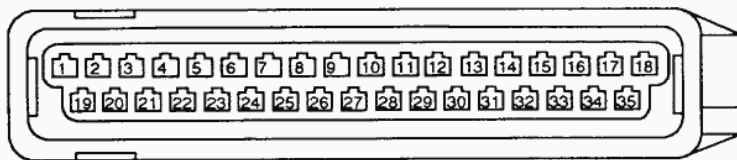

**Fig. 4**

B300001.00

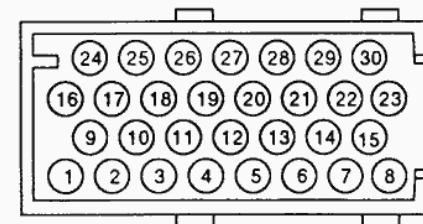



### Connector views

Fig. 1

B260002.00

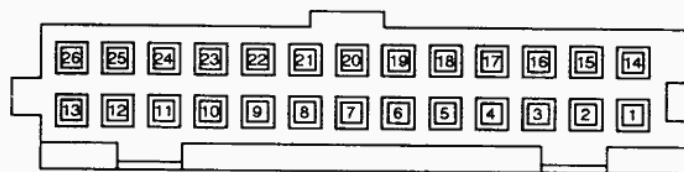


Fig. 2

B120015

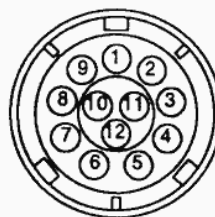


Fig. 3

B210001.00

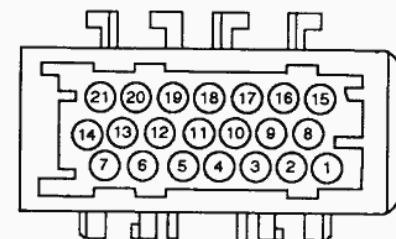


Fig. 4

B030017.00

 


Fig. 5

B080003.00


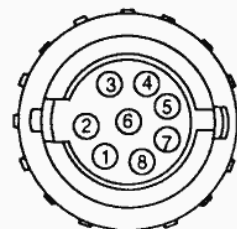


Fig. 6

B120013.00



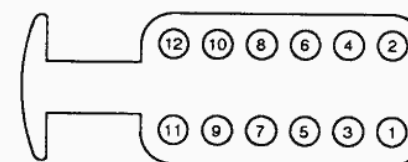

### Connector views

Fig. 1

B120002.02

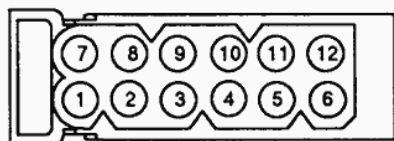


Fig. 2

B060037.00

 


Fig. 3

B090001.00

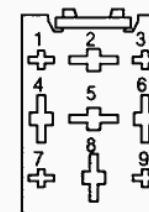


Fig. 4

B050005.00

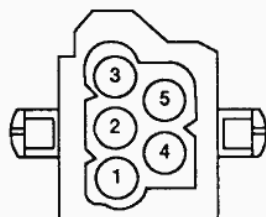



Fig. 5

B030006.00



Fig. 6

 B040003.00







### Connector views

Fig. 1

B080002.00

 


Fig. 2

B050006.00

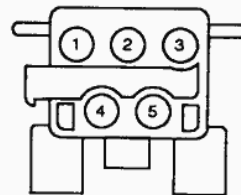


Fig. 3

B030001.00

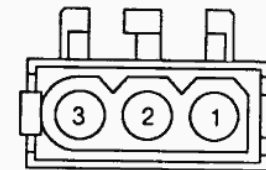


Fig. 4

B250001.00



Fig. 5

B030015.10



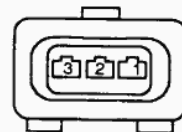


Fig. 6

B030025.00

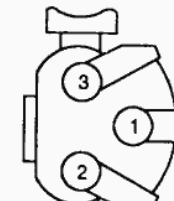

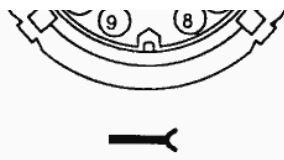

1994



### Connector views

Fig. 1

B060017.00

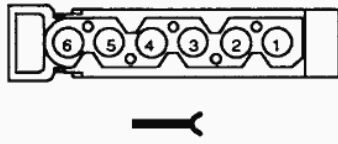


Fig. 2

B170001.00

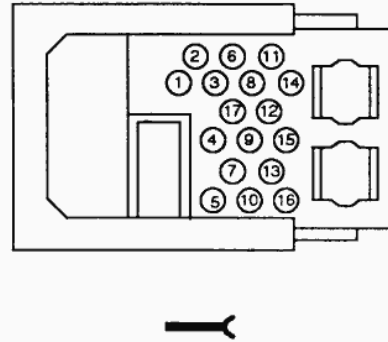


Fig. 3

B030013.00



Fig. 4

B030005.00

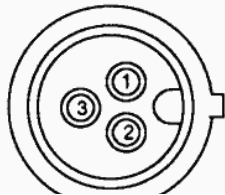


Fig. 5

B030012.00





Fig. 6

B200003.01



09/93

 8500.0-04

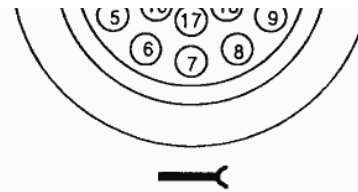

1994



### Connector views

Fig. 1

B040015.00

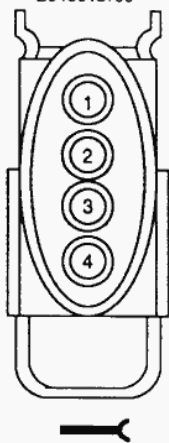


Fig. 2

B030003.04

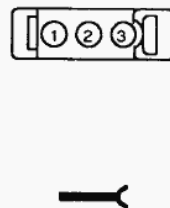


Fig. 3

B0300010.02

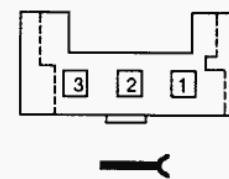


Fig. 4

B060002.00



Fig. 5

B060002.00


 



Fig. 6

 B120006.00



09/93

 8500.0-05



1994



### Connector views

Fig. 1

B060006.00

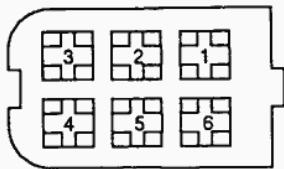


Fig. 2

B050003.00



Fig. 3

B040004.00

 


Fig. 4

B120004.01

 



Fig. 5

B040002.00






Fig. 6

 B120008.00



09/93

8500.0-06

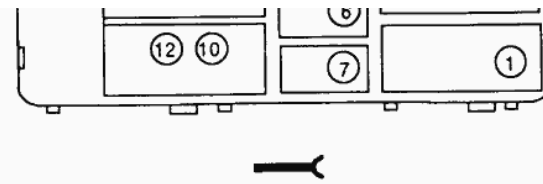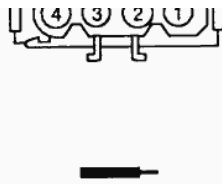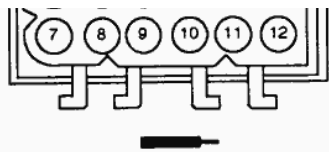

1994



### Connector views

Fig. 1

B040022.00

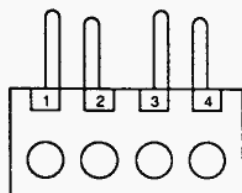


Fig. 2

B120002.03

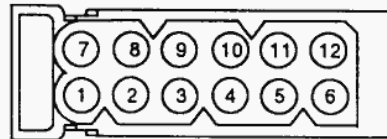


Fig. 3

B120004.05

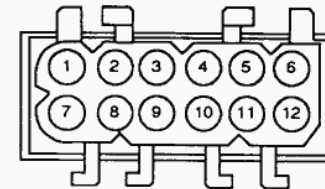


Fig. 4

Fig. 5




B030009.00

Fig. 6

B130002.01

09/93

8500.0-07

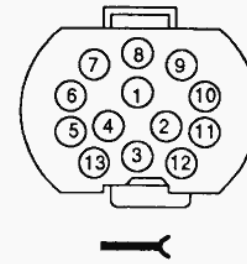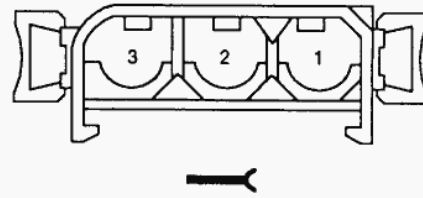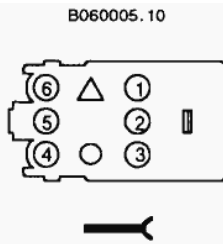

1994



### Connector views

Fig. 1

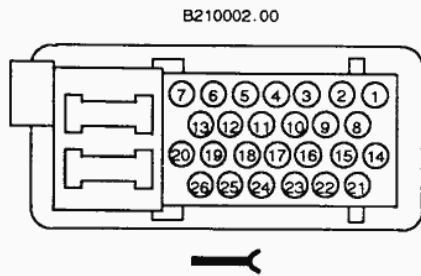


Fig. 2

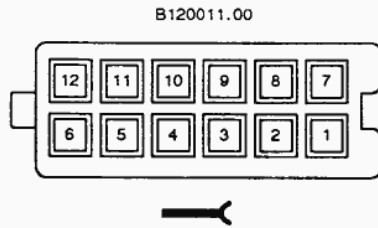


Fig. 3

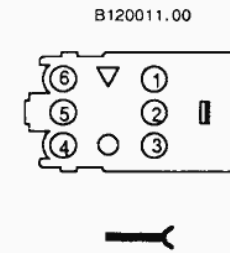


Fig. 4

B200001.00




Fig. 5

B030023.00

Fig. 6

09/93

8500.0-08

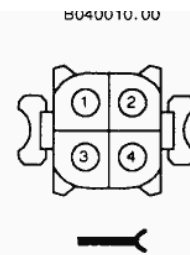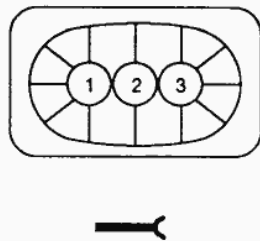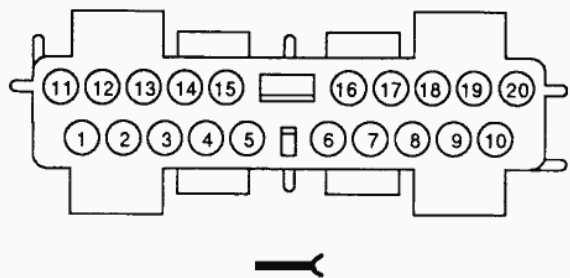

1994

)

)

)

)

(

(

(

(



### Connector views

Fig. 1

B100008.00

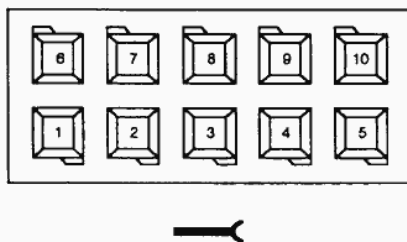


Fig. 2

B060023.00

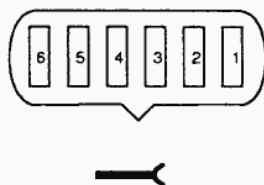


Fig. 3

B050002.00

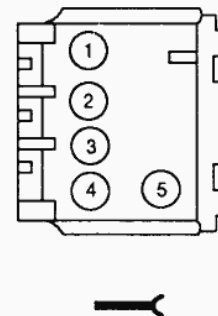


Fig. 4

Fig. 5


09/93

8500.0-09

B060009.00



B030022.00

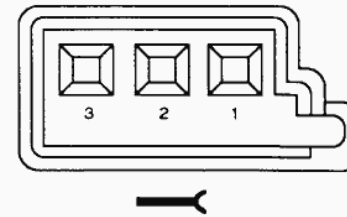

1994



### Connector views

Fig. 1

B060010.01

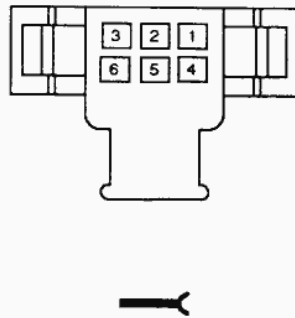


Fig. 2

B040013

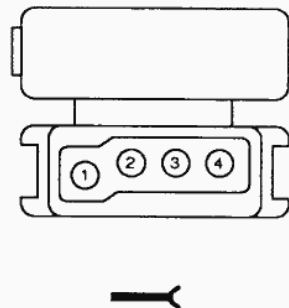


Fig. 3

B060035.00

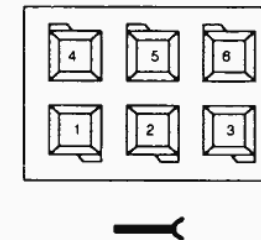


Fig. 4


Fig. 5

09/93


8500.0-10



 B260005.00



B200007.00

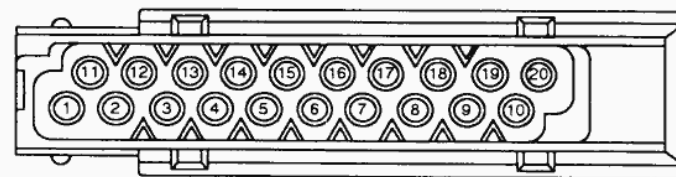


1994



### Connector views

Fig. 1

B140002.00

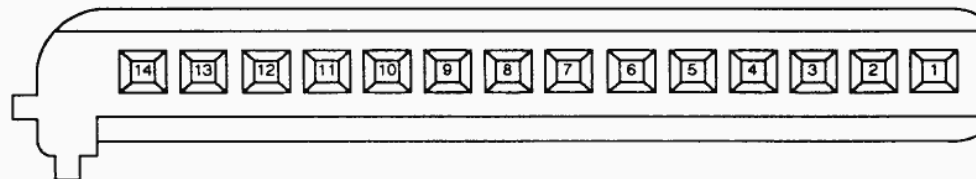

09/93

8500.0-

Fig. 2

B080005.00


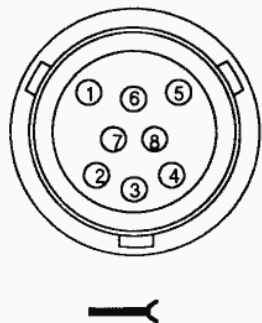


Fig. 3

B100009.00




11  
1994

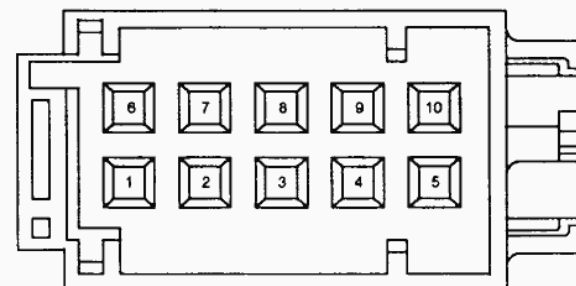

### Connector views

Fig. 1

B880001.00

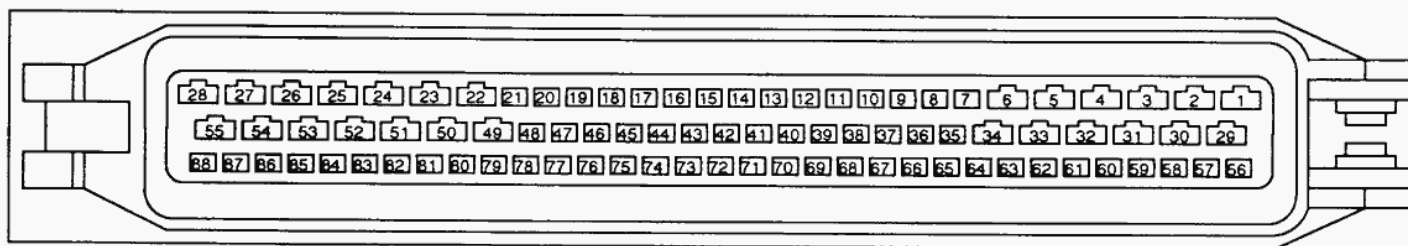

09/93  
8500.0-


Fig. 2

B050007.00



Fig. 3

B150003.00

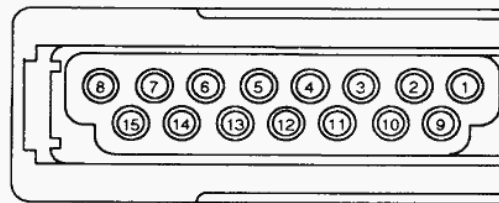

12

1994



Connector views

Fig. 1

B080000.00

 


Fig. 2

B080001.00


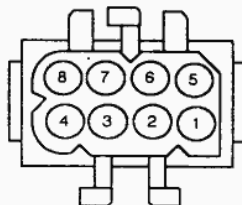


Fig. 3

B180000.00

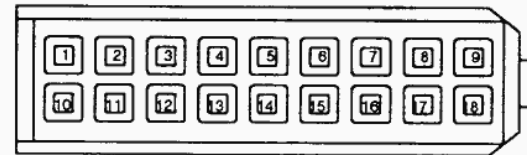

09/93

851

Fig. 4

B070005.00

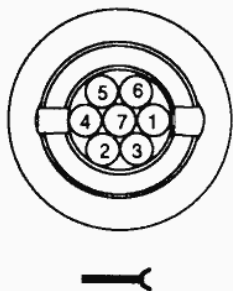


Fig. 5

B040018.01


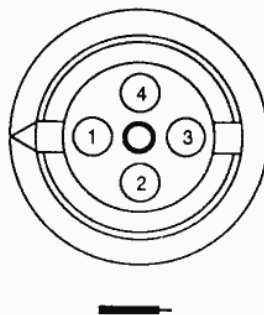


Fig. 6

B040020.00

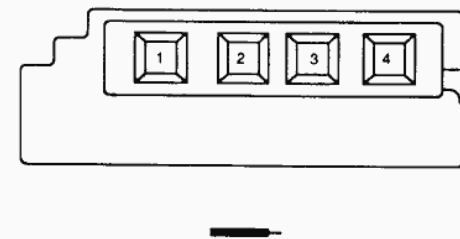

### Connector views

Fig. 1

B060005.10

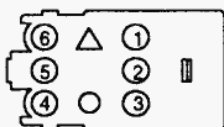


Fig. 2

B060005.08

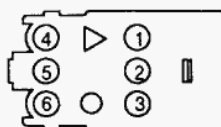


Fig. 3

B120003.01

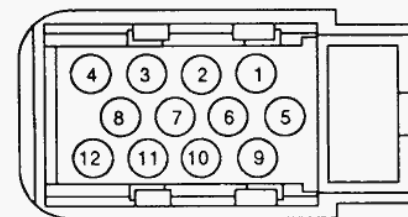


Fig. 4

B300002.00


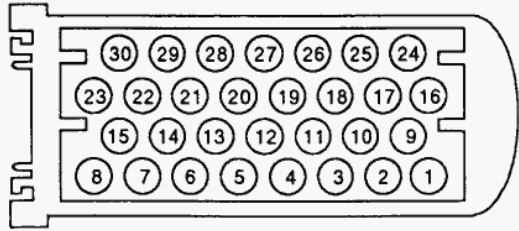


Fig. 5

B260002.00

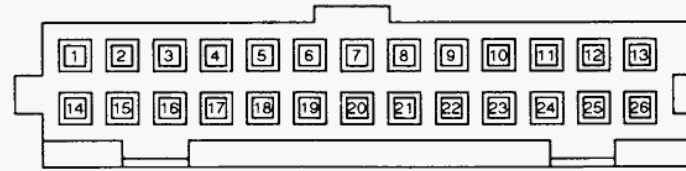

Connector views

Fig. 1

B120014

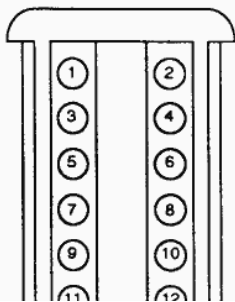


Fig. 2

B100004.00

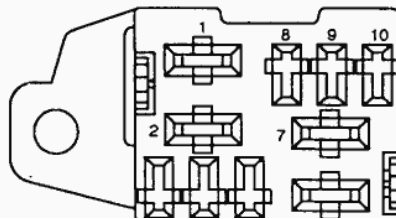
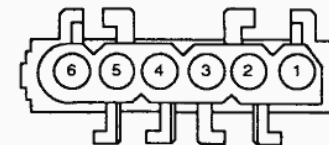


Fig. 3

B060038.00



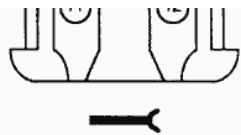


Fig. 4

B030015.08

 
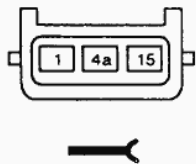


Fig. 5

B060019.00


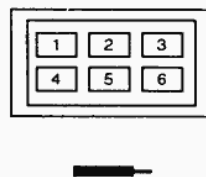


Fig. 6

B050013.00

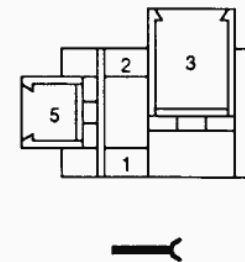

8500.0-15

1994



## Connector views

Fig. 1

B060013.00

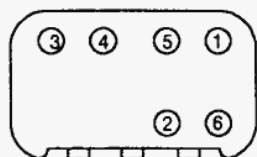


Fig. 2

B090007.00


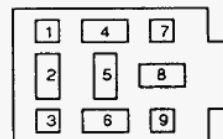


Fig. 3

B240001.00

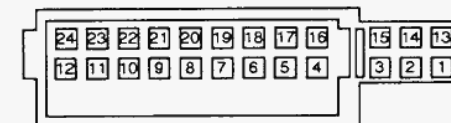

09/93

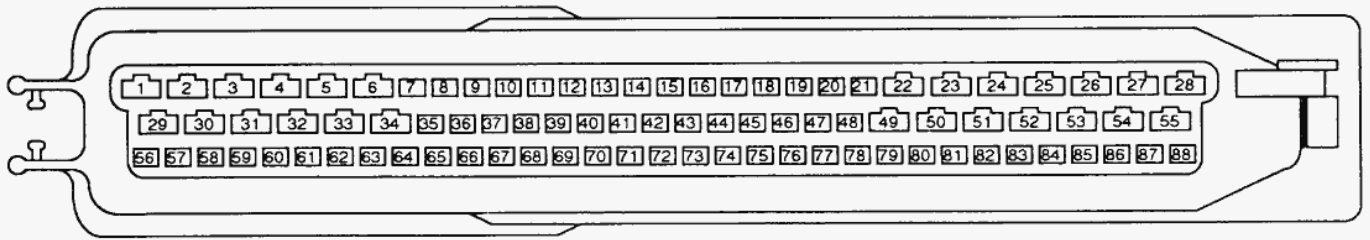


Fig. 4

B880002.01

8500.0-16  
1994

**BMW 5** Connector views

Fig. 1

B030018.00




 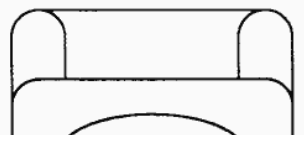


Fig. 2

B350001.00

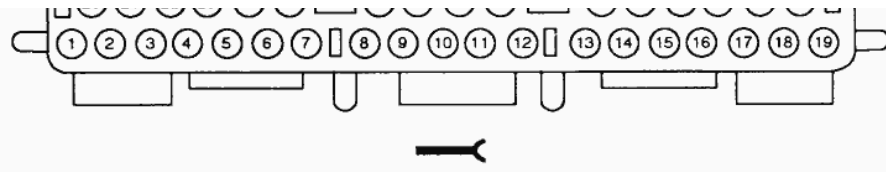


09/93

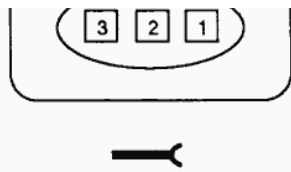


**Fig. 3**

B040016.00

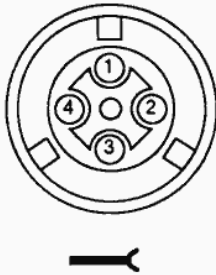


**Fig. 4**

B040020.00

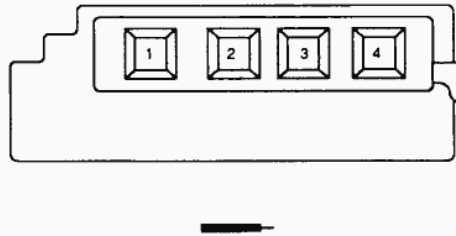

**Fig. 5**

B480000.00

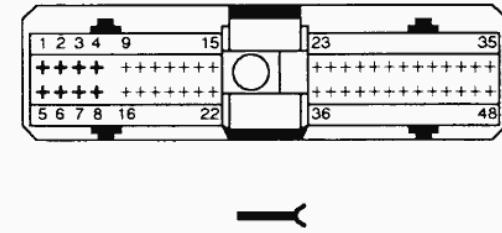




**BMWAG**


Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Crash and alarm sensor  
Scheme 6350.0

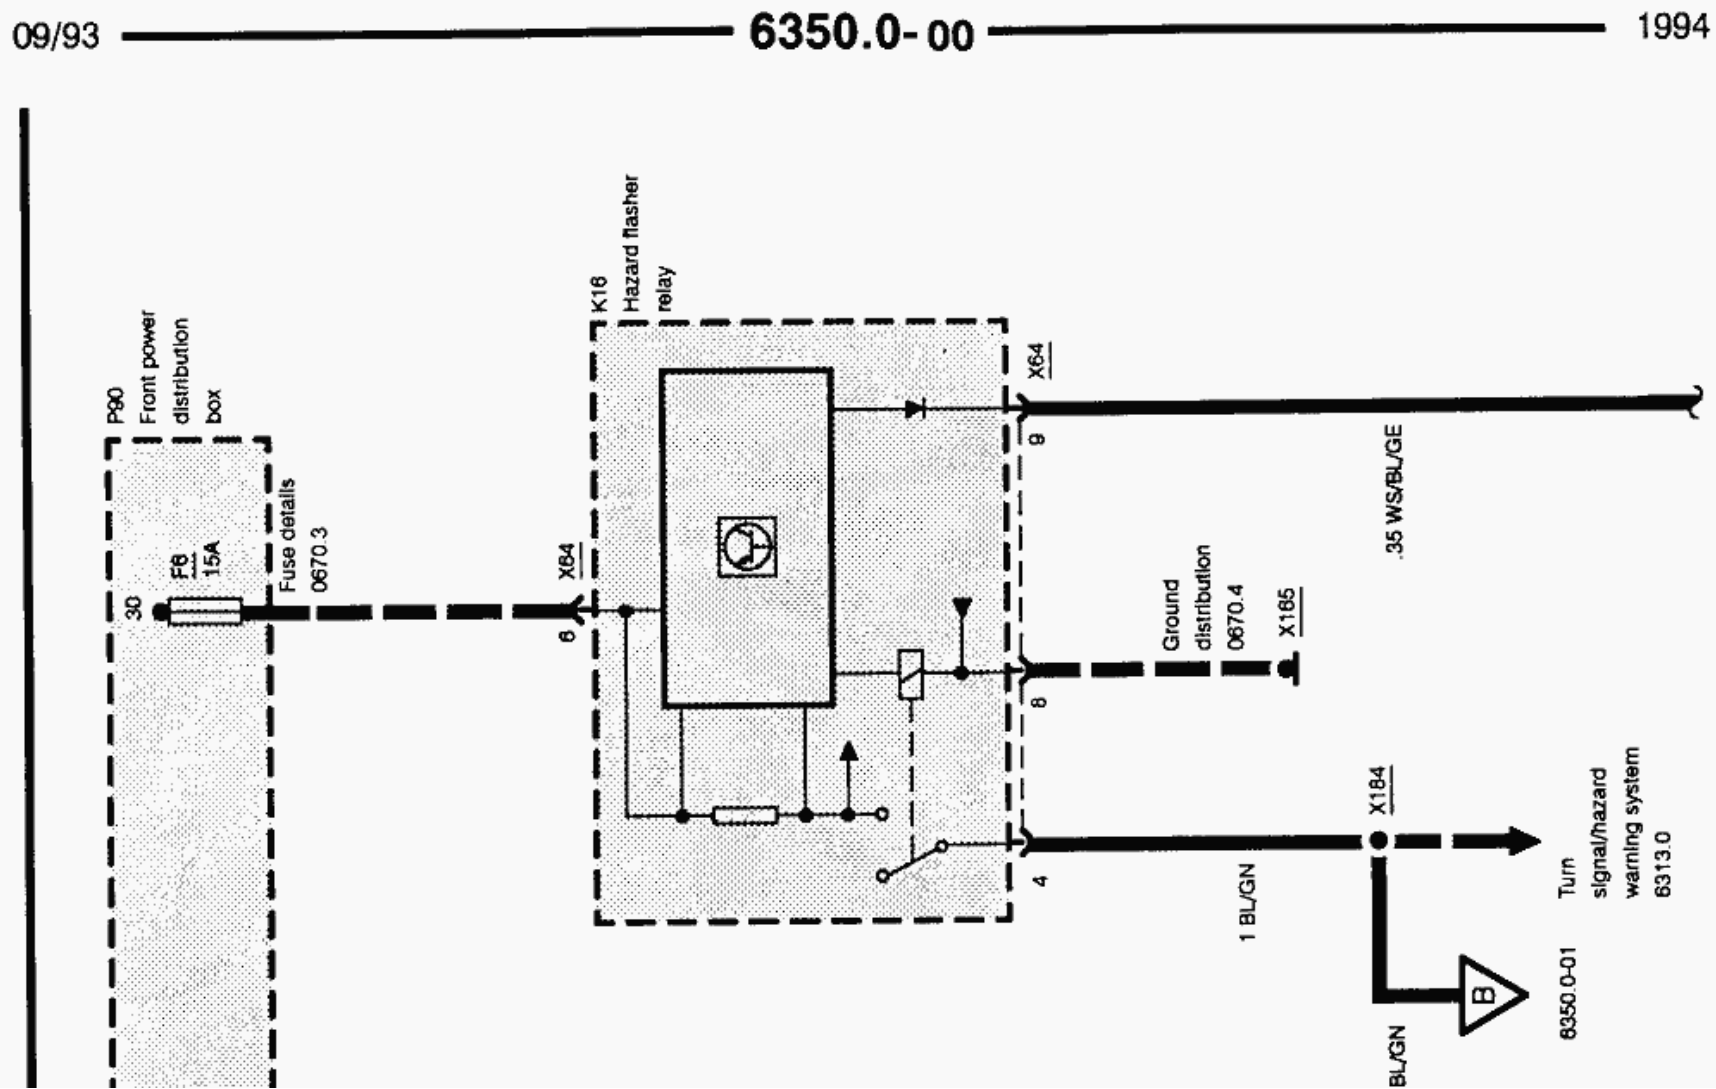

# Crash and alarm sensor

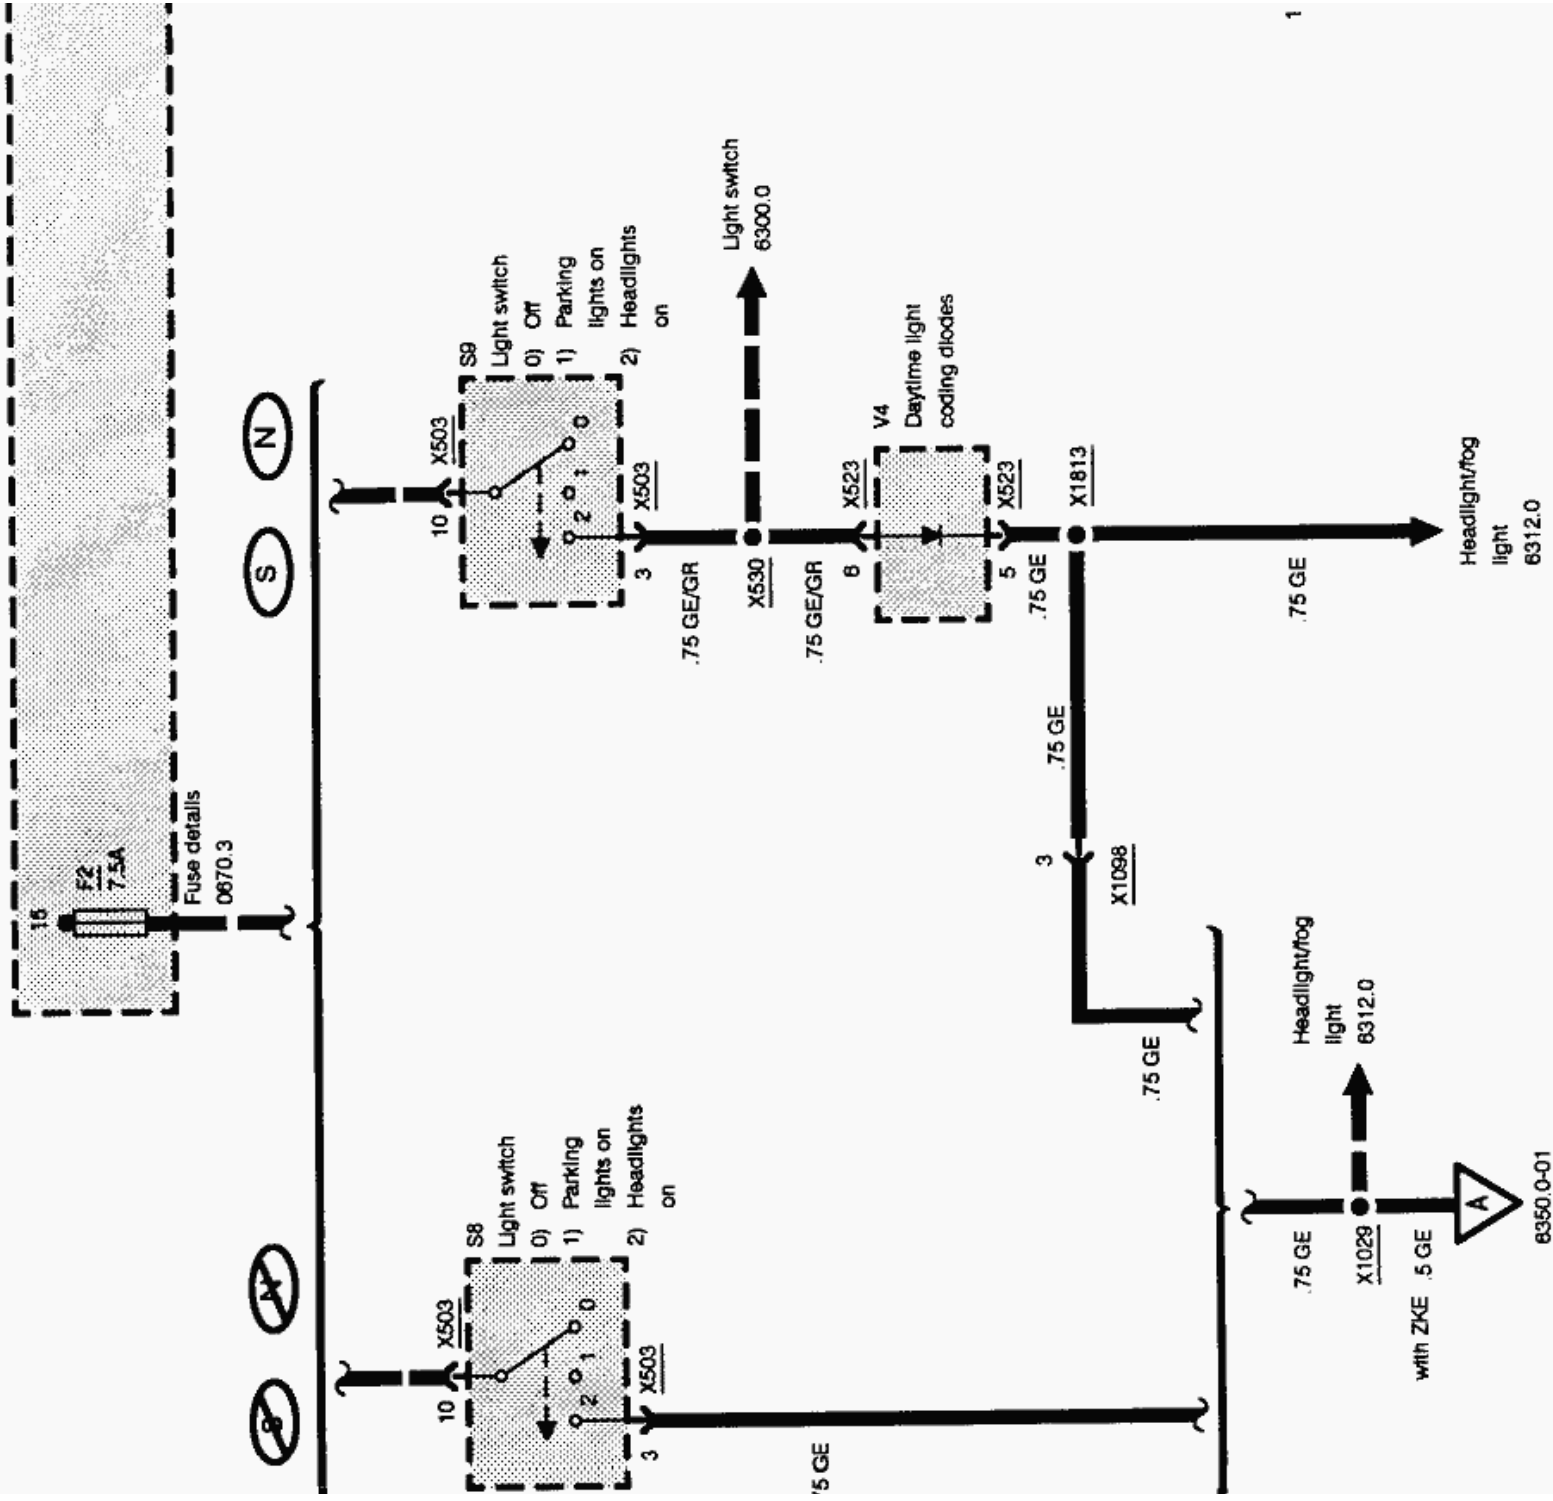





09/93

6350.0-01

1994

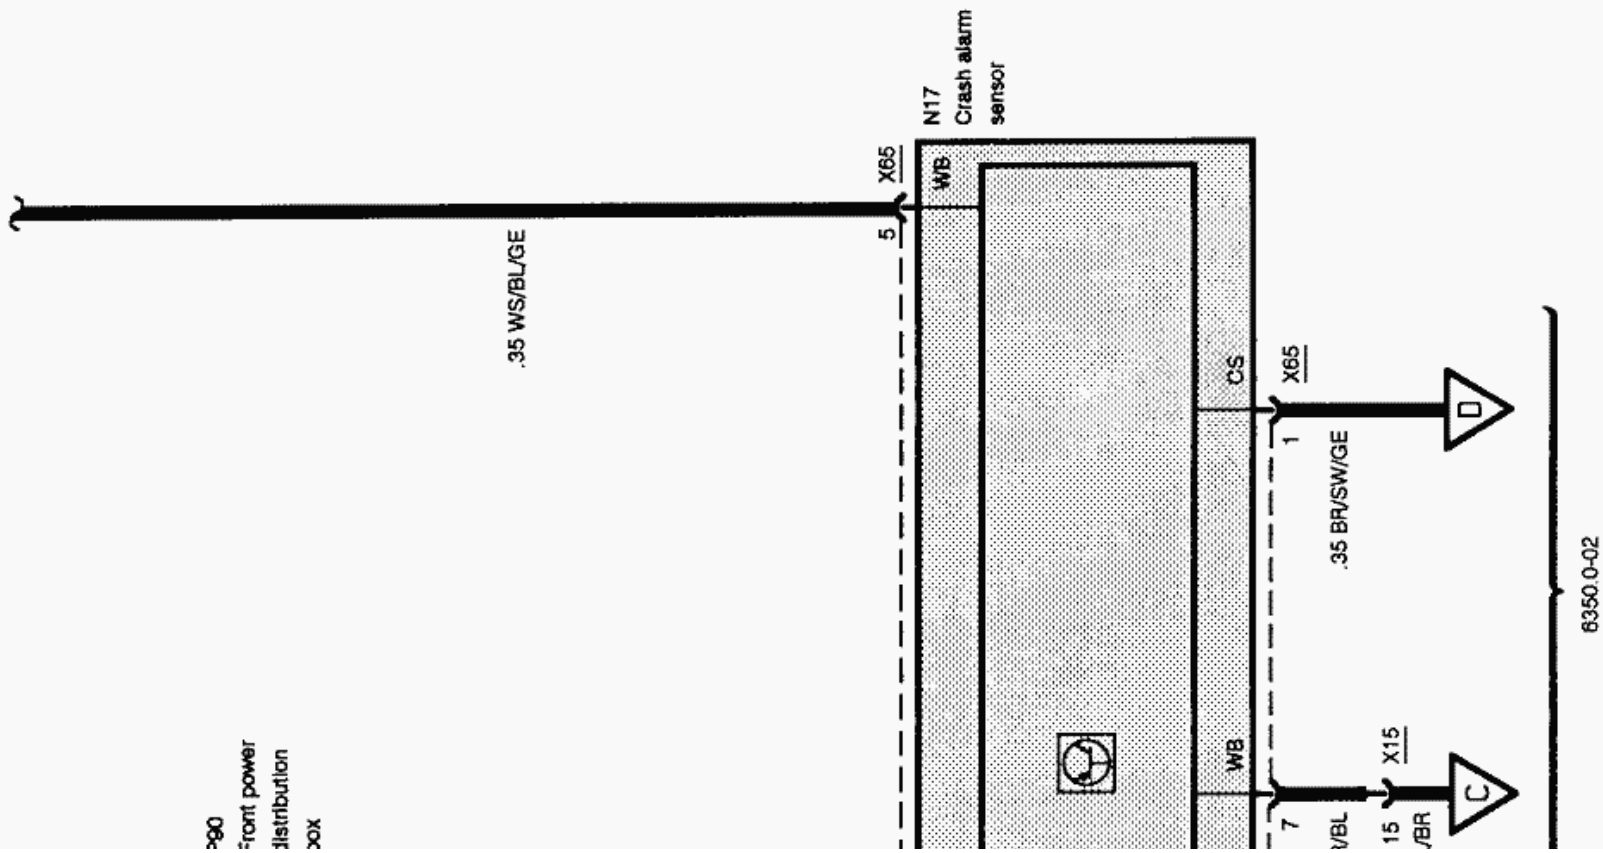


90 Front power distribution box

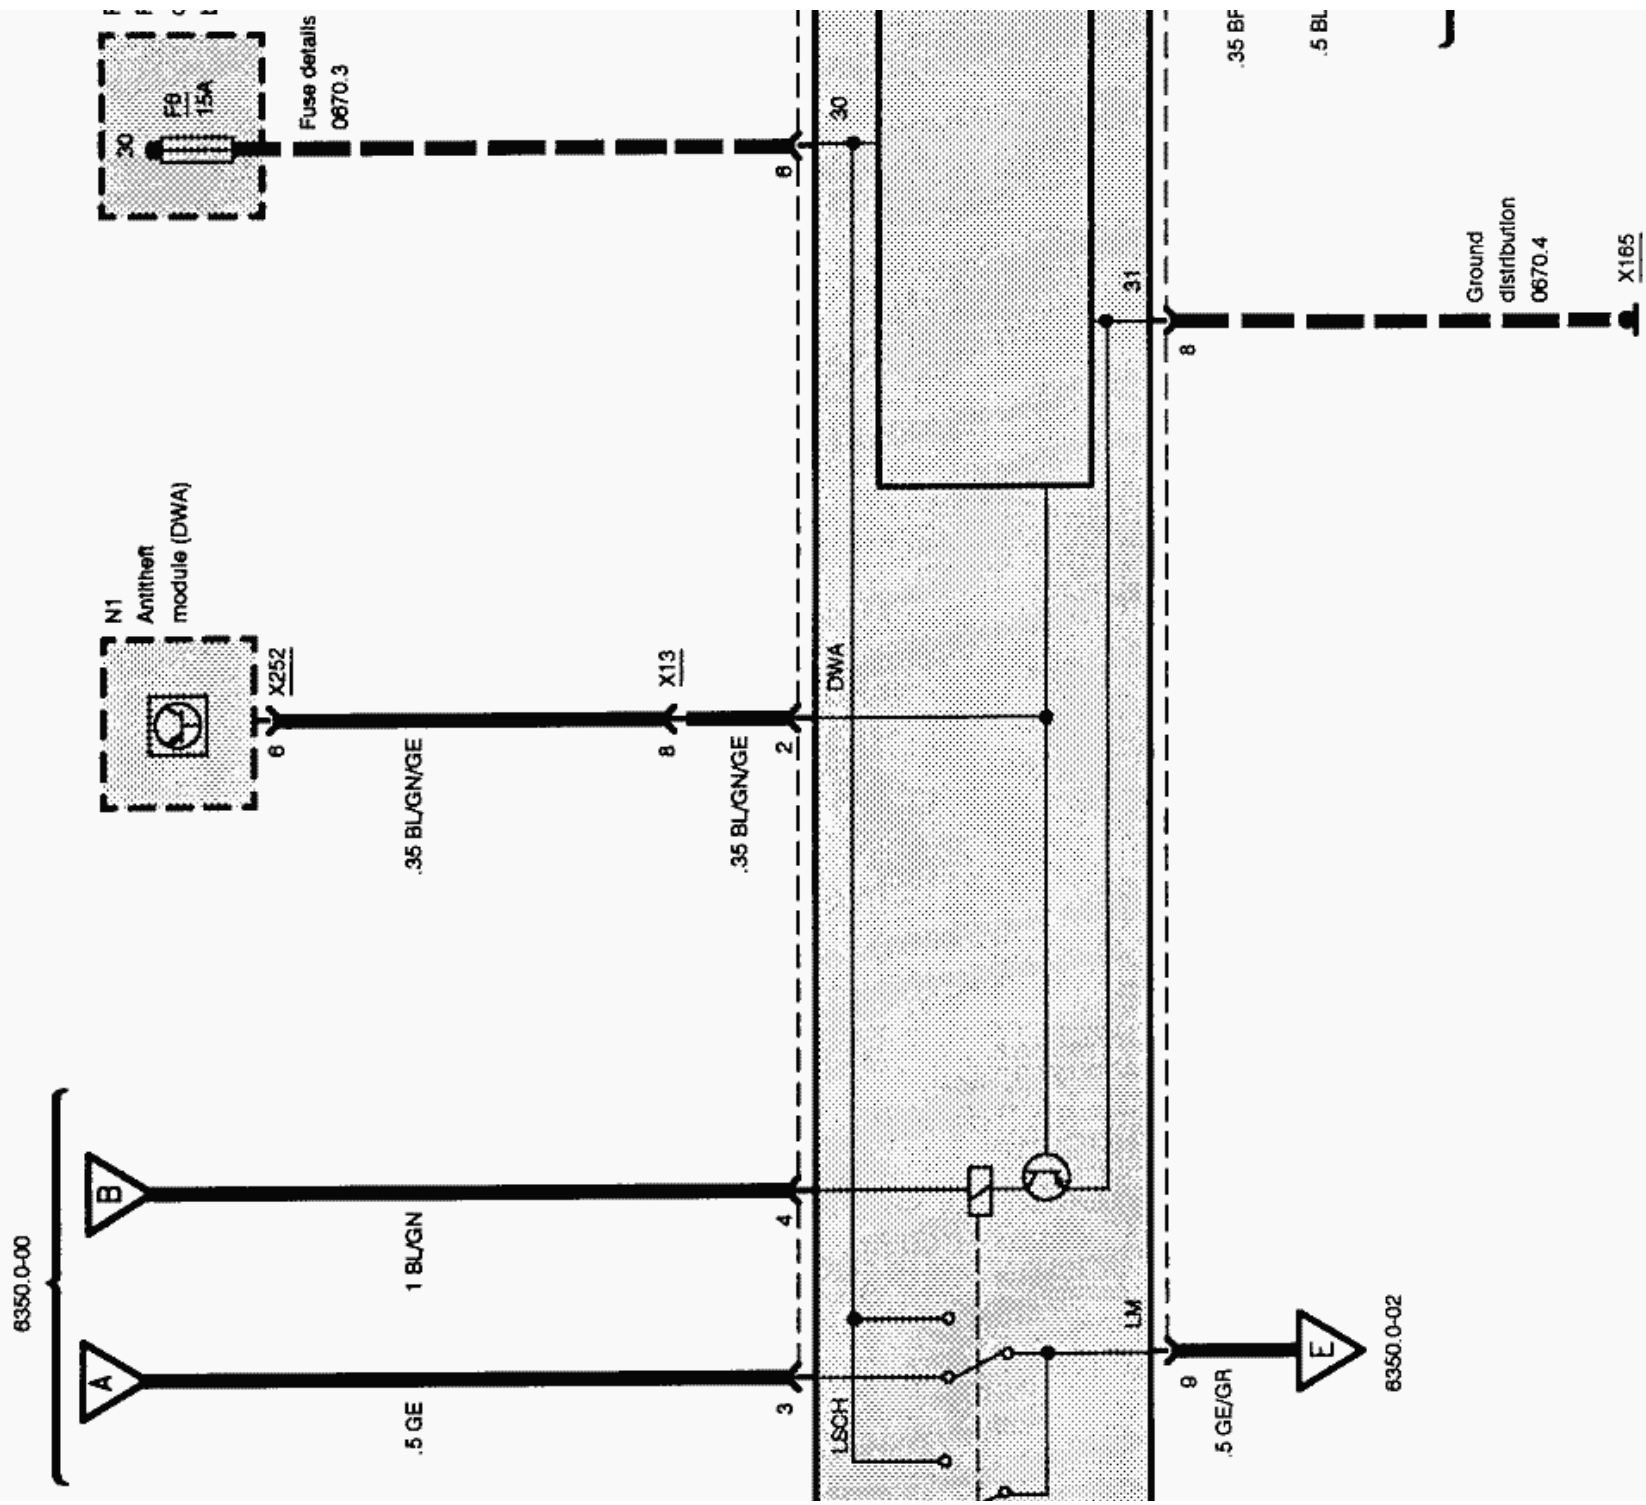


09/93


6350.0-02

1994

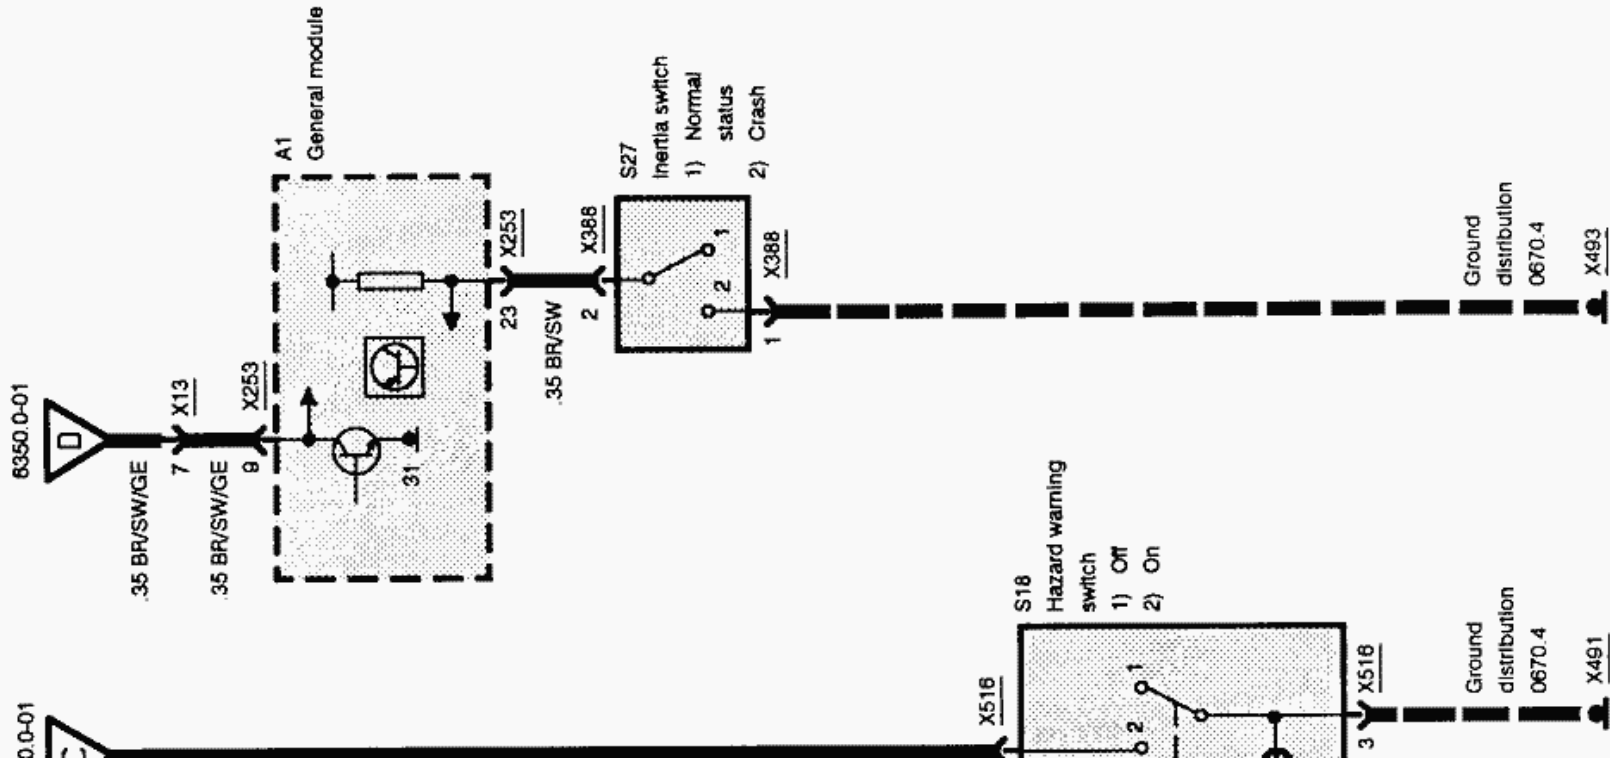

# Crash and alarm sensor

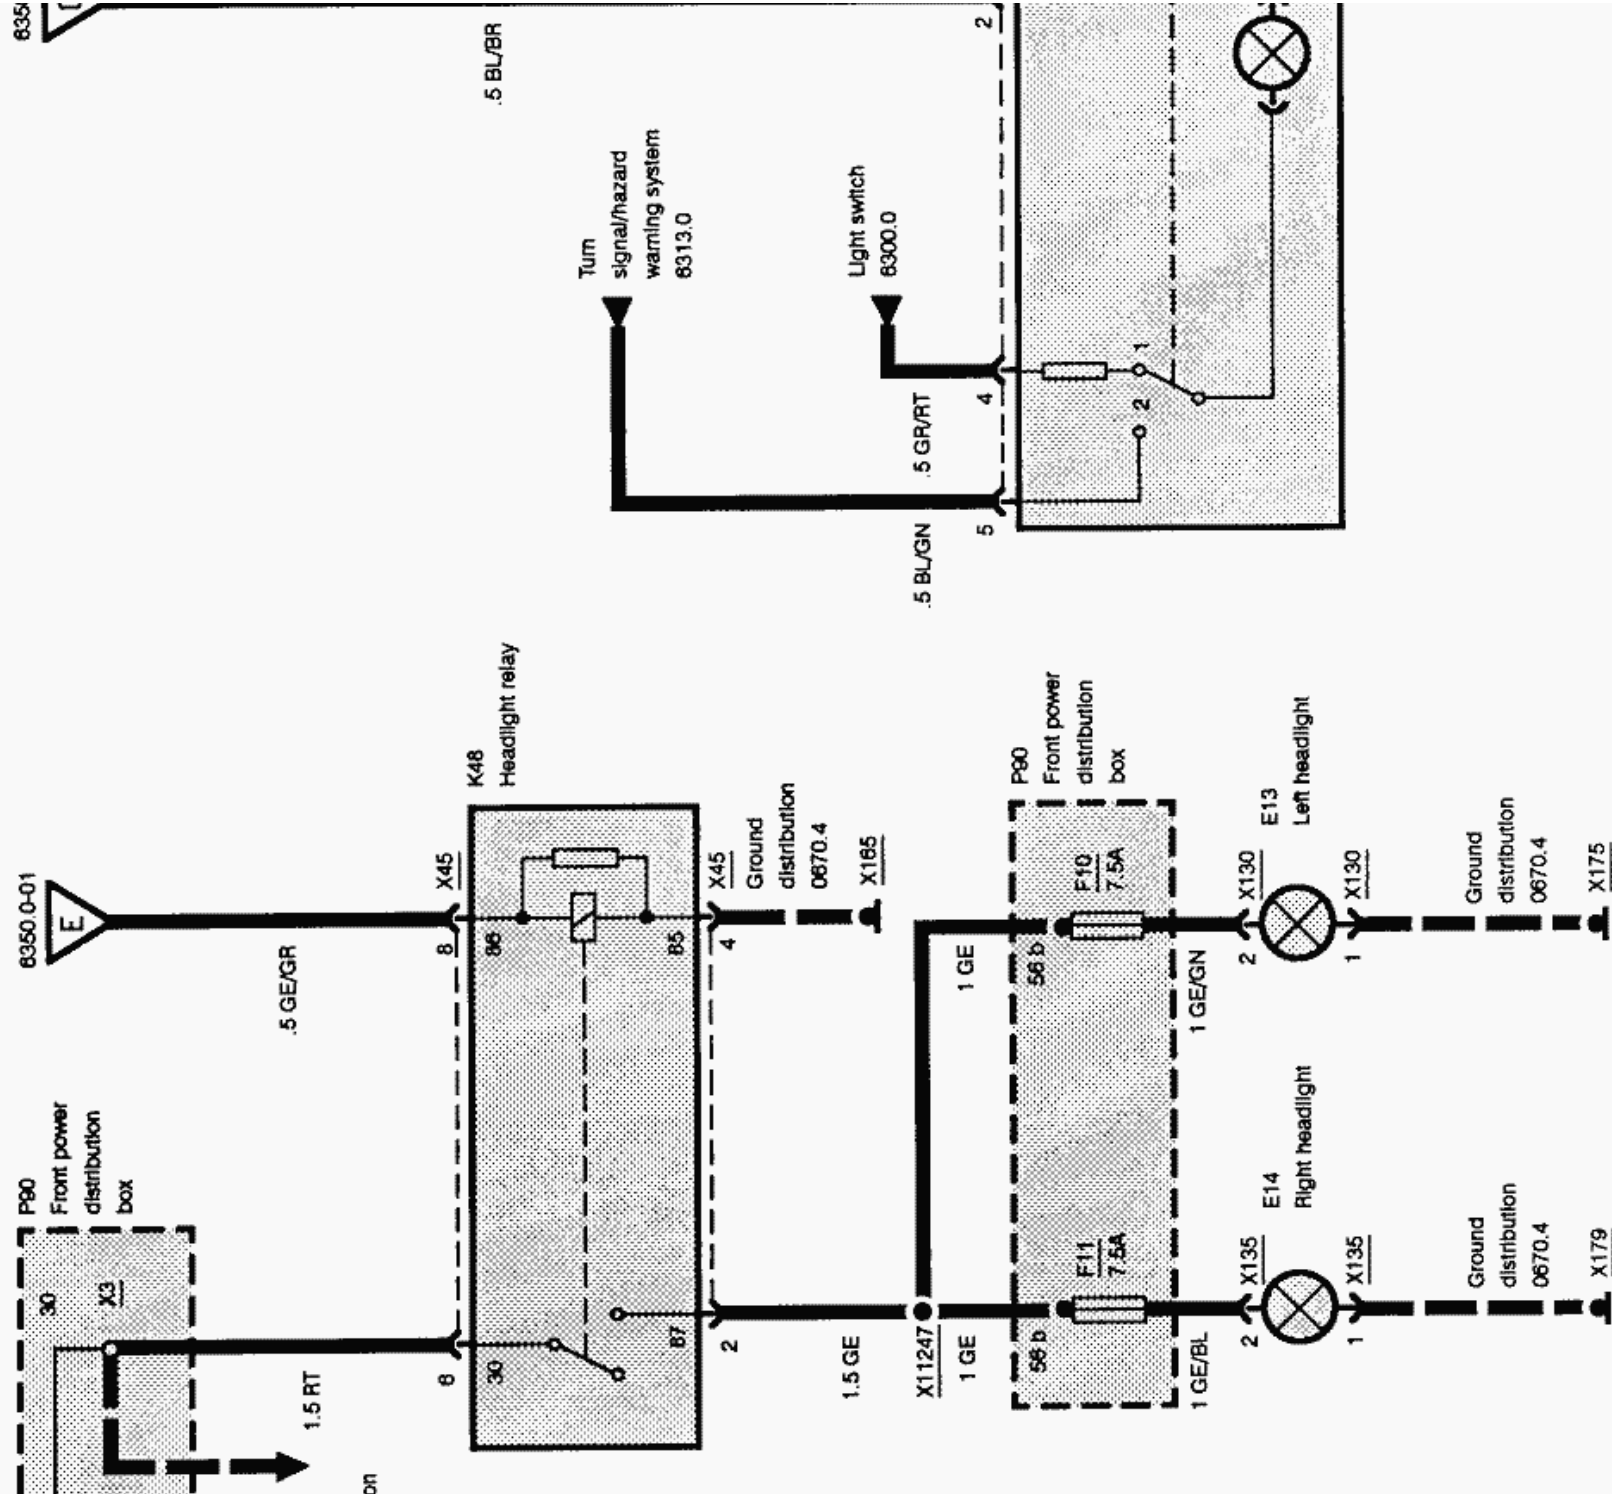

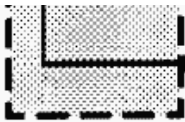

Power  
distributi  
0670.2



**BMWAG**Electrical troubleshooting manual

## 5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

## Double-panel sunroof (ZKE)

## Scheme 5410.2

**Pin Assignment**

X13085 10-pin

X13086 18-pin

**Pin Assignment X13085**

Pin	Type	Description/Function	Connection
1	E	Voltage terminal 30	Power distribution box
2	M	Ground signal -	Motor - front cover
3	A	Component supply +	Motor - front cover
4	M	Ground signal -	Motor - rear cover
5	A	Component supply +	Motor - rear cover
6	M	Control unit ground	Ground connection
7	A	Component supply +	Pulse generator - front lid
8	A	Component supply +	Pulse generator - rear lid
9	M	Ground	DDSHD switch
10	E	Voltage terminal 30 ES	General module


**Pin Assignment X13086**

Pin	Type	Description/Function	Connection
1	E	Position signal	Pulse generator - front lid
2		not used	
3	E	Position signal	Pulse generator - front lid
4	E	Position signal	Pulse generator - front lid
5		not used	
6	E	Control signal	Relay module
7	A	RxD signal	Diagnostic connector
8	E	Switch closed	DDSHD switch
9	E	Switch closed	DDSHD switch
10	E	Position signal	Pulse generator - rear lid
11		not used	
12	E	Position signal	Pulse generator - rear lid
13	E	Position signal	Pulse generator - rear lid
14		not used	
15	E/A	TxD signal	Diagnostic connector
16	E	MSD+	Relay module
17	E	Switch closed	DDSHD switch
18		not used	


**E = Input, A = Output, M = Ground**




# Touring

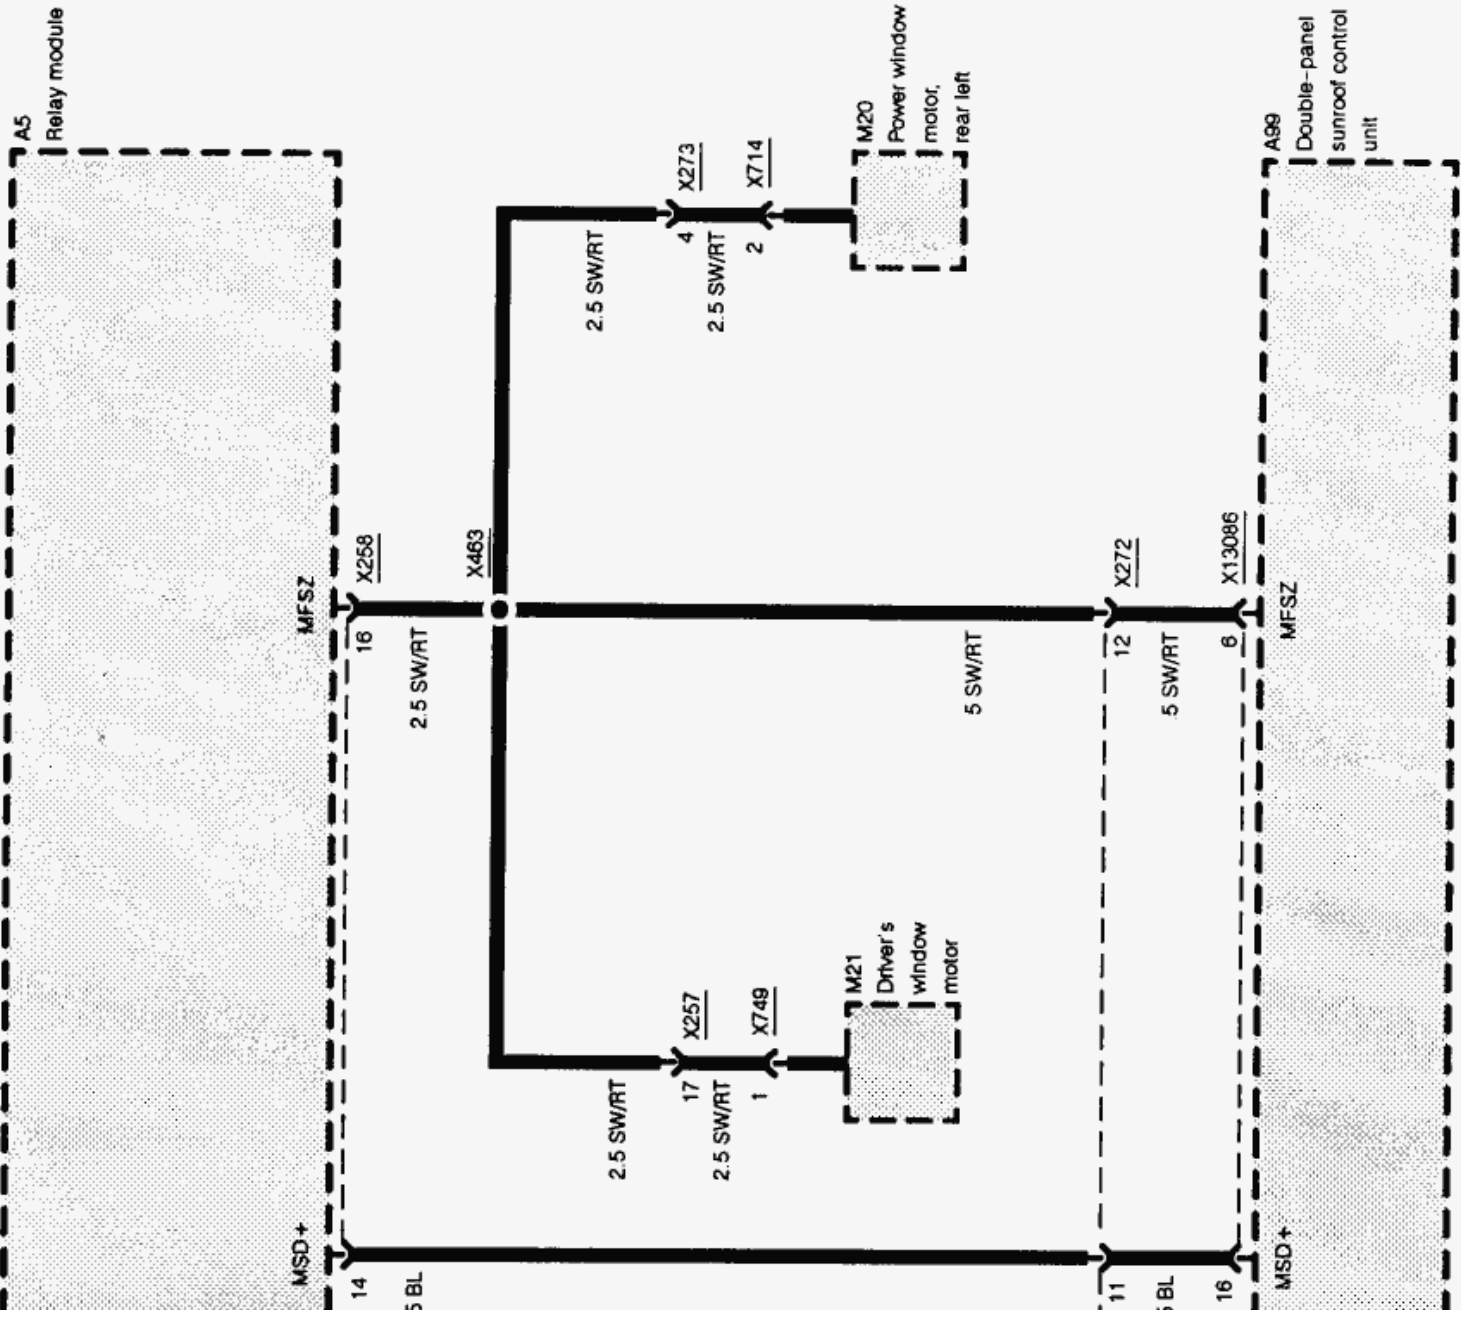


# Double-panel sunroof (ZKE)

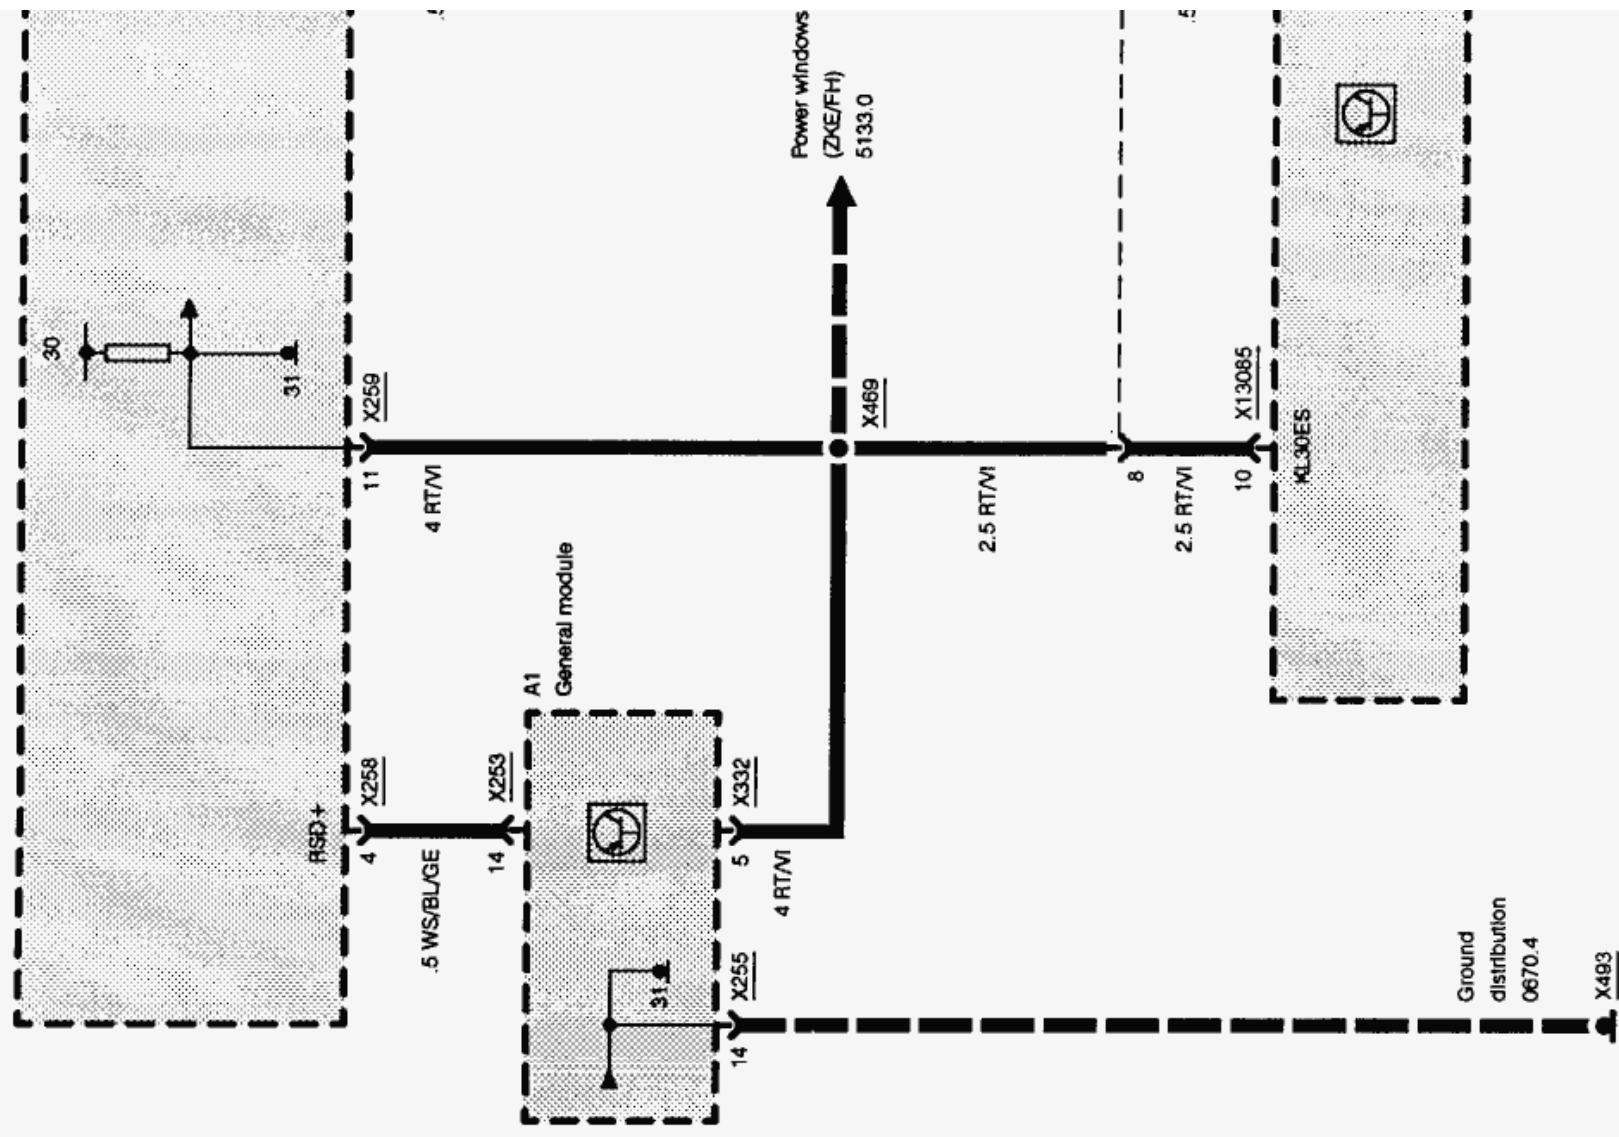


# Touring

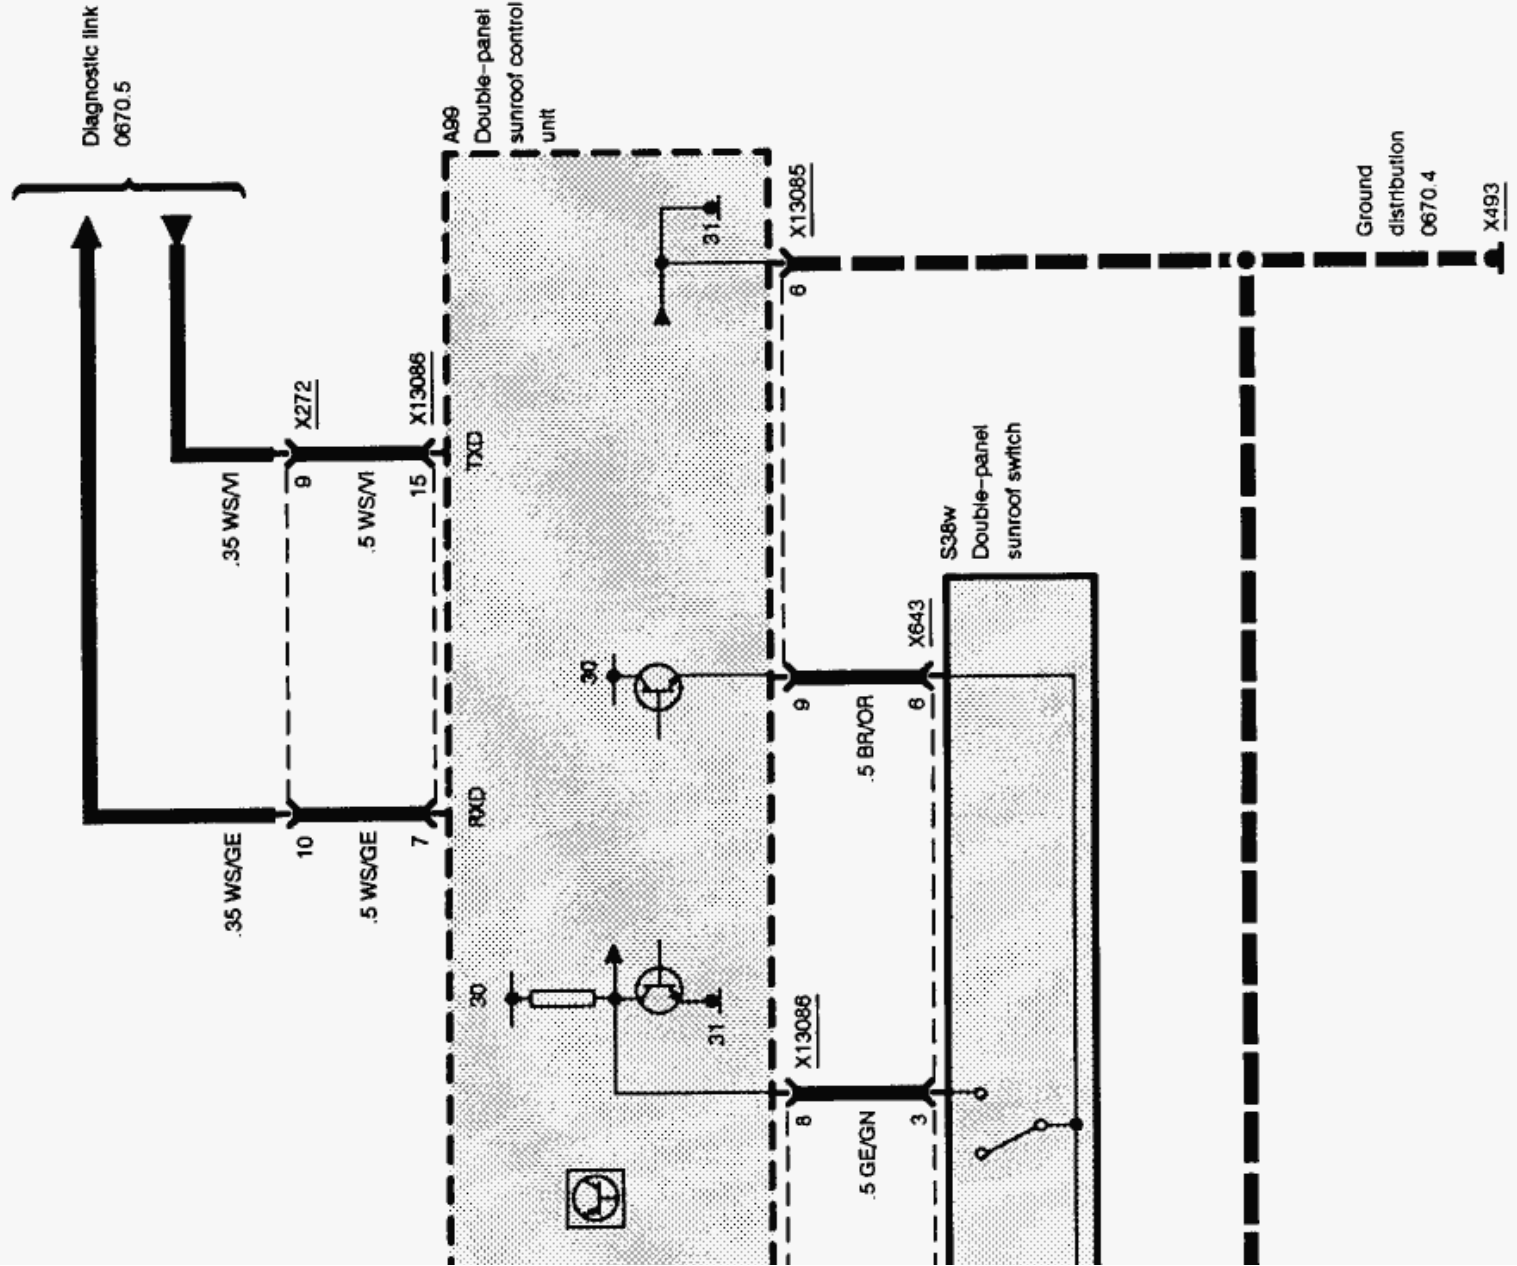


# BMW 5 Double-panel sunroof (ZKE)

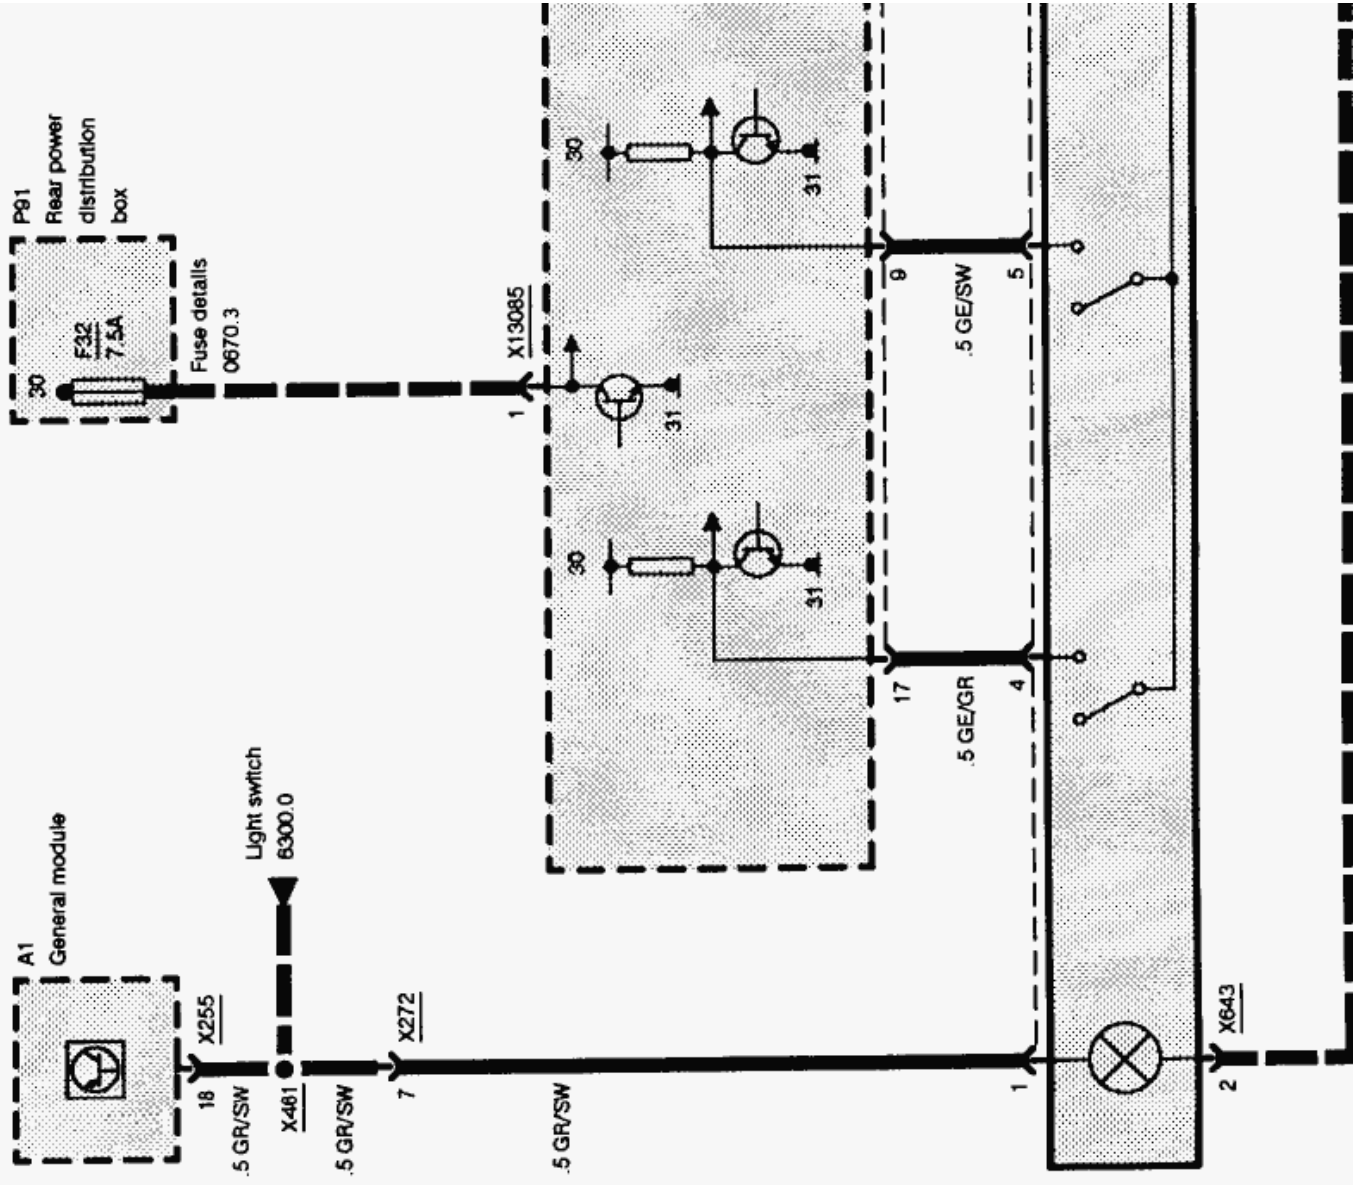

# Touring

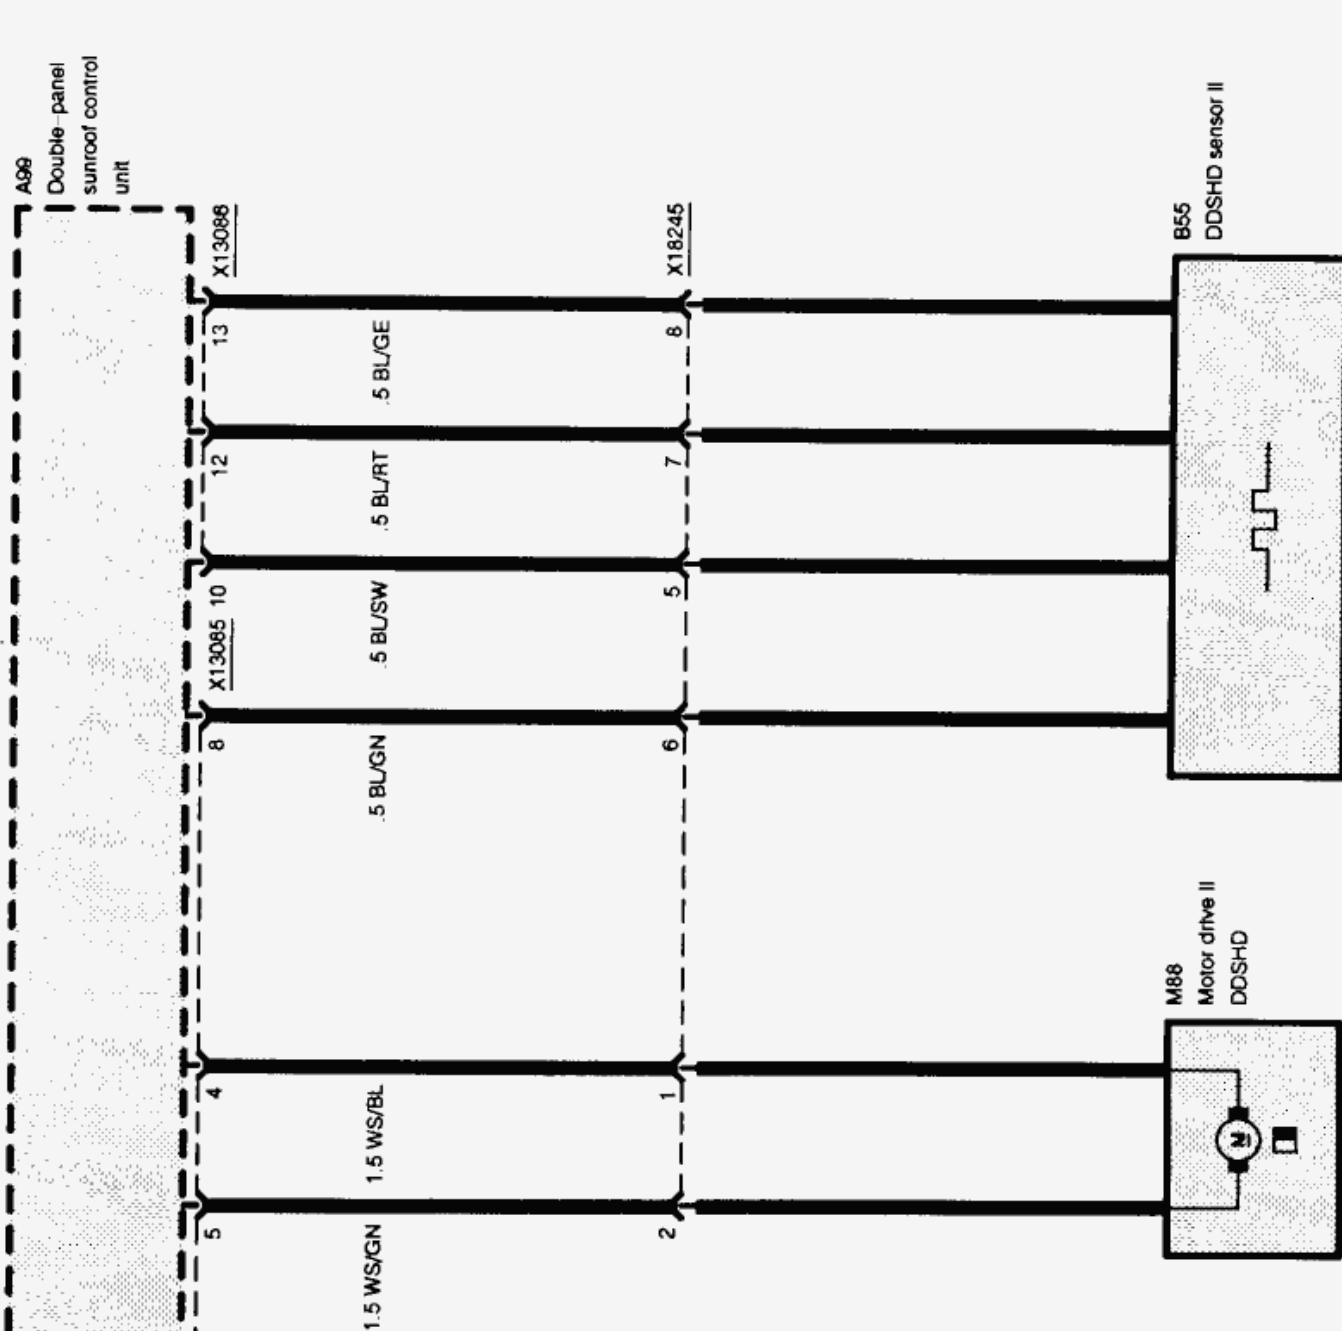

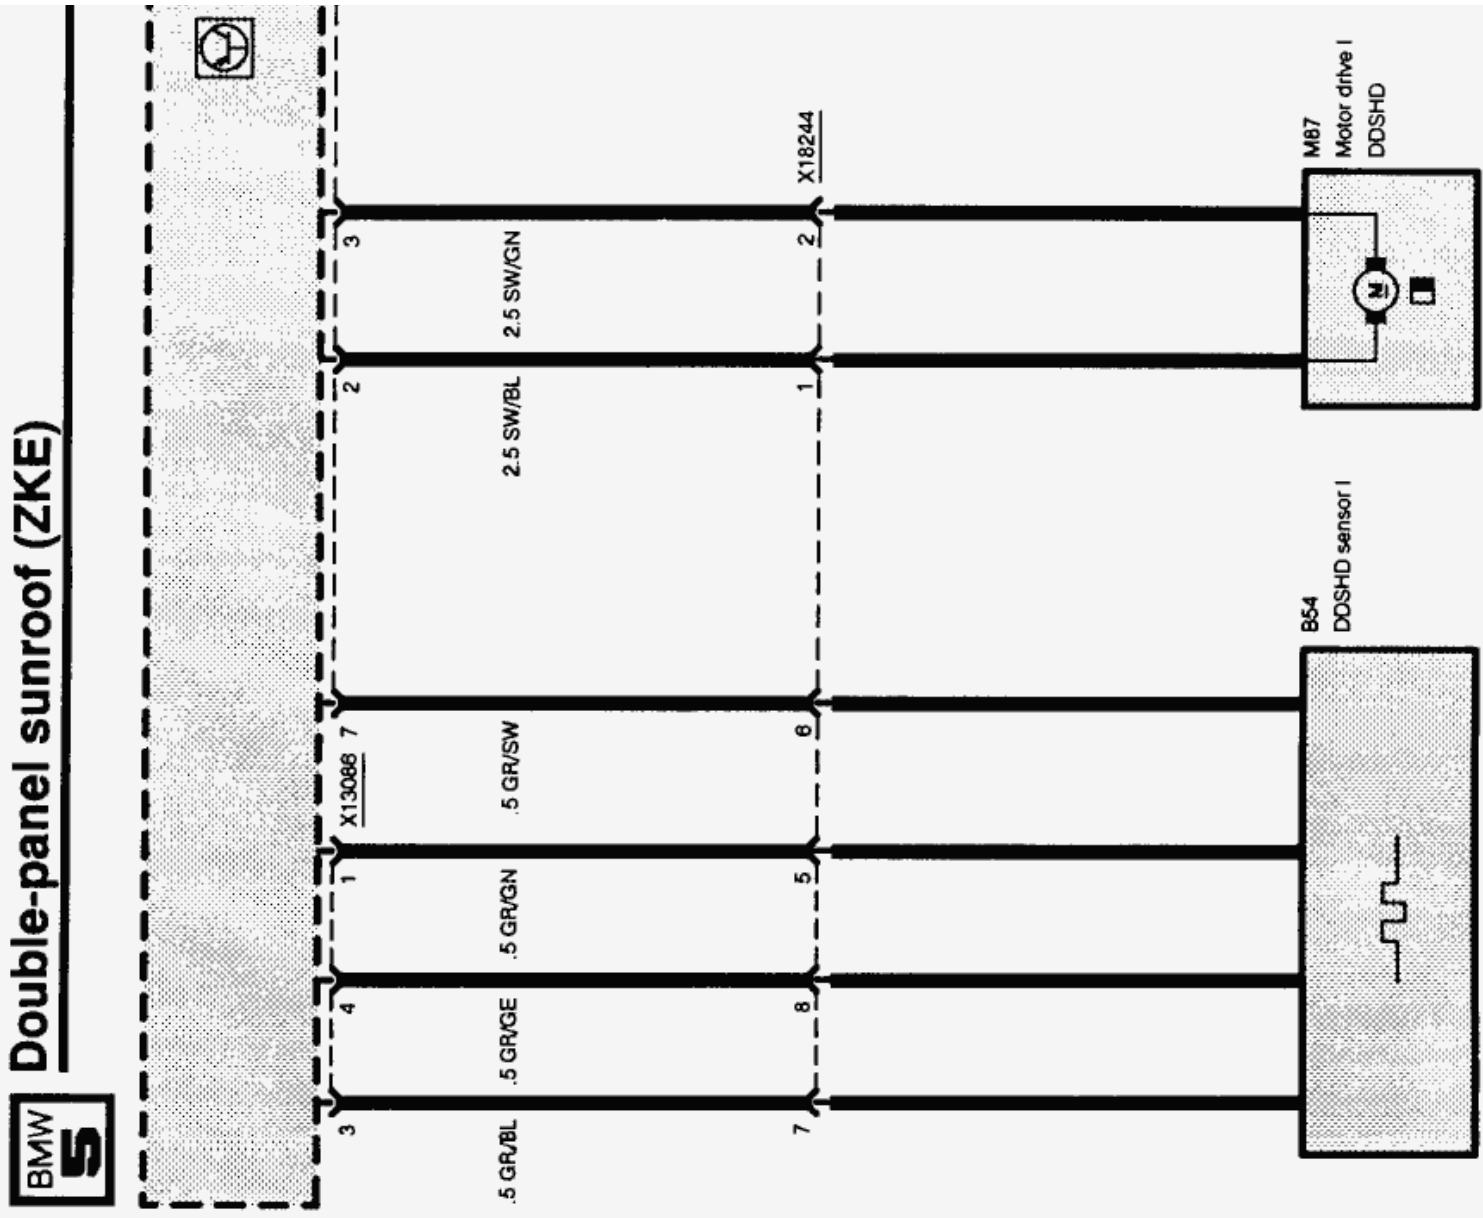

# BMWAG


## Electrical troubleshooting manual

### 5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


#### Interior

#### Scheme 6332.0

09/93 ————— 6332.0-00 ————— 1994

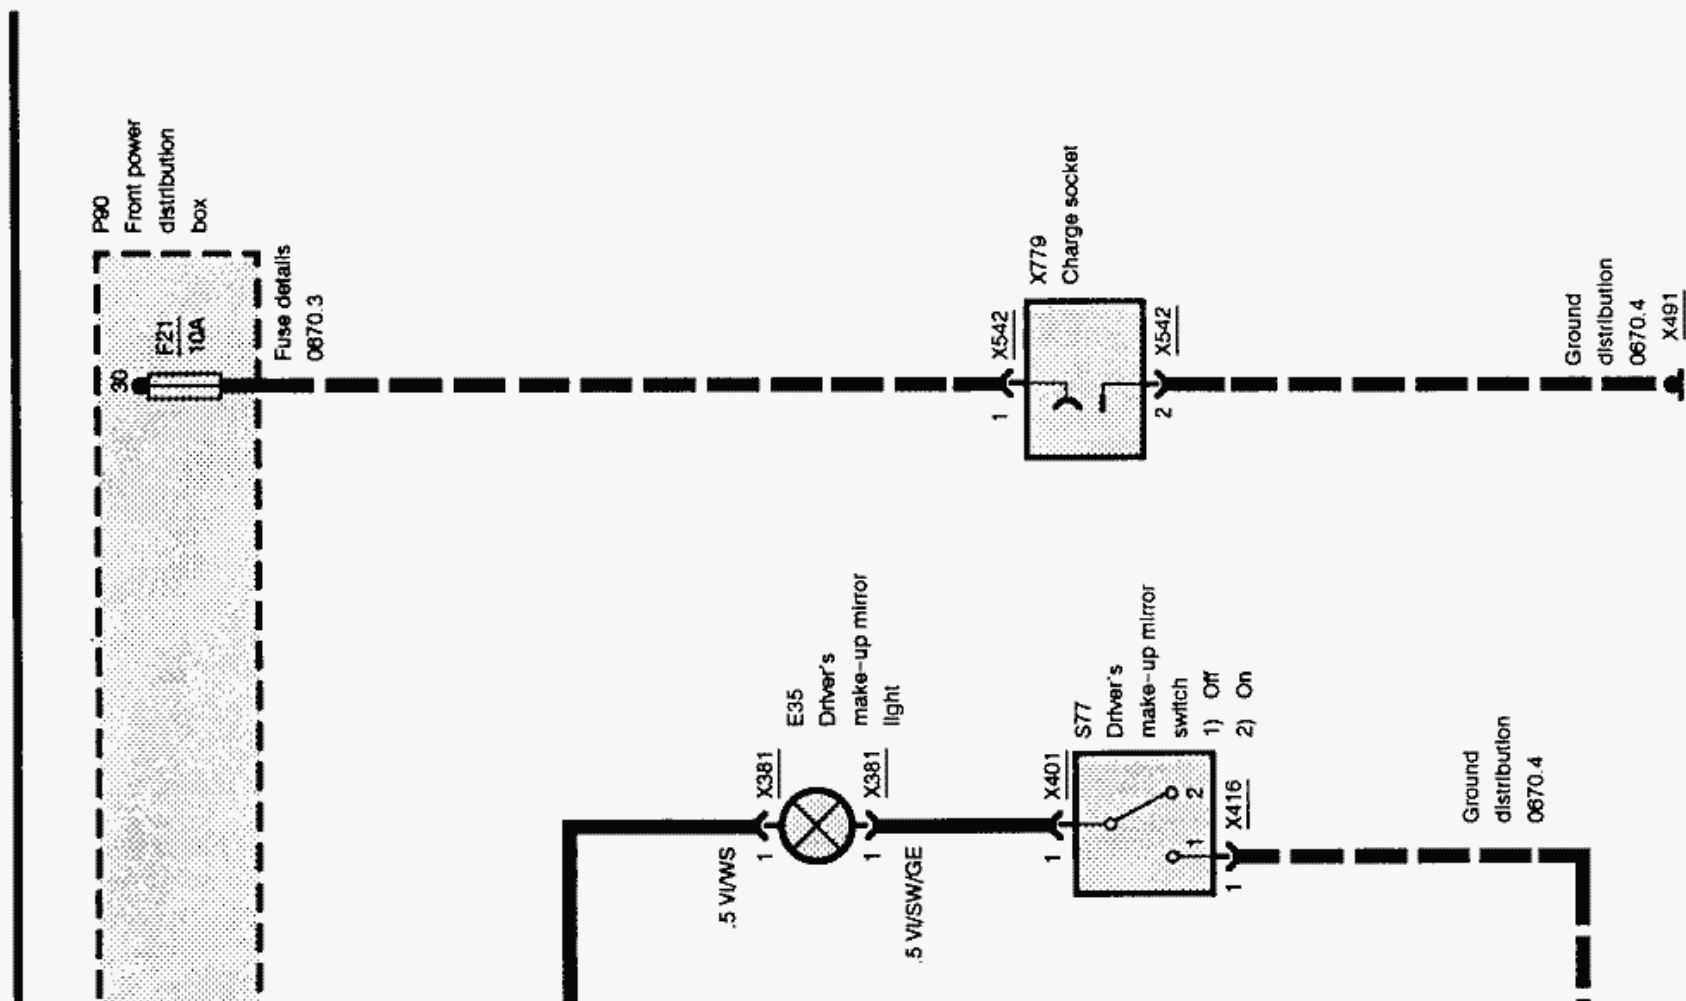

# Interior

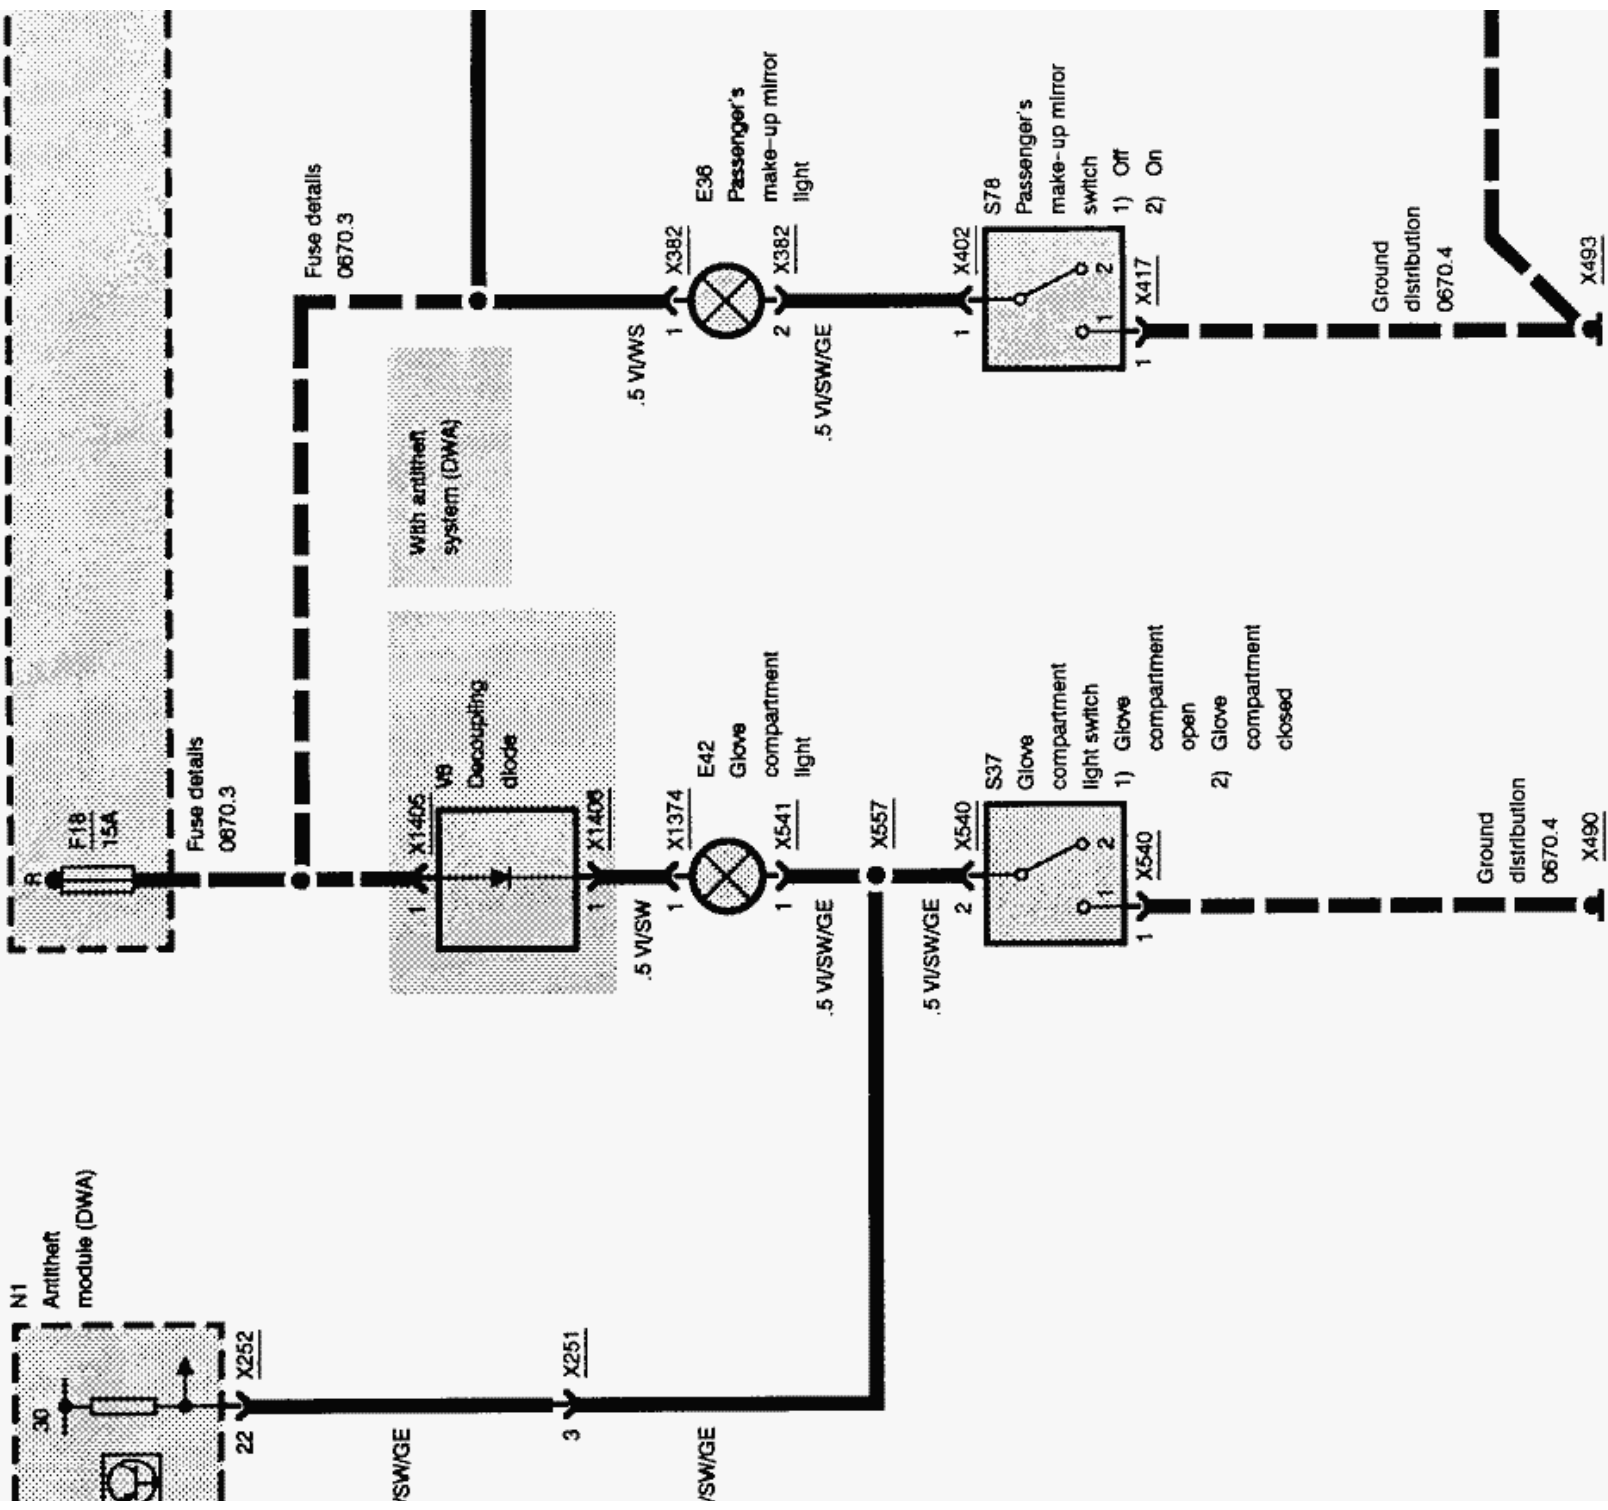






.5 VU

.5 VU

09/93

6332.0-01


1994

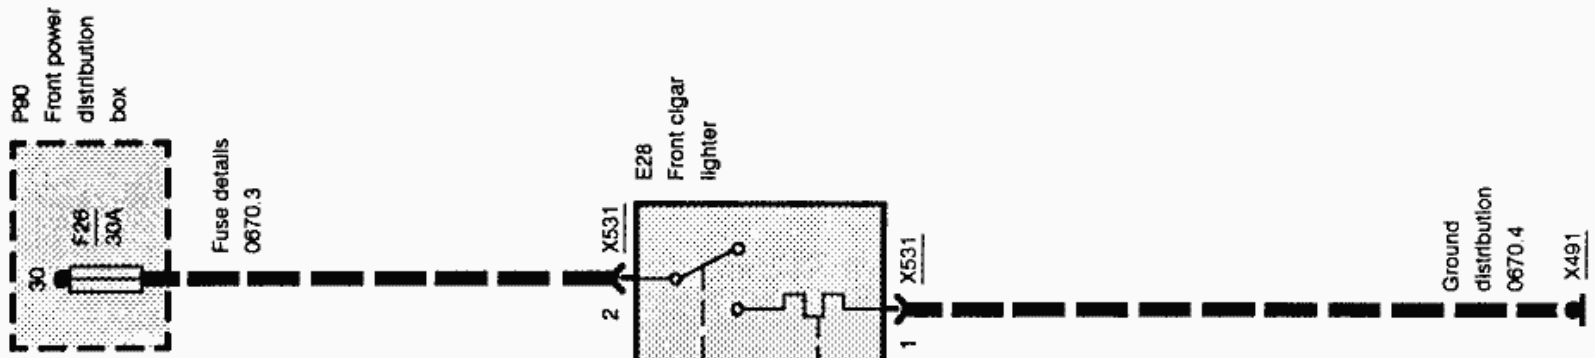

Light switch  
300.0


Front parking  
license  
plate light  
switch

# Interior

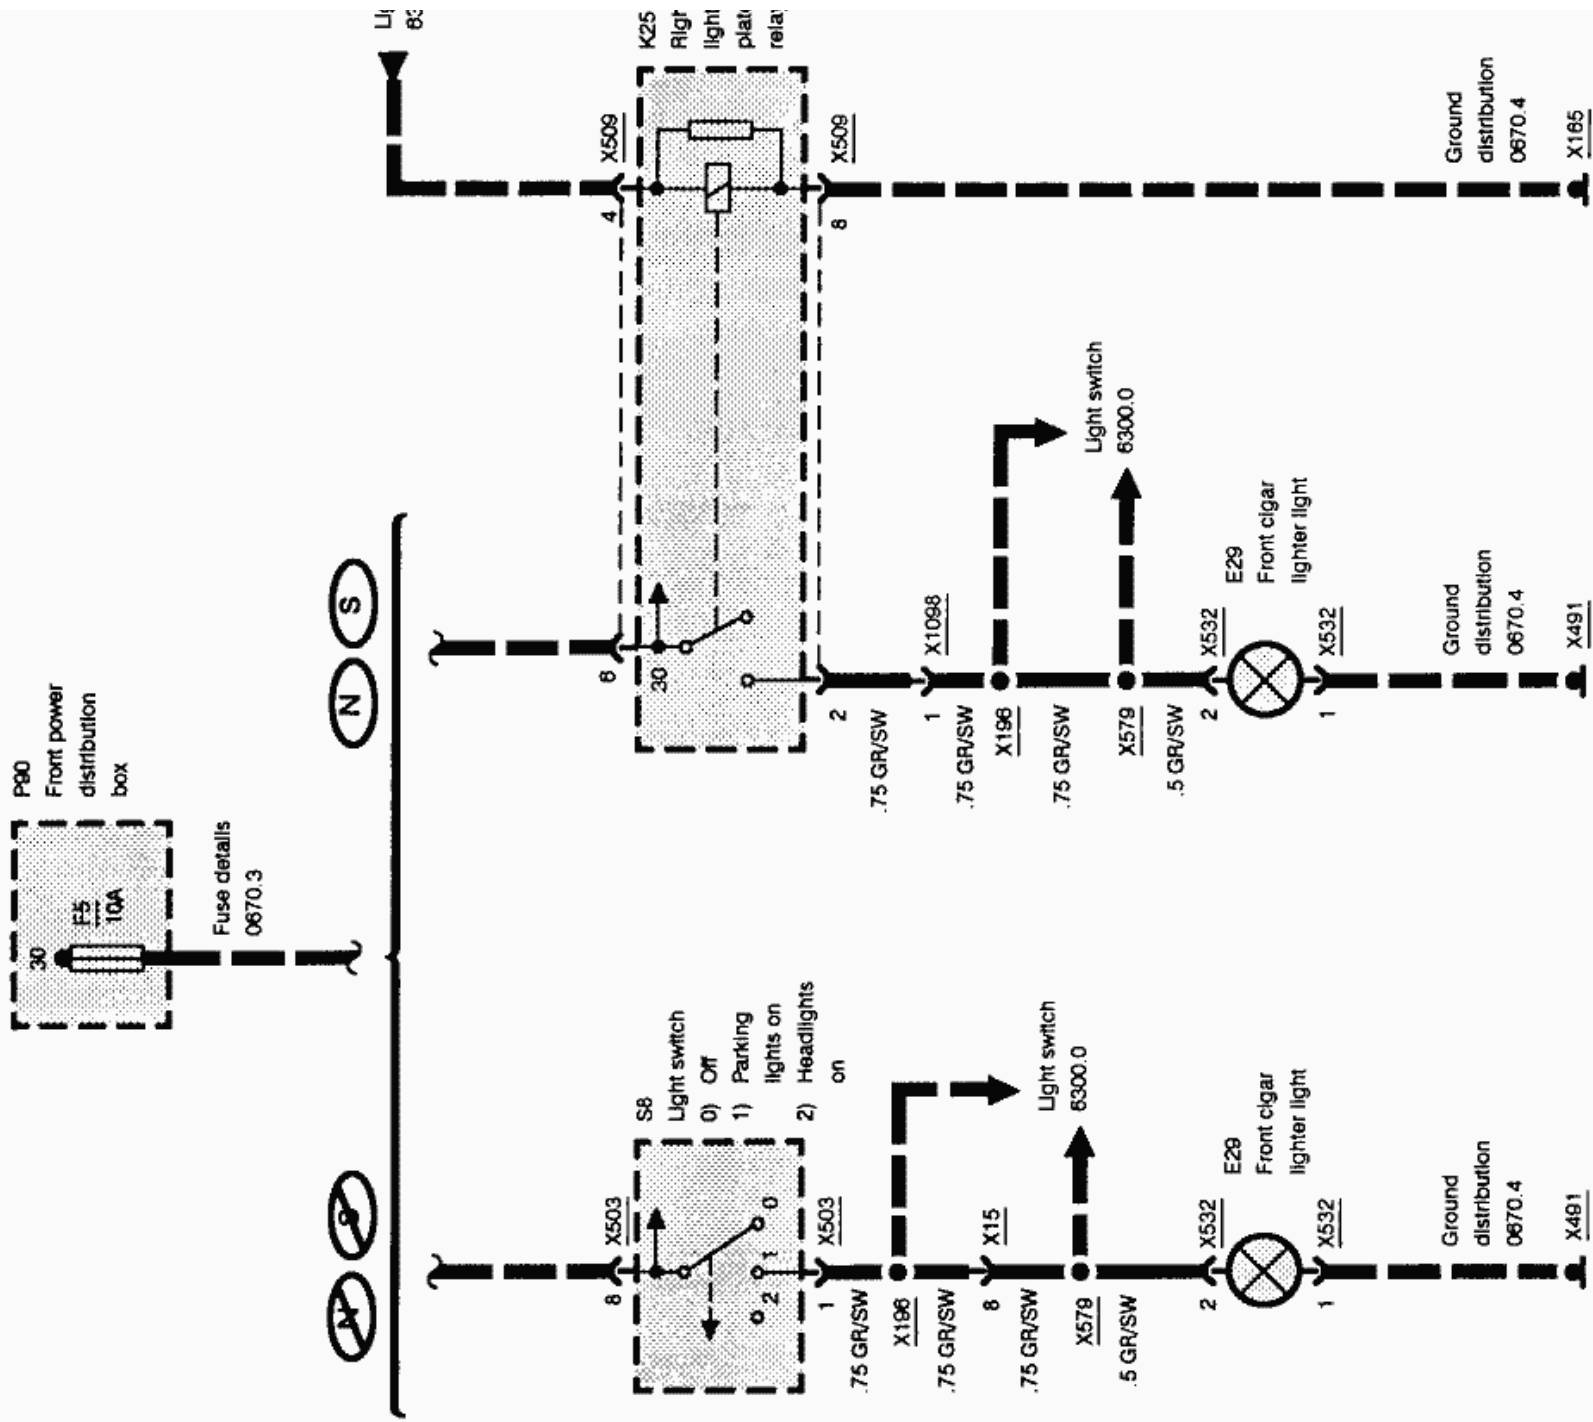




# BMW **5** Diagnostic link Block diagram

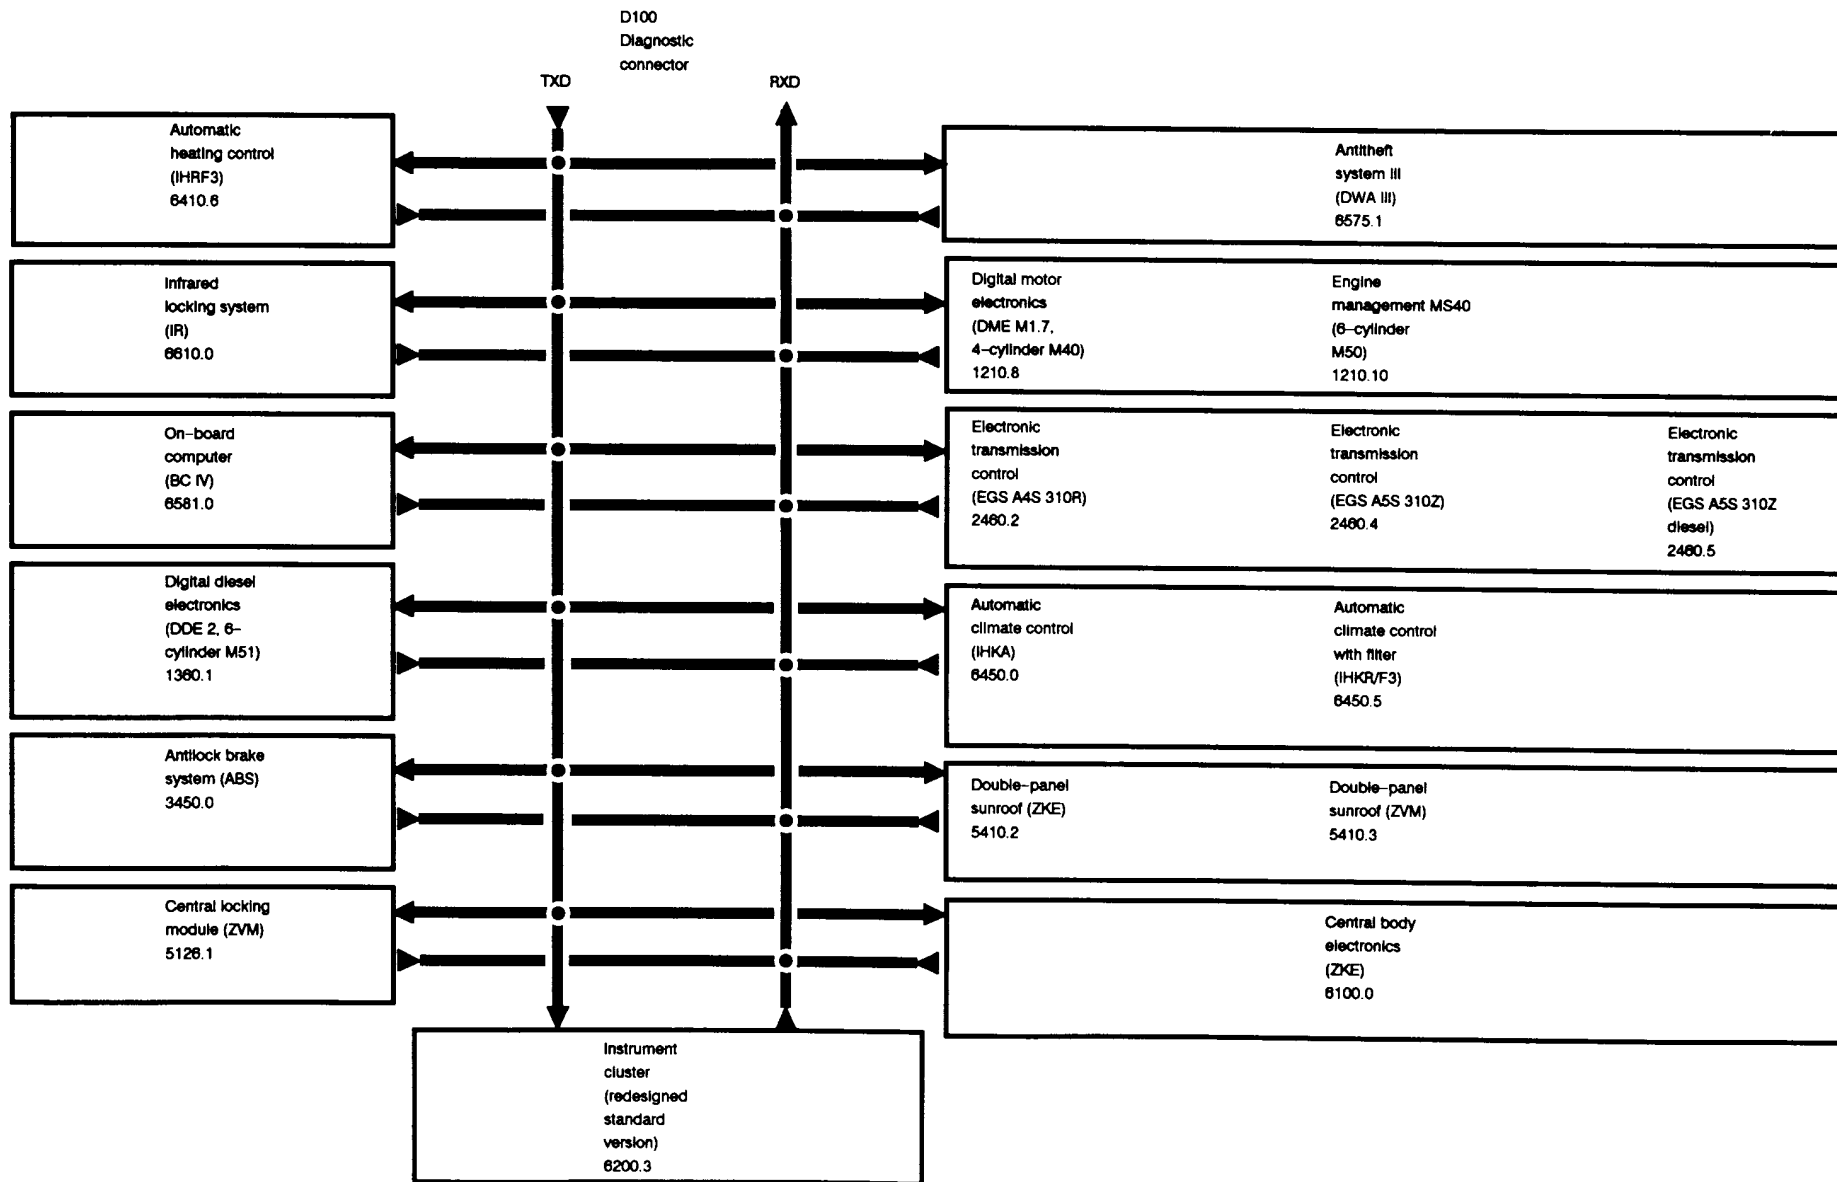




# Diagnostic link

## TXD, Pin 20

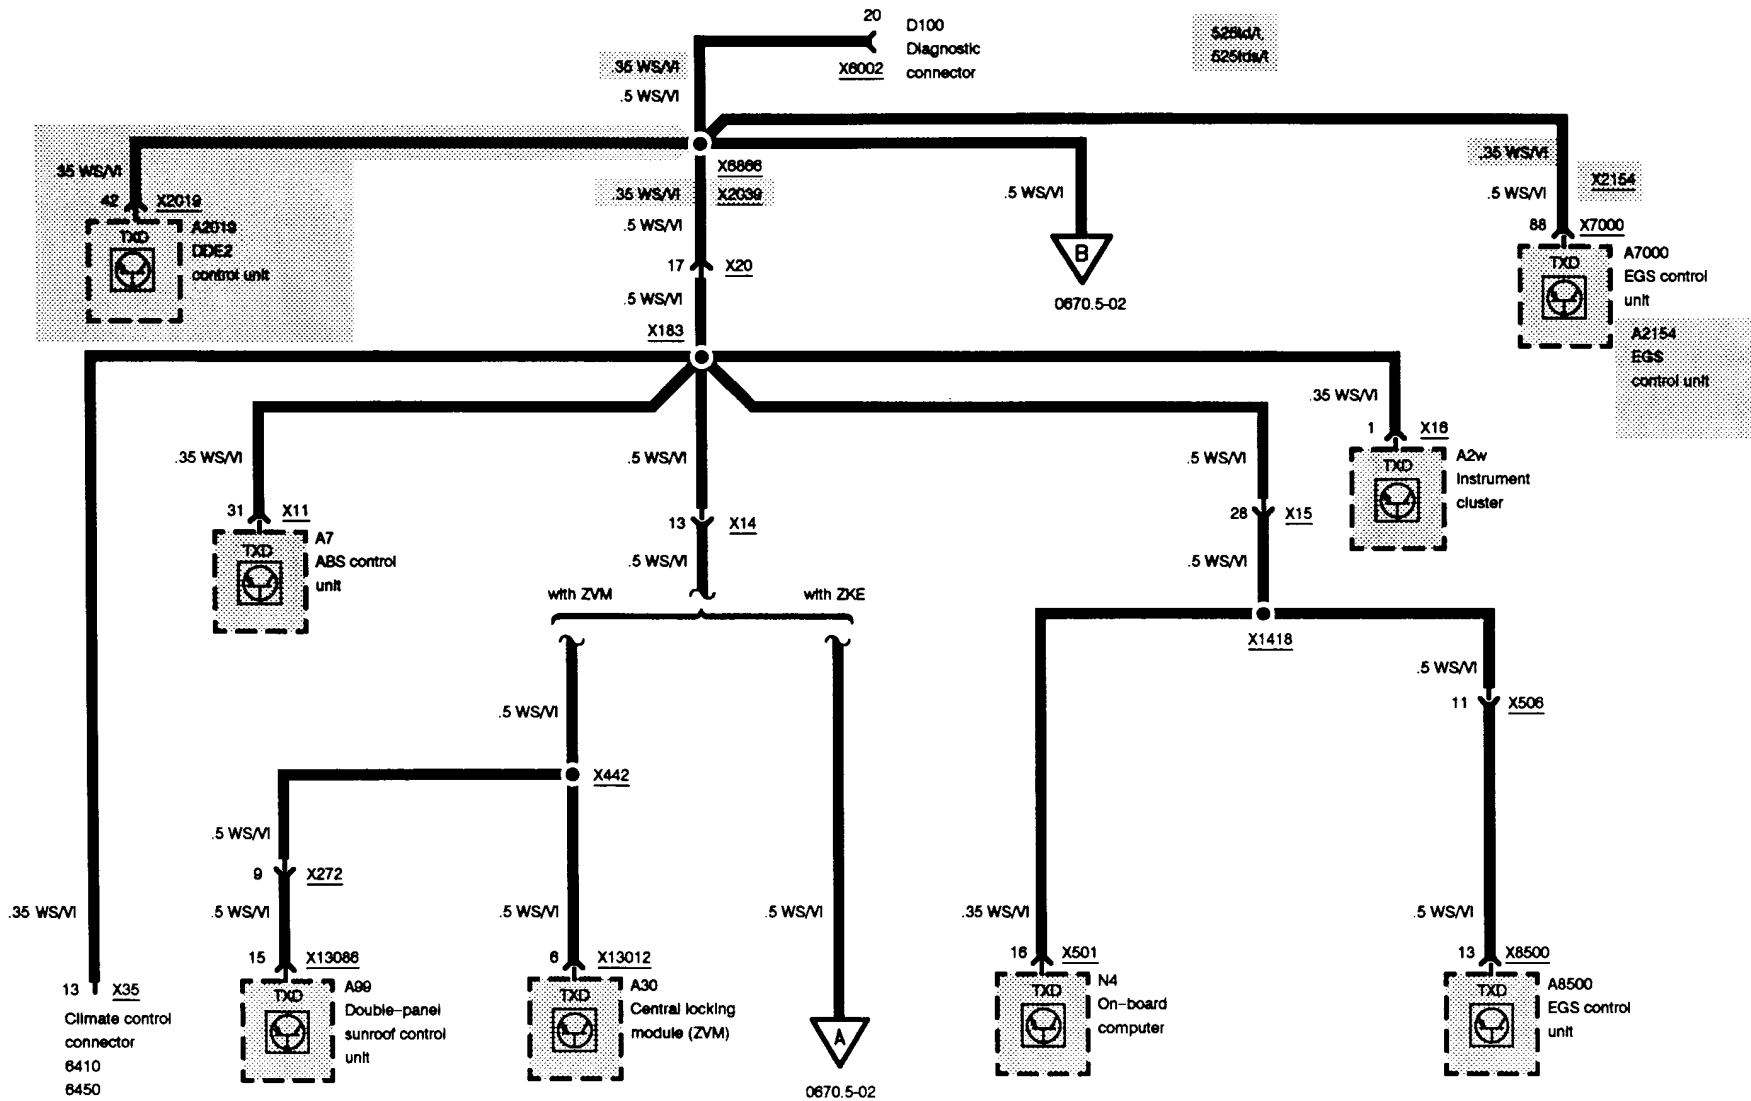


http://www.bmwusa.com/press/tech/press/0670.5-01.html © 1993 BMW of North America, LLC



# BMW 5 Diagnostic link TXD

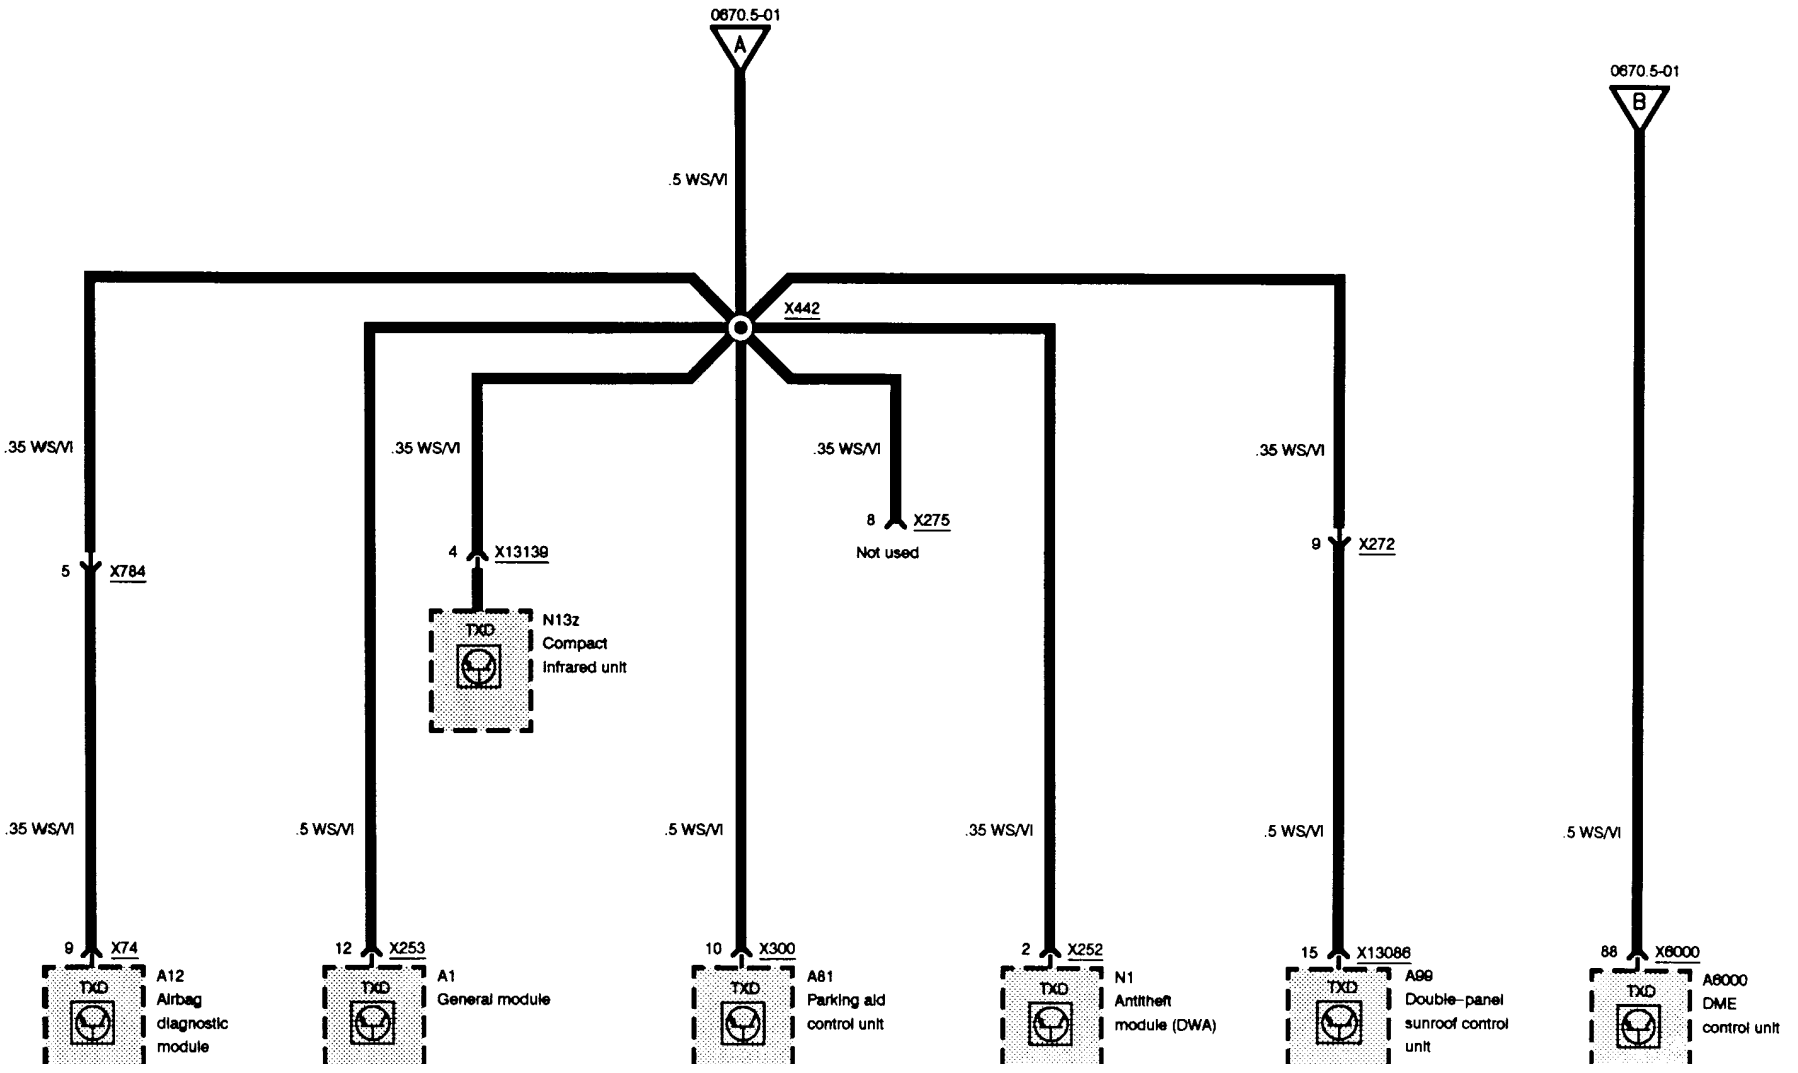

09/93 — 0670.5-02

# BMW 5 Diagnostic link RXD

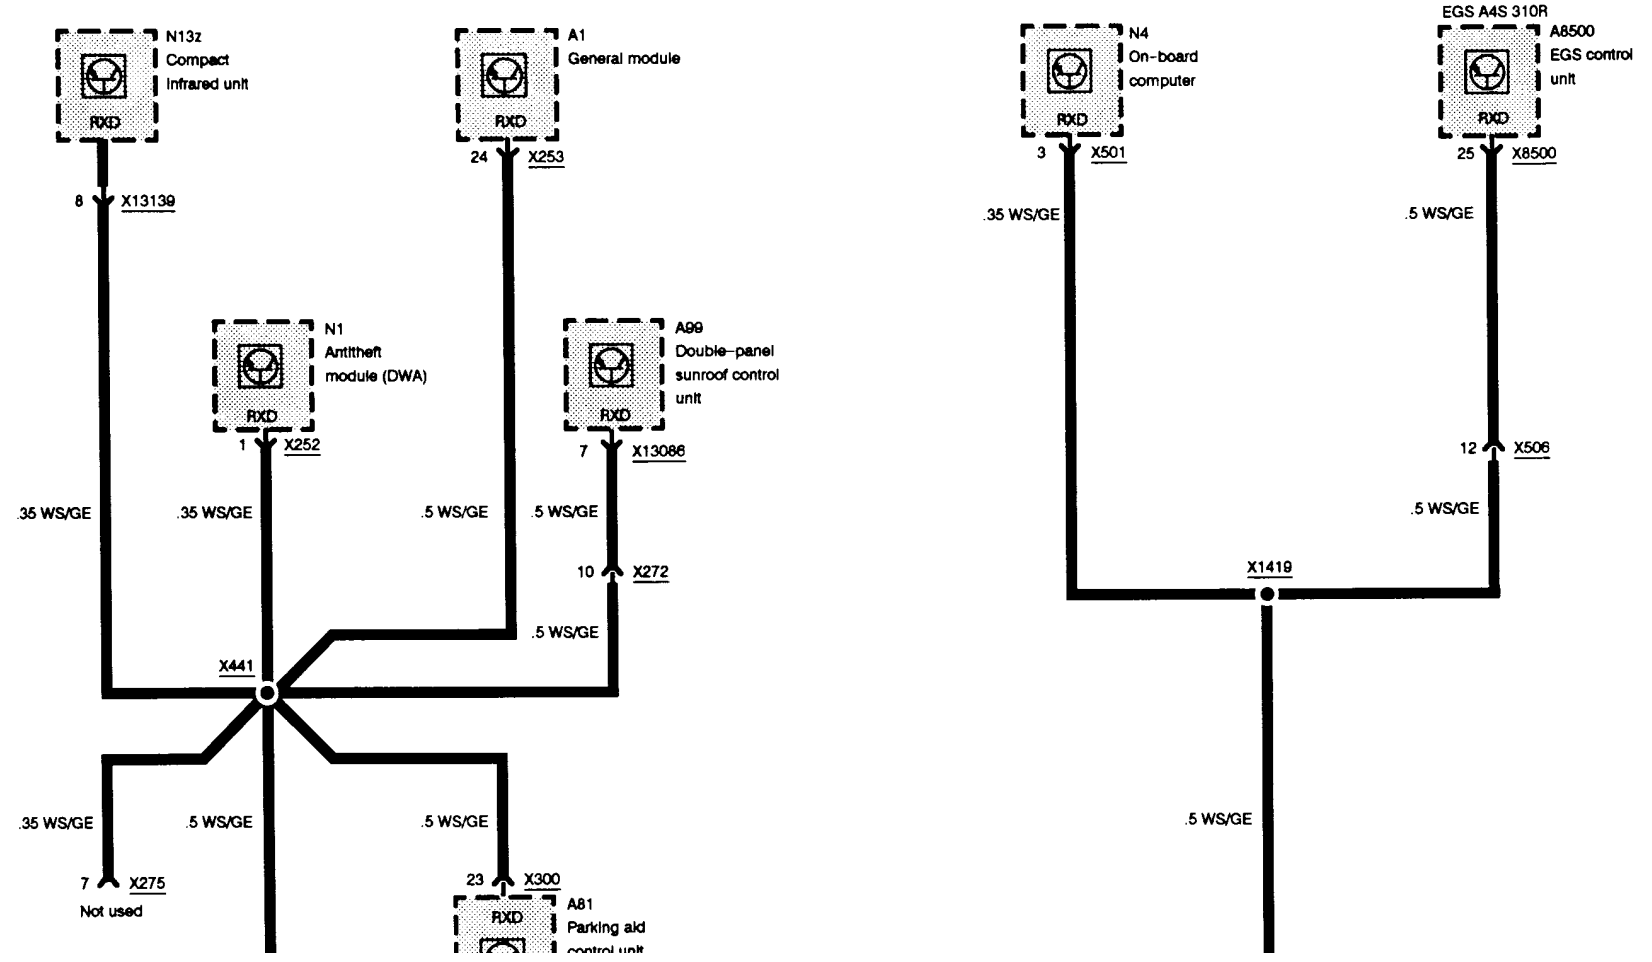

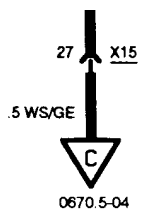 


1994


# BMW 5 Diagnostic link RXD, Pin 15

09/93

0670.5-04

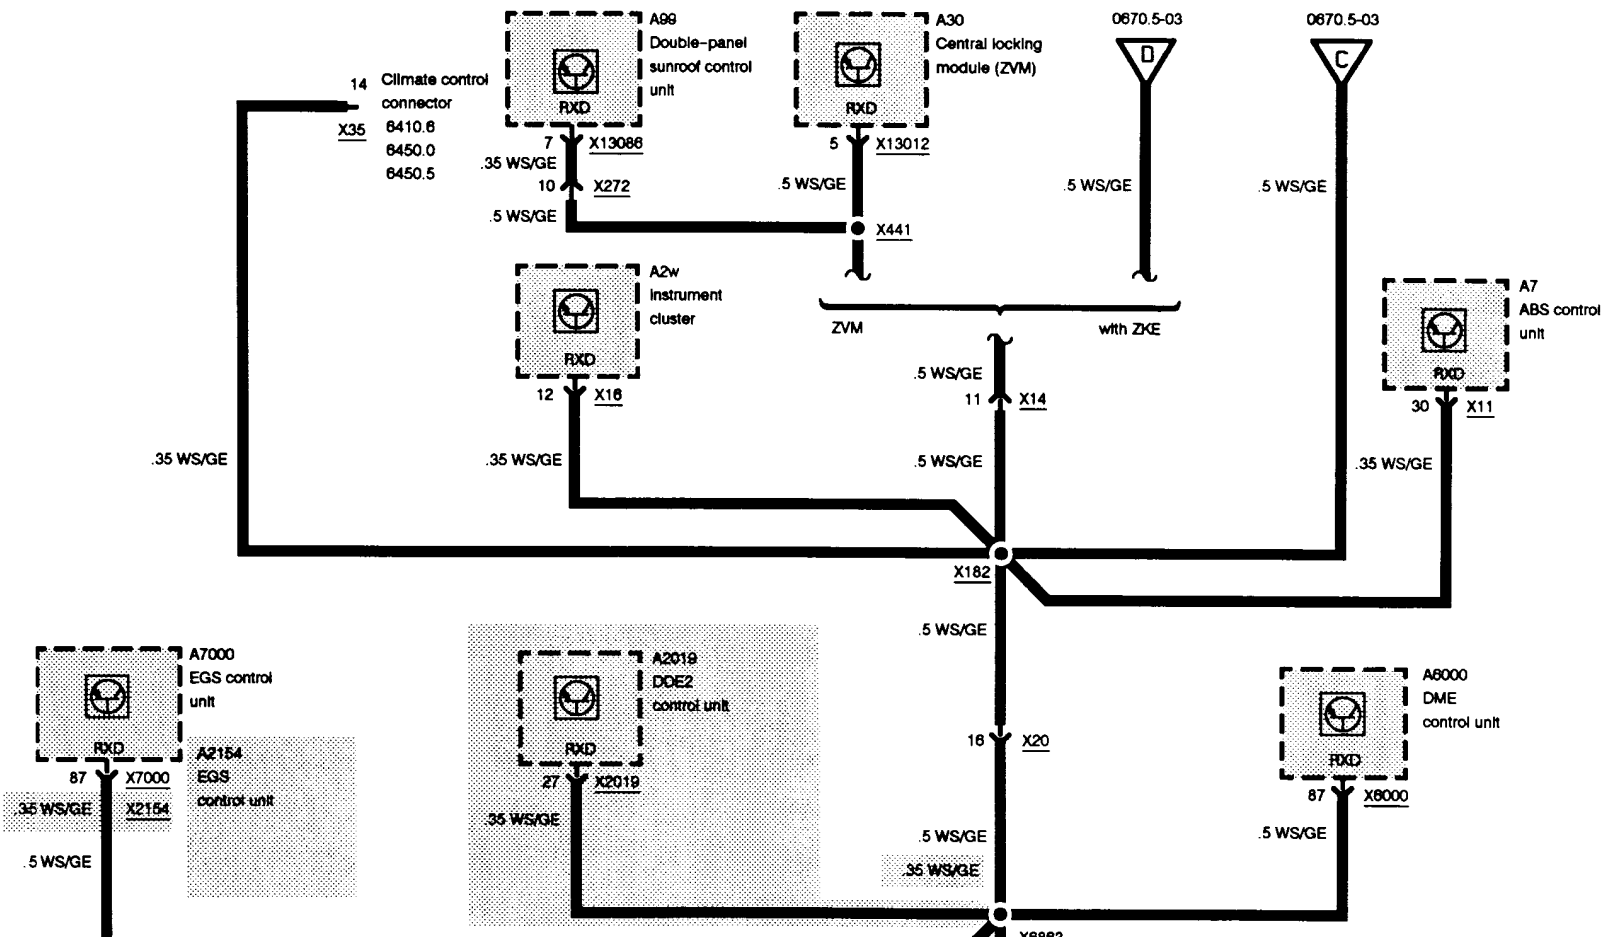




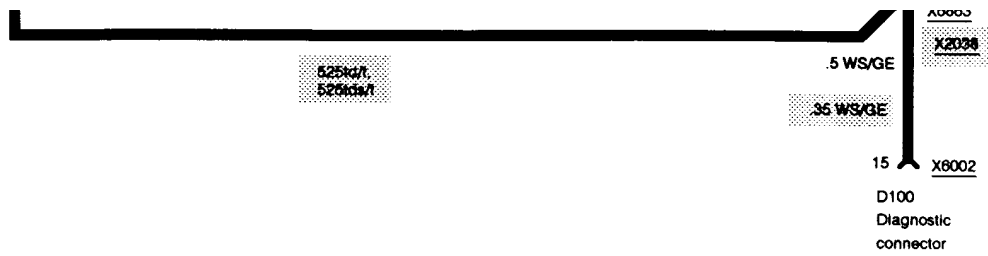

1994


**BMW 5** Diagnostic link  
Diagnostic connector pin 19

518i/t

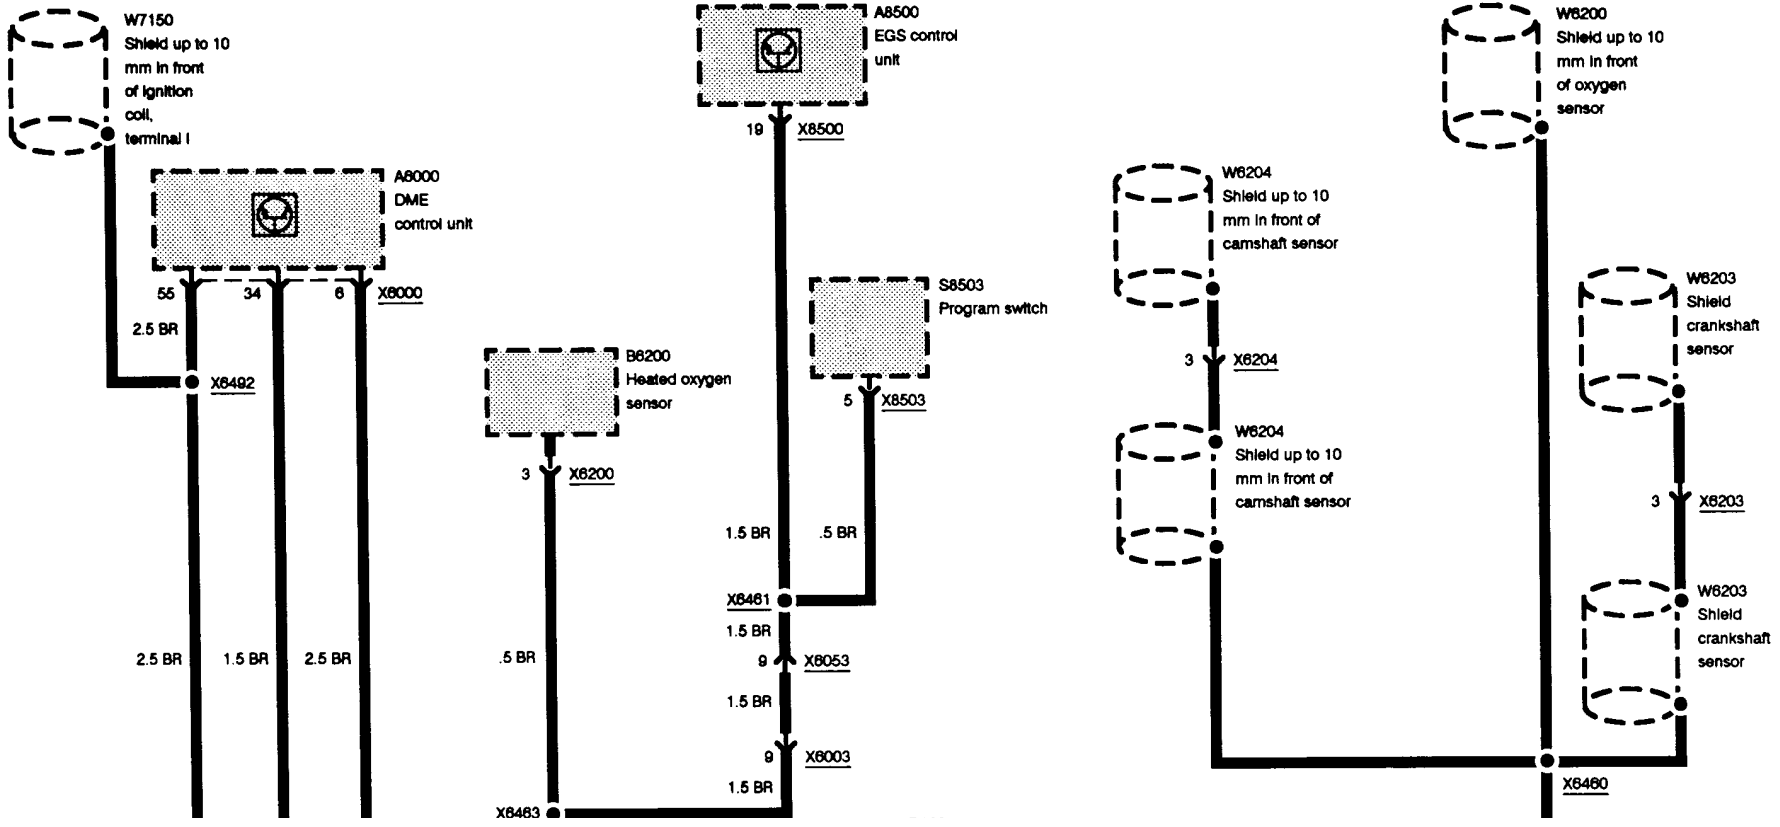

09/93

0670.5-05

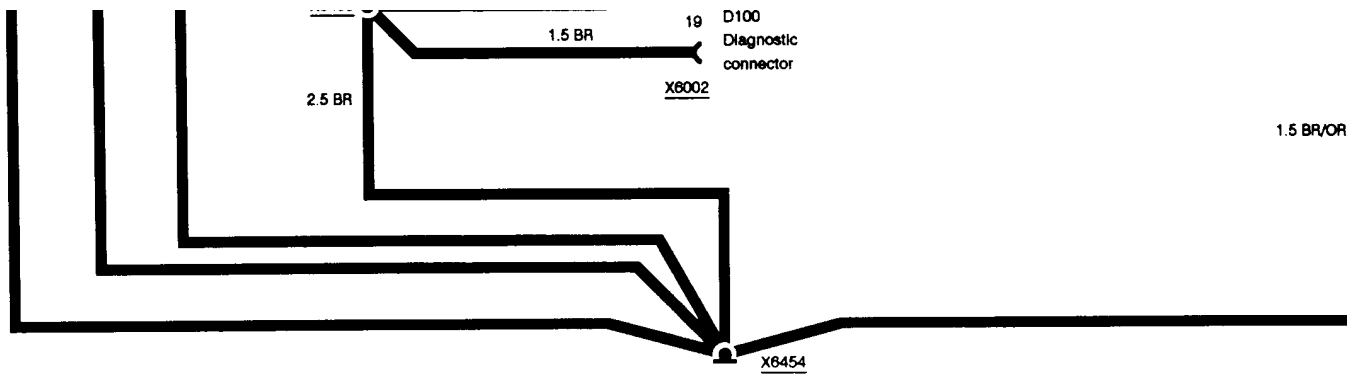


1994



### Diagnostic link



### Diagnostic connector pins 1 and 18

518i/t, 520i/t

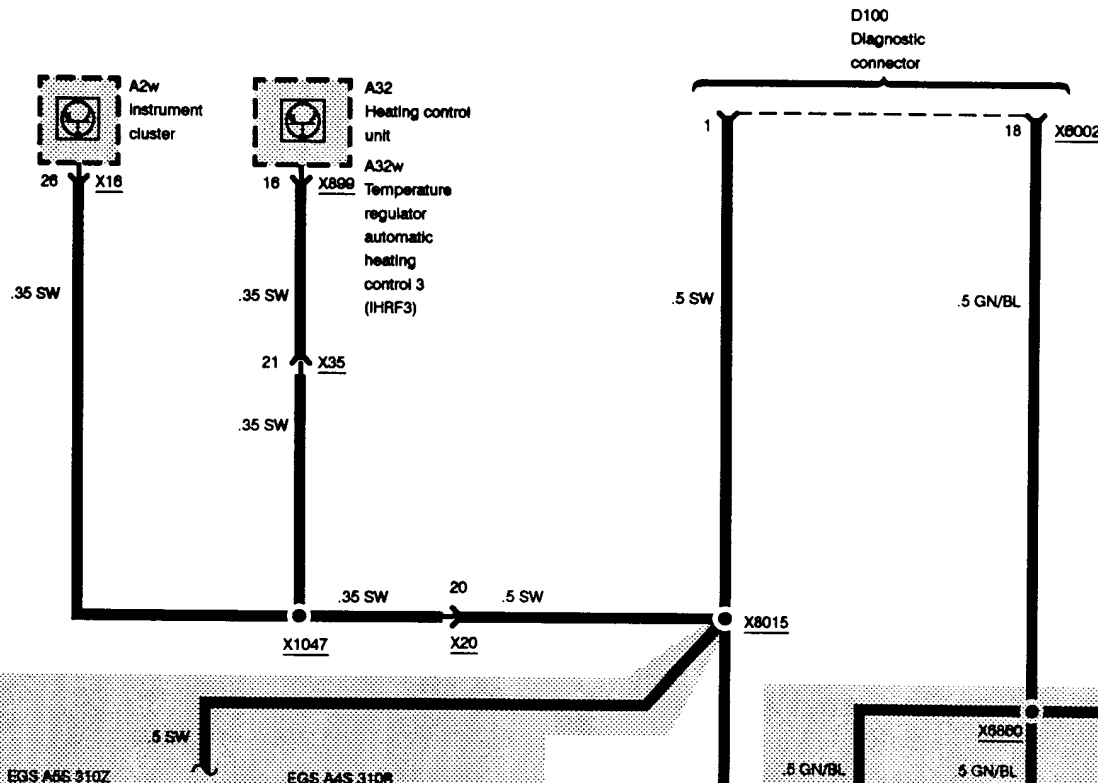

09/93

0670.5-06

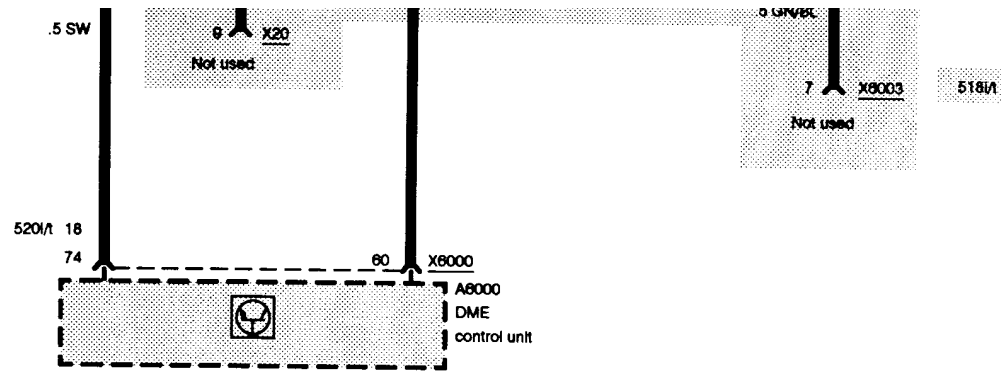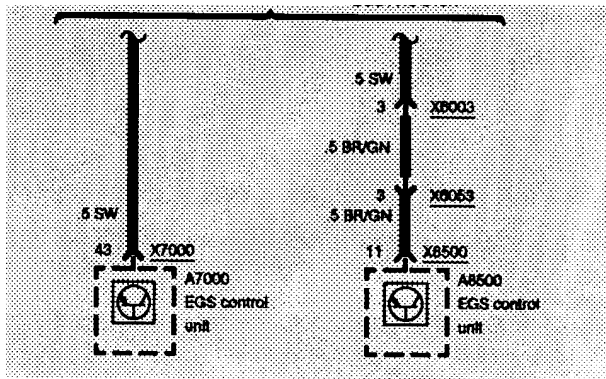


1994



### Diagnostic link


### Diagnostic connector pins 1 and 19

520i/t, 525td/t, 525ds/t

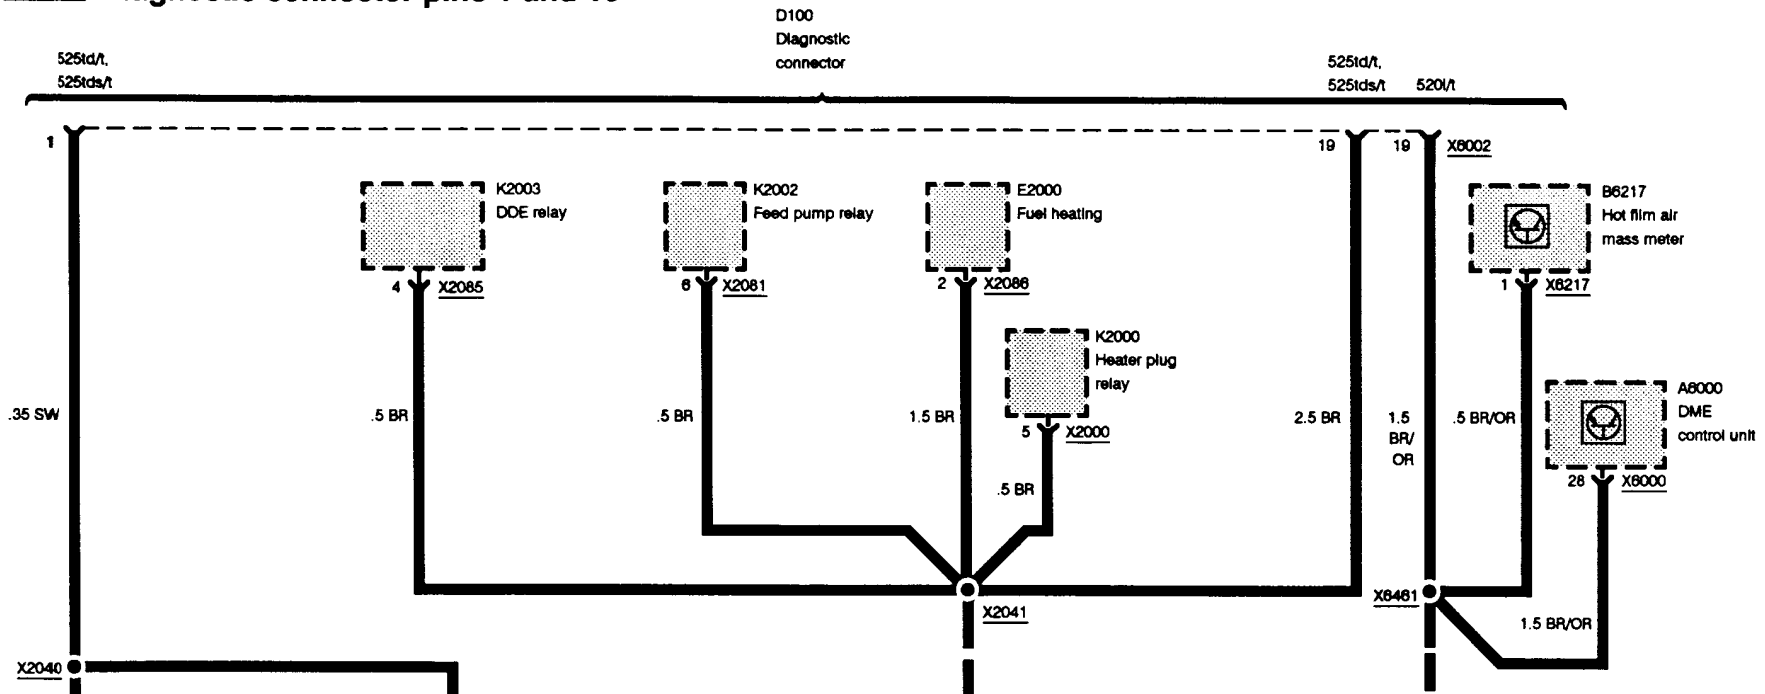


09/93


0670.5-07

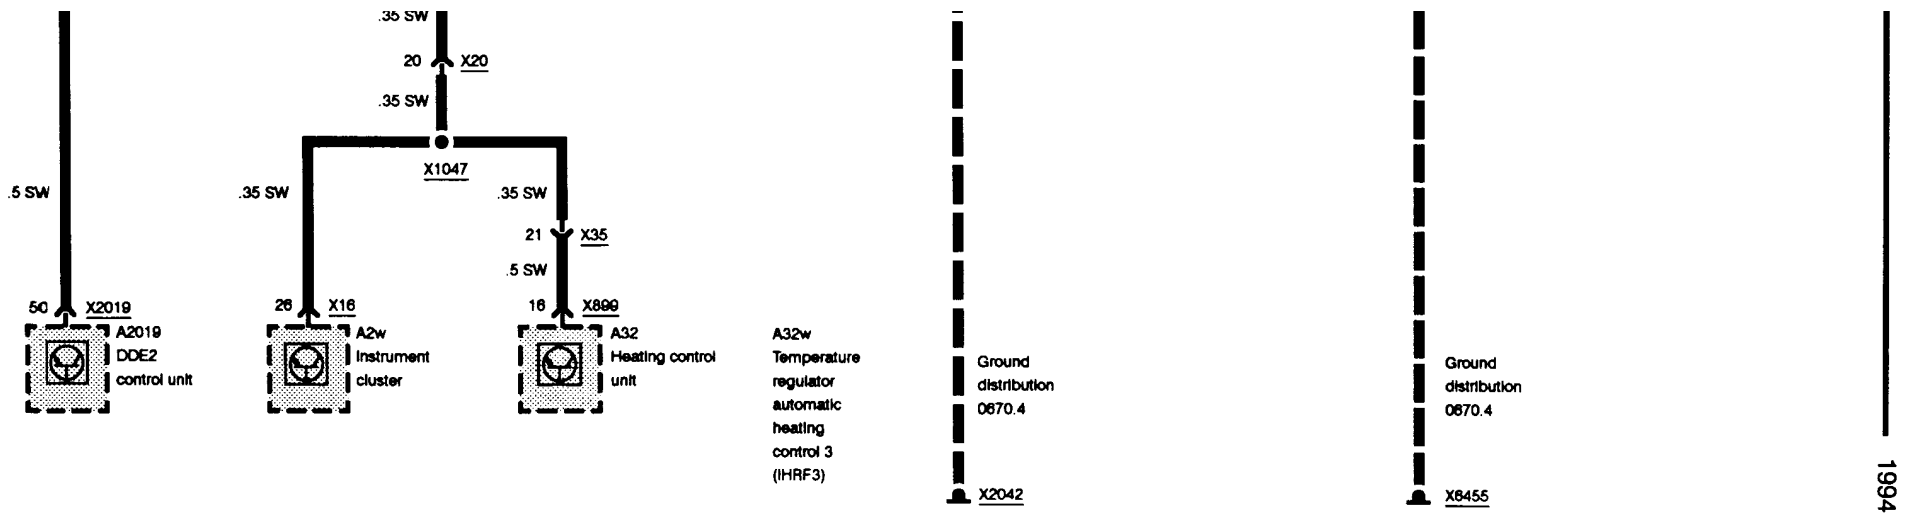

**Diagnostic link**  
**Diagnostic connector pins 14 and 18**


525td/t, 525tds/t

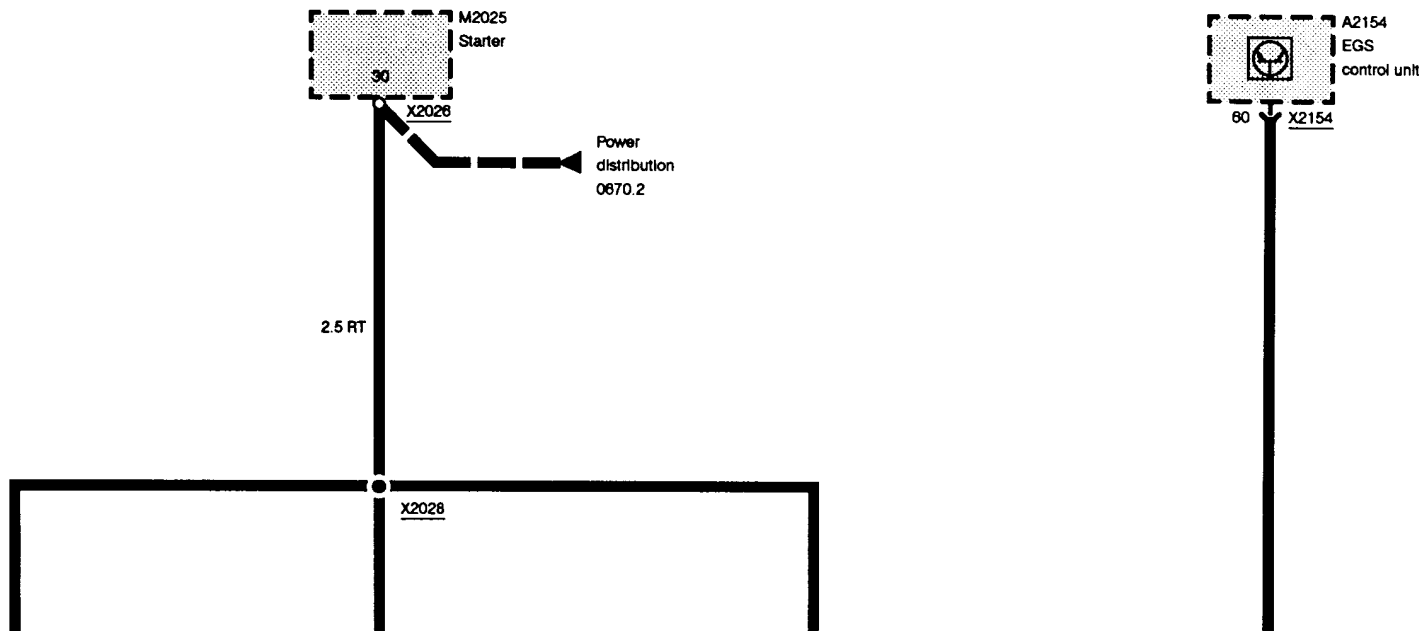

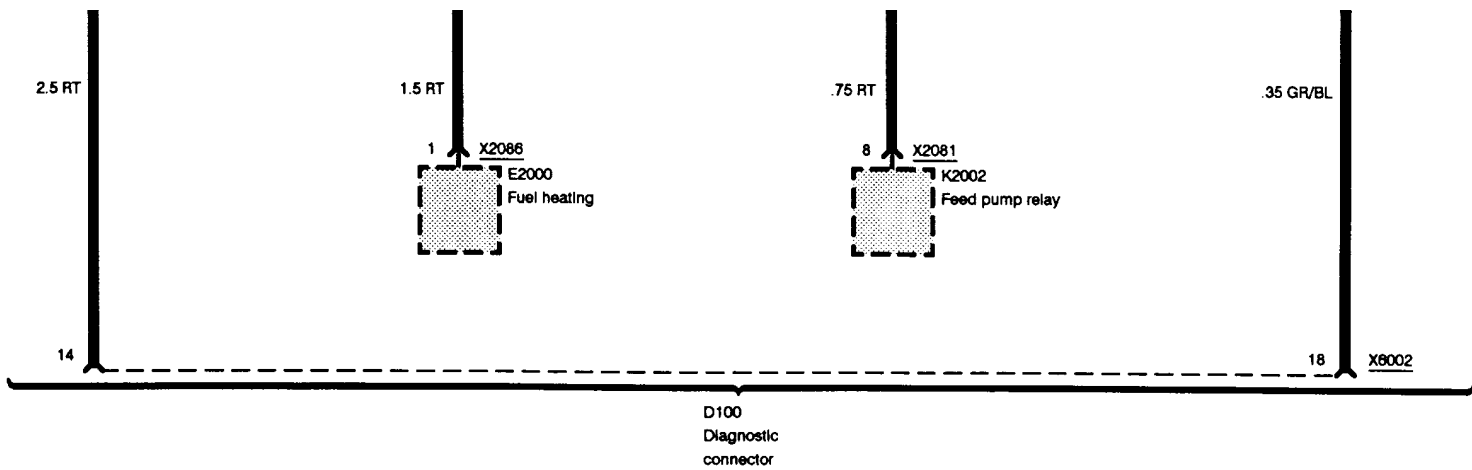

1994


**BMW 5** Diagnostic link  
Diagnosis connector pins 7, 11, 14 and 16

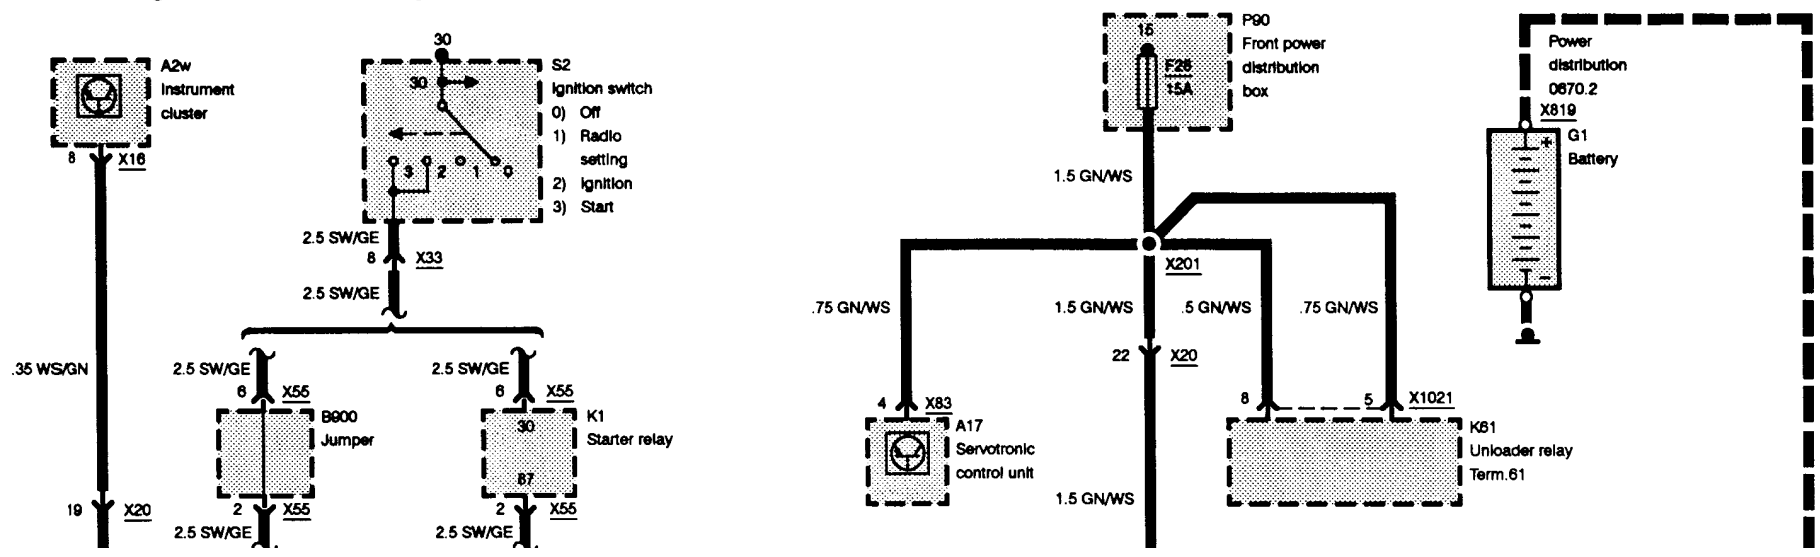

09/93


067

http://www.bmwusa.com/eng/owners/5/5series/93/5series.html (1/1) 12/20/97 2003 14:13:21

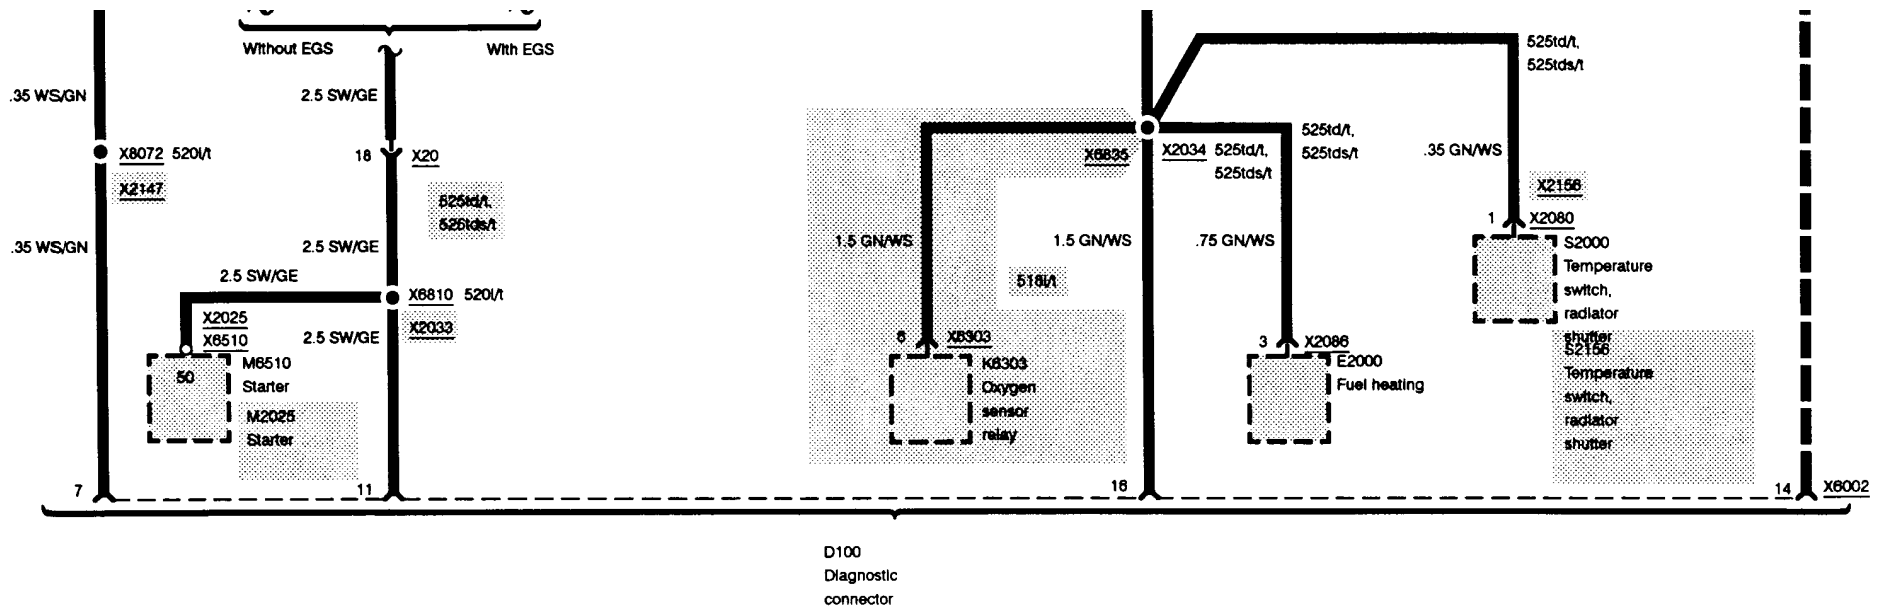


0.5-09  
1994

**BMW 5** Diagnostic link  
Diagnostic connector pin 12

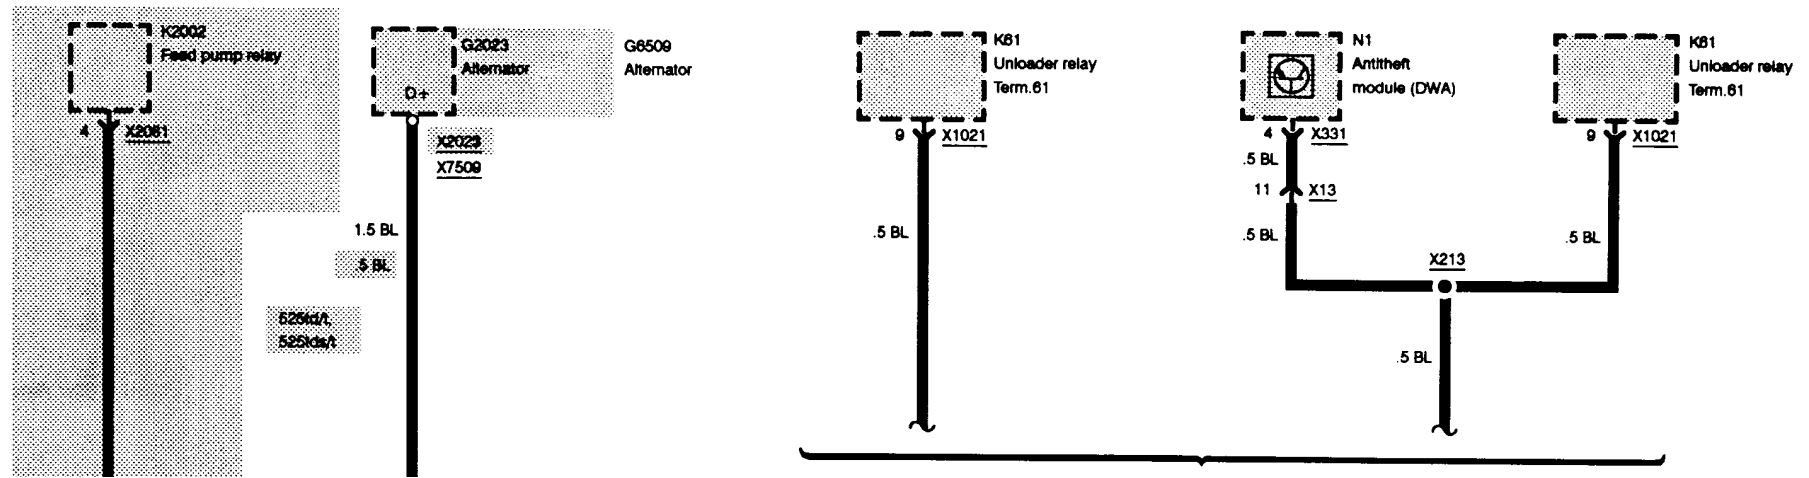

09/93  
06

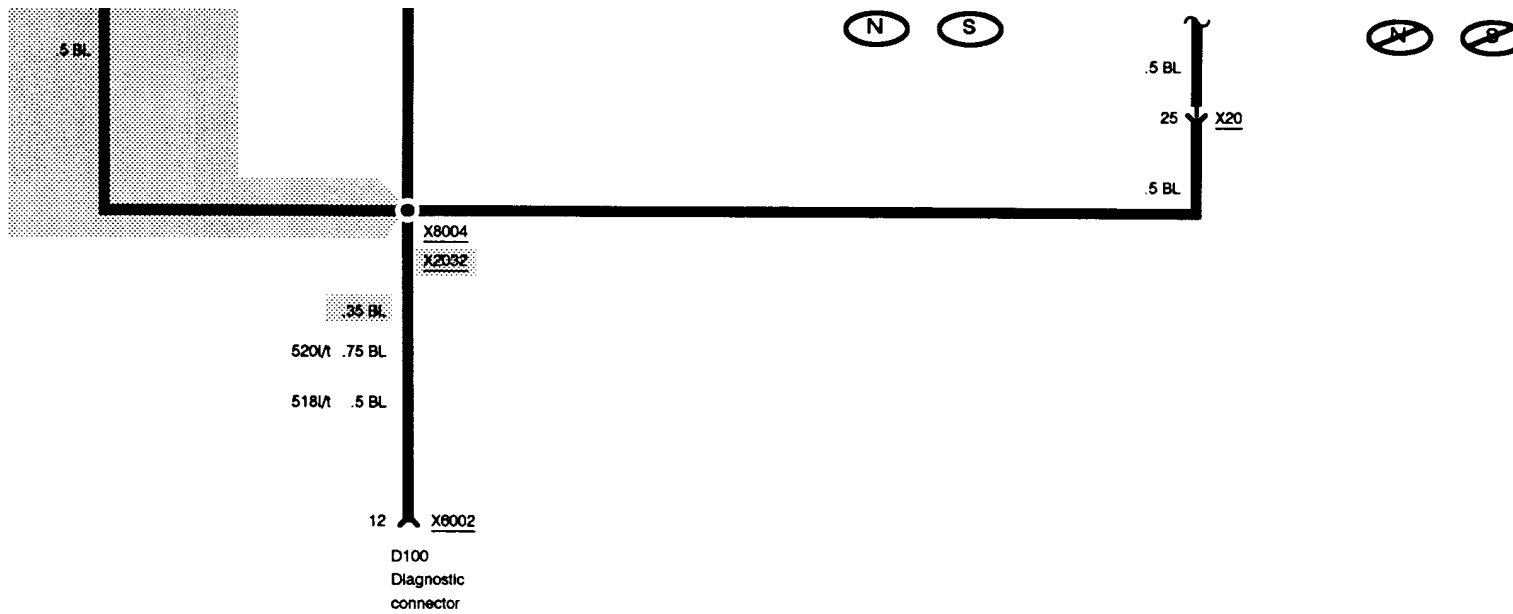


70.5-10  
1994




## Diagnostic link Diagnosis connector (X6002)

 Pin number	Terminal number	Terminal description	Wire colour
1	1	Engine speed signal	SW
2	-	Not used	
3	-	Not used	
4	-	Not used	
5	-	Not used	
6	-	Not used	
7	SI	Service interval indicator	WS/GN

09/93



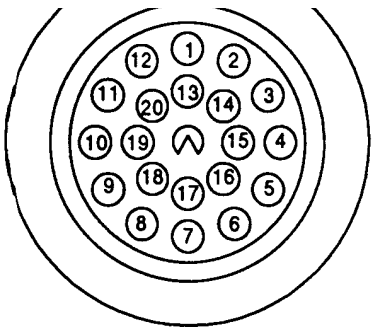


8	-	Not used	
9	-	Not used	
10	-	Not used	
11	50	Starter pulse	SW/GE
12	61(D+)	Battery charge indicator	BL
13	-	Not used	
14	30(B+)	Battery +	RT
15	RXD	Diagnosis-data line	WS/GE
16	15S	Voltage at ignition ON	GN/WS
17	-	Not used	
18	PGSP	DME programming line	GN/BL
19	31	Ground	BR
20	TXD	Diagnosis-data line	WS/VI






# Door lock heating (ZKE/TSH)

## Inputs

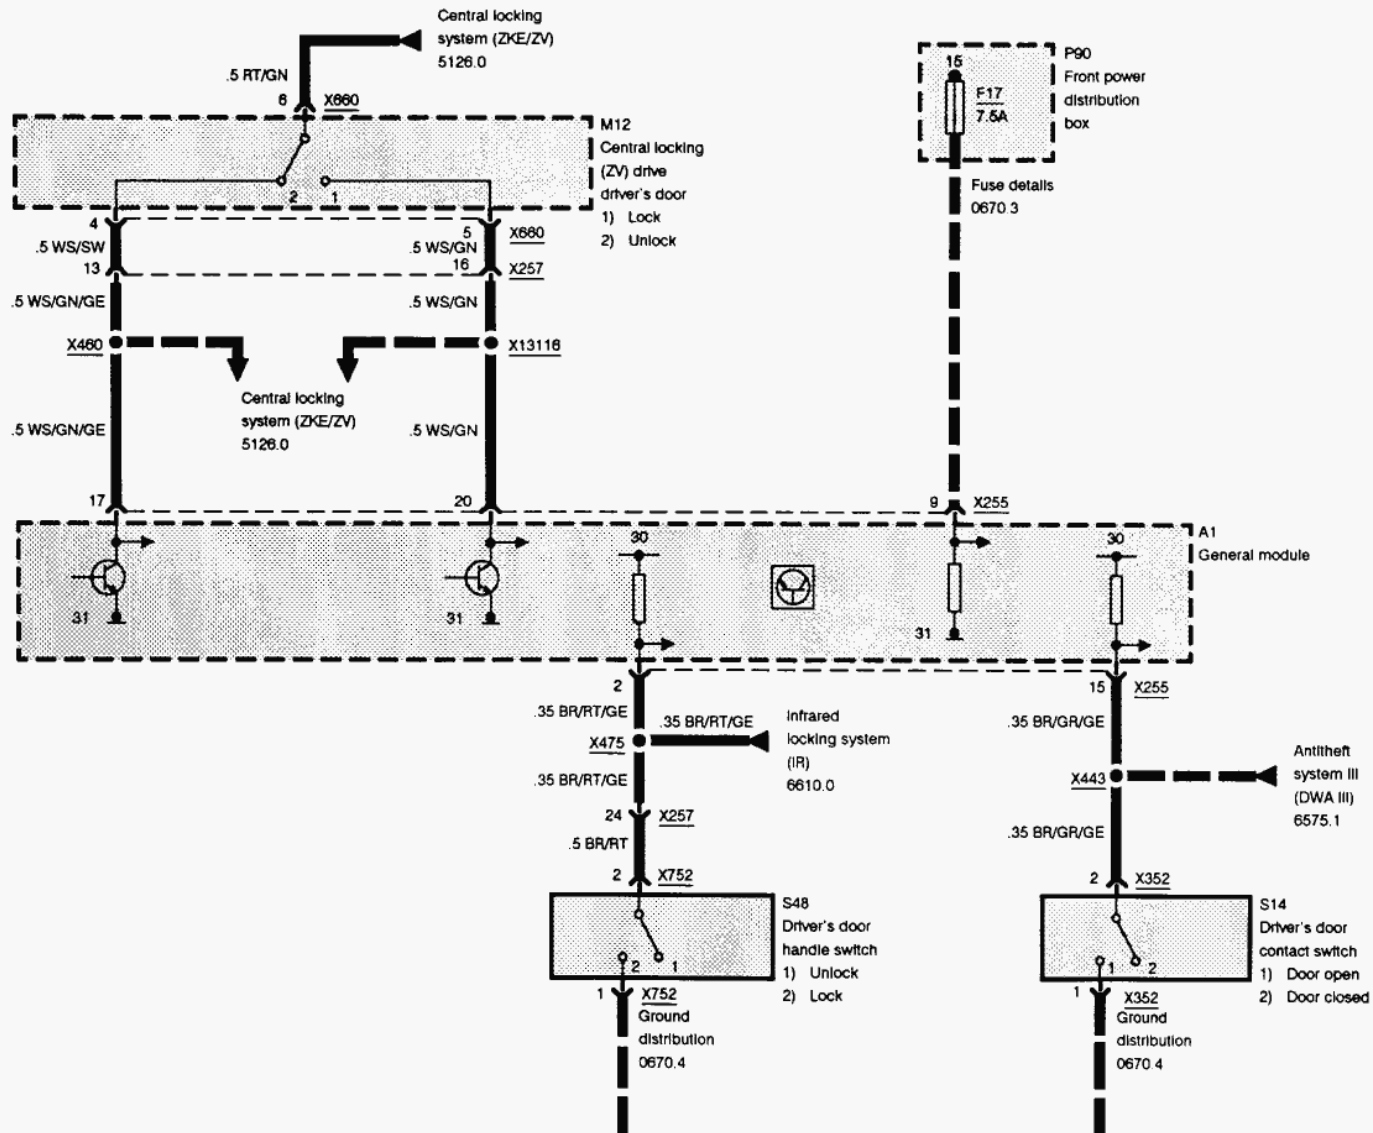

**BMW 5** **Door lock heating (ZKE/TSH)**  
**Outputs**

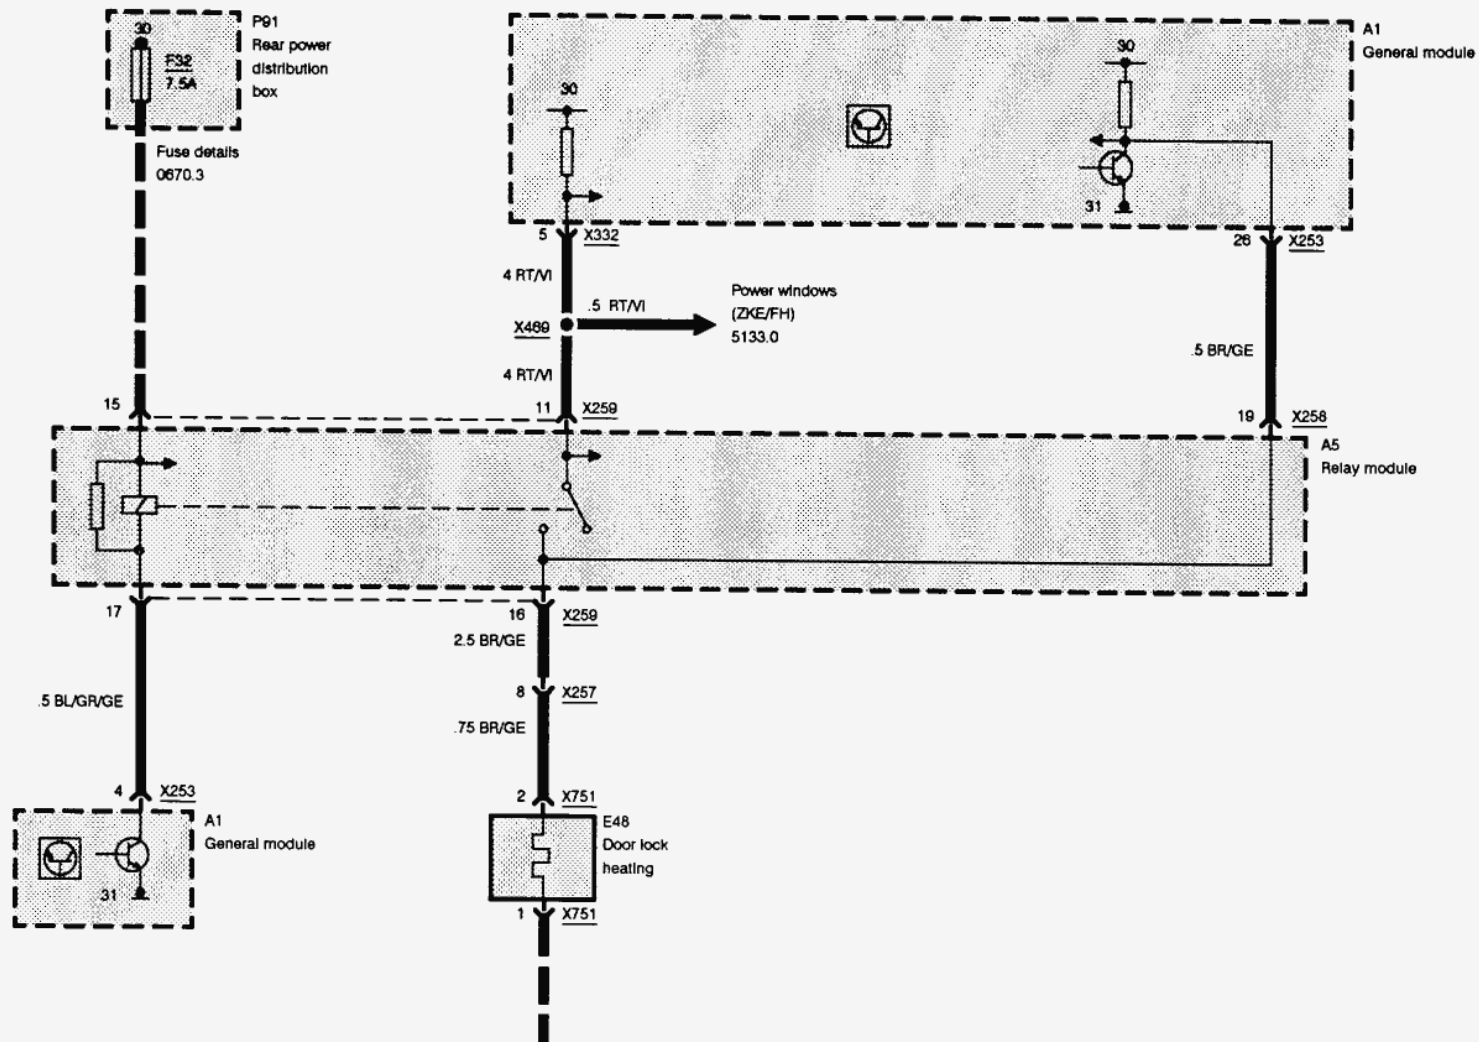

Ground  
distribution  
0670.4  
 X491

1994

**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


Door lock heating (ZVM/TSH)

Scheme 5120.1

09/93


5120.1-00

1994

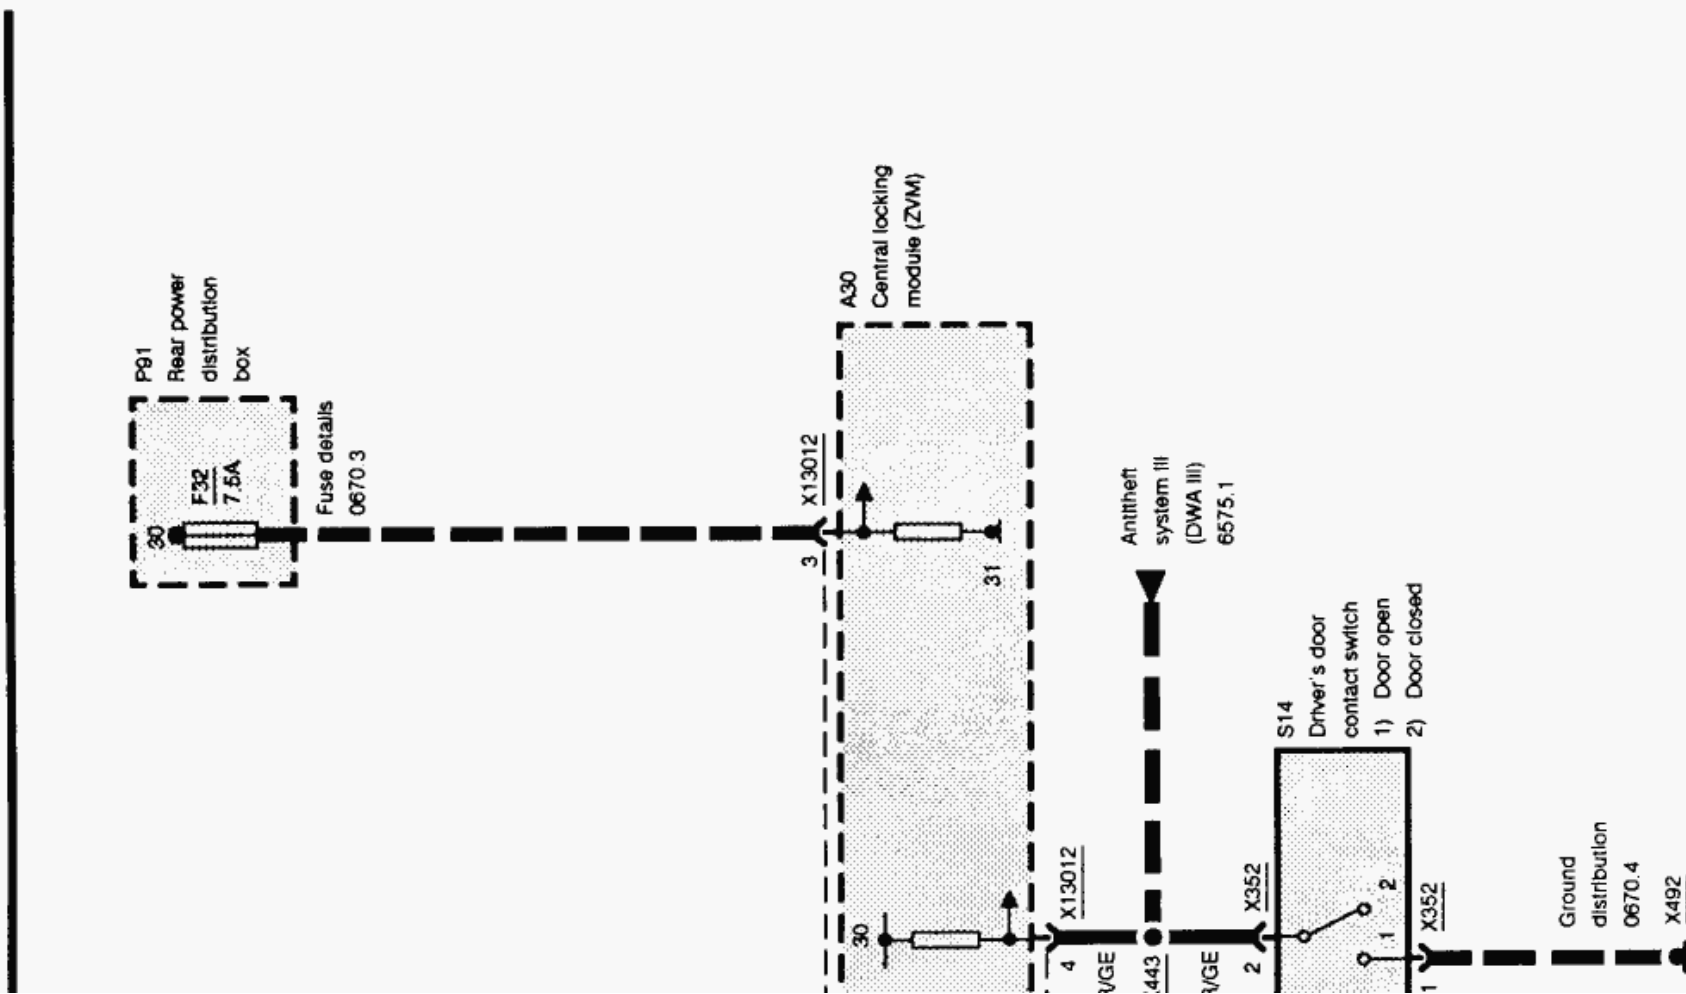

# Door lock heating (ZVM/TSH)

## Inputs

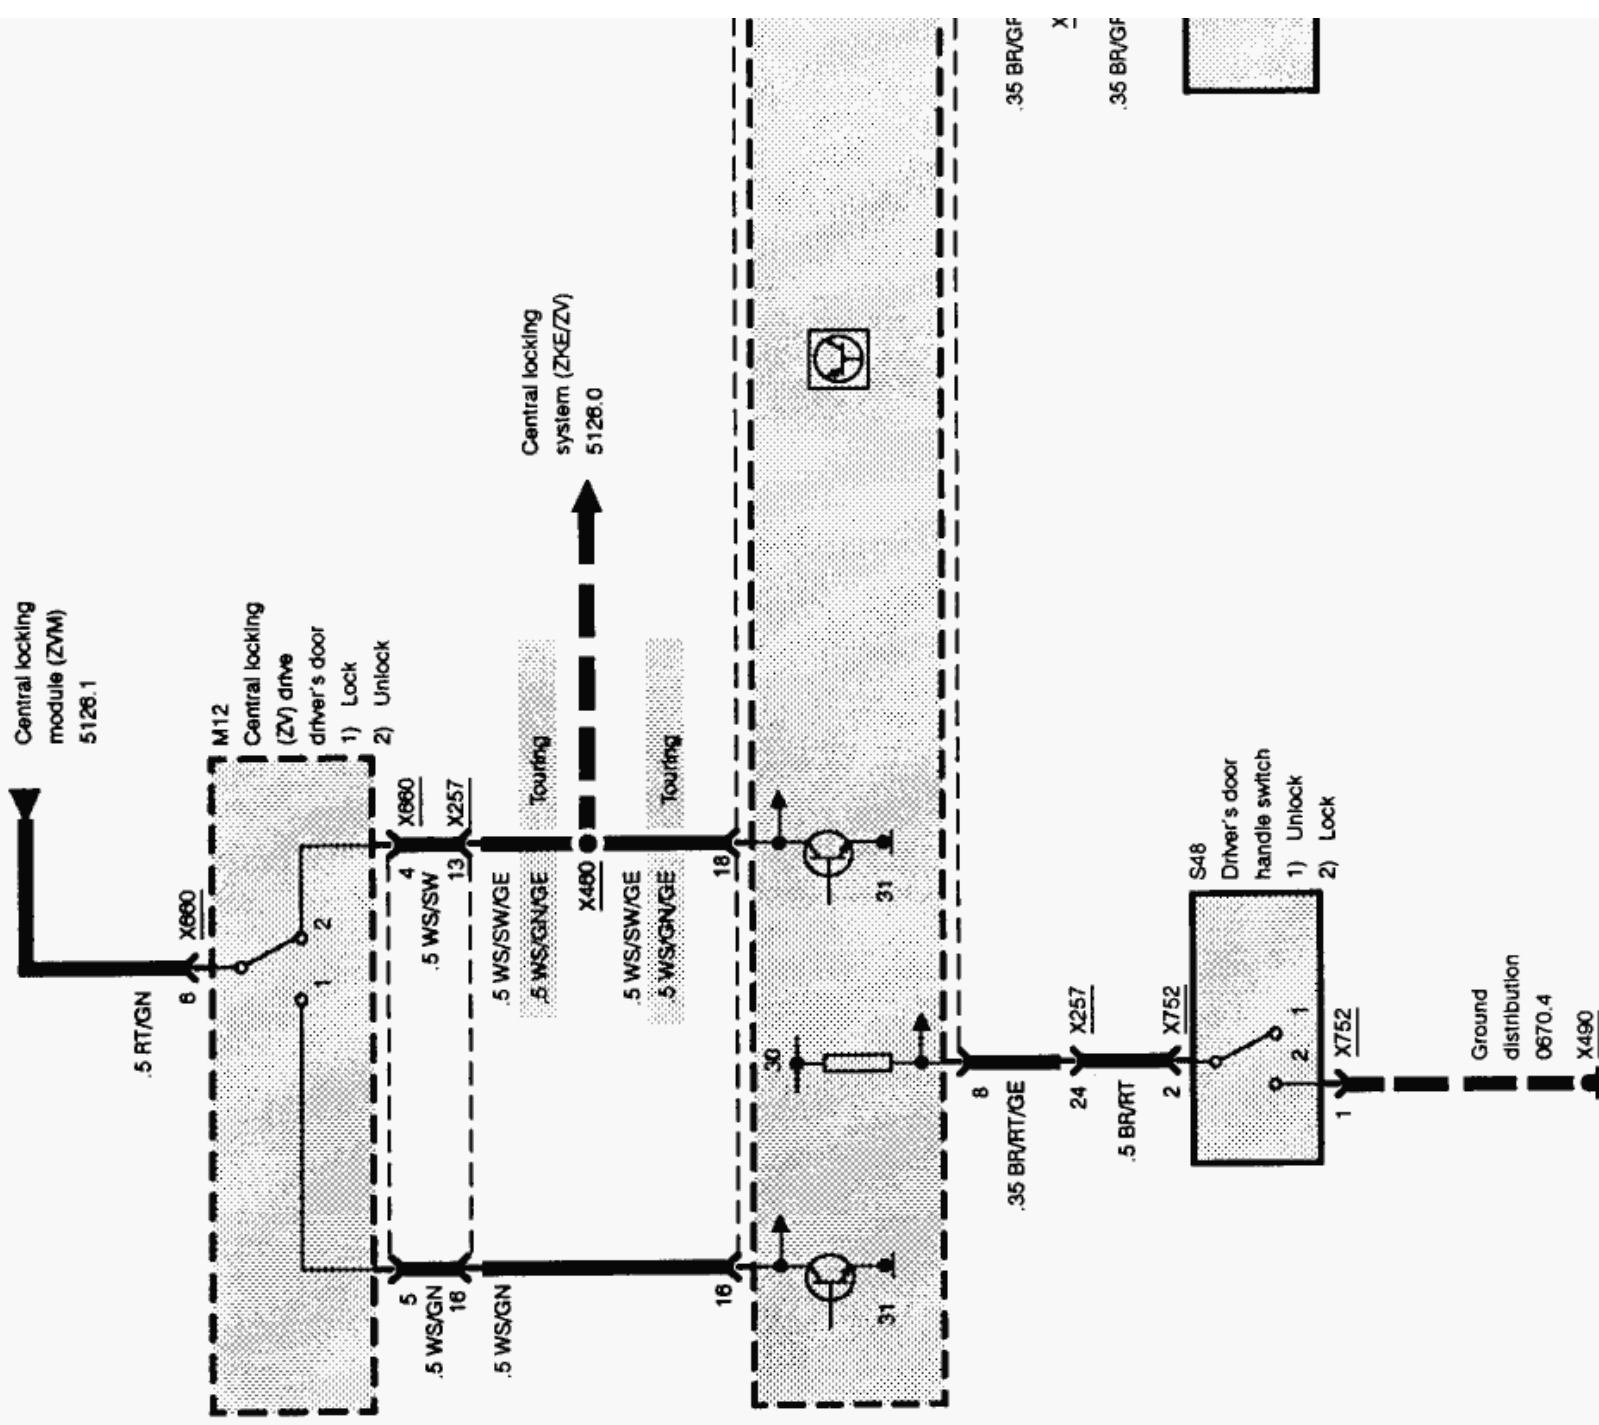

.35 BR/RT/GE

X

.35 BR/GF



09/93


5120.1-01

1994



# Door lock heating (ZVM/TSH)

## Outputs

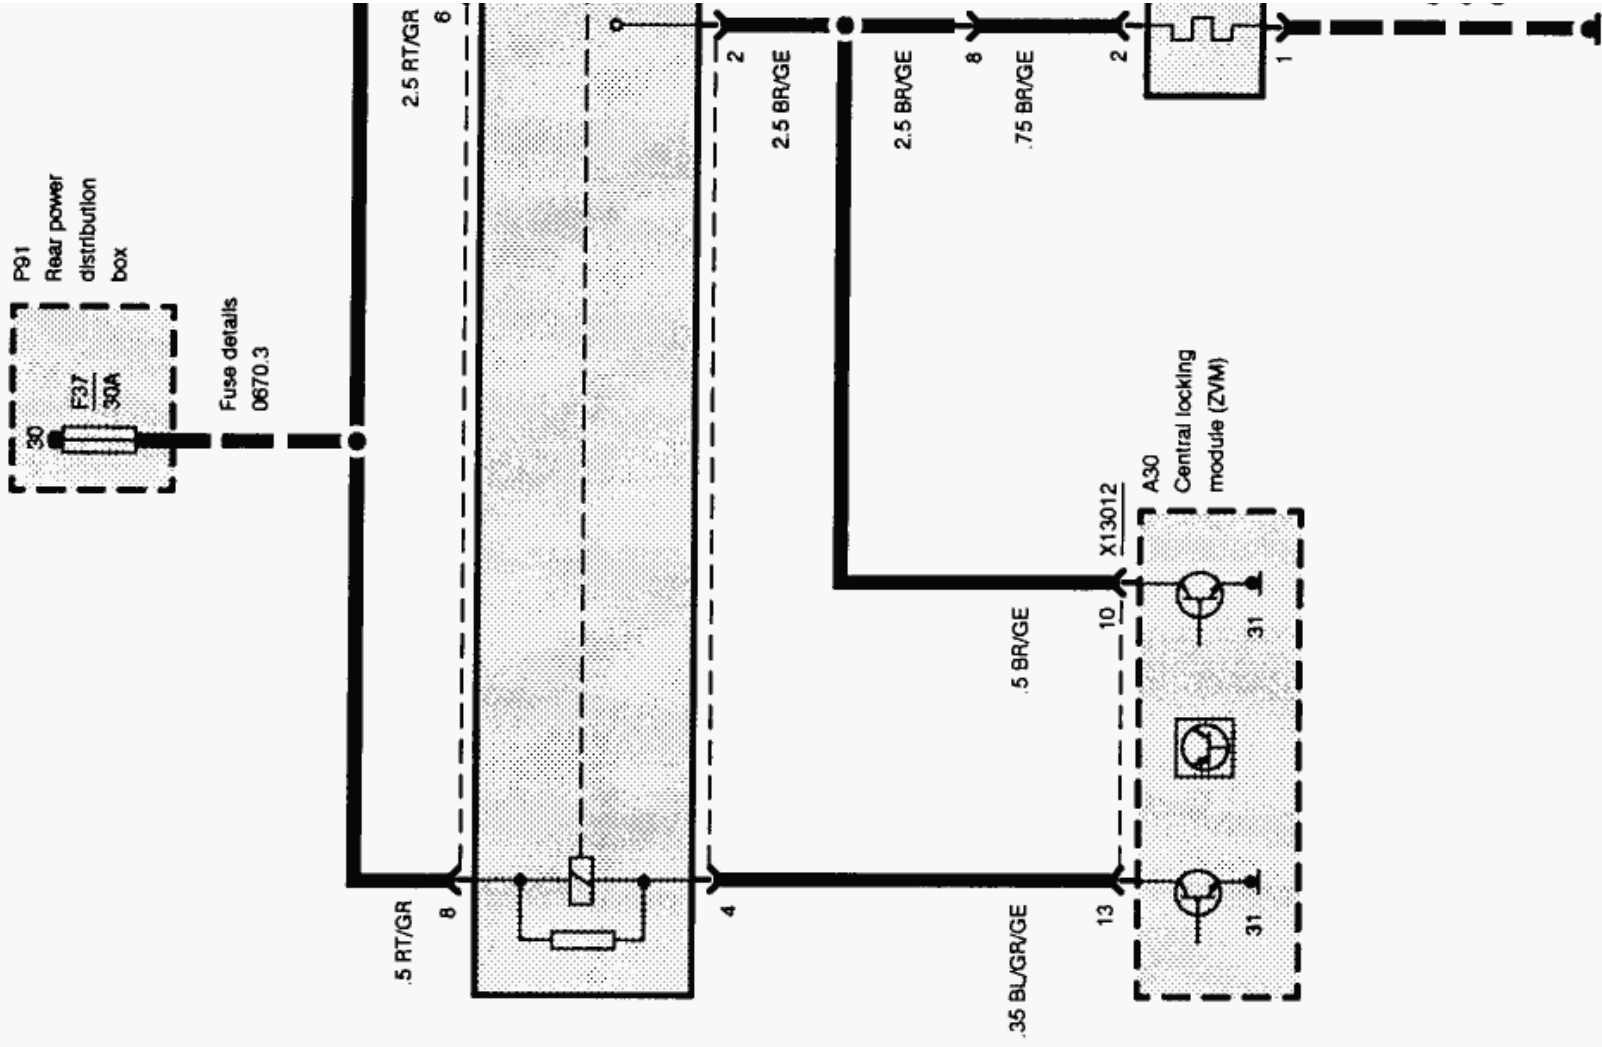








# Heated seats

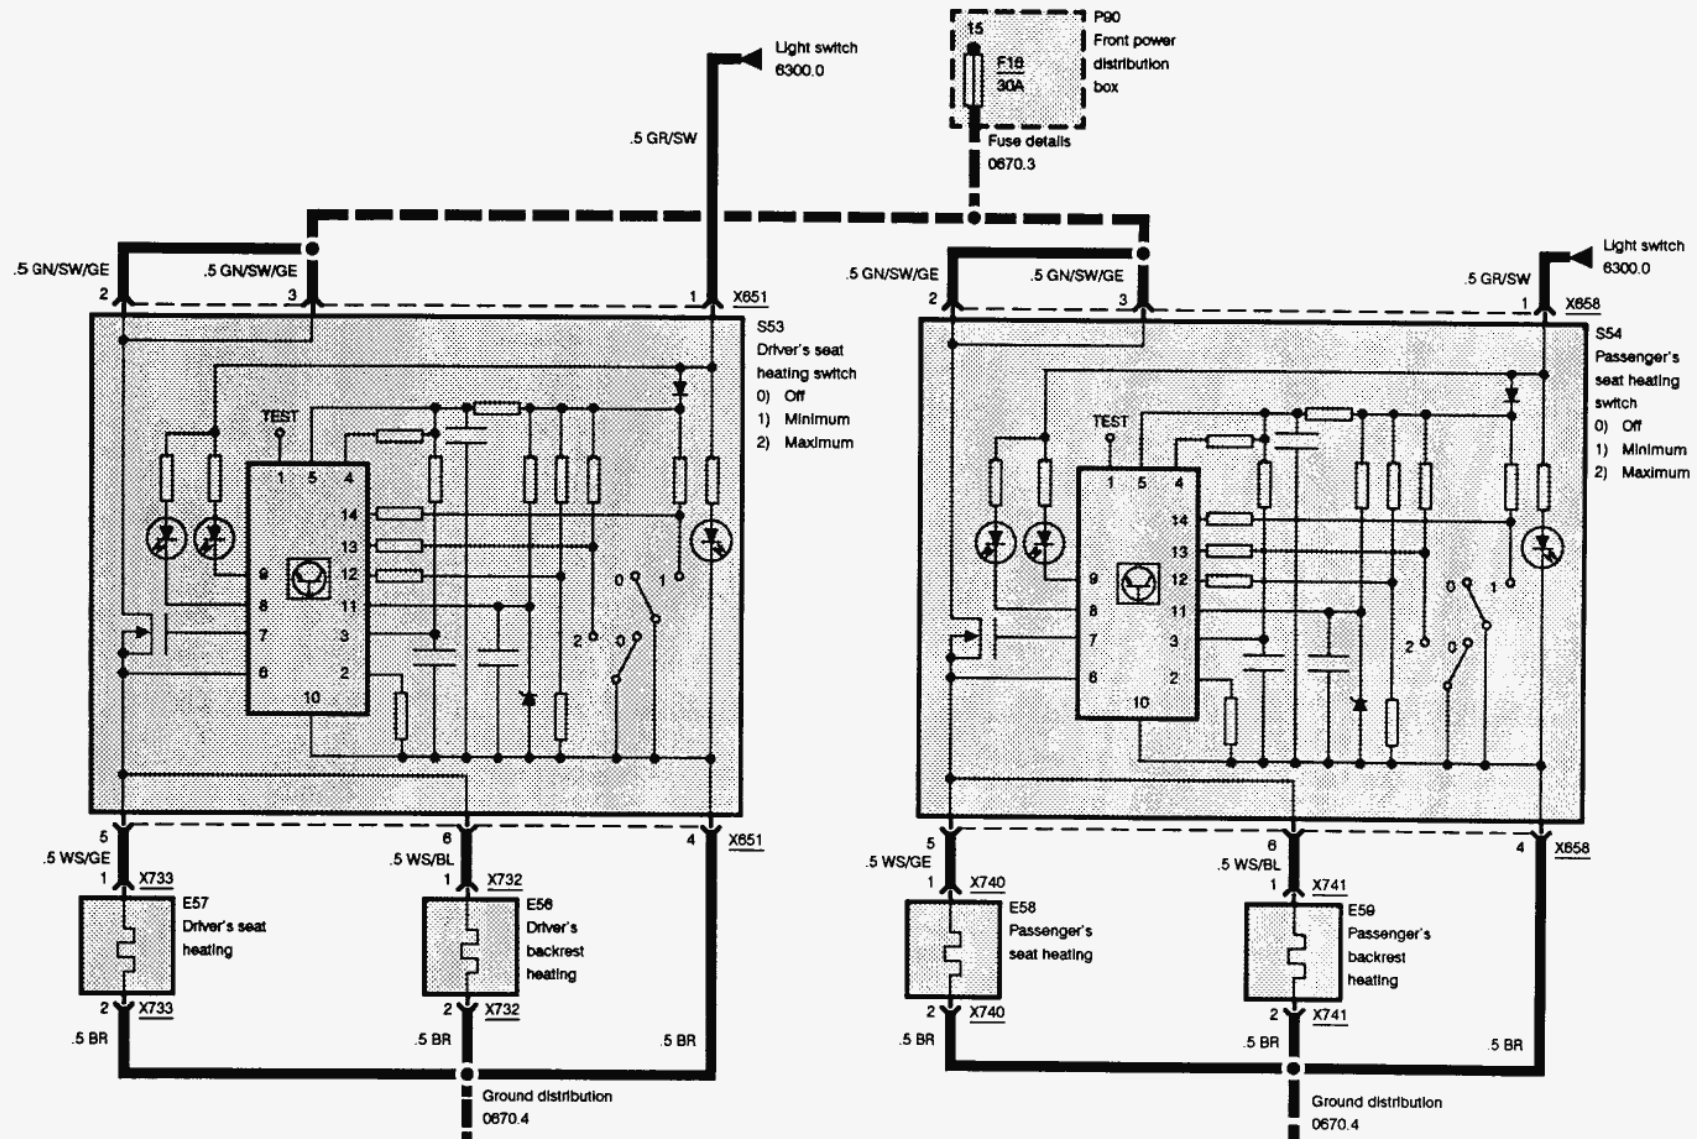


 X491

 X495



# Power seats Driver's seat

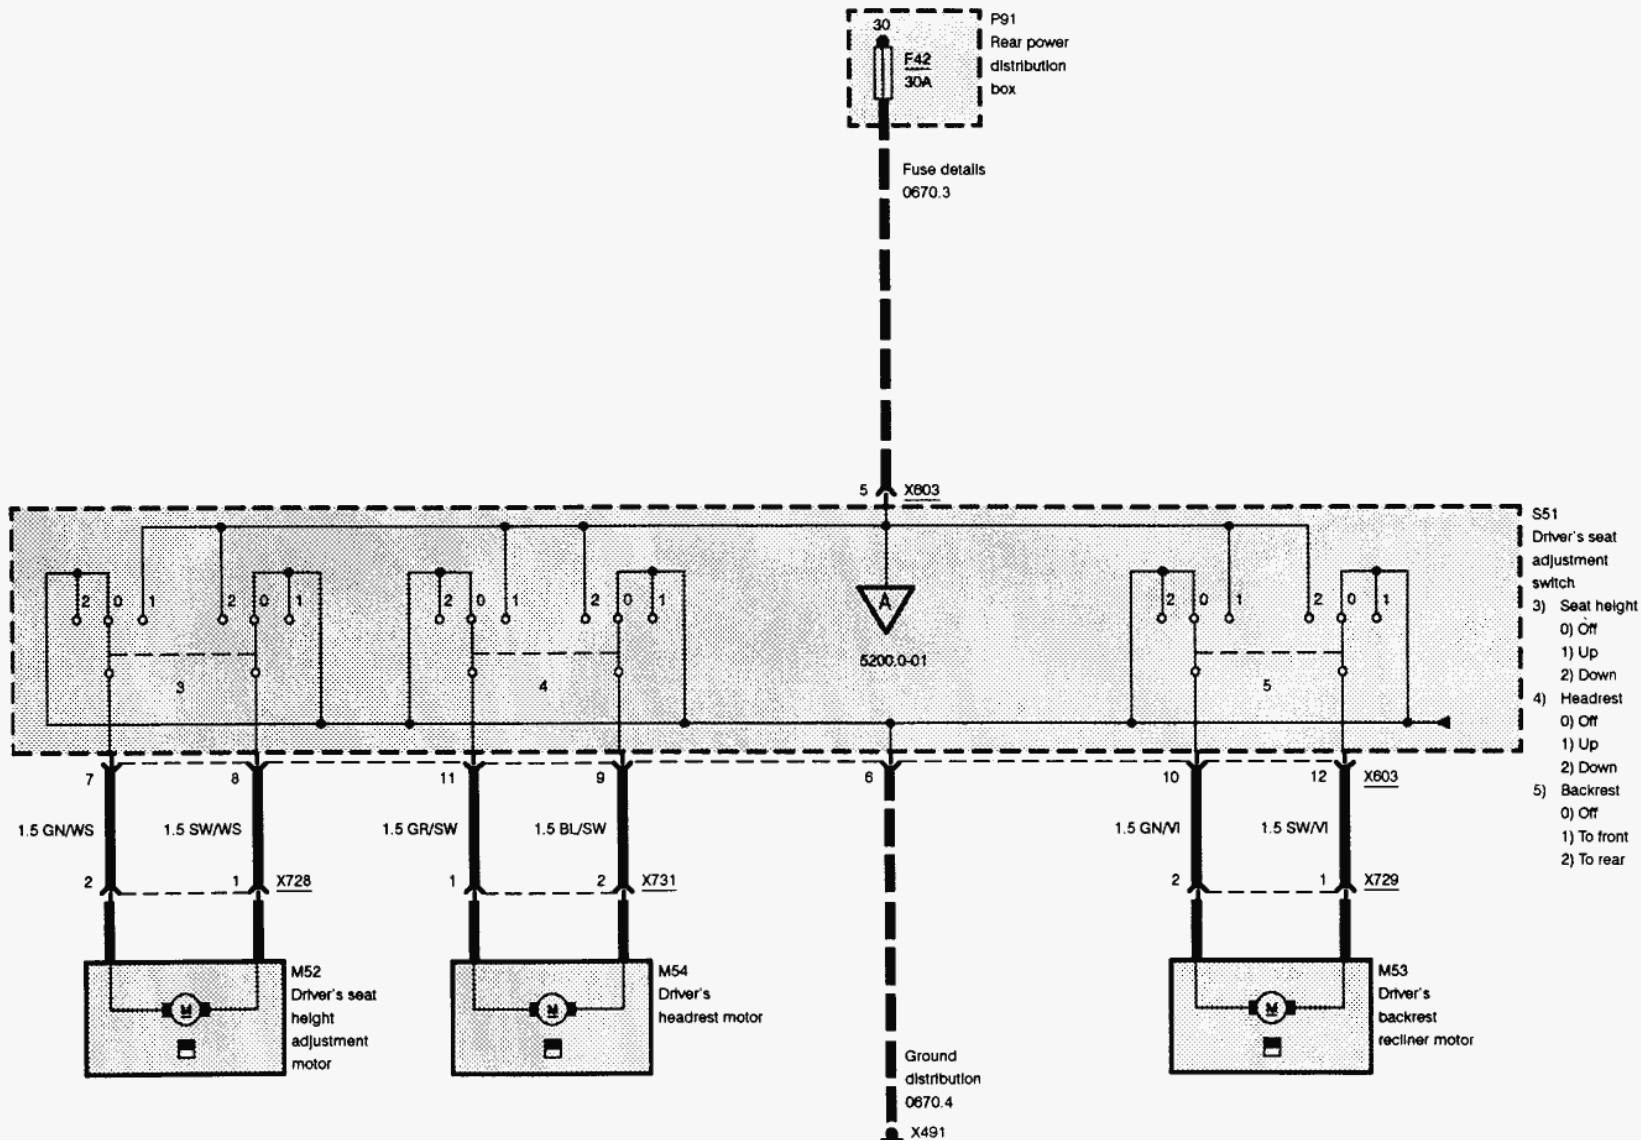


09/93

5200.0-00

193

# BMW 5 Power seats Driver's seat

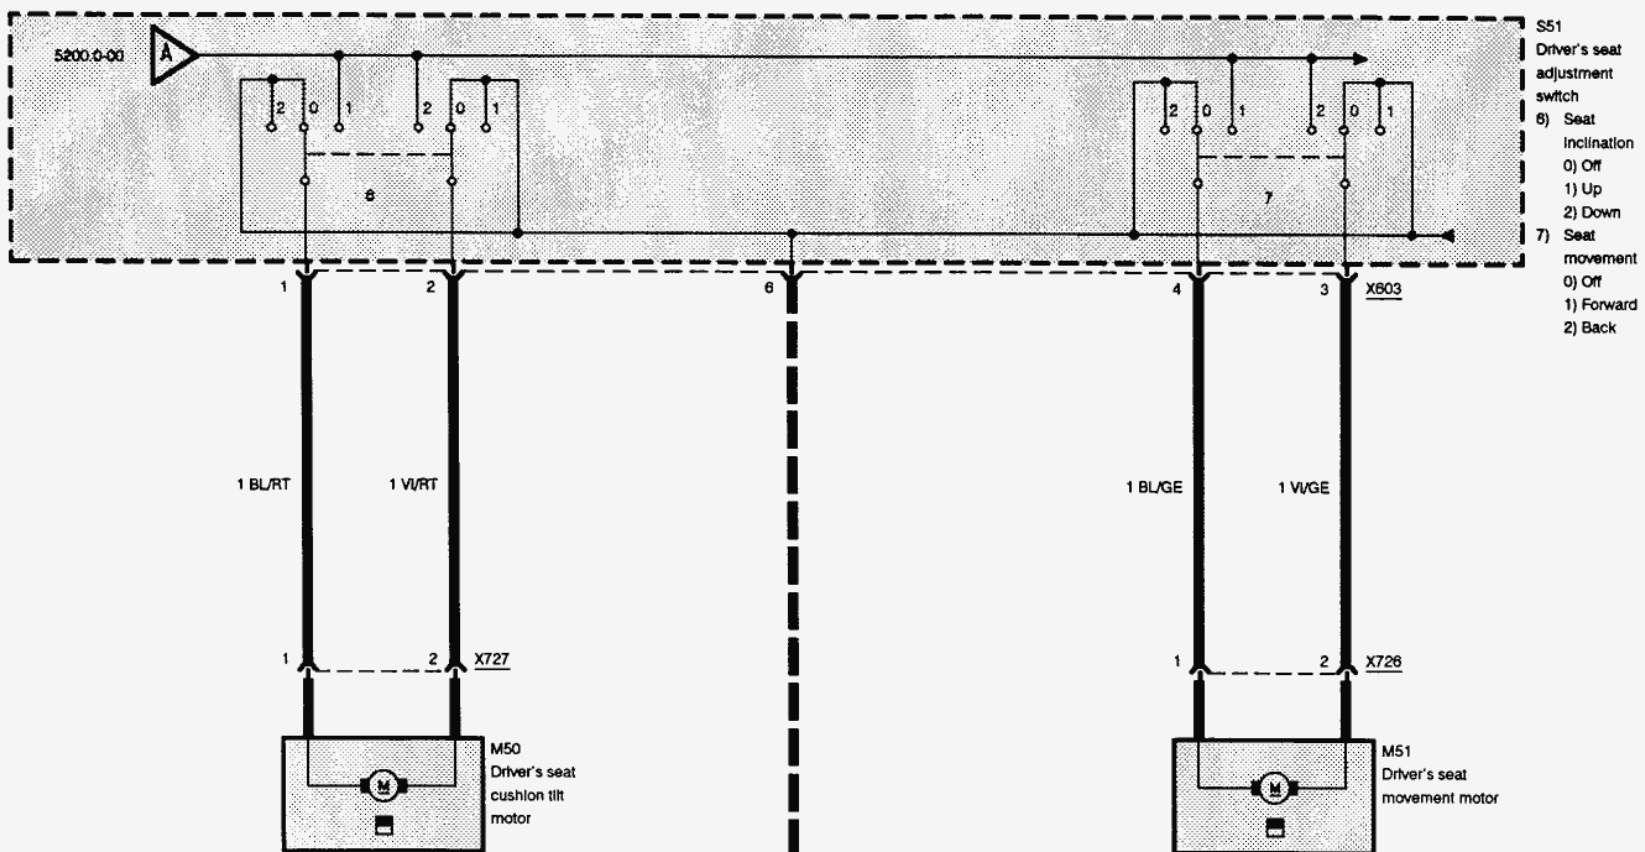


Ground distribution  
0670.4  
X491

1994

**BMW 5** Power seats  
Passenger's seat

09/93

5200.0-02

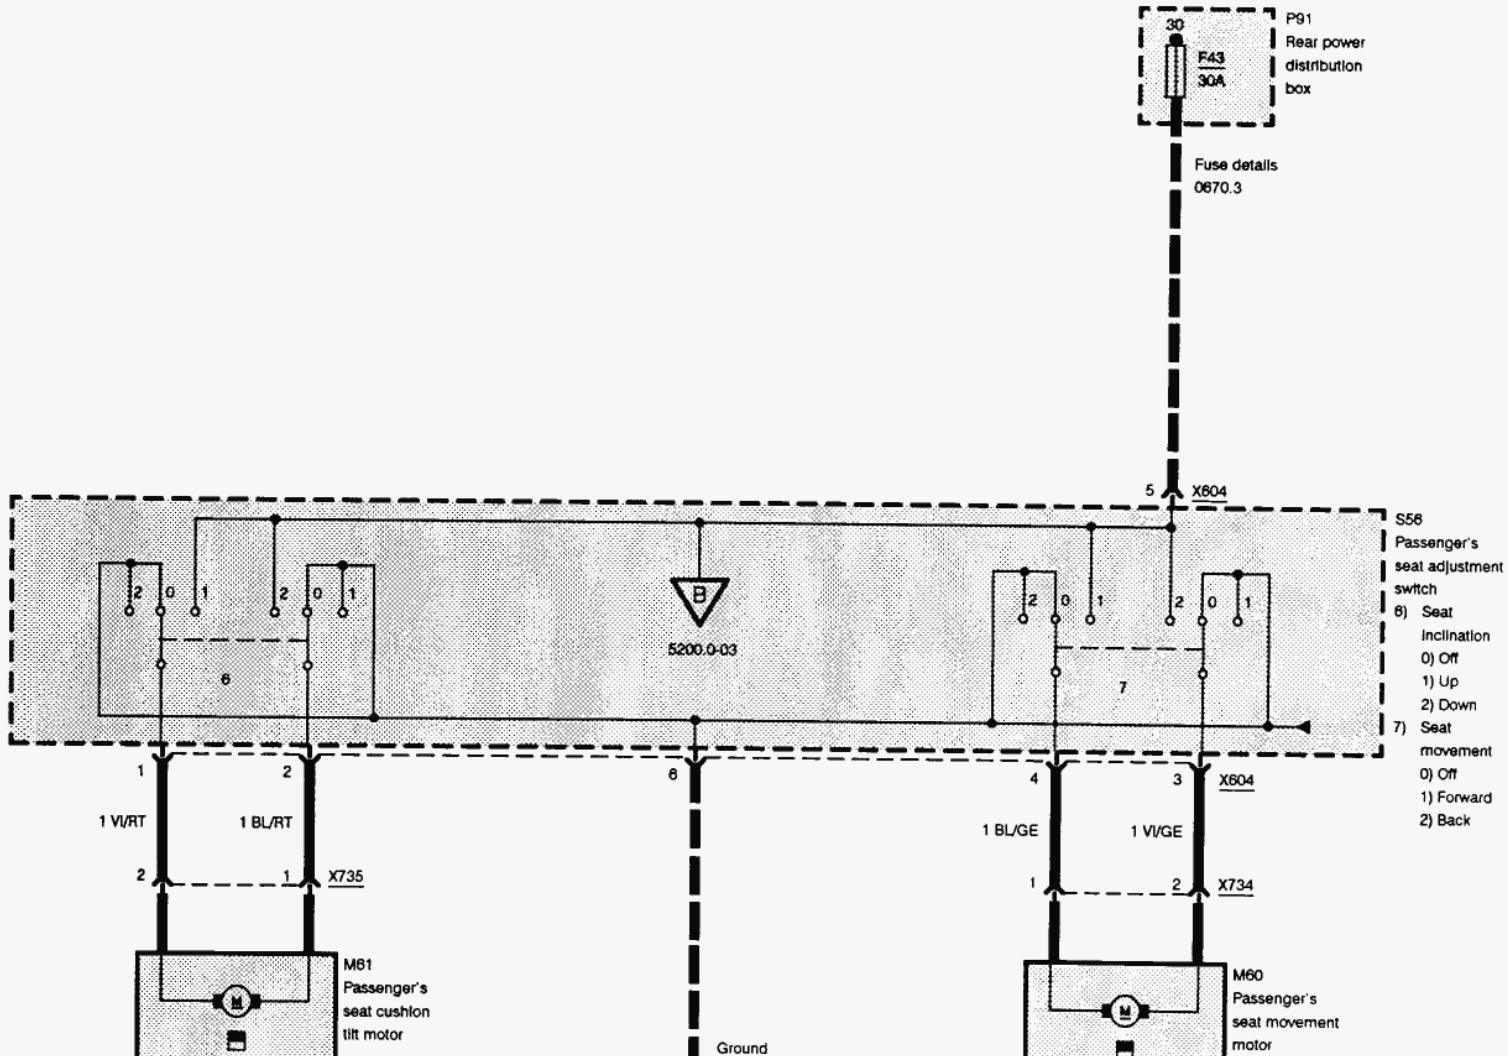


distribution  
0670.4  
X495

1994

# BMW 5 Power seats Passenger's seat

09/93

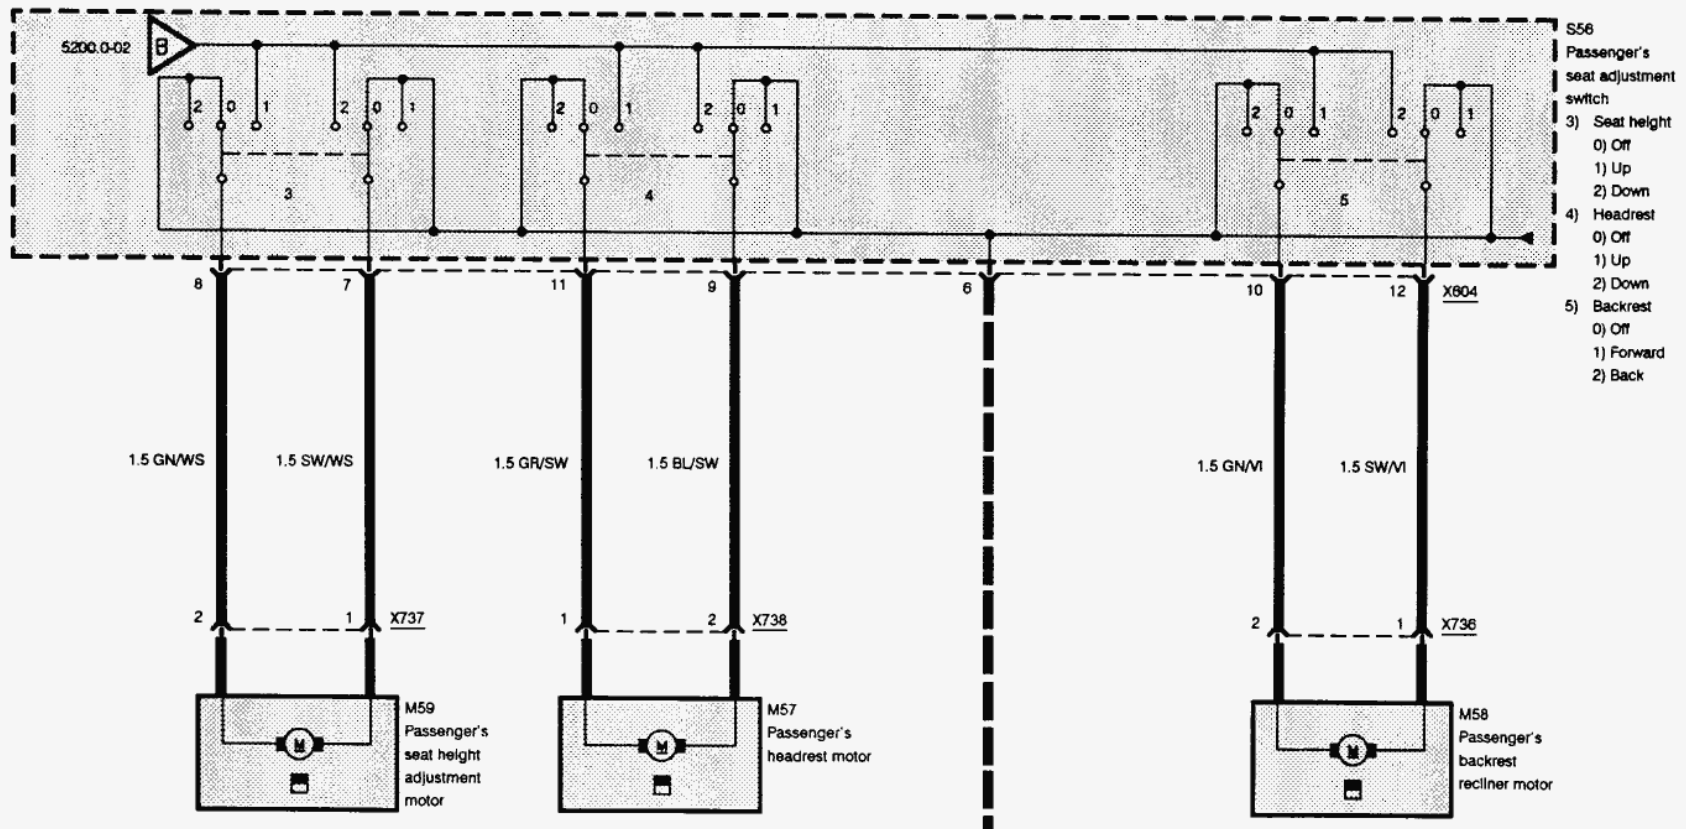

5200.0-03

Ground distribution 0670.4  
X495

1994


09/93

5200.0-04




# Power seats

## Thigh support, with sports seat only

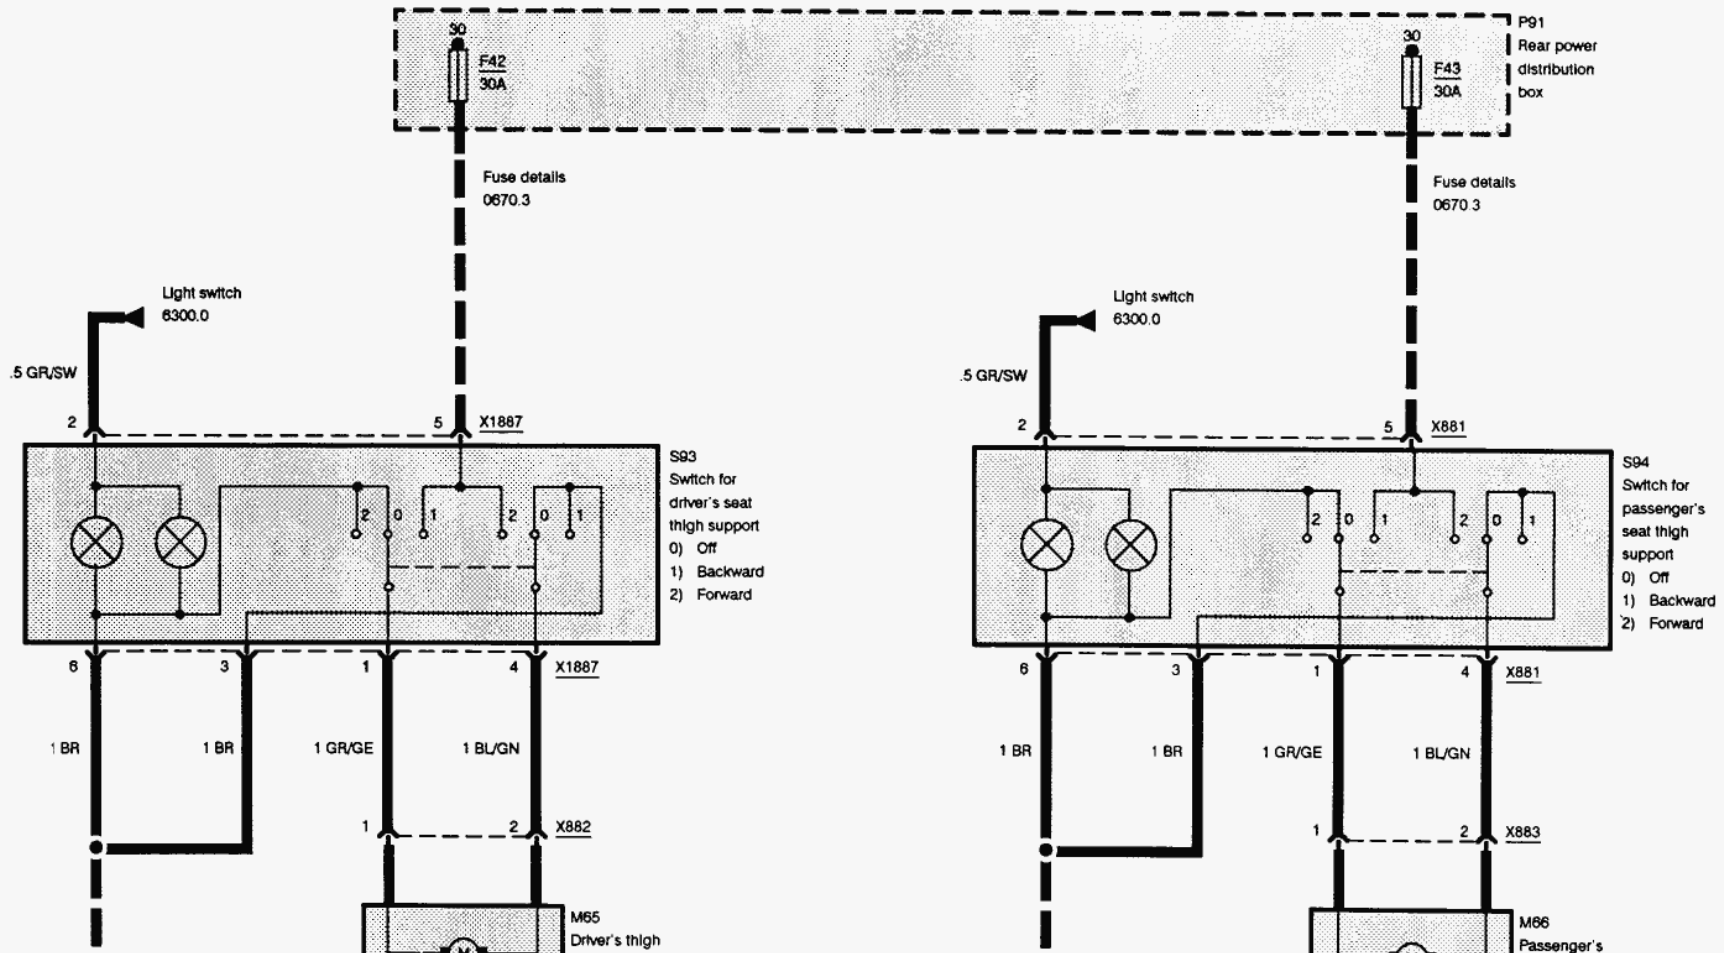

Ground  
distribution  
0670.4  
X491

 

support motor

Ground  
distribution  
0670.4  
X495



thigh support  
motor

1994





**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


Interior light control (ZKE/IB)

Scheme 6330.0

09/93


6330.0-00

1994

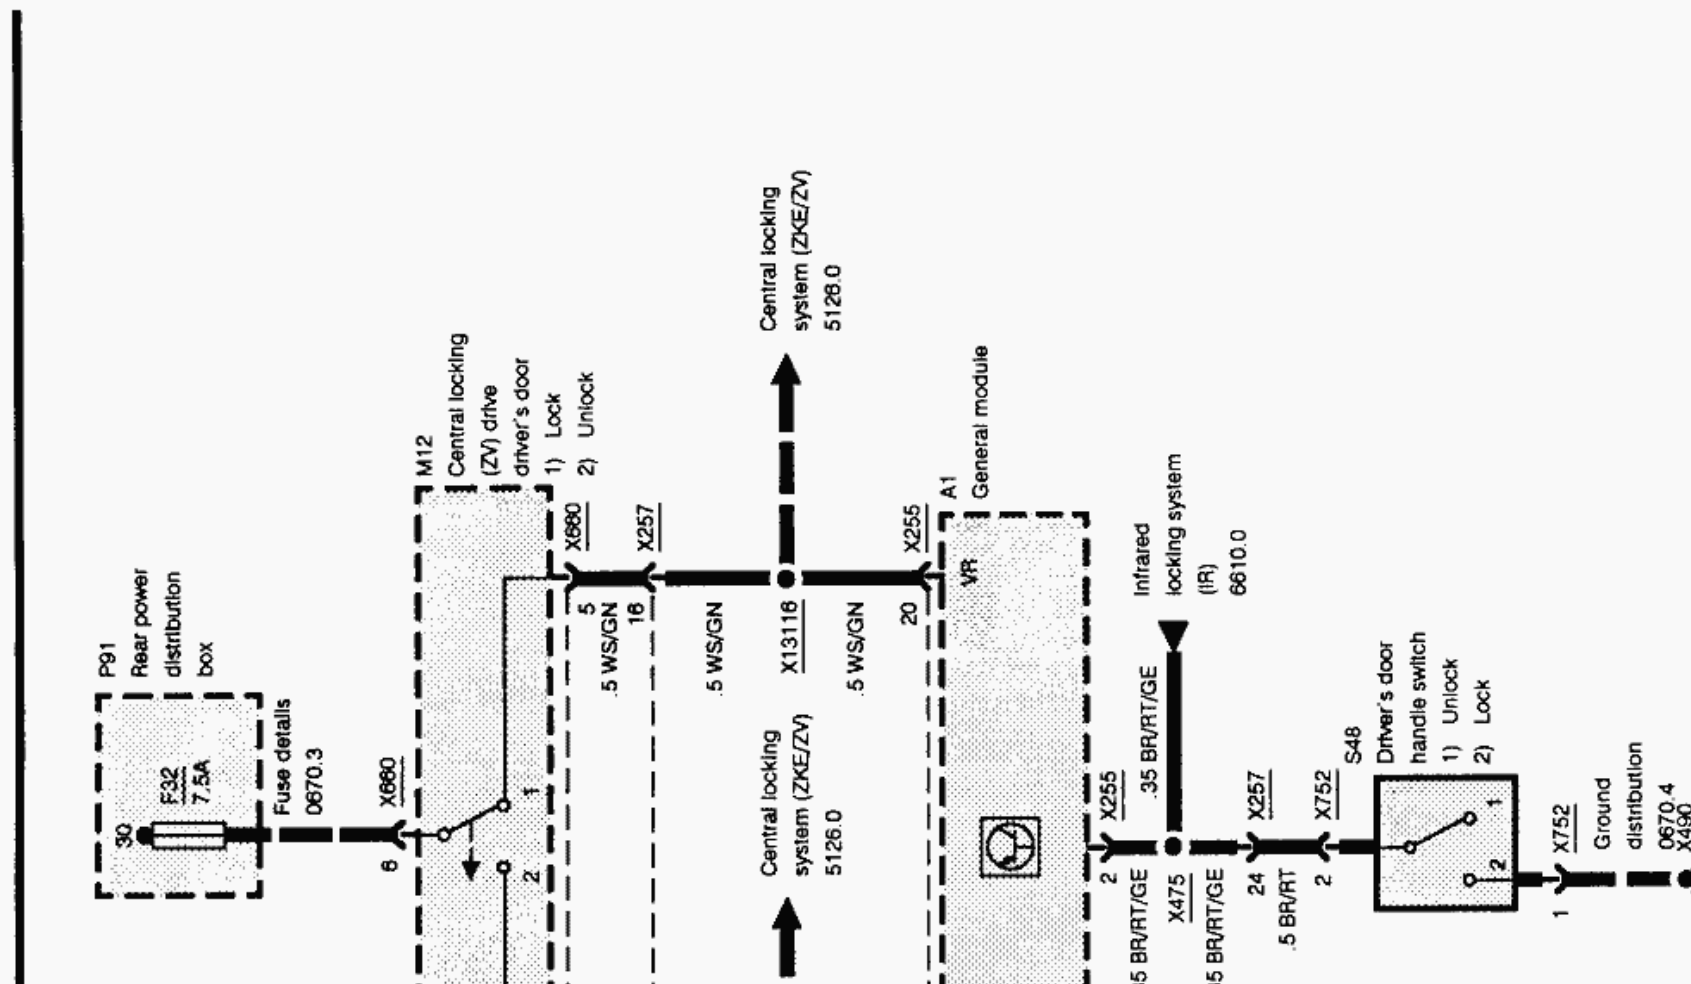

# Interior light control (ZKE/IB)

## Inputs

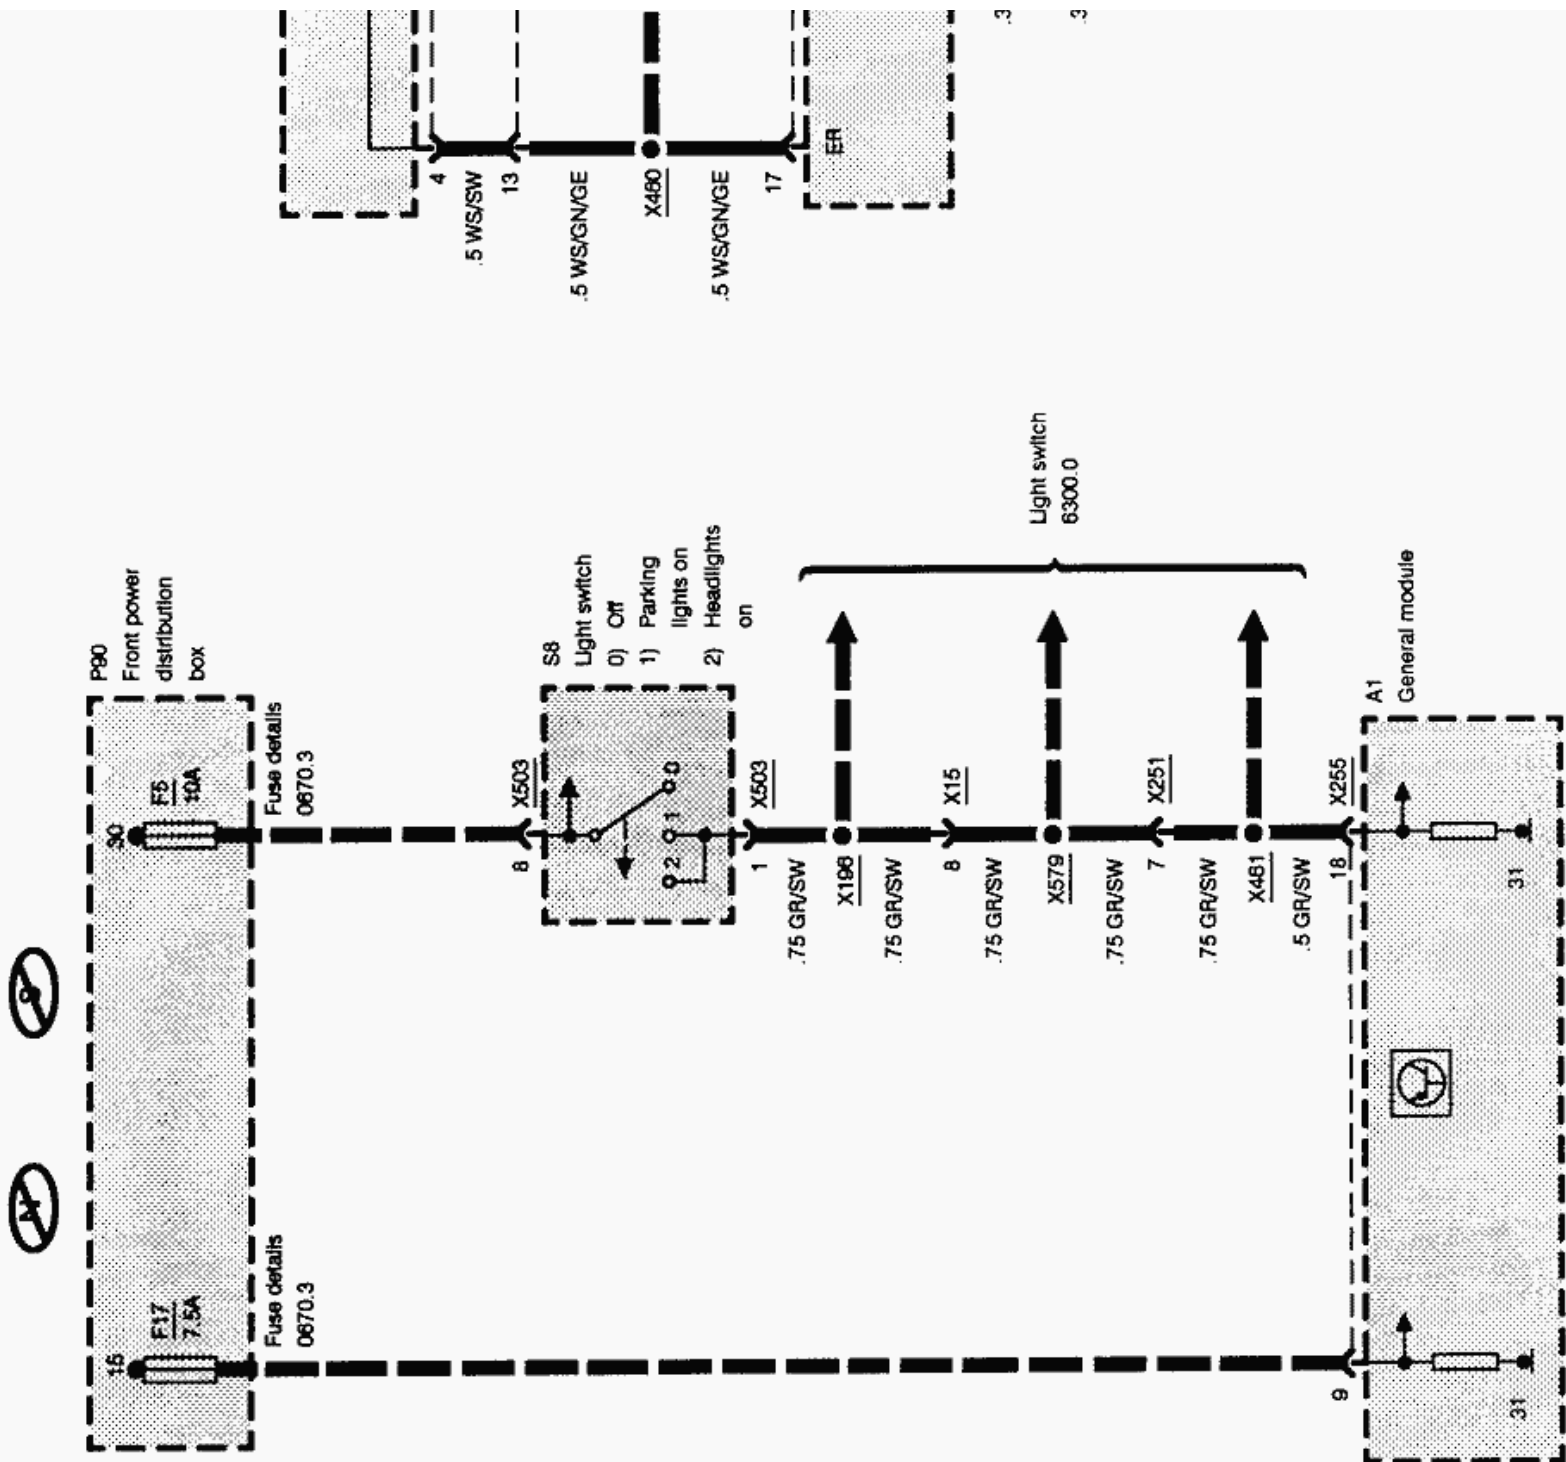




(N) (S)

09/93


6330.0-01

1994

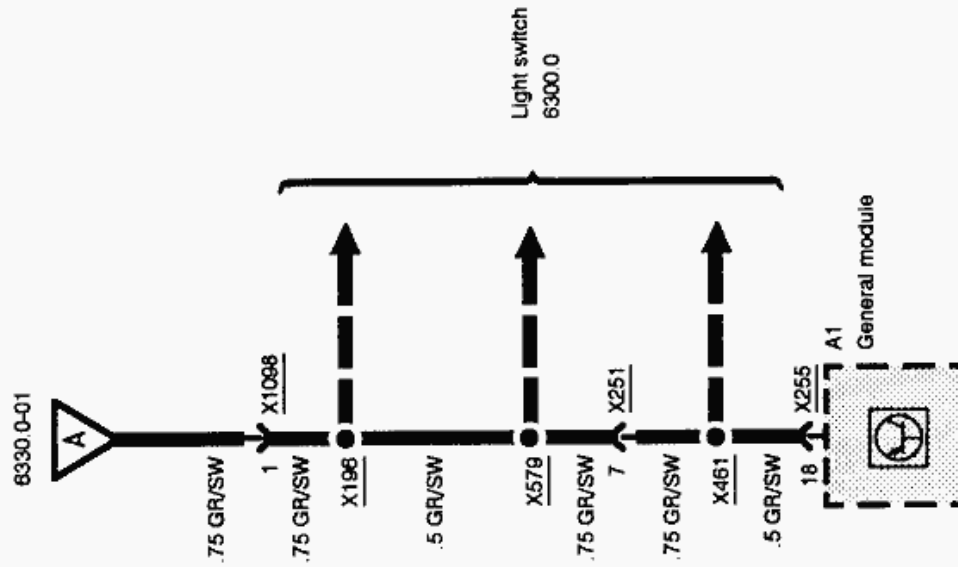

# Interior light control (ZKE/IB)

## Inputs

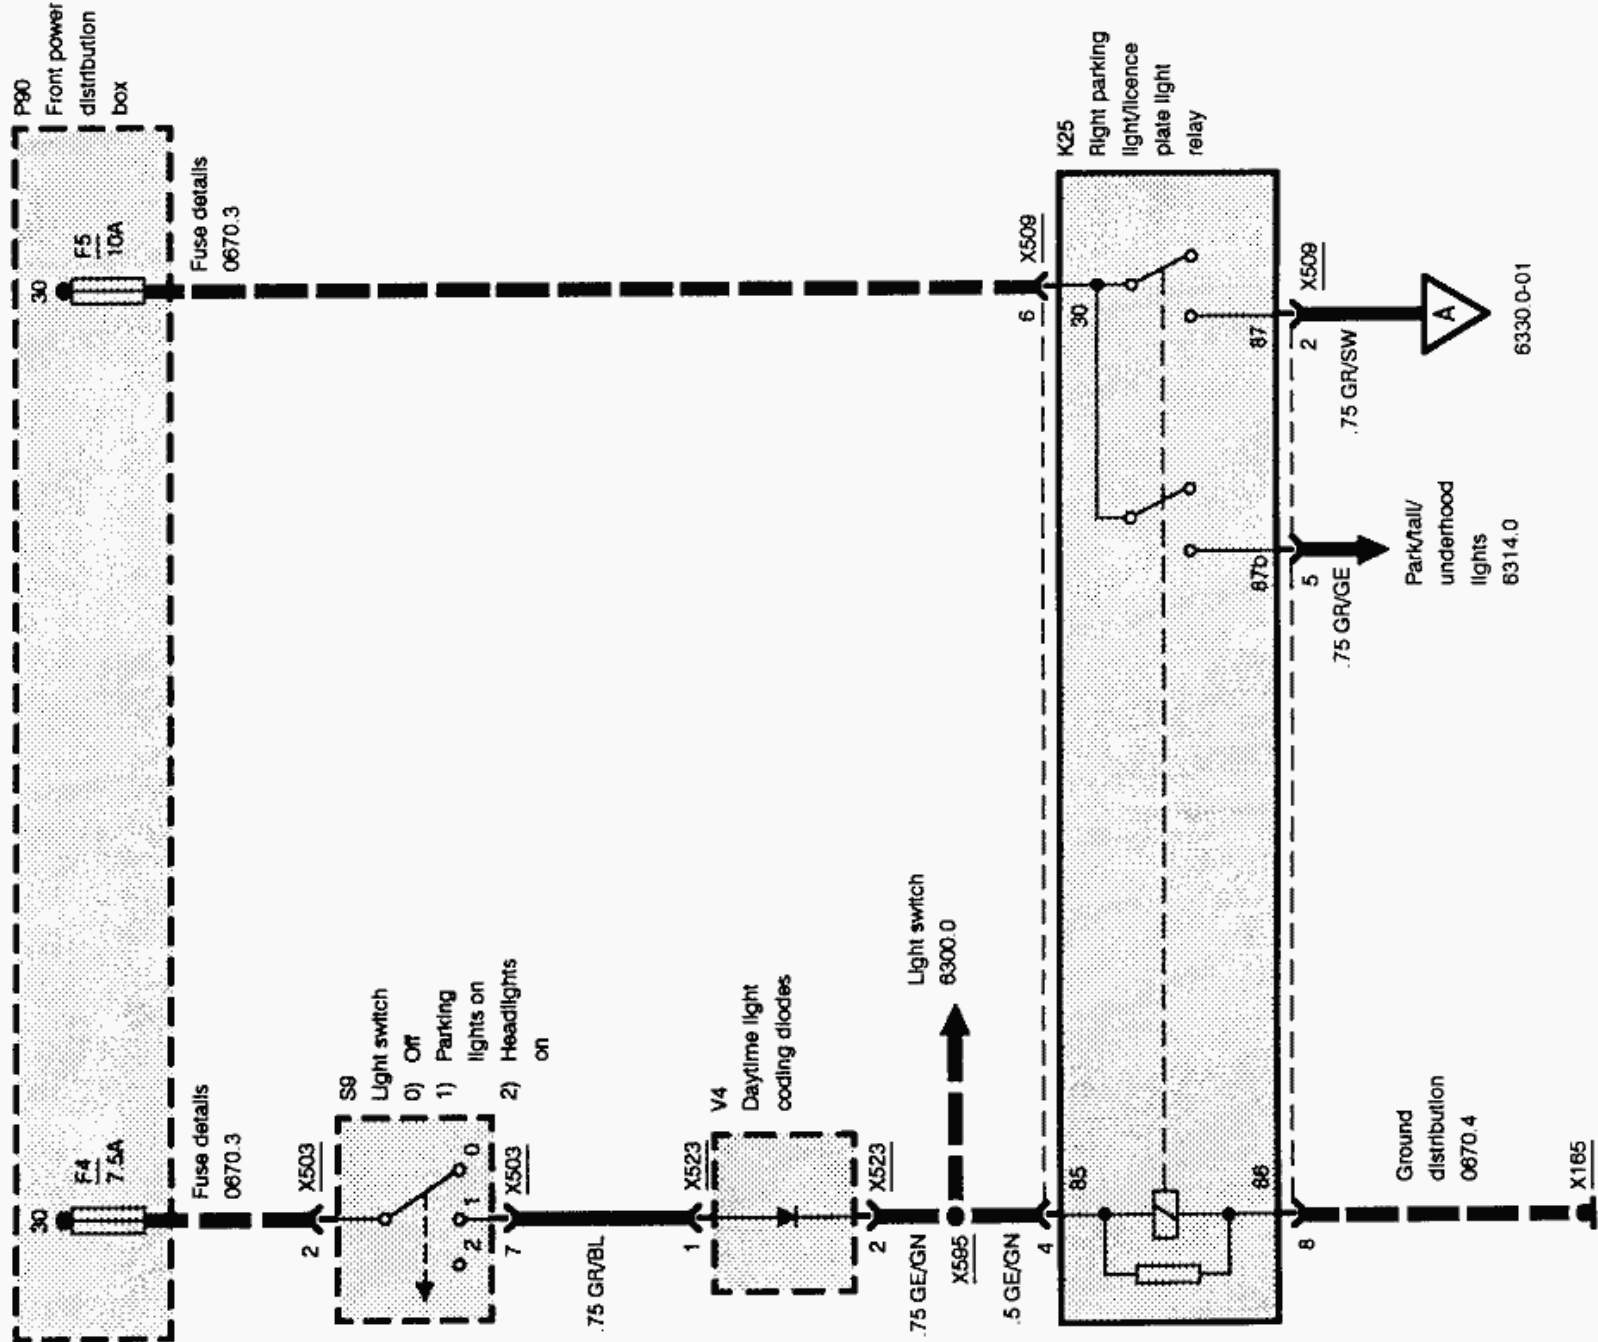




09/93


6330.0-02

1994

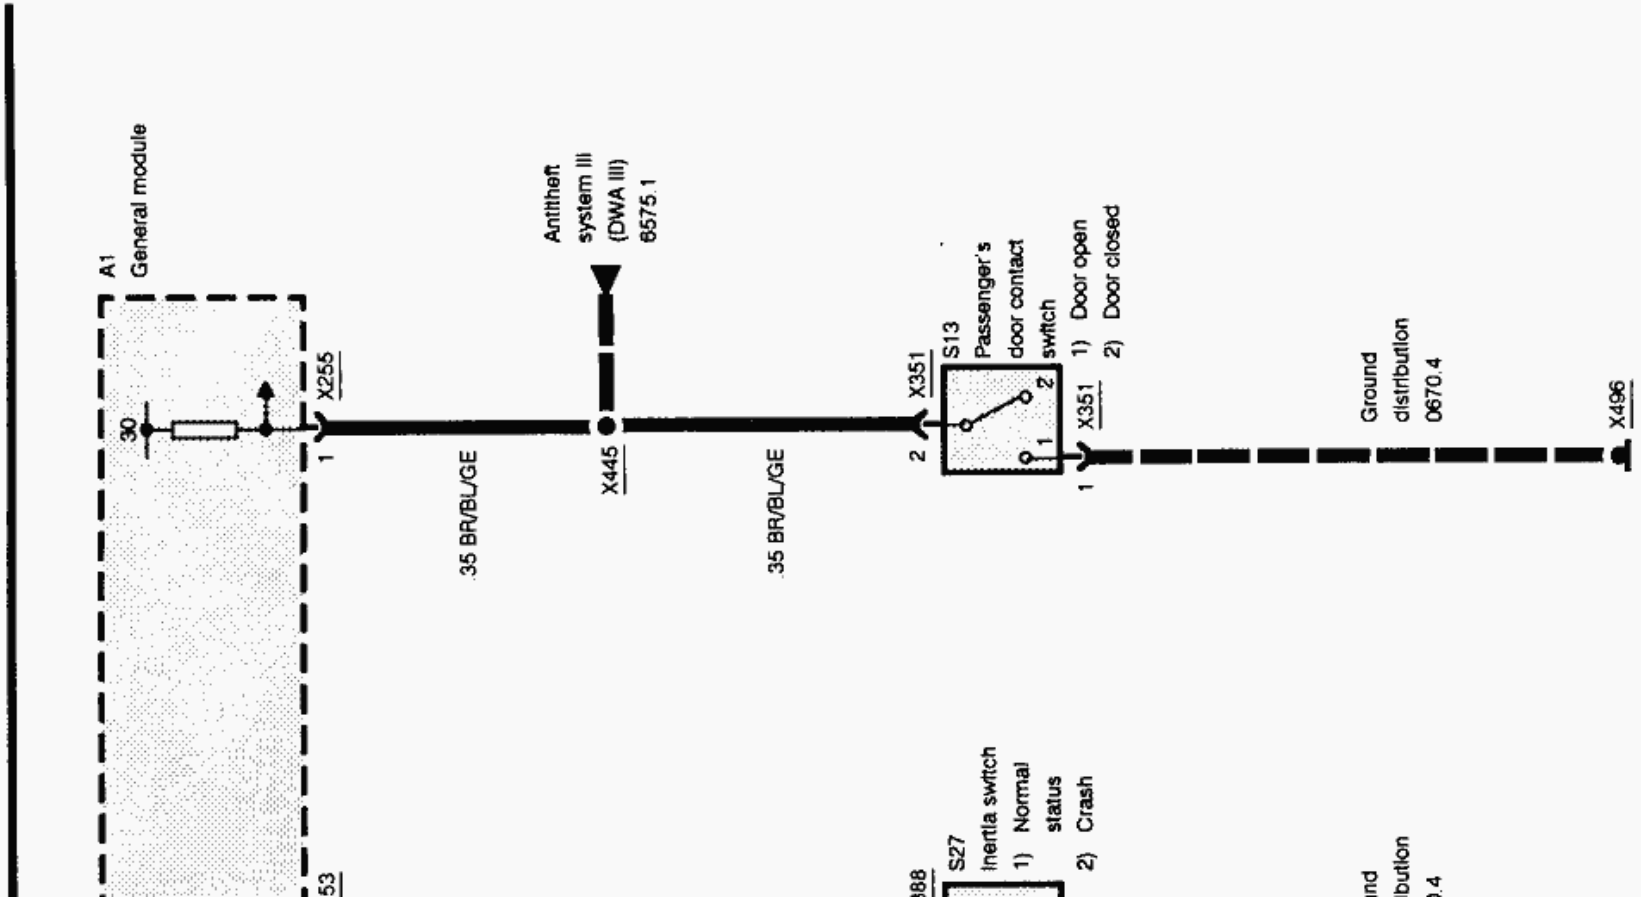

# Interior light control (ZKE/IB)

## Inputs

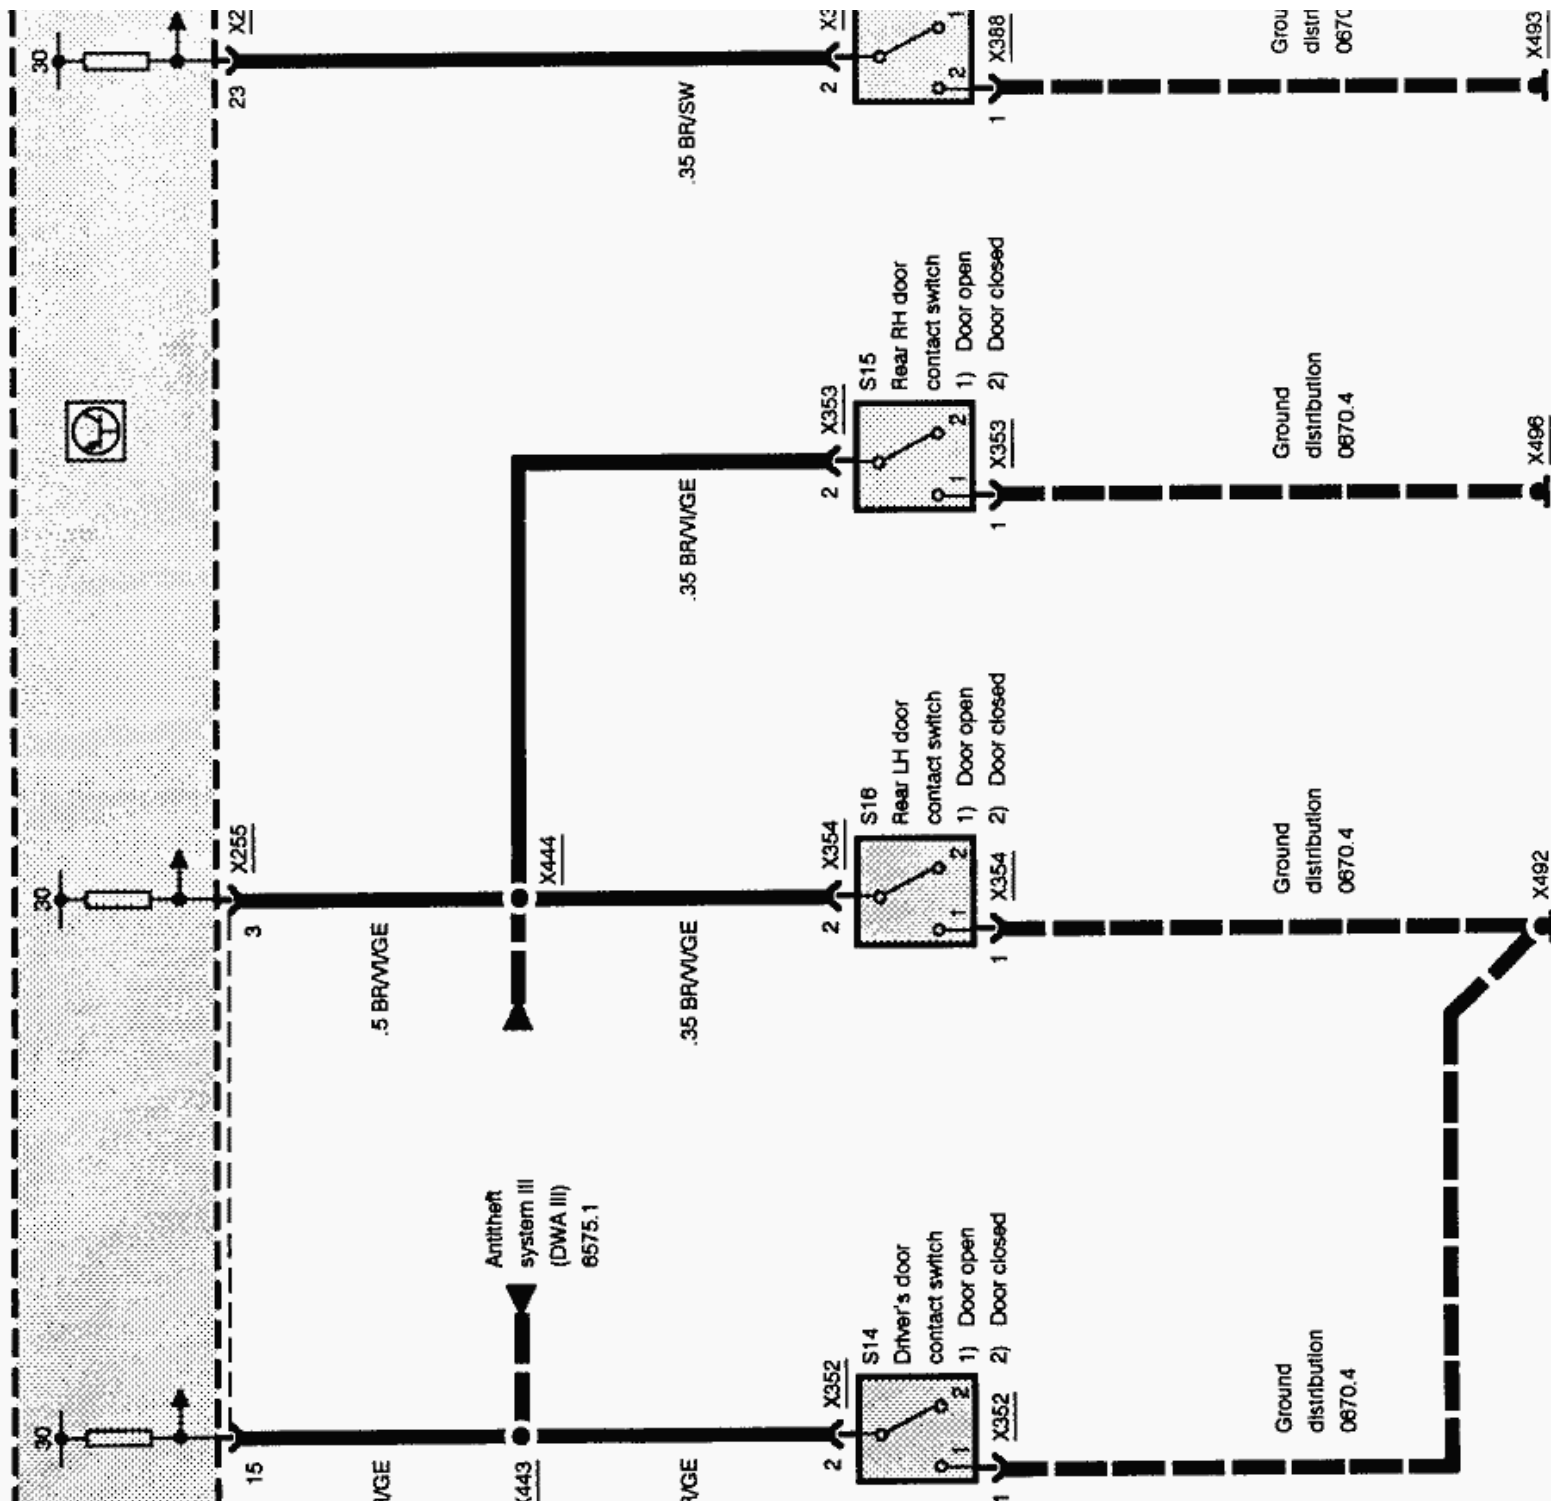




09/93

6330.0-03

1994

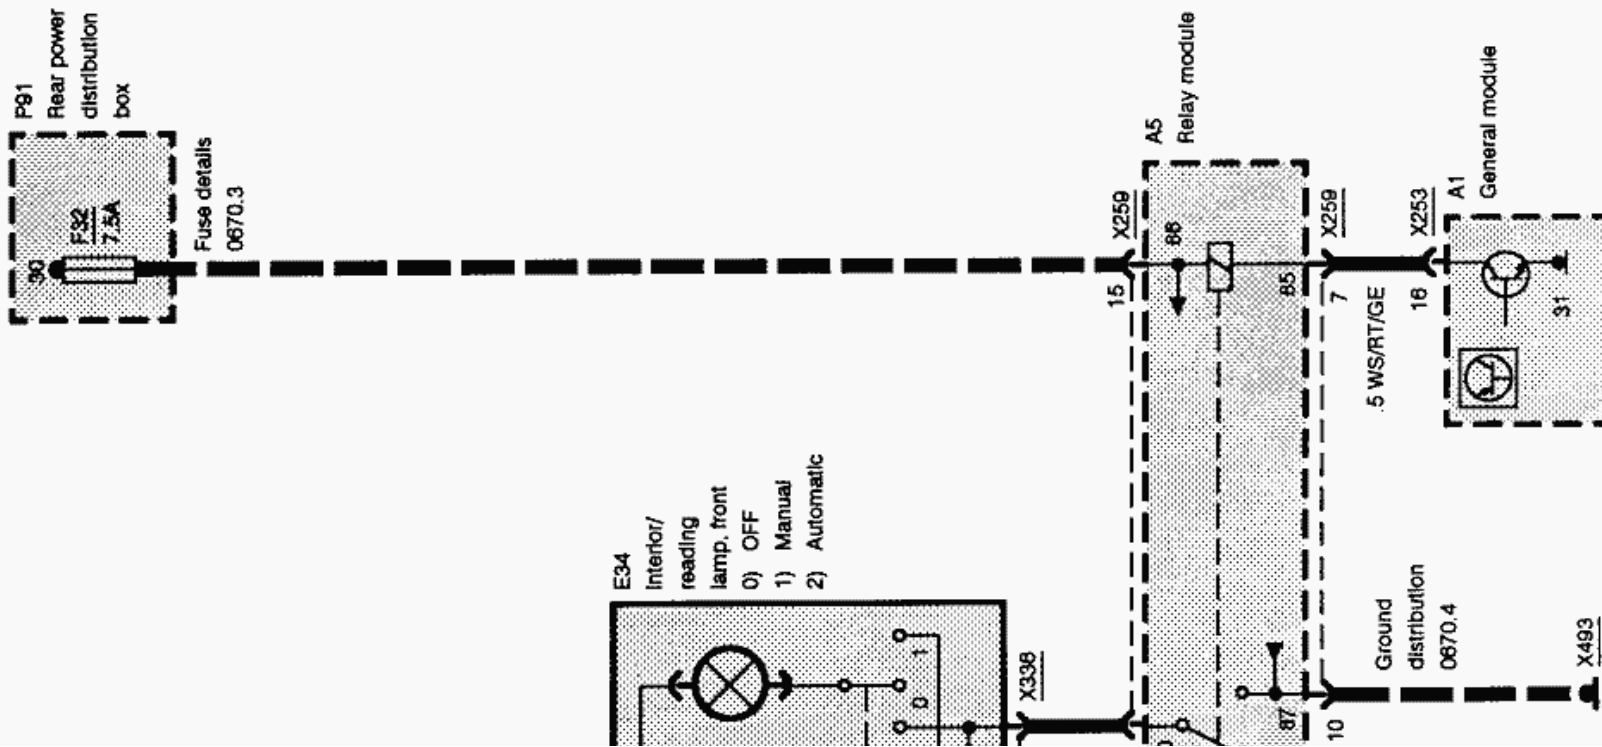


.35 BR/GF

X

.35 BR/GF


# Interior light control (ZKE/IB)

## Outputs

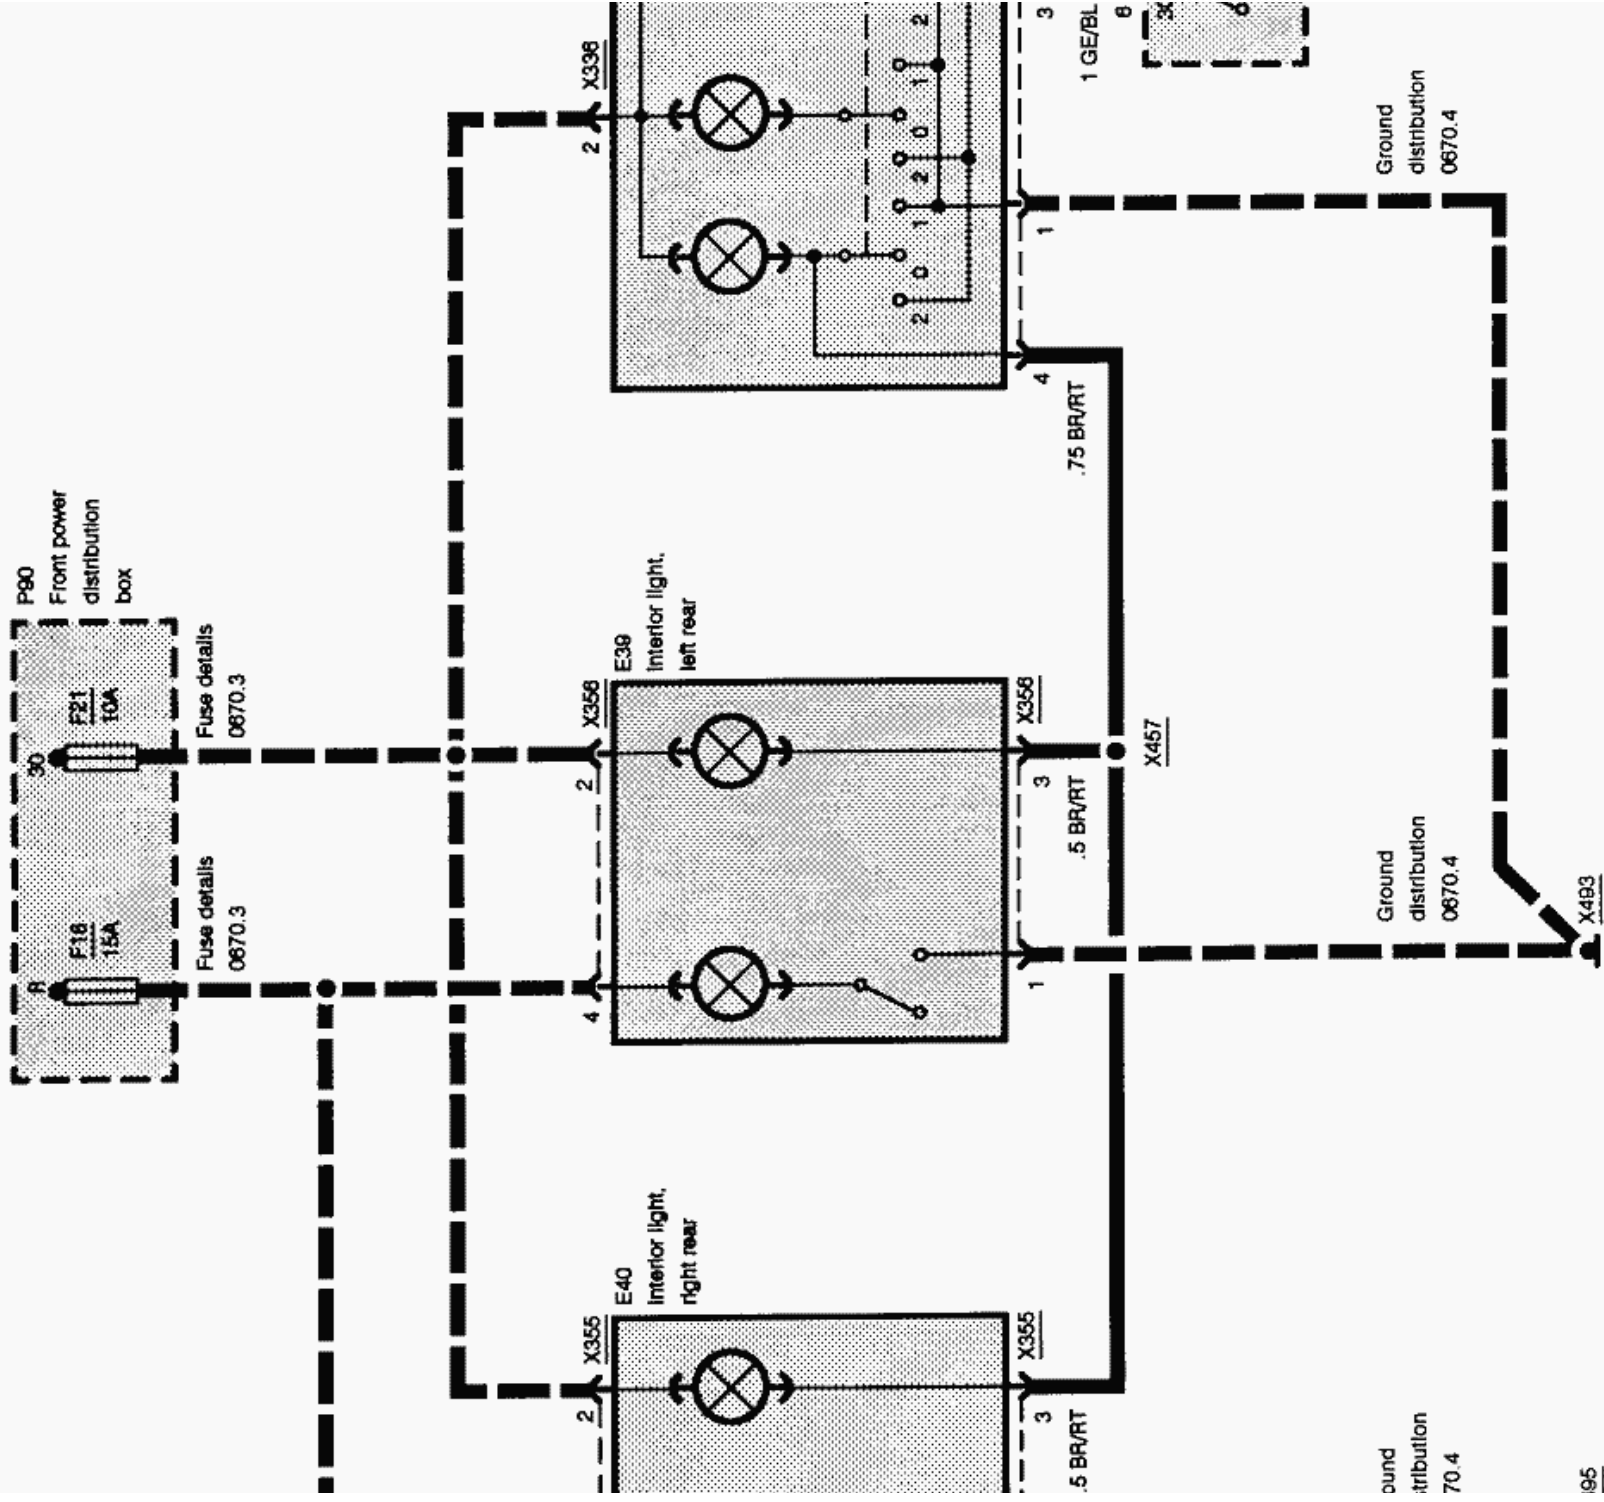

Ground distribution 70.4



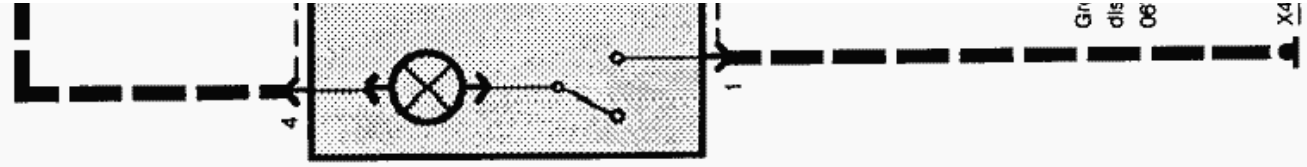


09/93

6330.0-04

1994




# Touring

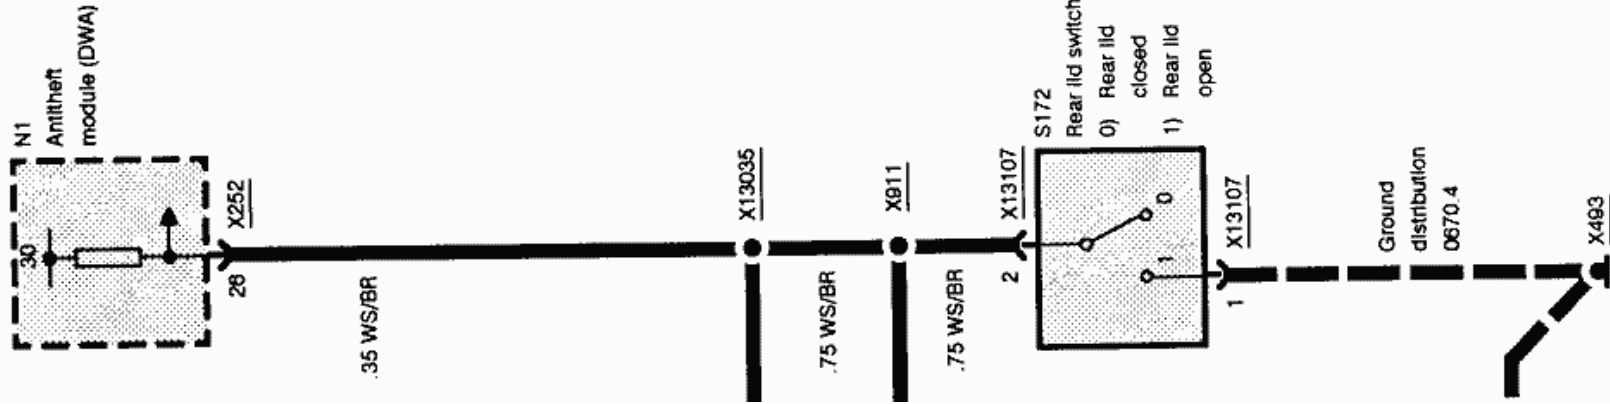

# Rear light control (ZKE/IB)

Inputs

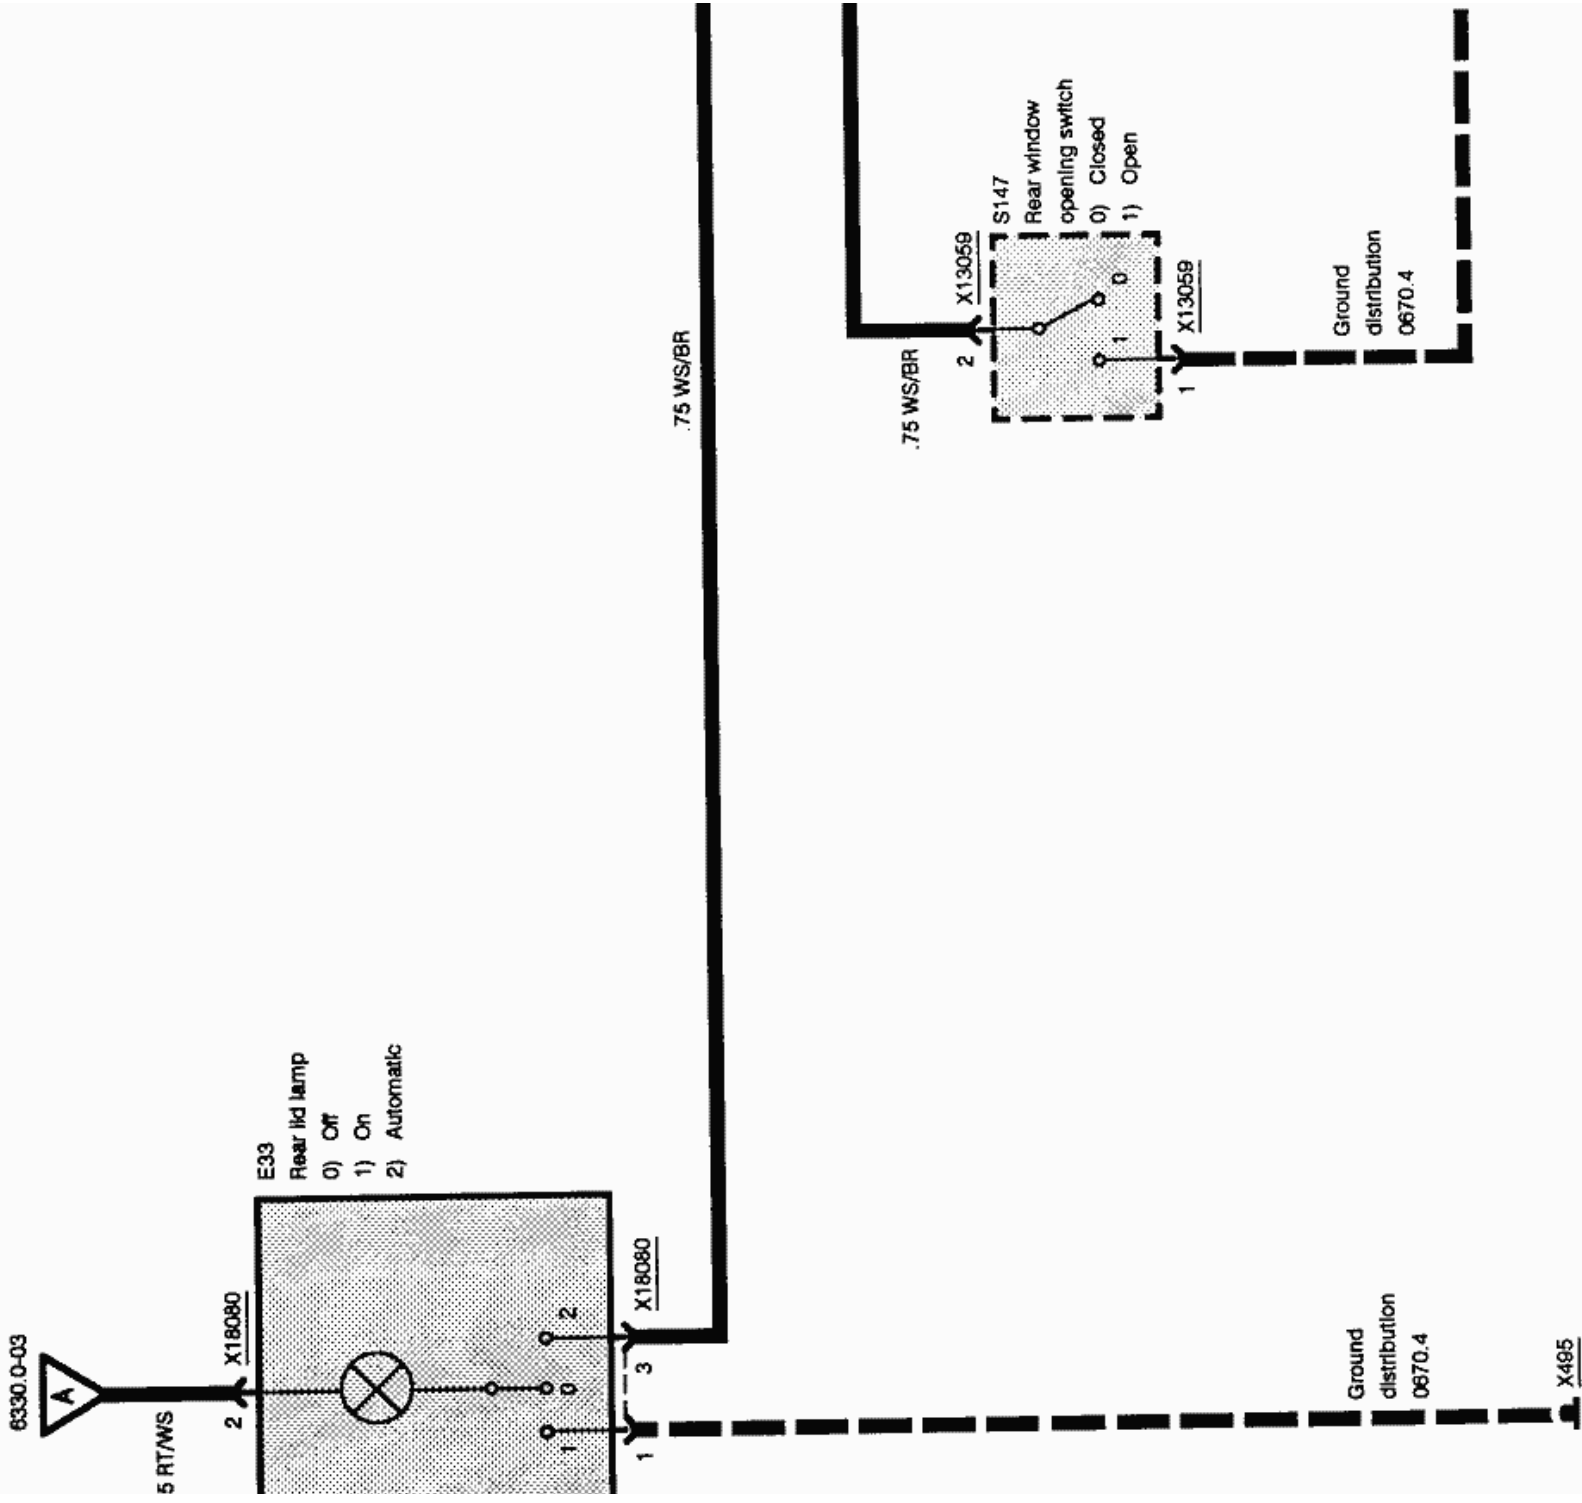



7



# BMWAG

## Electrical troubleshooting manual


### 5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

#### ZVM Interior lights Scheme 6330.1


09/93

6330.1-00

1994

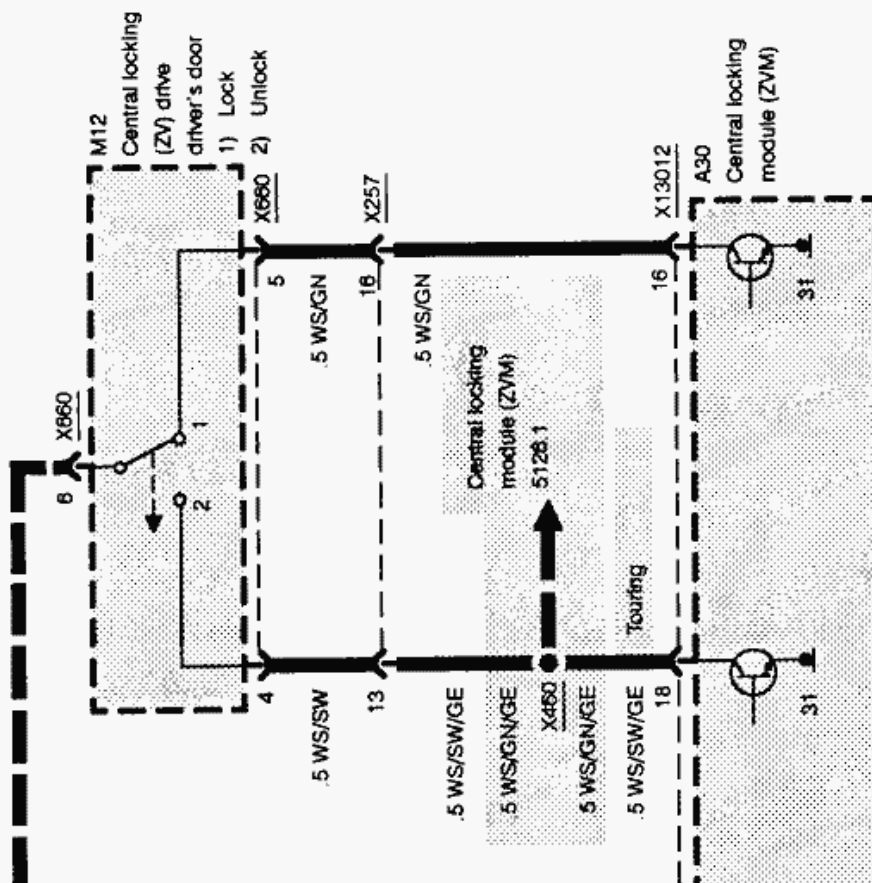

# ZVM Interior lights

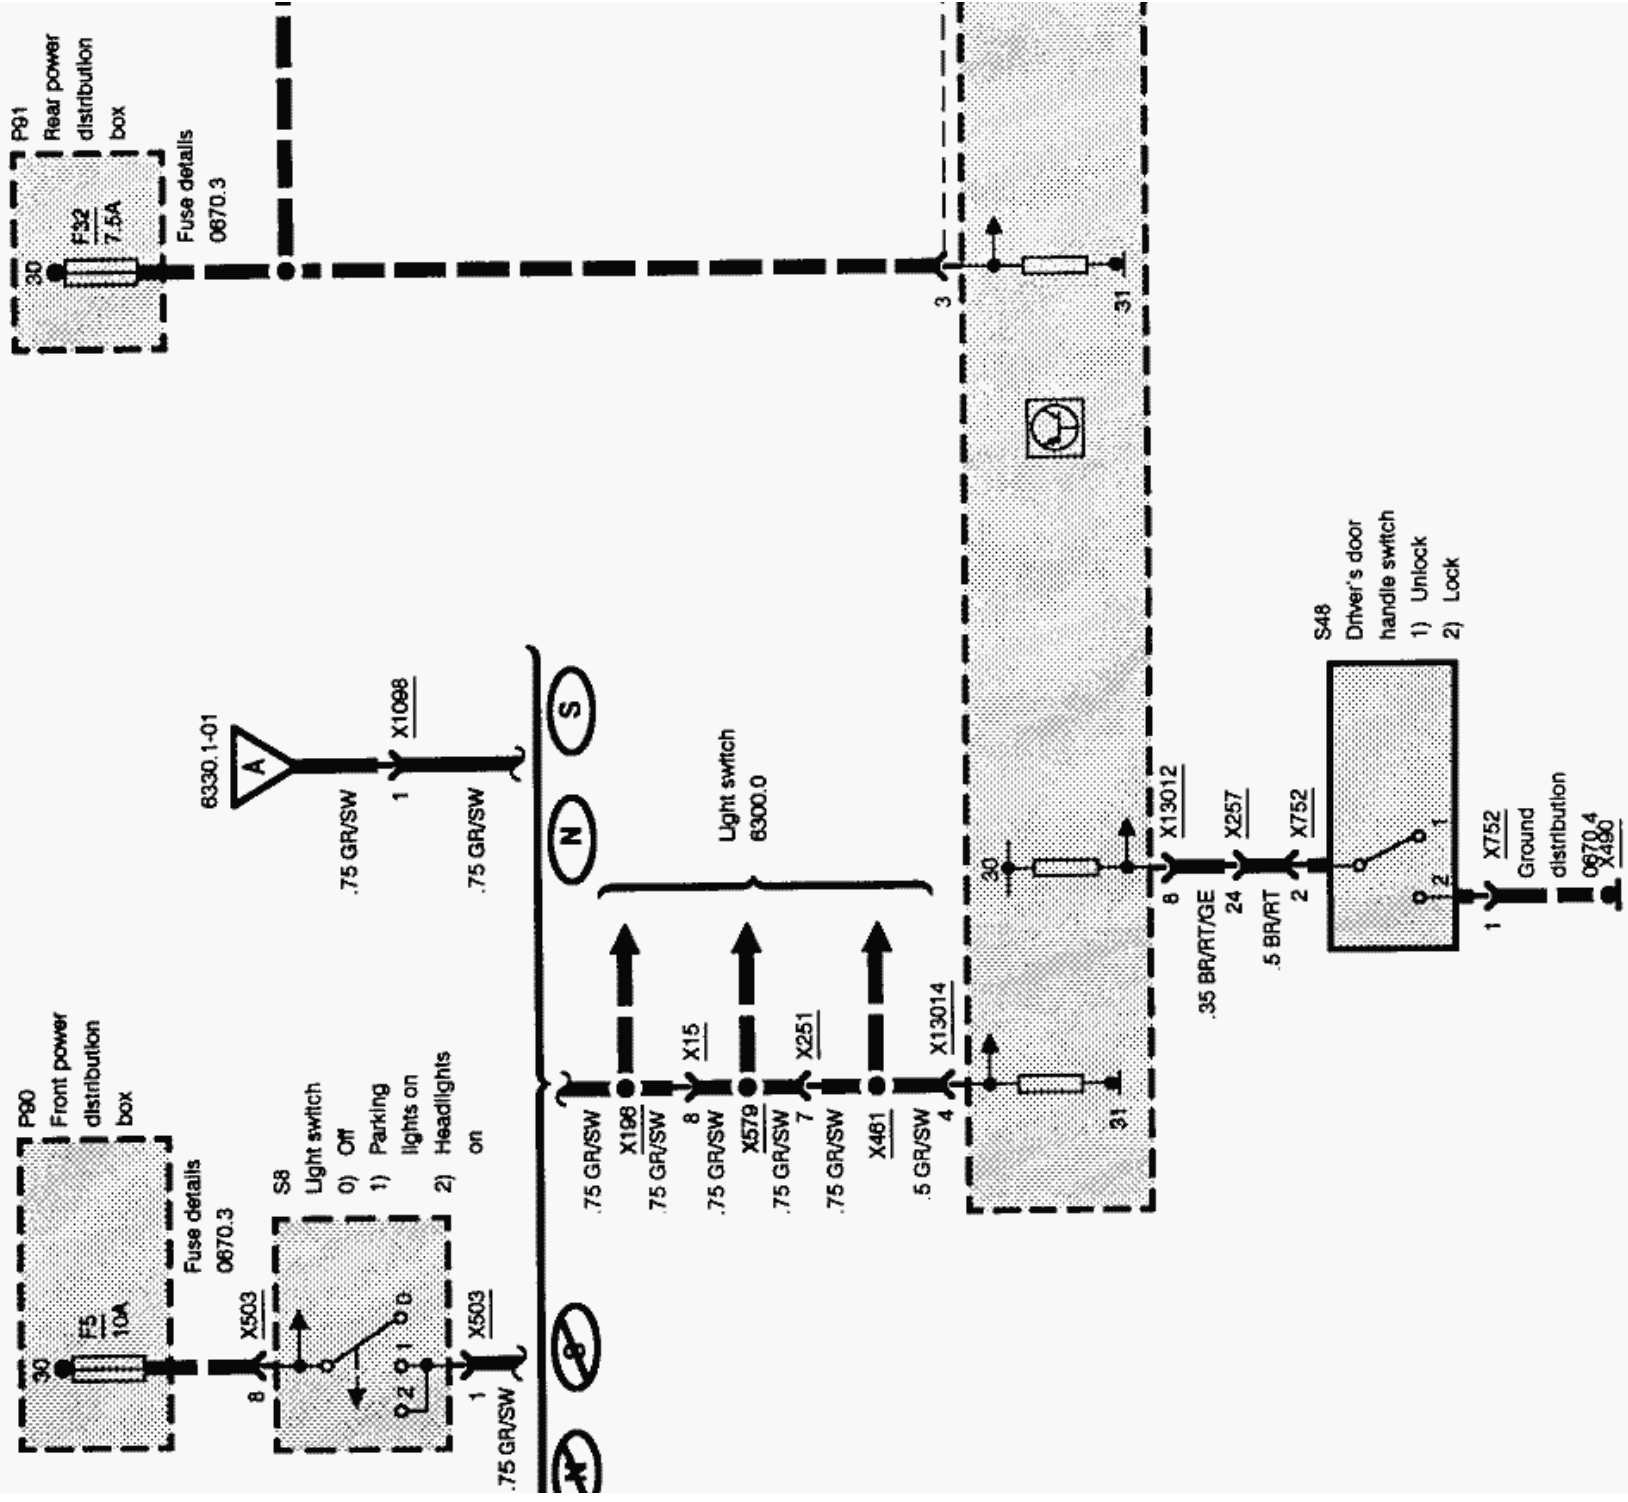

09/93

6330.1-01

1994

S  
N

P90  
Front power  
distribution  
box

F5  
10A


Fuse details  
0670 3

X509

K25  
Right parking  
light/licence  
plate light  
relay

509

# ZVM Interior lights

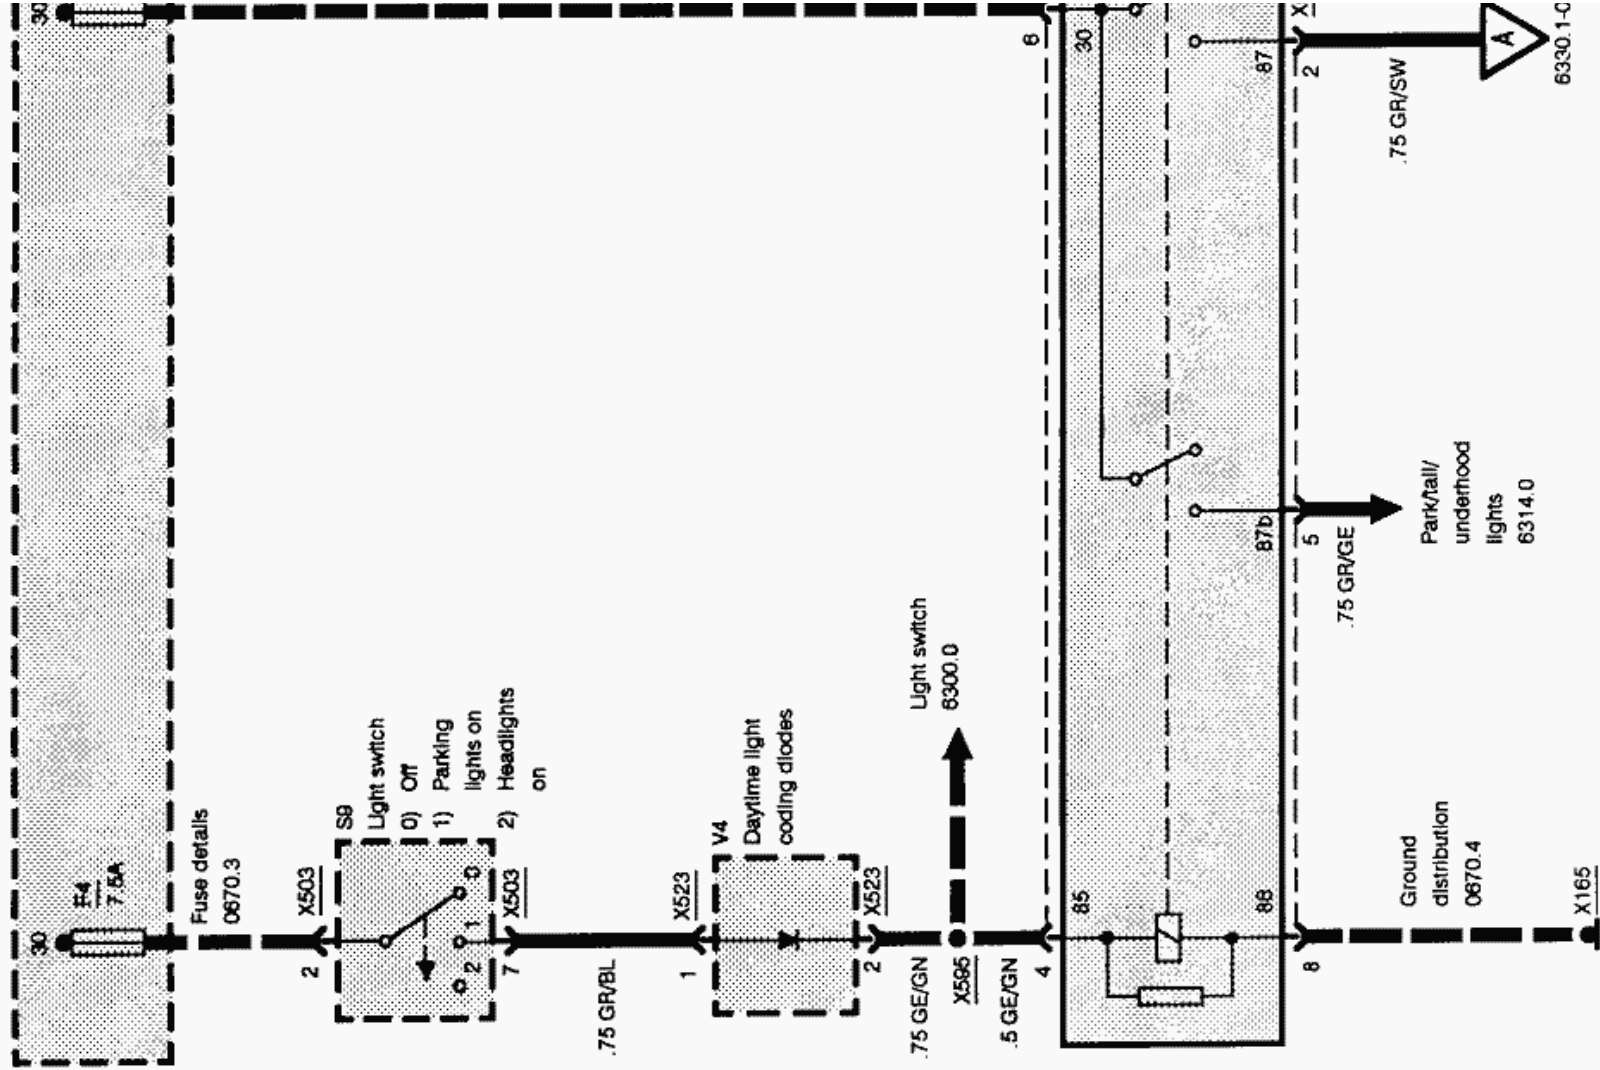




09/93

6330.1-02


1994

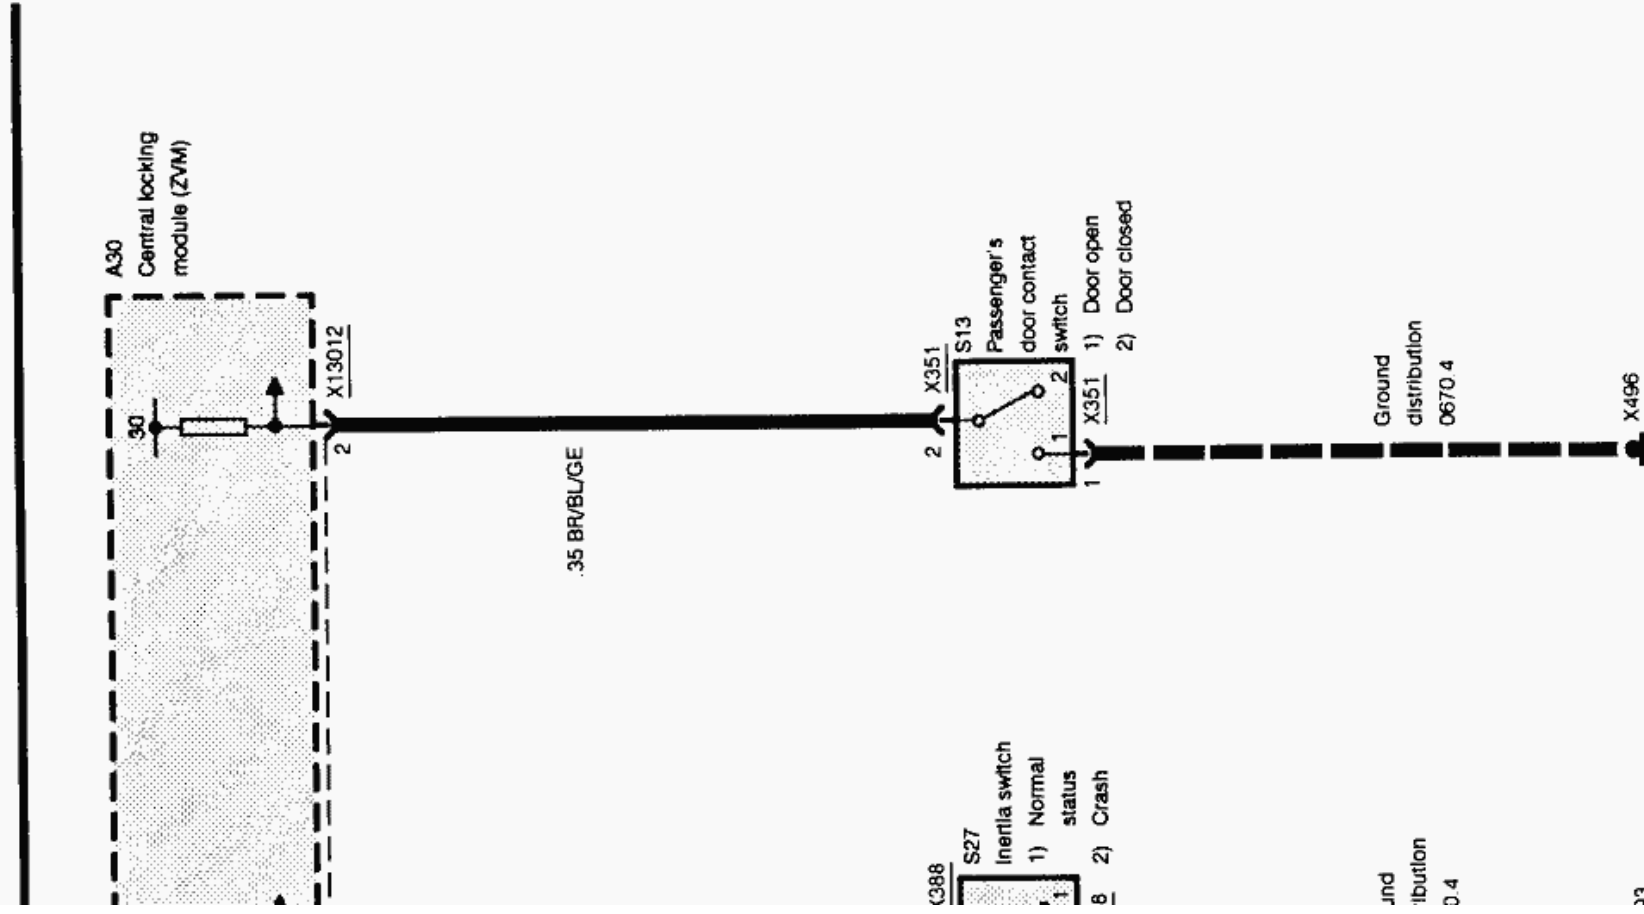



# ZVM Interior lights

## Inputs

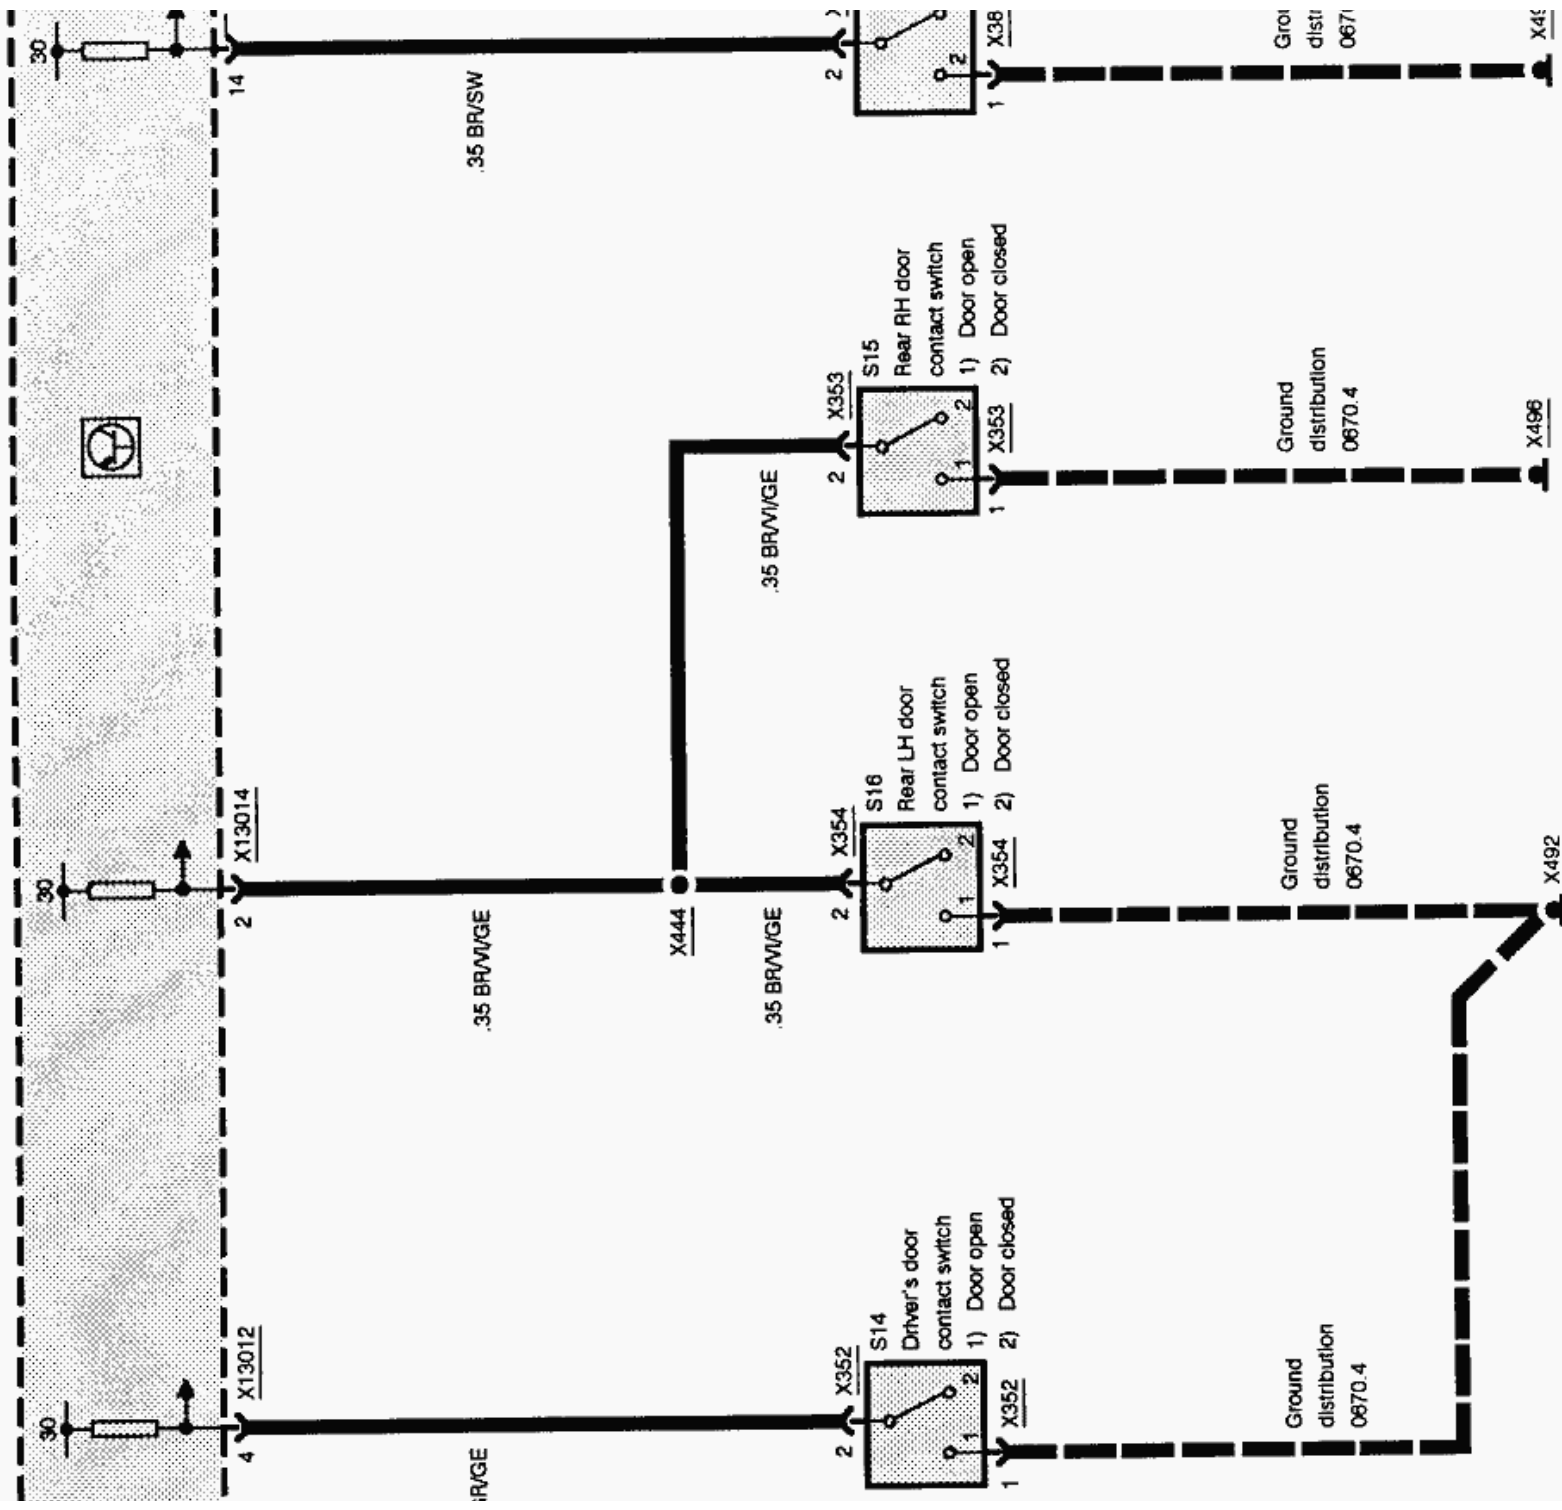




.35 BR/G

09/93

6330.1-03


1994


Touring

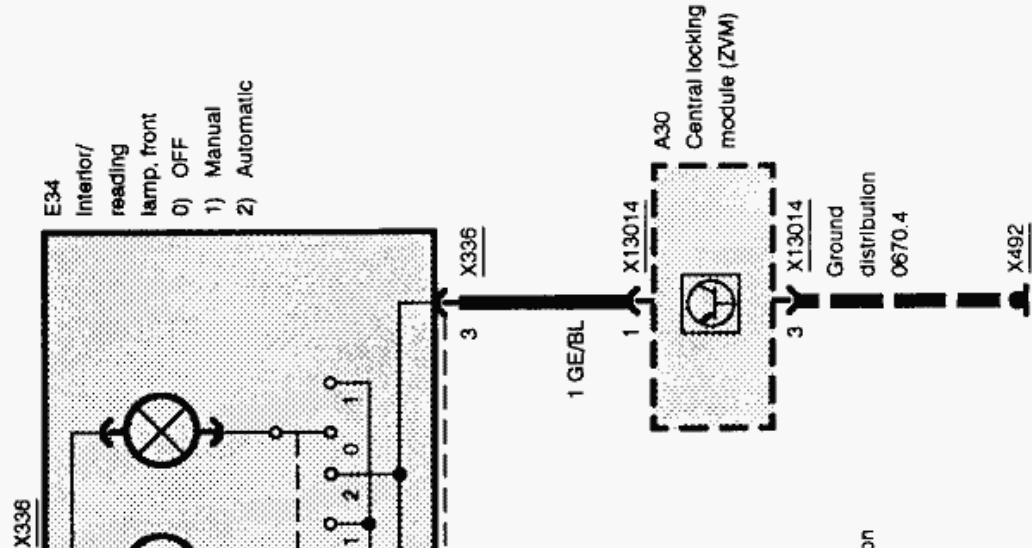

# VM Interior lights

## Outputs

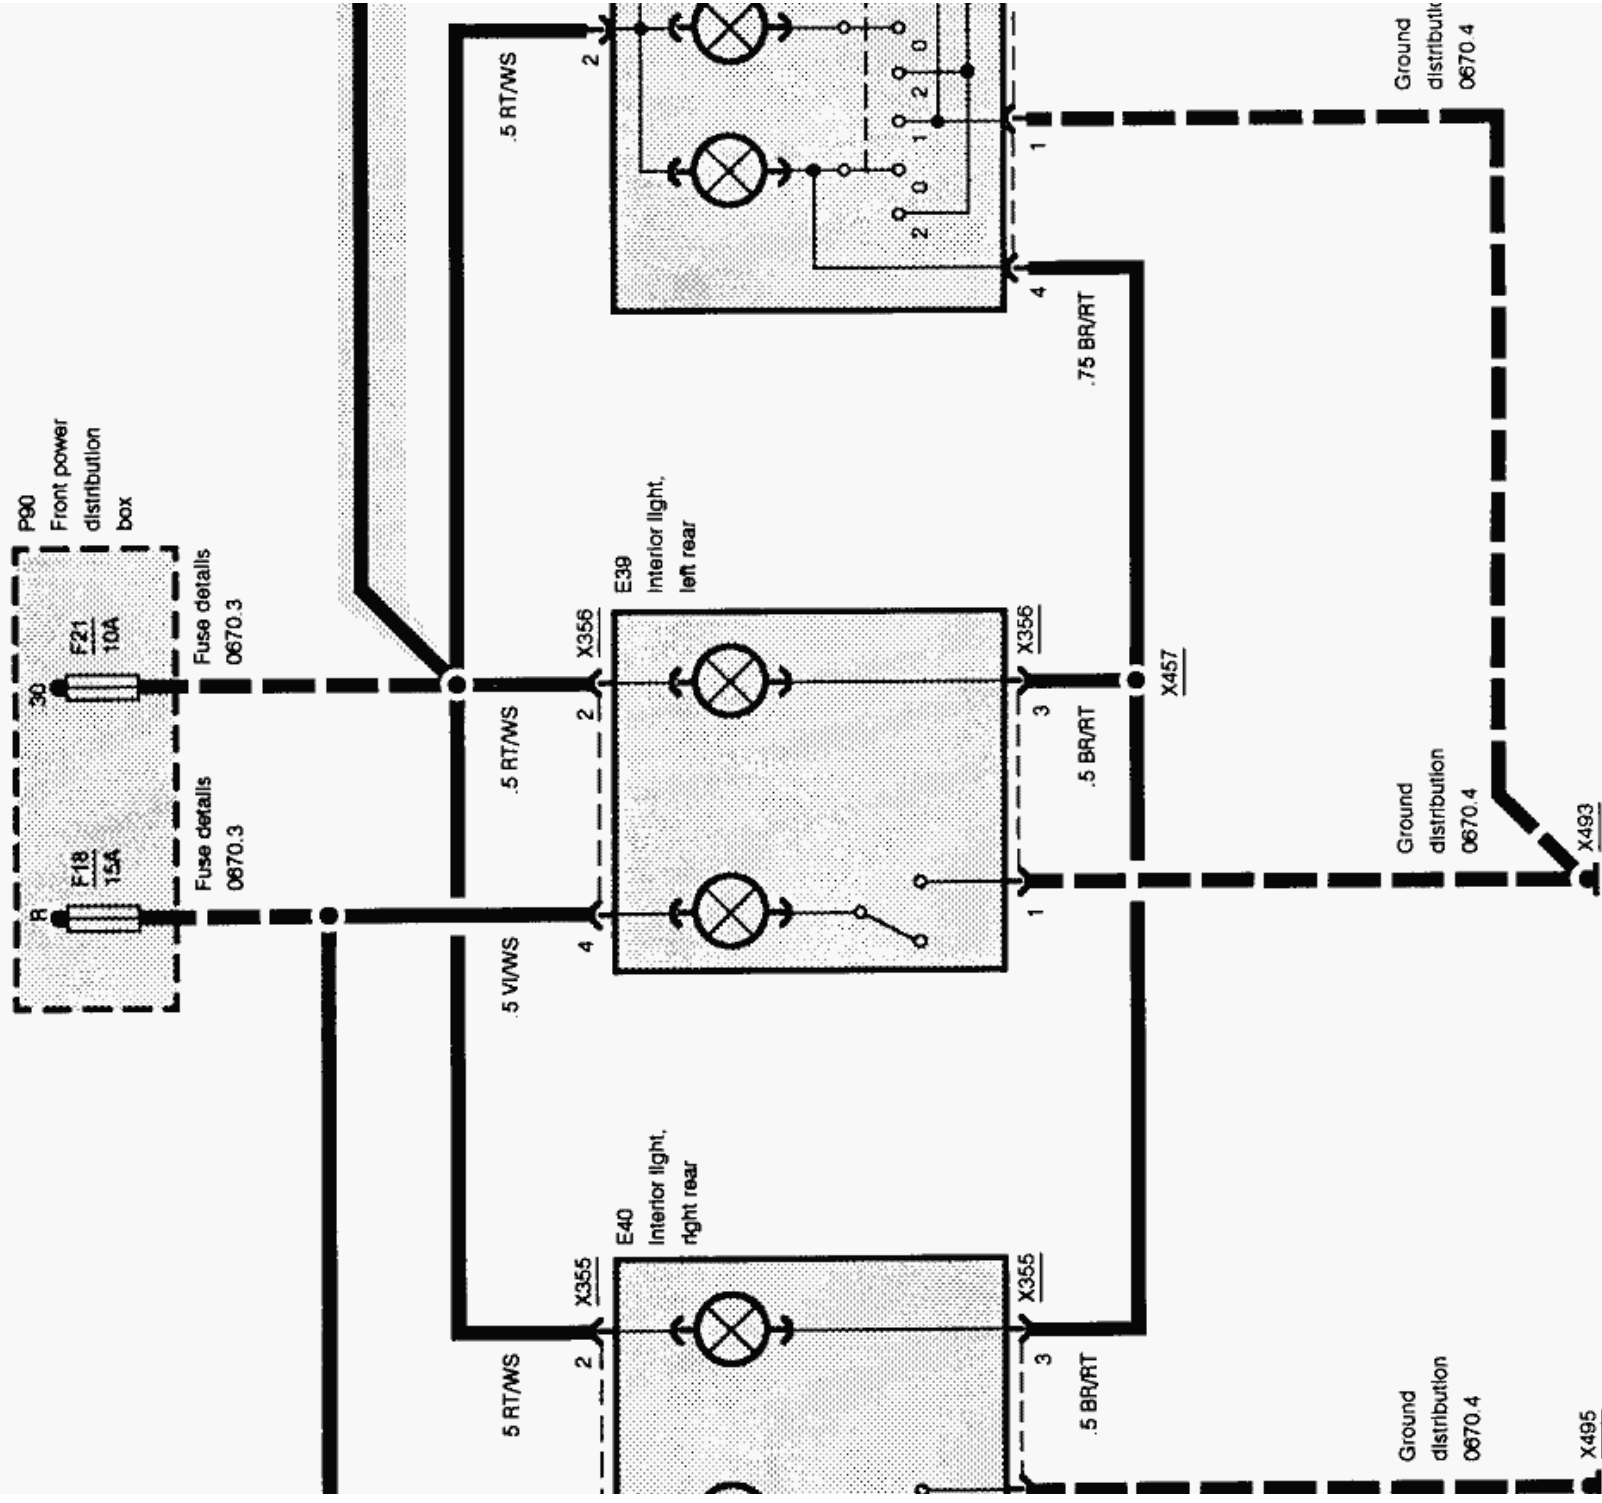

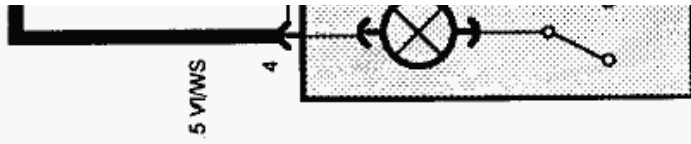


09/93

6330.1-04


1994

Touring

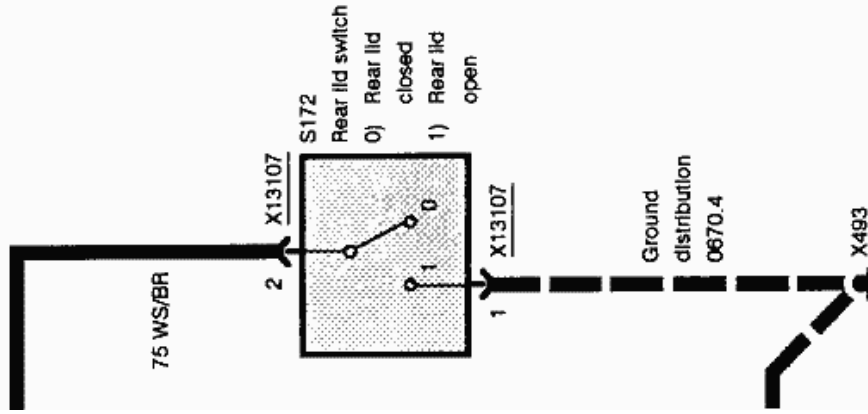

# M Interior lights


puts

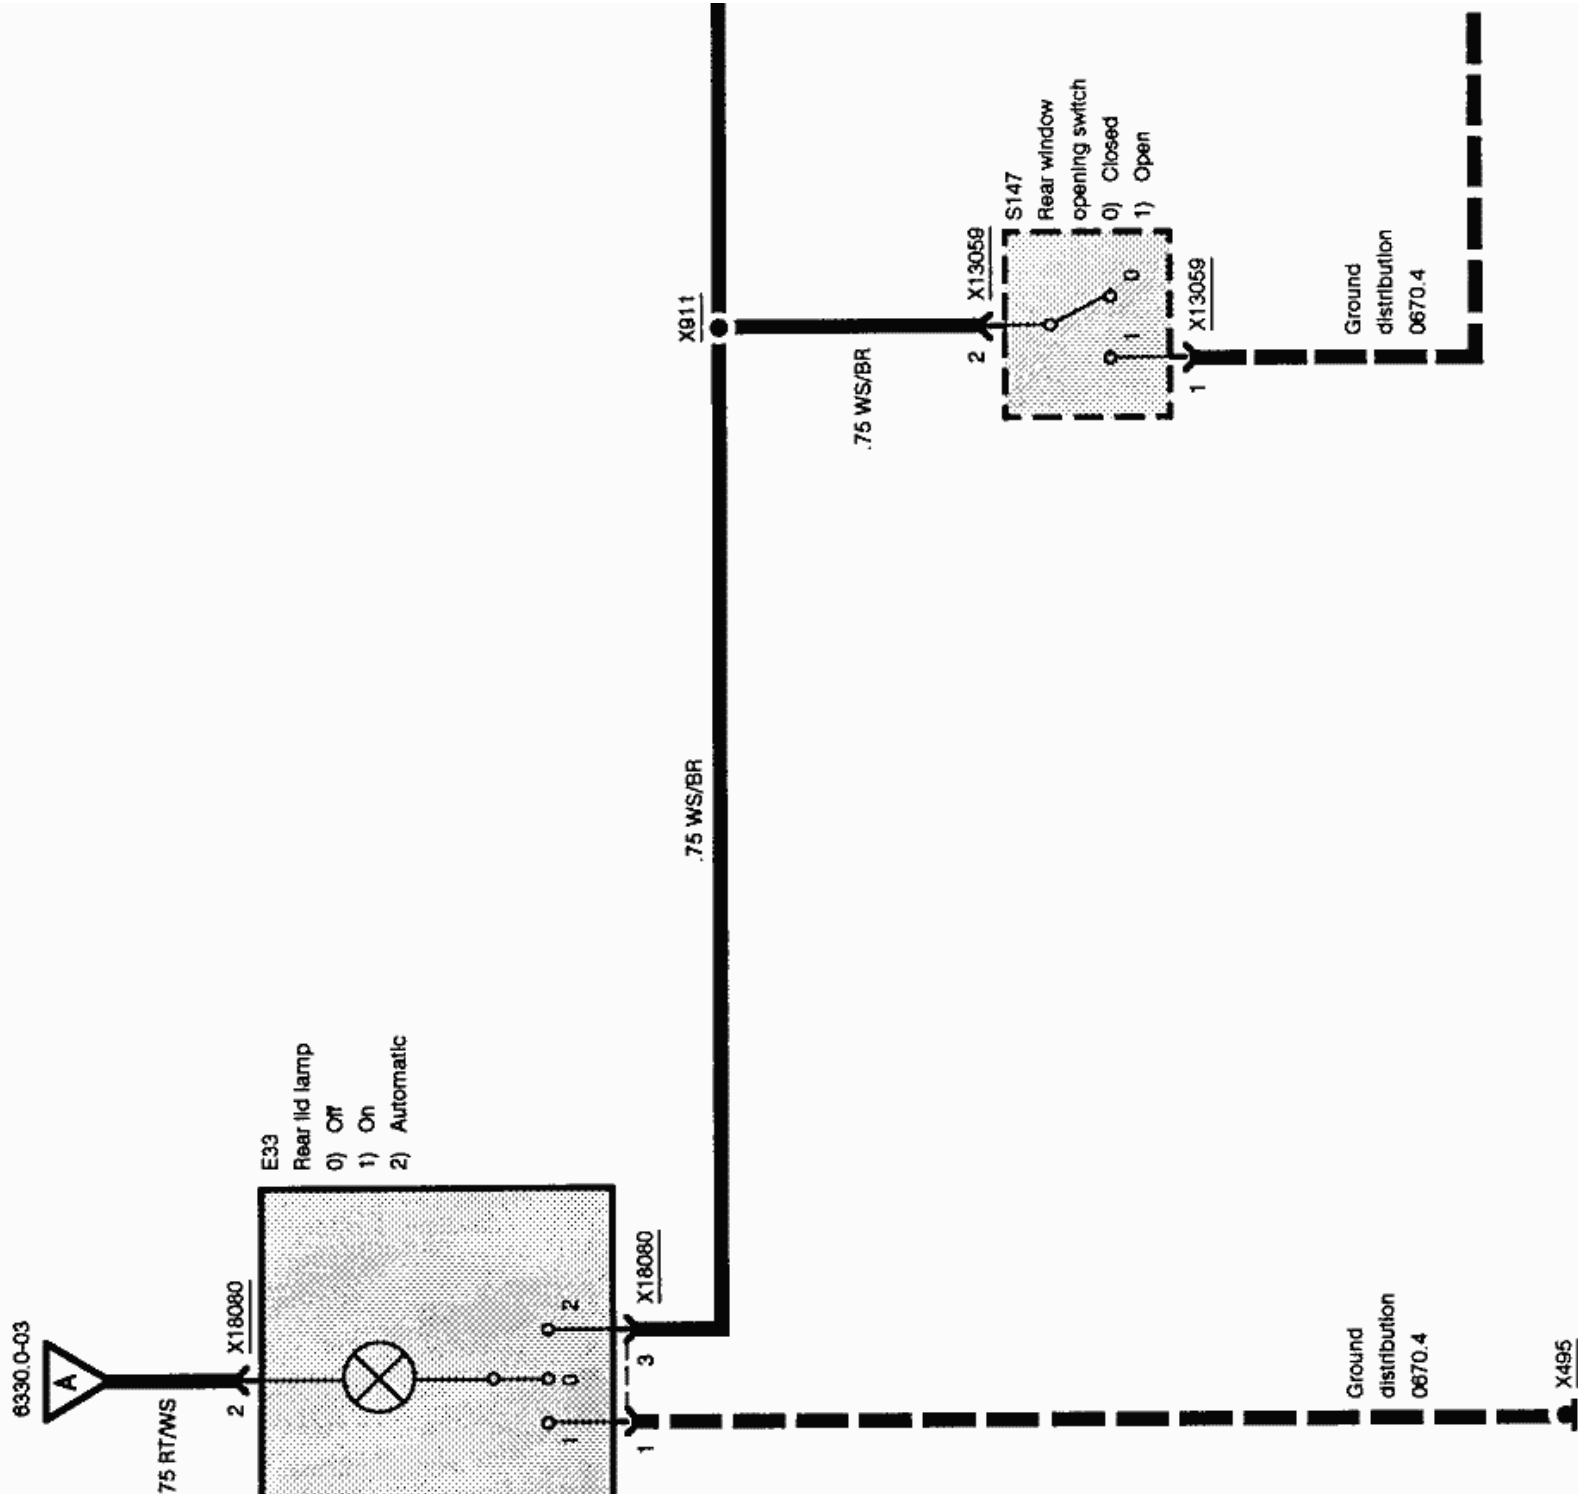





# Lumbar support Driver's and passenger's seats

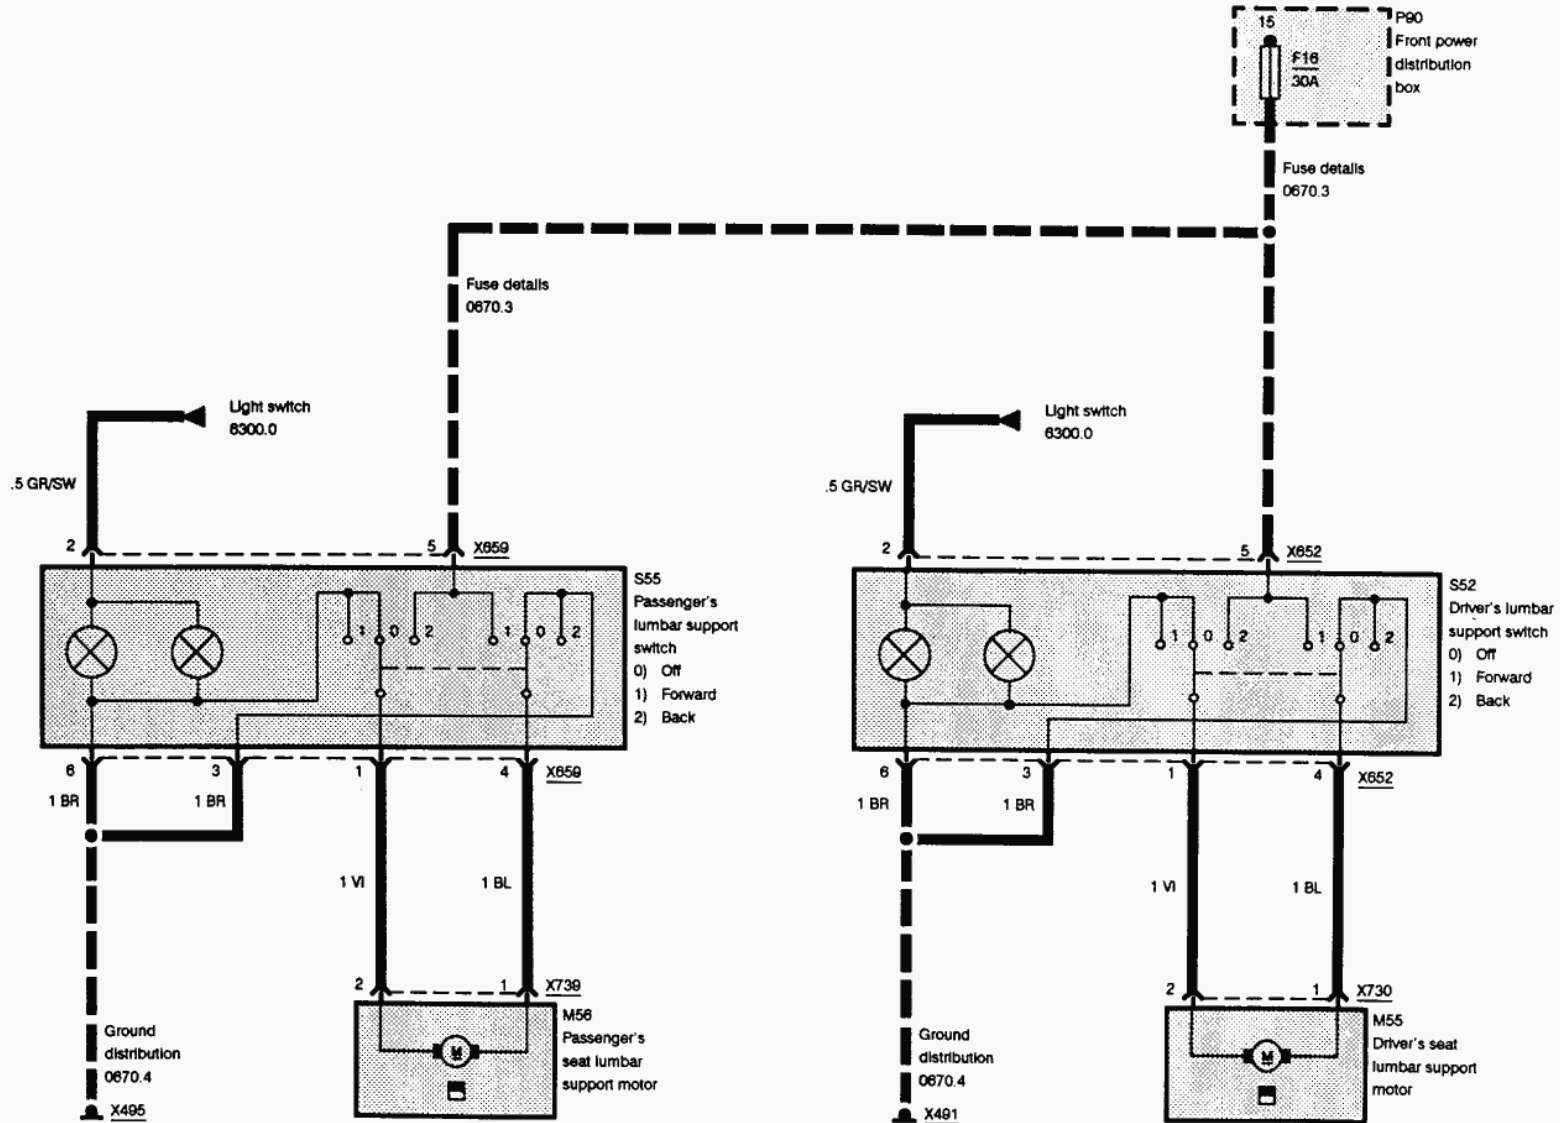





**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Power mirrors

Scheme 5116.0

09/93 ————— **5116.0-00** ————— 1994


- S17 Driver's power mirror switch
- 0) Off
- 1) Up
- 2) Left
- 3) Right
- 4) Down
- 5) LH outside mirror
- 6) RH outside mirror



# MW 5

## Power mirrors


### Outside mirrors

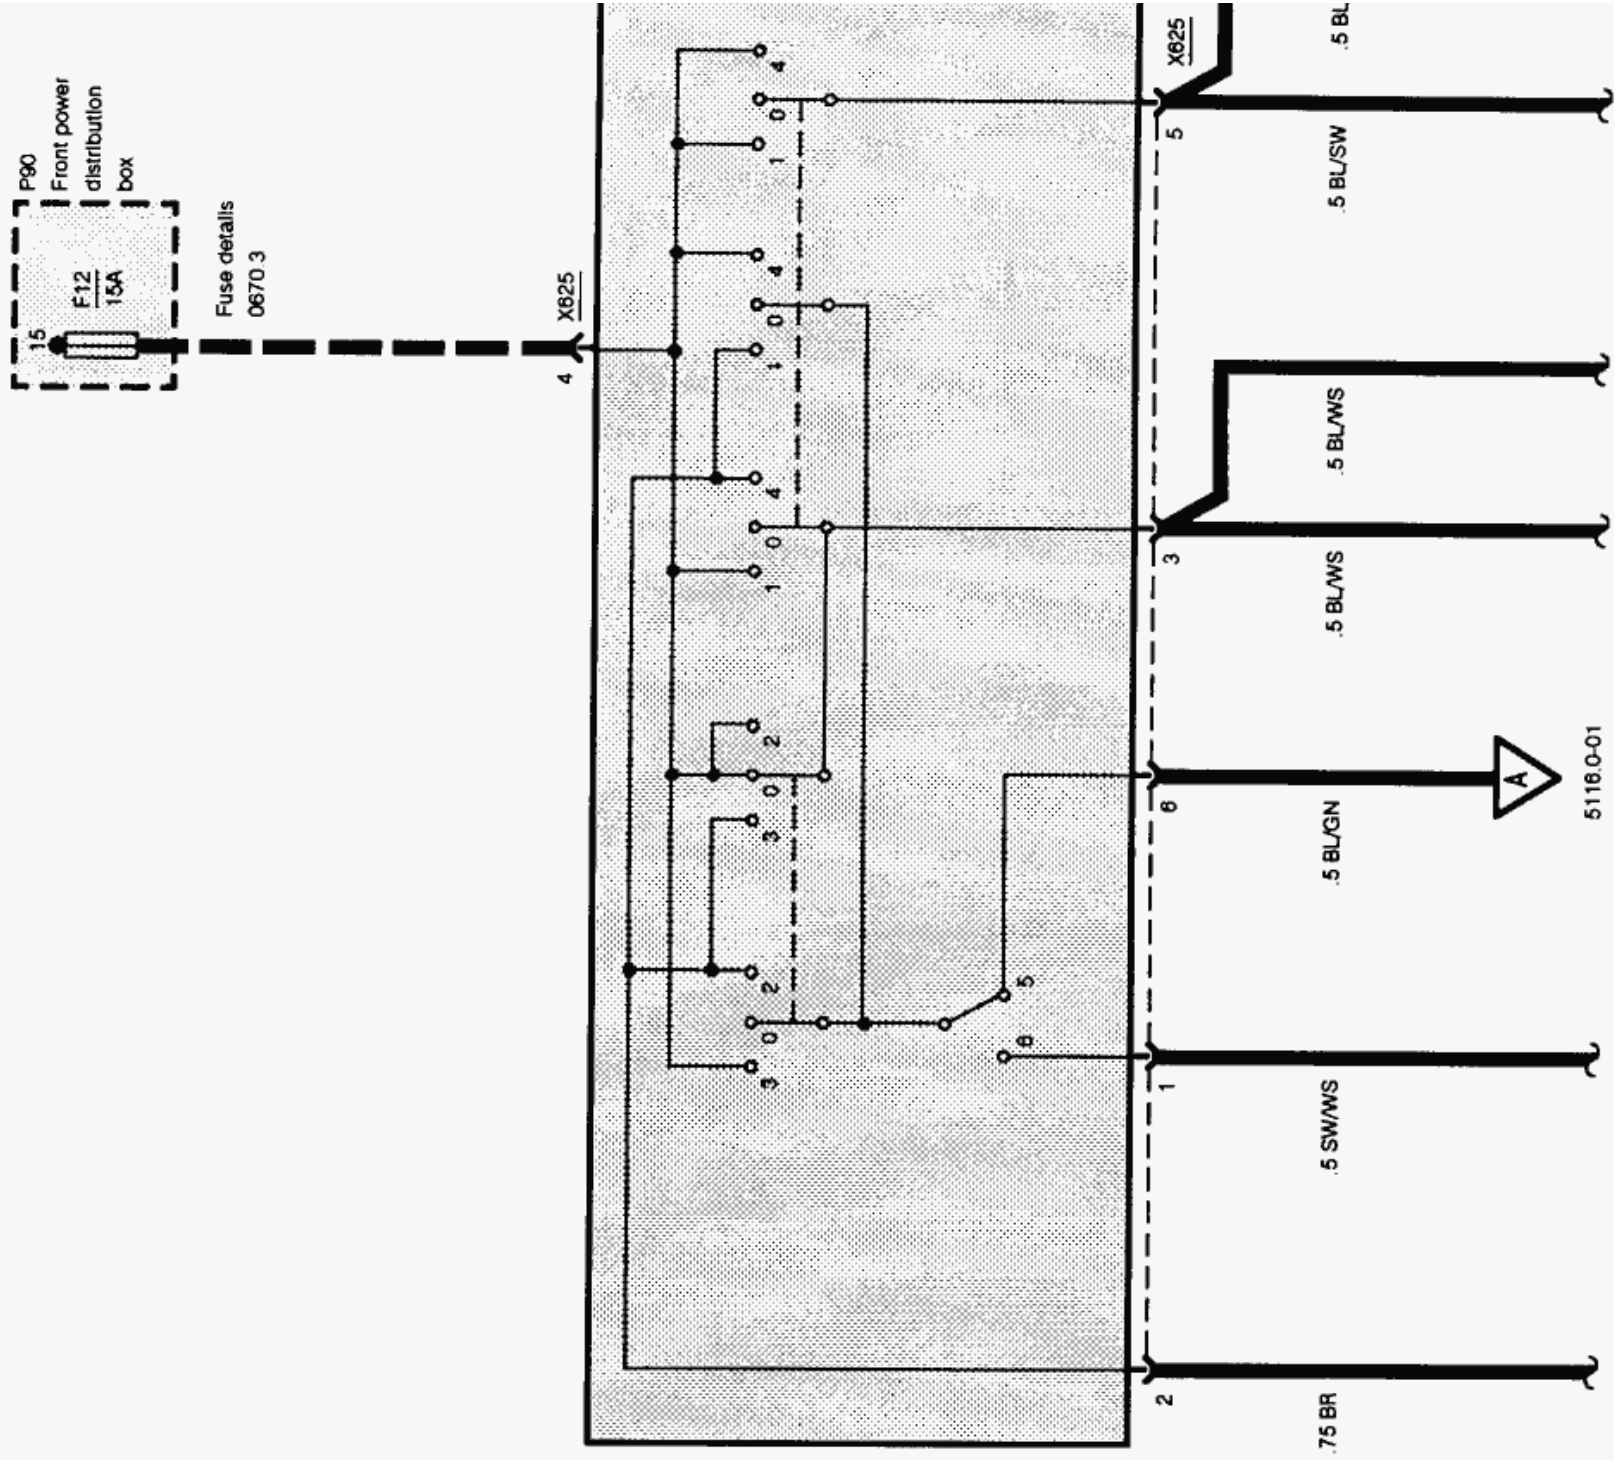


09/93

5116.0-01

1994

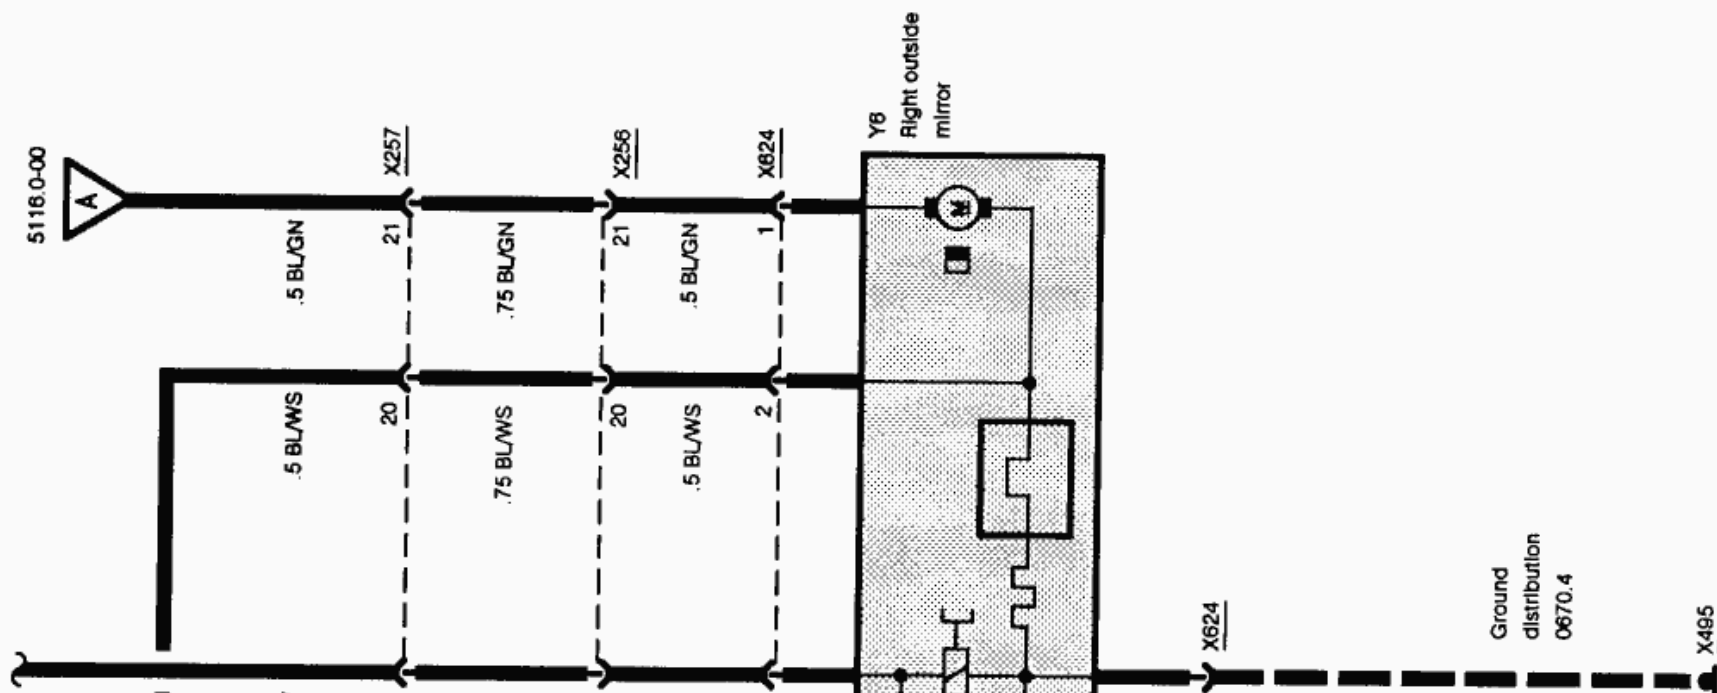

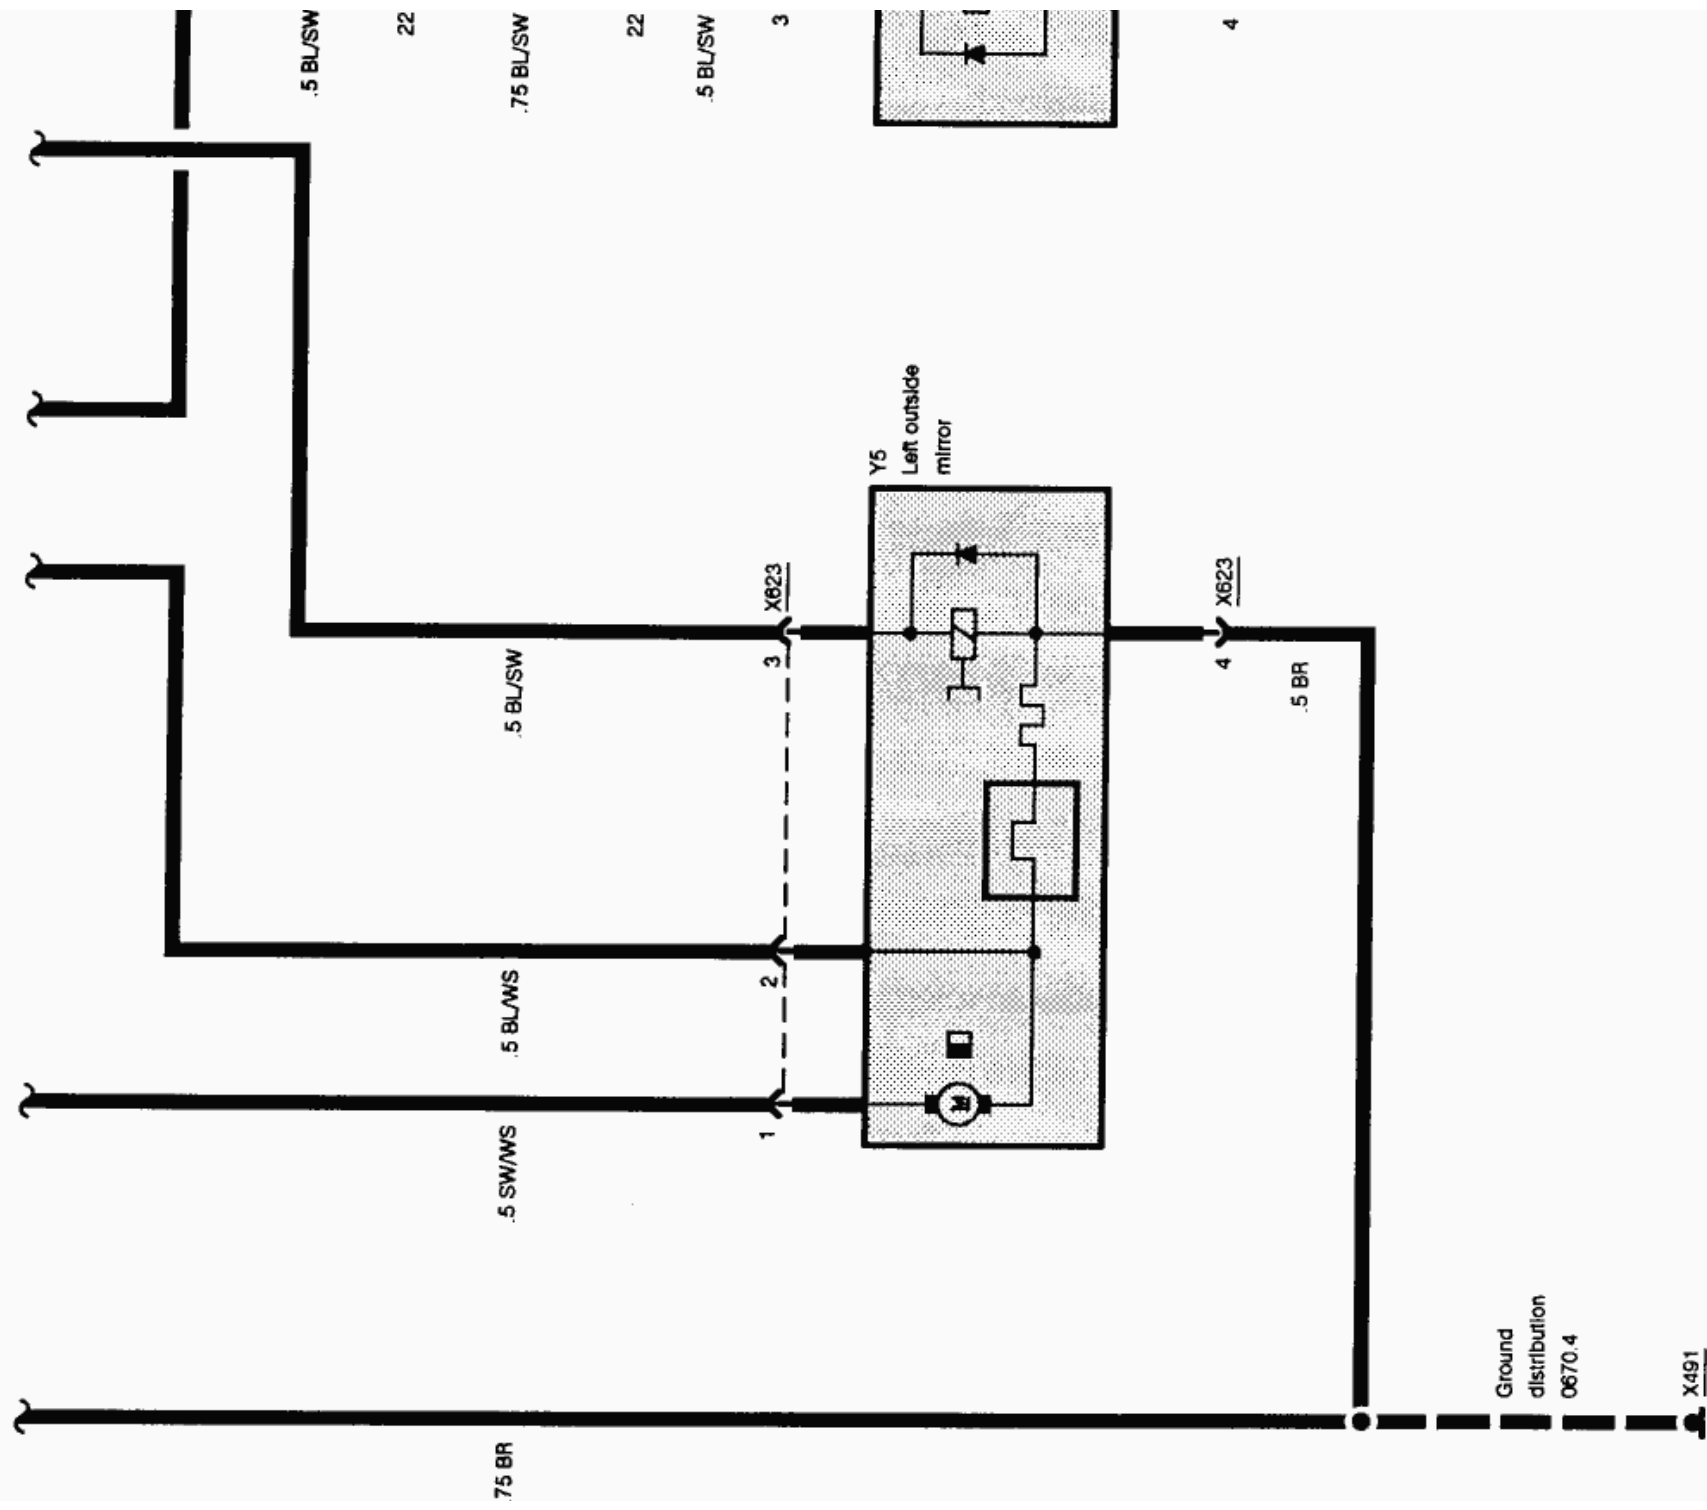

09/93


5116.0-02

1994




# Power mirrors

## Interior rear-view mirror

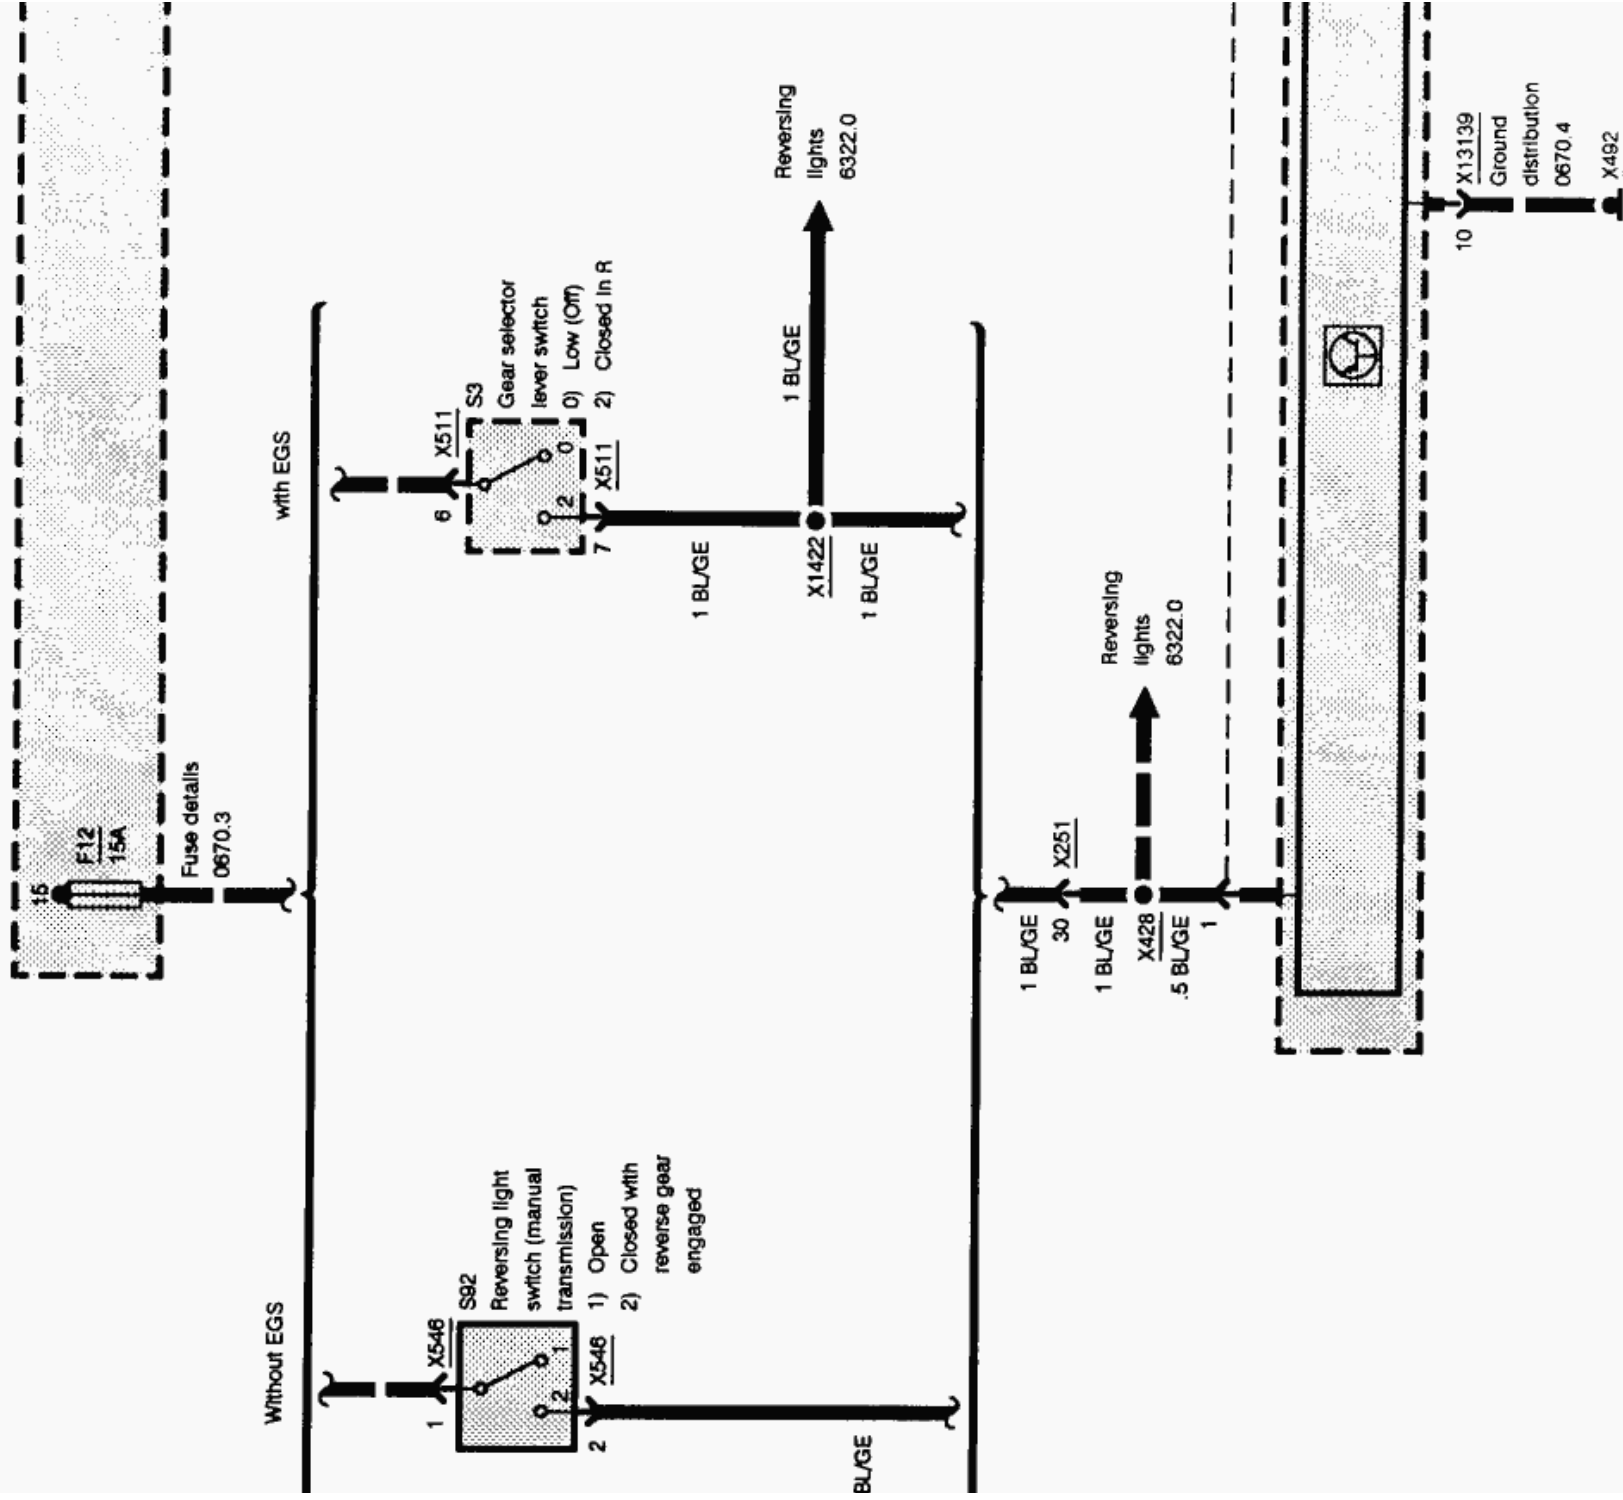




**BMW 5** **Power windows (ZKE/FH)**  
**Inputs**

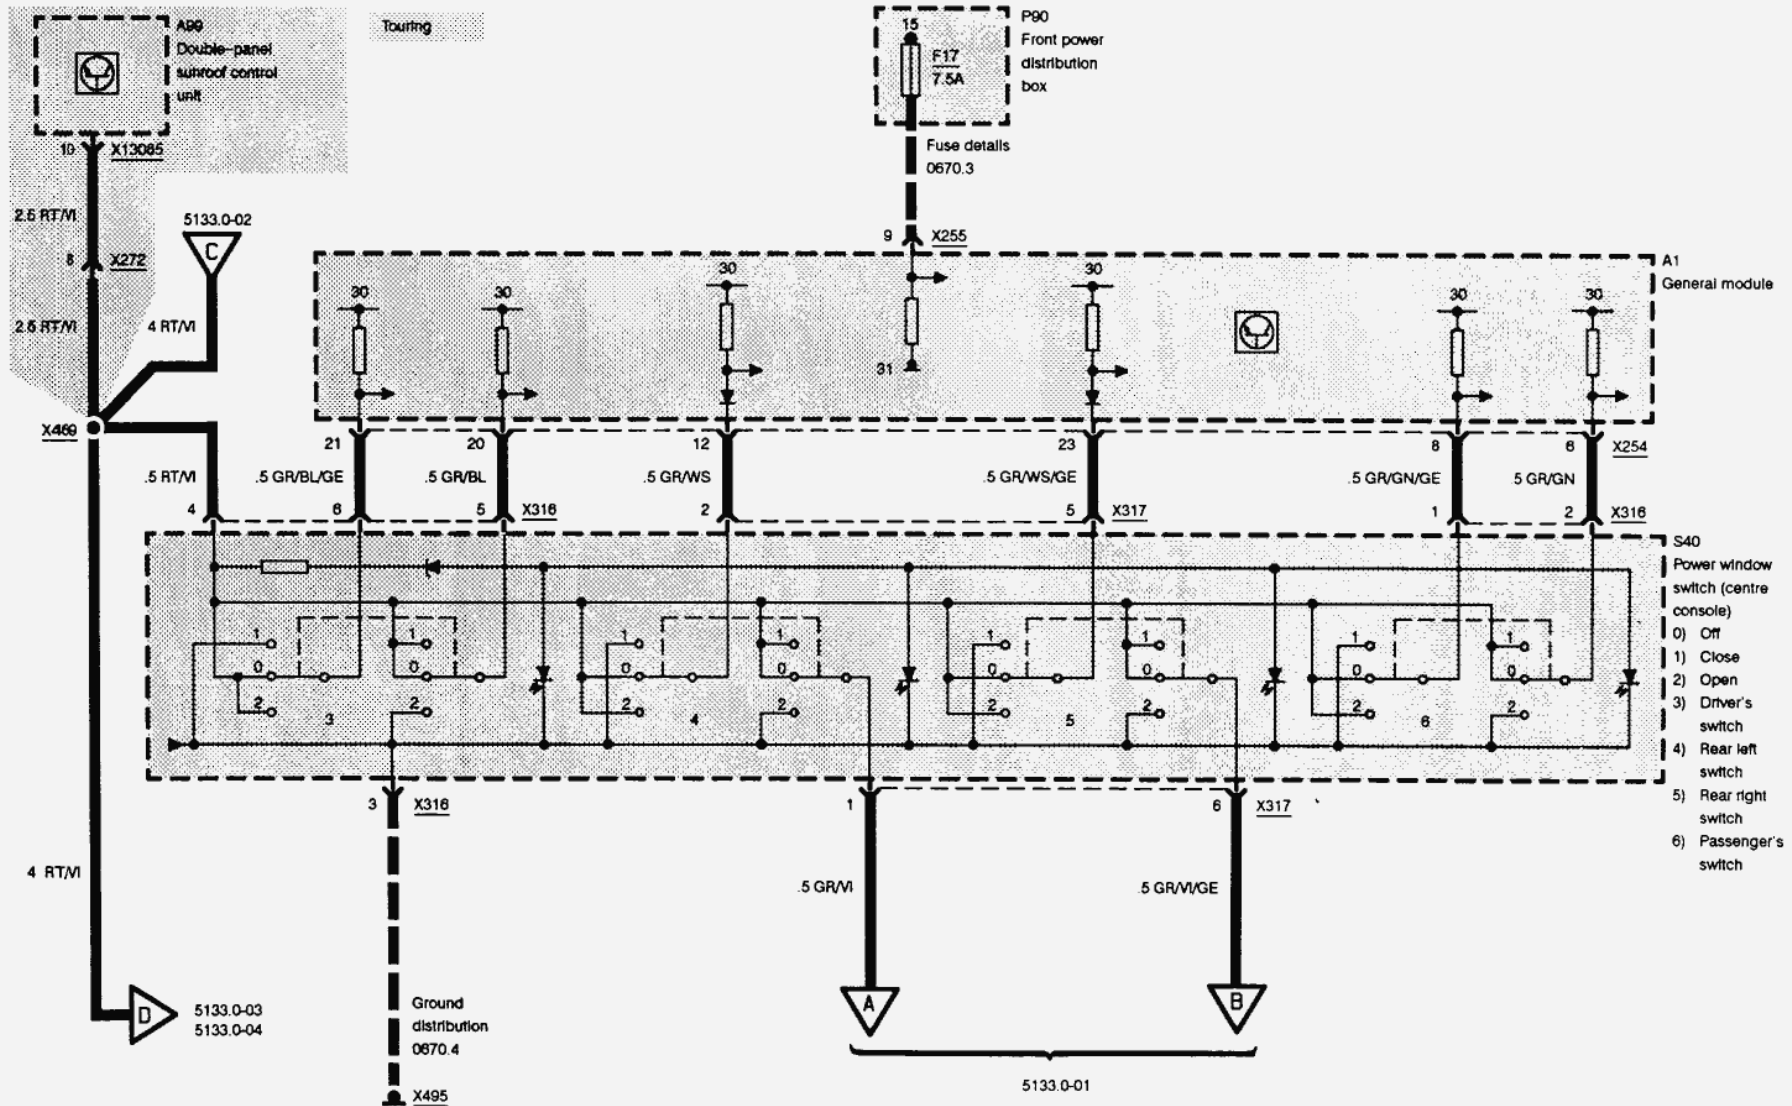




**BMW 5** **Power windows (ZKE/FH)**  
**Inputs**

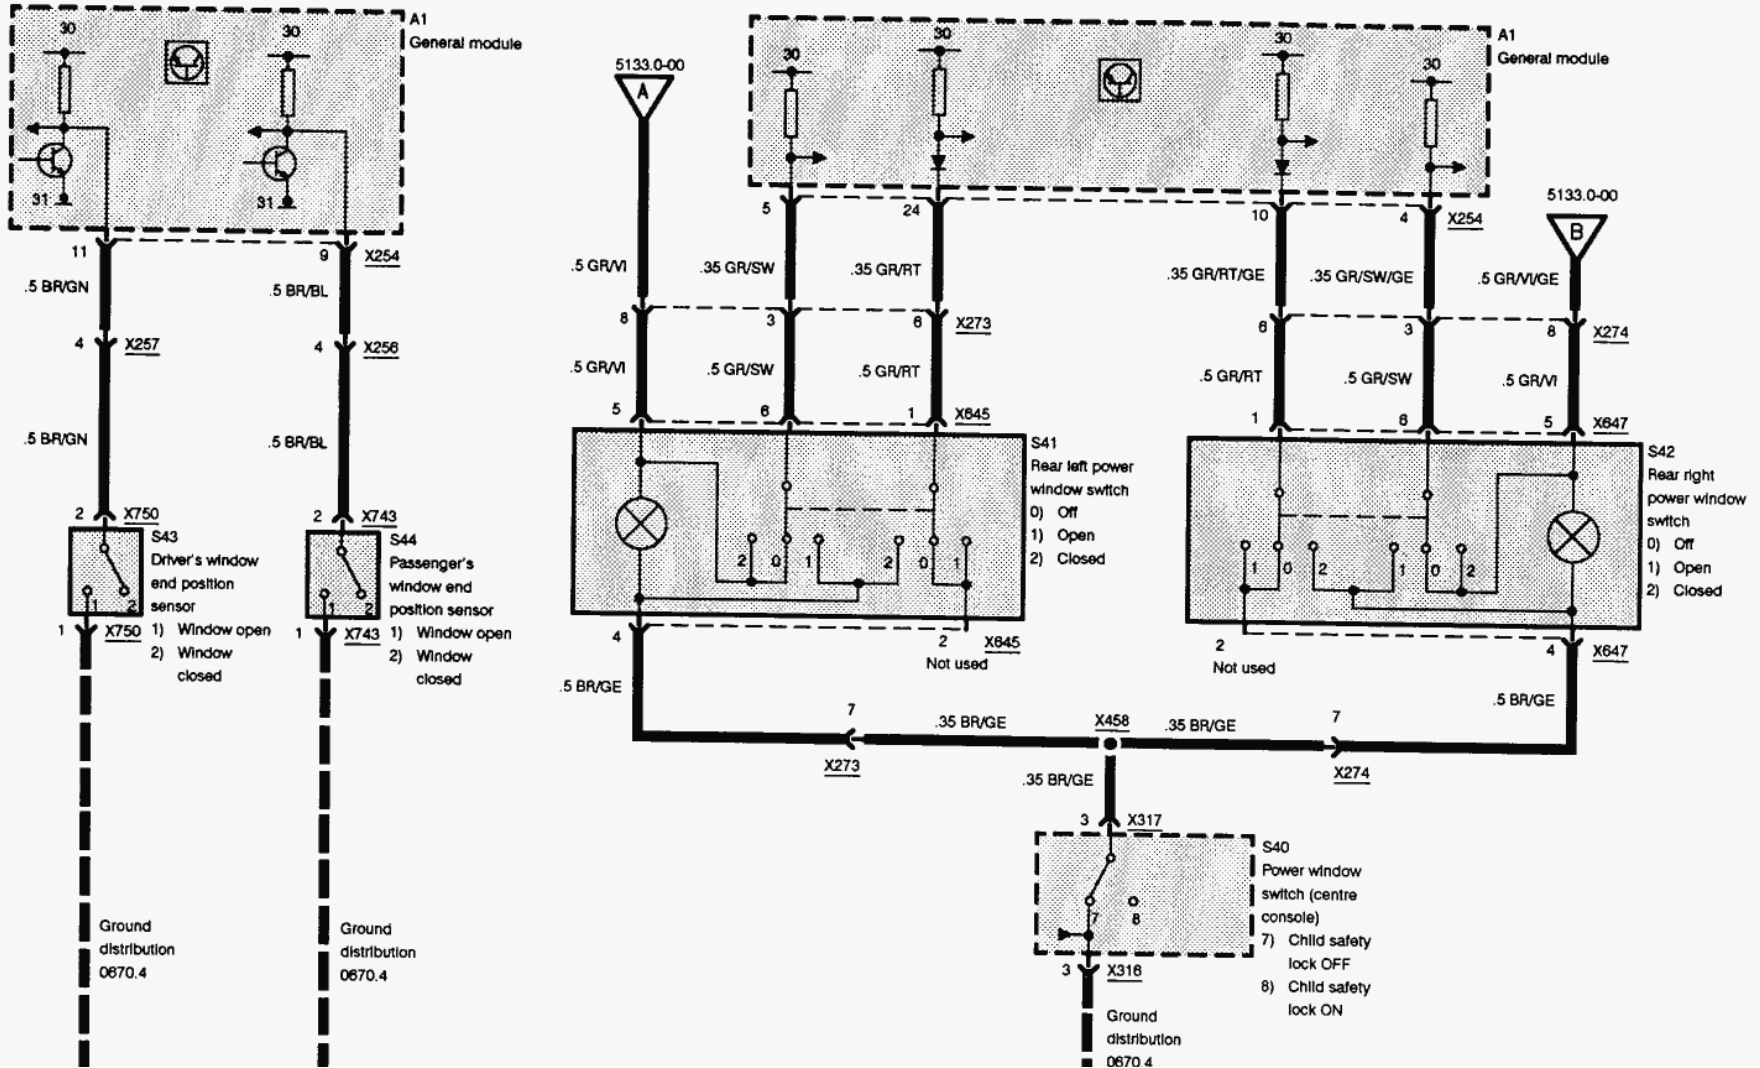




# BMW 5 Power windows (ZKE/FH) Inputs

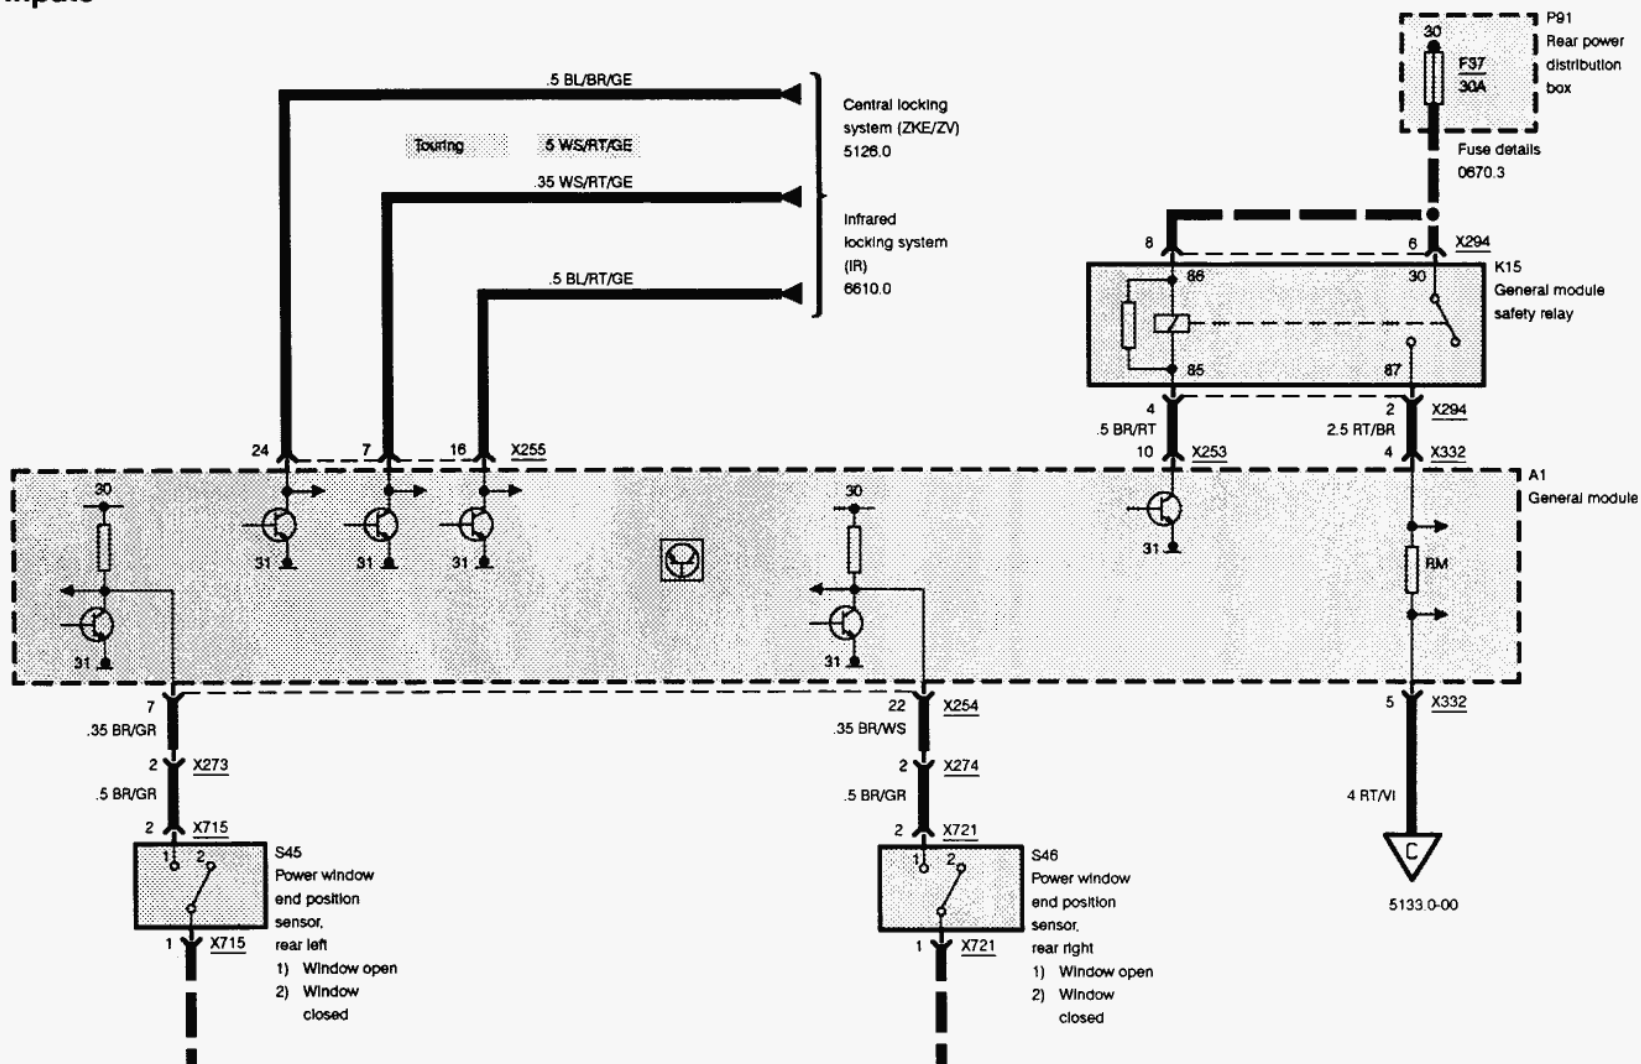


Ground distribution 0670.4  
 X492

Ground distribution 0670.4  
 X496

**BMW 5** Power windows (ZKE/FH)  
 Outputs on left-hand side

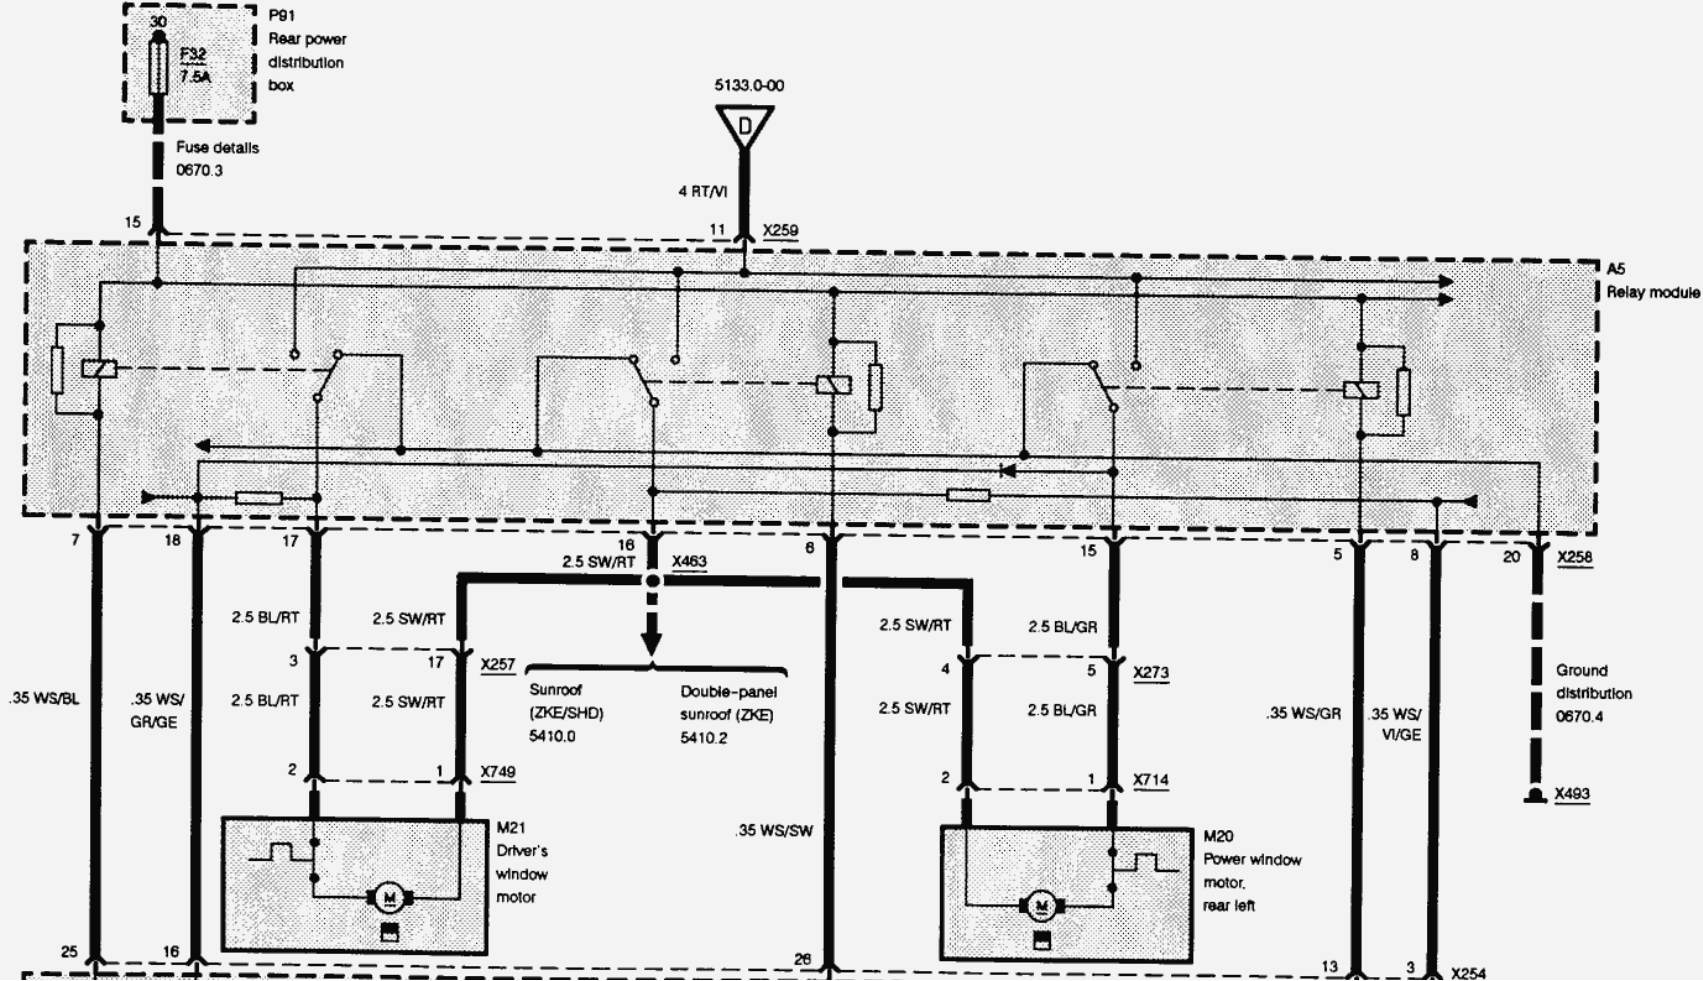

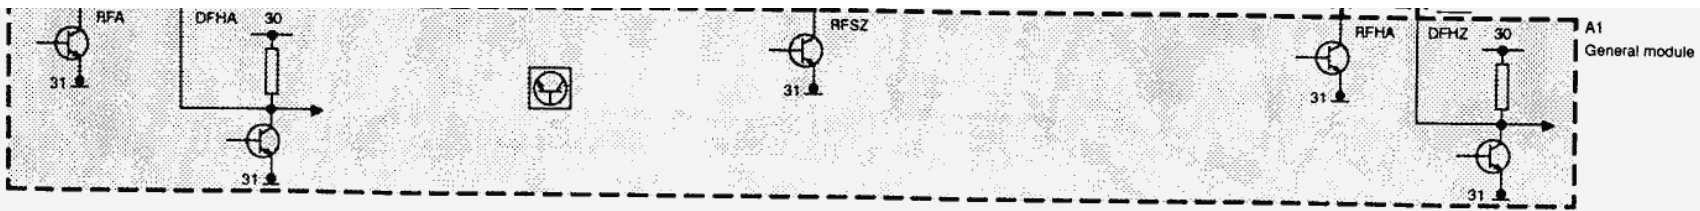



1994

**BMW 5** **Power windows (ZKE/FH)**  
Outputs on right-hand side

09/93

5133.0-04

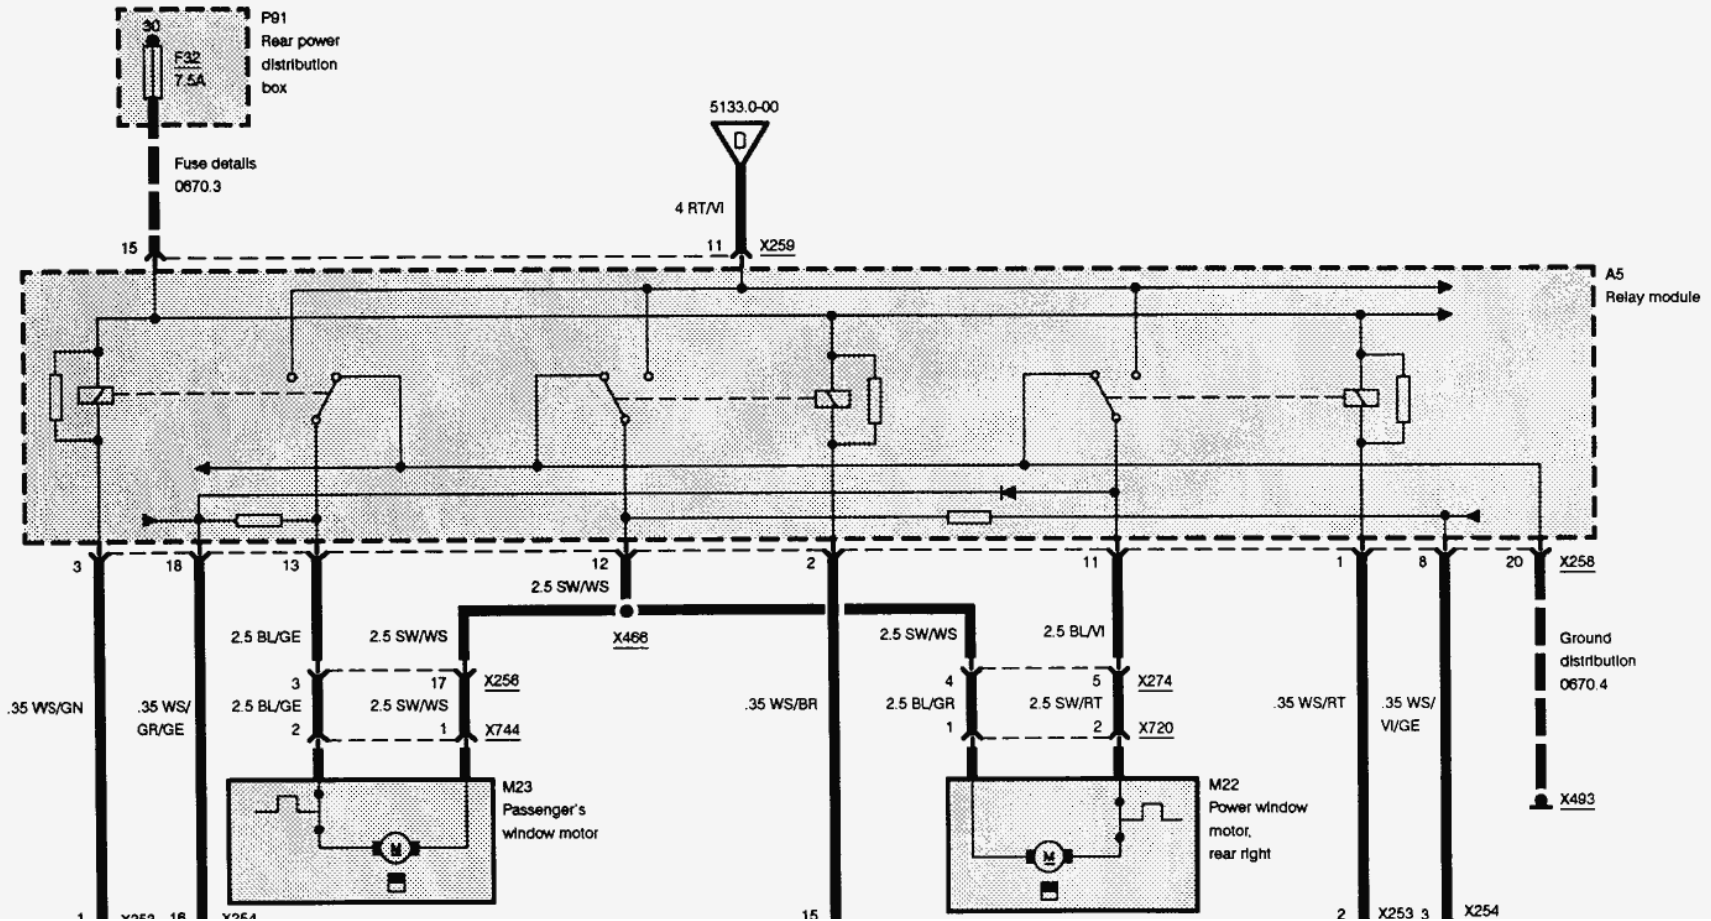

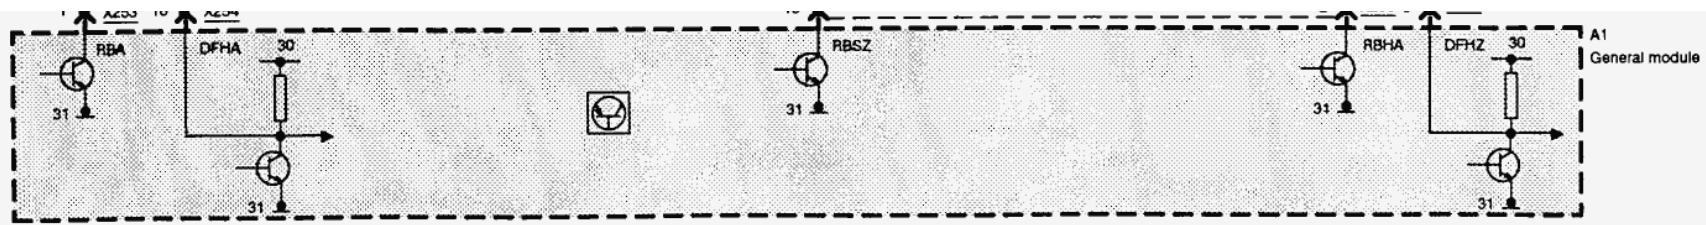

**BMWAG****Electrical troubleshooting manual**

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Electronic transmission control (EGS ASS 31 OZ diesel)

Scheme 2460.5

Pin Assignment X7000				
Pin	Type	Description/Function		Connection
1		not used		
2		not used		
3	A	Solenoid valve 5		Gearshift unit
4	A	Solenoid valve, converter clutch		Gearshift unit
5	A	Pressure regulator (+)		Gearshift unit
6		not used		
7		not used		
8	E	Position switch L2		Selector lever switch
9	E	Position switch L4		Selector lever switch
10		not used		
11		not used		
12	E/A	L5 S program		Program switch
13	E/A	L7 * program		Program switch
14	E	Speed sensor n-ab (-)		Gearshift unit
15	A	Shield speed sensor n-ab/n-turbine		Speed sensor
16	E	Speed sensor n-turbine (+) web speed		Gearshift unit
17		not used		
18	E	Kick-down		Kick-down switch
19		not used		
20		not used		
21	M	Ground, oil-temperature sensor		Gearshift unit
22	E	Oil temperature sensor NIC		Gearshift unit
23		not used		
24		not used		
25	A	Fault indicator		Instrument cluster
26	E	Terminal 30		B+ interpolation point
27		not used		
28	M	Electronics ground		Ground connection
29		not used		
30	A	Solenoid valve 1		Gearshift unit
31	A	Solenoid valve 4		Gearshift unit
32	A	Solenoid valve 3		Gearshift unit
33	A	Solenoid valve 2		Gearshift unit
34	M	Power ground		Ground connection
35	E	Throttle-valve signal interface		DME control unit
36	E	Position switch L1		Selector lever switch
37	E	Position switch L3		Selector lever switch
38		not used		
39		not used		
40	A	Engine intervention		DME control unit
41	E	Fuel consumption indicator (ti signal)		DME control unit
42	E	Speed sensor n-ab (+)		
43	E	Engine speed n-mot (TD* signal)		DME control unit
44	E	Speed sensor n-turbine (-)		Gearshift unit
45	E	L6 E program		Program switch, instrument cluster
46		not used		
47		not used		
48		not used		
49		not used		
50		not used		
51		not used		
52		not used		
53	A	Positive supply, solenoid valves		Gearshift unit
54	E	Voltage supply		DME relay
55		not used		
56		not used		
57		not used		
58		not used		
59		not used		


60		not used	
61		not used	
62		not used	
63		not used	
64		not used	
65		not used	
66		not used	
67		not used	
68		not used	
69		not used	
70		not used	
71		not used	
72		not used	
73		not used	
74		not used	
75		not used	
76		not used	
77		not used	
78		not used	
79		not used	
80		not used	
81		not used	
82		not used	
83		not used	
84		not used	
85		not used	
86		not used	
87	E	RxD diagnosis line	Diagnostic connector
88	E/A	TxD diagnosis line	Diagnostic connector




## Electronic transmission control (EGS A5S 310Z diesel)


09/93

2460.5-00

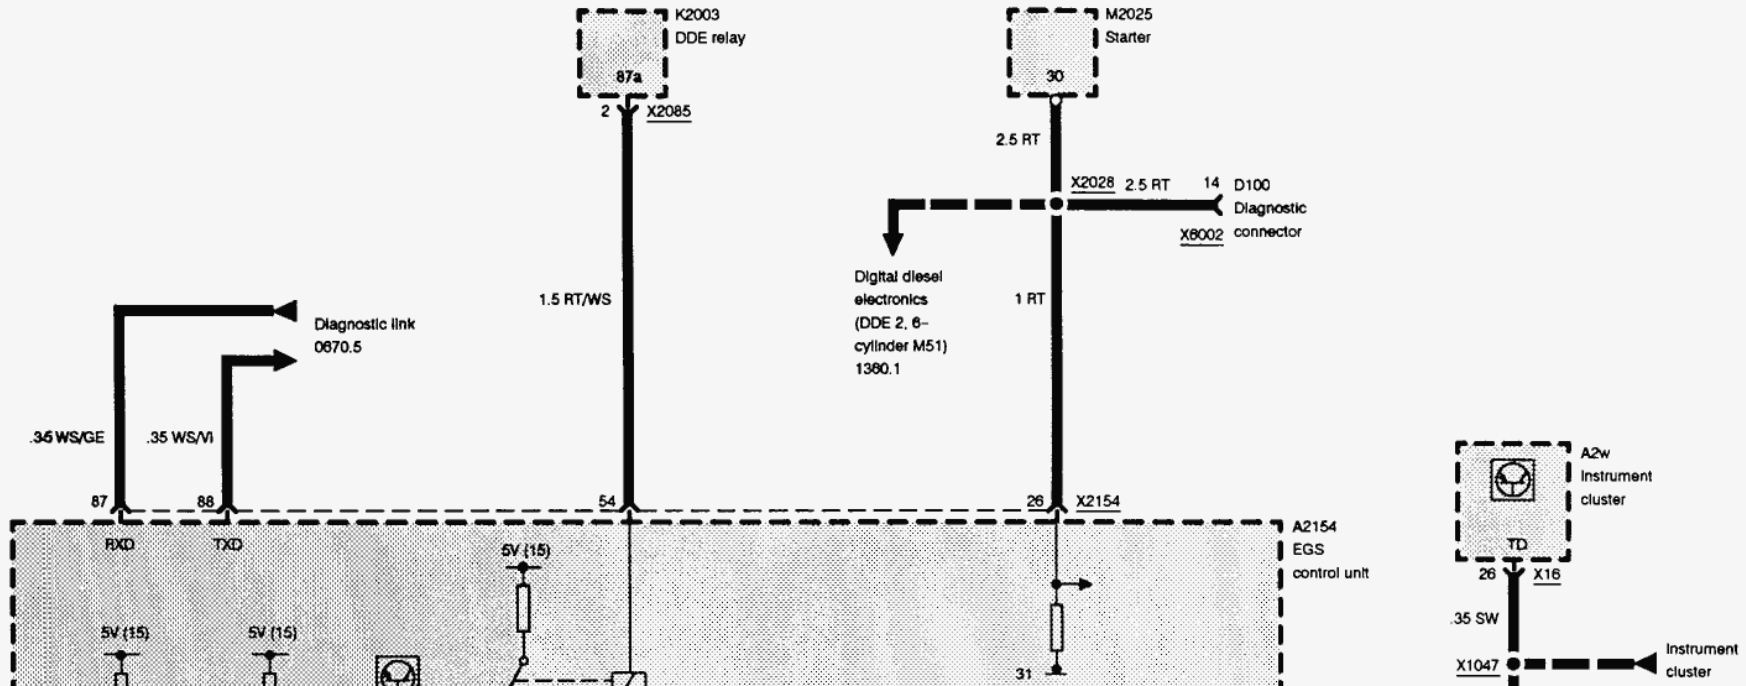

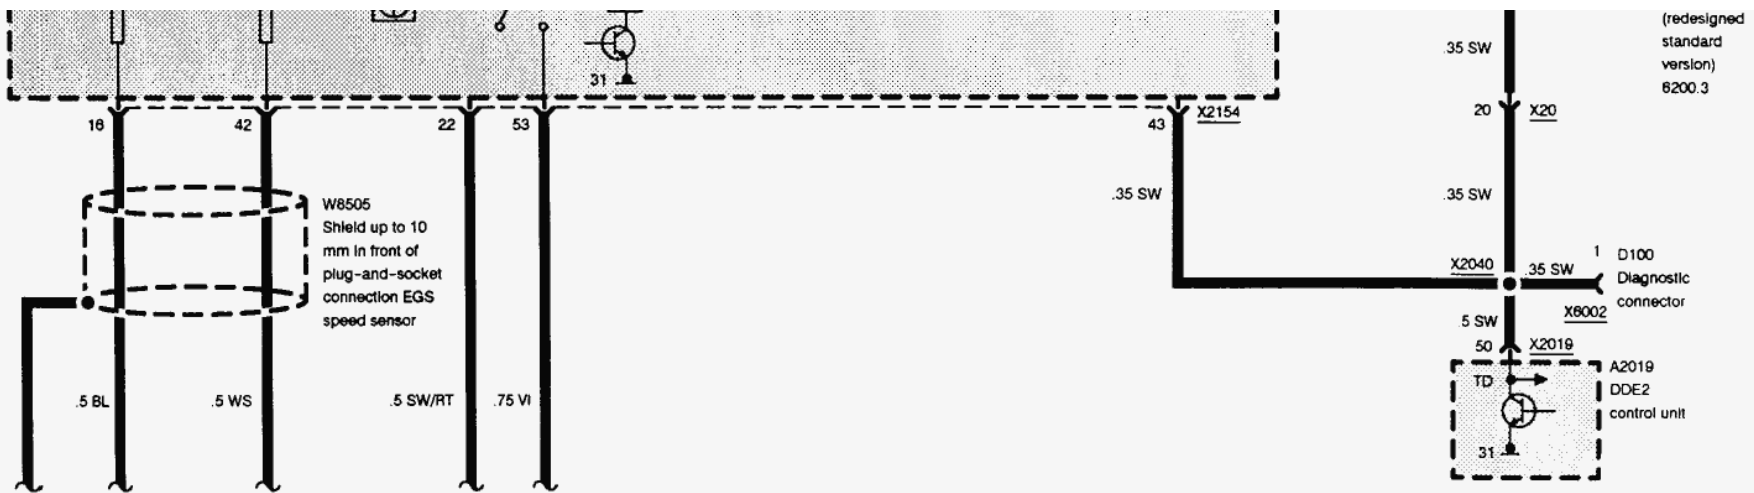

1994

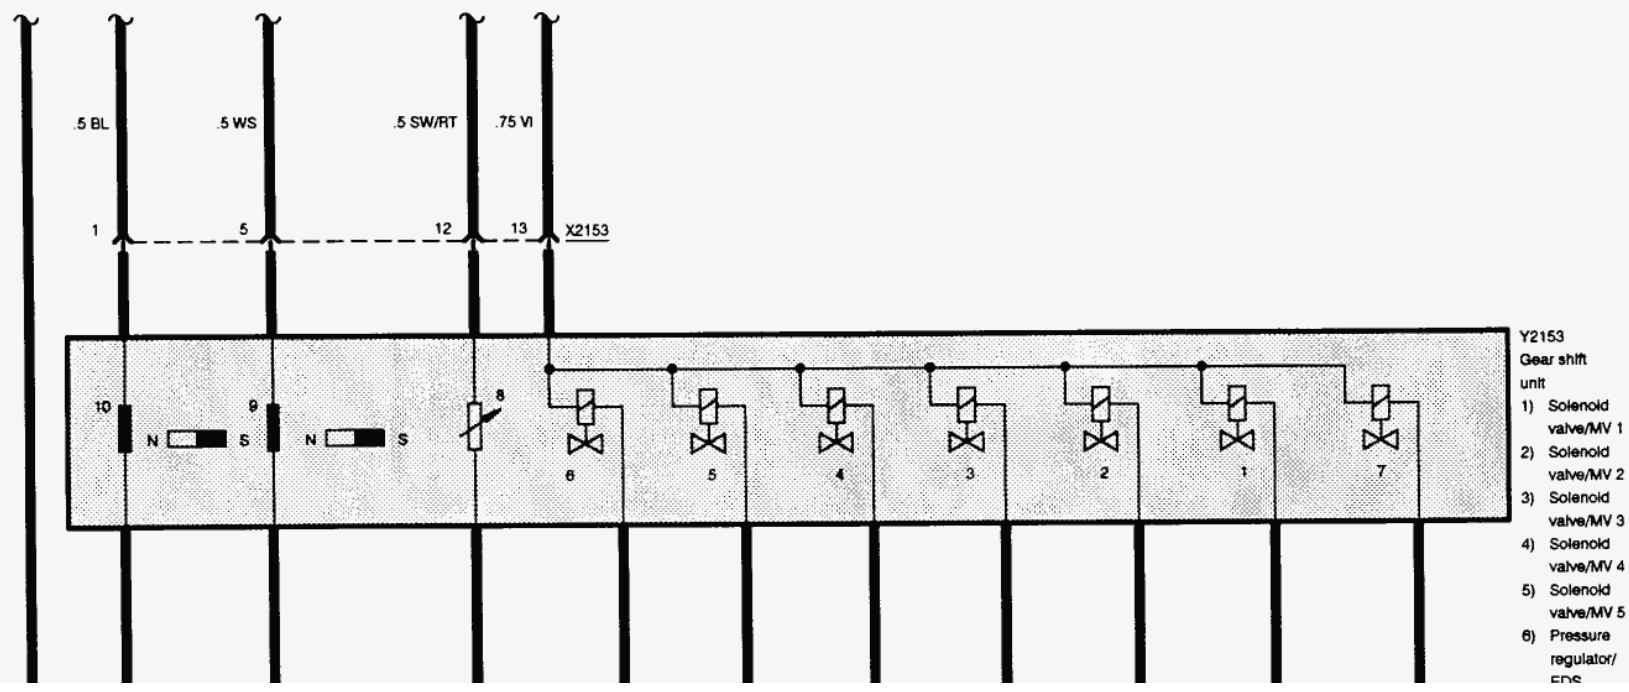


- 1) Solenoid valve/MV 1
- 2) Solenoid valve/MV 2
- 3) Solenoid valve/MV 3
- 4) Solenoid valve/MV 4
- 5) Solenoid valve/MV 5
- 6) Pressure regulator/ENS

09/93


2460.5-



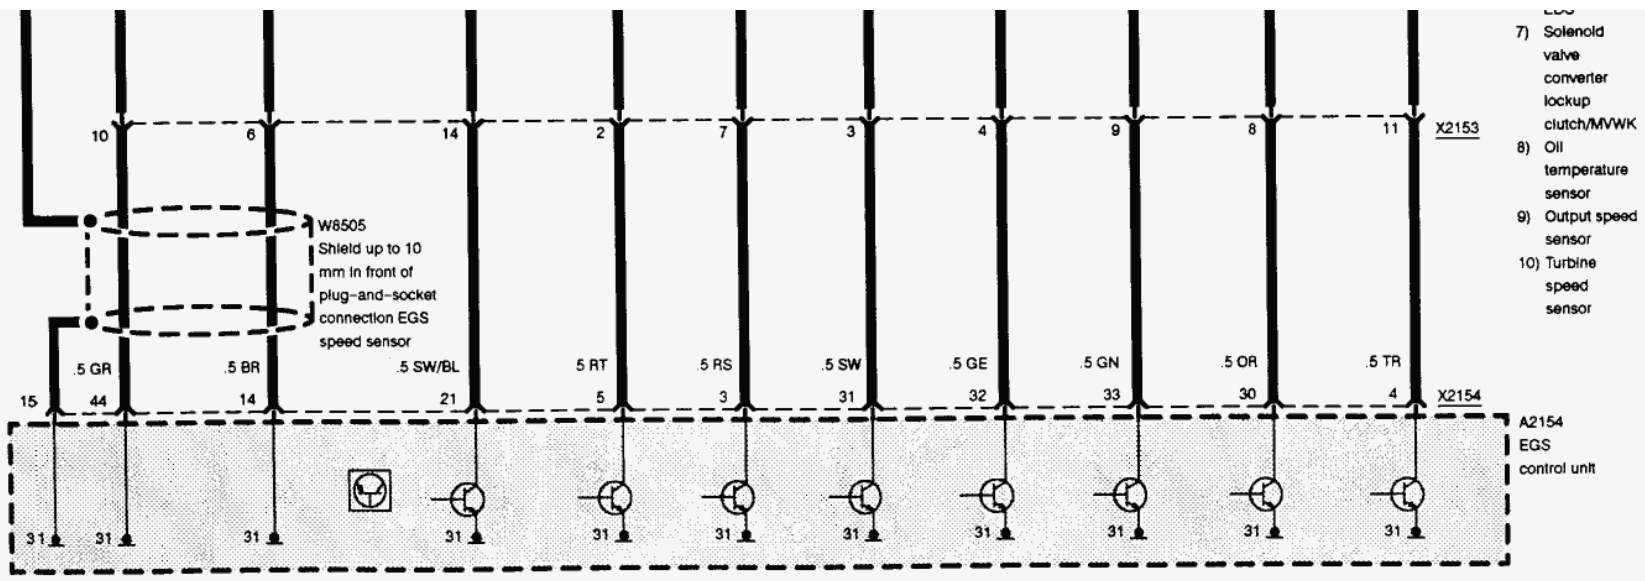


.01  
1994

**BMW 5 Electronic transmission control (EGS A5S 310Z diesel)**

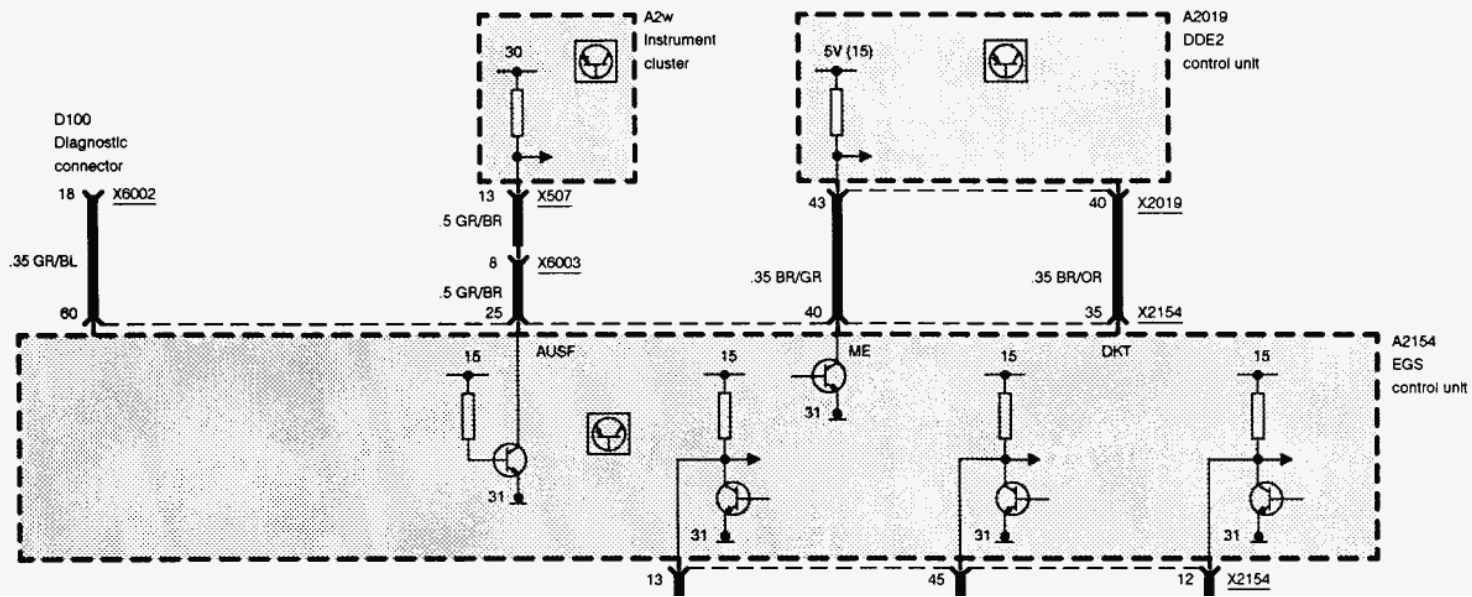


09/93  
2460.5-

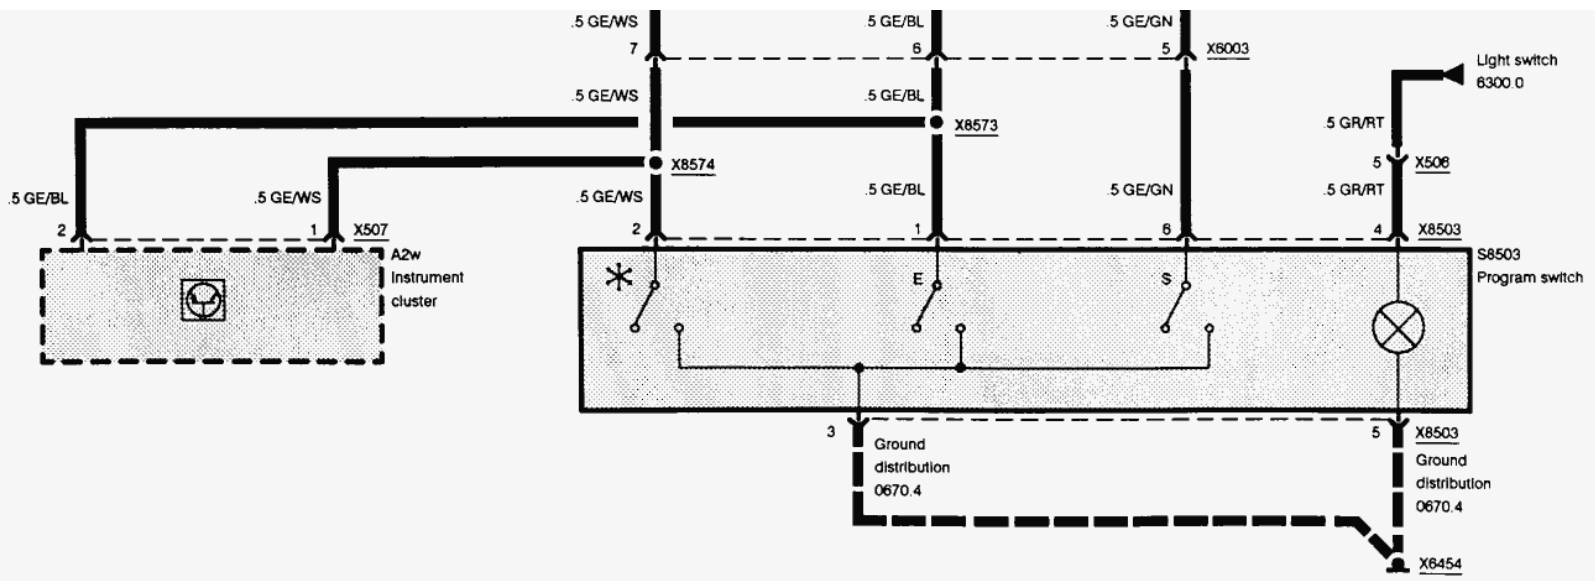



02  
1994



**Electronic transmission control (EGS A5S 310Z diesel)**

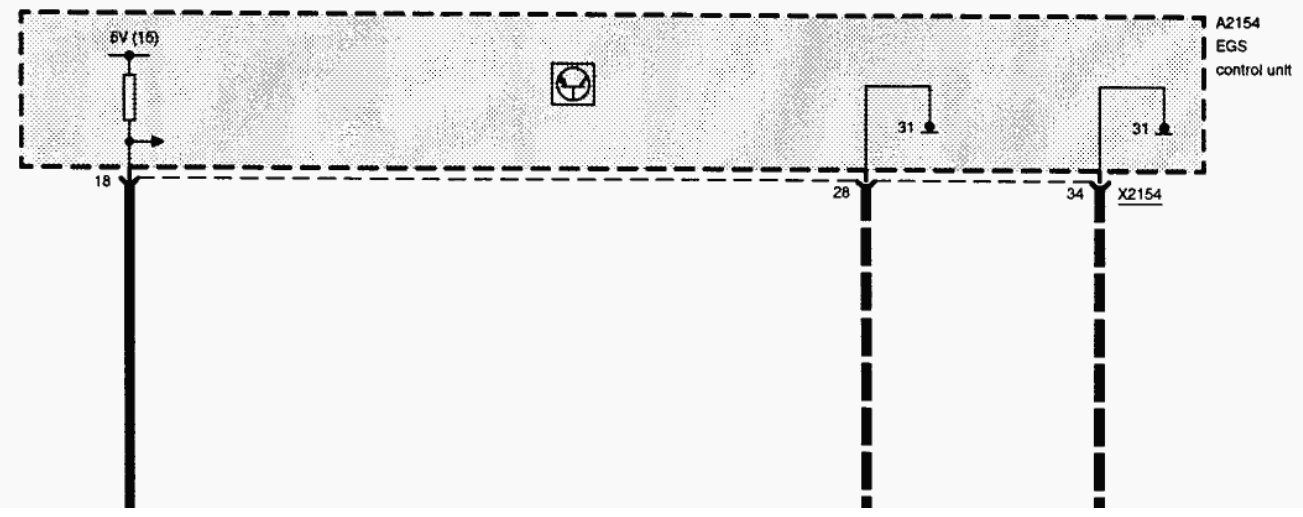


09/93  
2

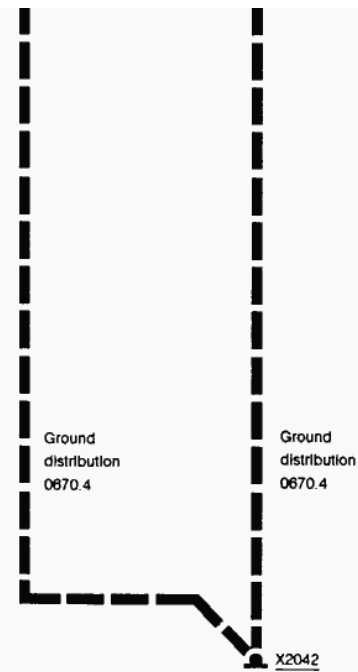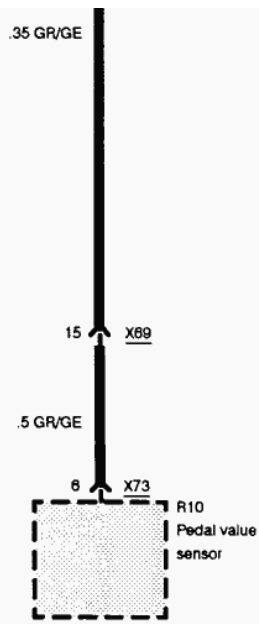


460.5-03  
1994

**BMW 5** Electronic transmission control (EGS A5S 310Z diesel)

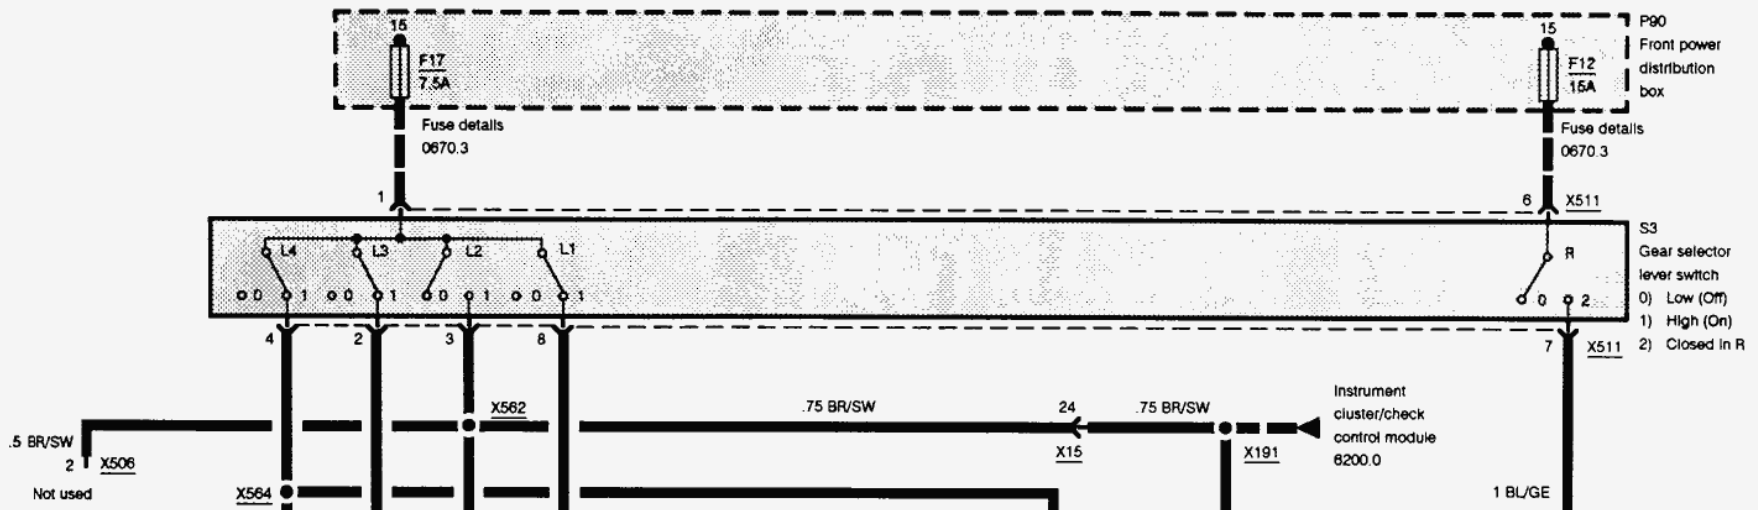

09/93  
21

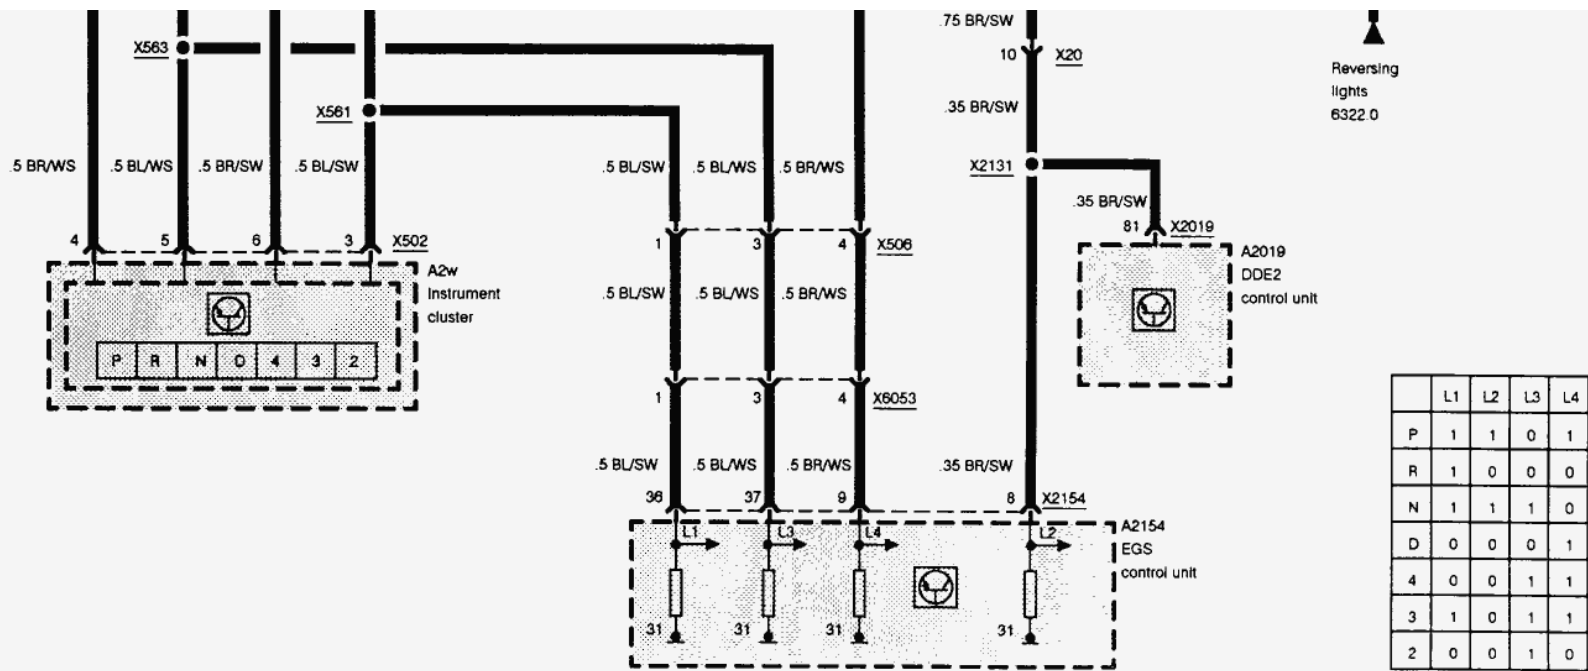


160.5-04



1994



**Electronic transmission control (EGS A5S 310Z diesel)**

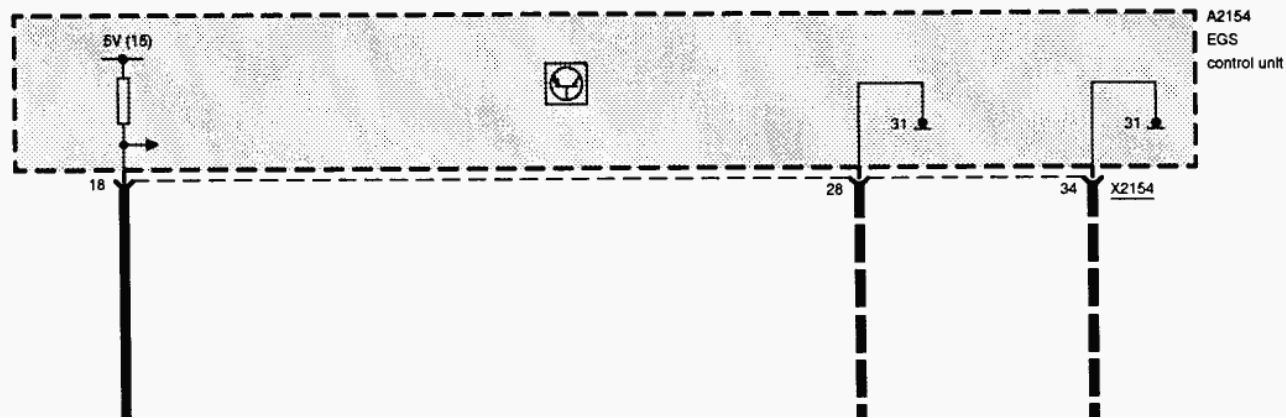

09/93

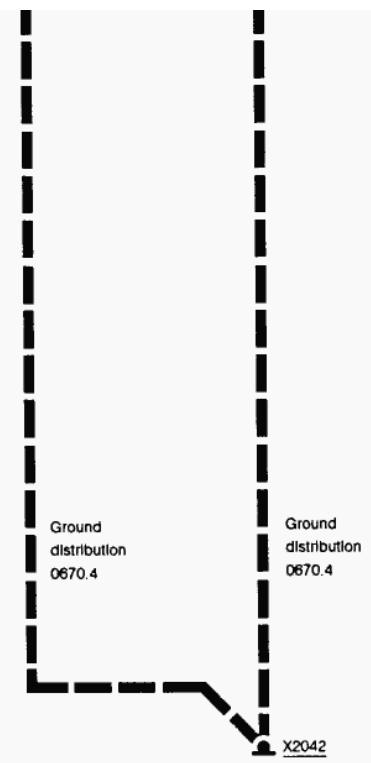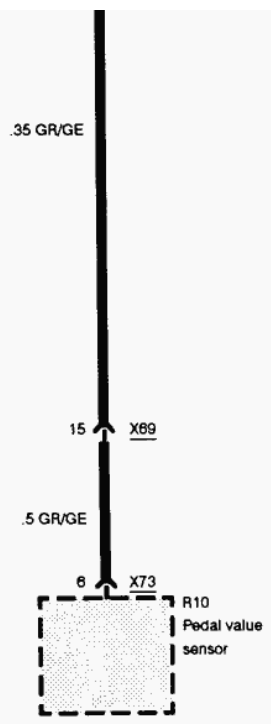


— 2460.5-03 — 1994

Pin	Type	Description/Function	Connection
2	E	not used	
3		E program	Program button
4	A	not used	
5		Engine intervention	DME control unit
6		not used	
7		not used	
8	E	Position switch L3	Selector lever
9	E	Fuel consumption indicator (I) signal	DME control unit
10	A	E program indicator	Instrument cluster
11	E	Engine speed - r/min (TR signal)	DME control unit
12	A	M program indicator	Instrument cluster
13	E/A	TxD diagnosis line	Diagnostic connector
14	E	n-ab (-)	EGS speed sensor
15		not used	
16		not used	
17	M	Analog ground (temp. sensor)	Gearshift unit
18	A	Shield speed sensor	Speed sensor
19	M	Power ground	Ground connection
20	E	n-ab (+)	EGS speed sensor
21	E	A/C compressor	Pressure switch
22	E	Oil temperature sensor (+)	Gearshift unit
23	E	Position switch L1	Selector lever
24		not used	
25	E	RxD diagnosis line	Diagnostic connector
26	E	Position switch L2	Selector lever
27		not used	
28	E	Voltage supply terminal 30	Battery
29	A	Fault indicator	Instrument cluster
30	E	Kick-down	Kick-down switch
31	E	M program	Program button
32		not used	
33	E	Position switch L4	Selector lever
34	E	S program	Program button
35		not used	
36	M	Electronics ground	Ground connection
37	E	Voltage supply	DME relay
38	A	Solenoid valve, converter clutch	Gearshift unit
39		not used	
40	A	Pressure regulator (+)	Gearshift unit
41	A	Pressure regulator (-)	Gearshift unit
42		not used	
43	A	Solenoid valve 2	Gearshift unit
44		not used	
45	A	Solenoid valve, band	Gearshift unit
46		not used	
47		not used	
48	A	Solenoid valve 1	Gearshift unit
49		not used	
50		not used	
51		not used	
52		not used	
53		not used	
54	M	Ground, solenoid valves	Gearshift unit
55	E	Throttle-valve signal	DME control unit


E = Input, A = Output, M = Ground

# BMW 5 Electronic transmission control (EGS A4S 310R)

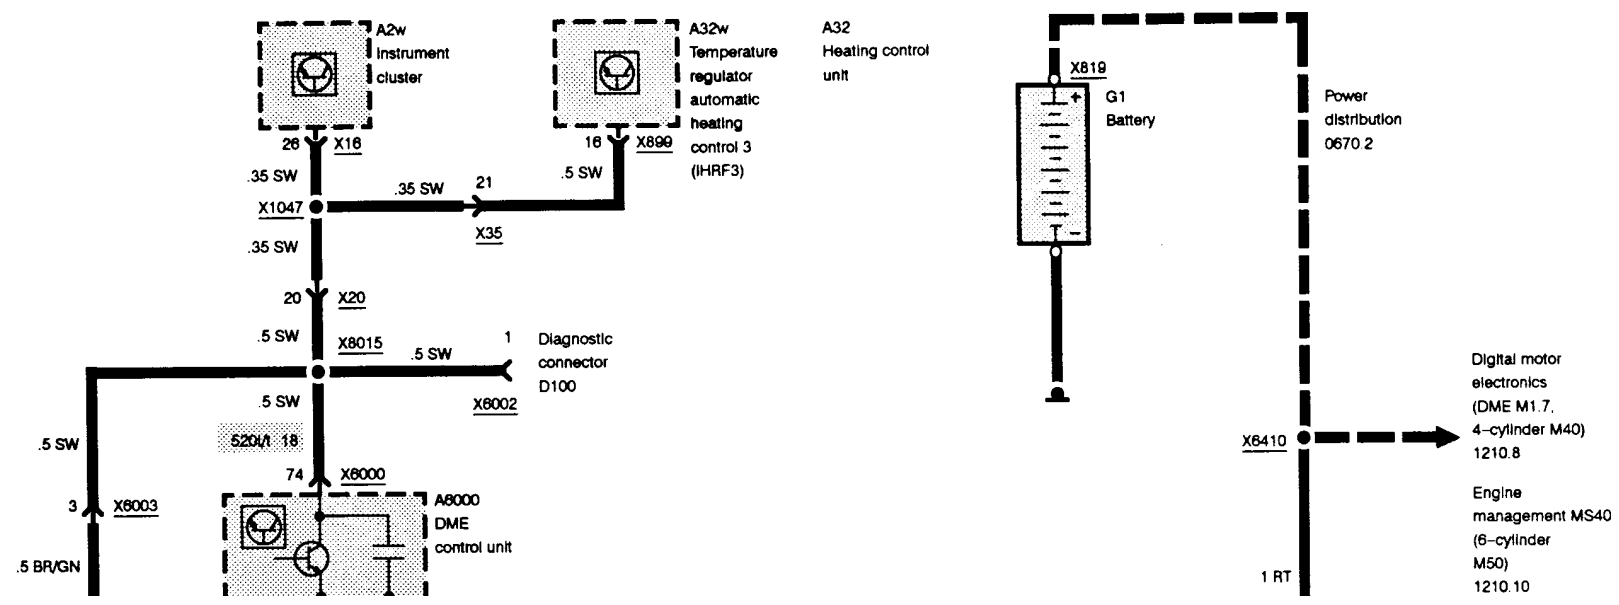


09/93


2460.2

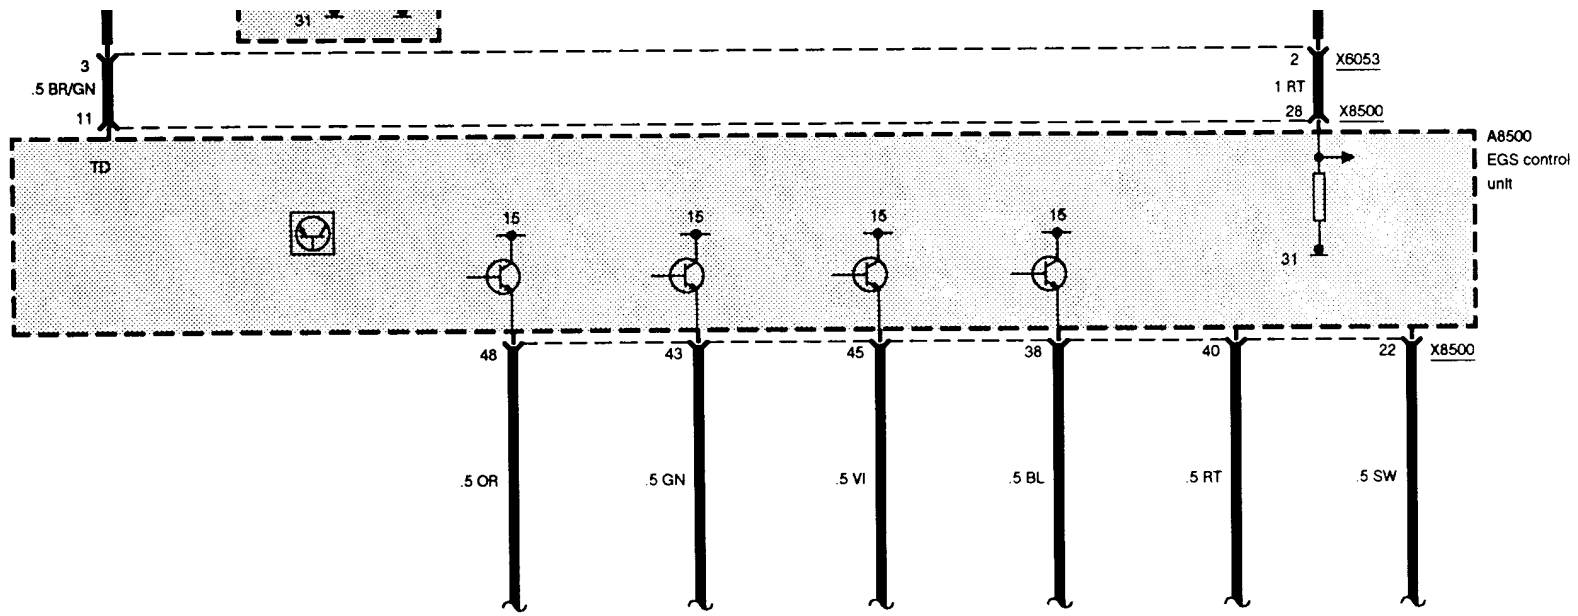


2-00  
1994

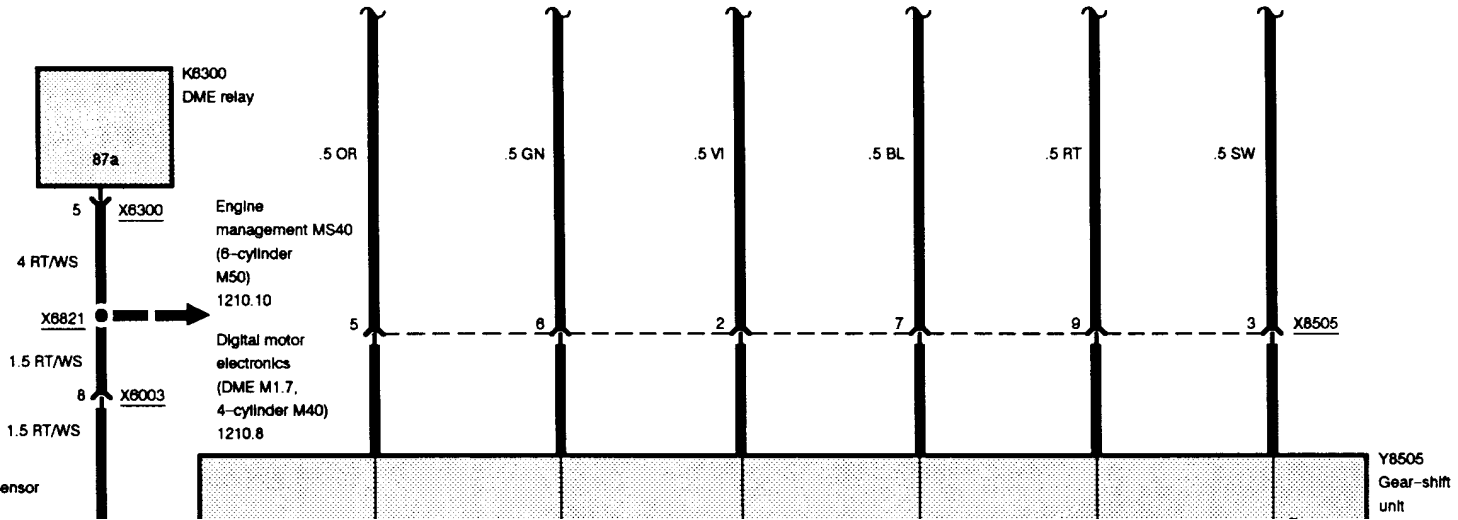



09/93

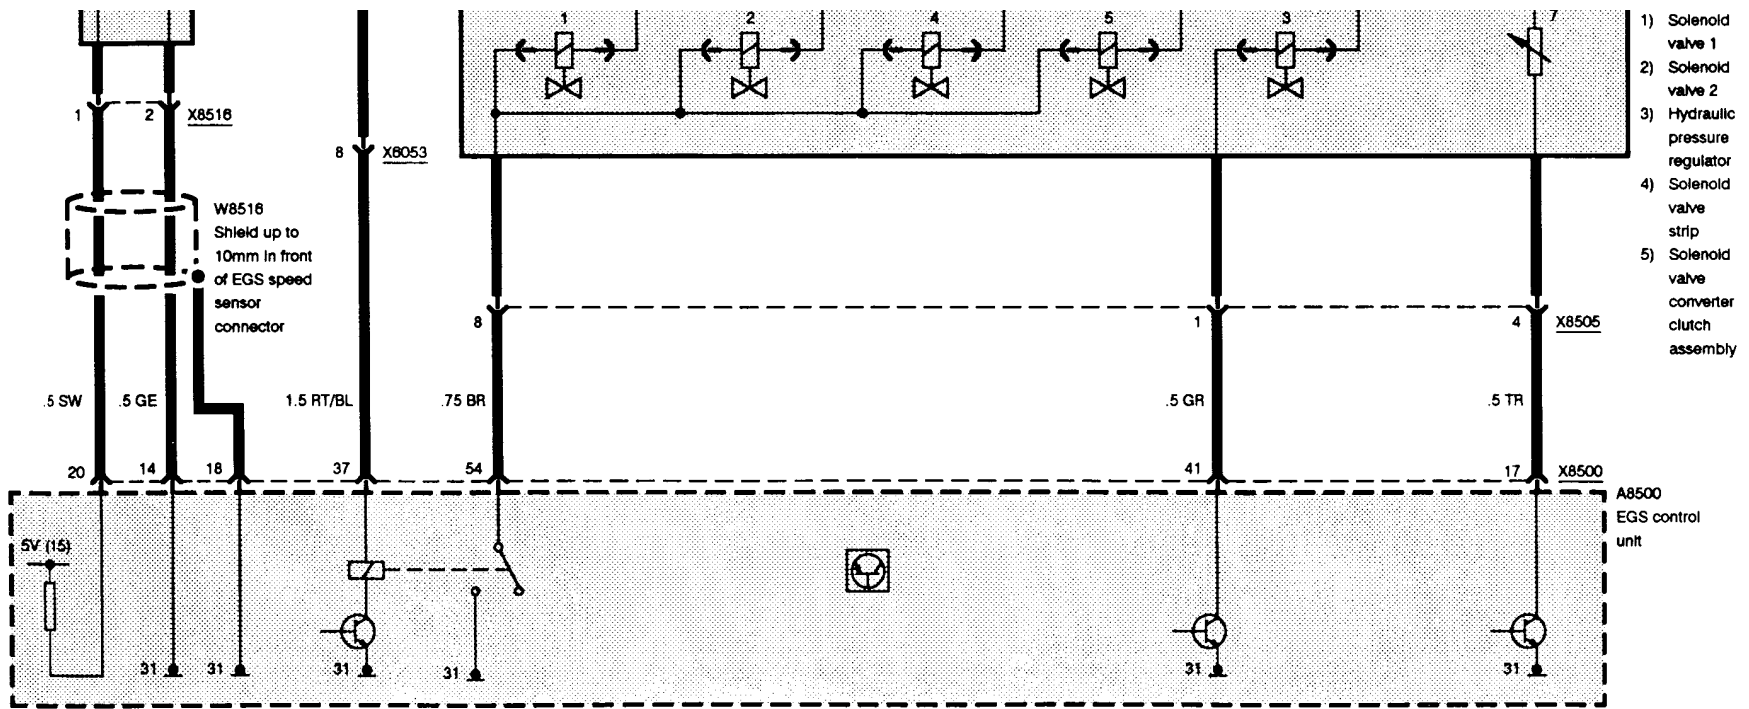


**BMW 5** Electronic transmission control (EGS A4S 310R)

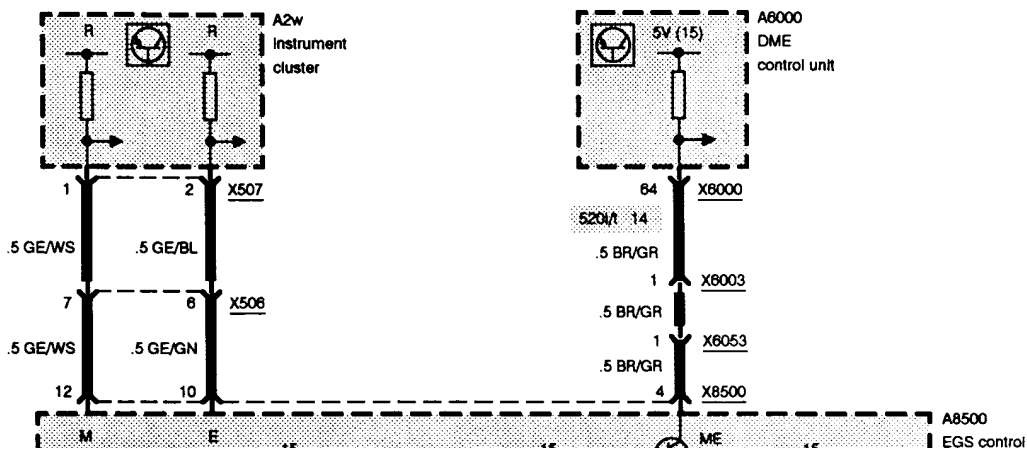




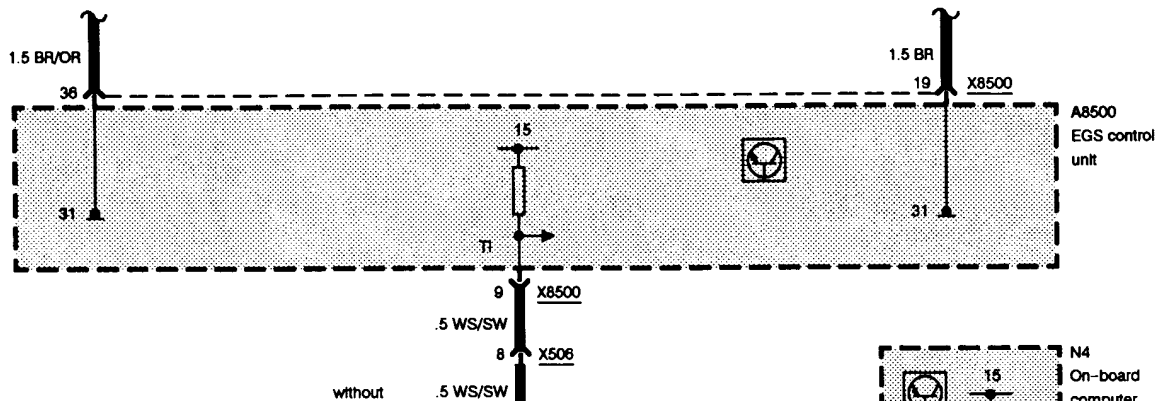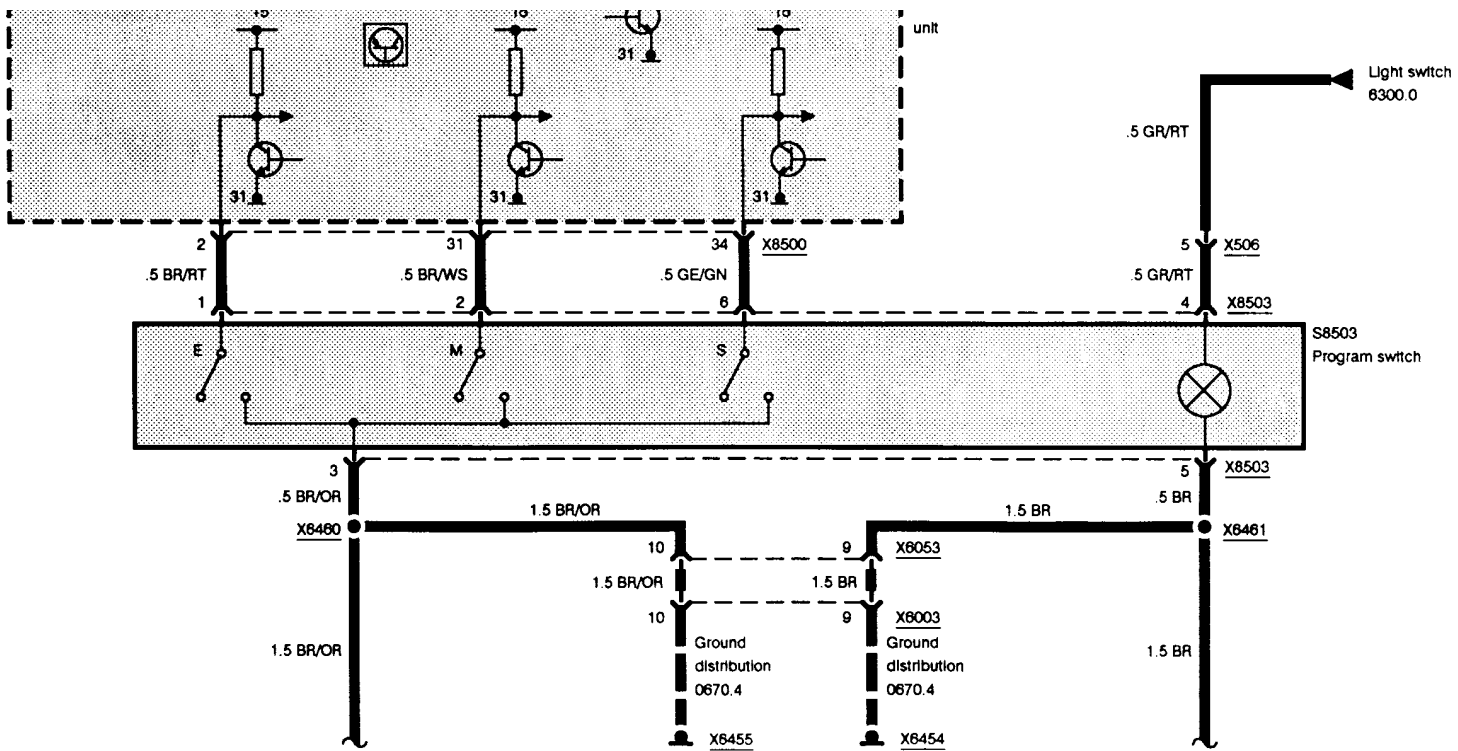

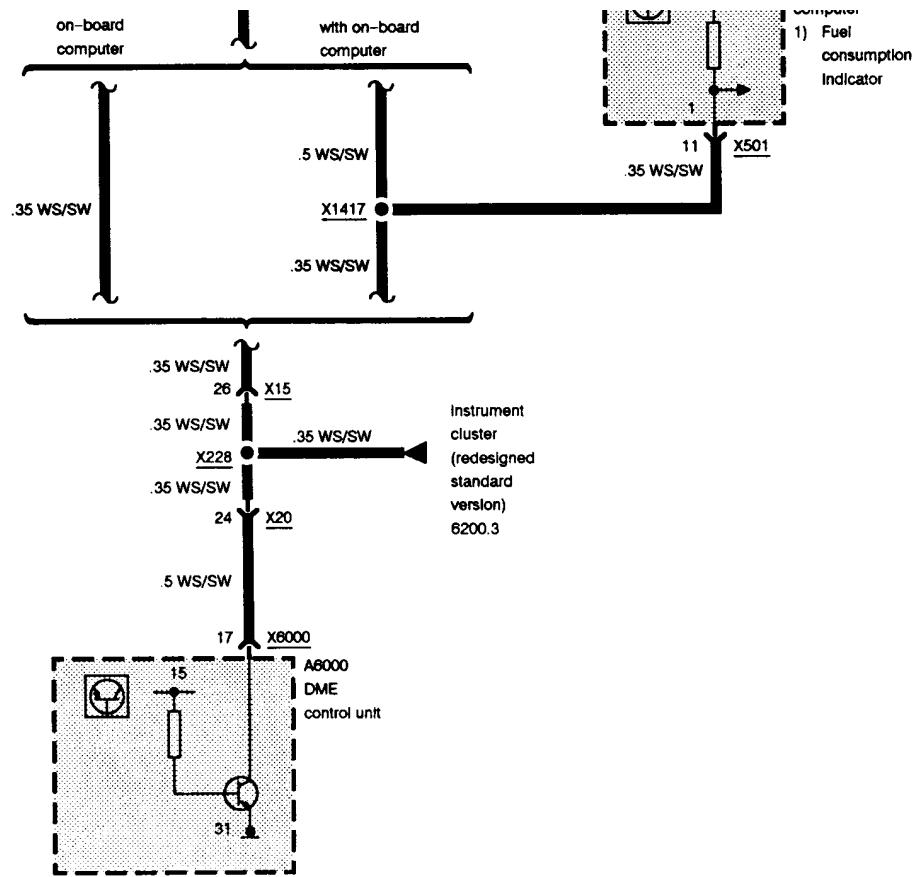


## Electronic transmission control (EGS A4S 310R)

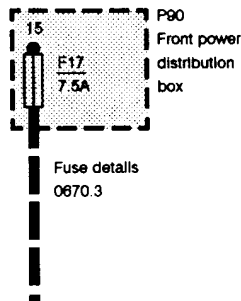

	L1	L2	L3	L4
P	1	1	0	0
R	1	0	0	1
N	0	1	1	0
D	0	0	0	1
3	0	0	1	0
2	1	0	0	0

1	1	0	1	0
---	---	---	---	---



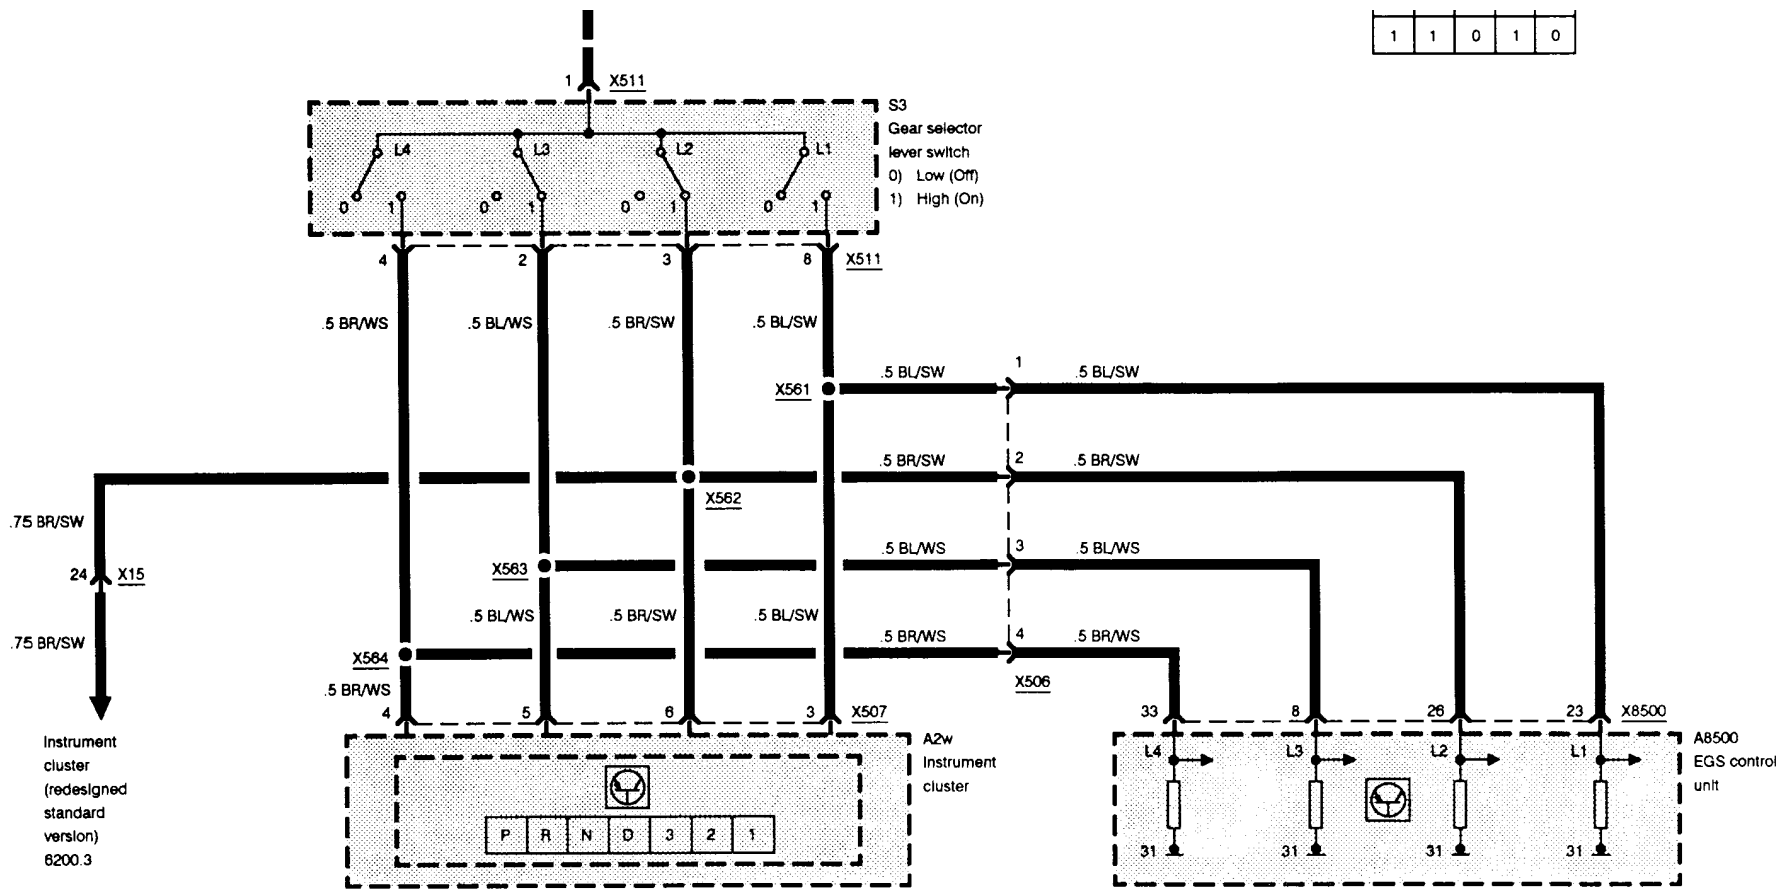


2460.2-04


1994






### Electronic transmission control (EGS A4S 310R)

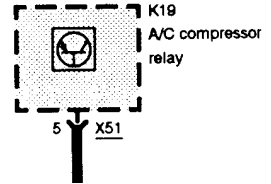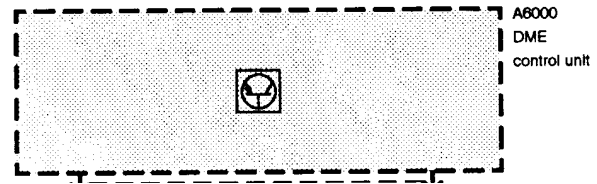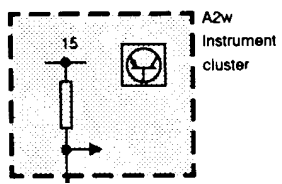


09/93

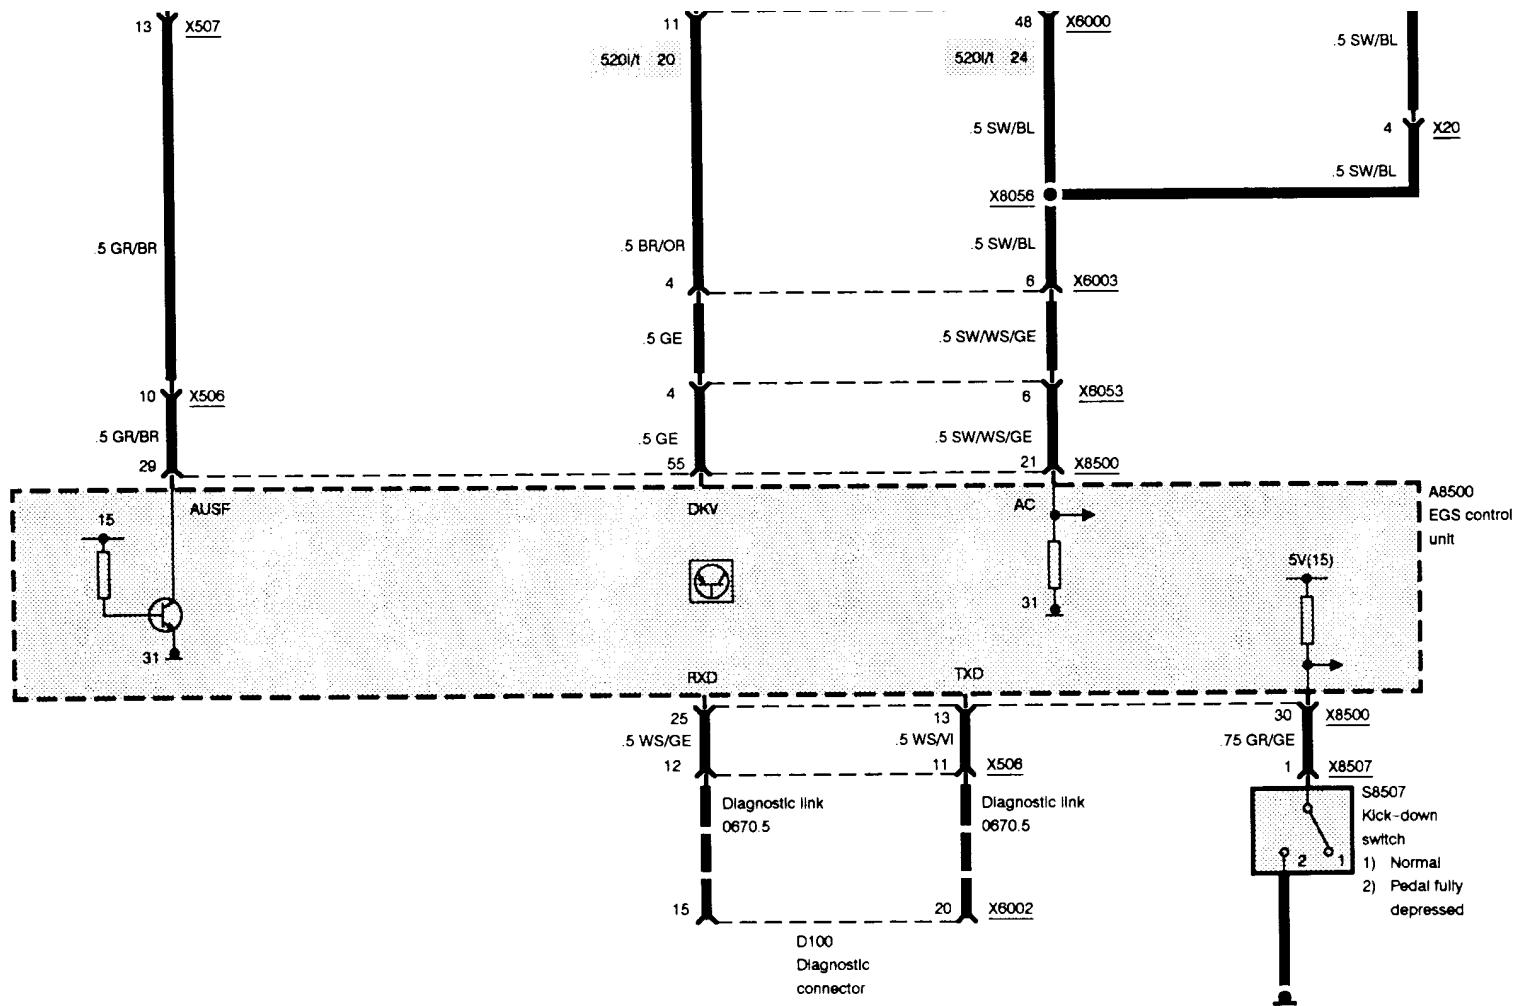

### Electronic transmission control (EGS A4S 310R)

   

http://www.bmwusa.com/rep/manuals/7series/2460.2.pdf (7/19/2001 14:53:12)

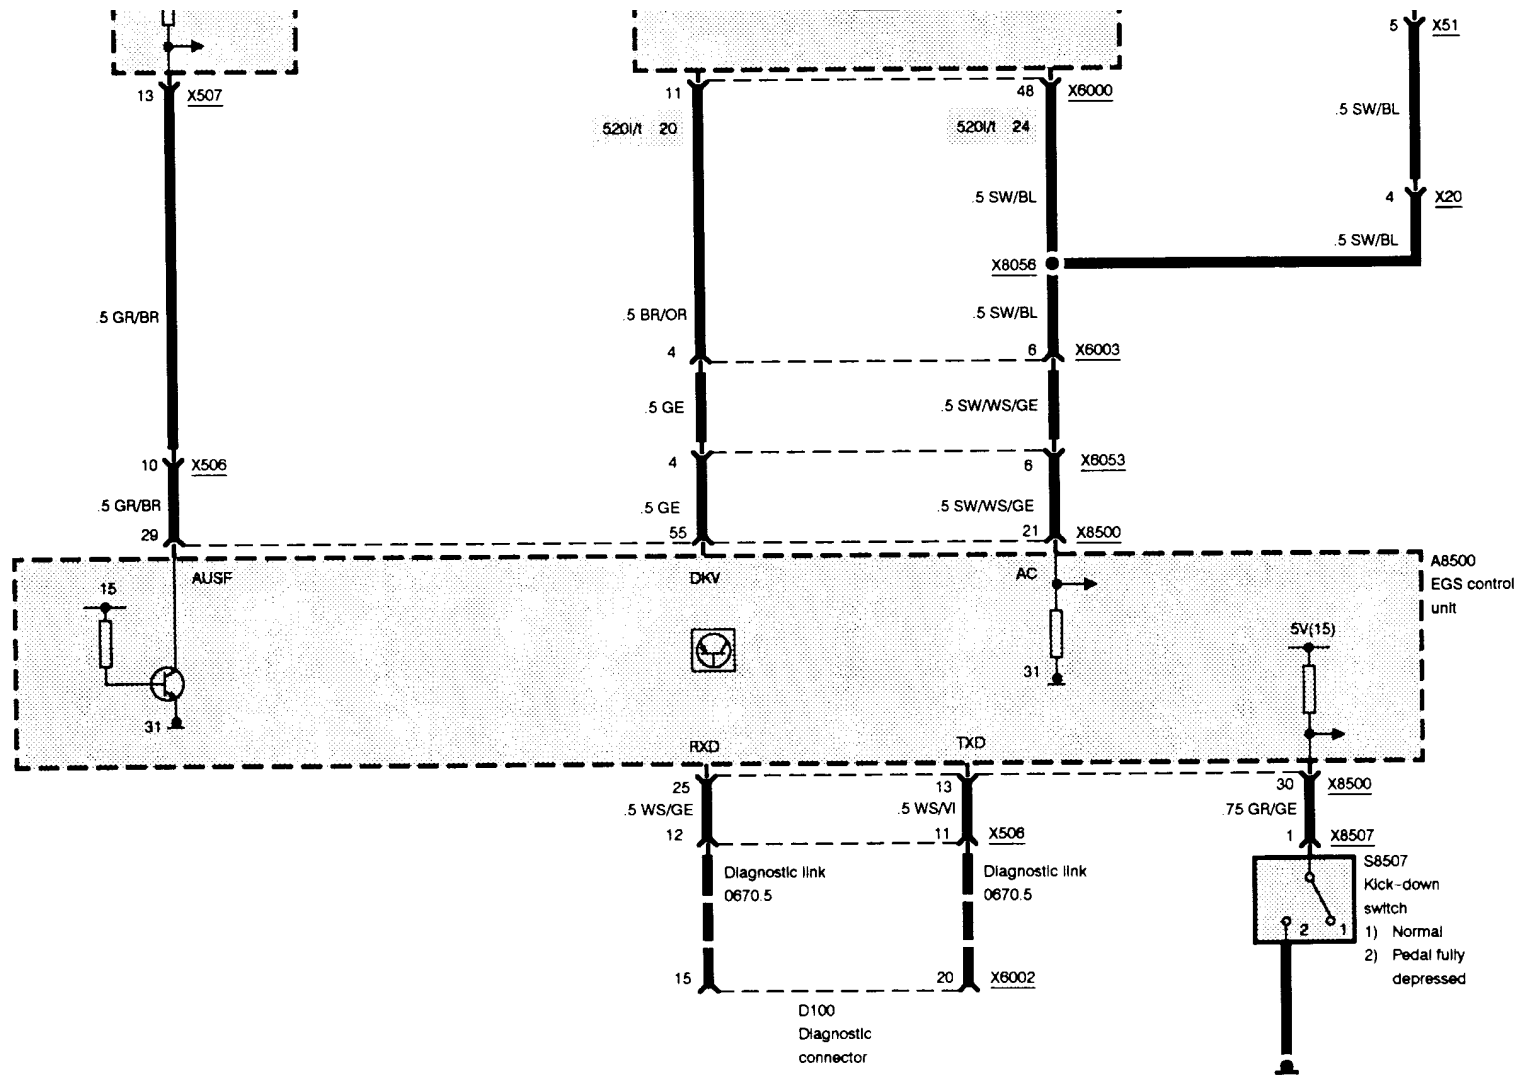

**BMWAG****Electrical troubleshooting manual**

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


Electronic transmission control (EGS ASS 31 OZ)


Scheme 2460.4

Pin Assignment X7000				
Pin	Type	Description/Function	Connection	
1		not used		
2		not used		
3	A	Solenoid valve 5	Gearshift unit	
4	A	Solenoid valve, converter clutch	Gearshift unit	
5	A	Pressure regulator (+)	Gearshift unit	
6		not used		
7		not used		
8	E	Position switch L2	Selector lever switch	
9	E	Position switch L4	Selector lever switch	
10		not used		
11		not used		
12	E/A	L5 S program	Program switch	
13	E/A	L7 * program	Program switch	
14	E	Speed sensor n-ab (-)	Gearshift unit	
15	A	Shield speed sensor n-ab/n-turbine	Speed sensor	
16	E	Speed sensor n-turbine (+) web speed	Gearshift unit	
17		not used		
18	E	Kick-down	Kick-down switch	
19		not used		
20		not used		
21	M	Ground, oil-temperature sensor	Gearshift unit	
22	E	Oil temperature sensor NIC	Gearshift unit	
23		not used		
24		not used		
25	A	Fault indicator	Instrument cluster	
26	E	Terminal 30	B+ interpolation point	
27		not used		
28	M	Electronics ground	Ground connection	
29		not used		
30	A	Solenoid valve 1	Gearshift unit	
31	A	Solenoid valve 4	Gearshift unit	
32	A	Solenoid valve 3	Gearshift unit	
33	A	Solenoid valve 2	Gearshift unit	
34	M	Power ground	Ground connection	
35	E	Throttle-valve signal interface	DME control unit	
36	E	Position switch L1	Selector lever switch	
37	E	Position switch L3	Selector lever switch	
38		not used		
39		not used		
40	A	Engine intervention	DME control unit	
41	E	Fuel consumption indicator (ti signal)	DME control unit	
42	E	Speed sensor n-ab (+)		
43	E	Engine speed n-mot (TD* signal)	DME control unit	
44	E	Speed sensor n-turbine (-)	Gearshift unit	
45	E	L6 E program	Program switch, instrument cluster	
46		not used		
47		not used		
48		not used		
49		not used		
50		not used		
51		not used		
52		not used		
53	A	Positive supply, solenoid valves	Gearshift unit	
54	E	Voltage supply	DME relay	
55		not used		
56		not used		
57		not used		
58		not used		
59		not used		


60		not used	
61		not used	
62		not used	
63		not used	
64		not used	
65		not used	
66		not used	
67		not used	
68		not used	
69		not used	
70		not used	
71		not used	
72		not used	
73		not used	
74		not used	
75		not used	
76		not used	
77		not used	
78		not used	
79		not used	
80		not used	
81		not used	
82		not used	
83		not used	
84		not used	
85		not used	
86		not used	
87	E	RxD diagnosis line	Diagnostic connector
88	E/A	TxD diagnosis line	Diagnostic connector

**BMW 5** Electronic transmission control (EGS A5S 310Z)

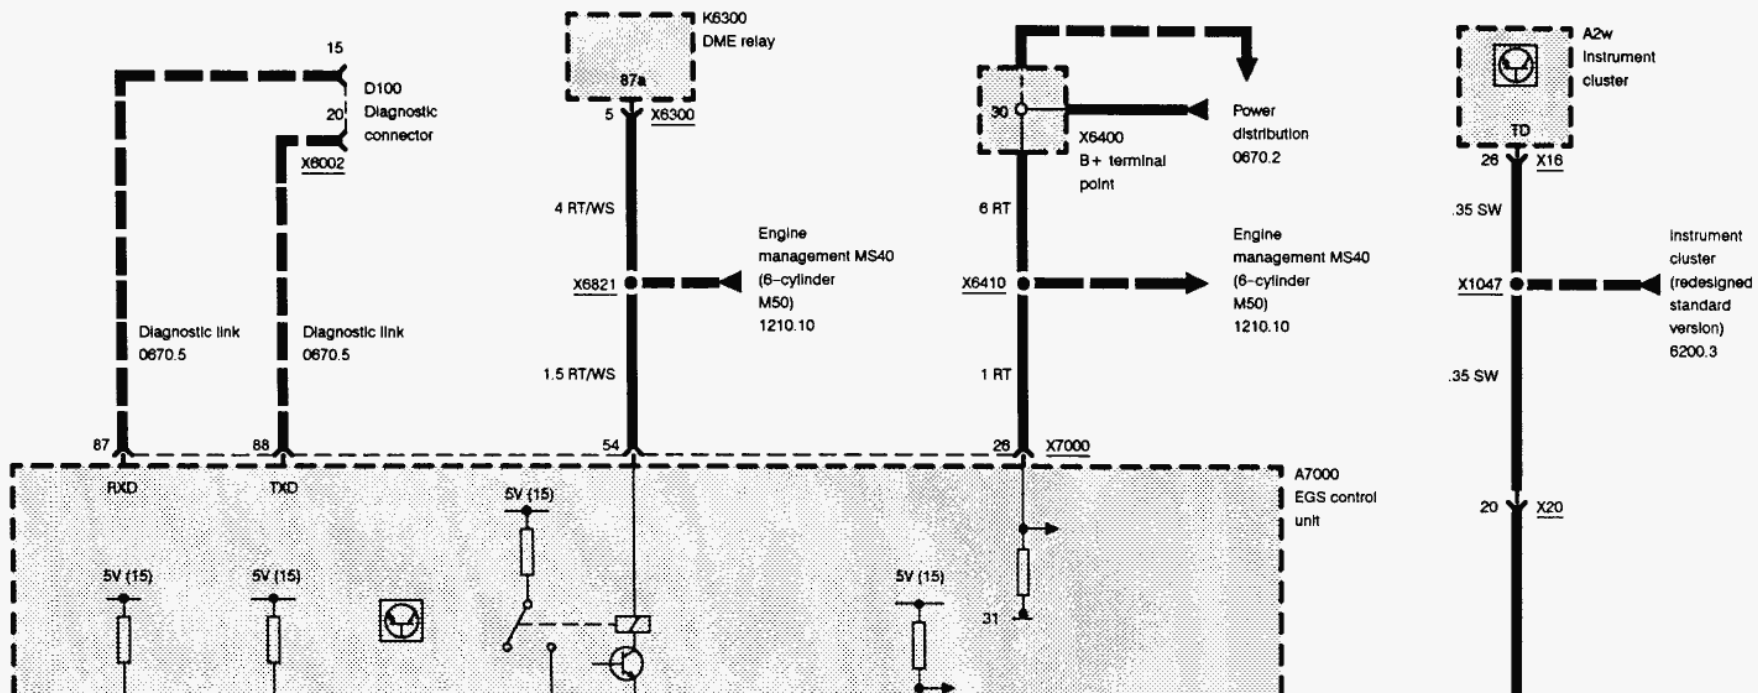

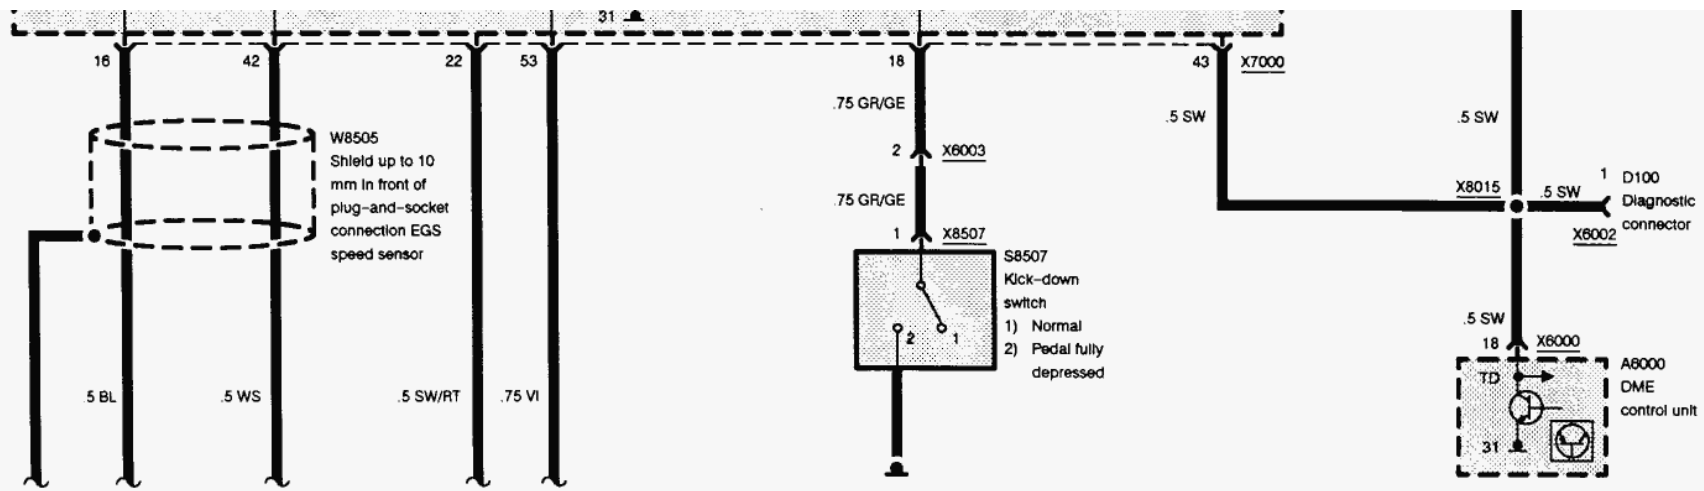


1994

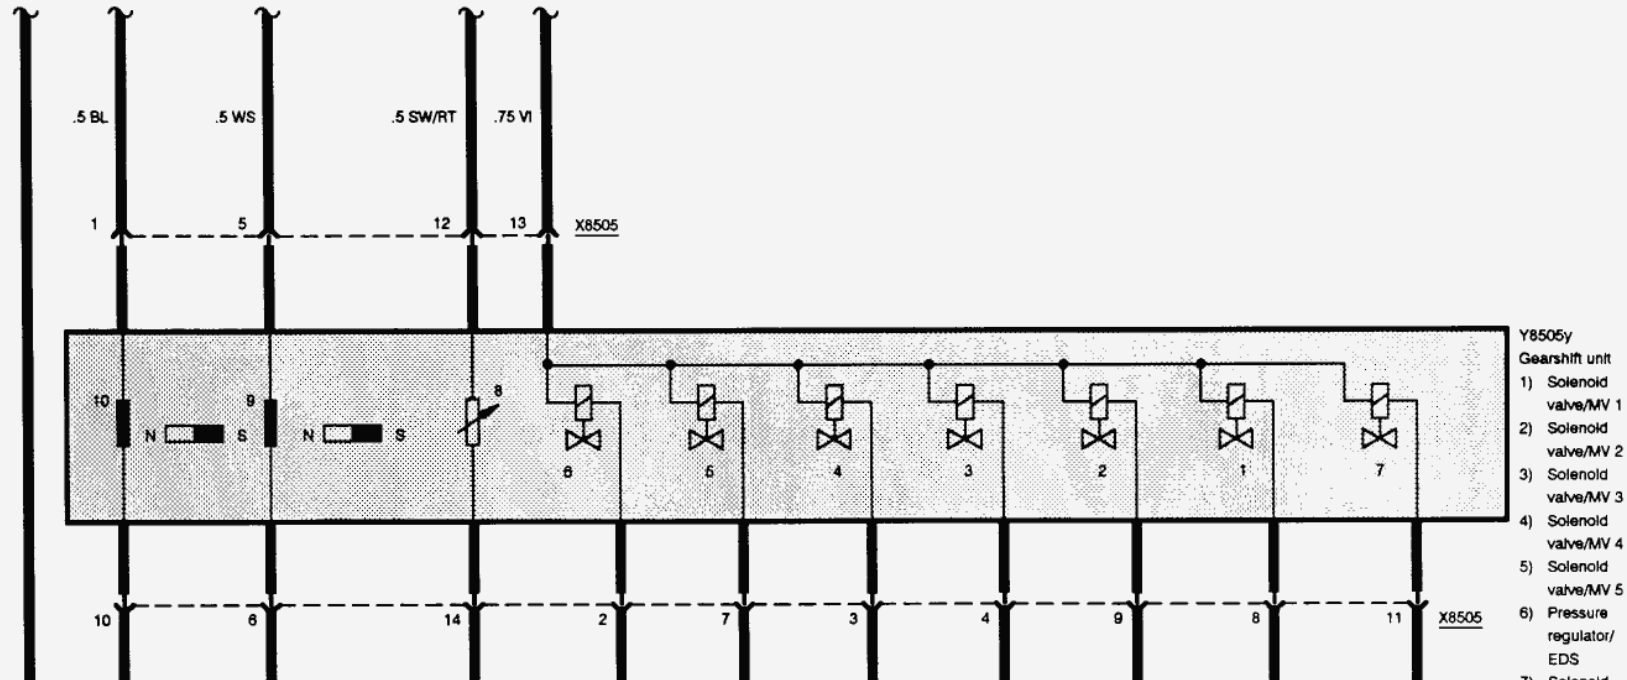

09/93

2460.4




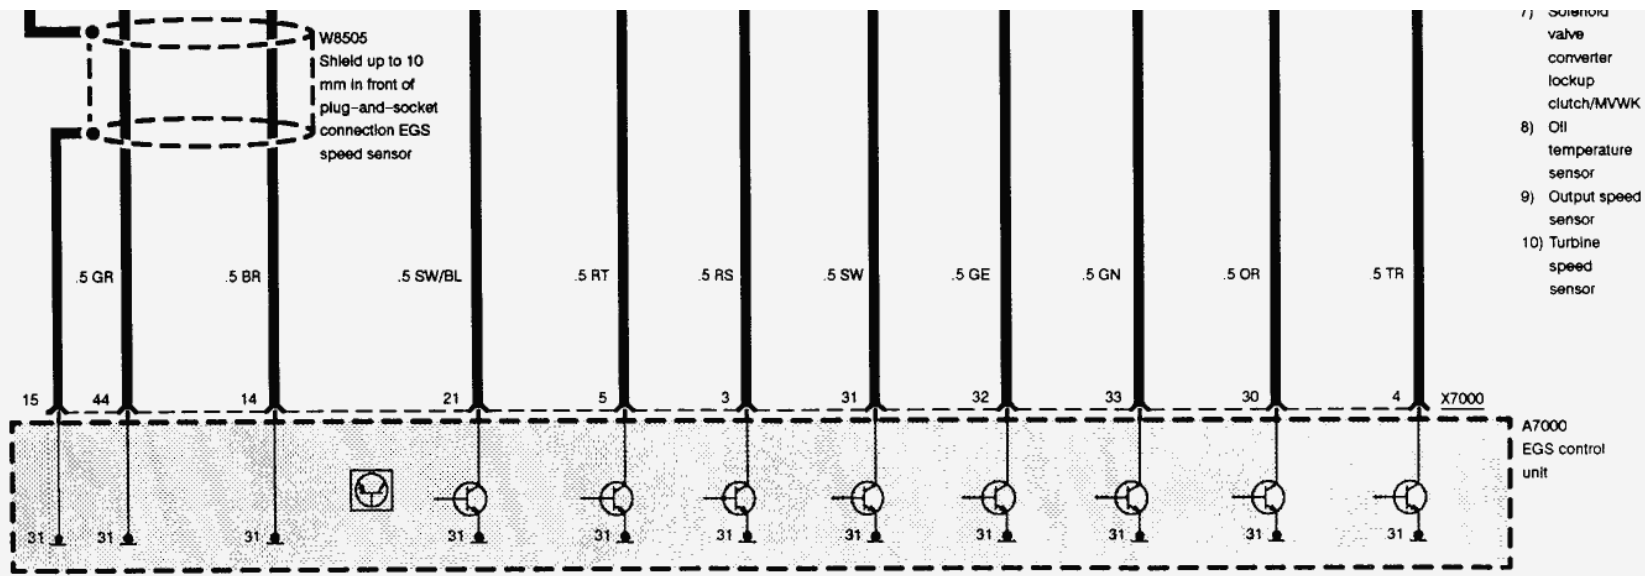


- 01 ————— 1994



## Electronic transmission control (EGS A5S 310Z)

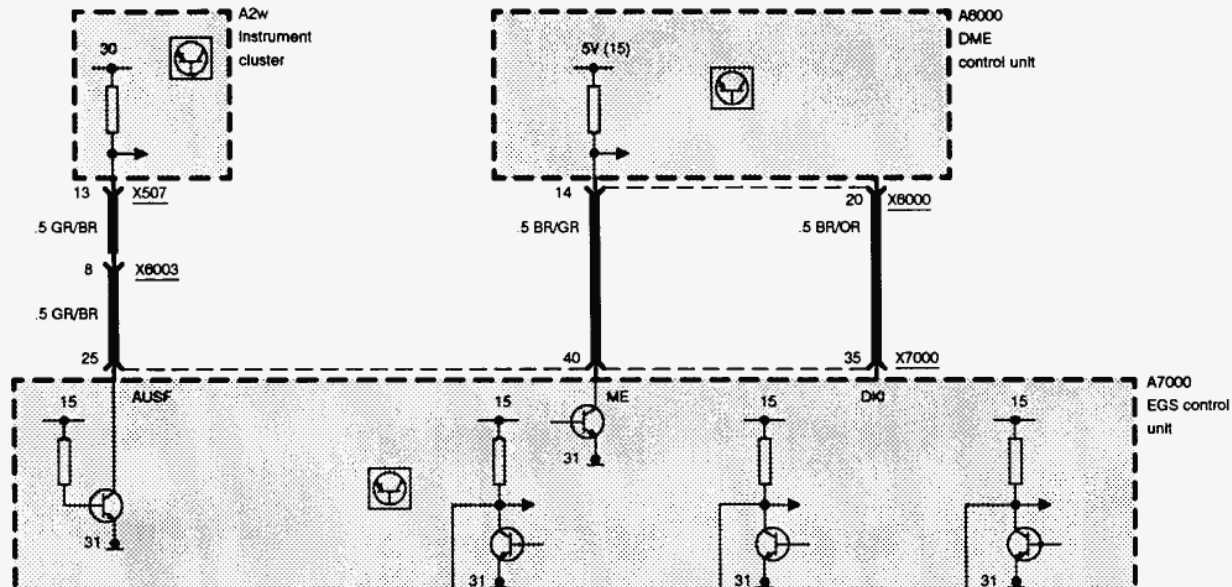


09/93 ————— 2460.4

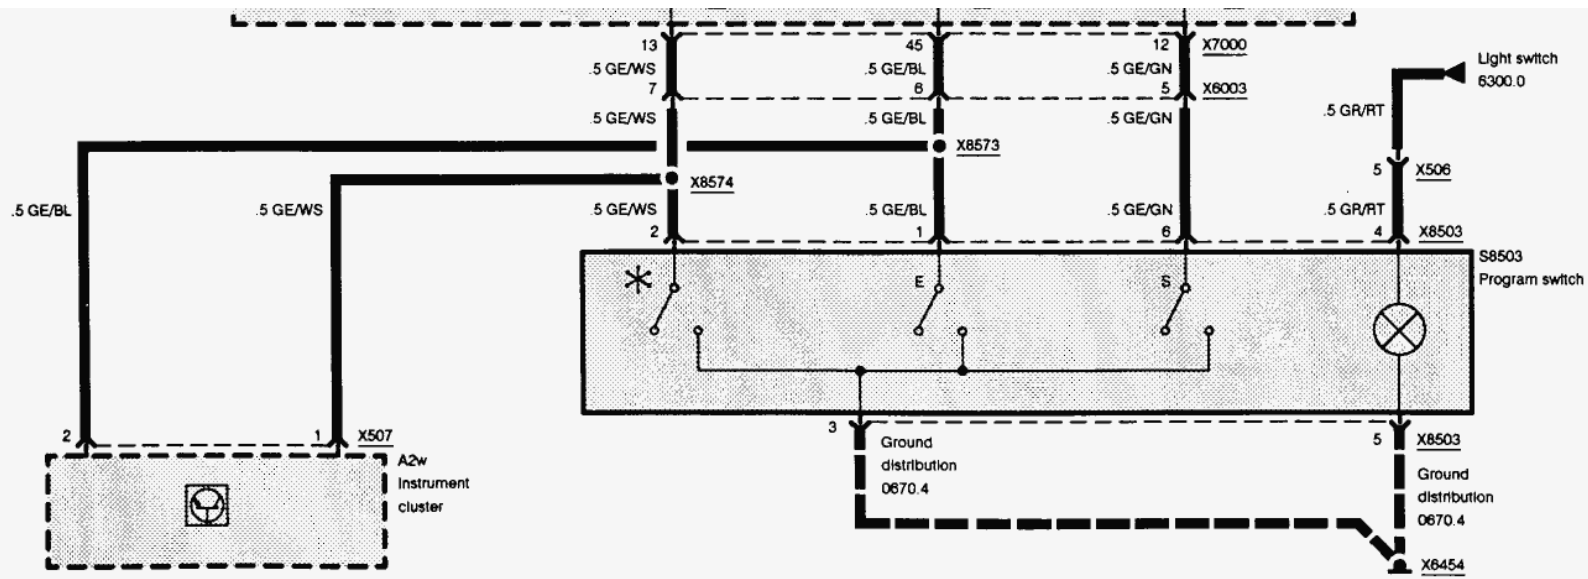


-02  
1994



## Electronic transmission control (EGS A5S 310Z)

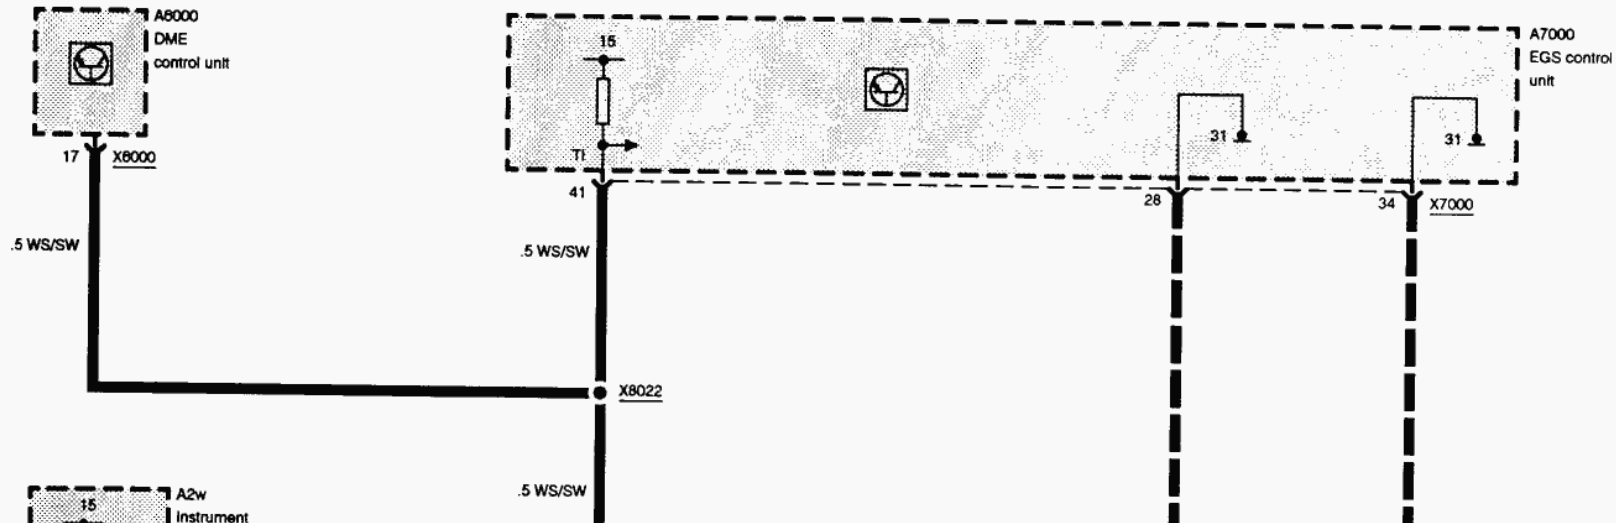


09/93  
21

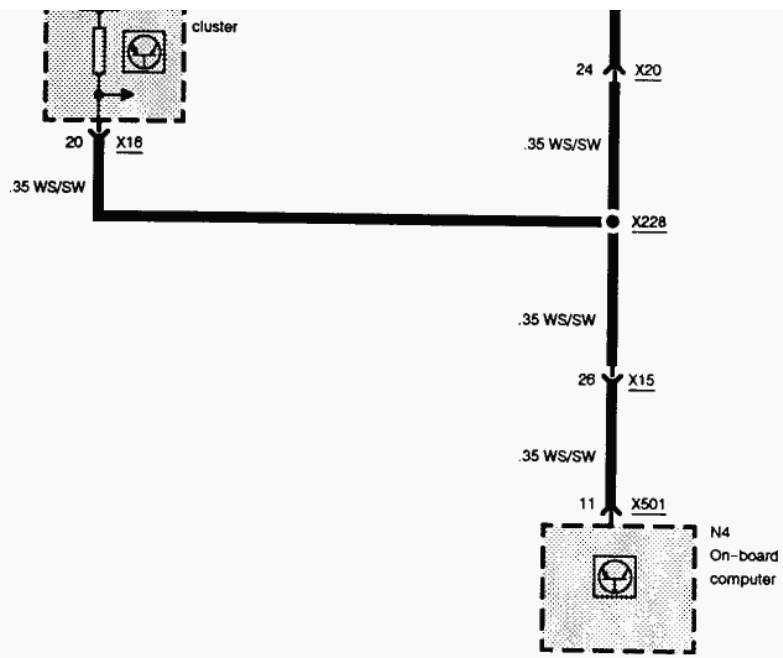


160.4-03 — 1994



## Electronic transmission control (EGS A5S 310Z)

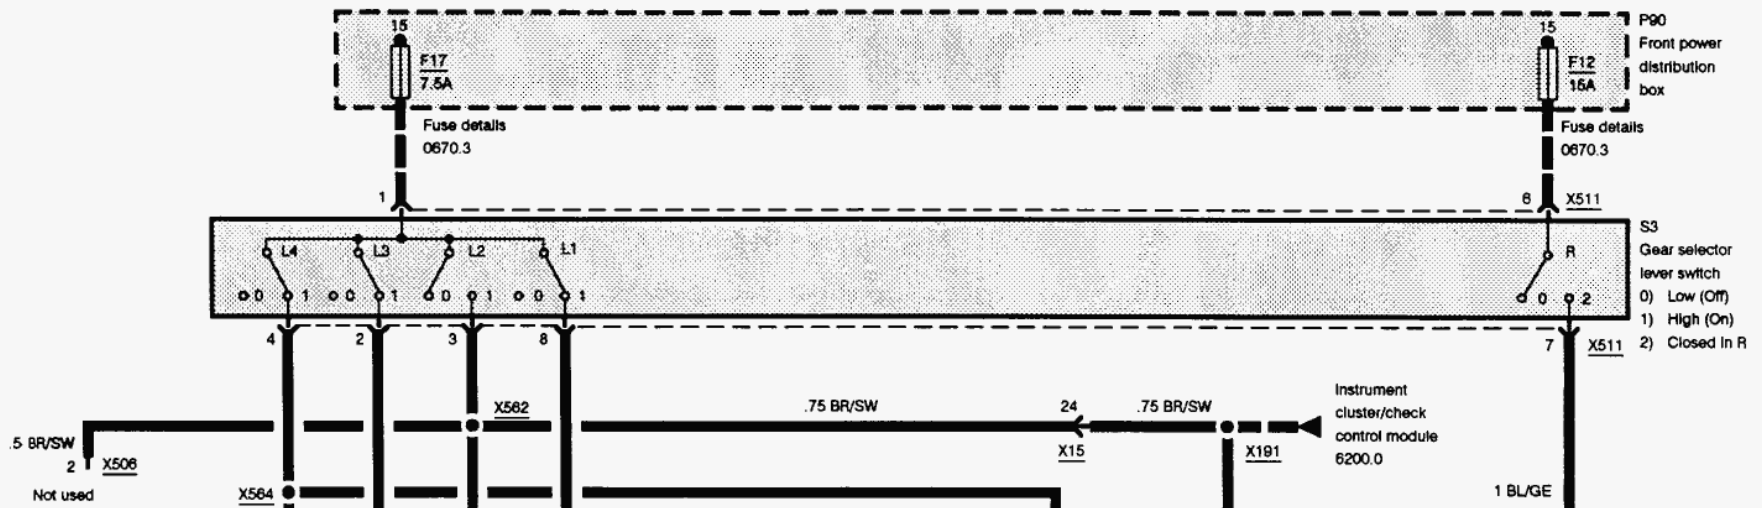

09/93 — 21

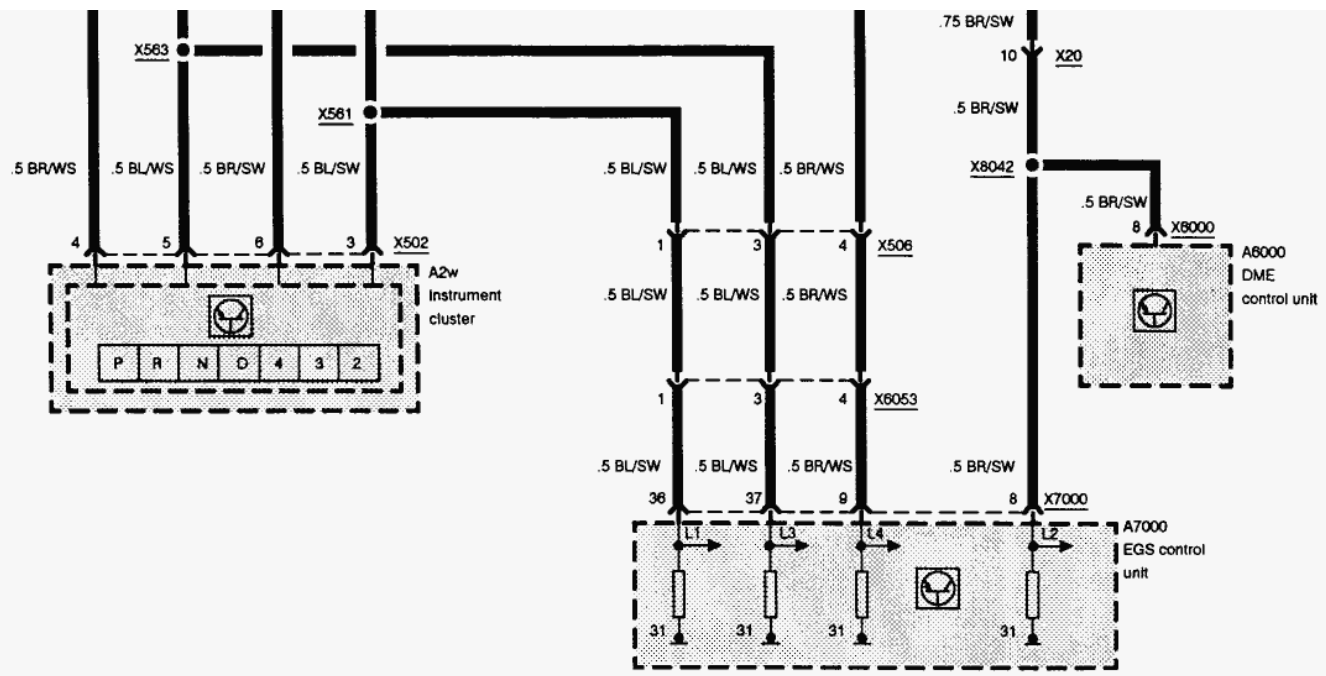


Reversing lights  
6322.0

	L1	L2	L3	L4
P	1	1	0	1
R	1	0	0	0
N	1	1	1	0
D	0	0	0	1
4	0	0	1	1
3	1	0	1	1
2	0	0	1	0

160.4-04  
1994



# Electric sun shades

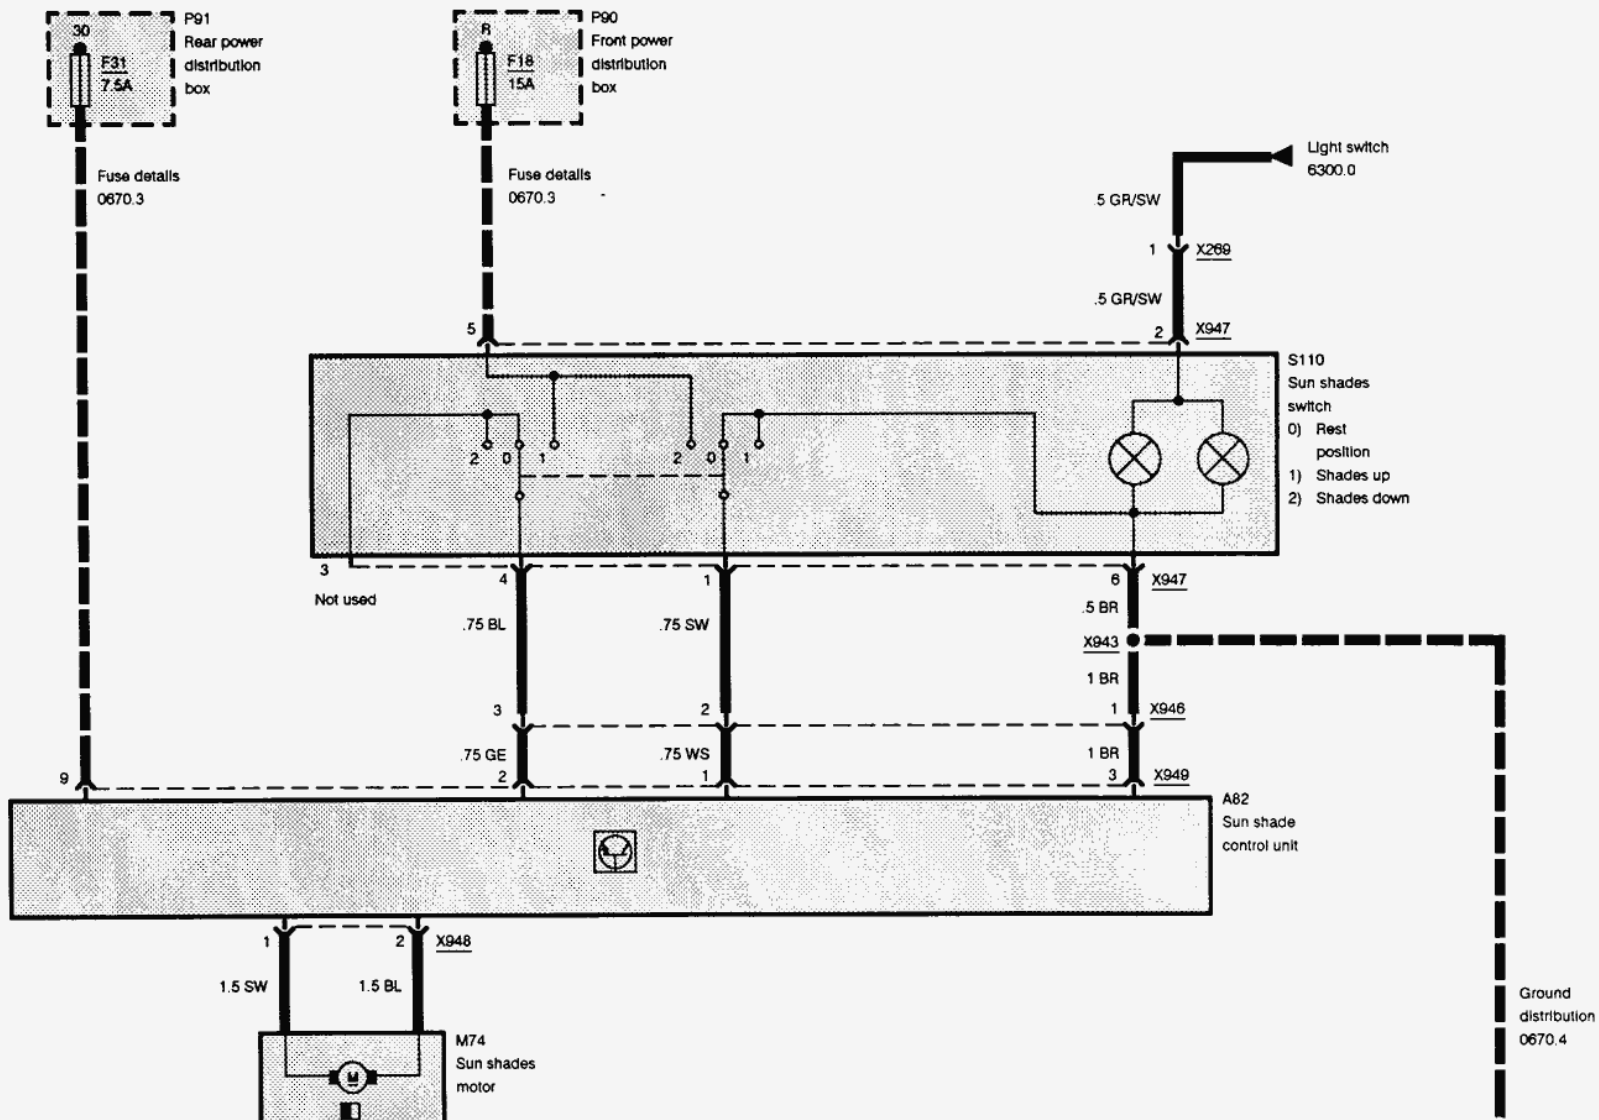



**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


Electronic steering column control

Scheme 3231.0


09/93

3231.0-00

1994

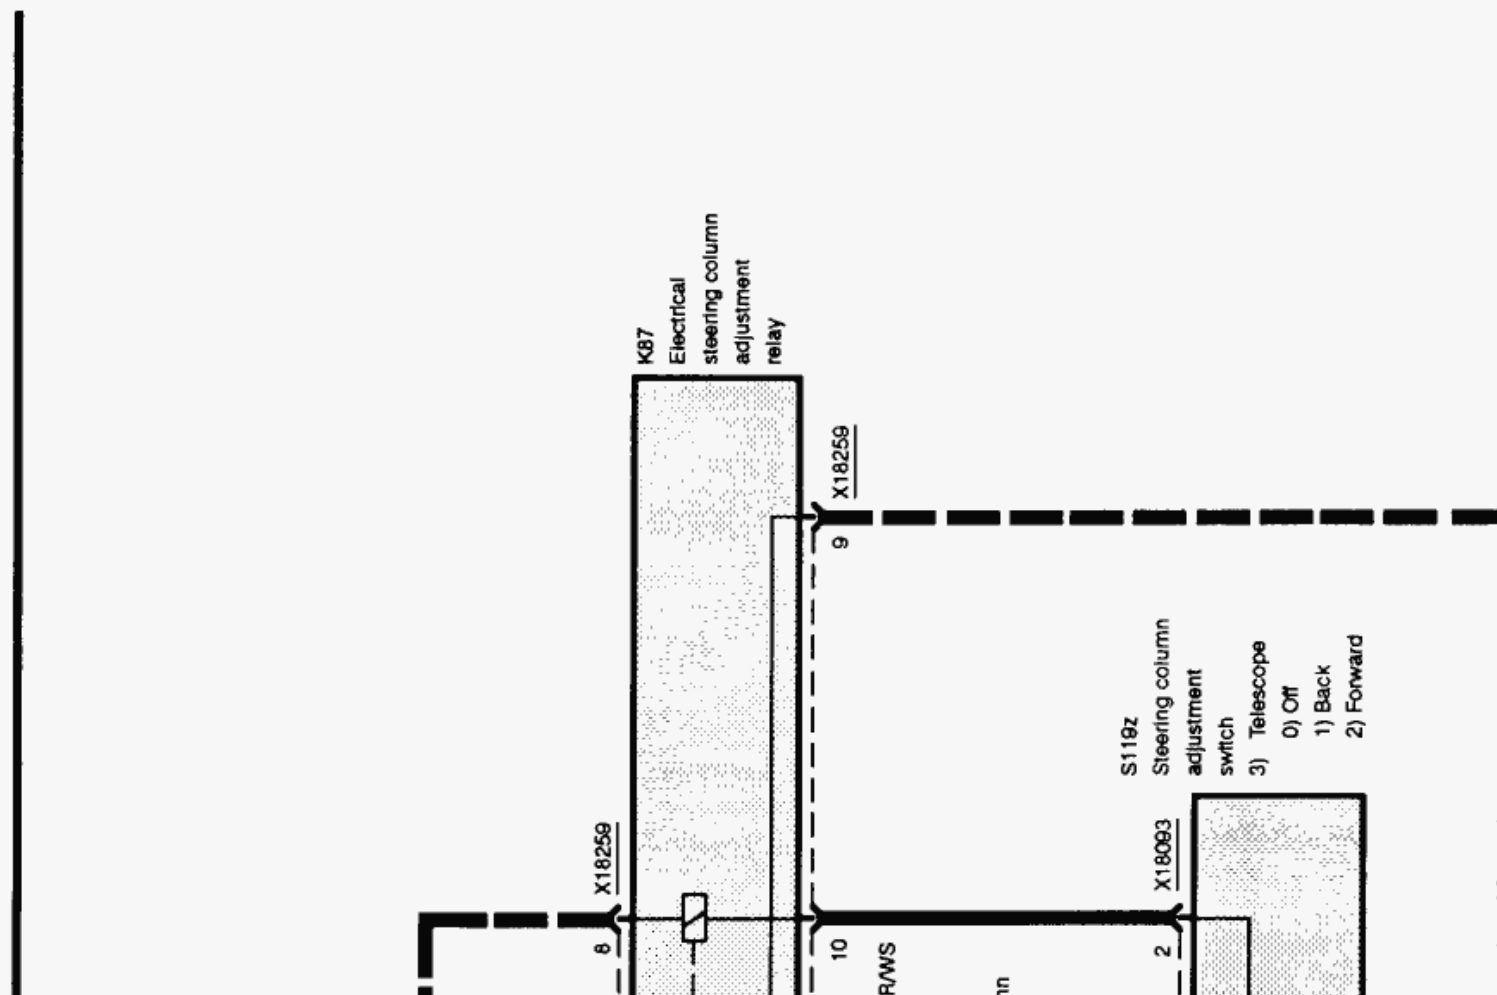

# Electronic steering column control

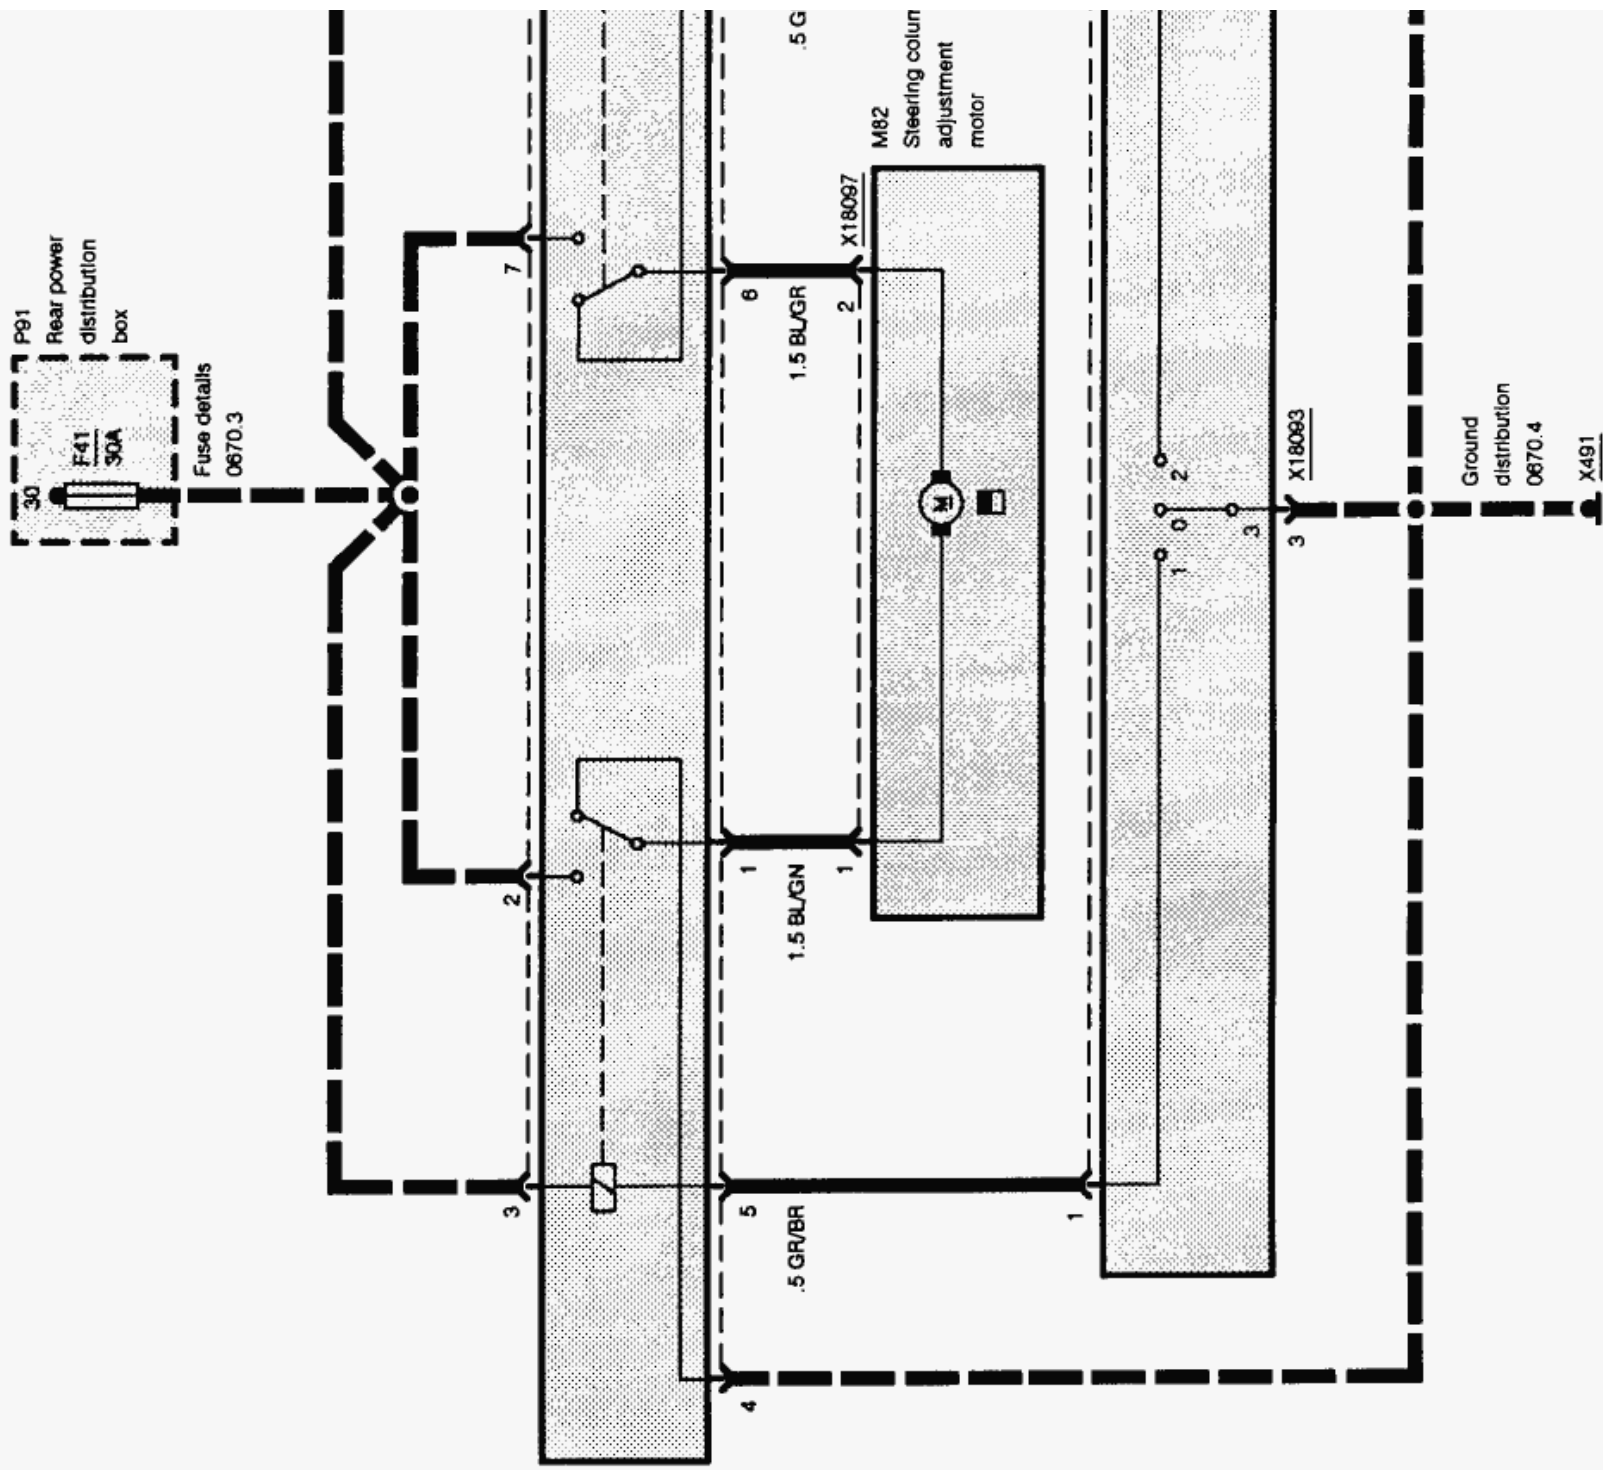





**BMWAG**


Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Servotronic


Scheme 3240.0

09/93 ————— 3240.0-00 ————— 1994

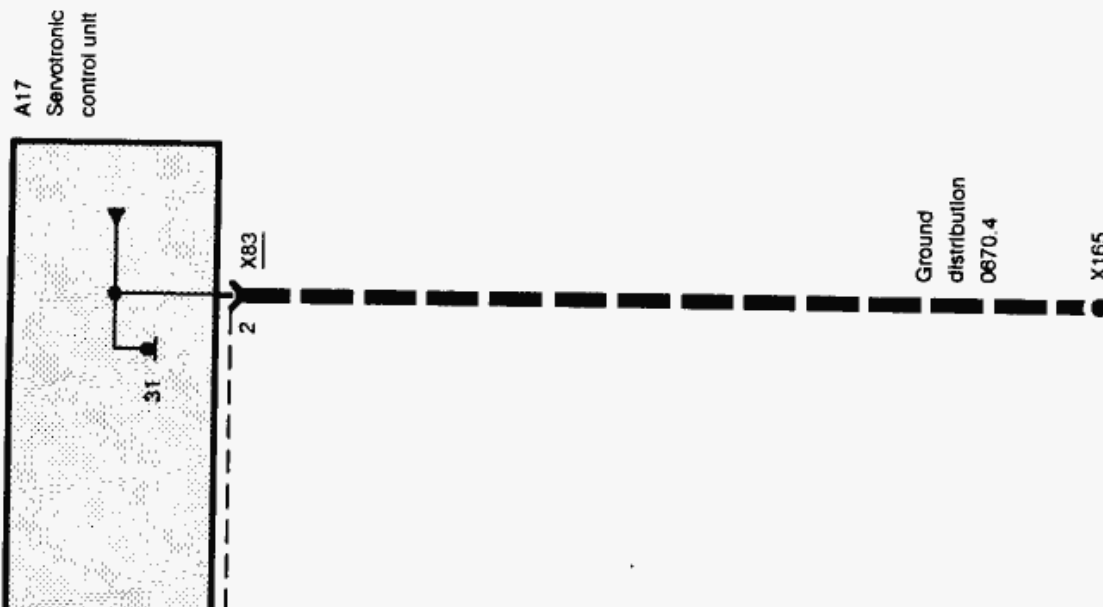




# Servotronic

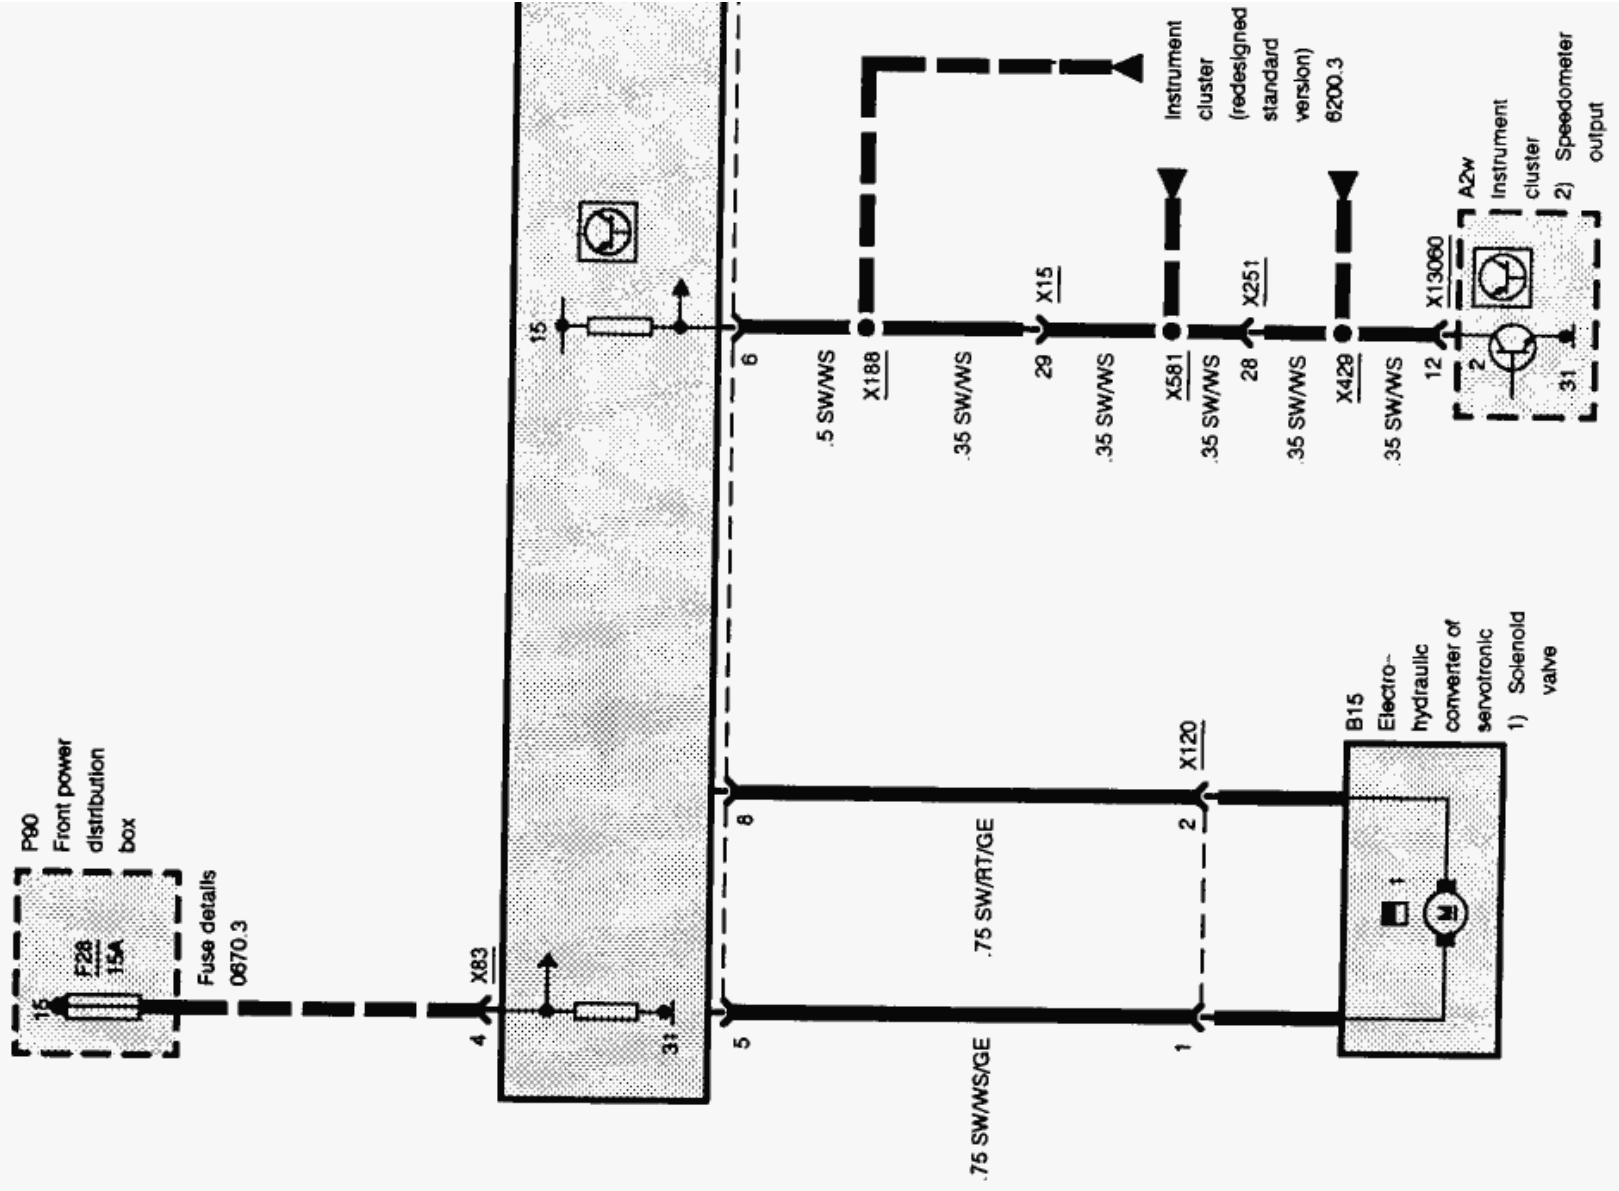






# Headlight/fog light

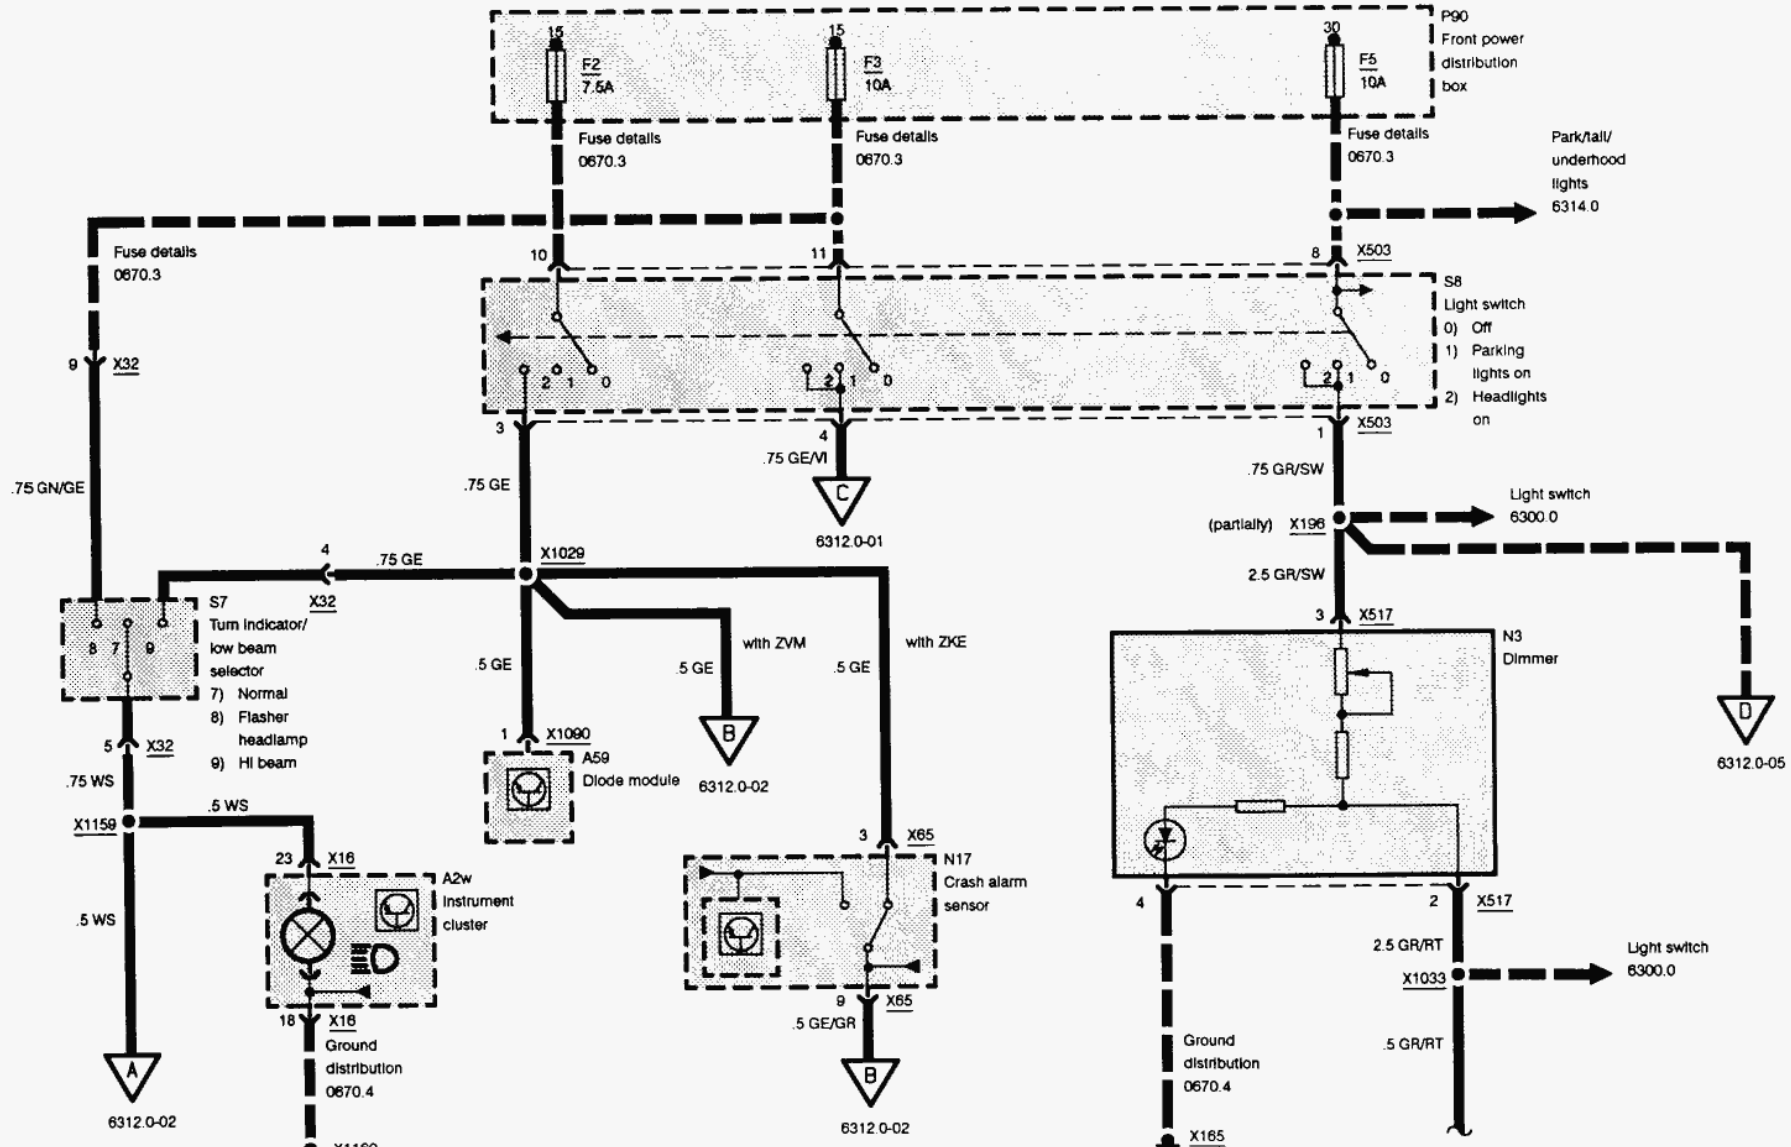

09/93

6312.0-00

1994

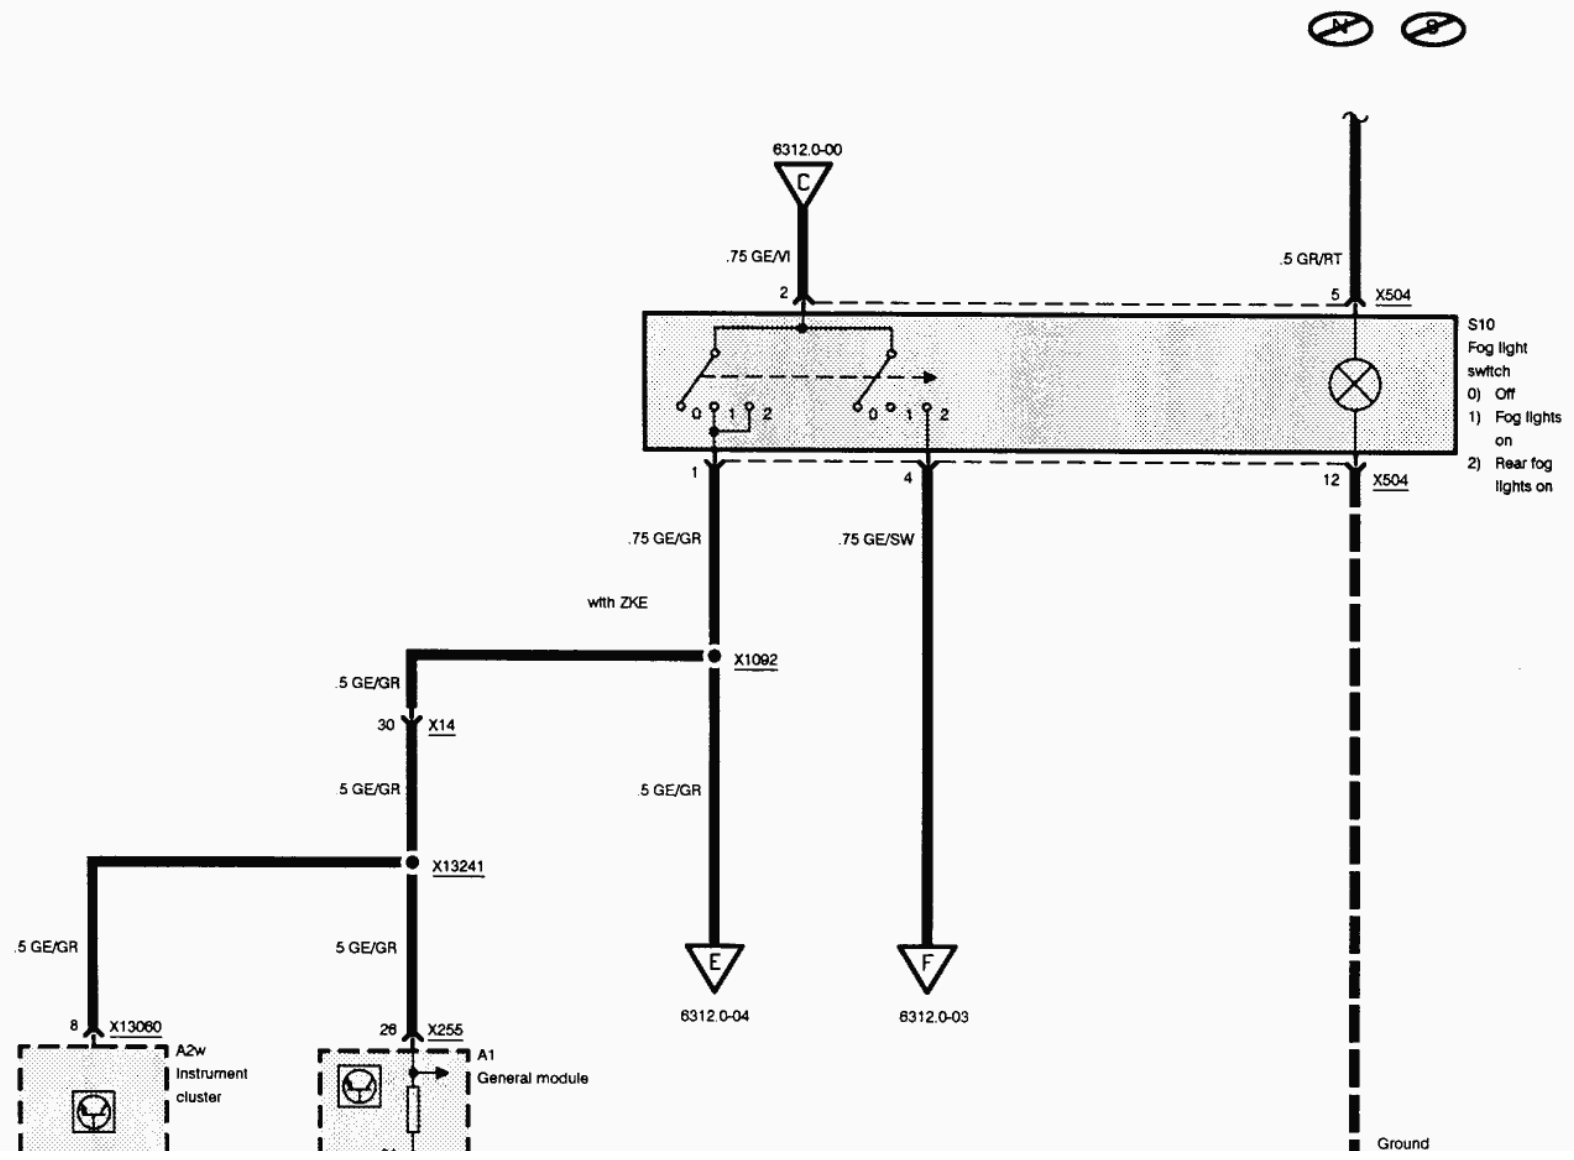


- S10  
Fog light  
switch
- 0) Off
  - 1) Fog lights on
  - 2) Rear fog lights on

09/93 ————— 6312.0-01 —————



# BMW 5 Headlight/fog light

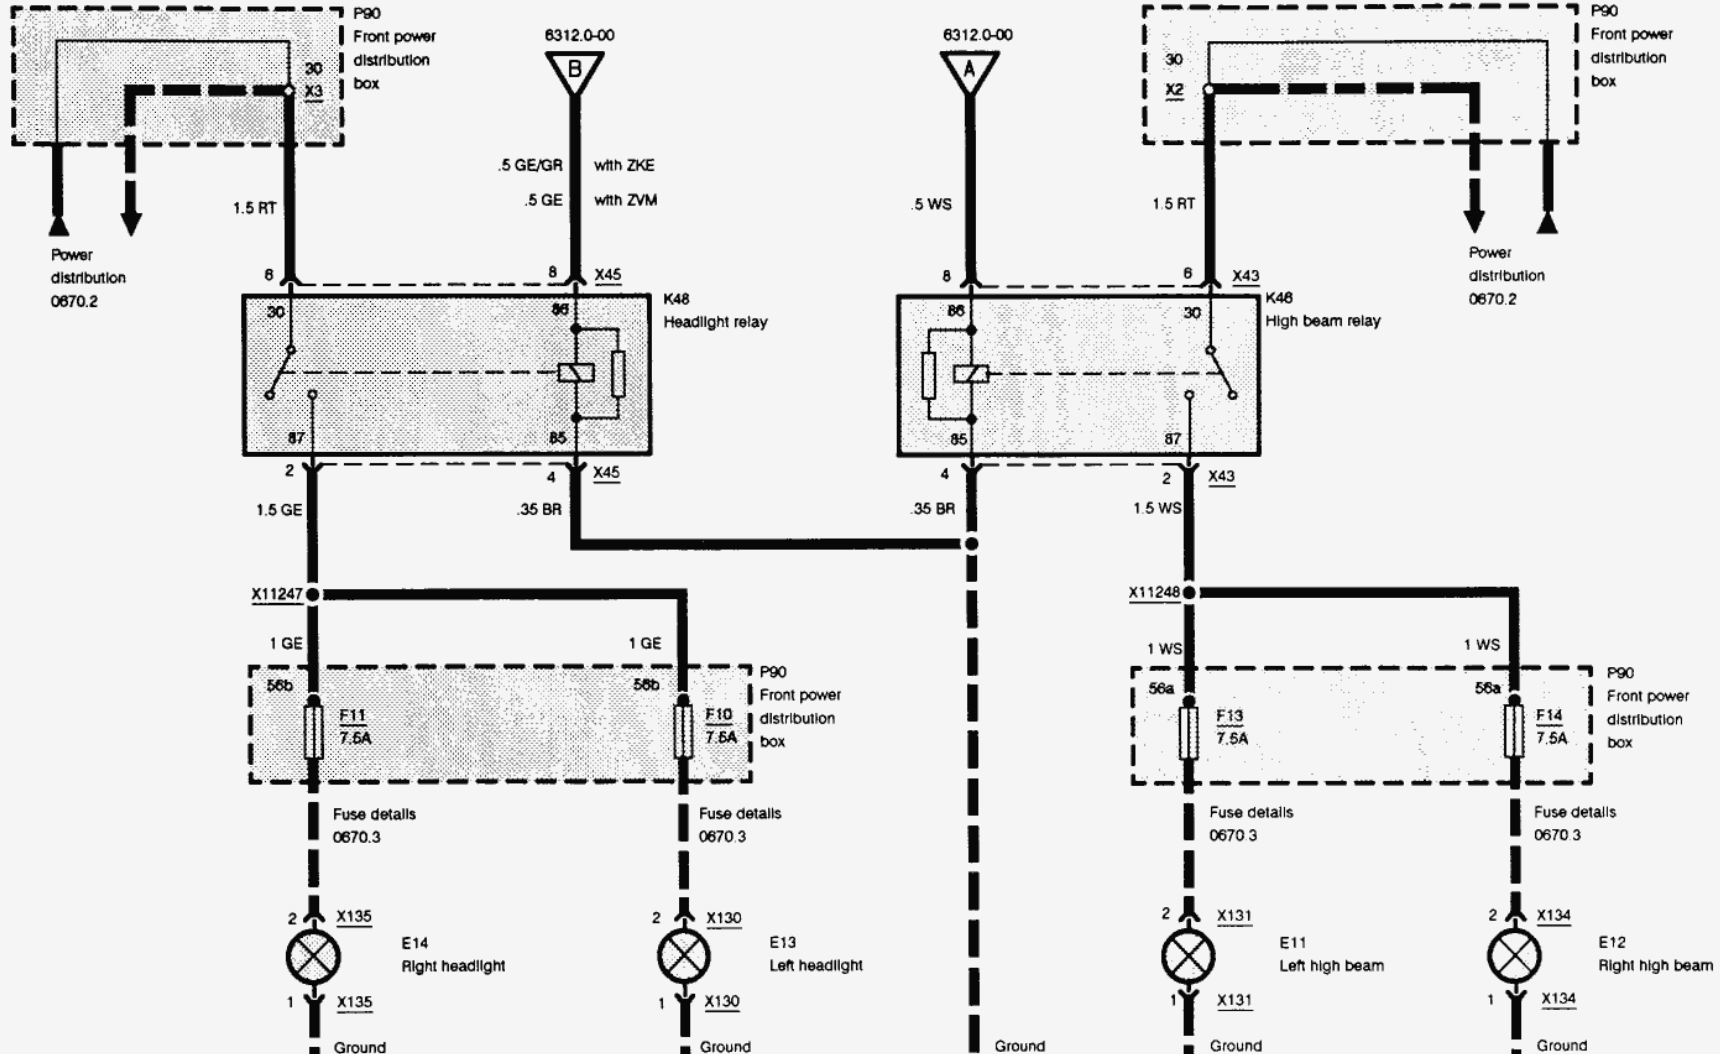

distribution  
0670.4  
X179

distribution  
0670.4  
X175

distribution  
0670.4  
X165


distribution  
0670.4  
X175

distribution  
0670.4  
X179

1994



# Headlight/fog light

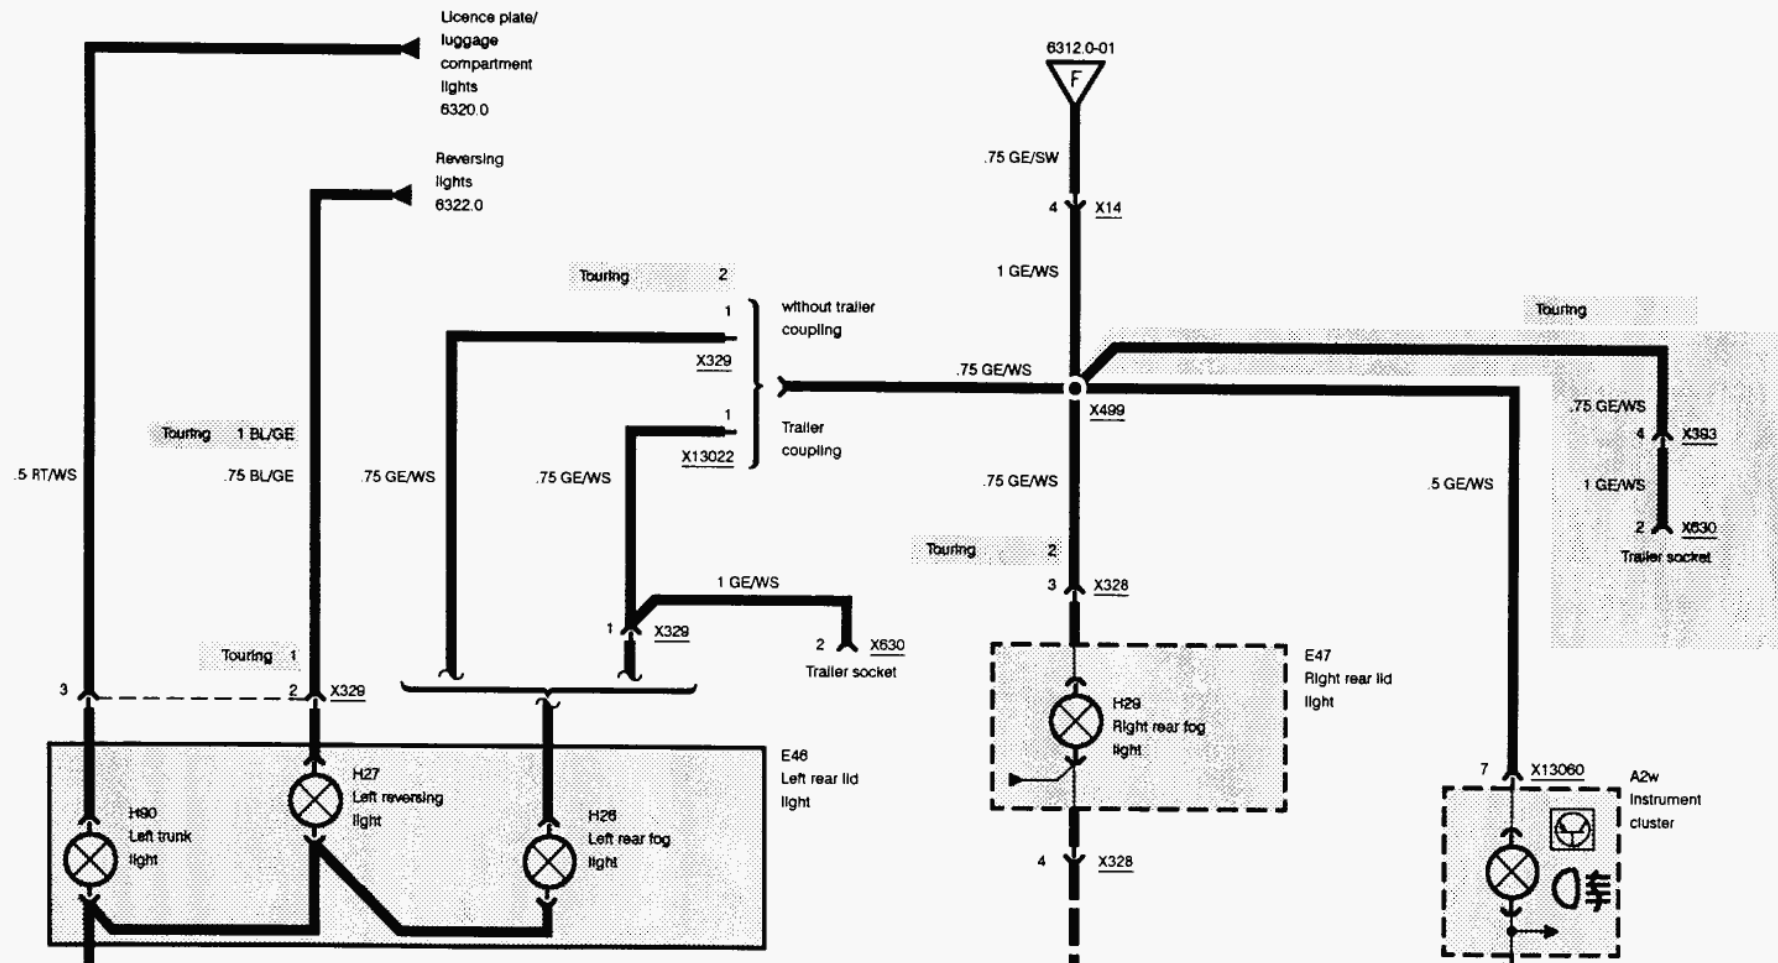

09/93

6312.0-03






1994






# Headlight/fog light

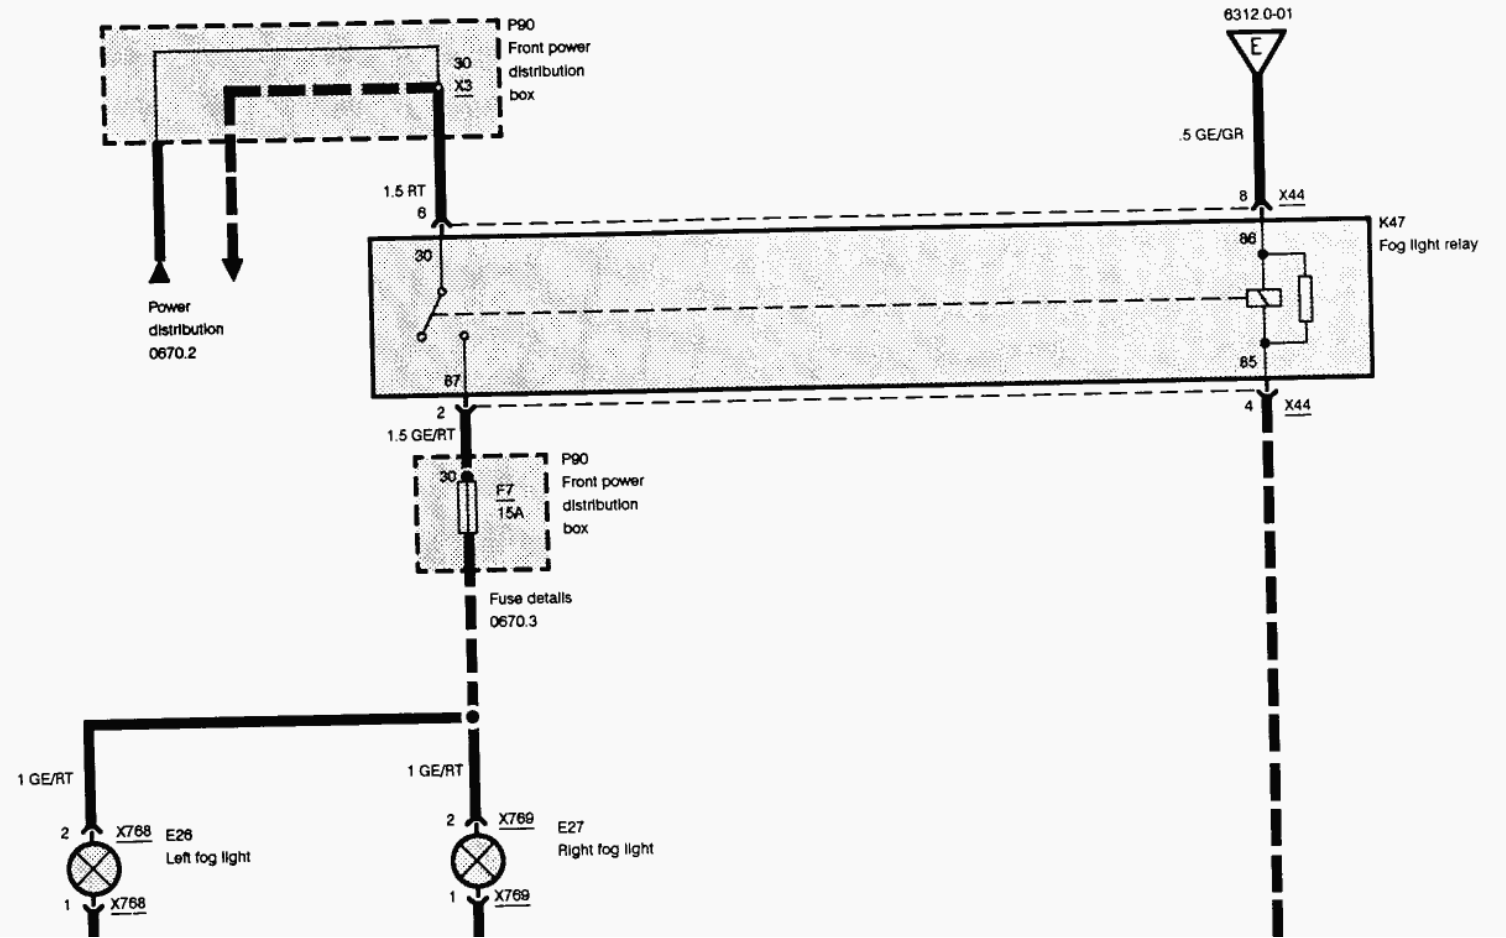

09/93

  6312.0-04

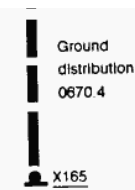


1994



# BMW 5 Headlight/fog light Headlight range adjustment



09/93

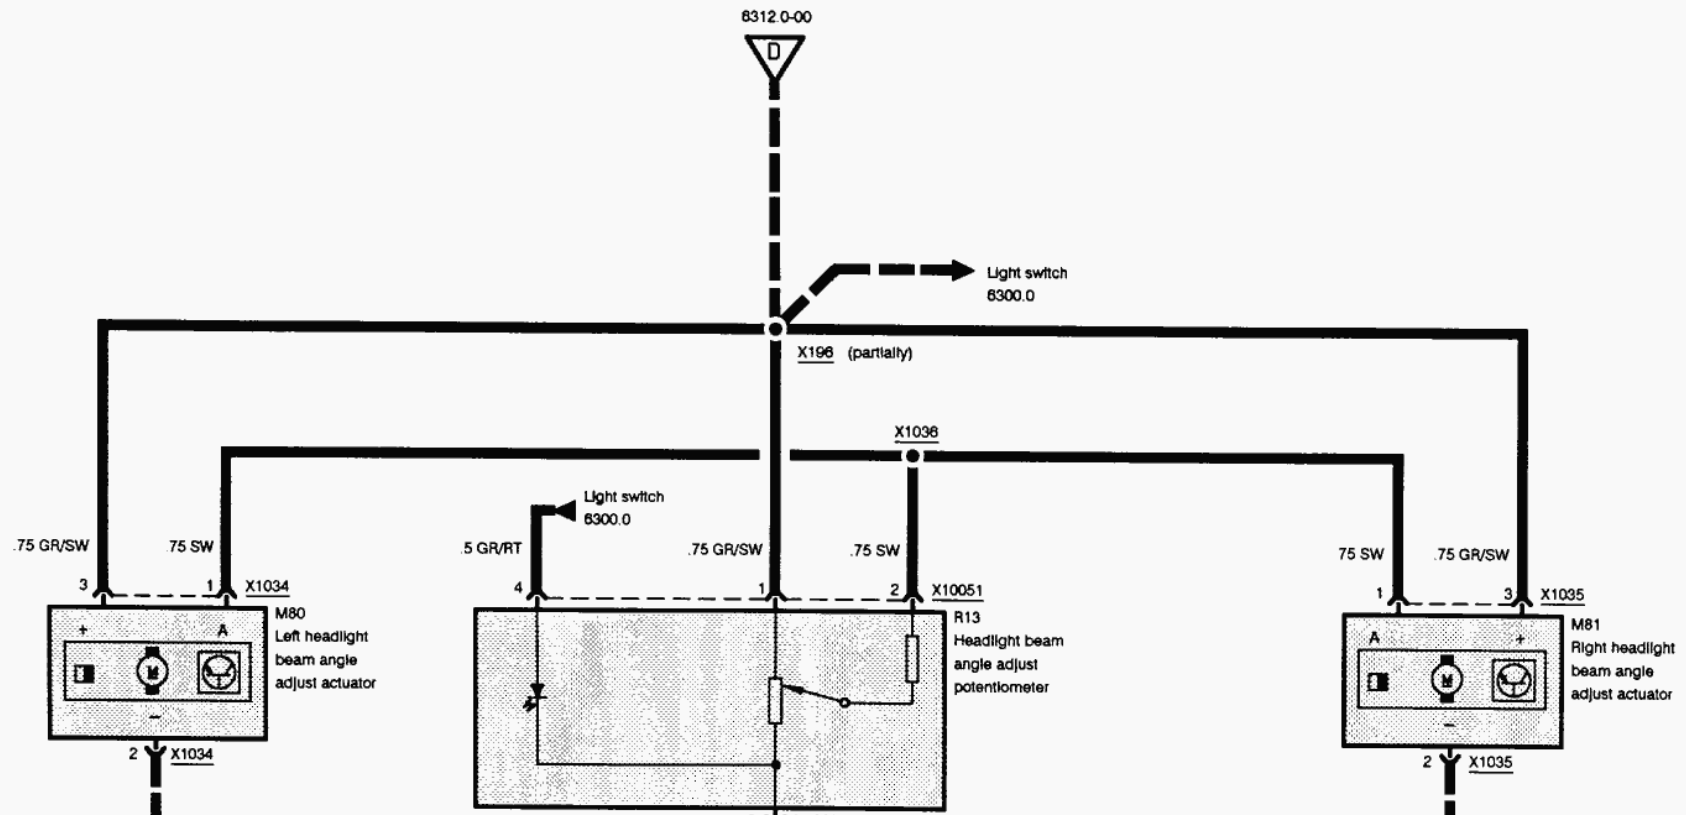


6312.0-05

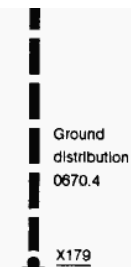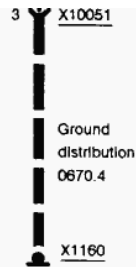

1994




# Headlight/fog light

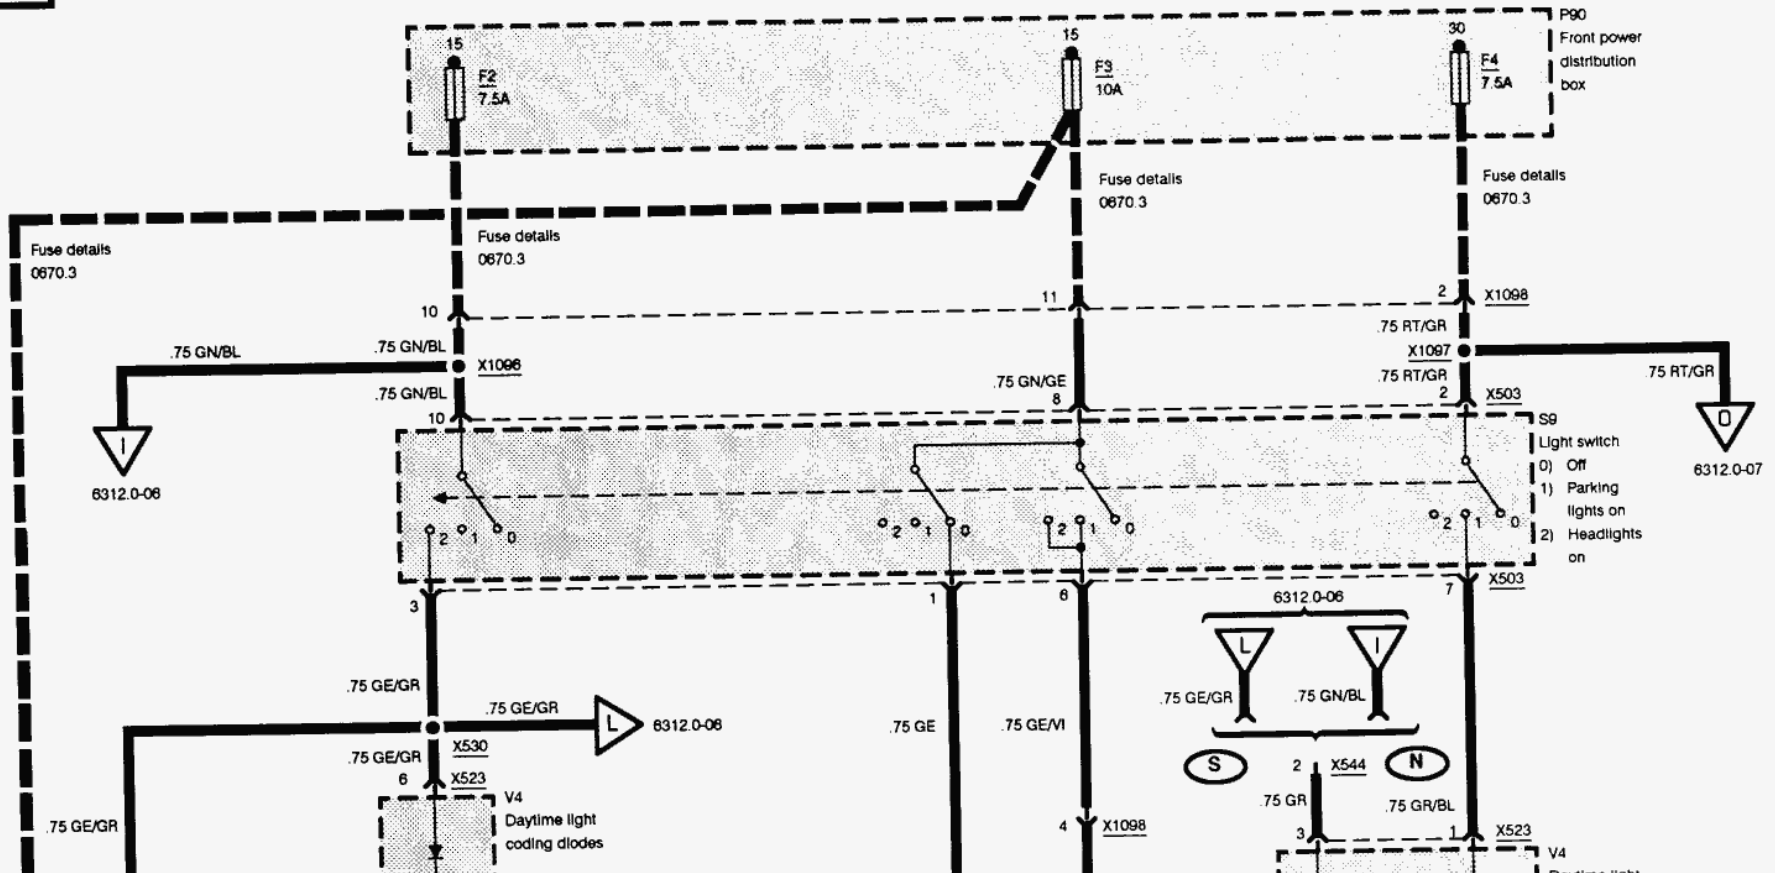

09/93


6312.0-06

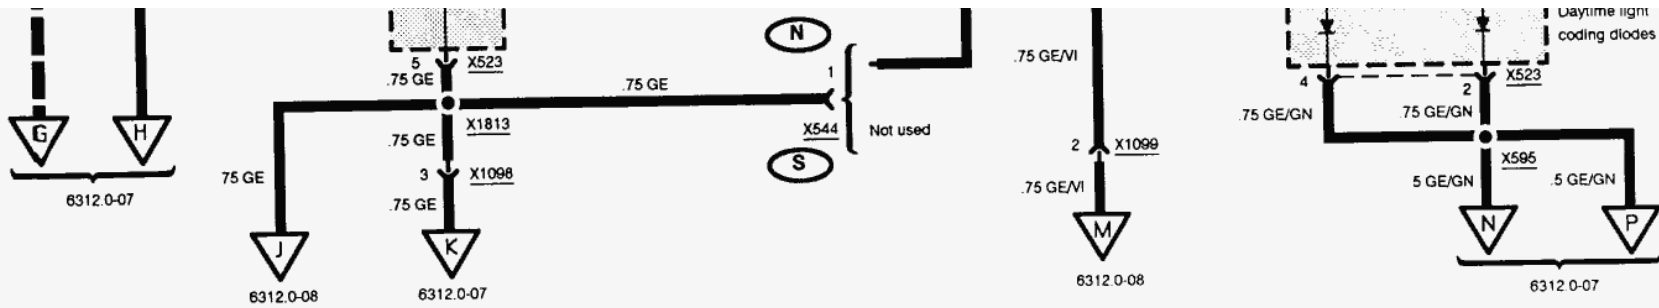

1994



**BMW 5** Headlight/fog light

(N) (S)

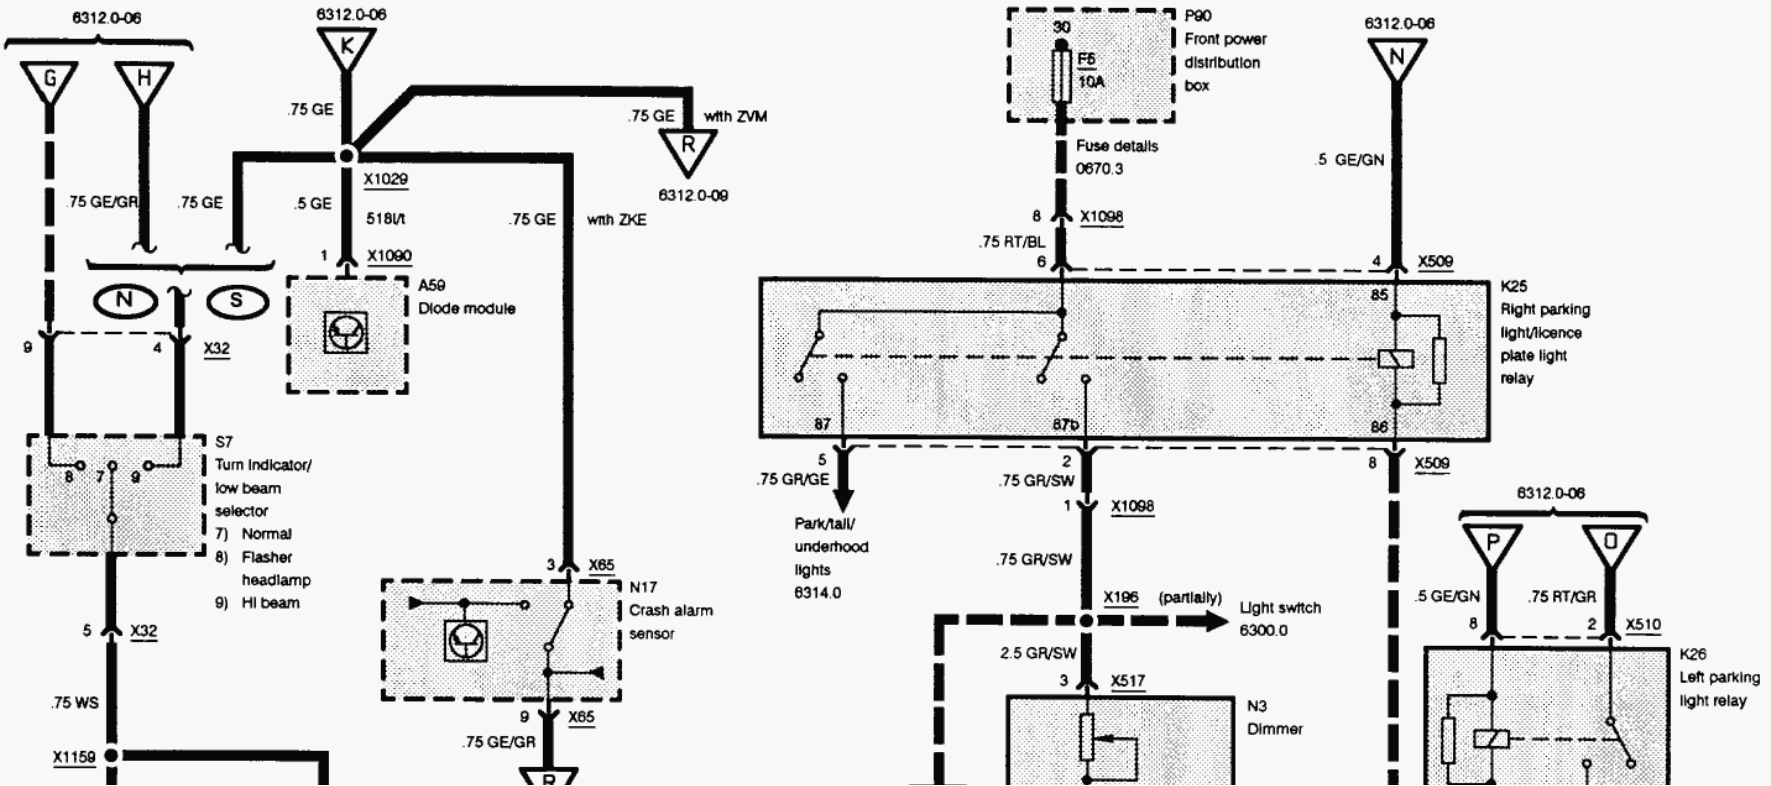


09/93

6312.0-07

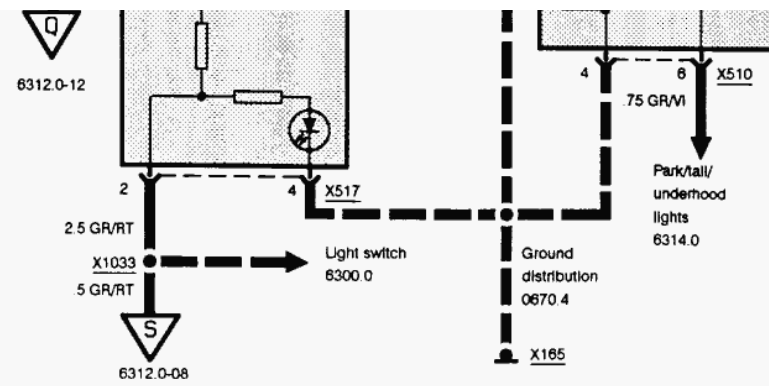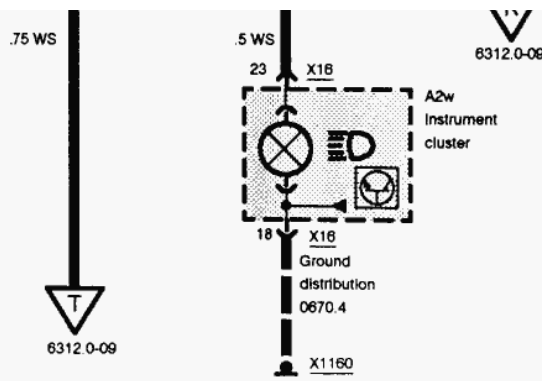


1994

**BMW 5** Headlight/fog light

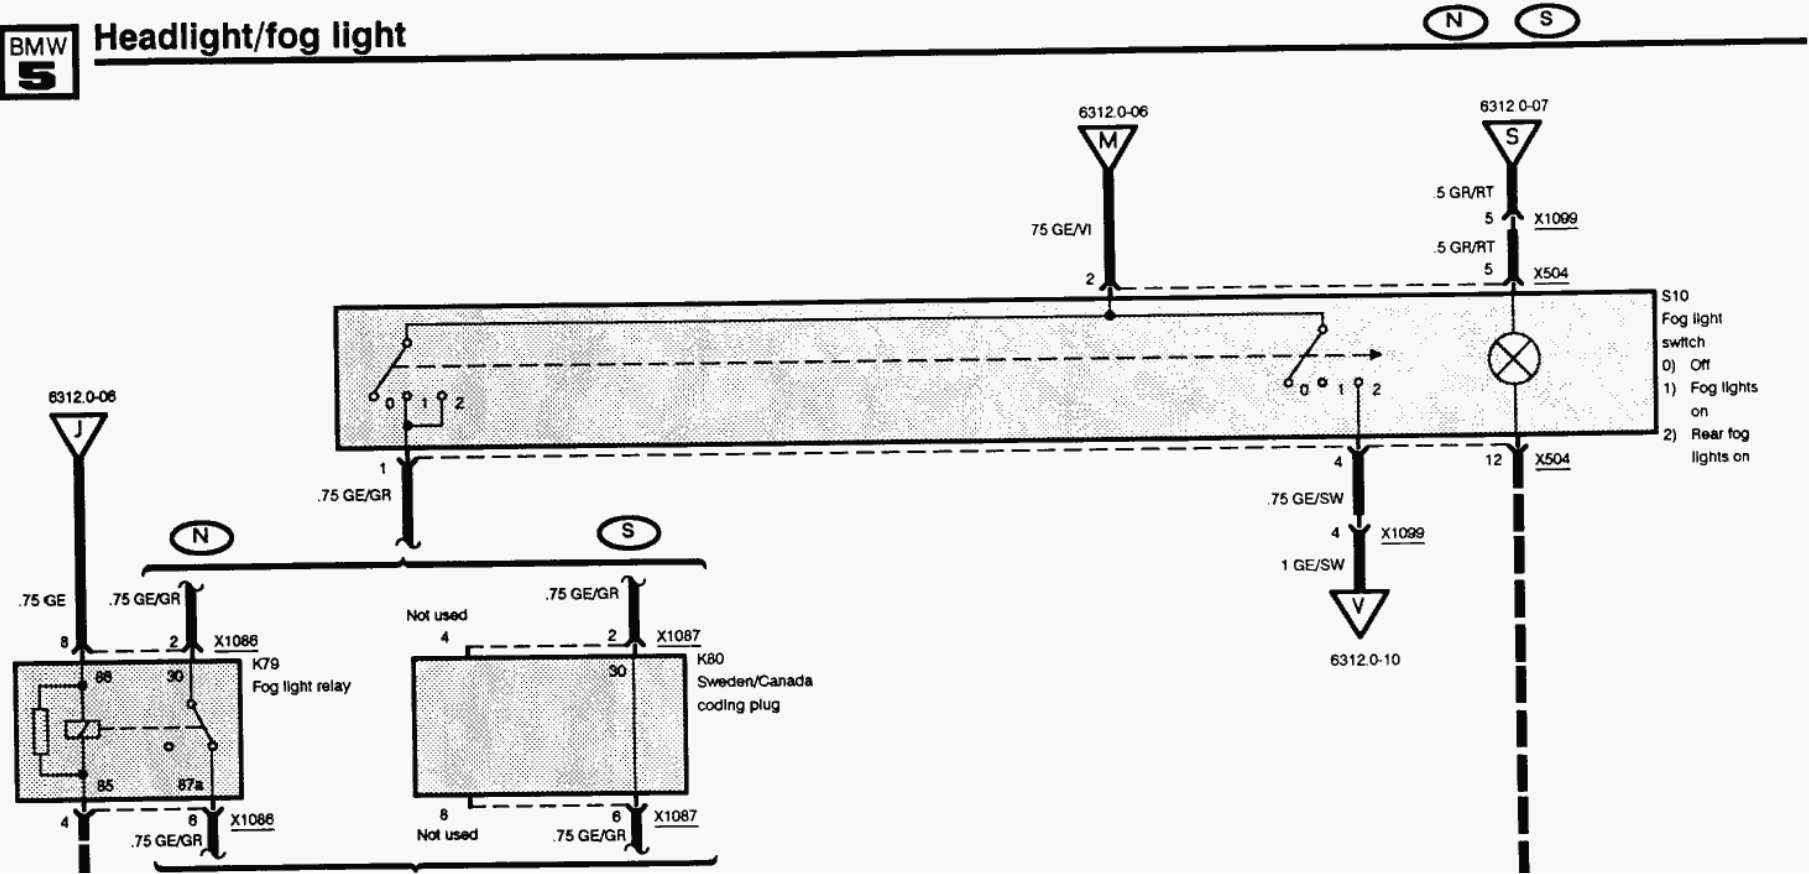


09/93

6312.0-08

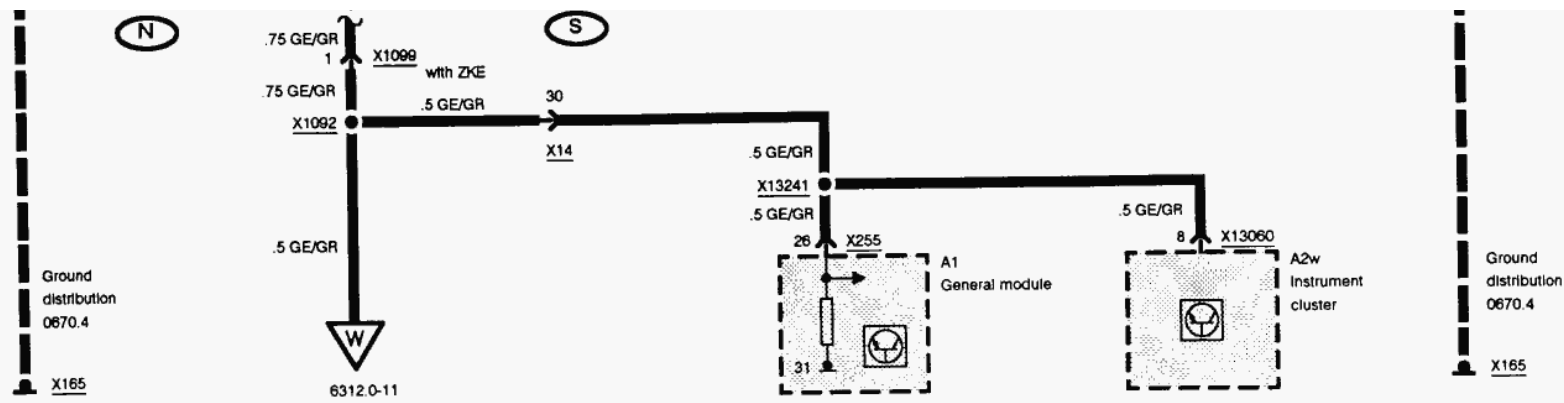



1994

**BMW 5** Headlight/fog light

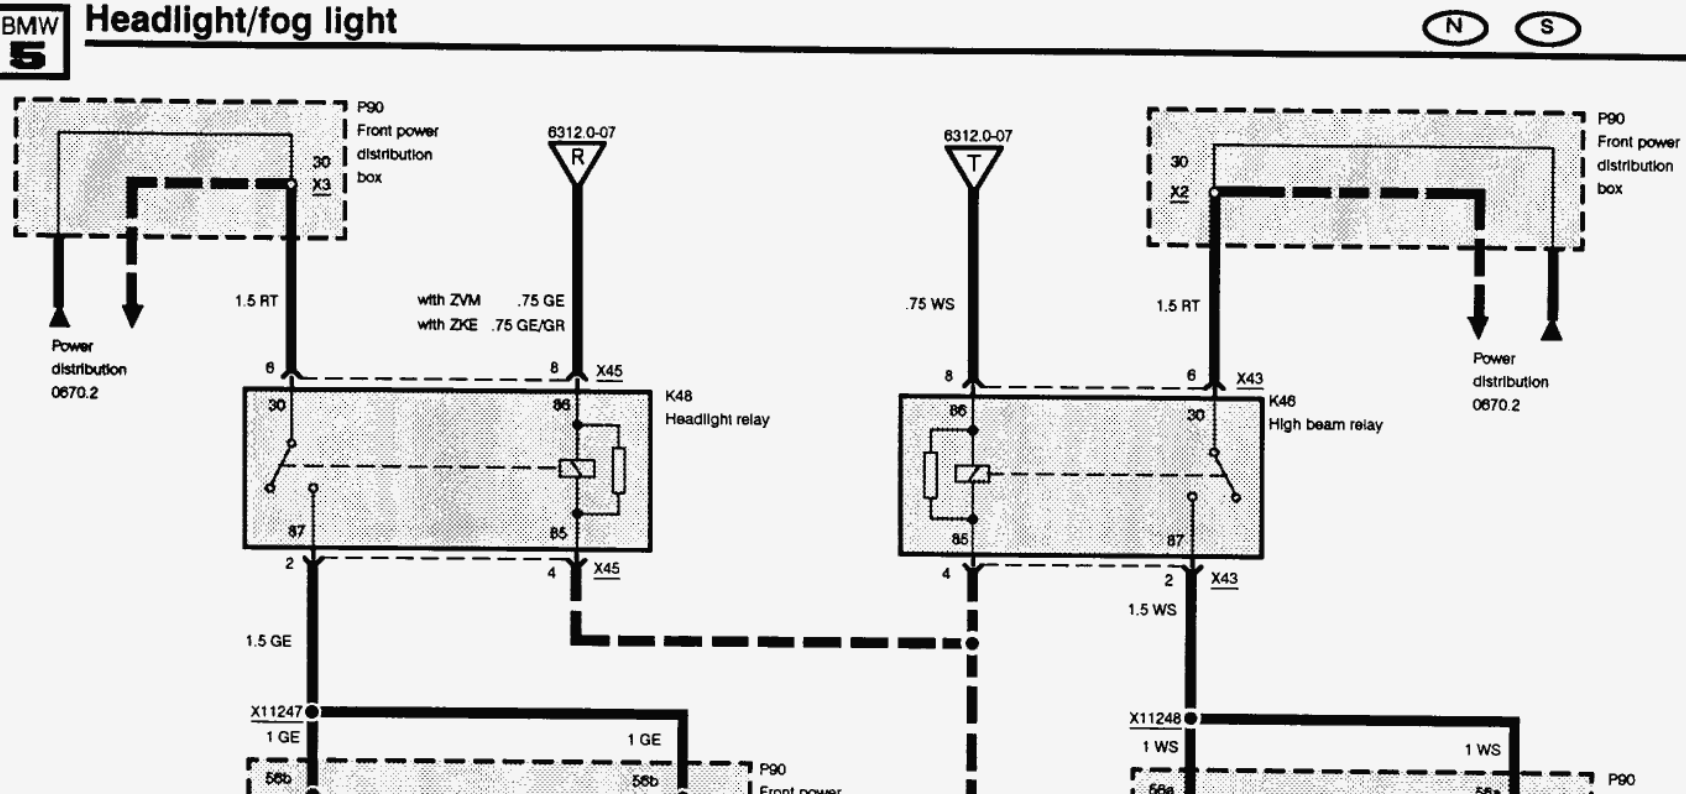

09/93


6312.0-09

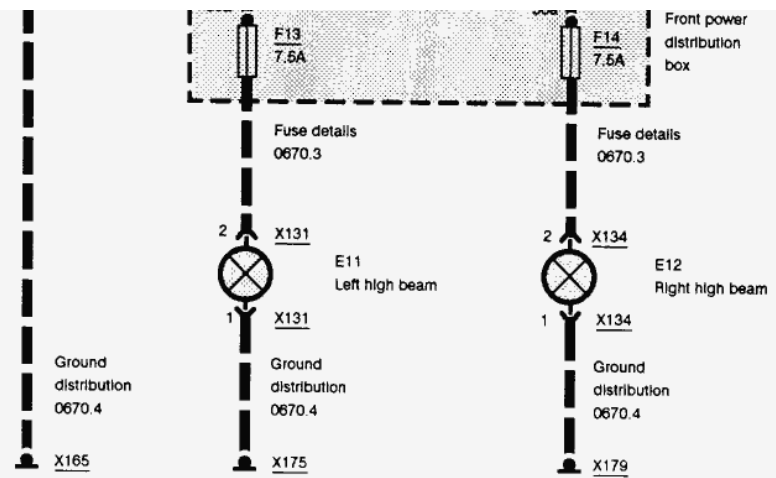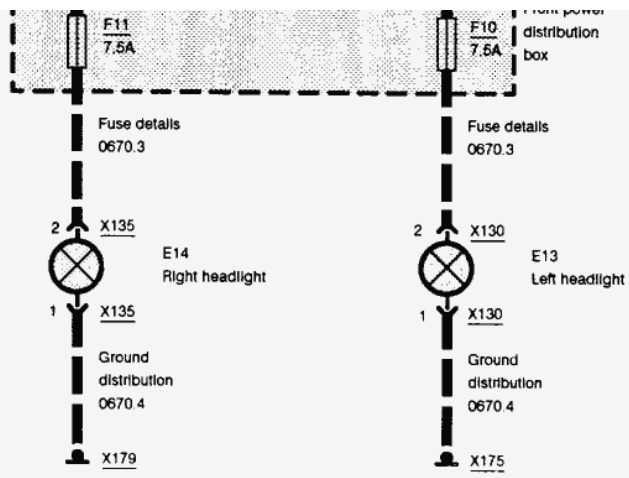

1994




**Headlight/fog light**

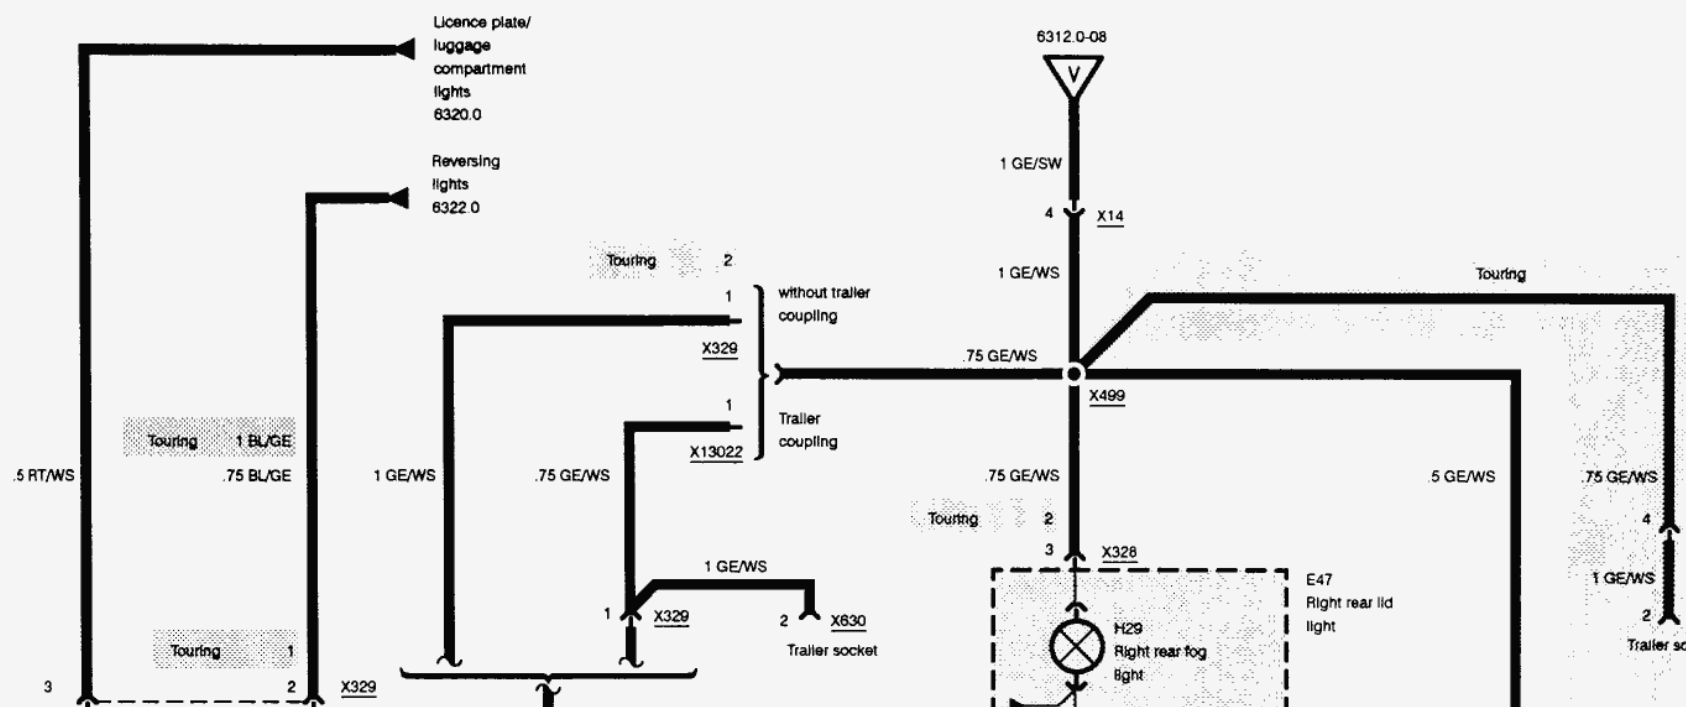

09/93


6312.0-10

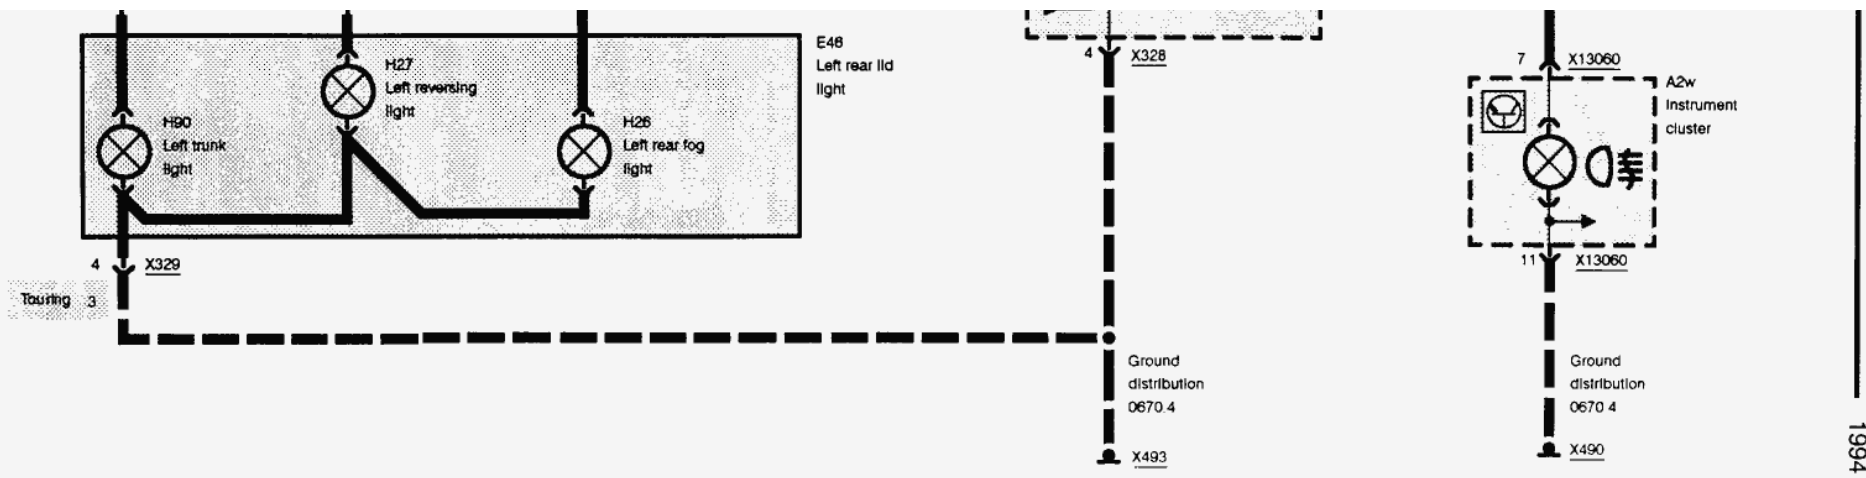

1994

**BMW 5** Headlight/fog light


(N) (S)

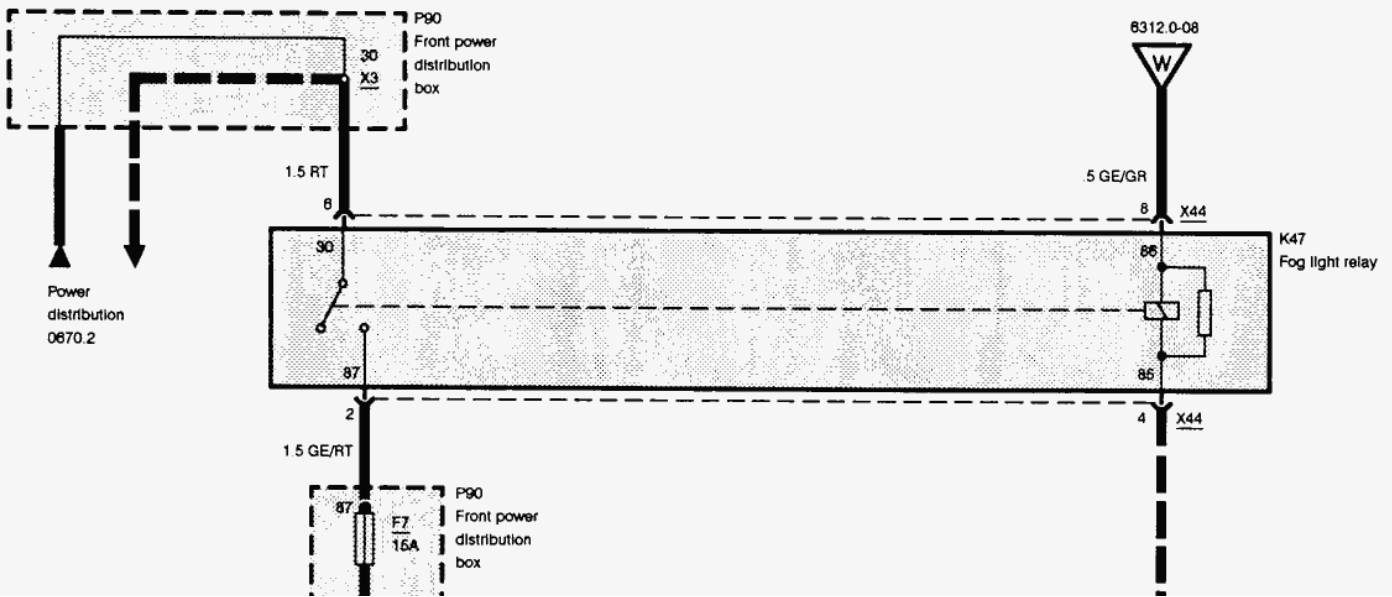

09/93


6312.0-





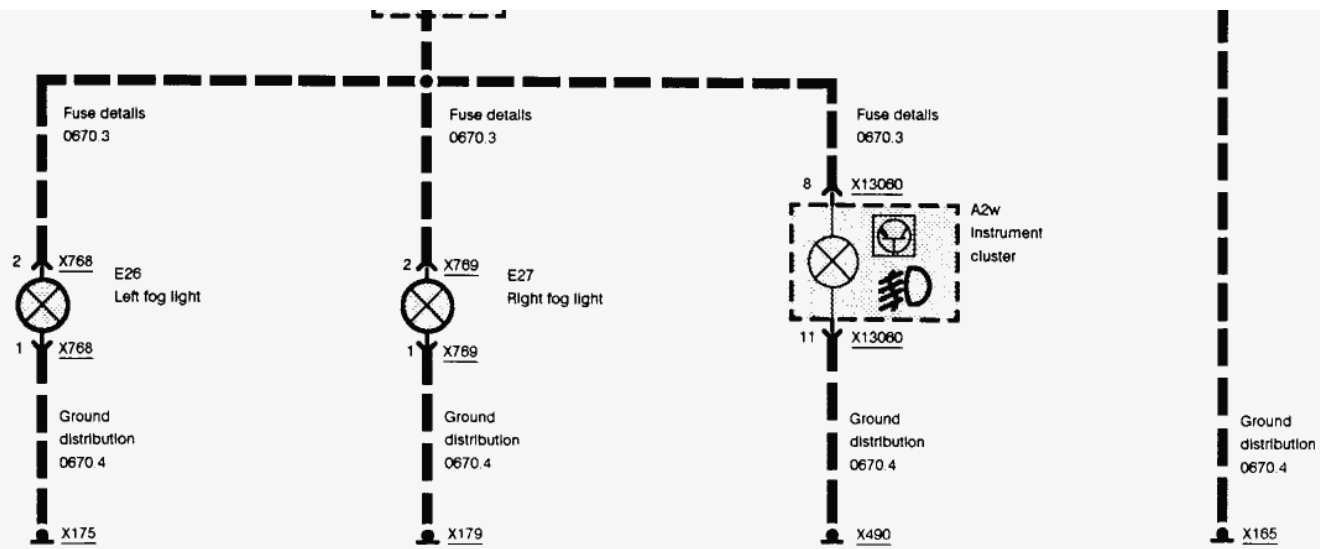


11  
1994

**BMW 5** **Headlight/fog light**  
**Headlight range adjustment**

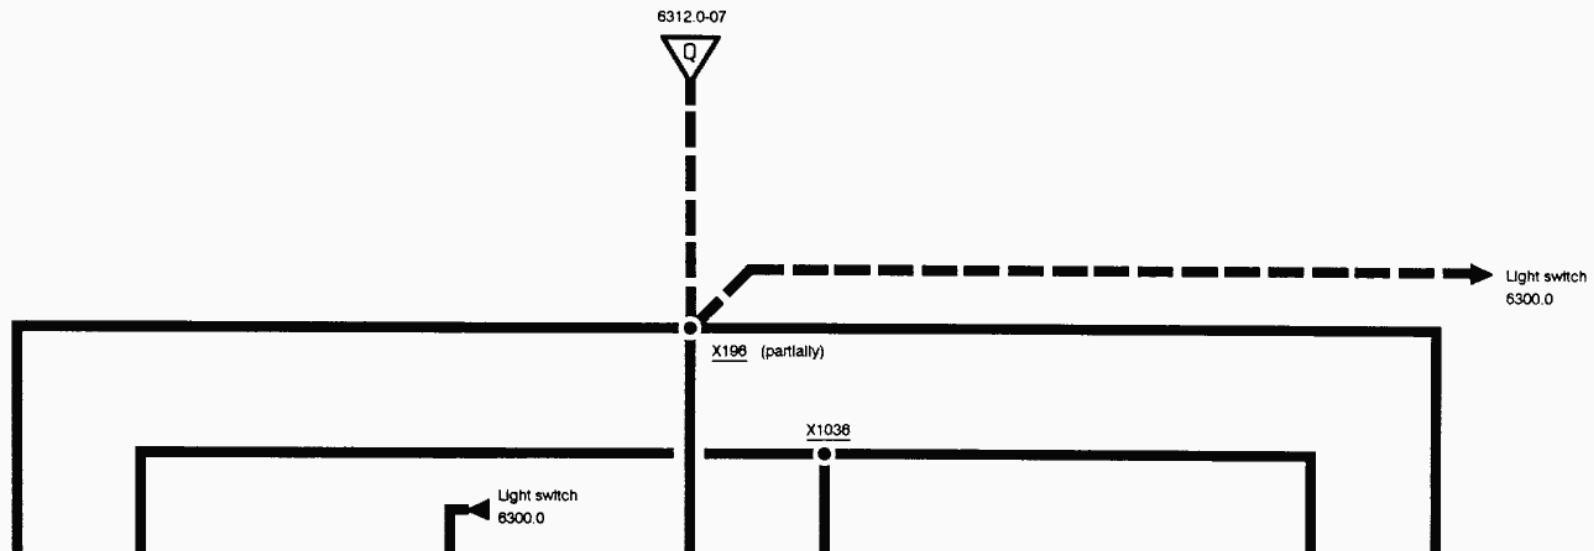

09/93  
6312.0-1

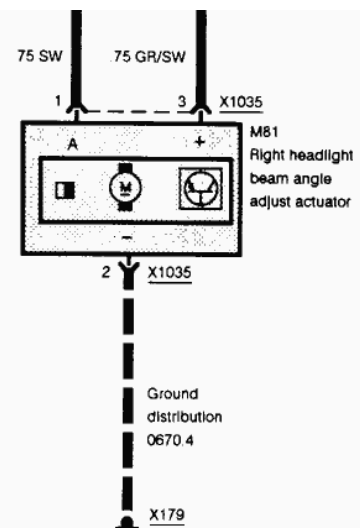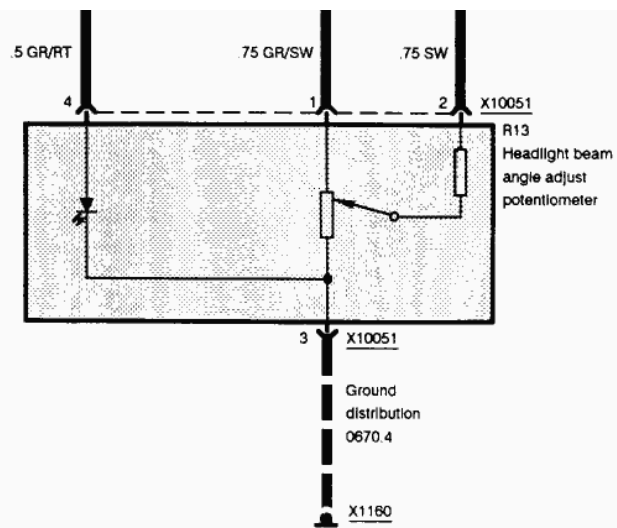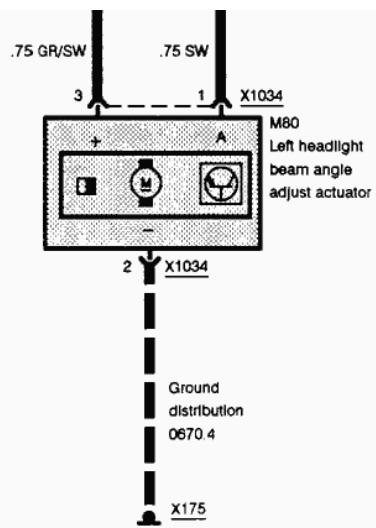

# BMWAG

## Electrical troubleshooting manual

### 5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


#### Turn signal/hazard warning system

#### Scheme 6313.0


09/93

6313.0-00

1994

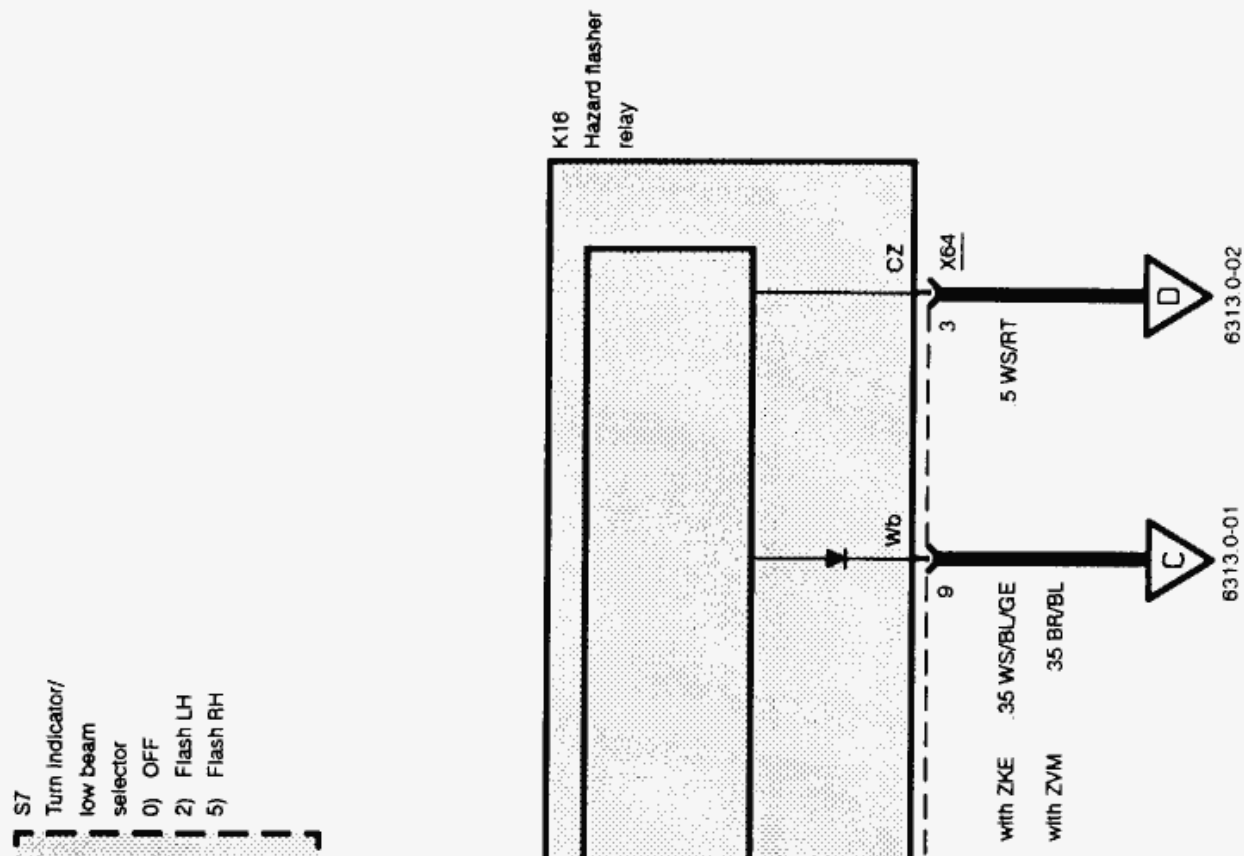

# Turn signal/hazard warning system

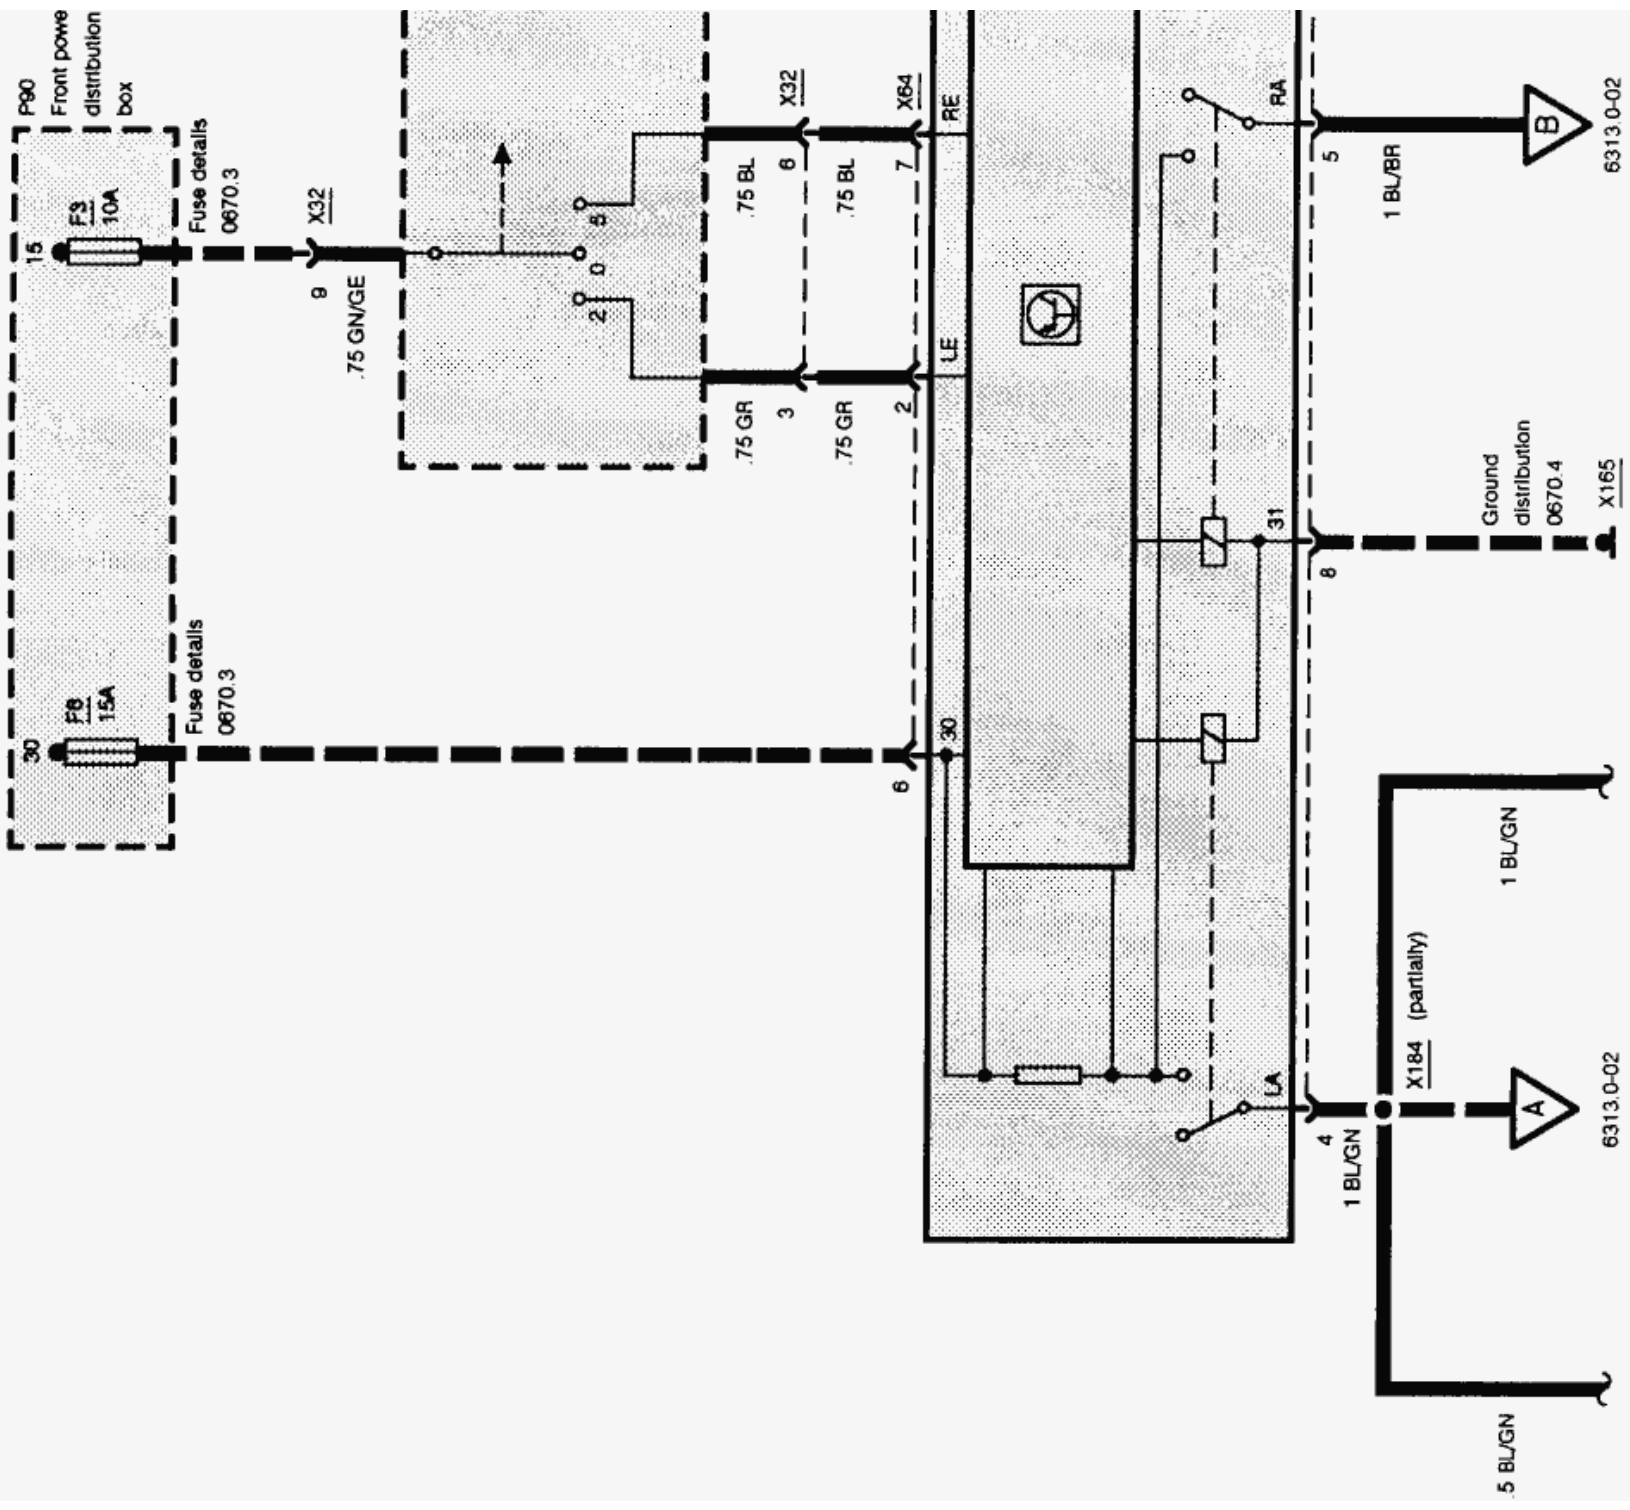





09/93


6313.0-01

1994

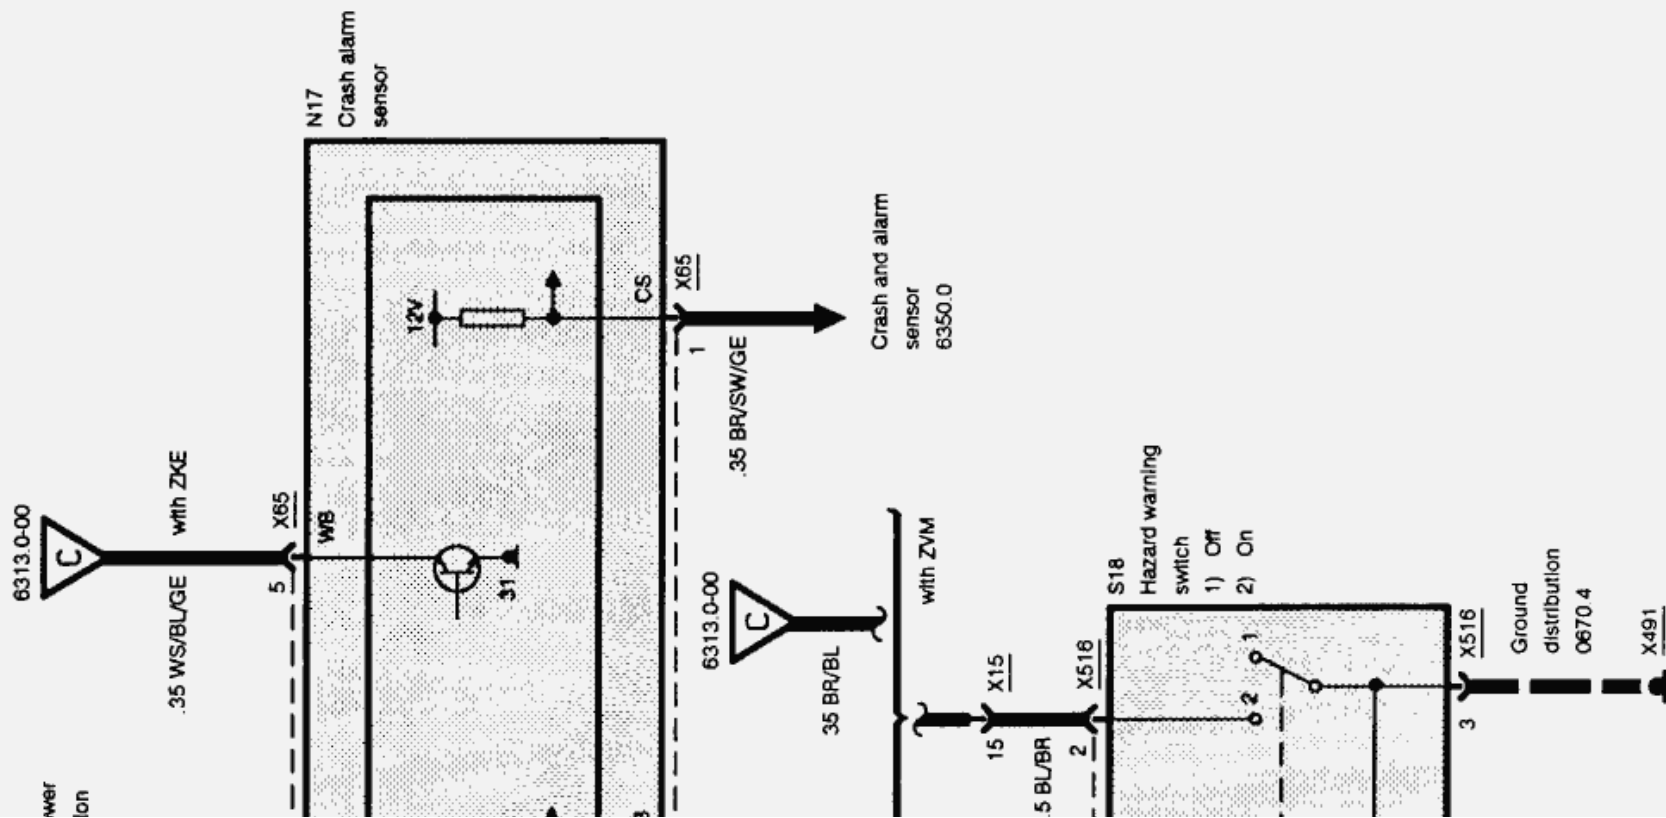


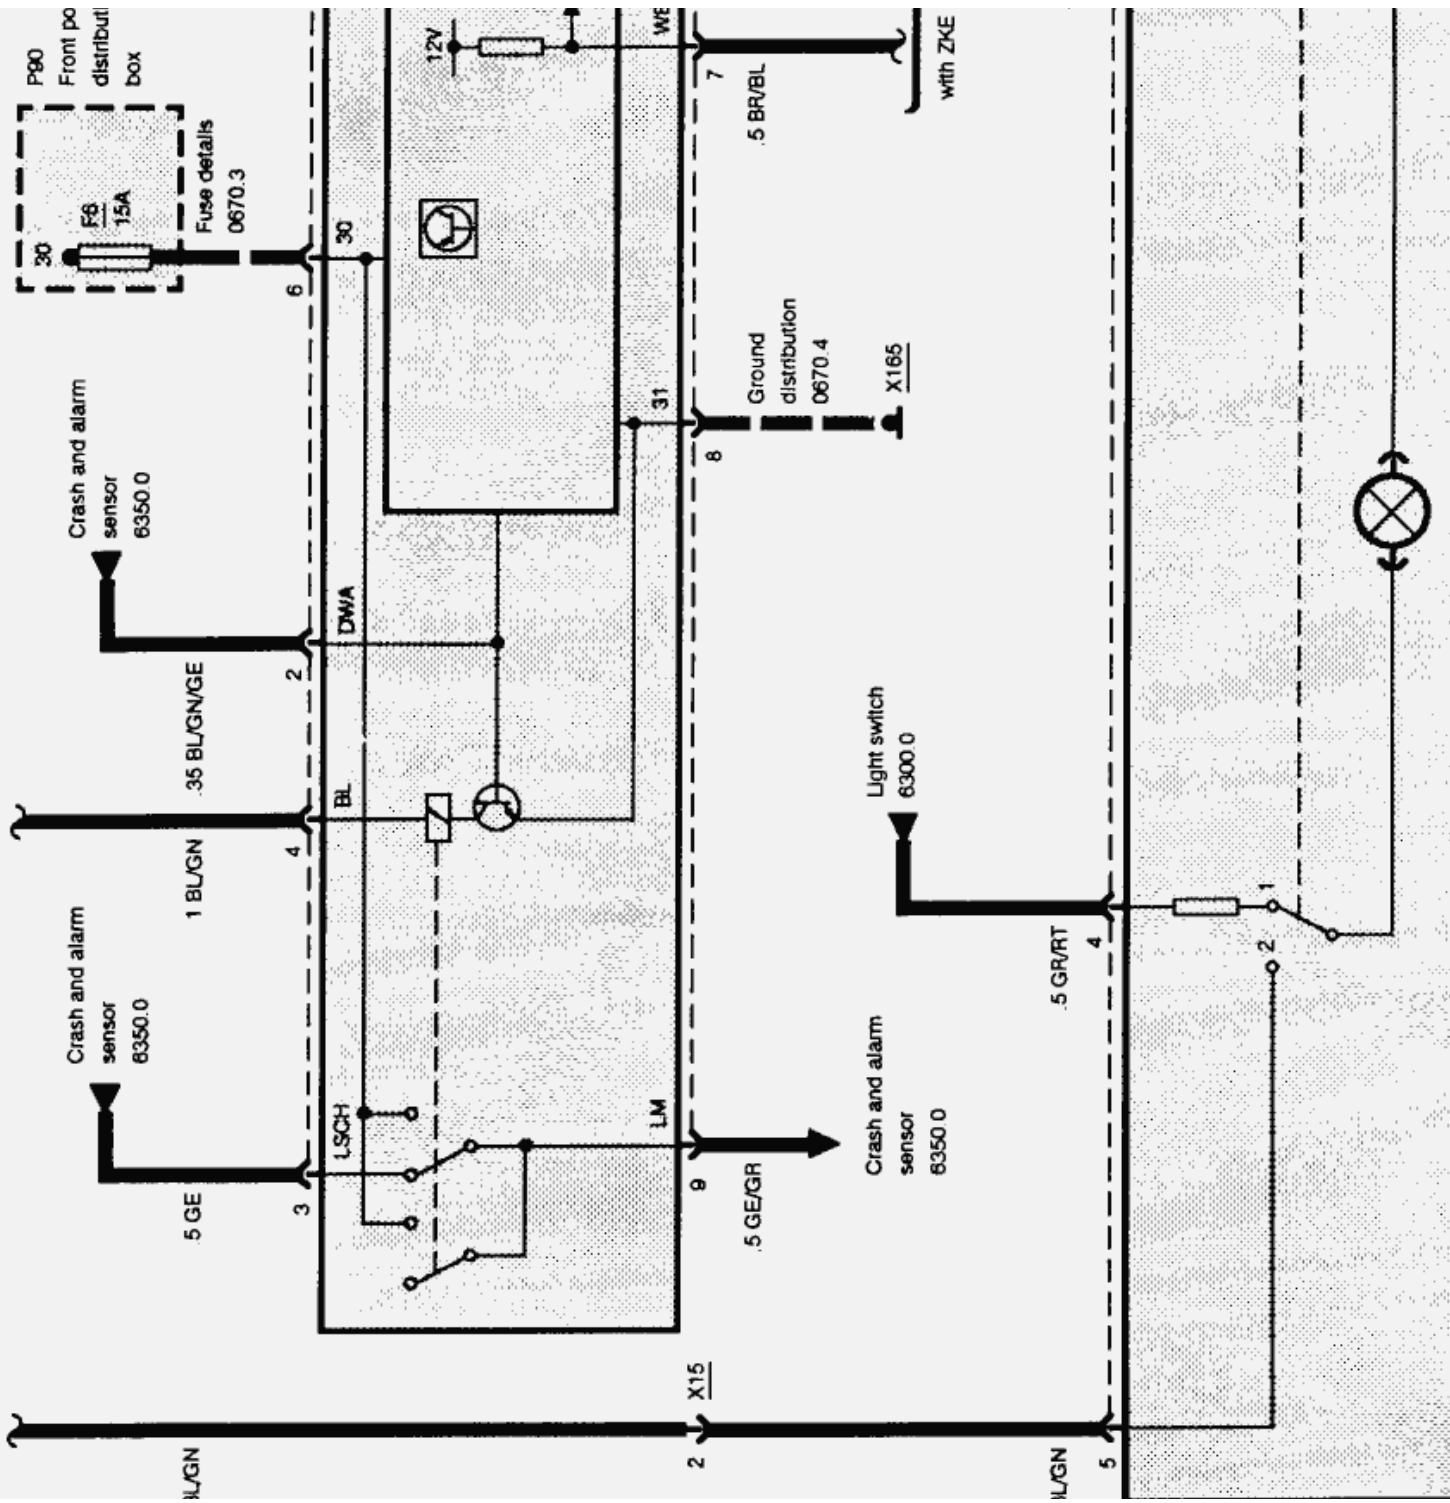

09/93 **6313.0-02** 1994

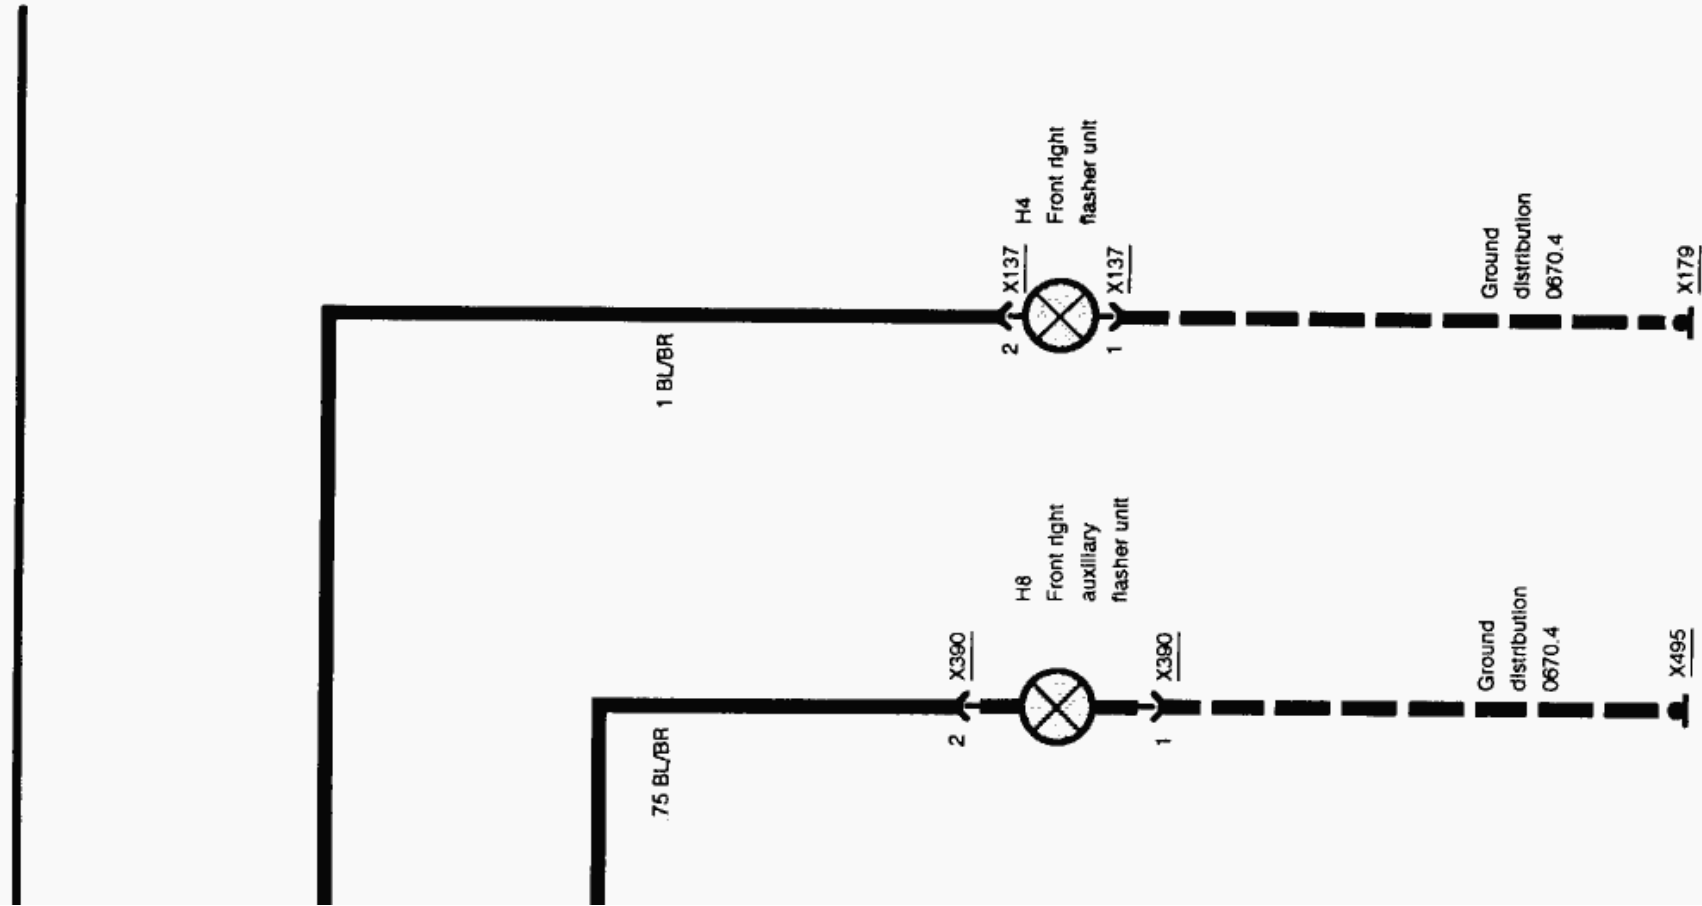

# Turn signal/hazard warning system

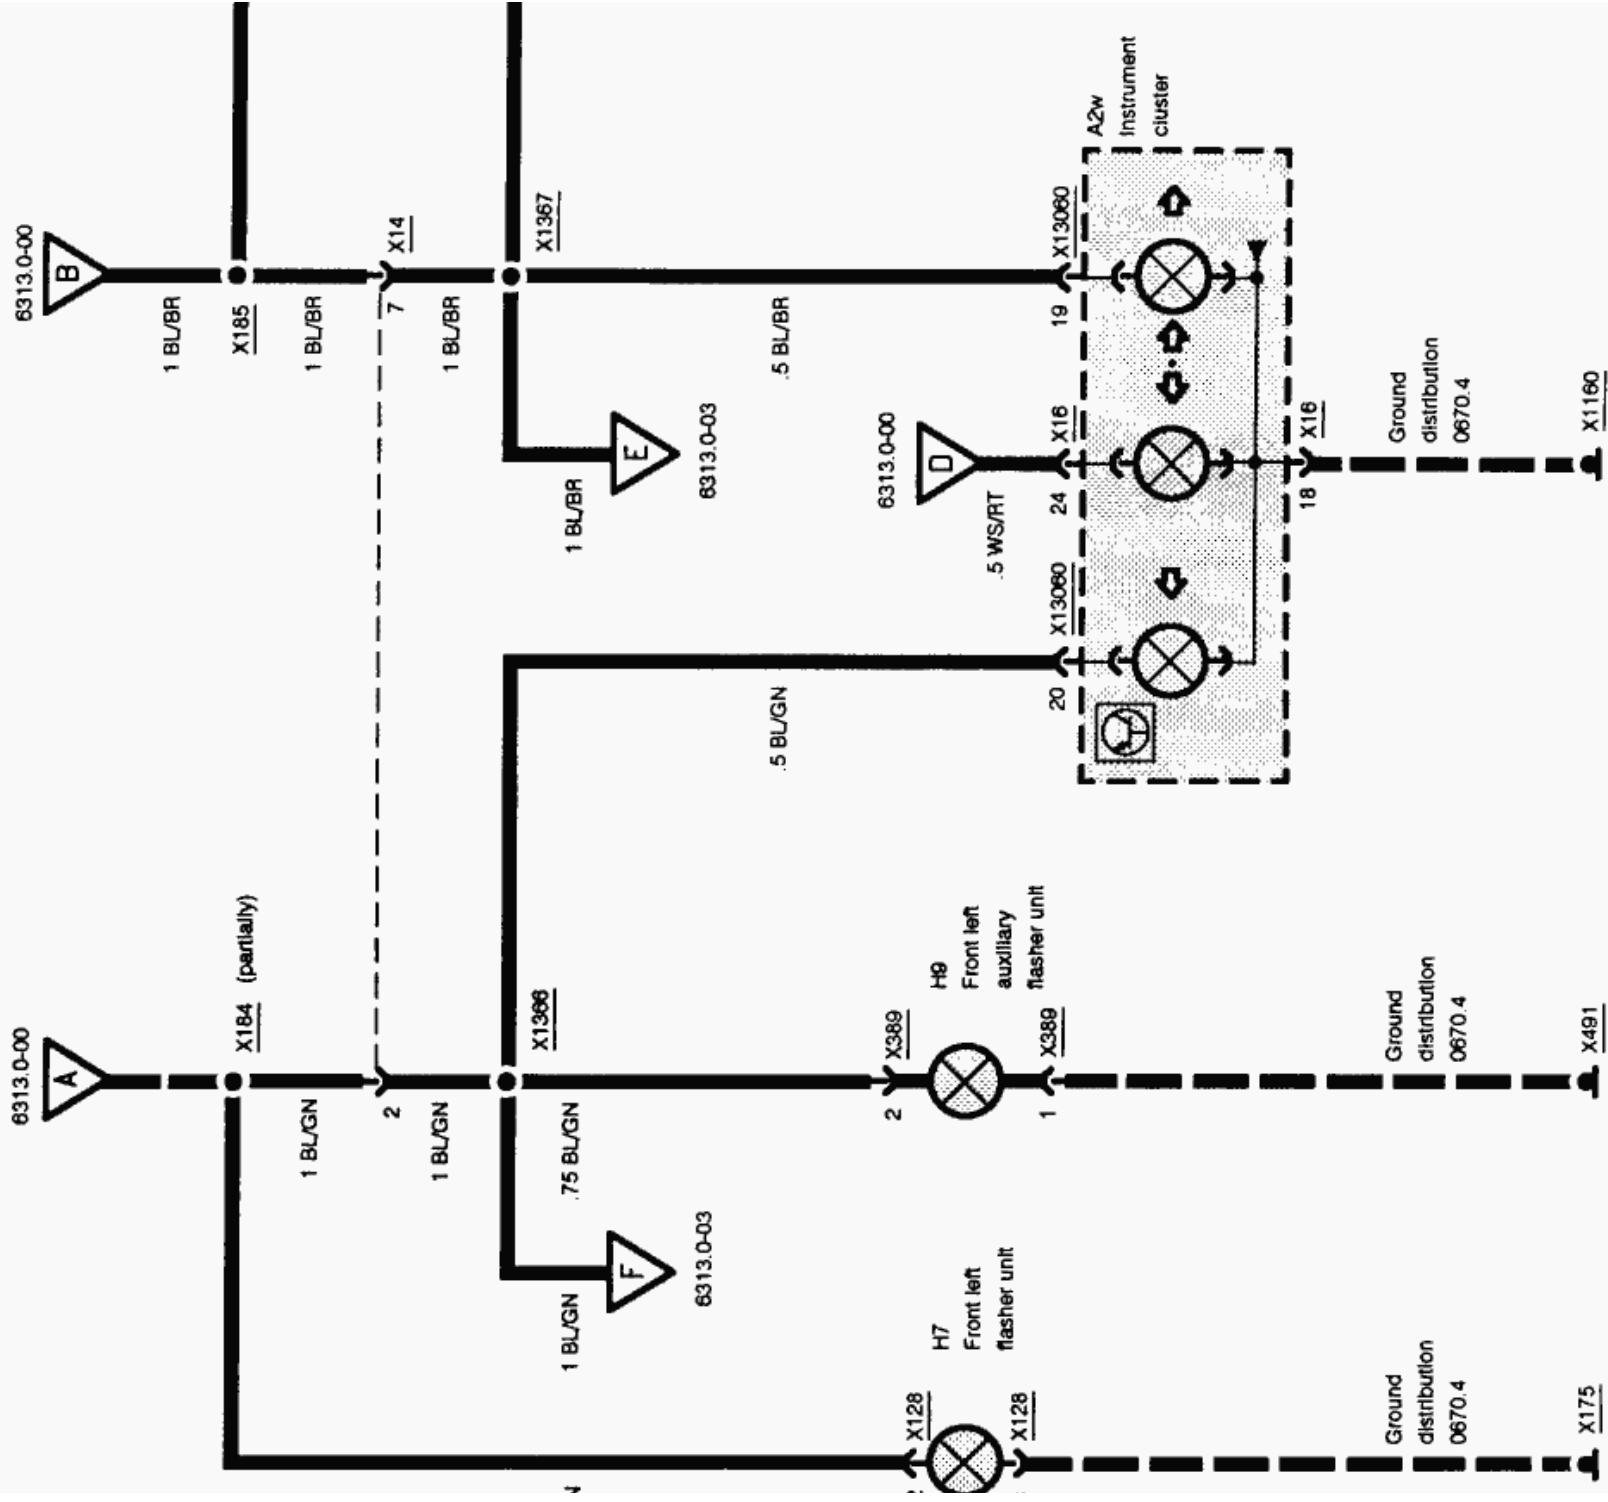





1 BU/GN


2 ( 1

09/93


6313.0-03

1994

without trailer  
coupling

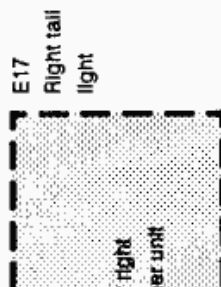

# horn signal/hazard warning system

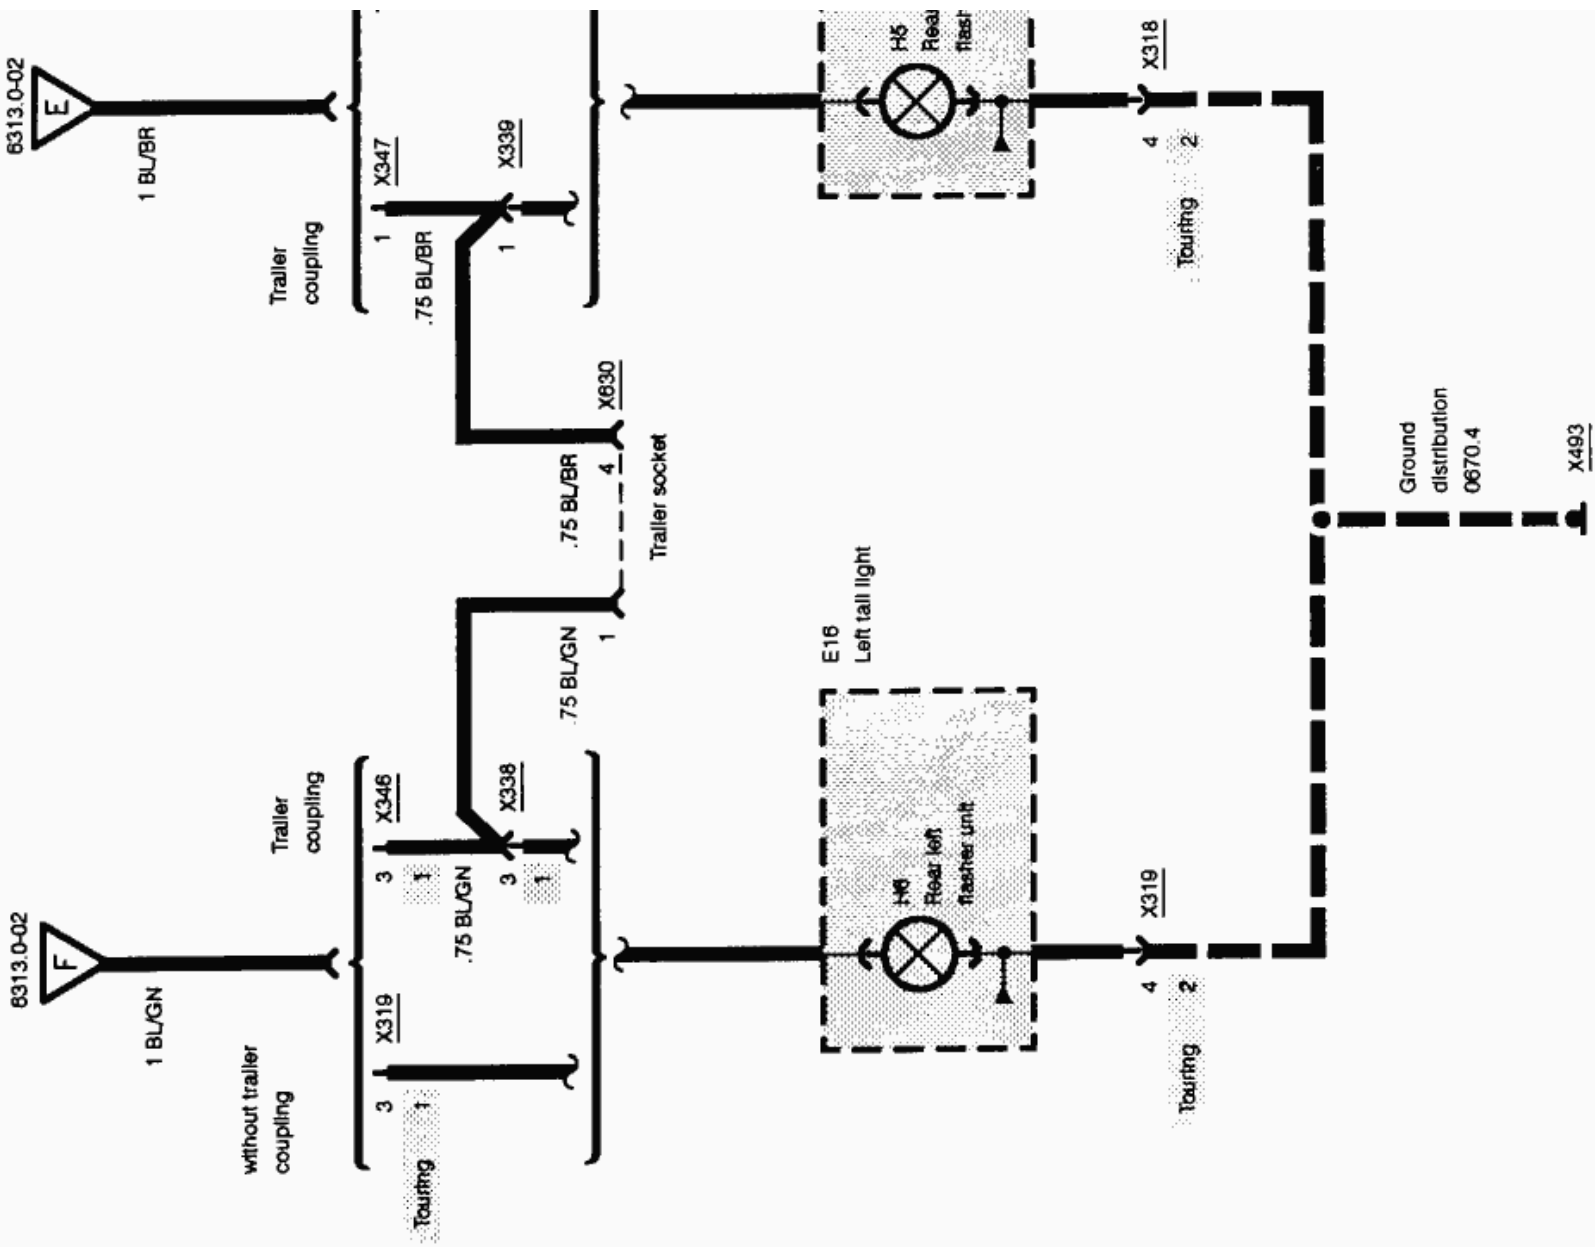



# BMWAG

## Electrical troubleshooting manual

### 5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

#### Fuse chart

#### Scheme 0670.1

		Fuses 1 to 29																												
		Fuse number																												
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29
		15A	7.5A	75A	75A	10A	15A	15A	15A	75A	7.5A	15A	7.5A	75A	30A	75A	15A	30A	10A	10A	20A	ISA	10A	30A	30A	30A	7.5A	15A	7.5A	
0670.5	Diagnostic link																													x
1210.8	Digital motor electronics (DME M1.7, 4-cylinder M40)							x															x		x				x	•
1210.10	Engine management MS40 (6-cylinder M50)									x								x		x		x								•
1220.0	Preheating system																	x												
1230.0	Alternator																													x
1240.0	Starter																		x											
1360.1	Digital diesel electronics (DDE 2, 6-cylinder M51 )	x																x					x						x	•
2460.2	Electronic transmission control (EGS A4S 310R)																		x											

2460.4	Electronic transmission control (EGS ASS 31 OZ)		X		X	
2460.5	Electronic transmission control (EGS ASS 31 OZ diesel)		X		X	
3231.0	Electronic steering column control					
3234.0	Airbag (AB)					
3240.0	Servotronic Antilock					X
3450.0	brake system (ABS)	X			X	
5116.0	Power mirrors		X			X
5120.0	Door lock heating (ZKE/TSH)				X	
5120.1	Door lock heating (ZVM/TSH)					
5126.0	Central locking system (ZKE/ZV)					
5126.1	Central locking module (ZVM)	X				
5133.0	Power windows (ZKE/FH)				X	
5146.0	Electric sun shades					X
5200.0	Power seats					

<b>5203.0</b>	<b>Heated seats</b>					<b>x</b>			
<b>5212.0</b>	<b>Lumbar support</b>					<b>x</b>			
<b>5410.0</b>	<b>Sunroof (ZKE/SHD)</b>								
<b>5410.2</b>	<b>Double-panel sunroof (ZKE)</b>								
<b>5410.3</b>	<b>Double-panel sunroof (ZVM)</b>								
<b>6100.0</b>	<b>Central body electronics (ZKE)</b>	<b>x</b>	<b>x</b>	<b>x</b>			<b>x</b>		<b>x</b>
<b>6133.0</b>	<b>Horn</b>				<b>x</b>				
<b>6160.0</b>	<b>Windscreen wipe/wash system (ZKE)</b>	<b>x</b>							<b>x</b>
<b>6160.1</b>	<b>Wipe/wash module (WWW)</b>								<b>x</b>
<b>6162.0</b>	<b>Rear window wipe/wash system</b>						<b>x</b>		
<b>6167.0</b>	<b>Headlight washer (ZKE/SRA)</b>	<b>x</b>	<b>x</b>	<b>x</b>			<b>x</b>		<b>x</b>
<b>6169.0</b>	<b>Windscreen washer jet heaters</b>				<b>x</b>				
<b>6200.3</b>	<b>Instrument cluster (redesigned standard version)</b>	<b>x</b>					<b>x</b>	<b>x</b>	
<b>6213.0</b>	<b>Clock</b>							<b>x</b>	

6213.2	Multi-function clock	x											x	
6300.0	Light switch		x	x	x	x								
6312.0	Headlight/fog light		x	x	x	x		x	x			x	x	
6313.0	Turn signal/hazard warning system			x				x						
6314.0	Park/tail/underhood lights				x	x								
6320.0	Licence plate/luggage compartment lights					x								x
6322.0	Reversing lights								x					
6325.0	Brake lights	x												
6328.1	Trailer coupling													
6330.0	Interior light control (ZKE/I B)				x	x				x	x			x
6330.1	ZVM Interior lights				x	x					x			x
6332.0	Interior					x					x			x
6350.0	Crash and alarm sensor		x					x	x					
6410.1	Automatic heating control (HR34) - digital							x					x	•

6410.6	Automatic heating control (IHRF3)		X			X			X	•
6412.0	Independent heating/ventilation with IHKA	X				X	X		X	
6412.1	Independent heating/ventilation with HR34	X				X			X	
6412.2	Independent ventilation with IHKA					X	X		X	
6412.3	Independent ventilation with HR34					X	X		X	
6412.14	Independent heating/ventilation with IHRF3	X				X			X	
6412.15	Independent ventilation with IHRF3					X	X		X	
6412.18	Independent heating/ventilation with IHKR/F3	X				X	X		X	
6412.19	Independent ventilation with IHKR/3					X	X			
6424.0	Rear window defogger/antenna									
6430.0	Automatic circulating air control (AUC)								X	



6450.0	Automatic climate control (IHKA)							X												X	X							X	•	
6450.5	Automatic climate control with fitter (IHKR/F3)							X													X	X						X	•	
6454.0	Auxiliary fan																				X								•	
6510.0	Radio/stereo																										X			
6510.1	Radio/HiFi																										X			
6510.2	Radio provisions																										X			
6561.0	Cellular telephone																										X			
6571.0	Cruise control	X																									X			
6575.1	Antitheft system III (DWA III)	X																									X			
6581.0	On-board computer (BC IV)	X																									X			
6610.0	Infrared locking system (IR)																										X			
6621.0	Park distance control (PDC)																										X			
6740.0	Special option- Taxi		X	X	X	X																					X			X

Fuses 30 to 61

Fuse number

Fuses 30, 38, 39, 48 and 49 not used	30	31	32	33	34	35	36	37	40	41	42	43	44	45	46	47	50	51	52	53	54	55	56	57	58	59	60	61
	7.5A	7.5A	7.5A	7.5A	30A	30A	30A	20A	7.5A	30A	30A	30A	20A	20A	30A	10A	30A	25A	10A	30A	15A	7.5A	1SA	7.5A	7.5A	7.5A	7.5A	7.5A

**0670.5 Diagnostic link**

**1210.8 Digital motor electronics (DME M1.7, 4-cylinder M40)**

**1210.10 Engine management MS40 (6-cylinder M50)**

**1220.0 Preheating system**

**1230.0 Alternator**

**1240.0 Starter**

**1360.1 Digital diesel electronics (DDE 2, 6-cylinder M51 )**

**2460.2 Electronic transmission control (EGS A4S 31 OR)**

**2460.4 Electronic transmission control (EGS ASS 31 OZ)**

**2460.5 Electronic transmission control (EGS ASS 31 OZ diesel)**

**3231.0 Electronic steering column control**

**x**

**x**

**3234.0 Airbag (AB)**

**x**

**3240.0 Servotronic**

**3450.0 Antilock brake system (ABS)**

**5116.0 Power mirrors**


5120.0	Door lock heating (ZKE/TSH)		x					
5120.1	Door lock heating (ZVM/TSH)		x			x		
5126.0	Central locking system (ZKE/ZV)		x	x		x		x
5126.1	Central locking module (ZVM)		x	x				x
5133.0	Power windows (ZKE/FH)		x			x		
5146.0	Electric sun shades	x						
5200.0	Power seats				x		x	
5203.0	Heated seats							
5212.0	Lumbar support							
5410.0	Sunroof (ZKE/SHO)		x			x		
5410.2	Double-panel sunroof (2KE)		x					
5410.3	Double-panel sunroof (ZVM)		x					x
6100.0	Central body electronics (ZKE)		x			x		
6133.0	Horn							
6160.0	Windscreen wipe/wash system (ZKE)							x
6160.1	Wipe/wash module (WWM)							x

6162.0	Rear window wipe/wash system	x
6167.0	Headlight washer (ZKE/ SRA)	
6169.0	Windscreen washer jet heaters	
6200.3	Instrument cluster (redesigned standard version)	
6213.0	Clock	
6213.2	Multi-function clock	
6300.0	Light switch	
6312.0	Headlight/fog light	
6313.0	Turn signal/ hazard warning system	
6314.0	Park/tail/ underhood lights	
6320.0	Licence plate/ luggage compartment lights	
6322.0	Reversing lights	
6325.0	Brake lights	
6328.1	Trailer coupling	x

6330.0	Interior light control (ZKE/B)	x			
6330.1	ZVM Interior lights	x			
6332.0	Interior				
6350.0	Crash and alarm sensor				
6410.1	Automatic heating control (HR34) - digital				
6410.6	Automatic heating control (IHRF3)				
6412.0	Independent heating/ventilation with IHKA		x	x	
6412.1	Independent heating/ventilation with HR34		x	x	x
6412.2	Independent ventilation with IHKA				
6412.3	Independent ventilation with HR34				x
6412.14	Independent heating/ventilation with IHRF3		x	x	x
6412.15	Independent ventilation with IHRF3				
6412.18	Independent heating/ventilation with IHKR/F3		x	x	x

<b>6412.19</b>	<b>Independent ventilation with I HKR/3</b>									
<b>6424.0</b>	<b>Rear window defogger/ antenna</b>									<b>x</b>
<b>6430.0</b>	<b>Automatic circulating air control (AUC)</b>									
<b>6450.0</b>	<b>Automatic climate control (IHKA)</b>									
<b>6450.5</b>	<b>Automatic climate control with filter (IHKR/F3)</b>									
<b>6454.0</b>	<b>Auxiliary fan</b>									
<b>6510.0</b>	<b>Radio/stereo</b>									<b>x</b>
<b>6510.1</b>	<b>Radb/HiFi</b>									<b>x</b>
<b>6510.2</b>	<b>Radio provisions</b>									<b>x</b>
<b>6561.0</b>	<b>Cellular telephone</b>							<b>x</b>		<b>x</b>
<b>6571.0</b>	<b>Cruise control</b>									
<b>6575.1</b>	<b>Antitheff system III (DWA III)</b>	<b>x</b>	<b>x</b>	<b>x</b>						
<b>6581.0</b>	<b>On-board computer (BC IV)</b>									
<b>6610.0</b>	<b>Infrared locking system (IR)</b>									<b>x</b>
<b>6621.0</b>	<b>Park distance control (PDC)</b>									
<b>6740.0</b>	<b>Special option-Taxi</b>									

# BMW 5 On-board computer (BC IV)

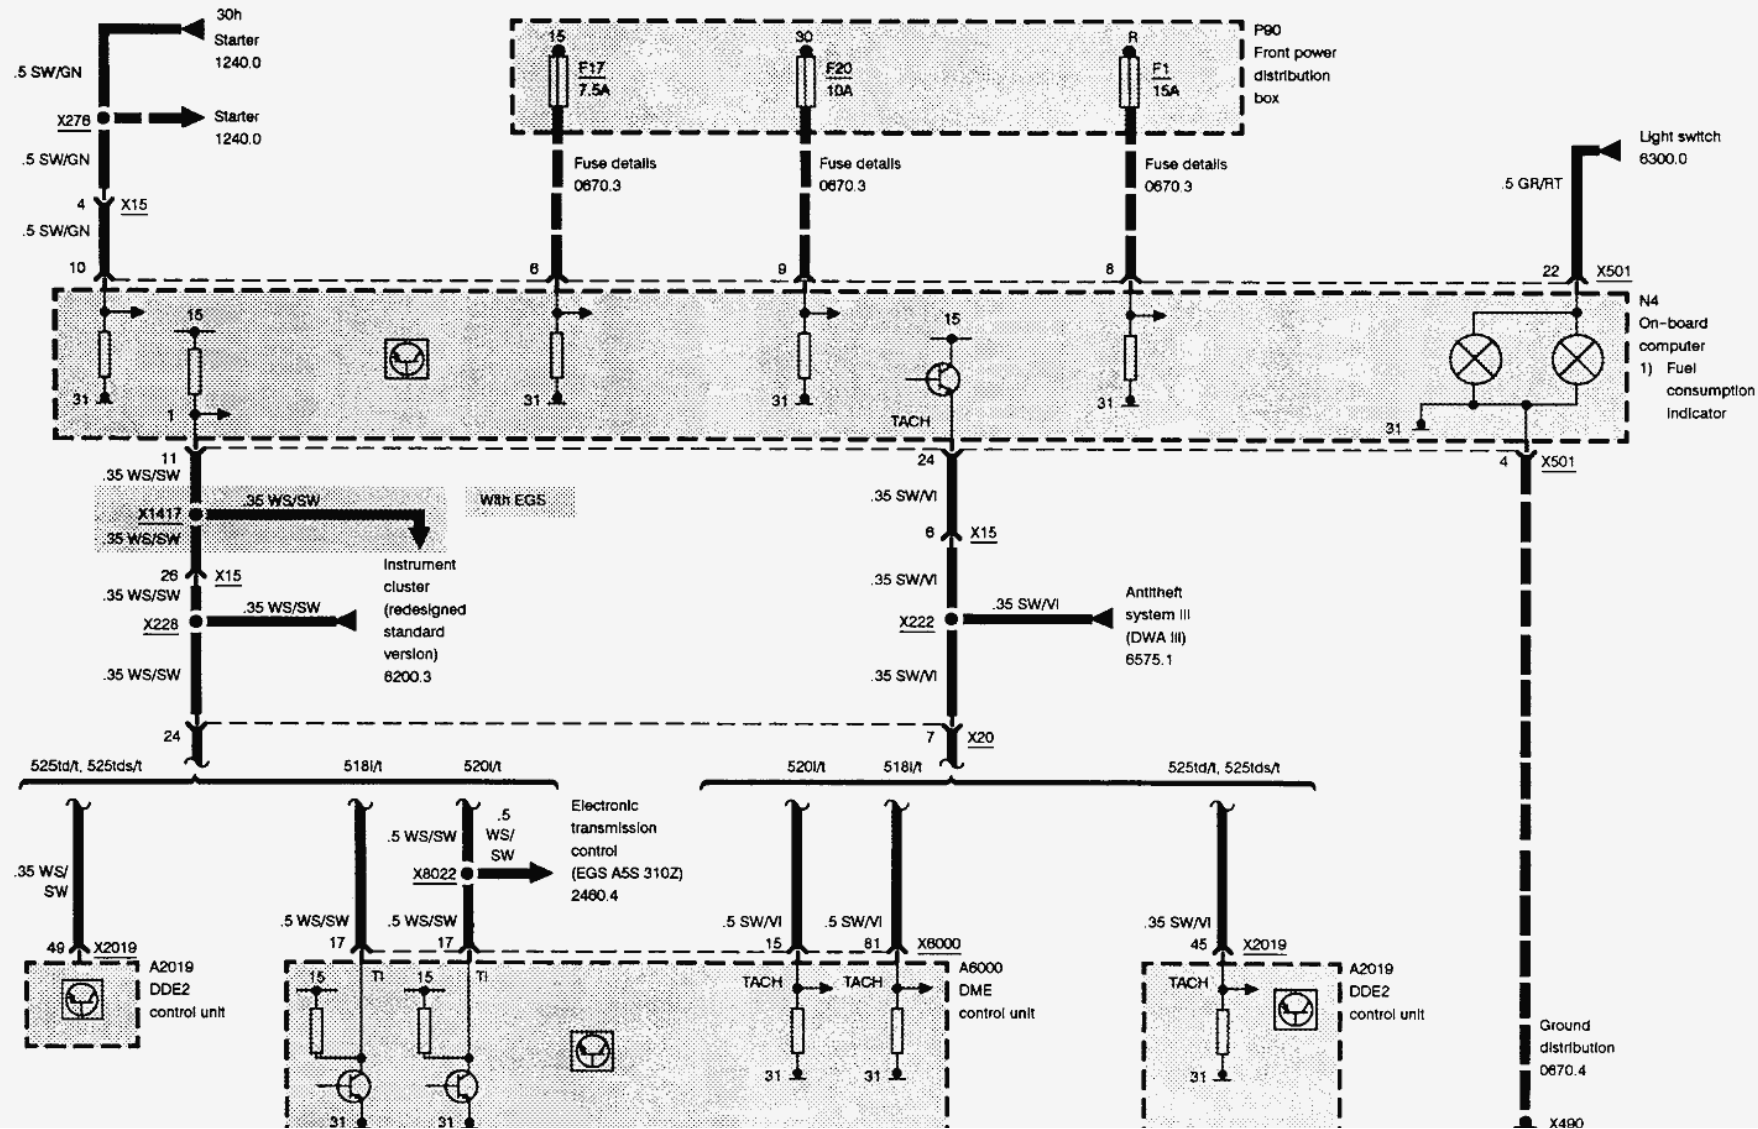


09/93


6581.0-00

199

**BMW 5** On-board computer (BC IV)

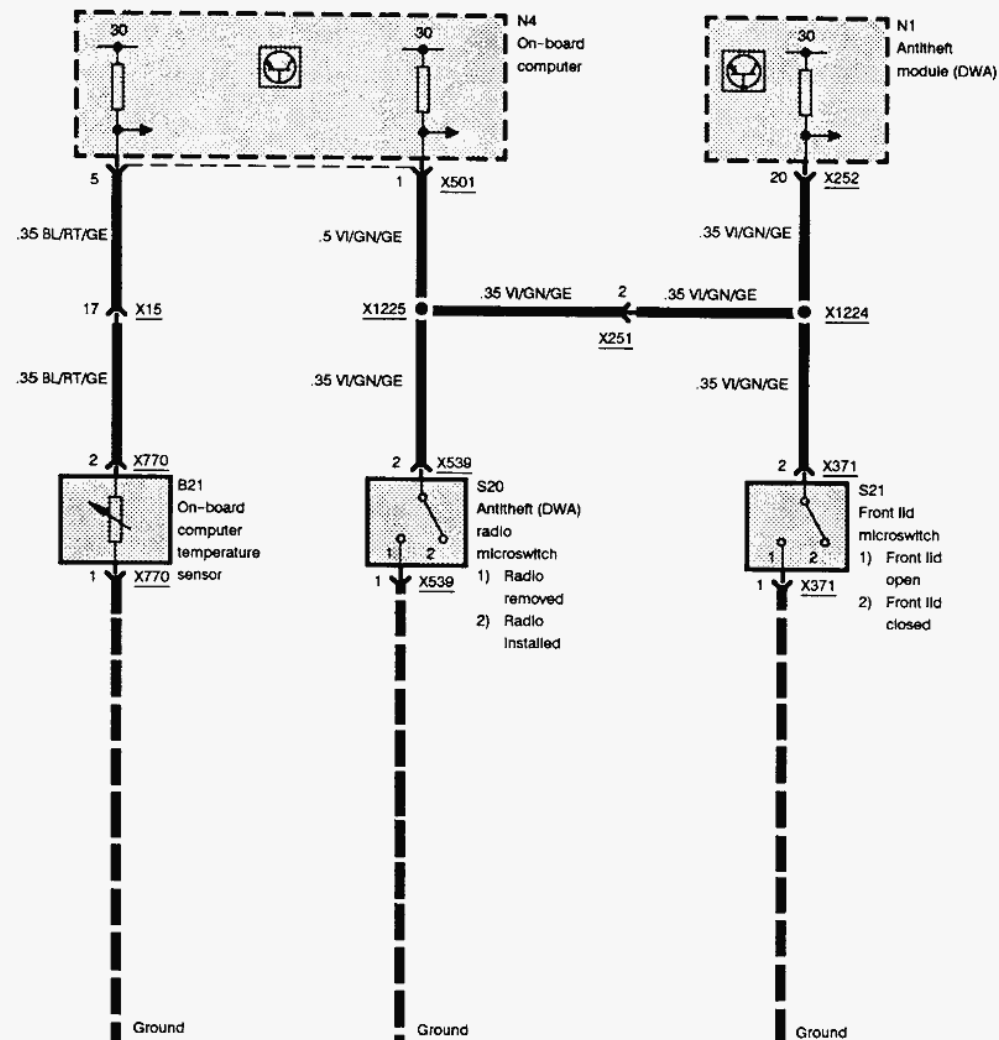

**Independent heating**

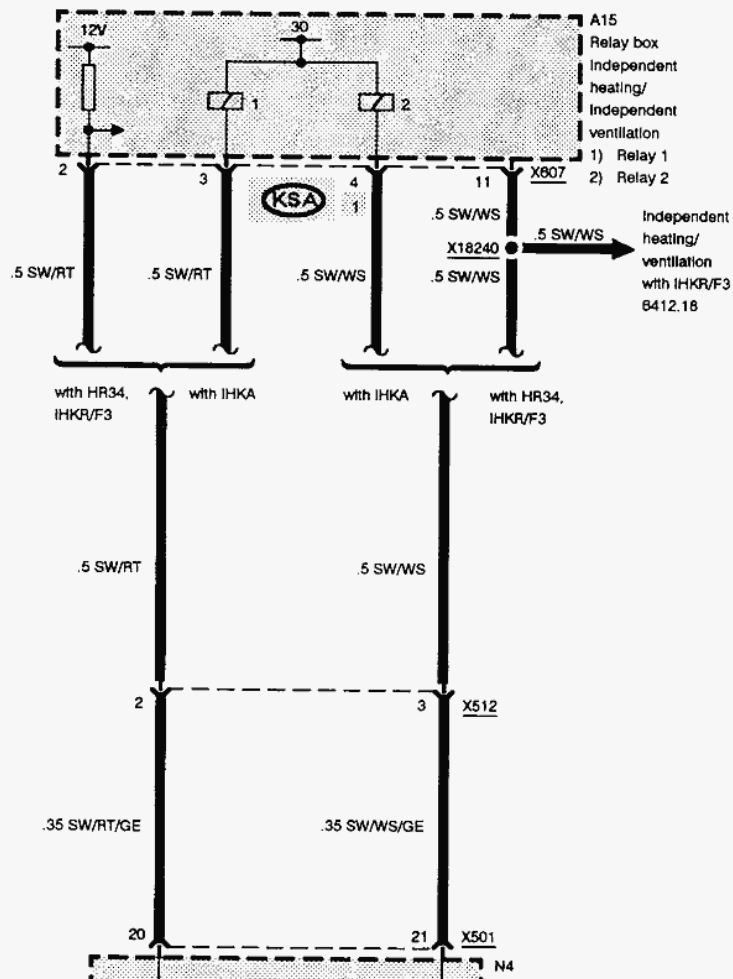

09/93

 
6581.0-01





distribution  
0670.4  
X1160

distribution  
0670.4  
X490

distribution  
0670.4  
X490




**BMW 5** On-board computer (BC IV)  
Antitheft horn (DWA), gong

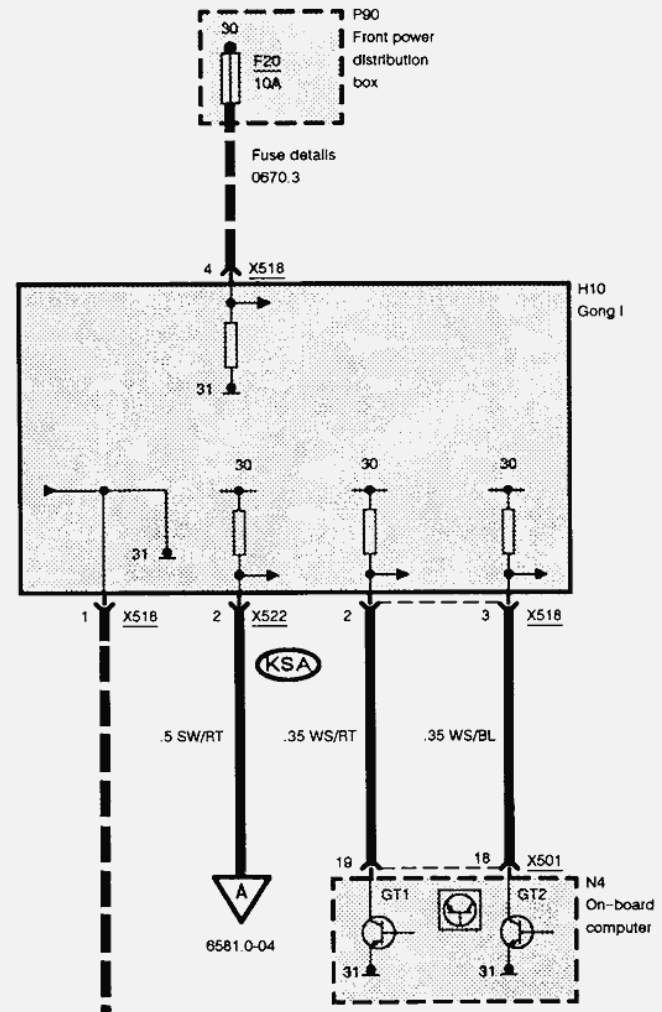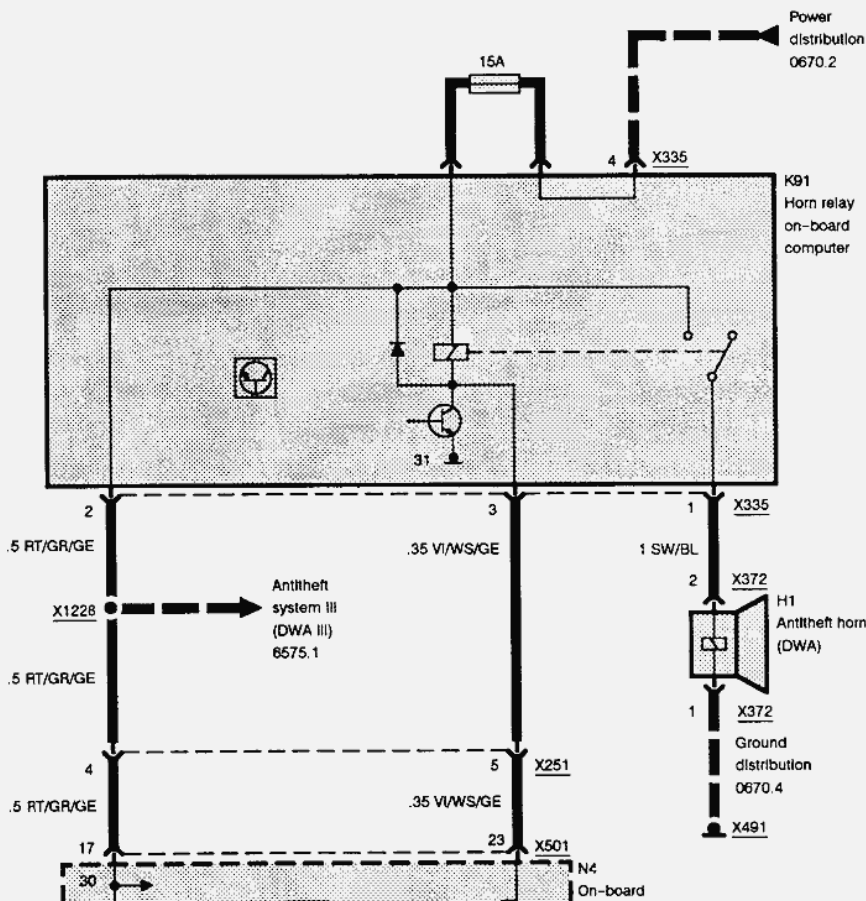




Ground distribution  
0670.4  
X491

**BMW 5** On-board computer (BC IV)  
Fuel gauge, speed signal

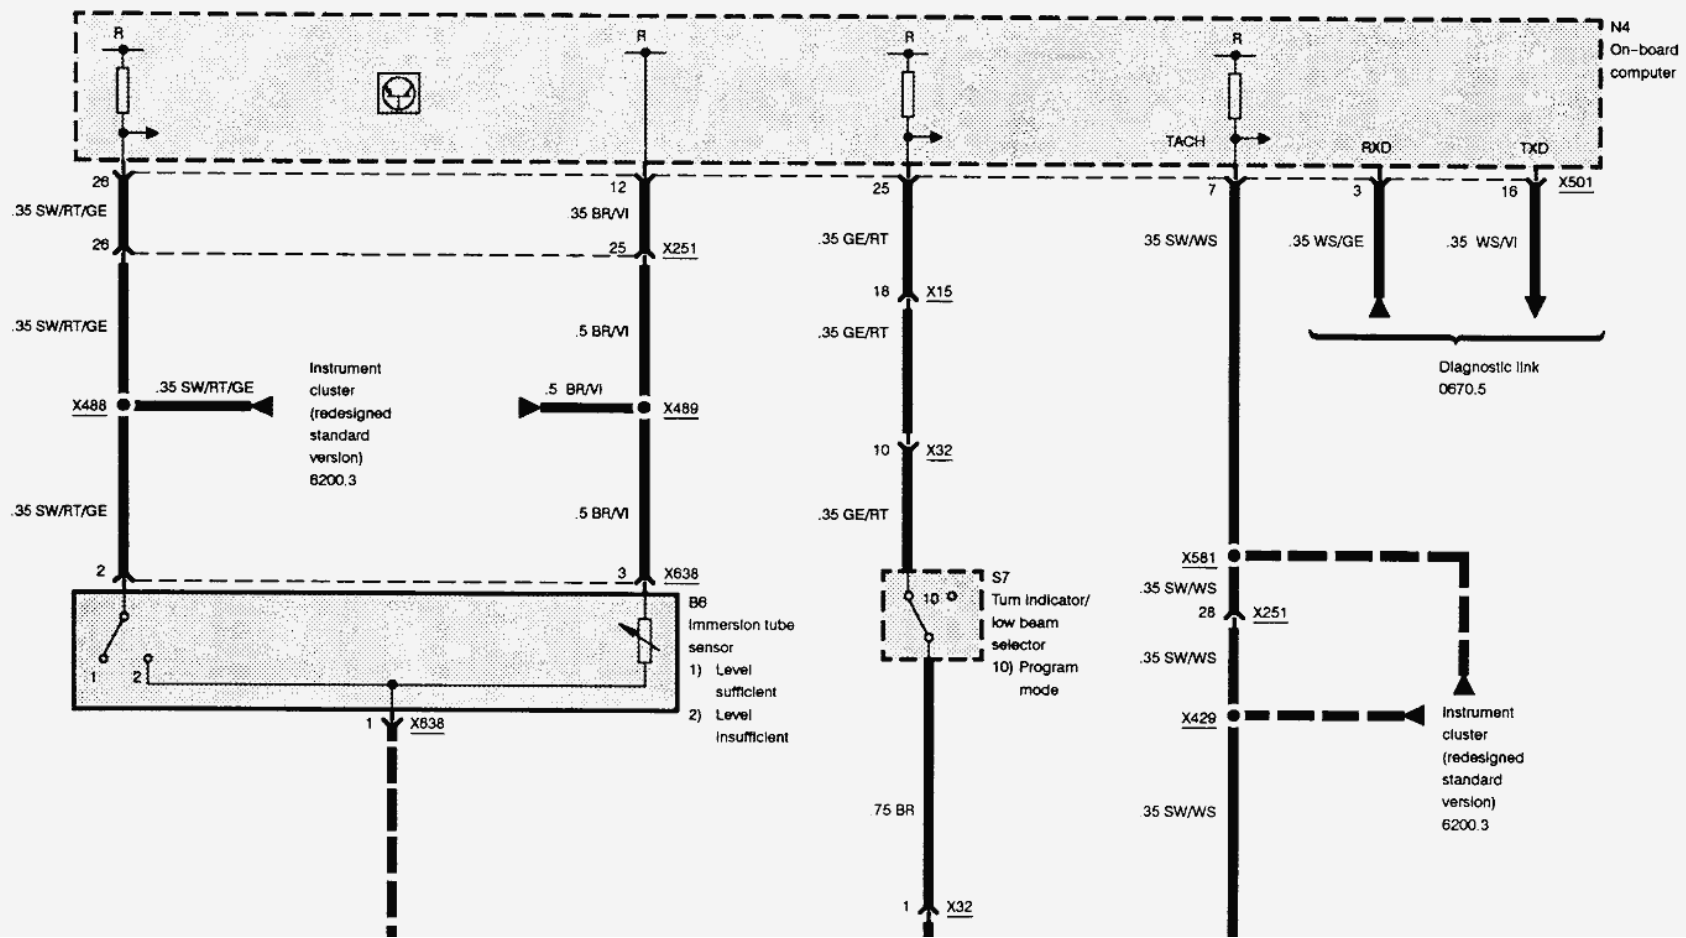

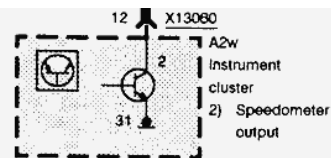


1994



# On-board computer (BC IV)



09/93

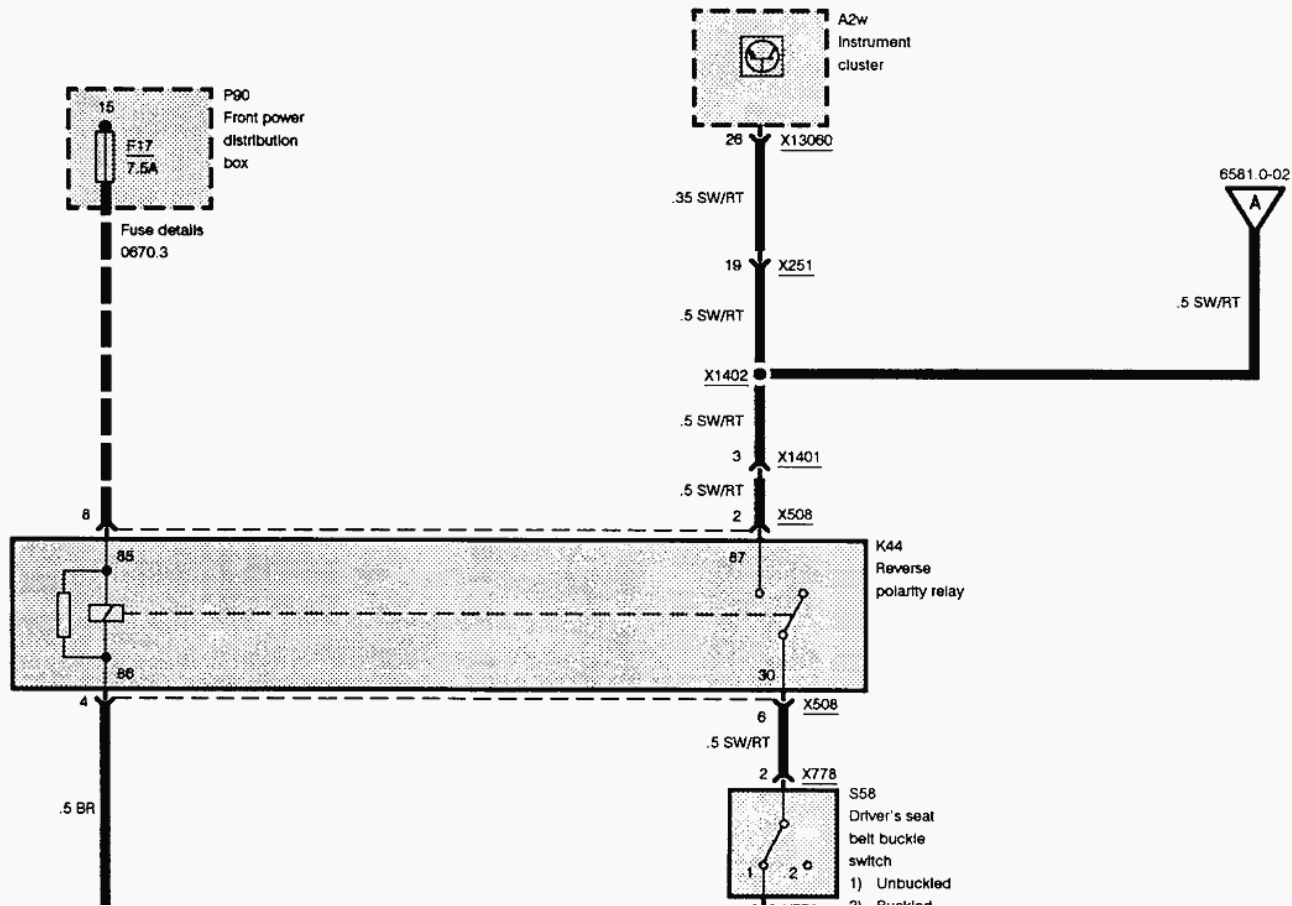

6581.0-04



1994


**BMW**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Ground distribution  
Scheme 0670.4

**BMW** **5** **Ground distribution**  
**Ground X165**

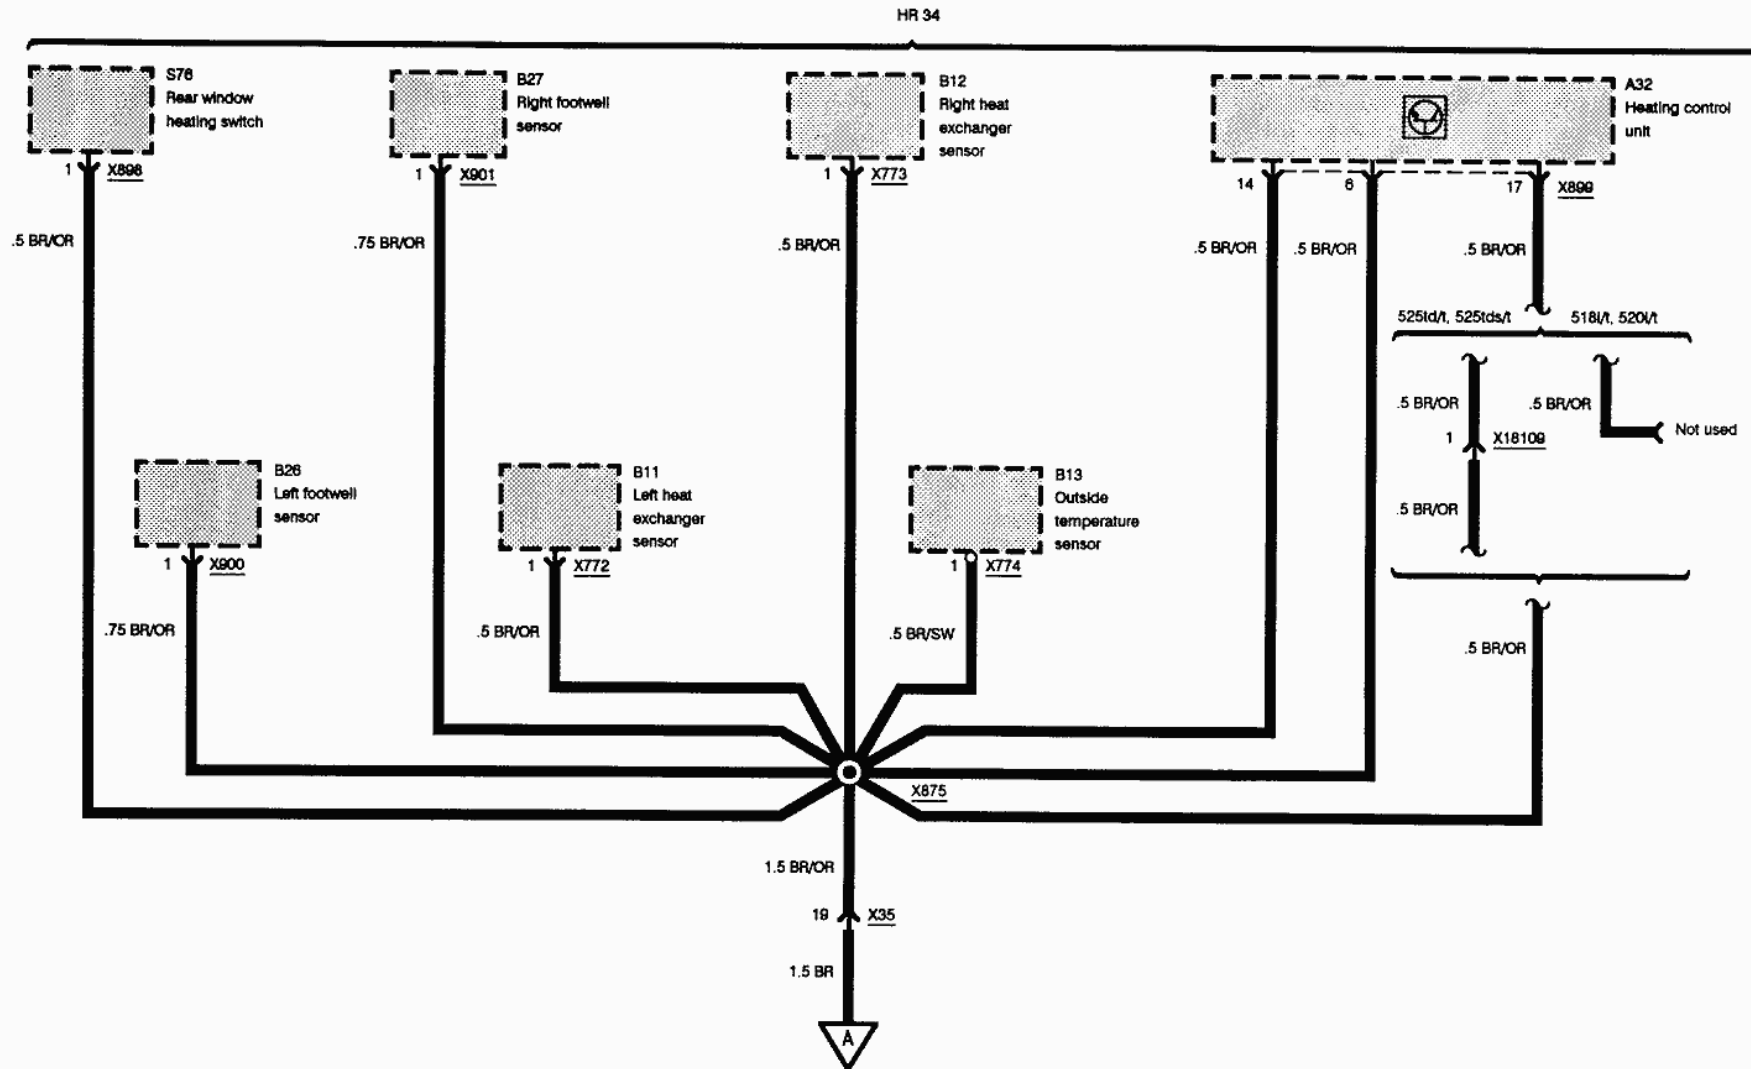


09/93

0670.4-00

11

**BMW** **5** **Ground distribution**  
**Ground X165**

( N ) ( S )

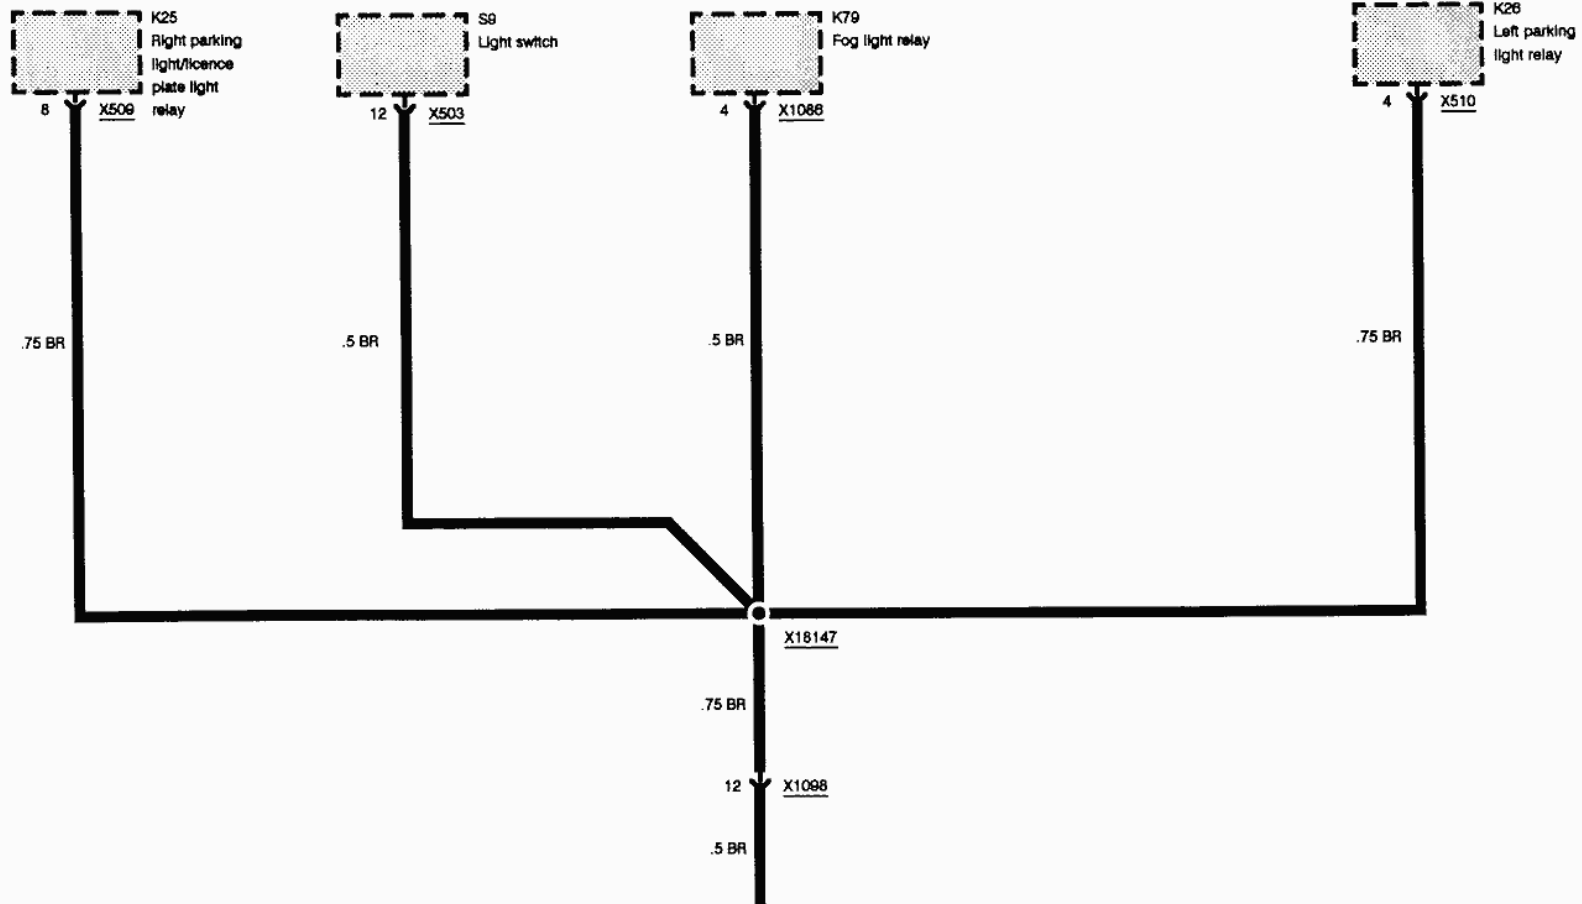

09/93

0670.4-01



0670.4-03


1994



09/93

0670.4-02


# BMW 5 Ground distribution

## Ground X165

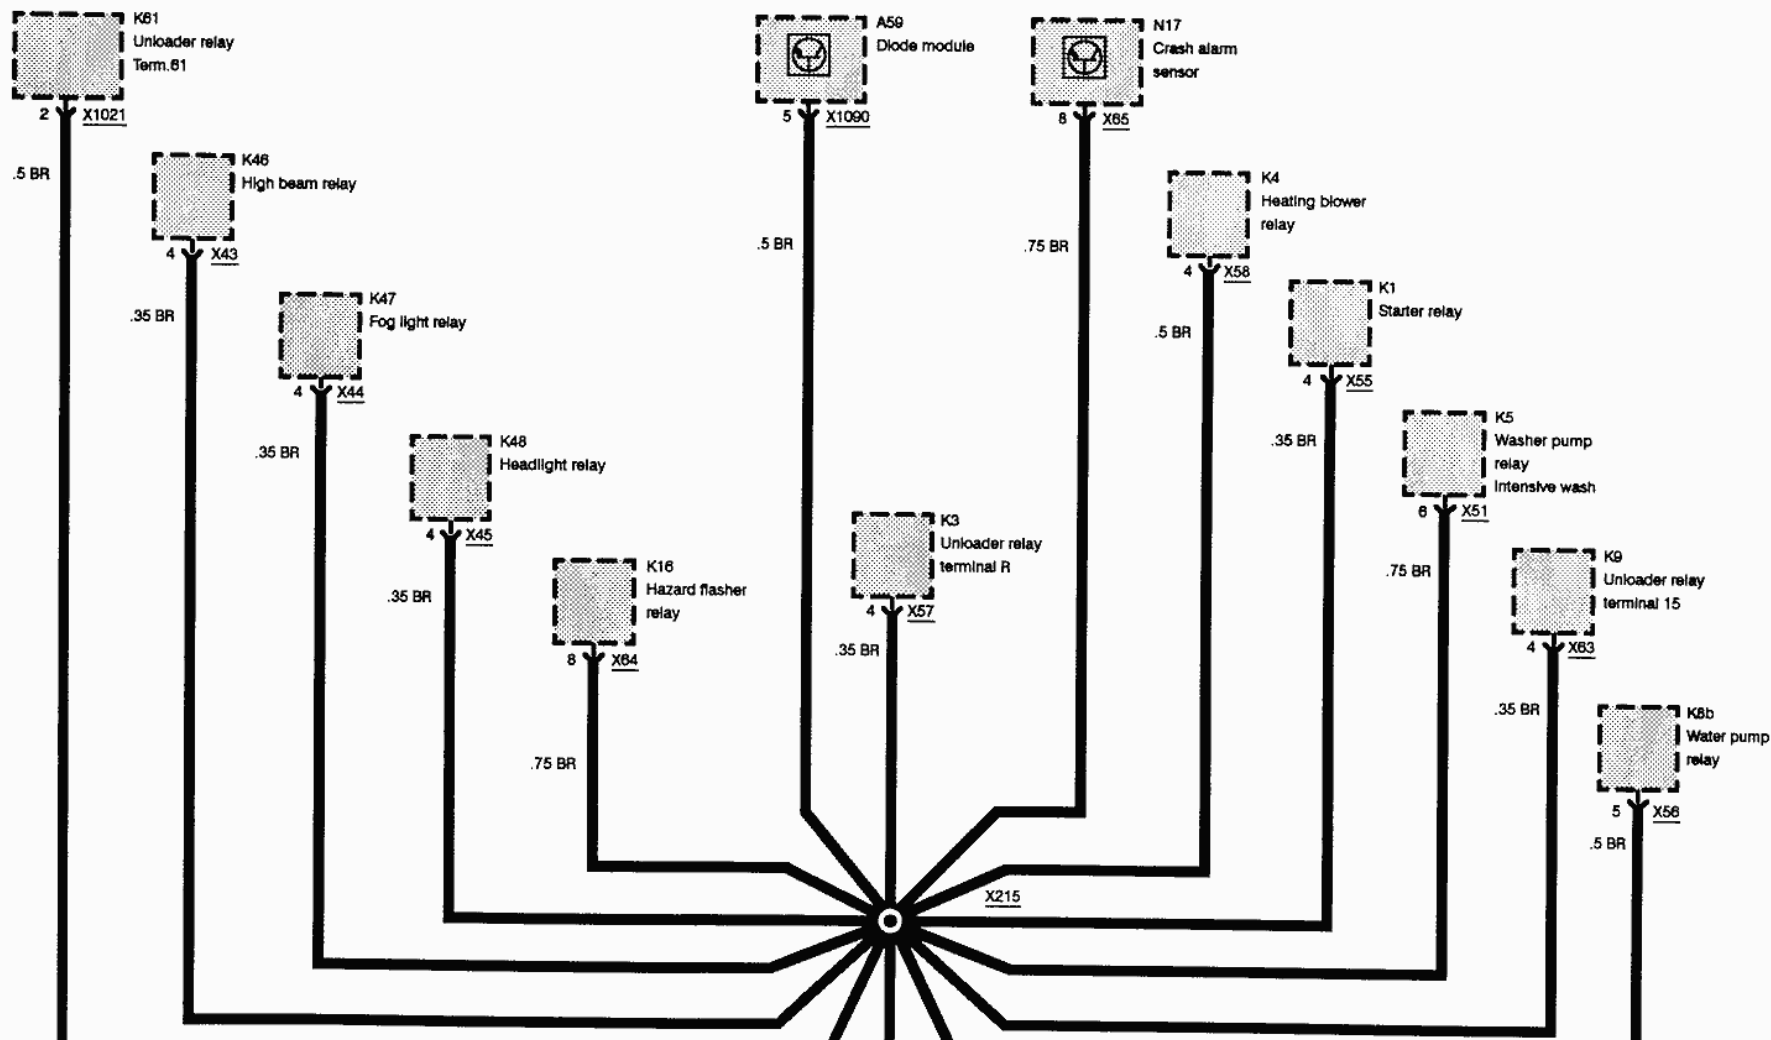

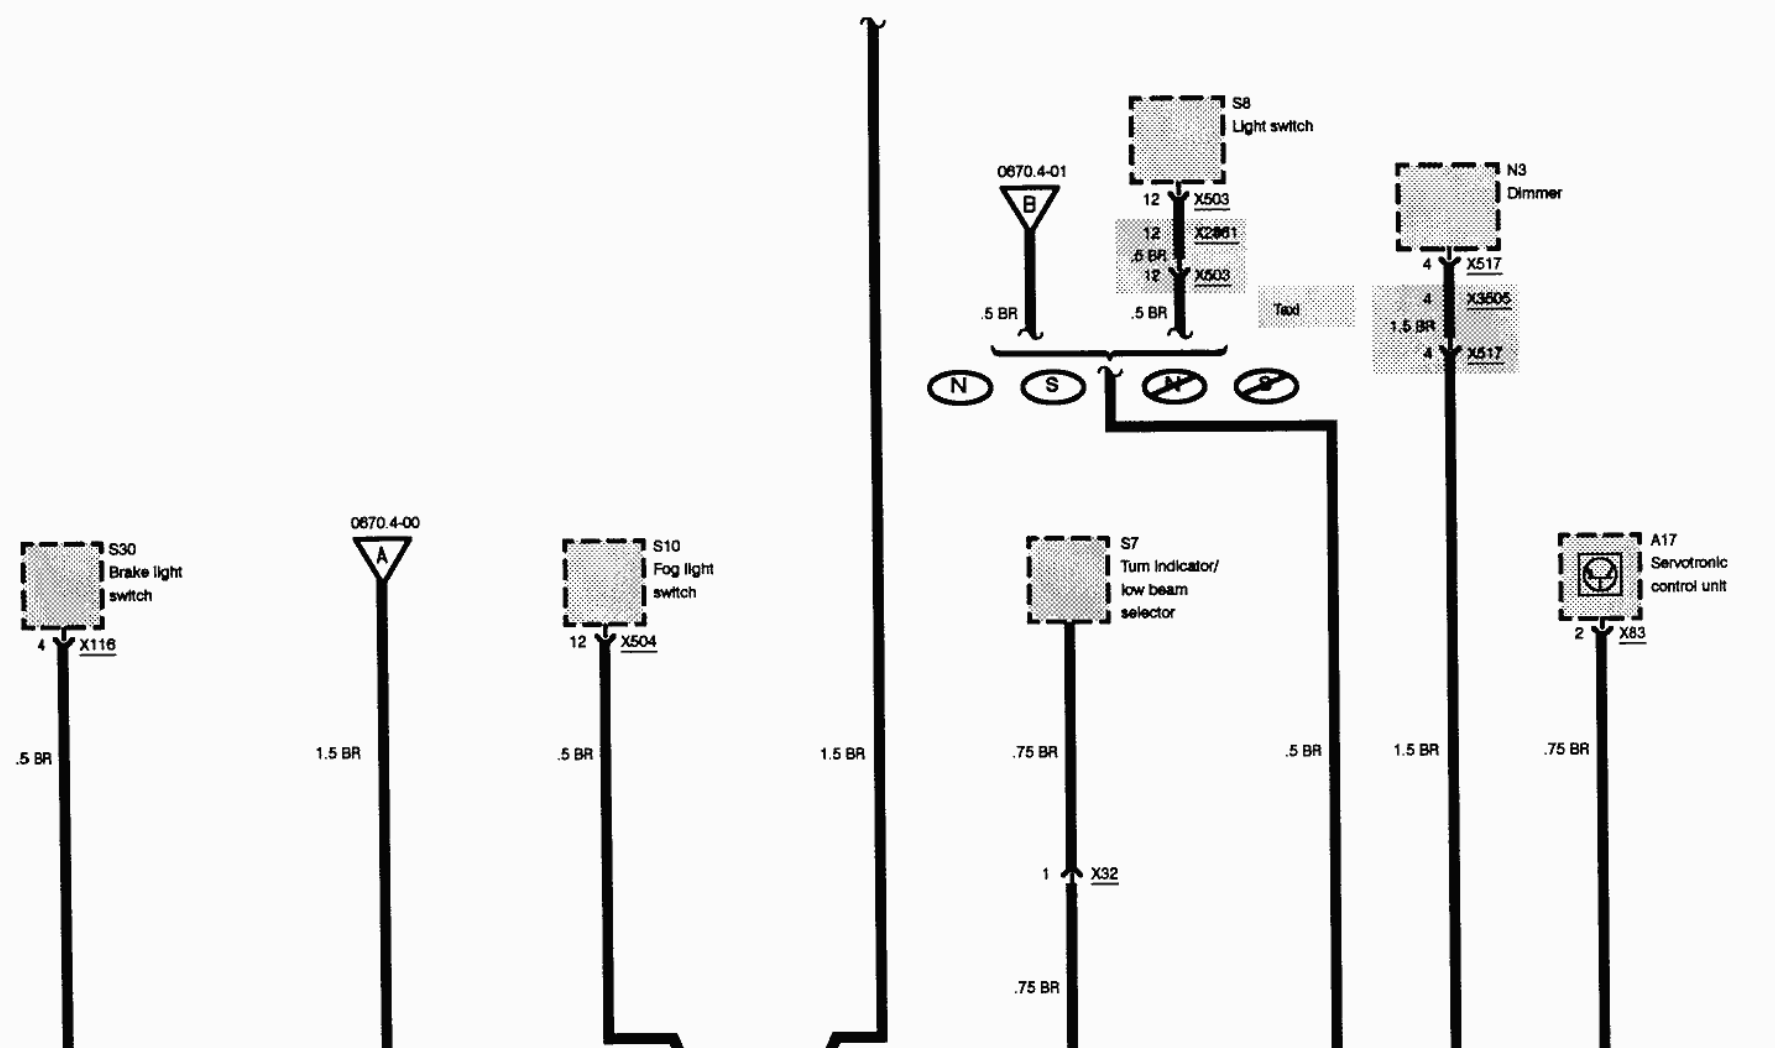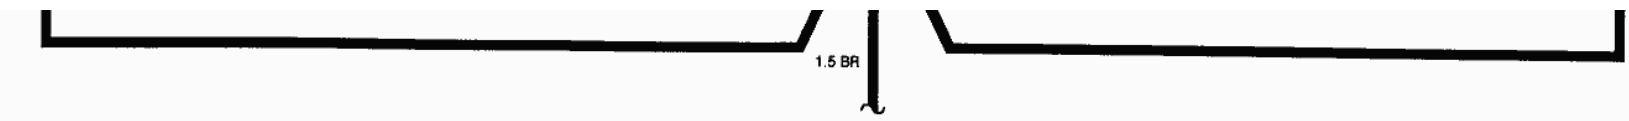




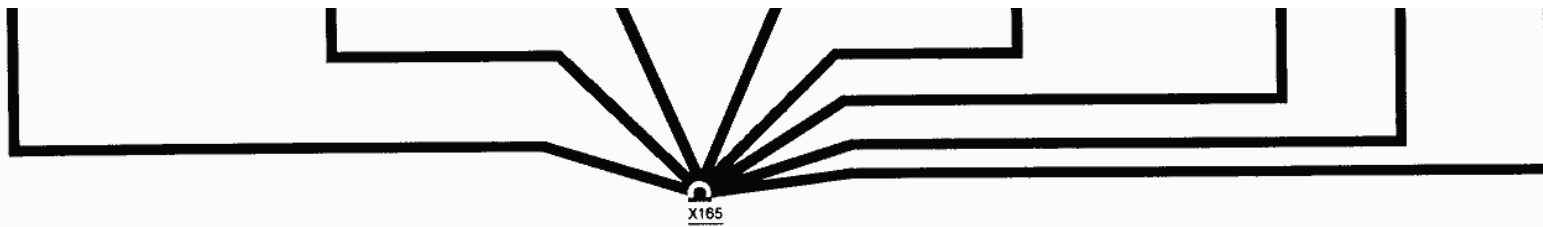

1994




### Ground distribution Ground X166 and X167

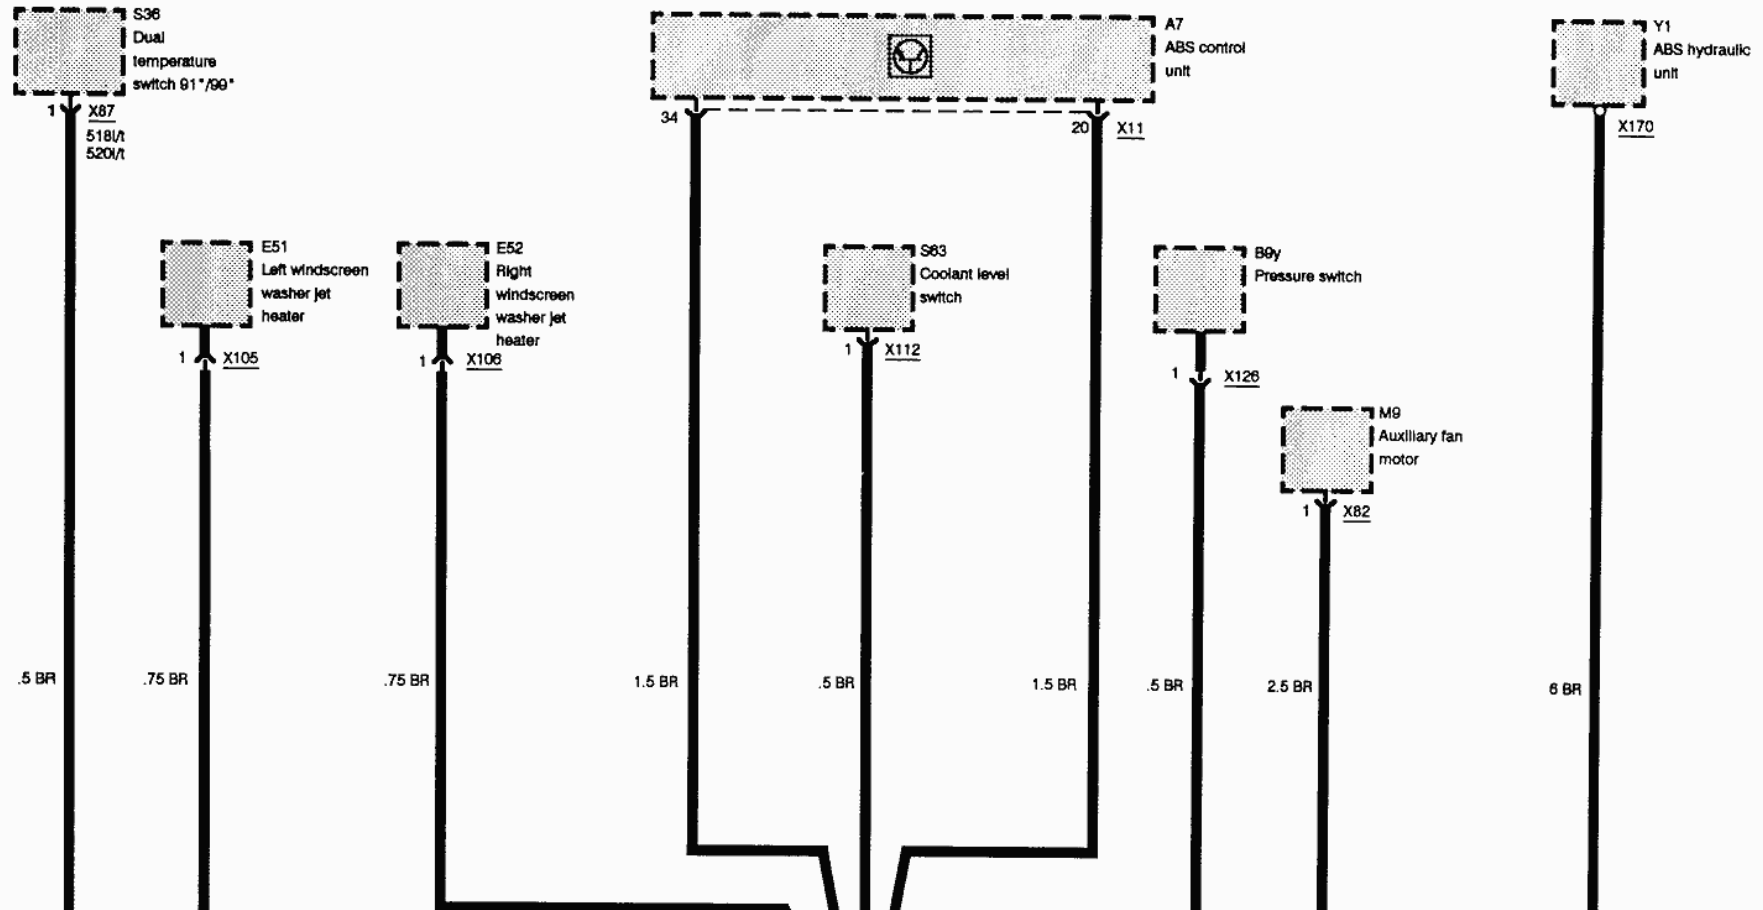


09/93

0670.4-04

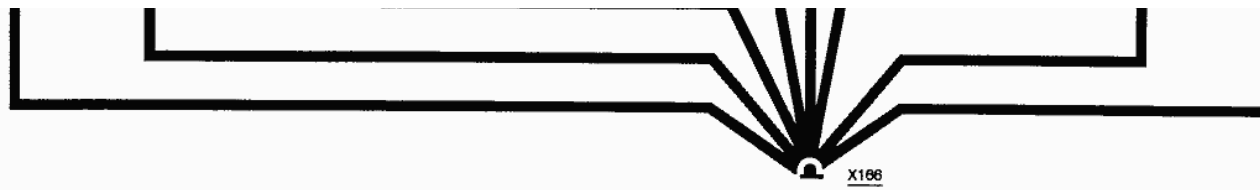


1994

**BMW 5** **Ground distribution**  
**Ground X175**

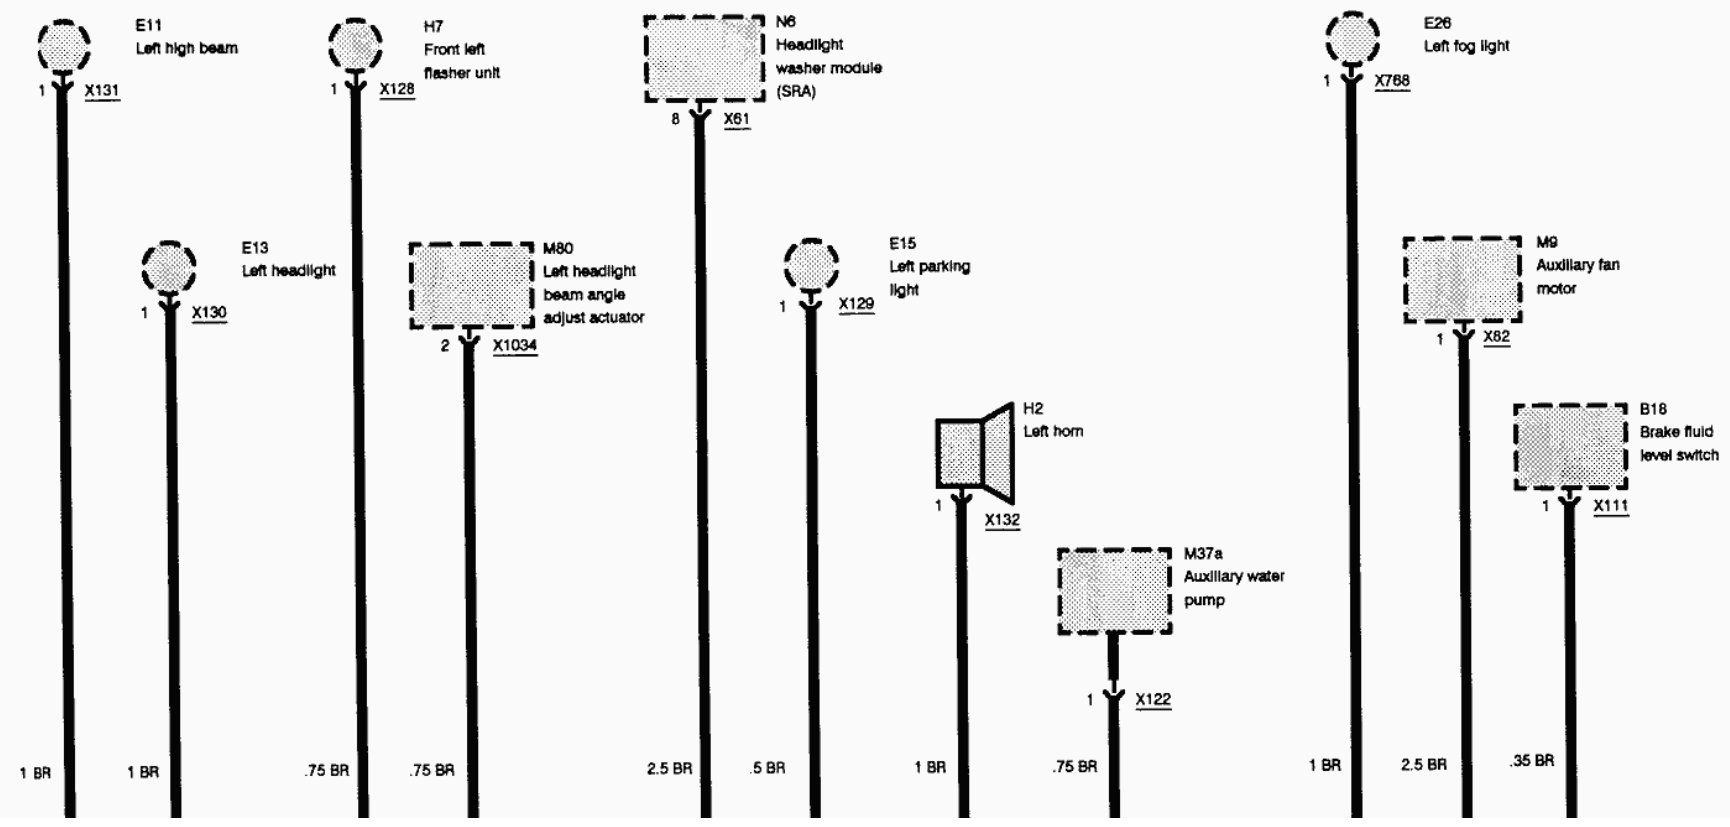


09/93

0670.4-05

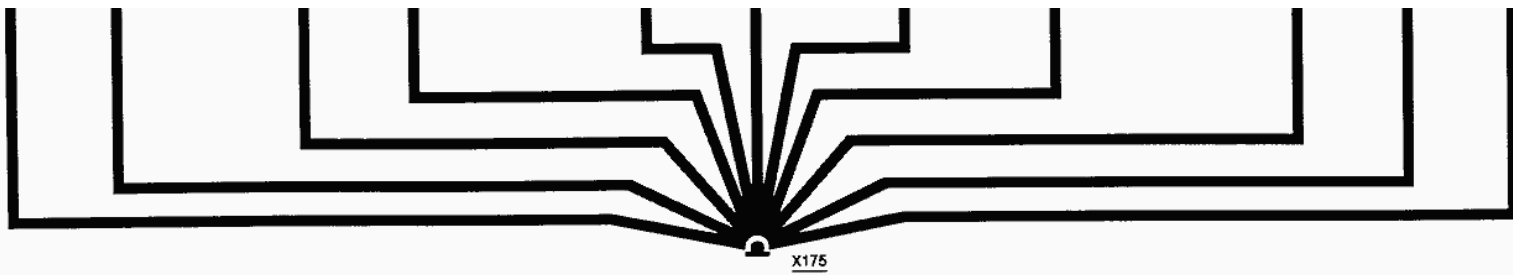


1994

**BMW 5** **Ground distribution**  
**Ground X179 and X250**

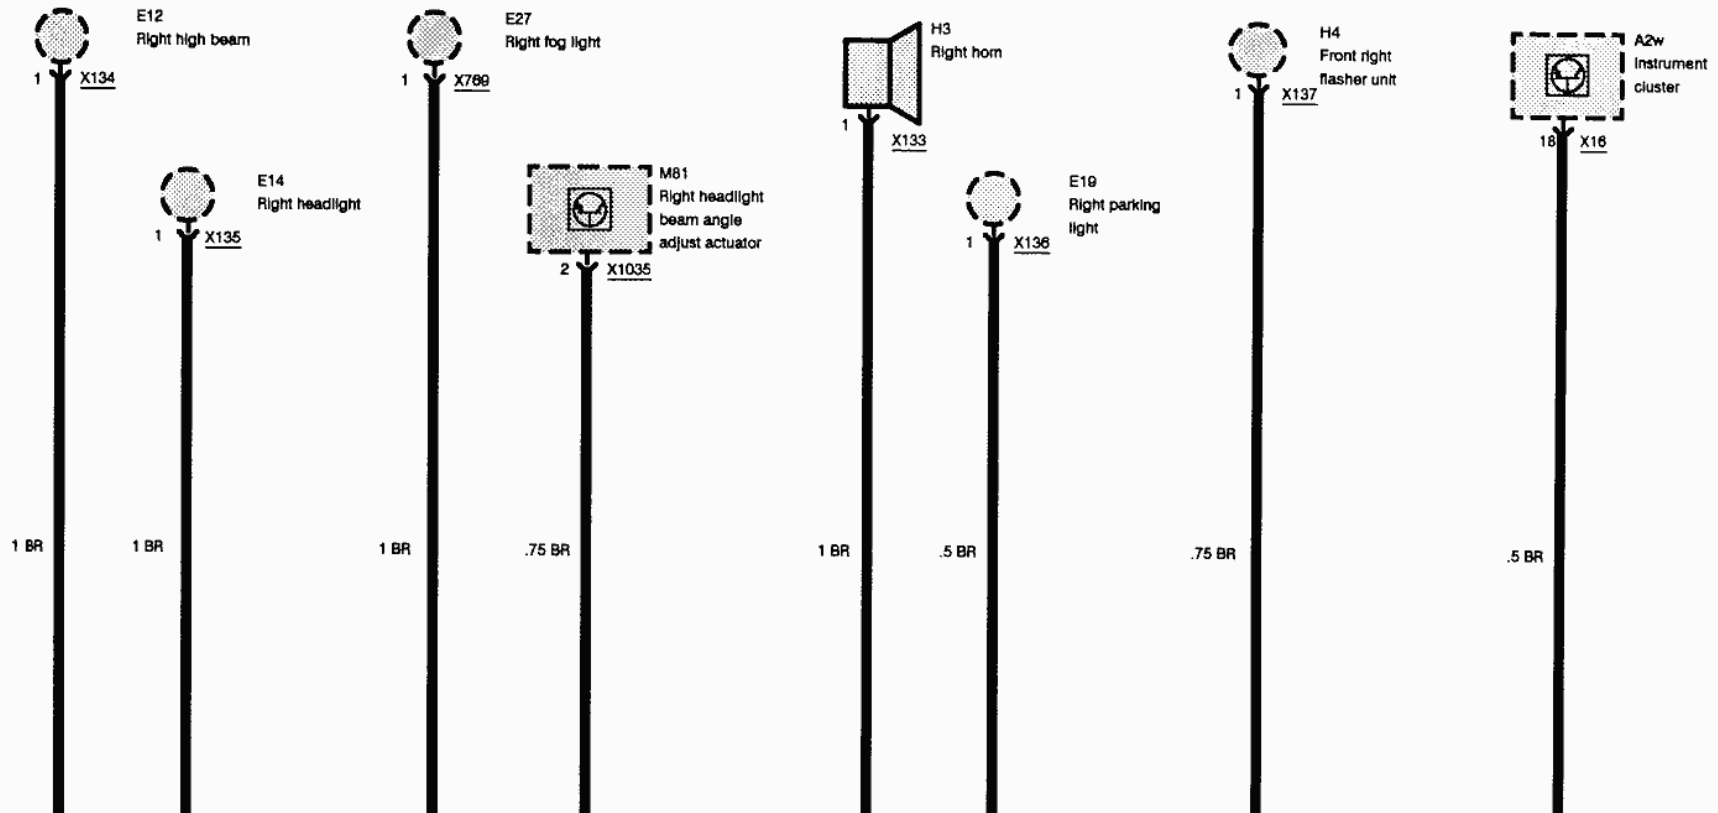


09/93

0670.4-06

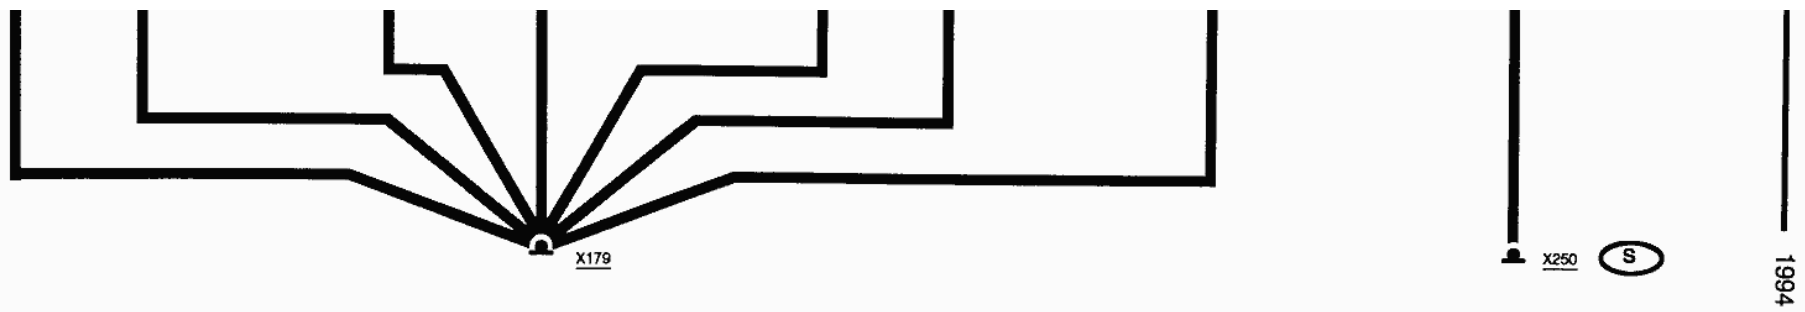

**BMW 5** Ground distribution  
Ground X490

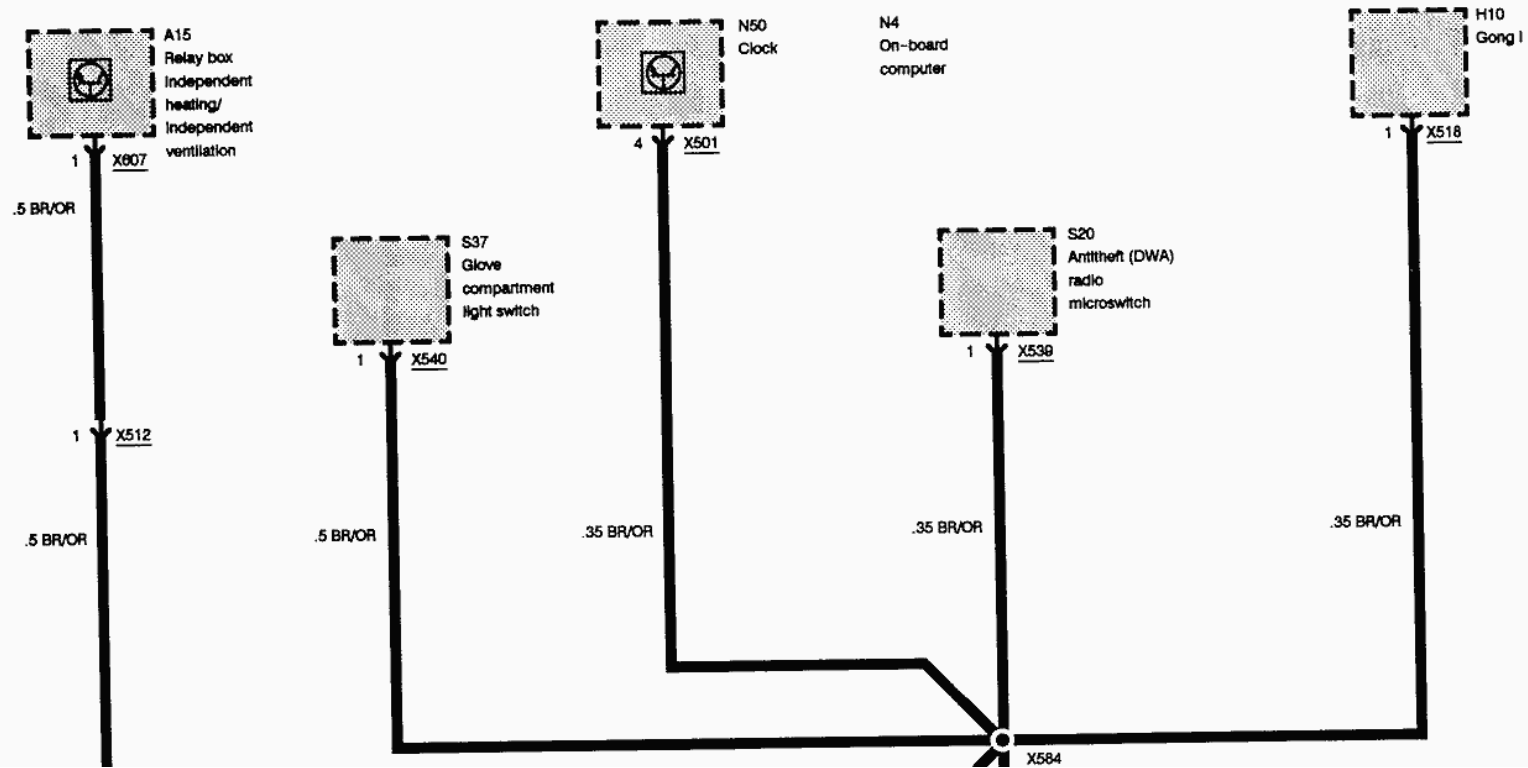


09/93

0670.4-07




1994

**BMW 5** Ground distribution  
Ground X490

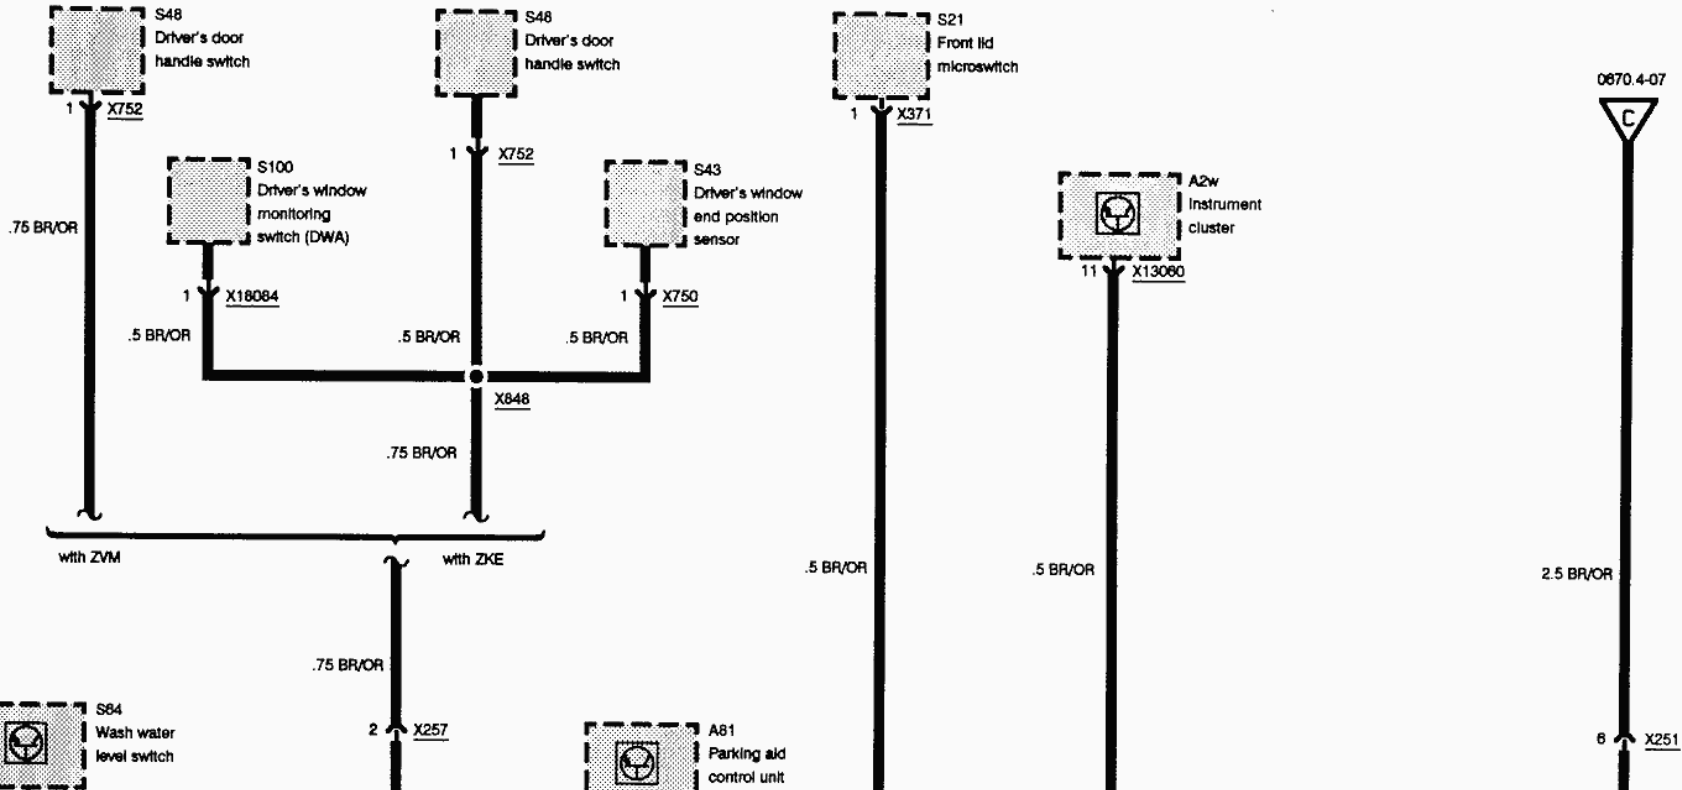

09/93


0670.4-08

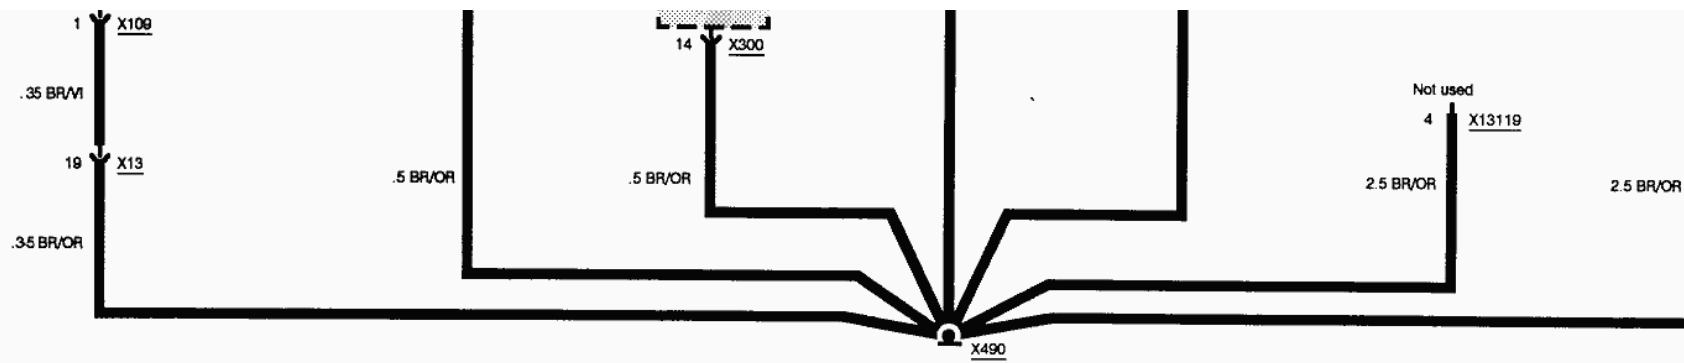


1994

**BMW 5** Ground distribution  
Ground X491

09/93

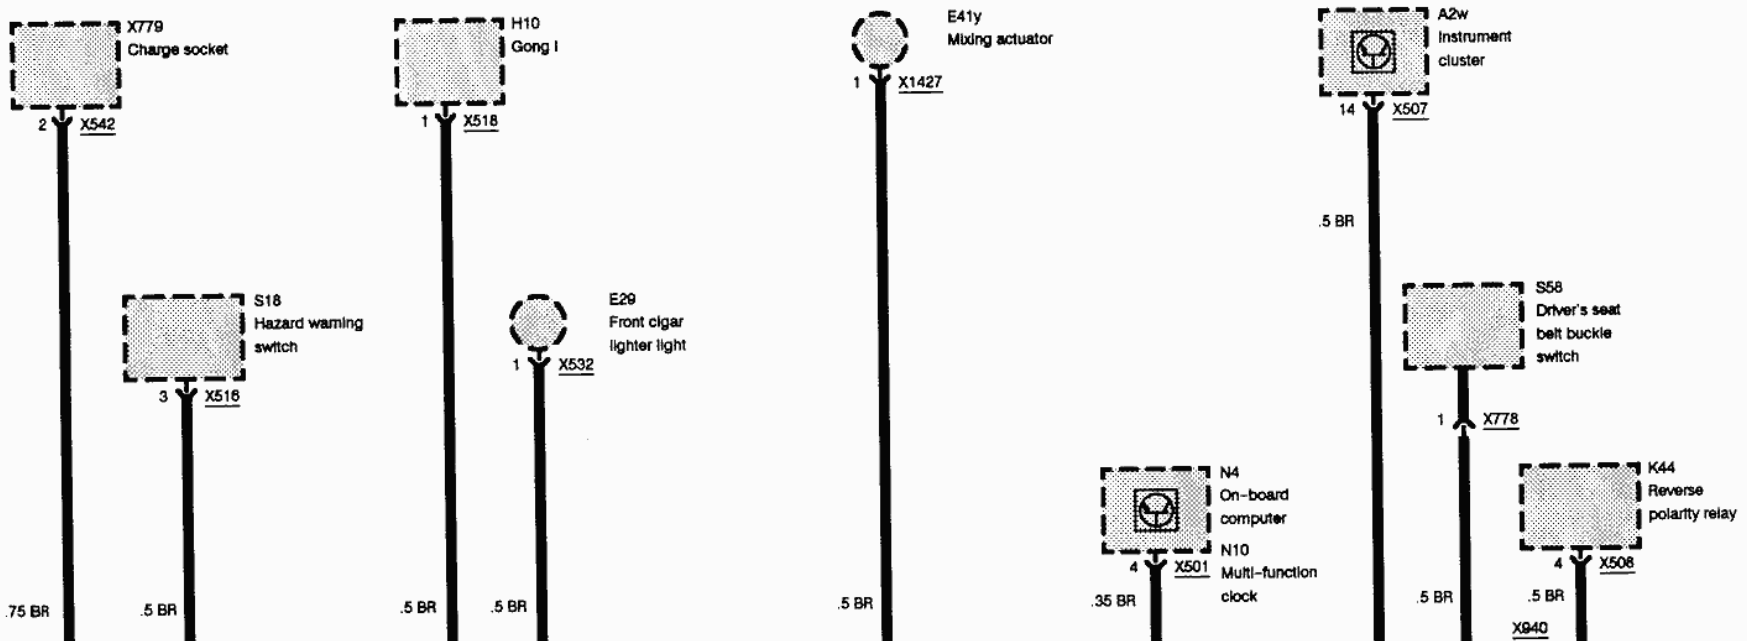


0670.4-09

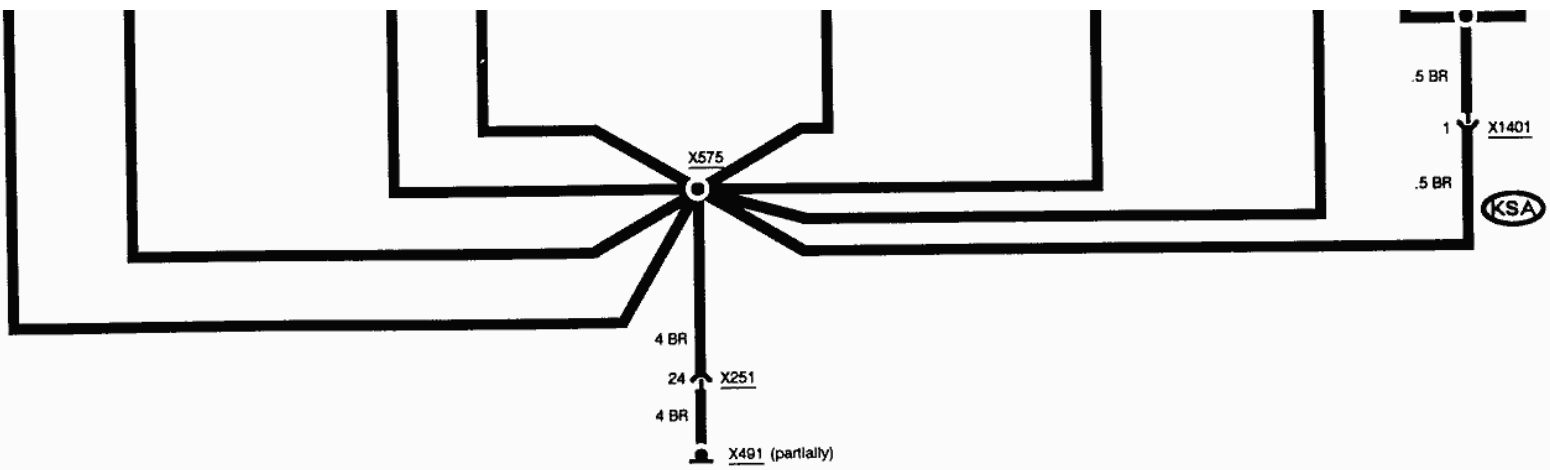



1994

**BMW 5** Ground distribution  
Ground X491

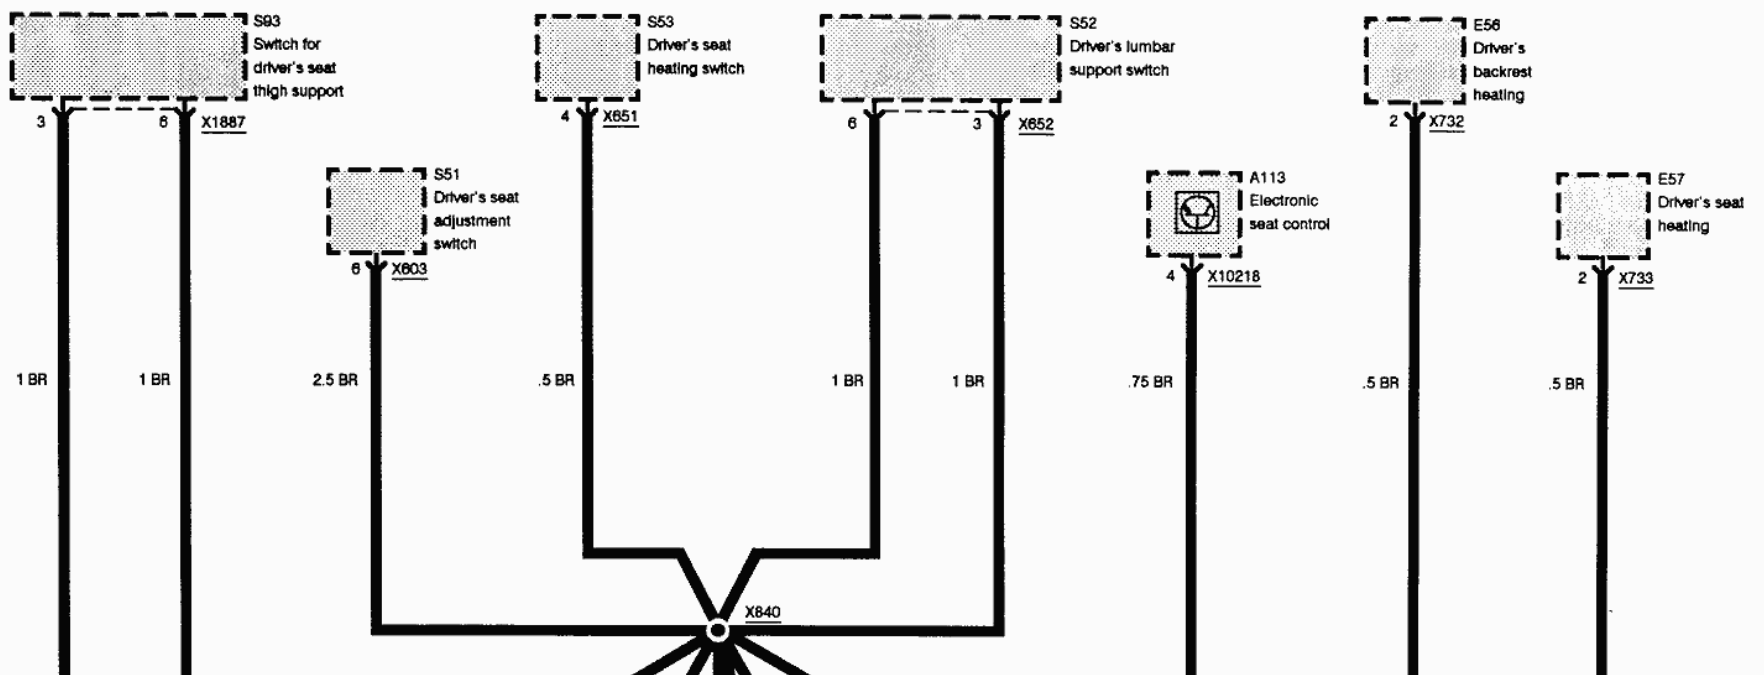

09/93

 0670.4-10

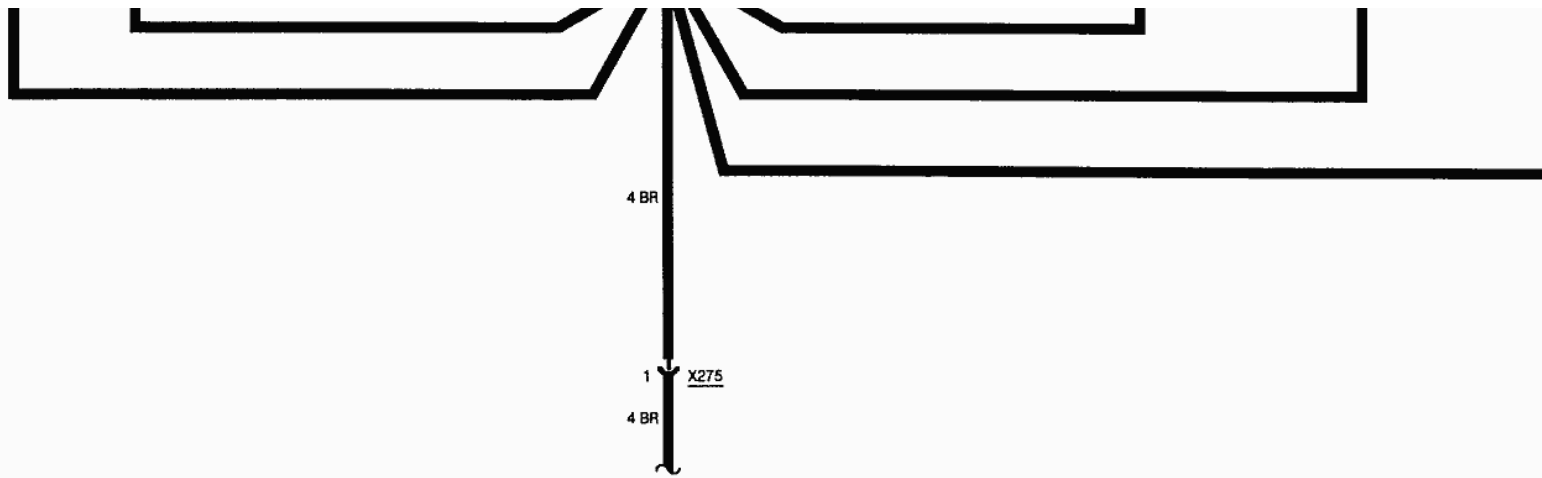


3 X13105

Touring




 1 X295



3 X18093

 .5 BR



4 9 X18259

1.5 BR


1.5 BR

X18753

09/93


0670.4-1



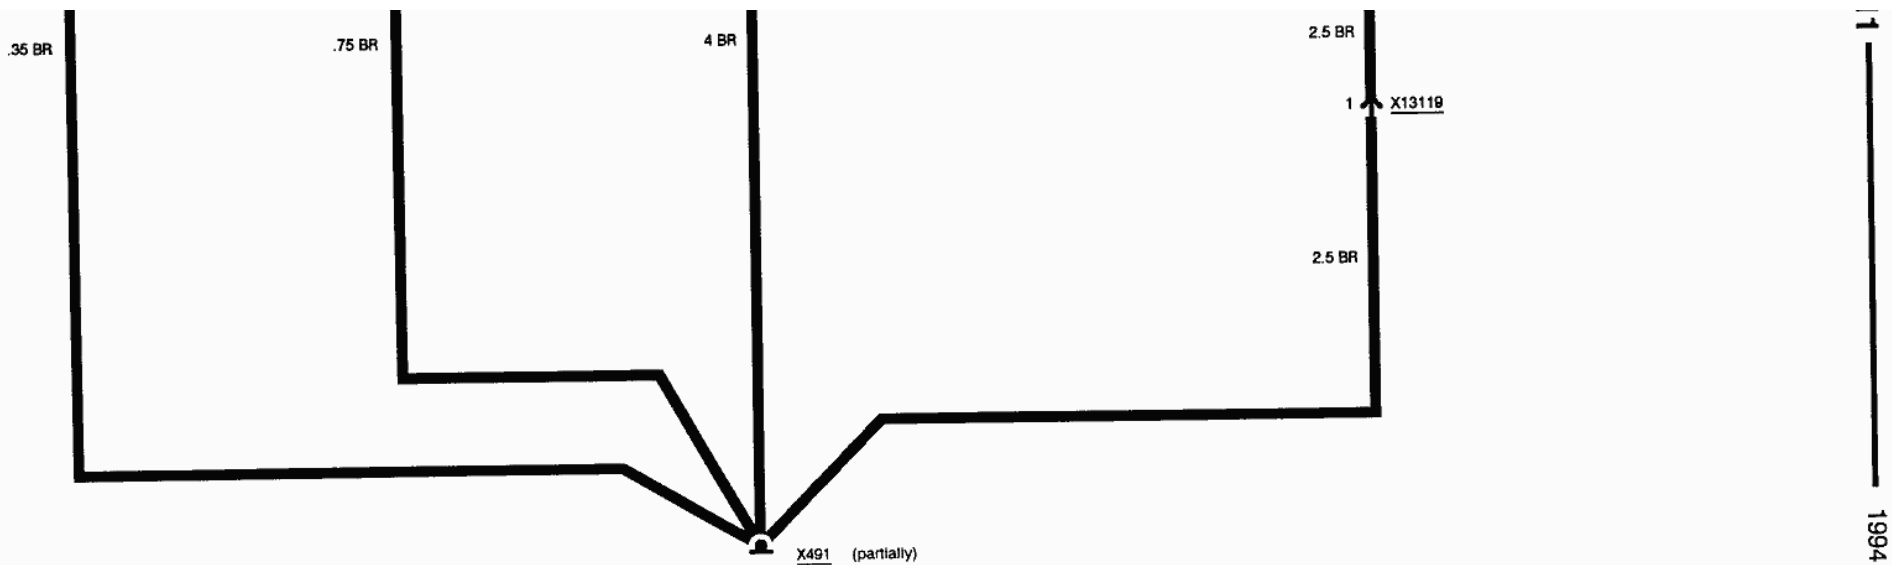


1  
1994

**BMW 5** Ground distribution  
Ground X491





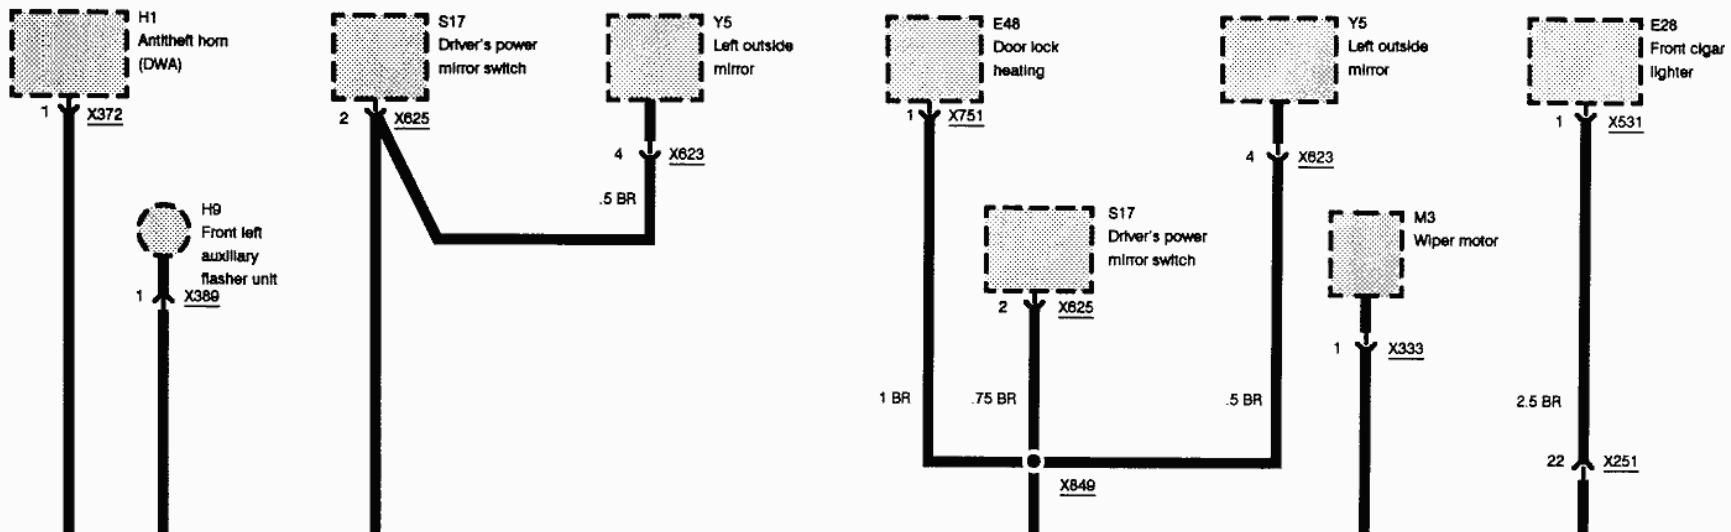


09/93  
0670.4-

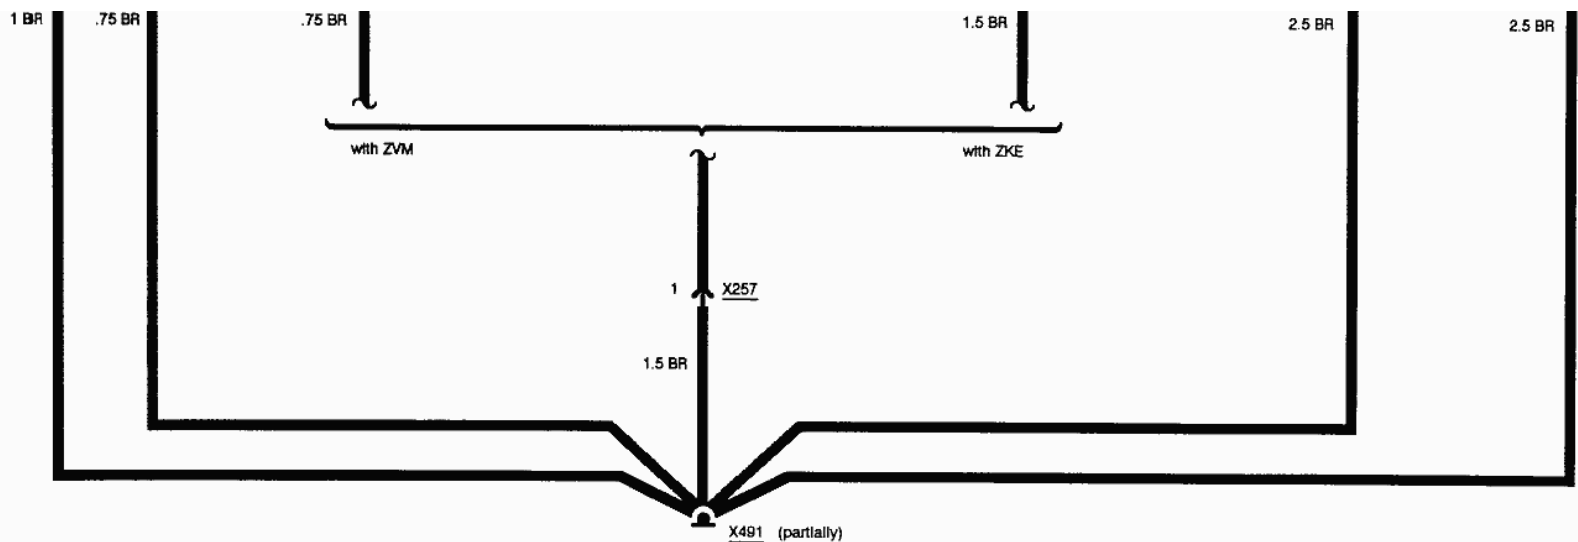


12  
1994

**BMW 5** Ground distribution  
Ground X492

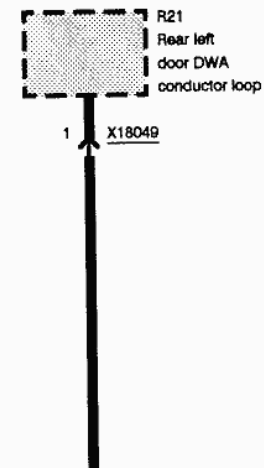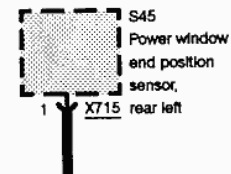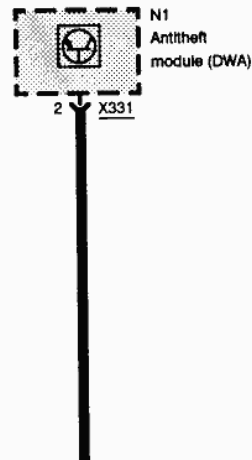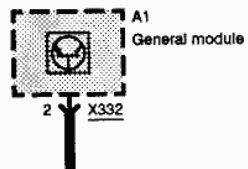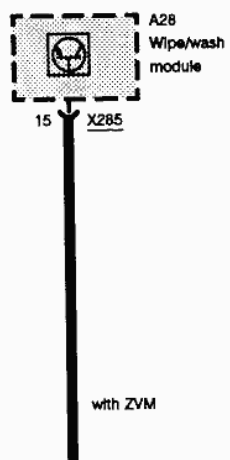


09/93  
067

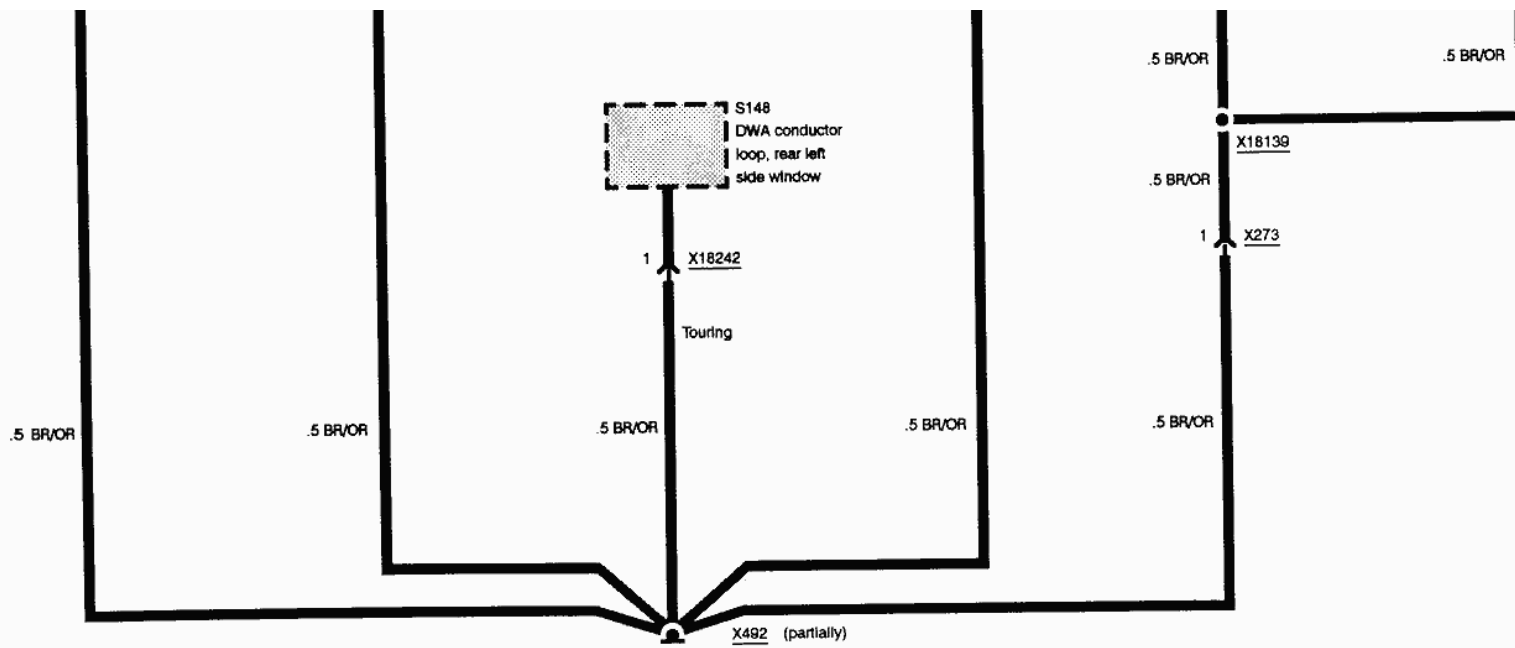


0.4-13 ————— 1994

**BMW 5** Ground distribution  
Ground X492

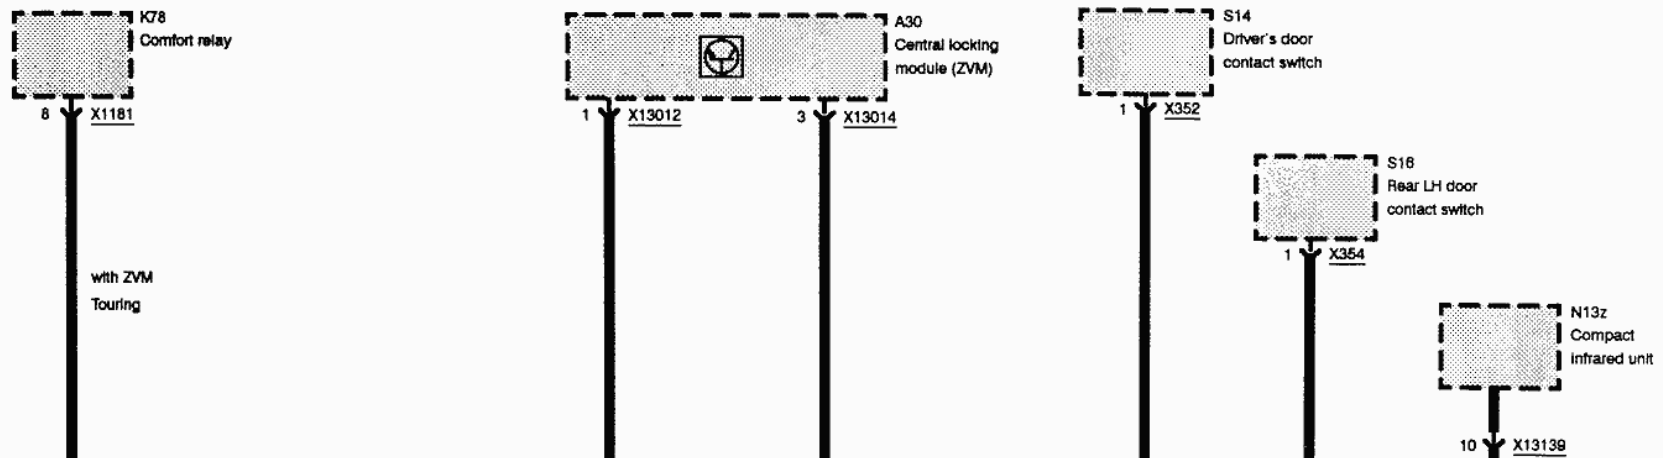

09/93 ————— 06

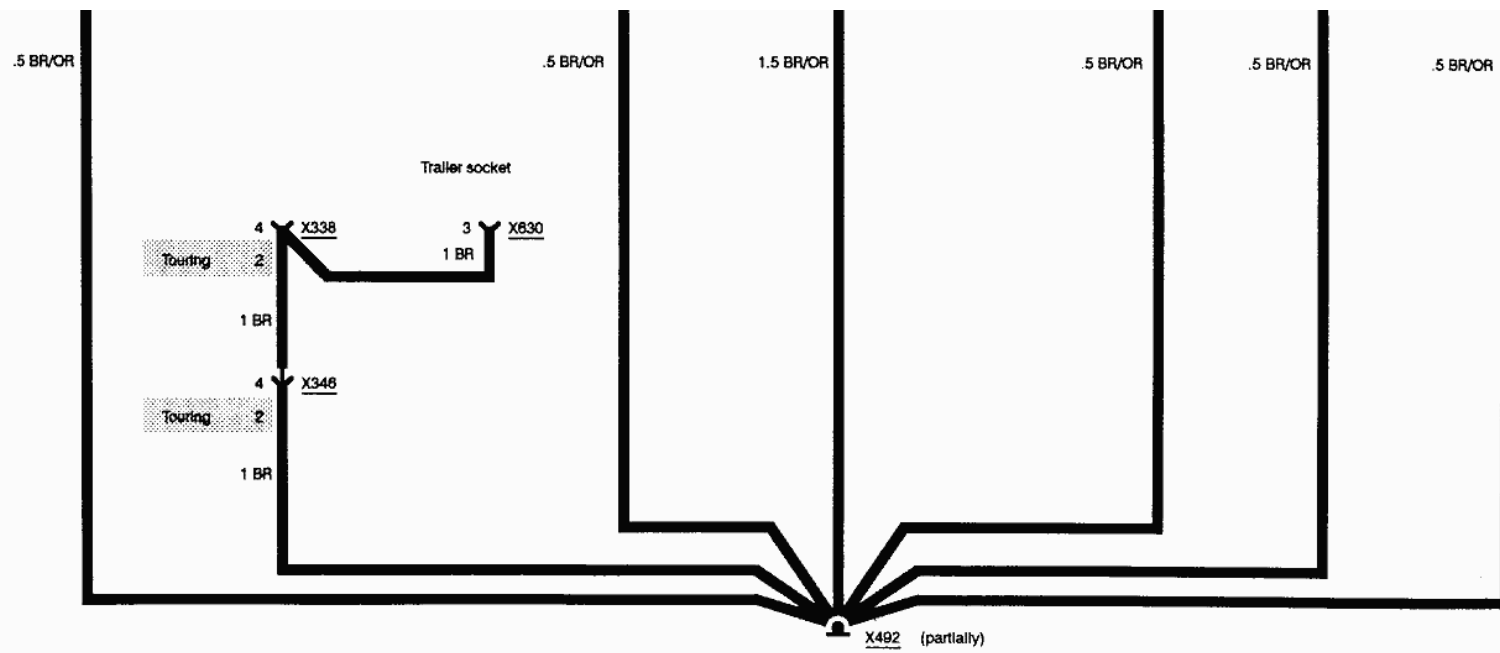


70.4-14  
1994




**Ground distribution**

**Touring**

**Ground X493**

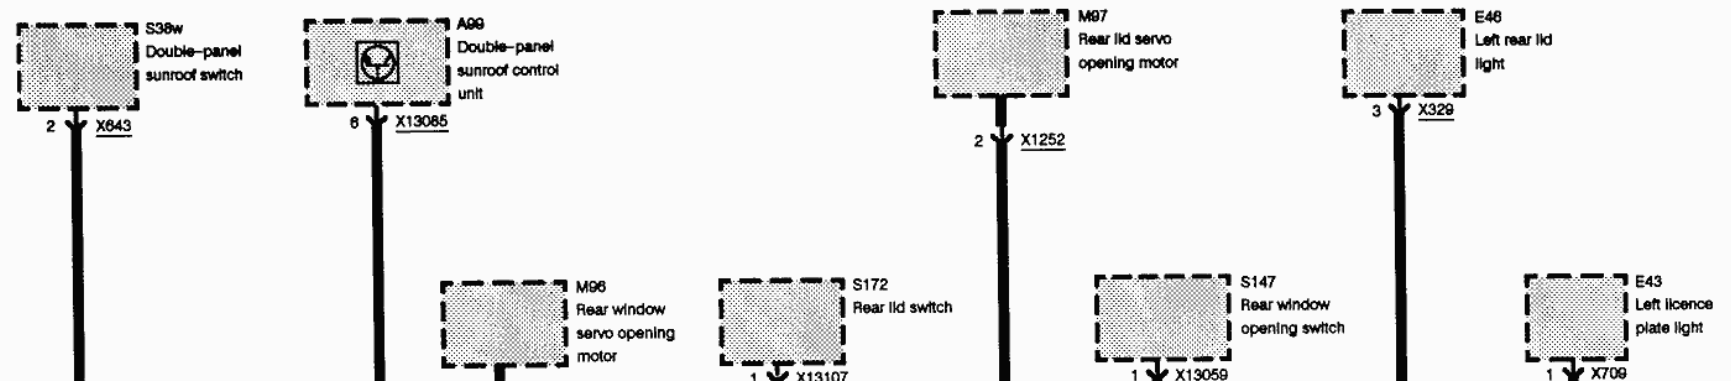


09/93

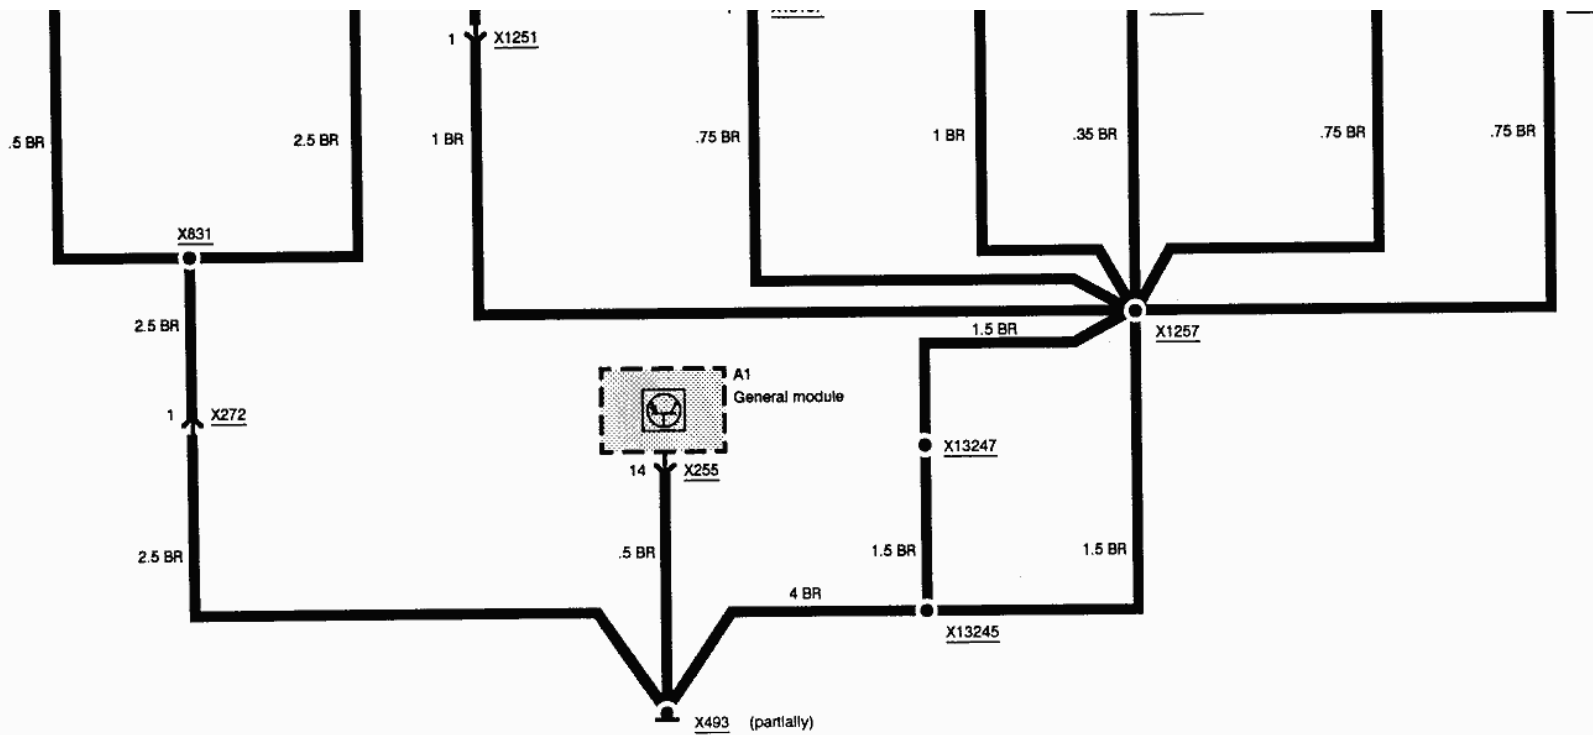


- 0670.4-15 -  
1994

**BMW 5** Ground distribution  
Ground X493

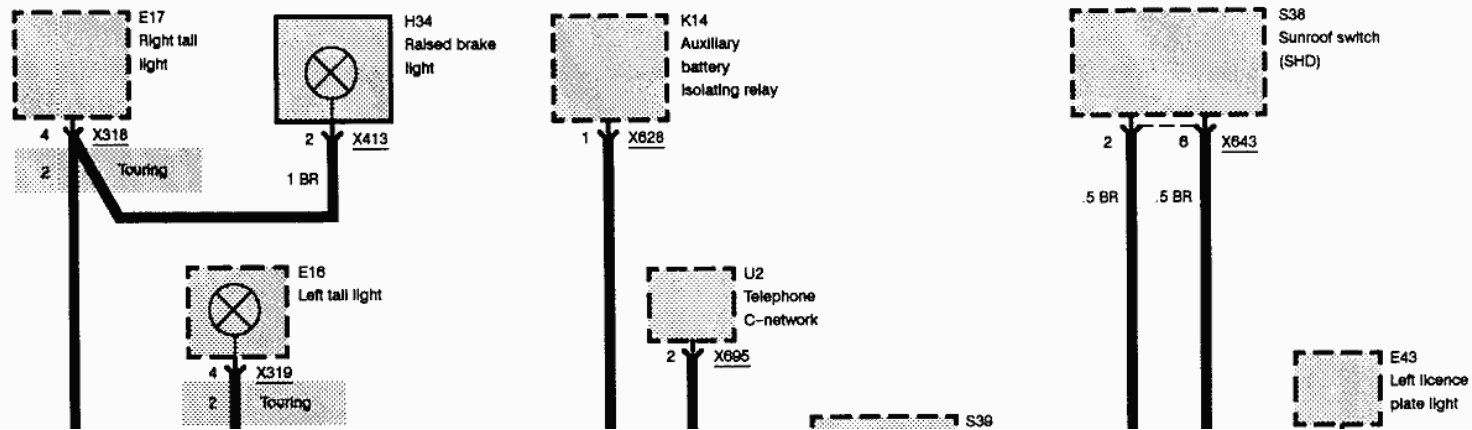




09/93

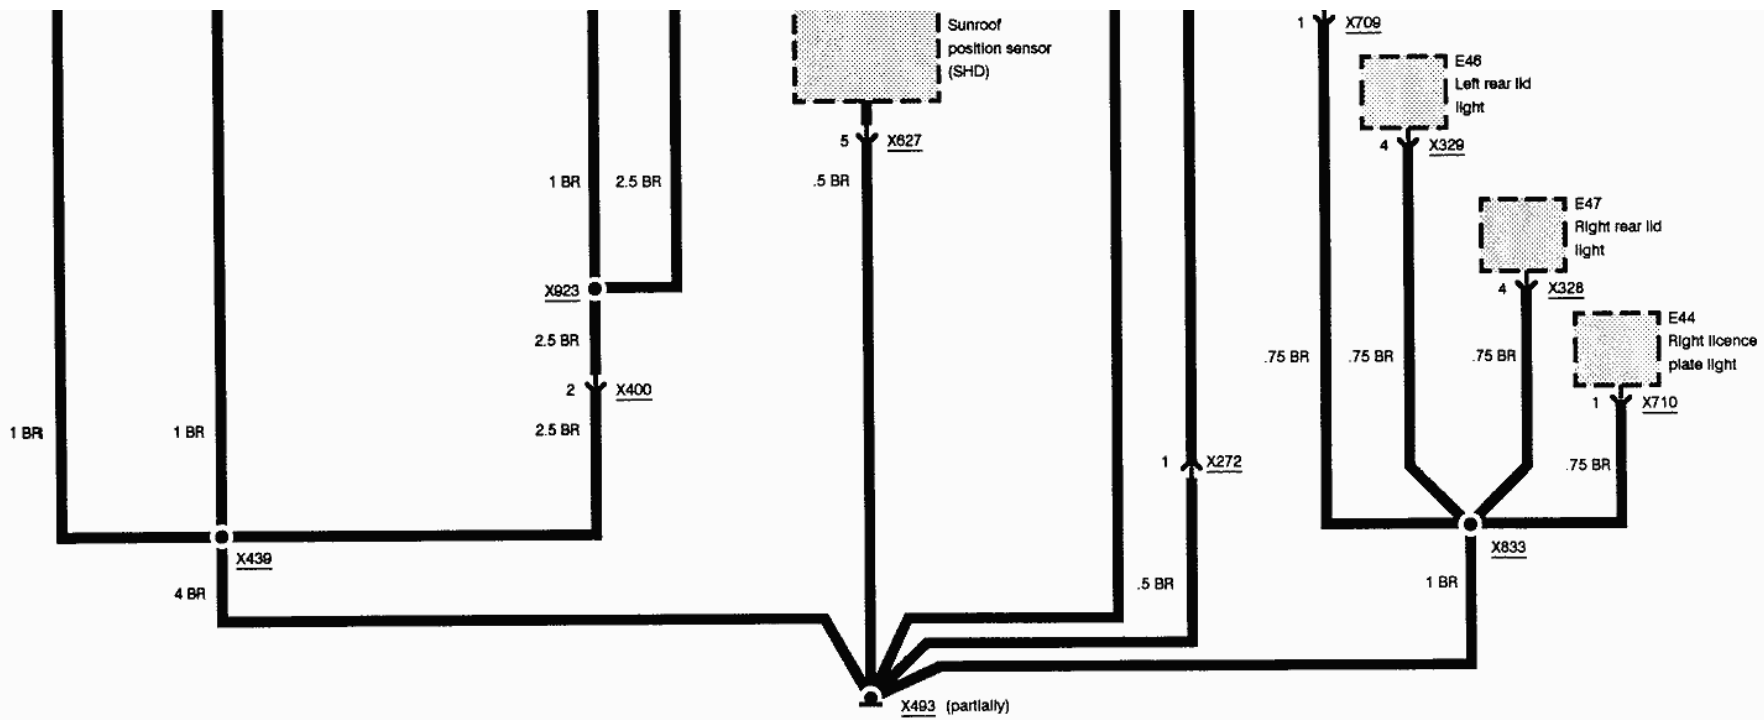


— 0670.4-16 —

1994

**BMW 5** Ground distribution  
Ground X493

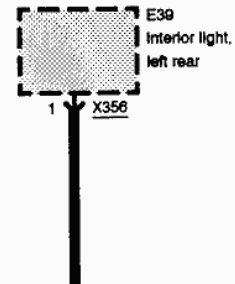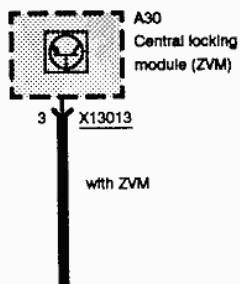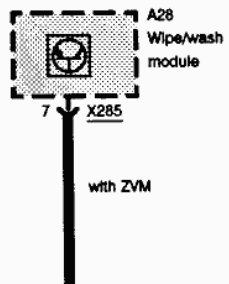


09/93

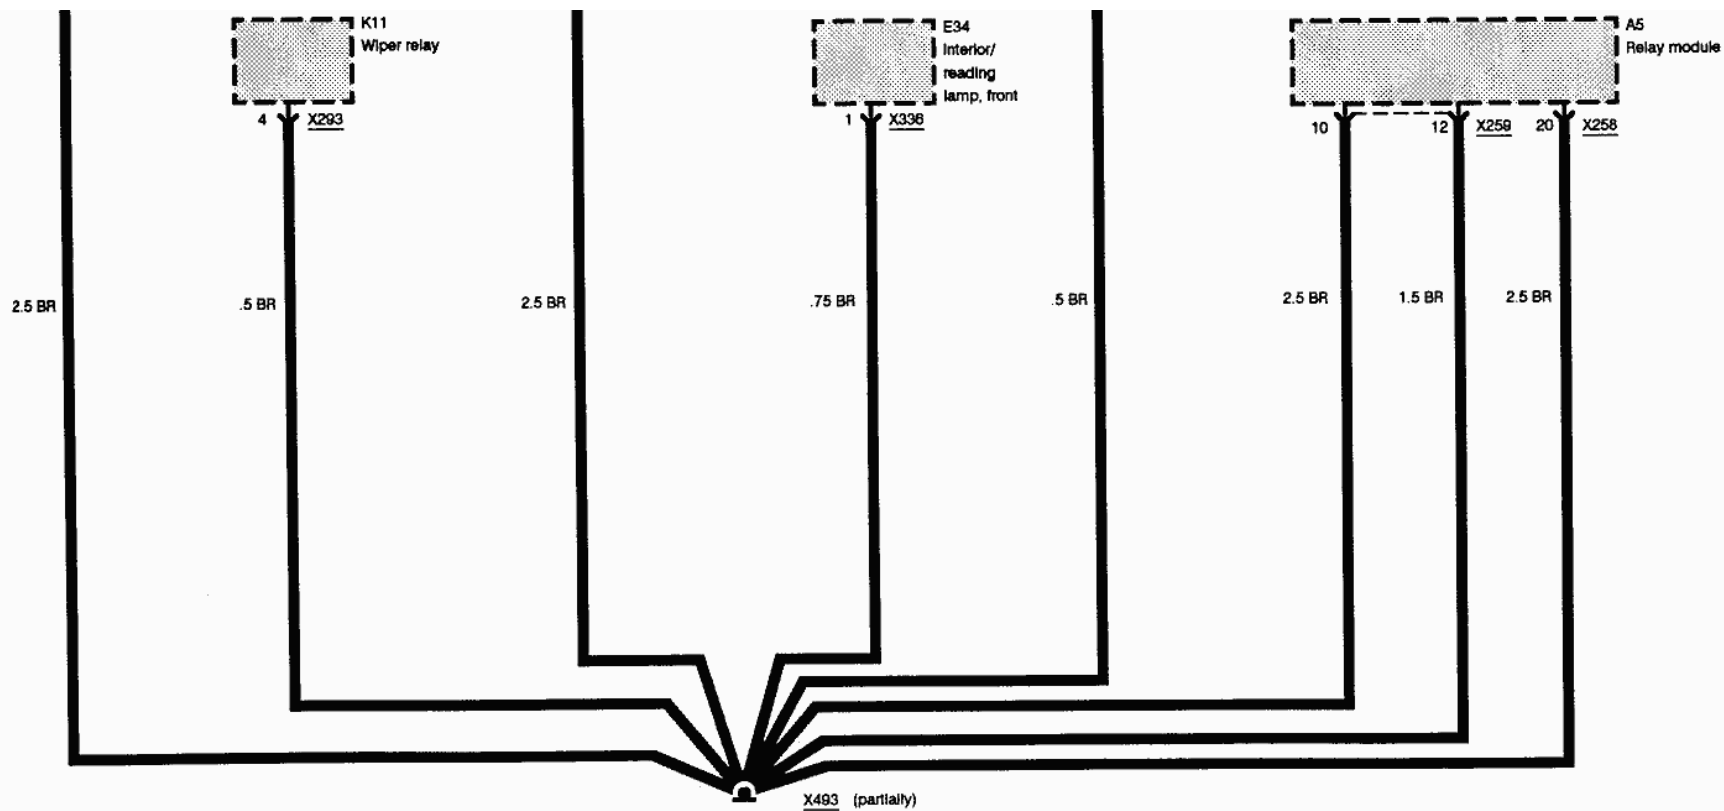


0670.4-17

1994

**BMW 5** Ground distribution  
Ground X493

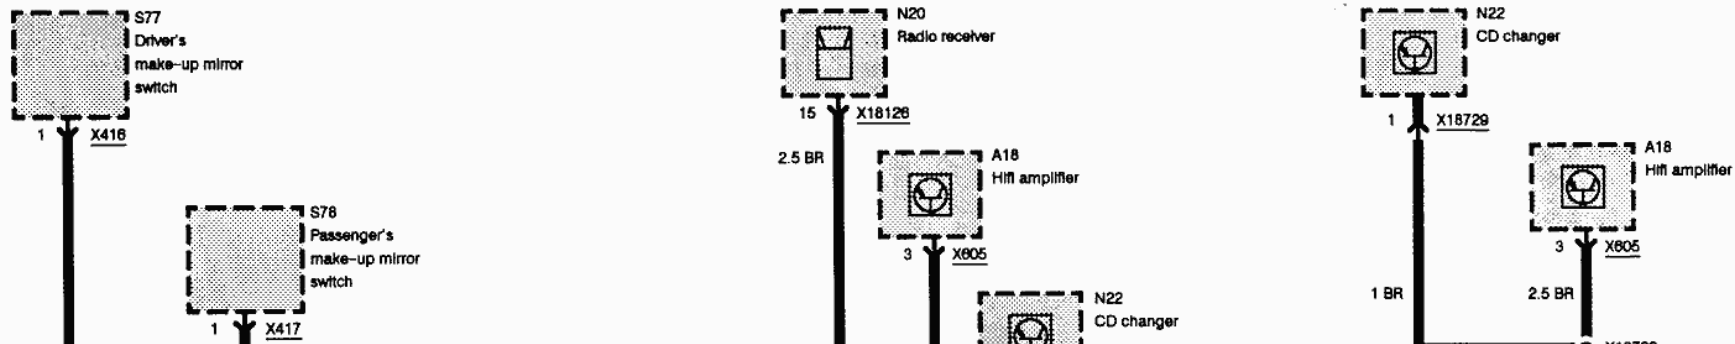

09/93



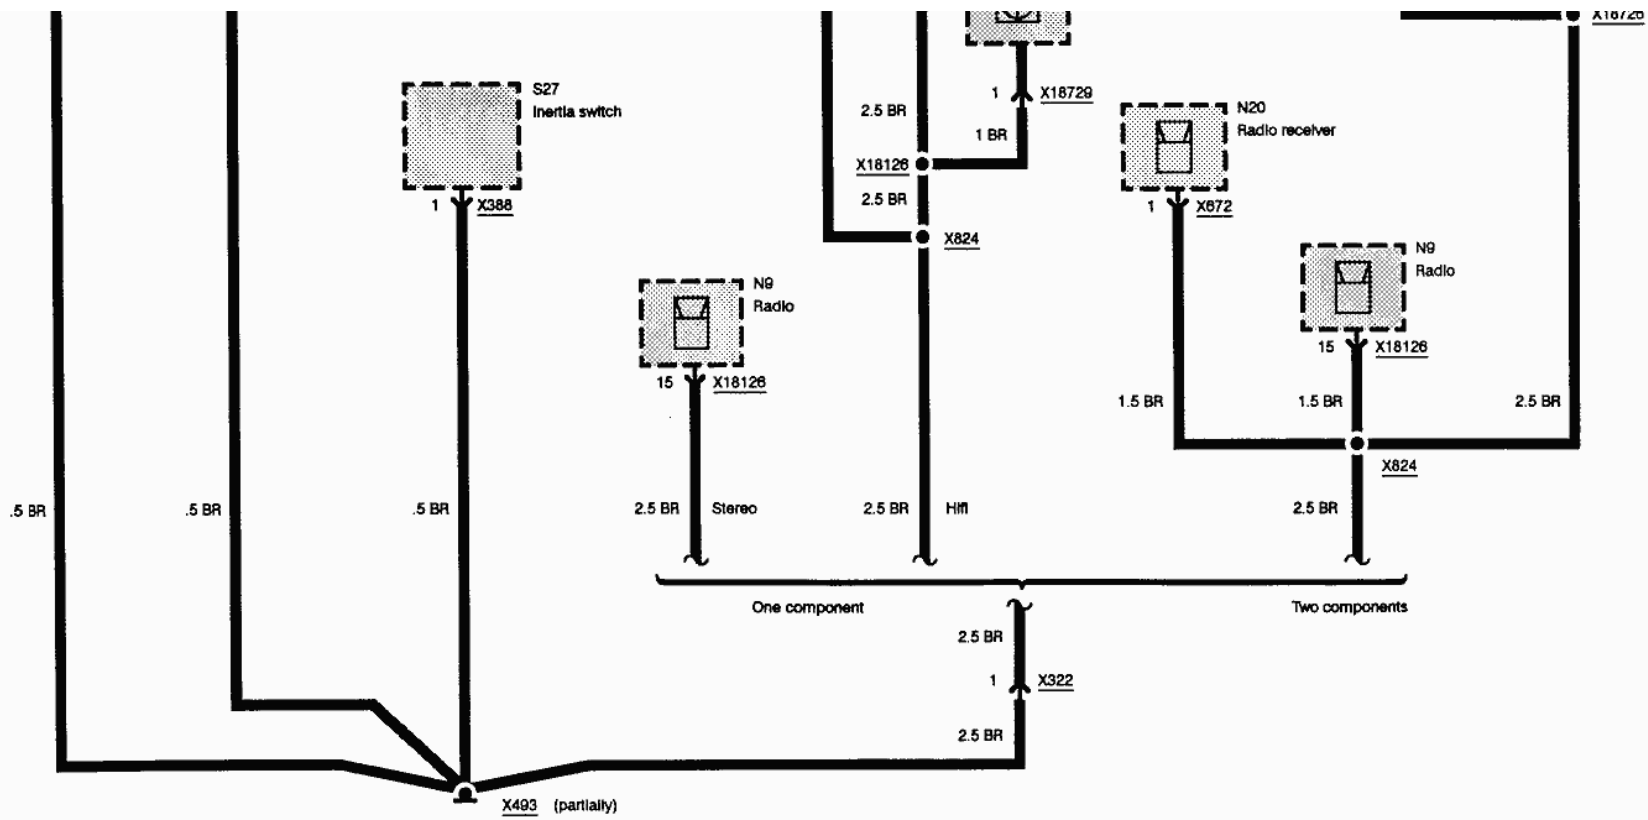


0670.4-18

1994


**BMW 5** Ground distribution  
Ground X495

Touring

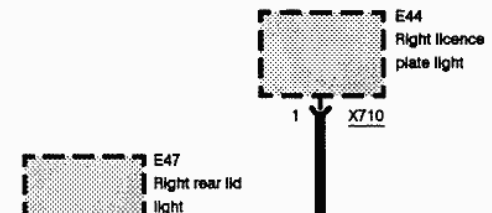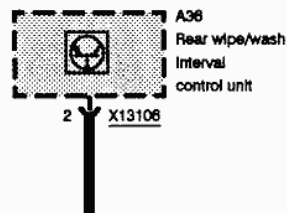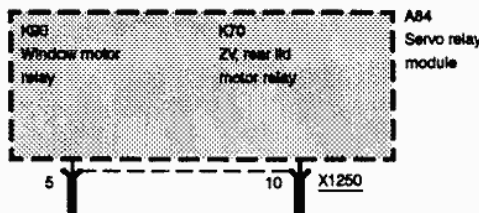

09/93




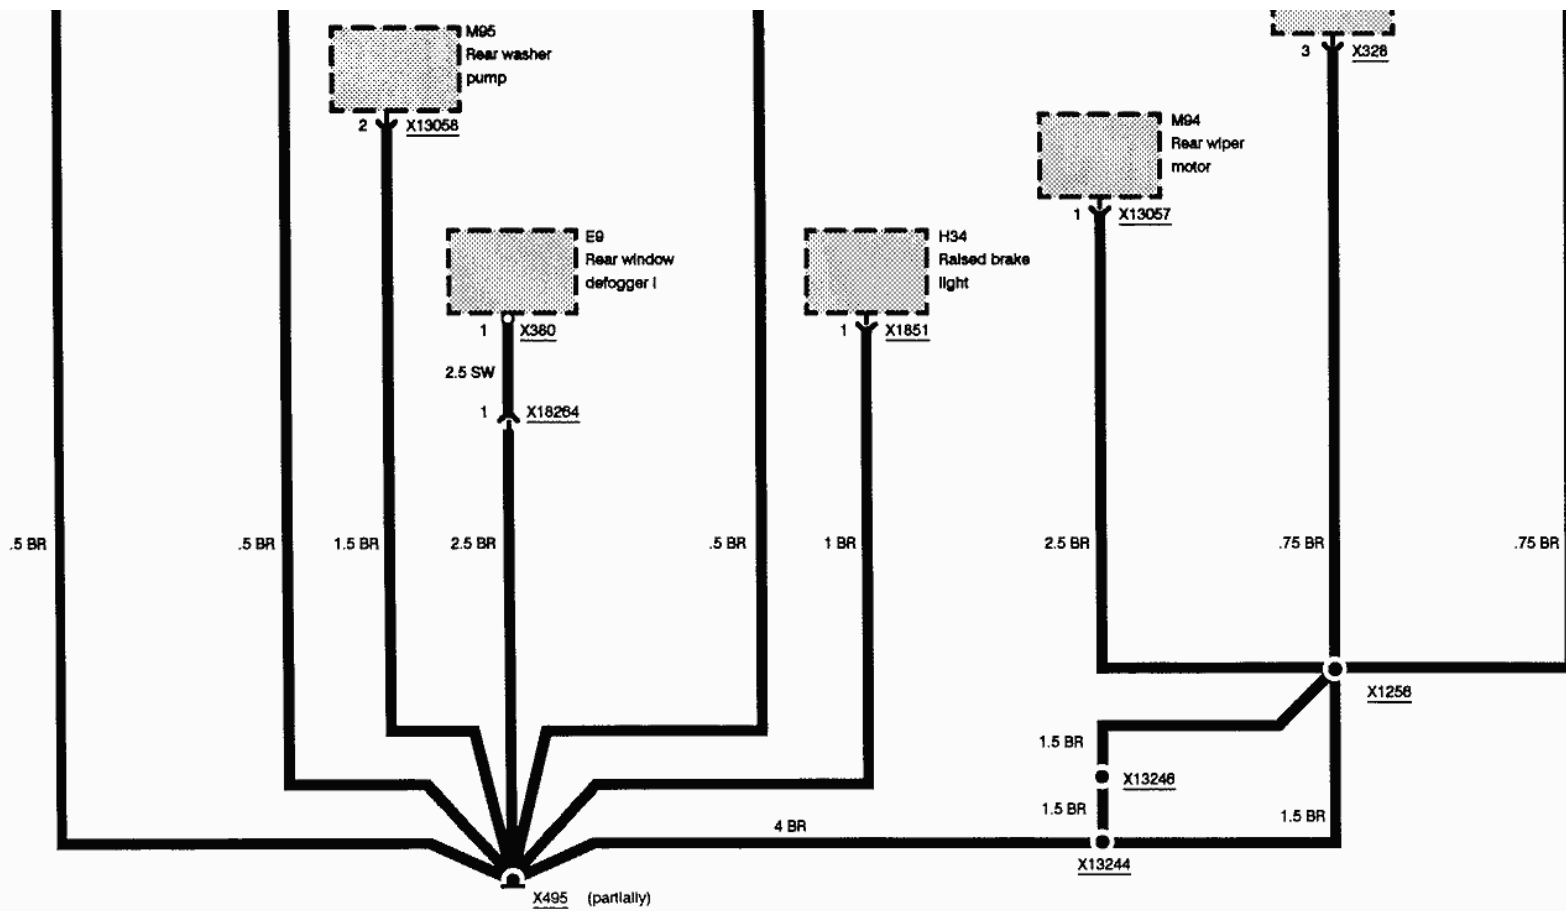


0670.4-19

1994

**BMW 5** Ground distribution  
Ground X495

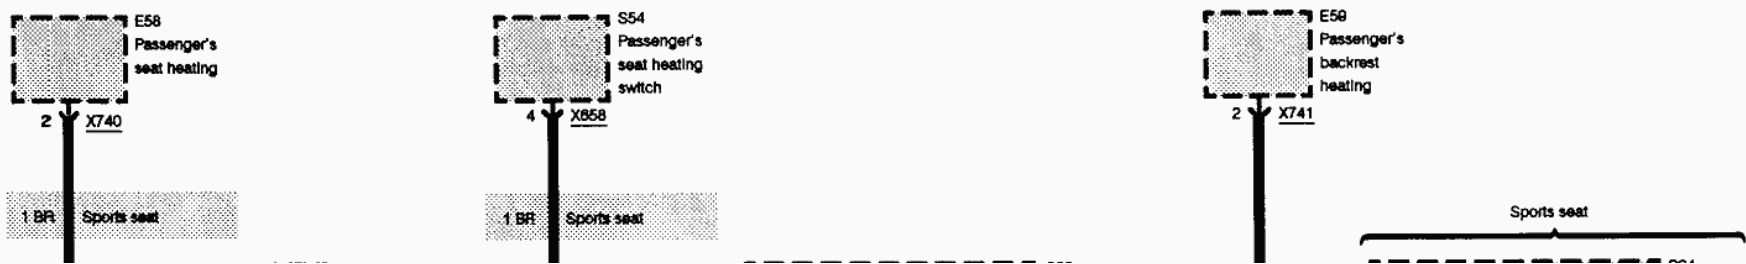

09/93

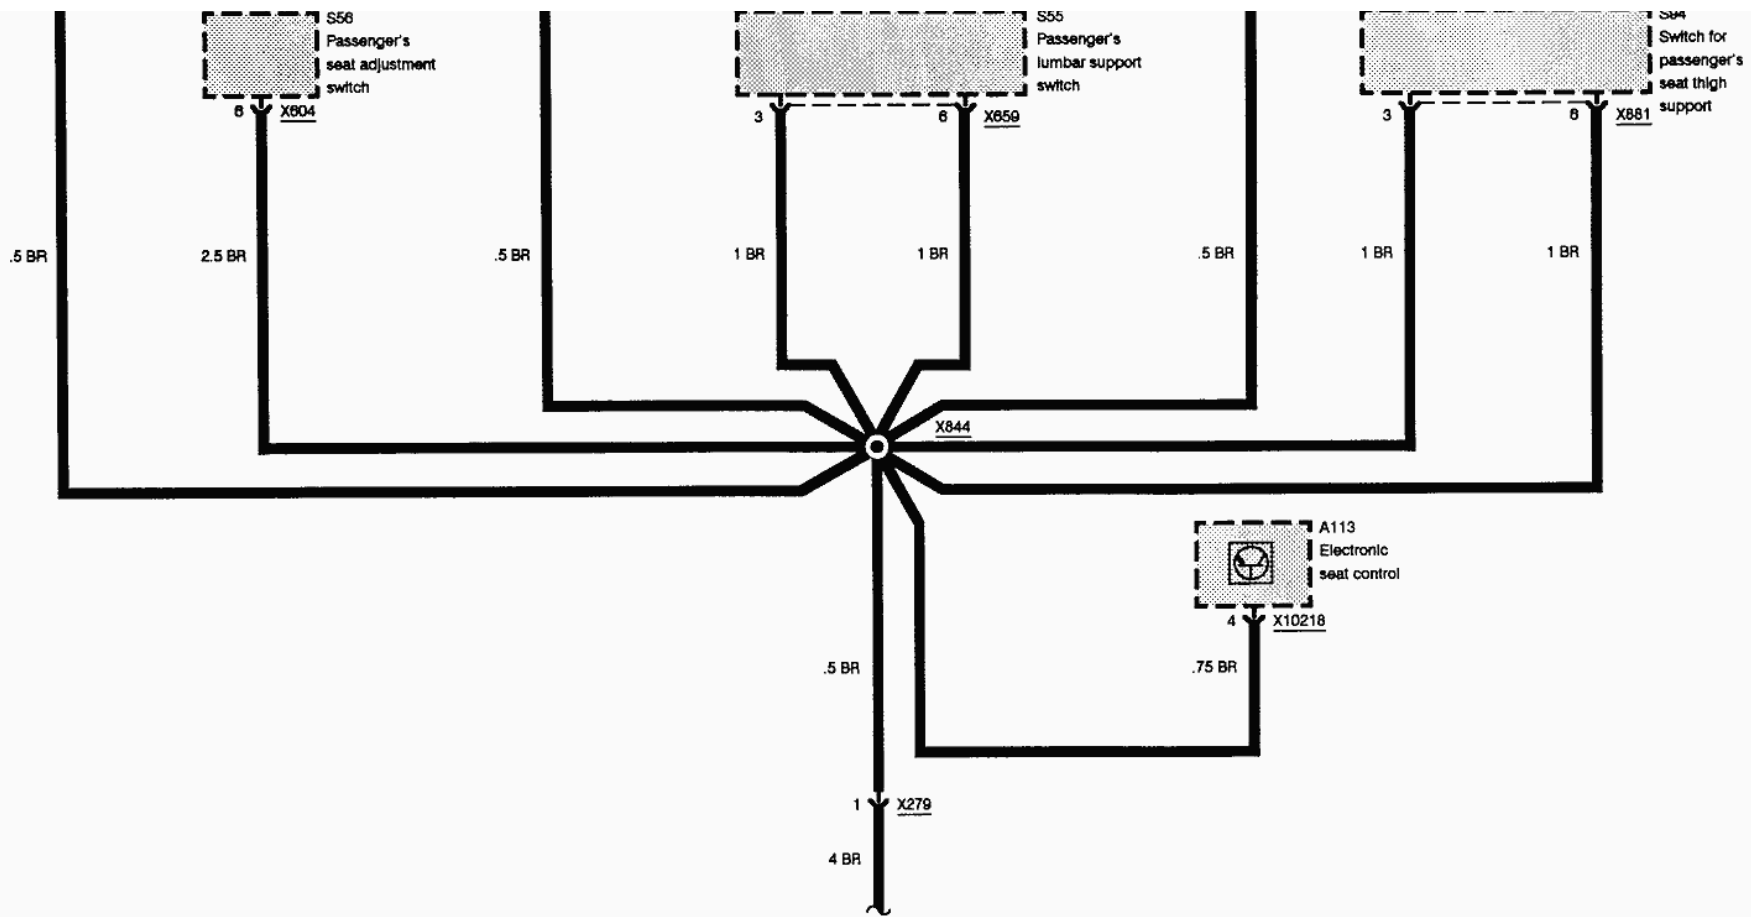


0670.4-20


1994



H8  
Front right  
auxiliary  
flasher unit

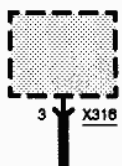


S40  
Power window  
switch (centre  
console)

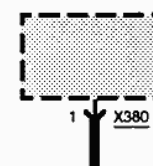

E9  
Rear window  
defogger I





09/93

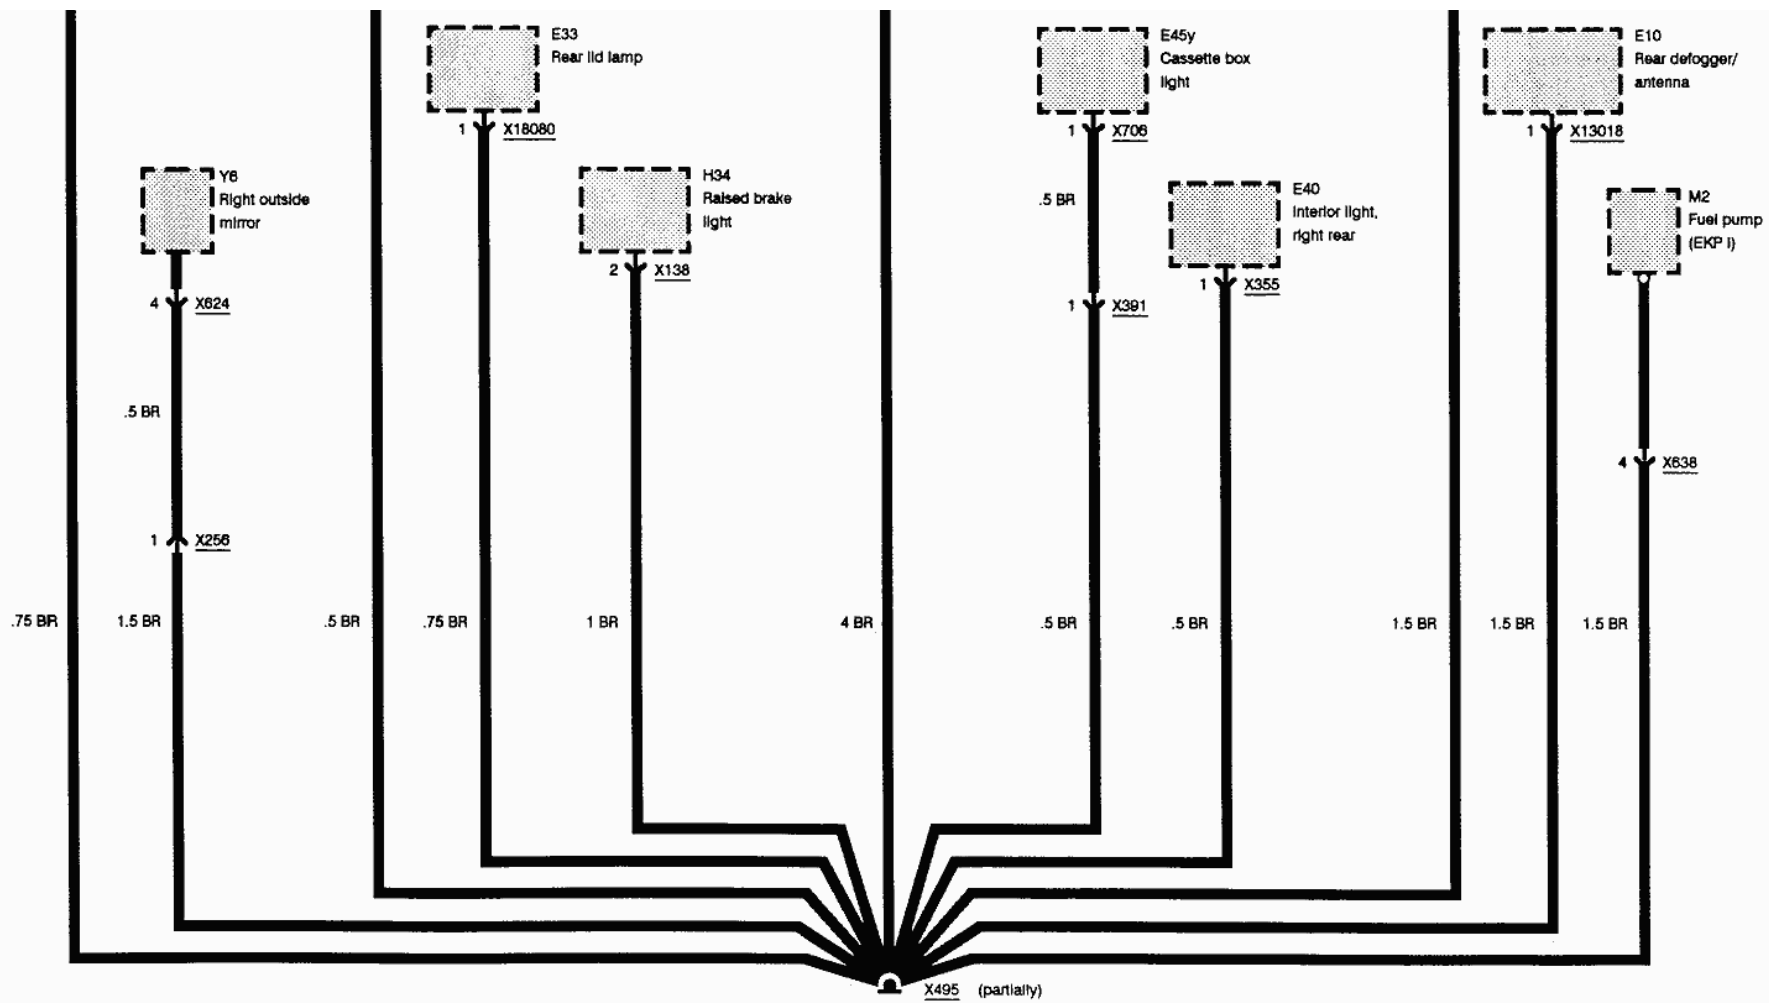


0670.4-21

1994

**BMW 5** Ground distribution  
Ground X496

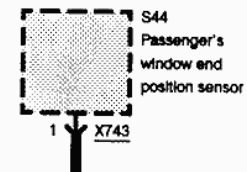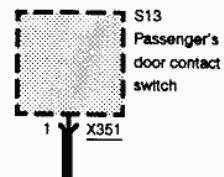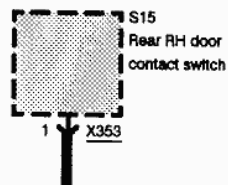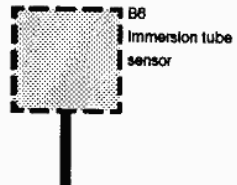

09/93

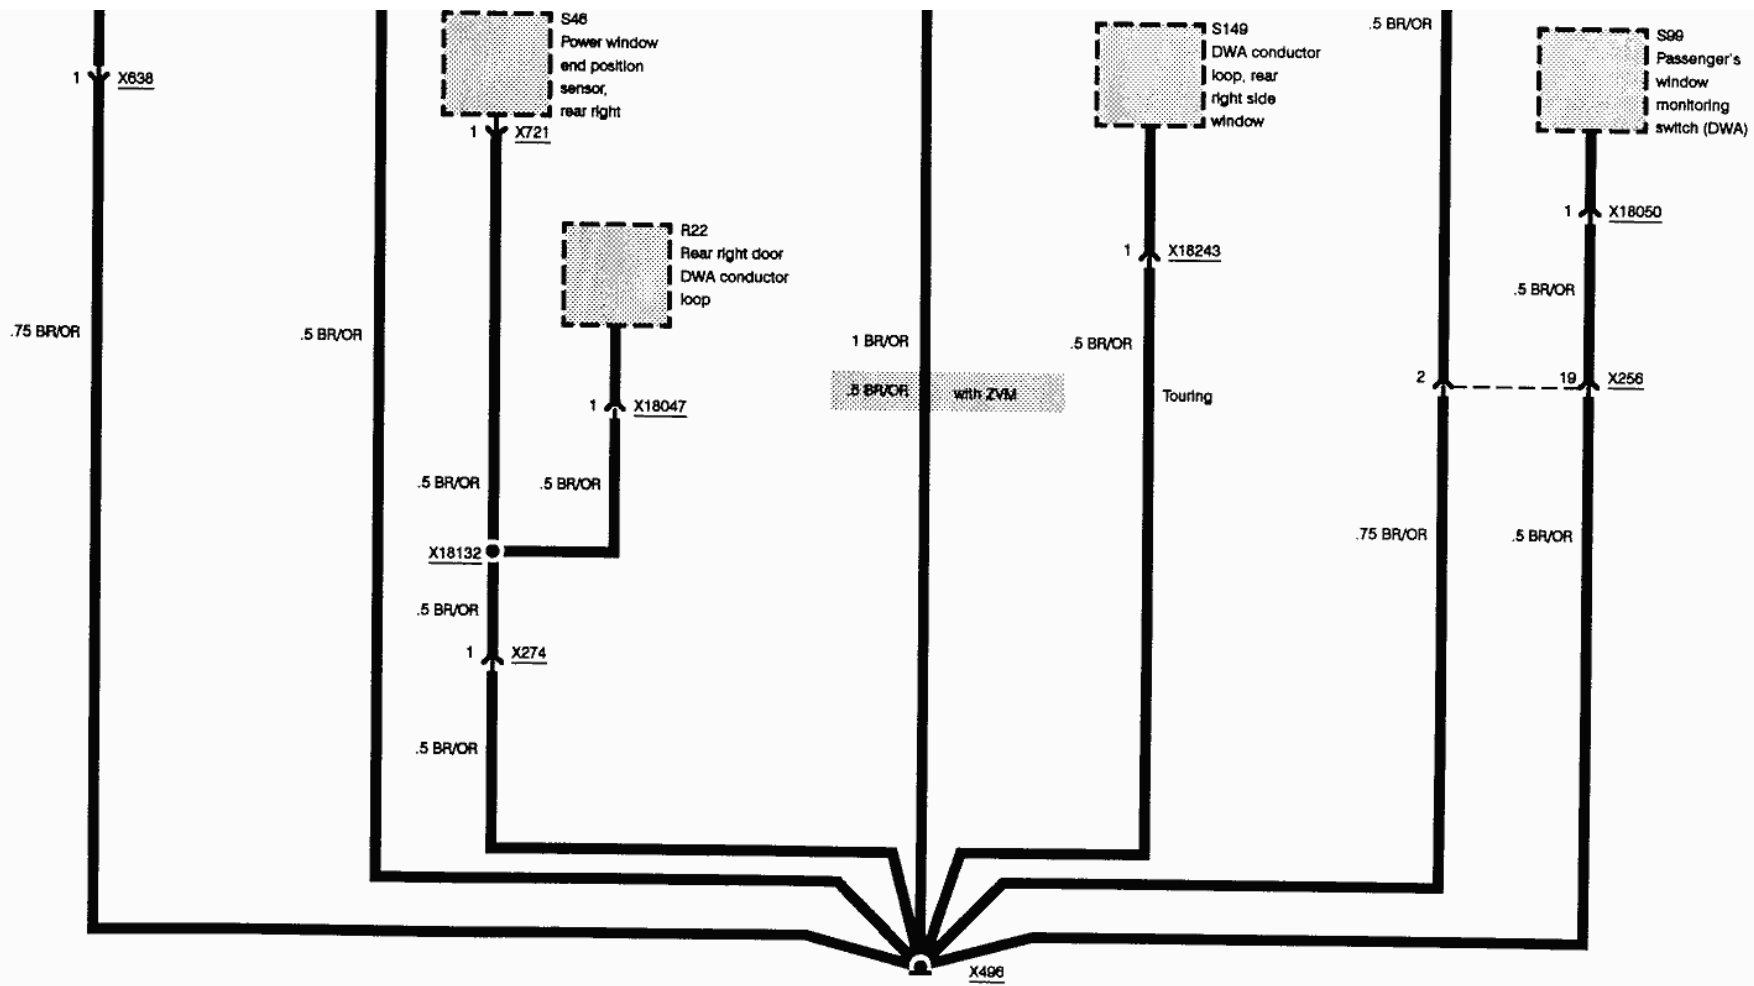

0670.4-22

1994




**Ground distribution**  
**Ground X811**

Y7  
Metering pump  
(Independent)

A14  
Independent  
heating/

E50  
Independent  
heating/

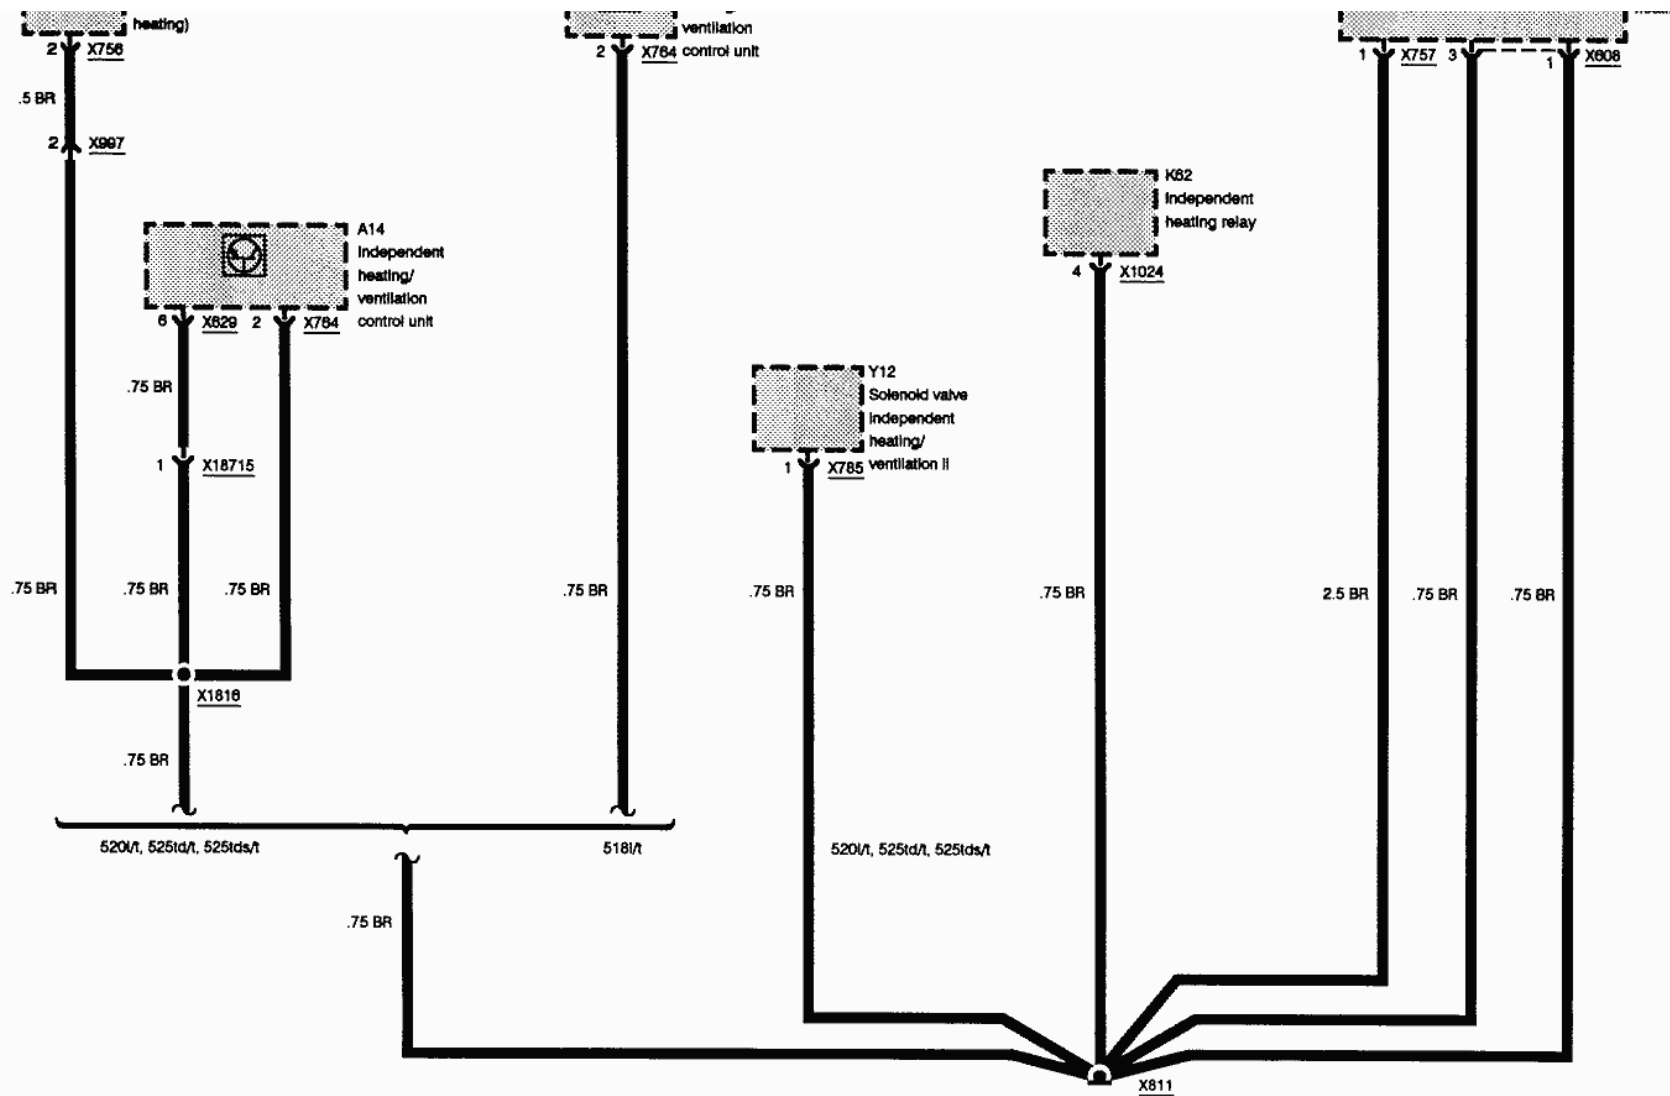


0670.4-23

1994





## Ground distribution
 
### Ground X818 and X820




09/93

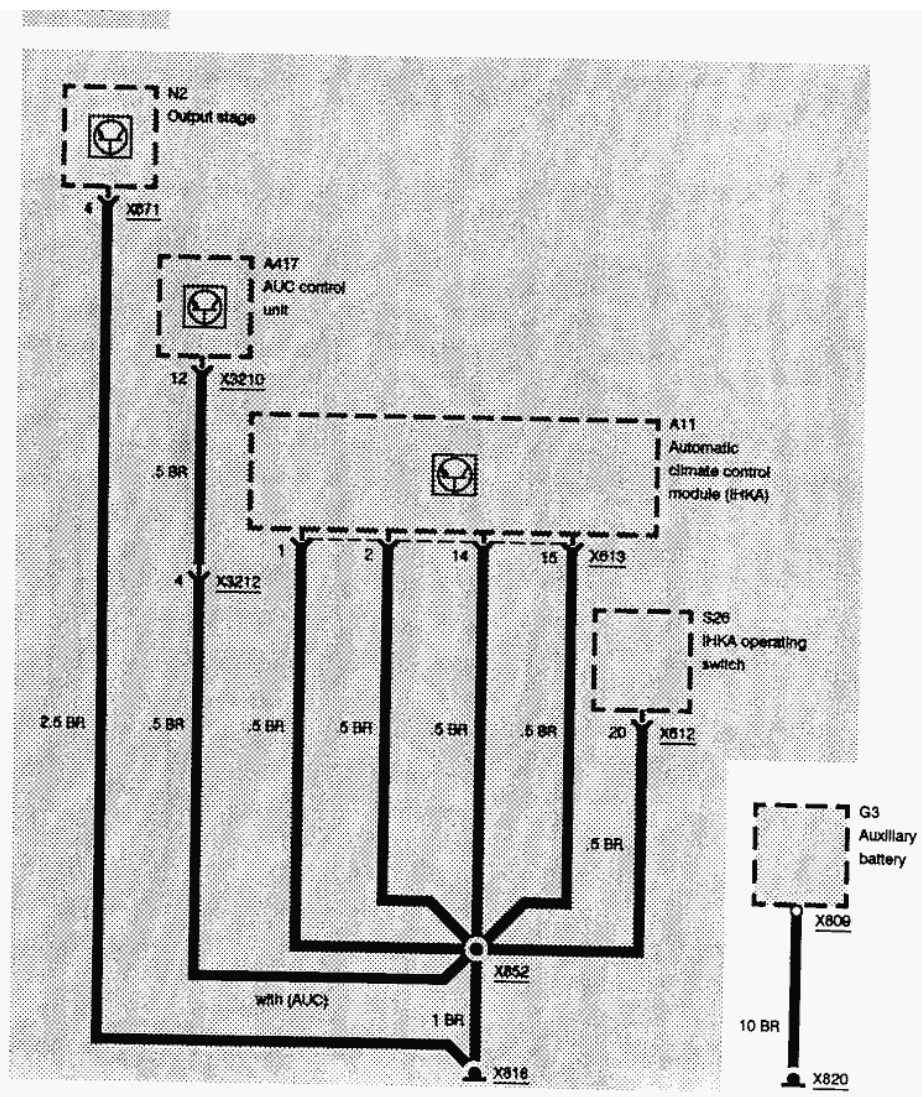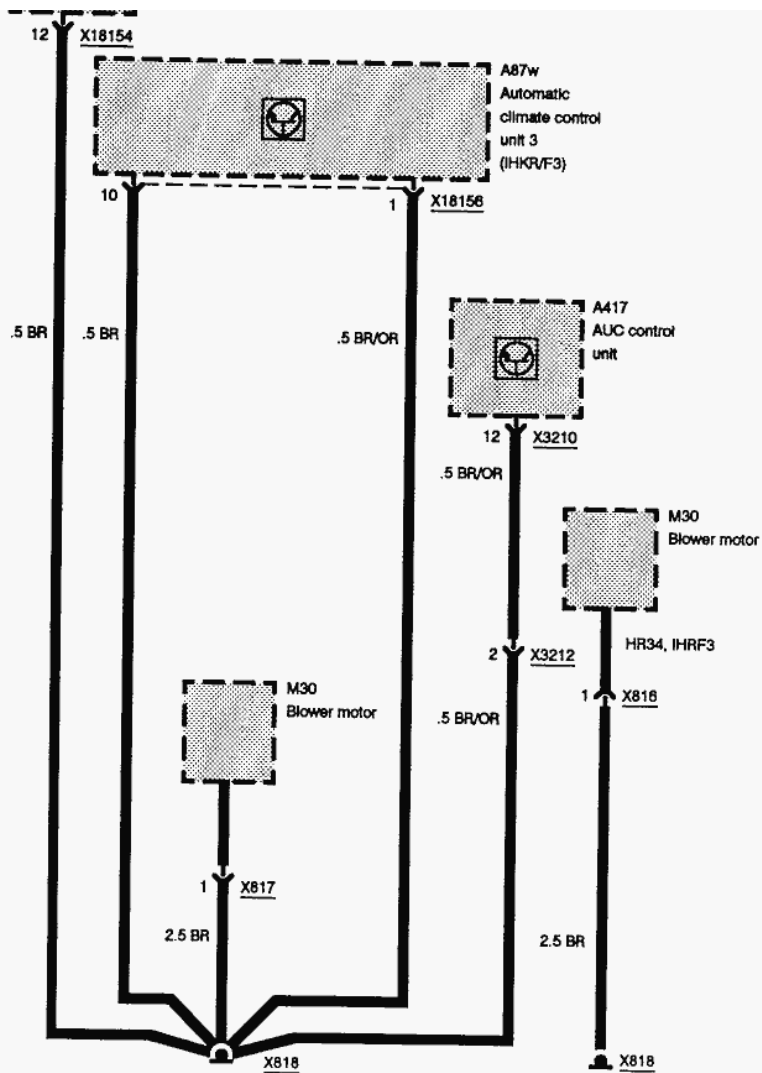

0670.4-24

1994

09/9

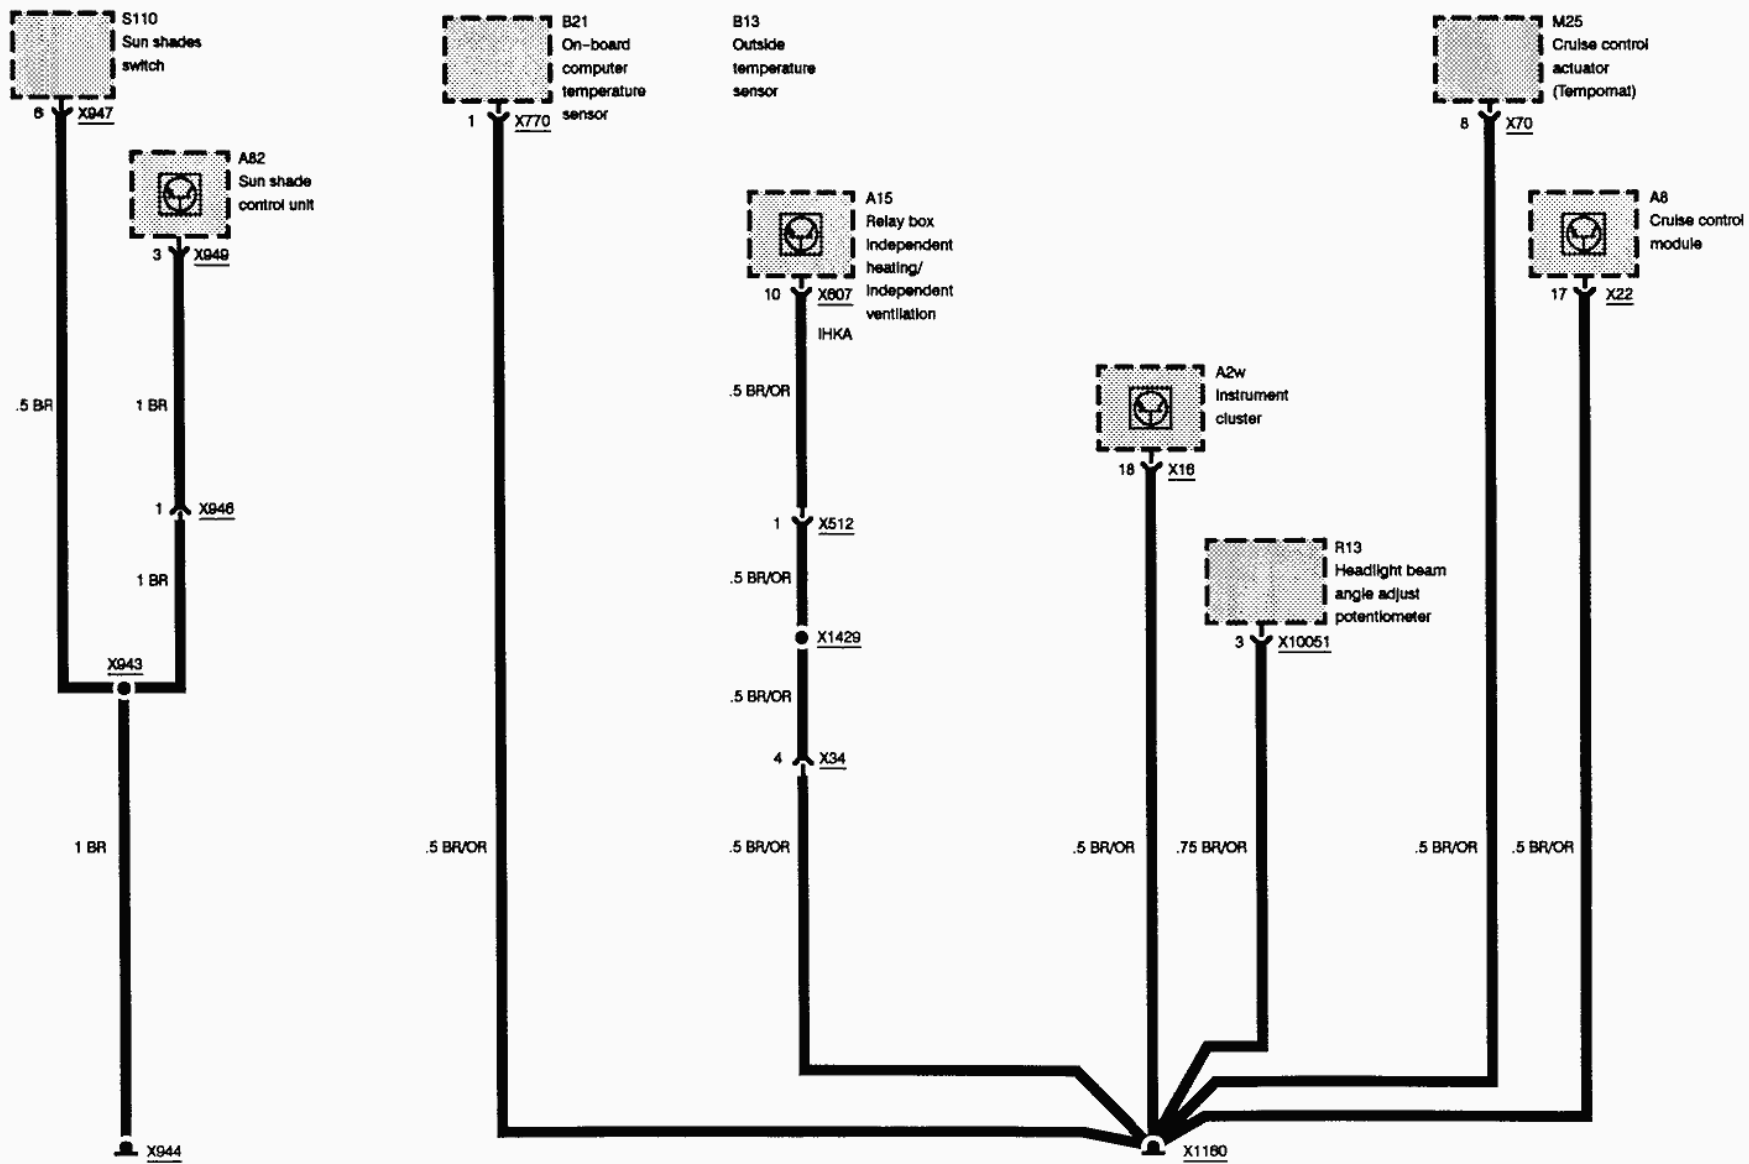


0670.4-25 1994



**Ground distribution**  
**Ground X2042**

525td/t, 525tds/t

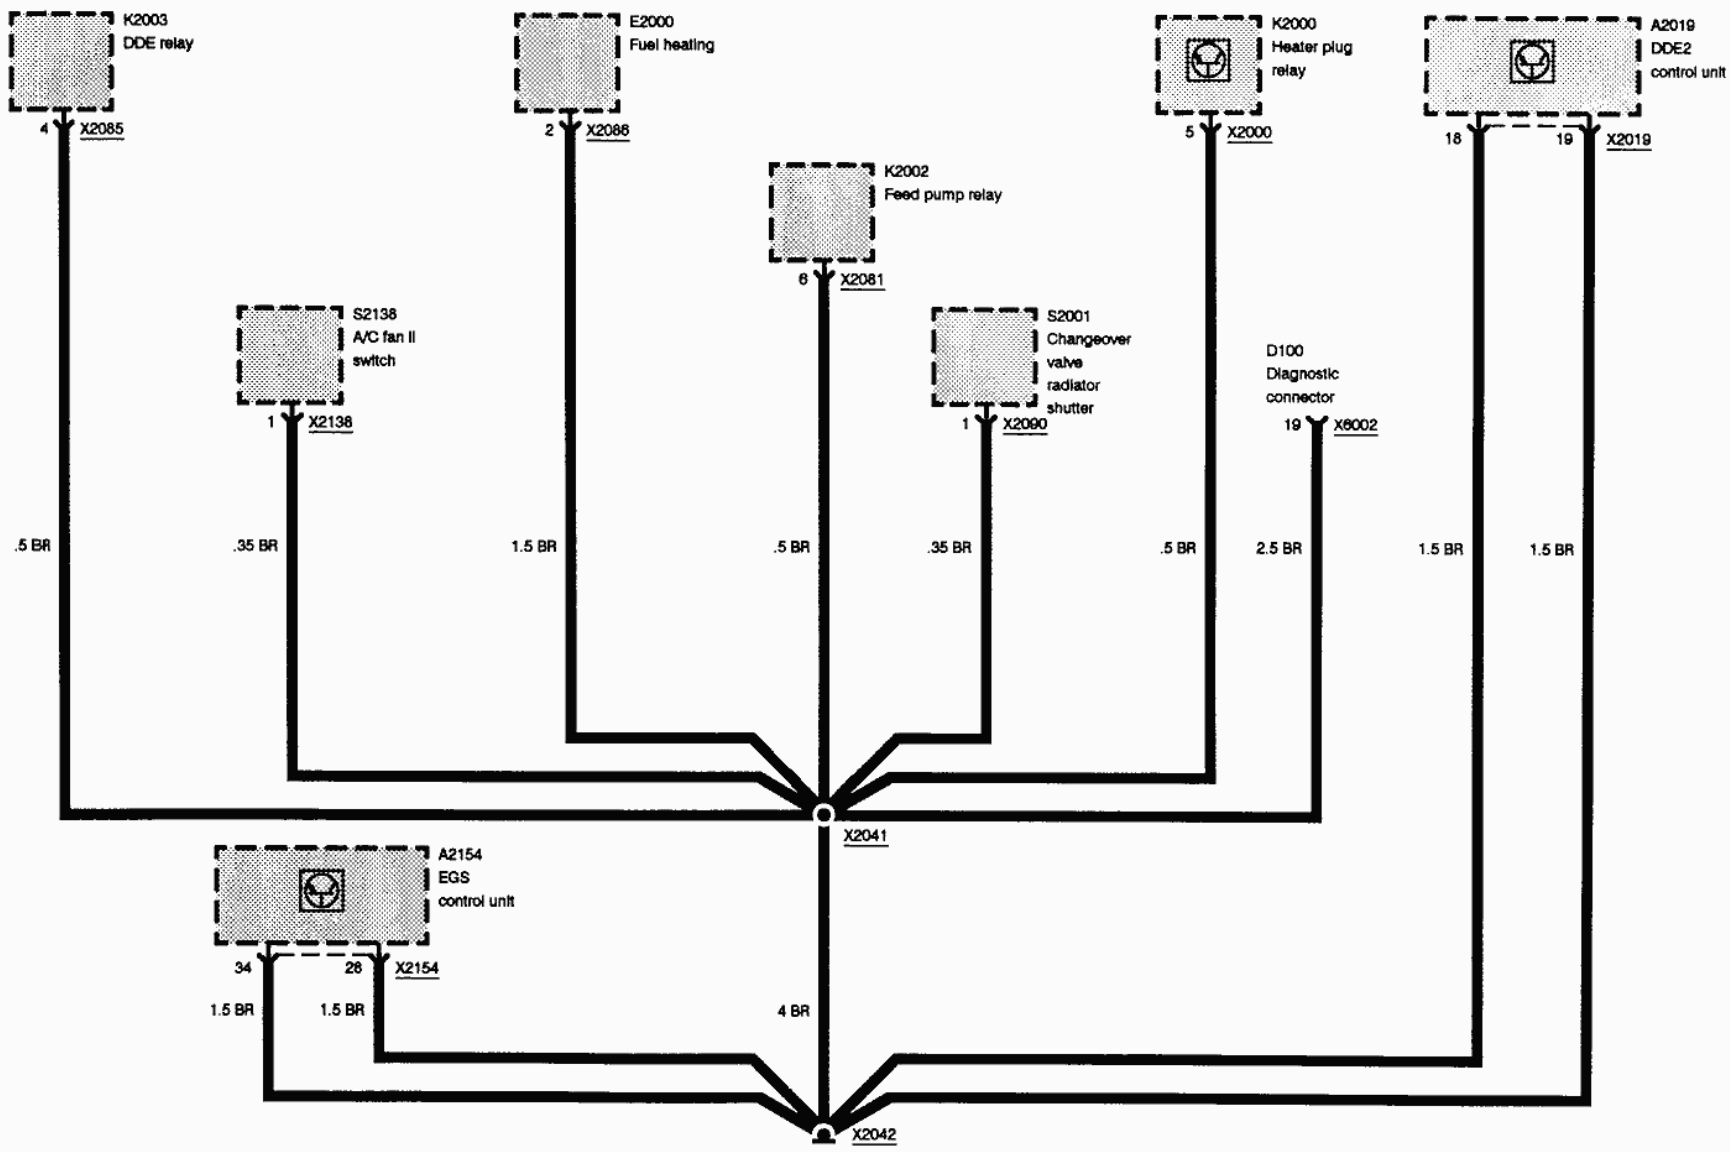






# Ground distribution

525tds/t

## Ground X2091, X2092, X2093, X2094, X2095 and X2096

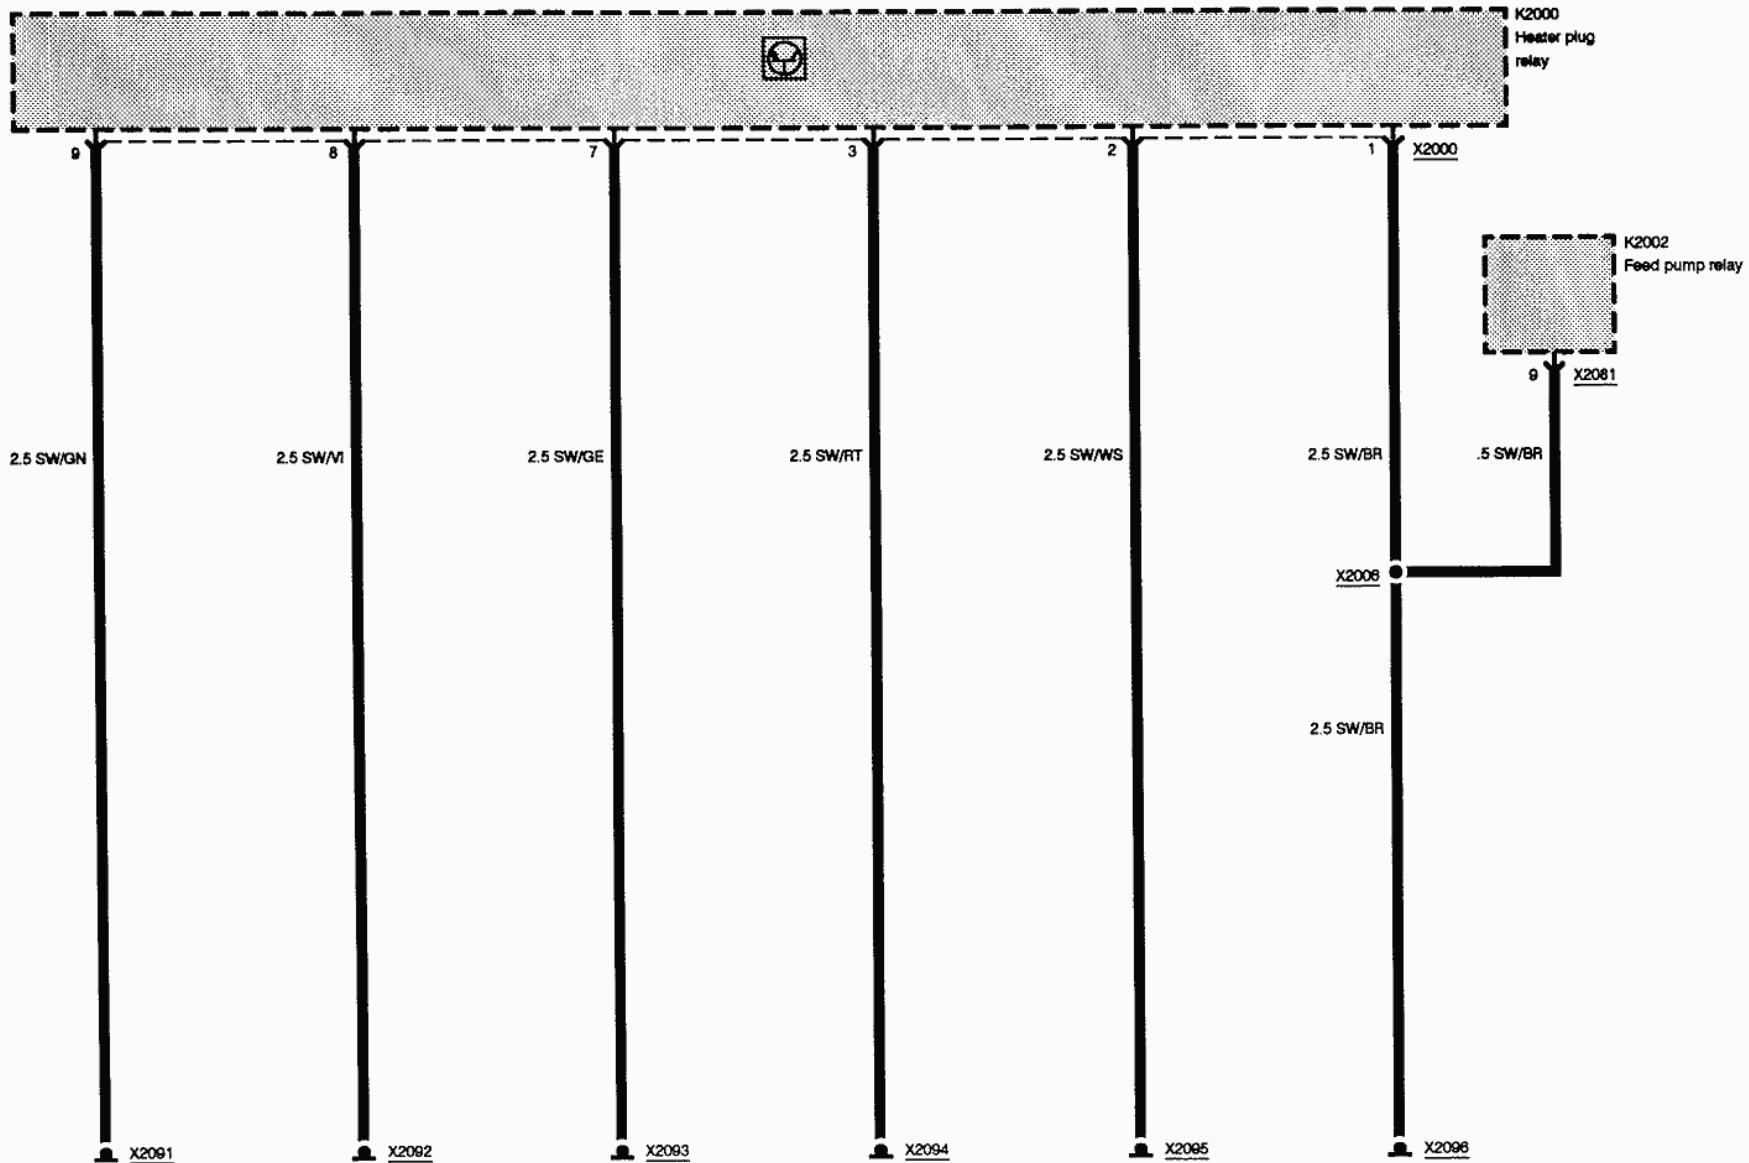

09/93

0670.4-27


1994



# Ground distribution

Taxi

## Ground X3508, X3538 and 3556

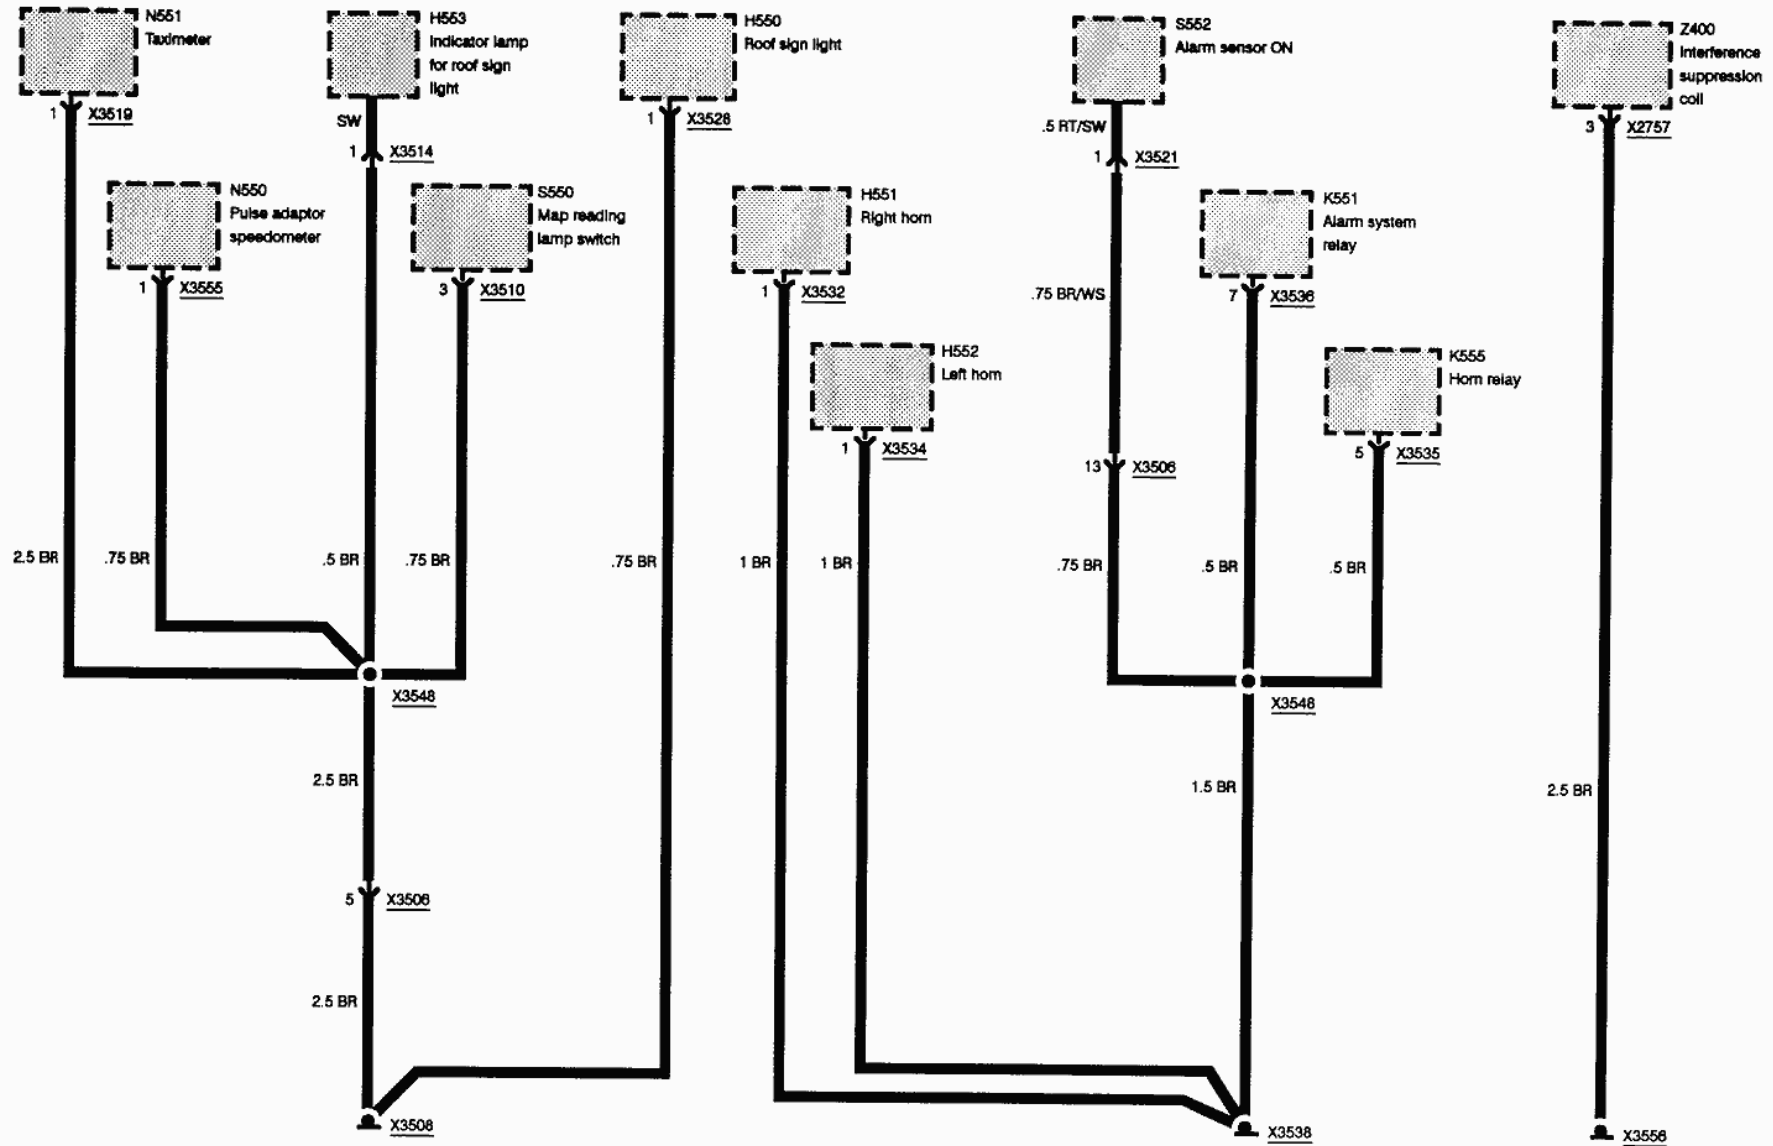

09/93

0670.4-28


1994



# Ground distribution

518i/t

## Ground X6454

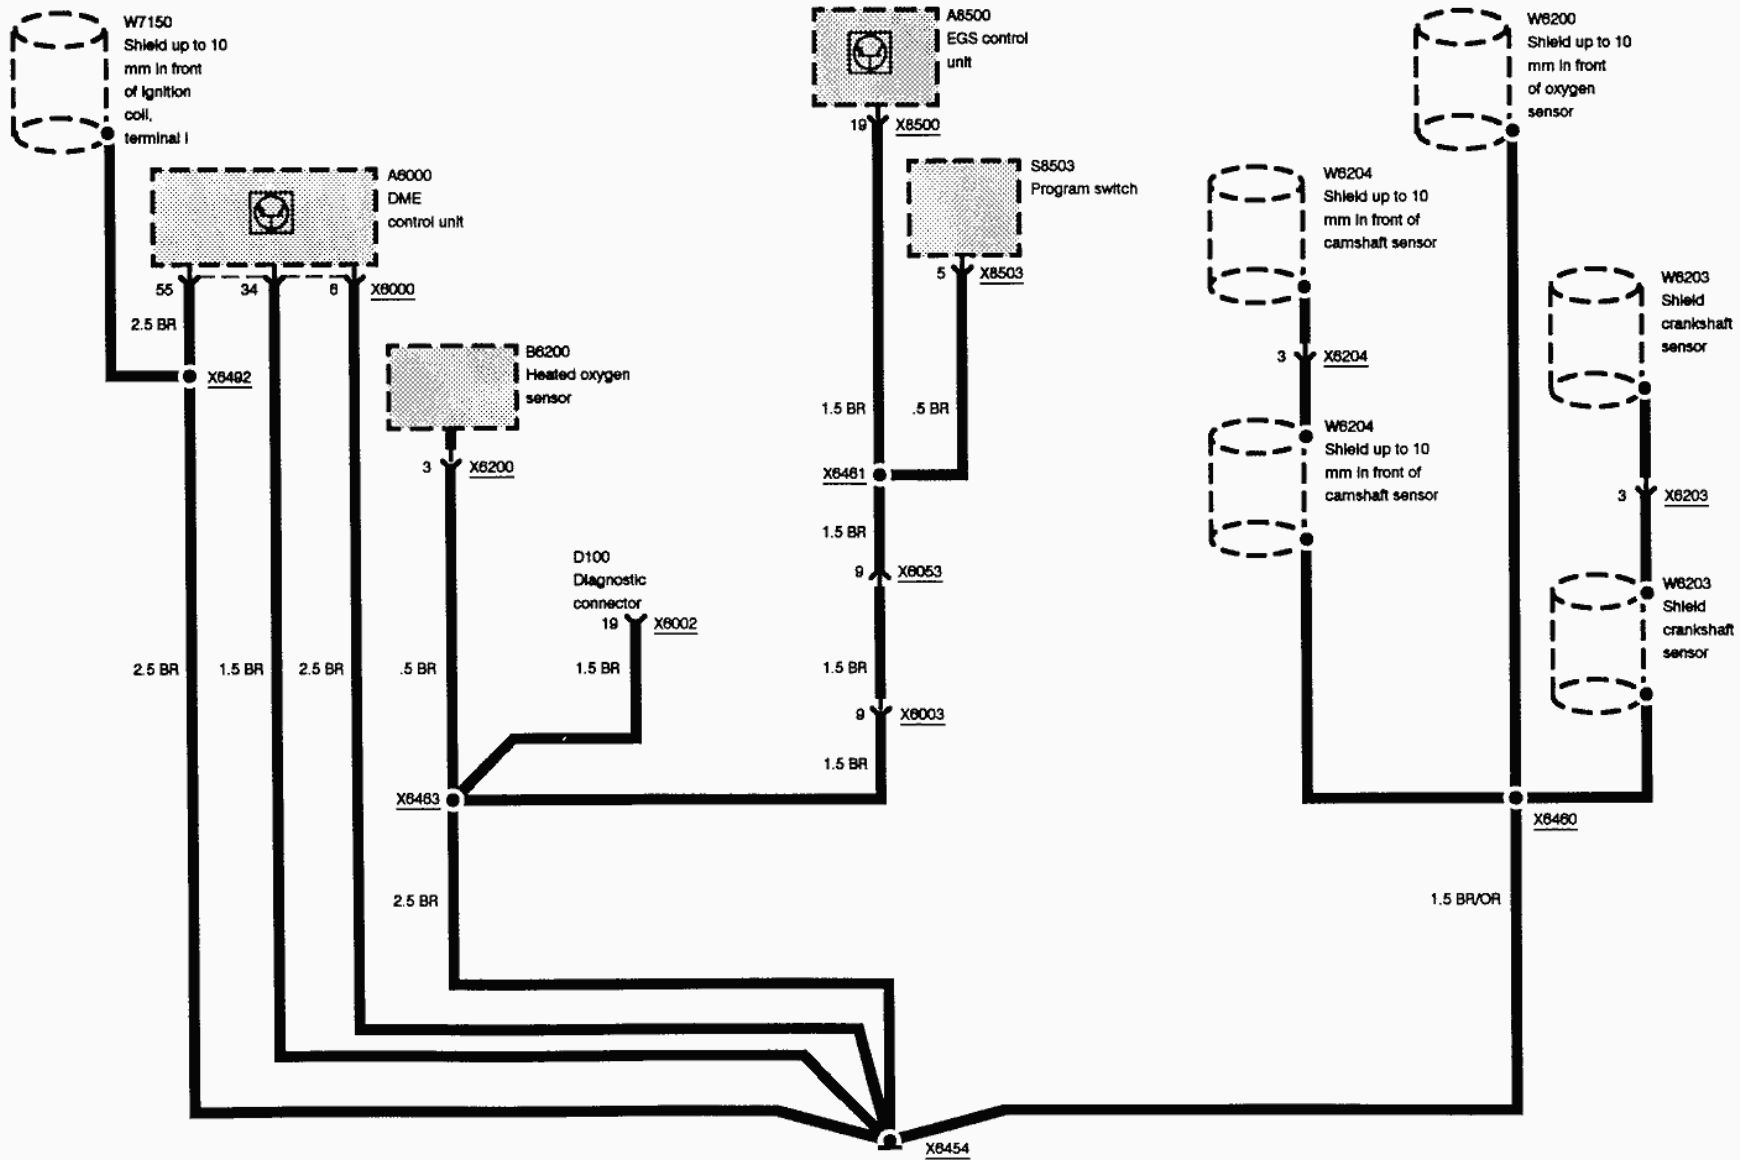

09/93

0670.4-29


1994



# Ground distribution

## Ground X6454

520i/t

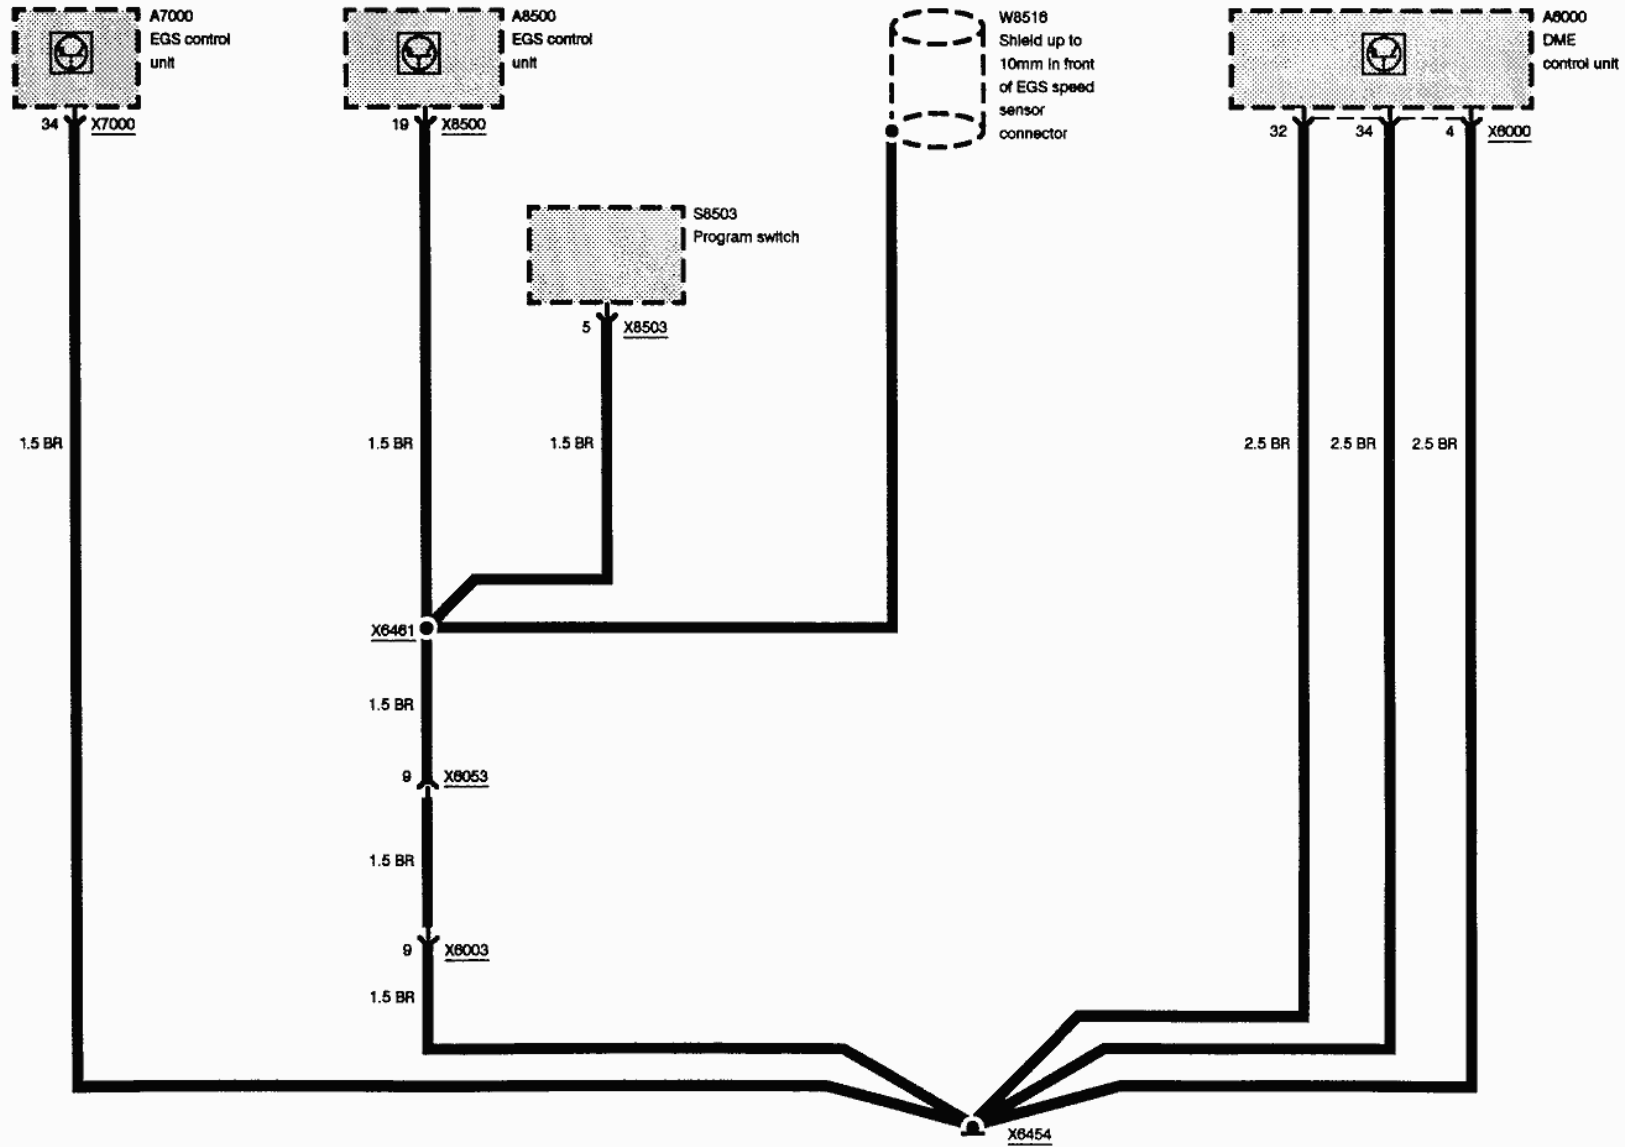


09/93

0670.4-30

1994

# BMW 5 Ground distribution

## Ground X6455

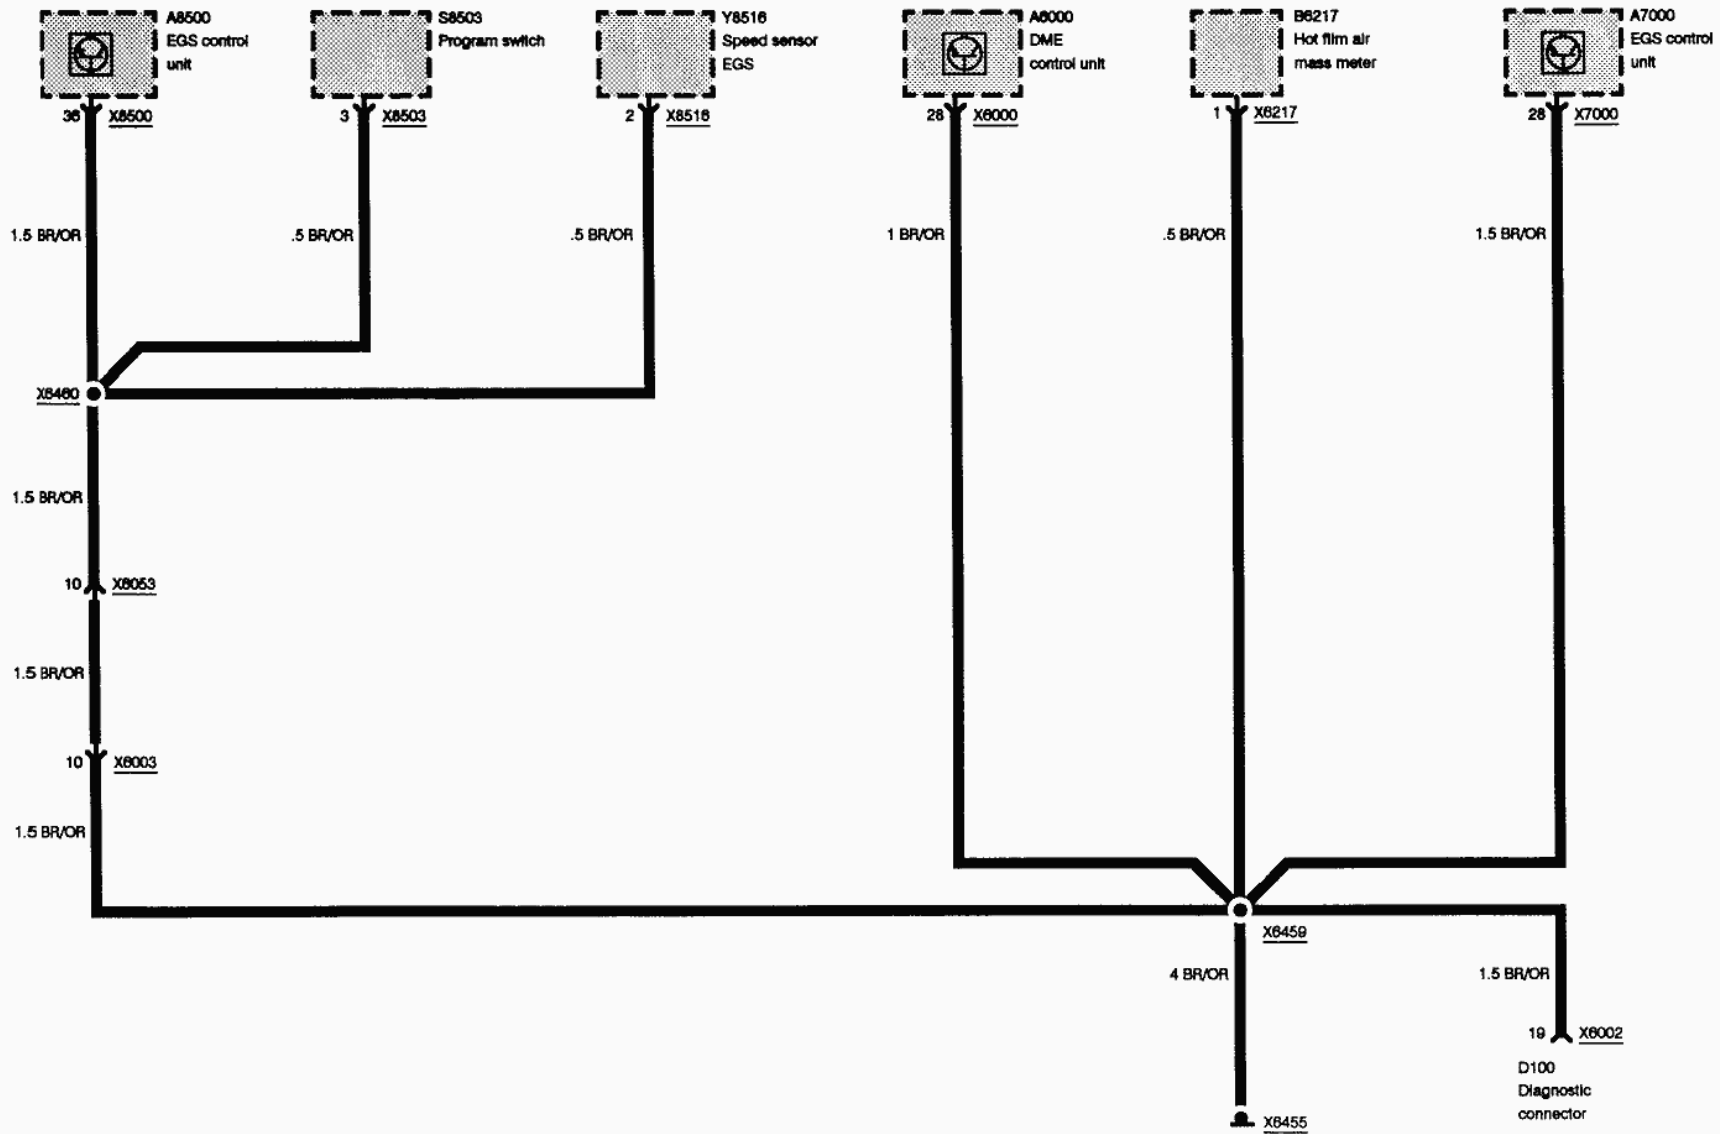

09/93

0670.4-31


1994



# Ground distribution

520i/t

## Ground X6456 and X18194

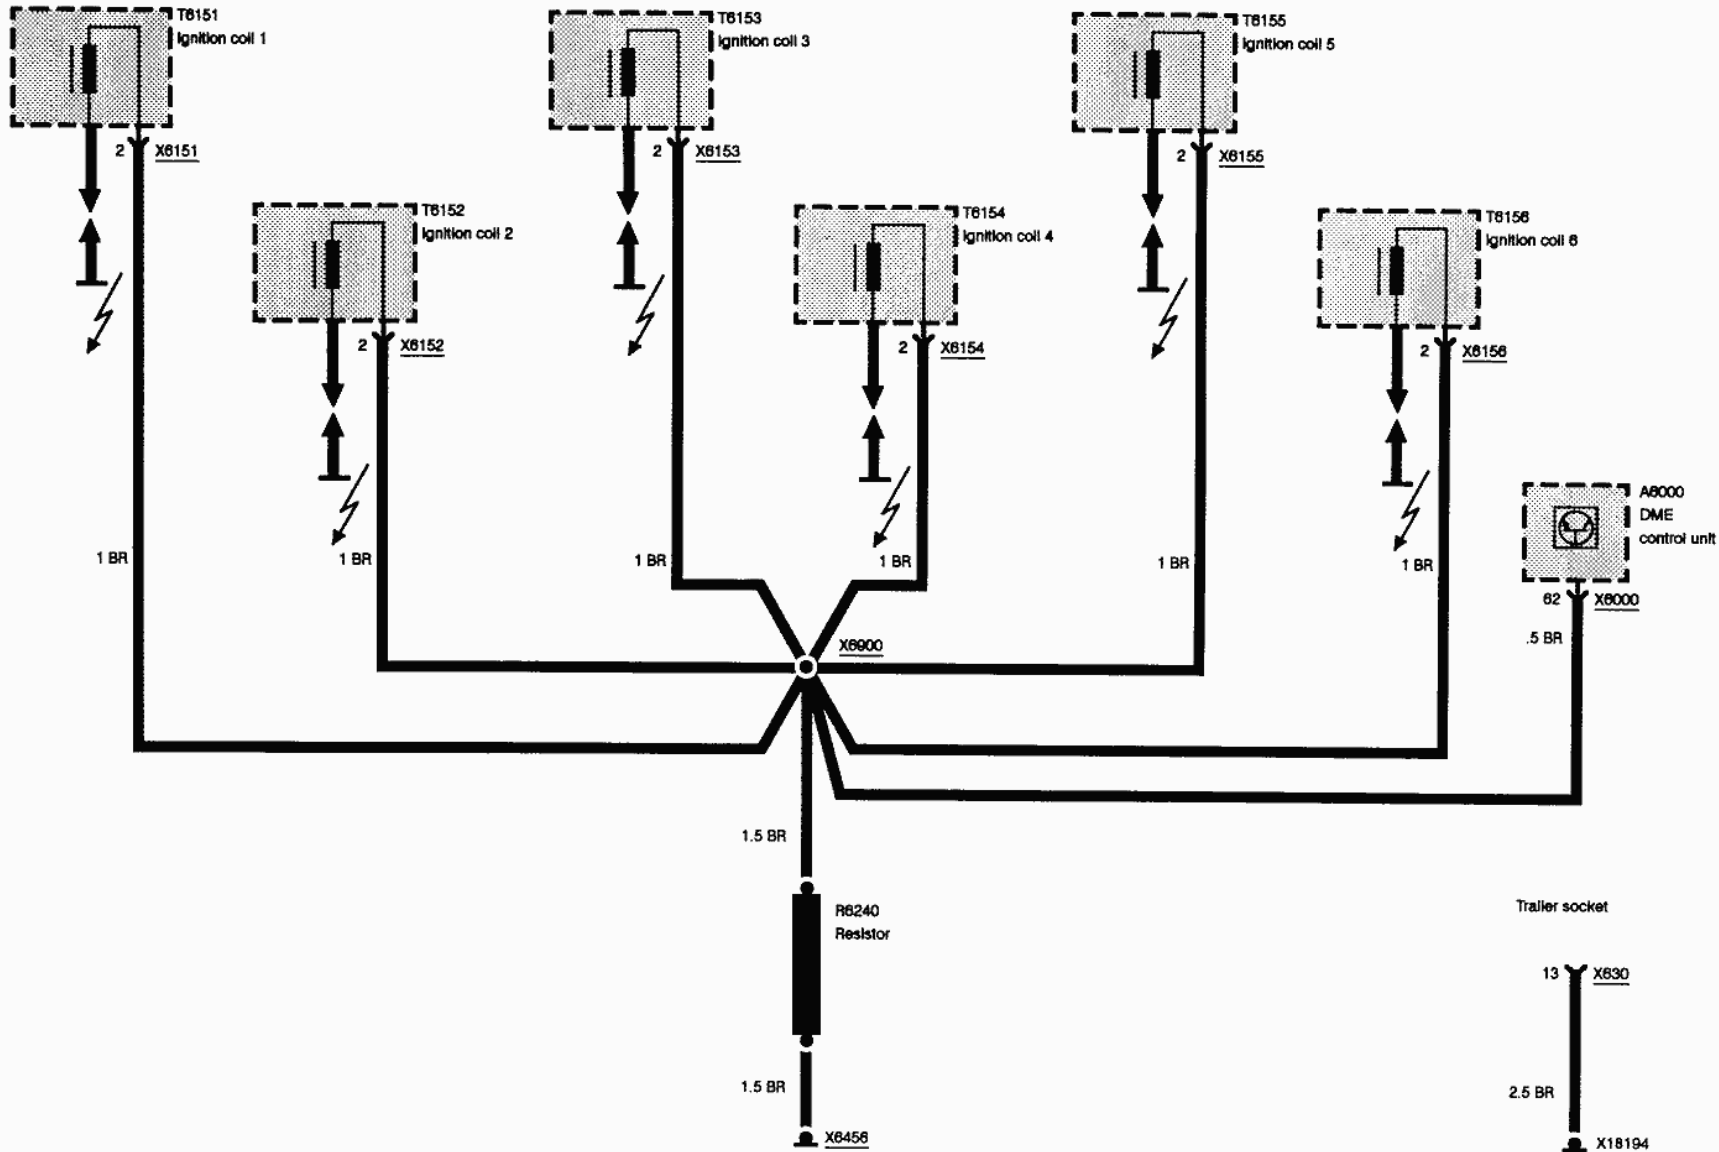

09/93

0670.4-32

1994



**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Headlight washer (ZKE/SRA)

Scheme 6167.0

09/93

6167.0-00

1994




Washer

Headlight washer  
lights

lights

Headlight/fog  
lights


Headlight/fog  
light  
6312.0

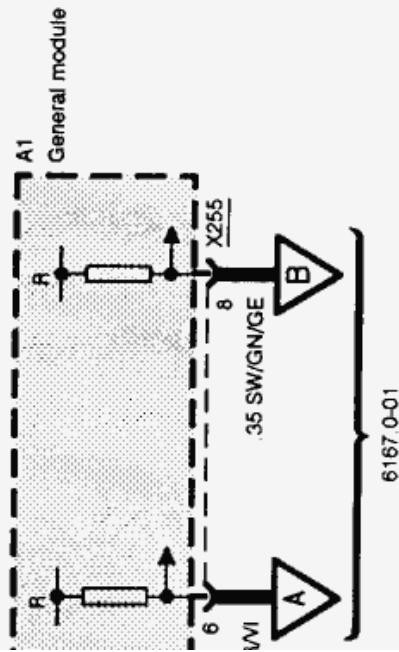



# Headlight washer (ZKE/SRA)

## Inputs

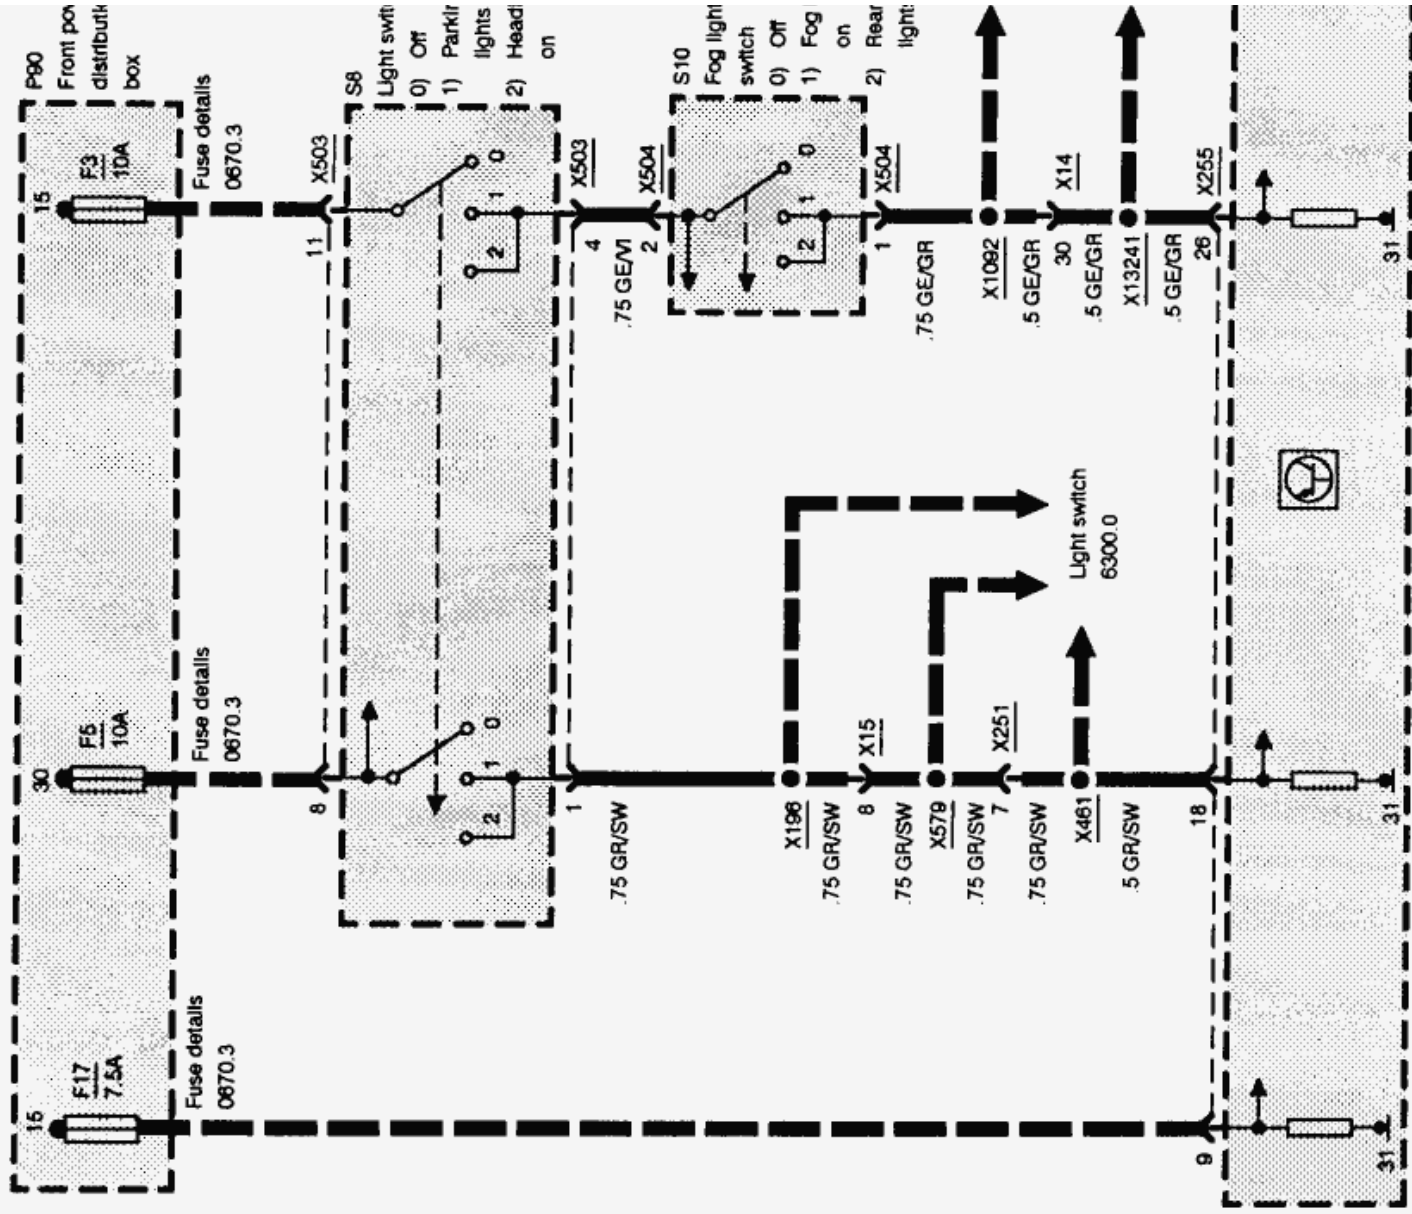




09/93


6167.0-01

1994

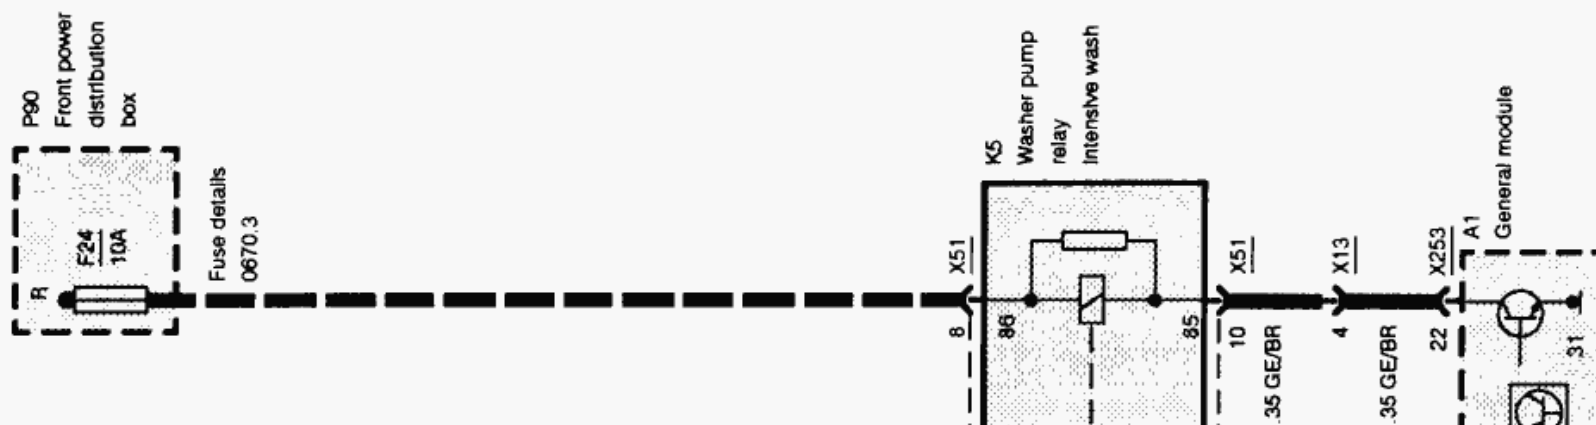

# Headlight washer (ZKE/SRA)

Inputs

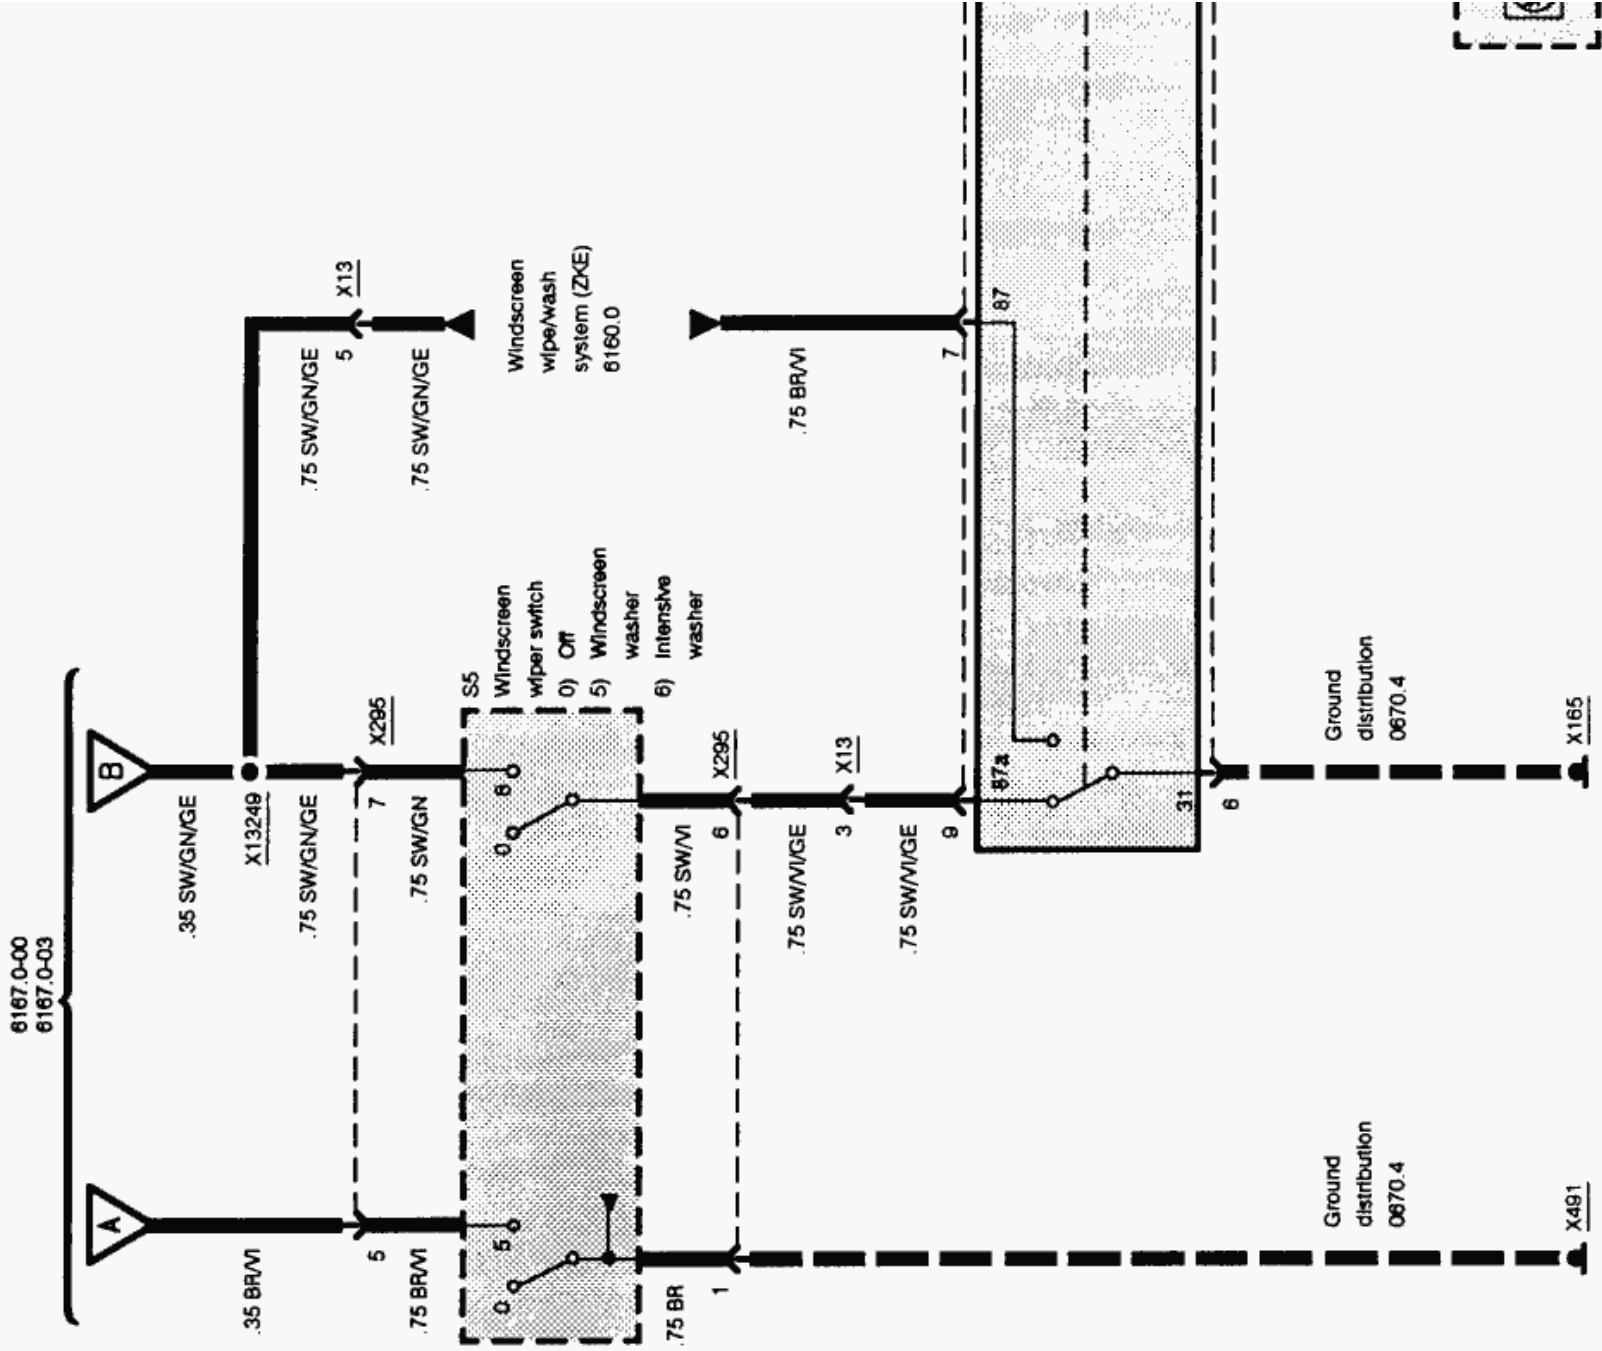




09/93


6167.0-02

1994

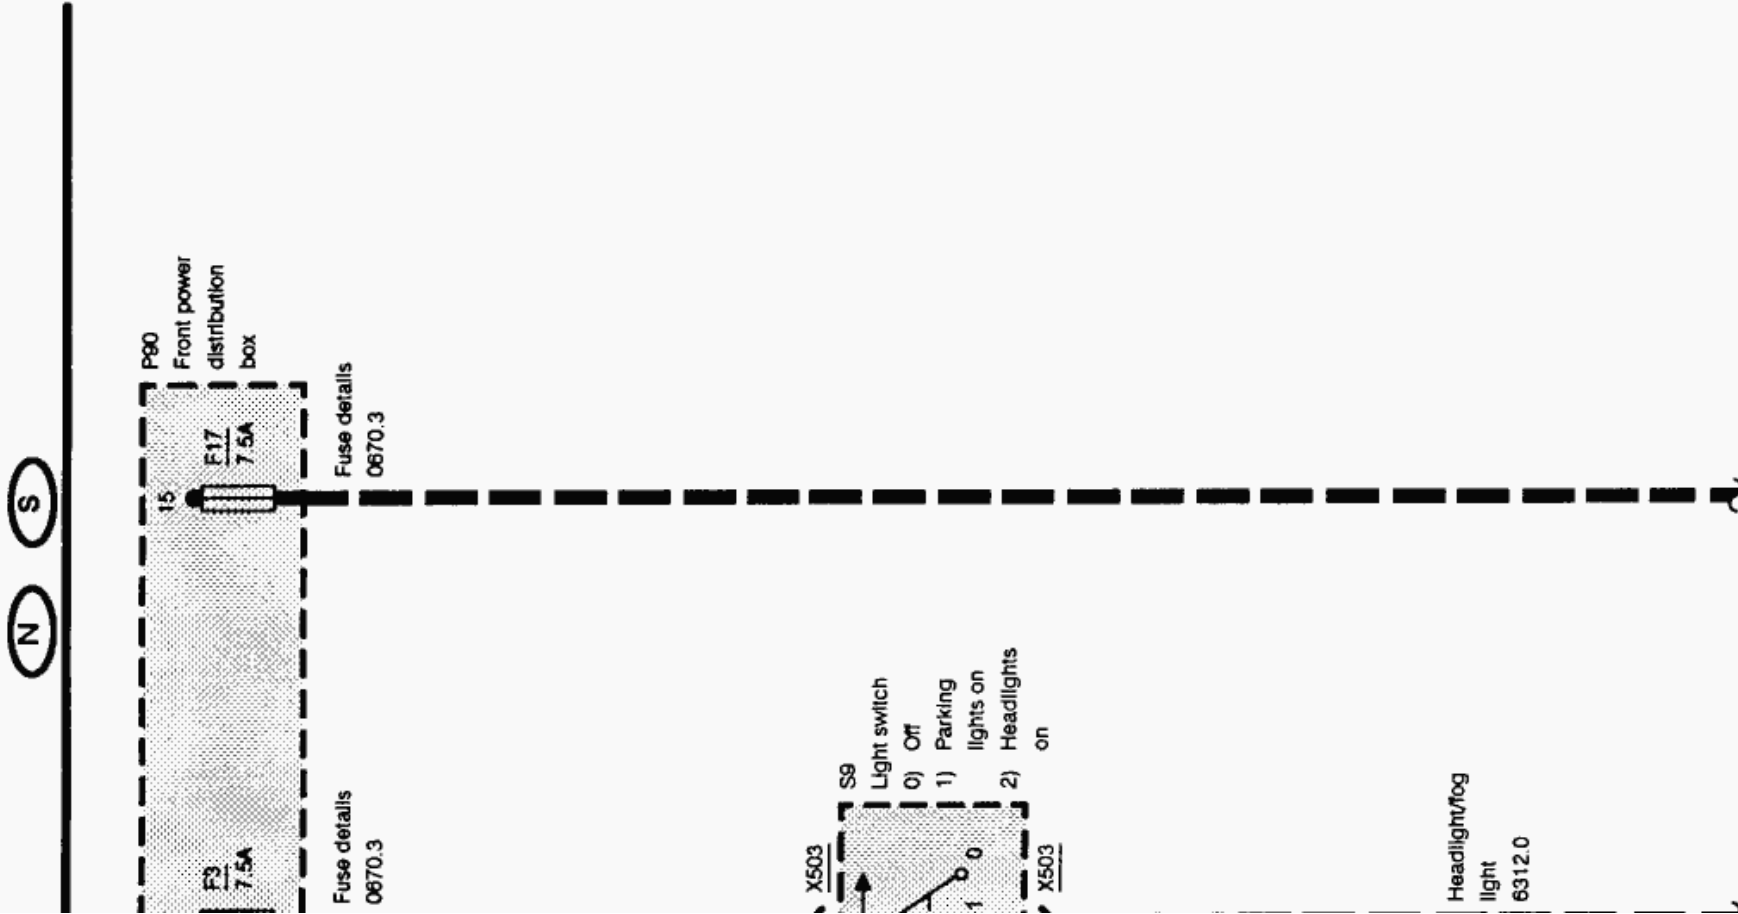

# Headlight washer (ZKE/SRA)

## Inputs

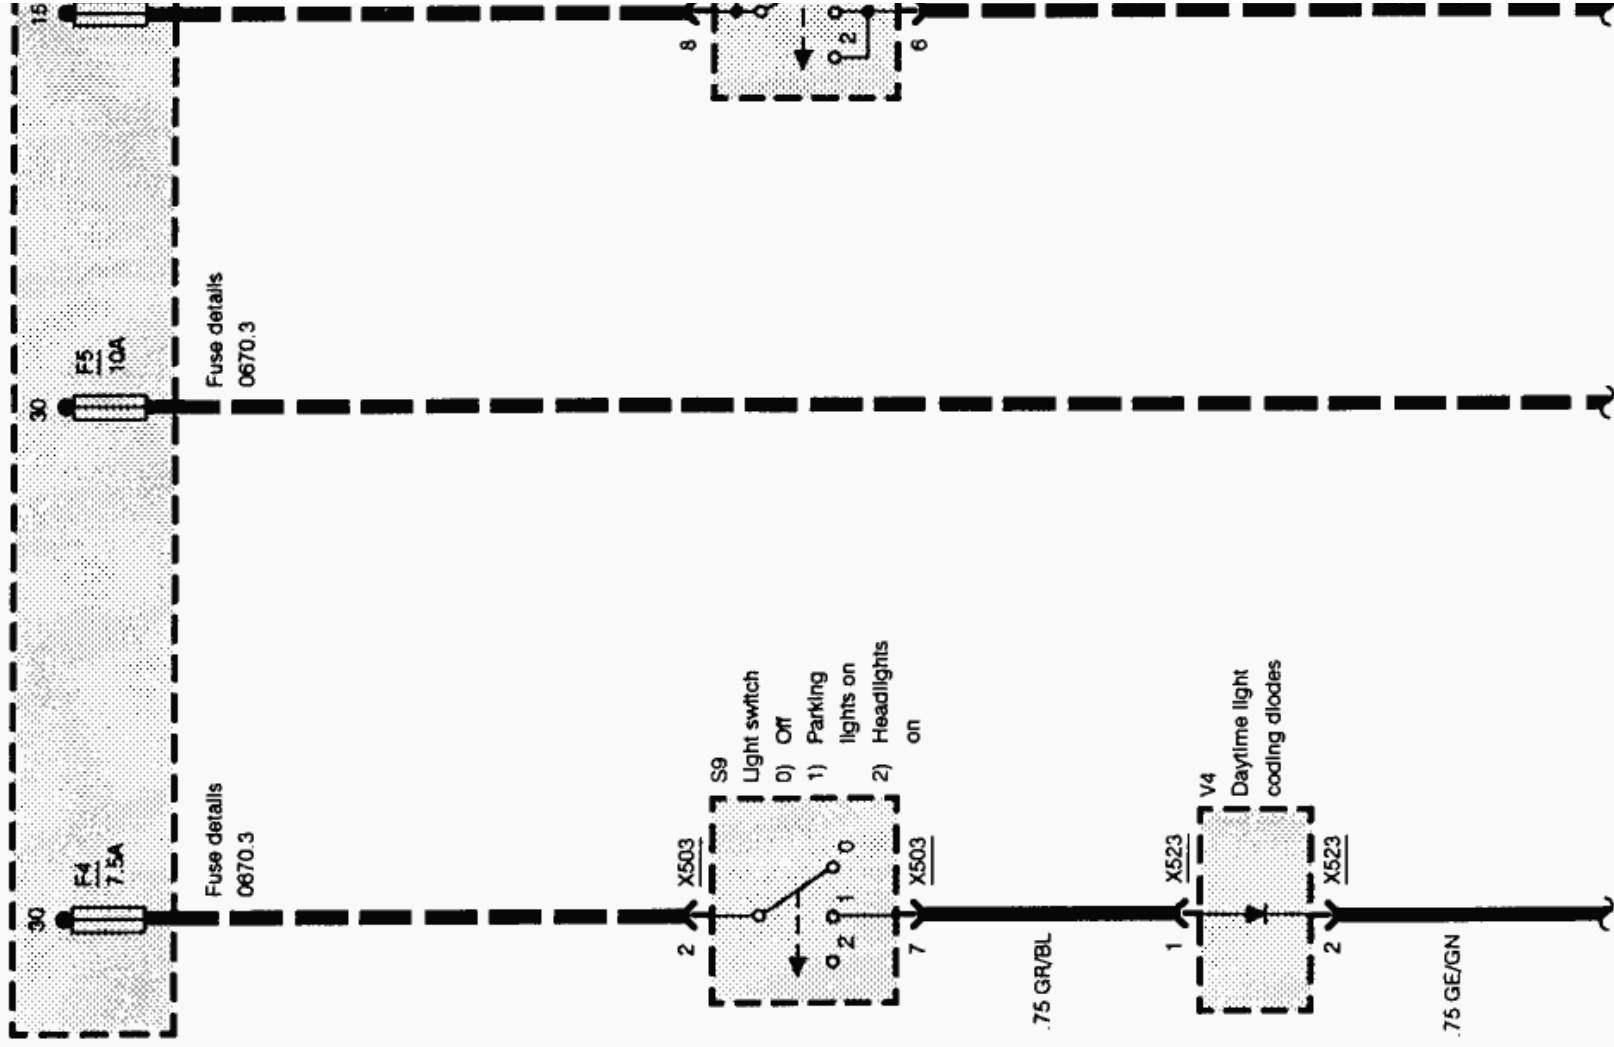





09/93

6167.0-03

1994

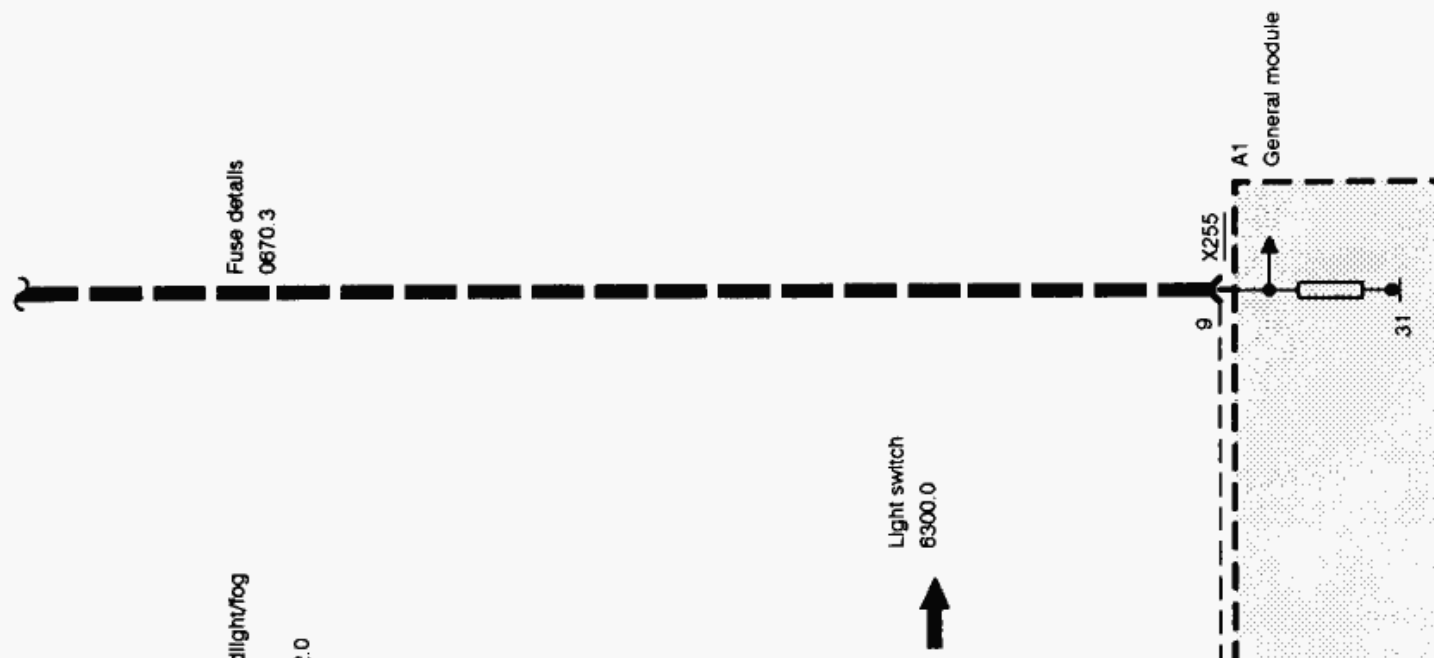


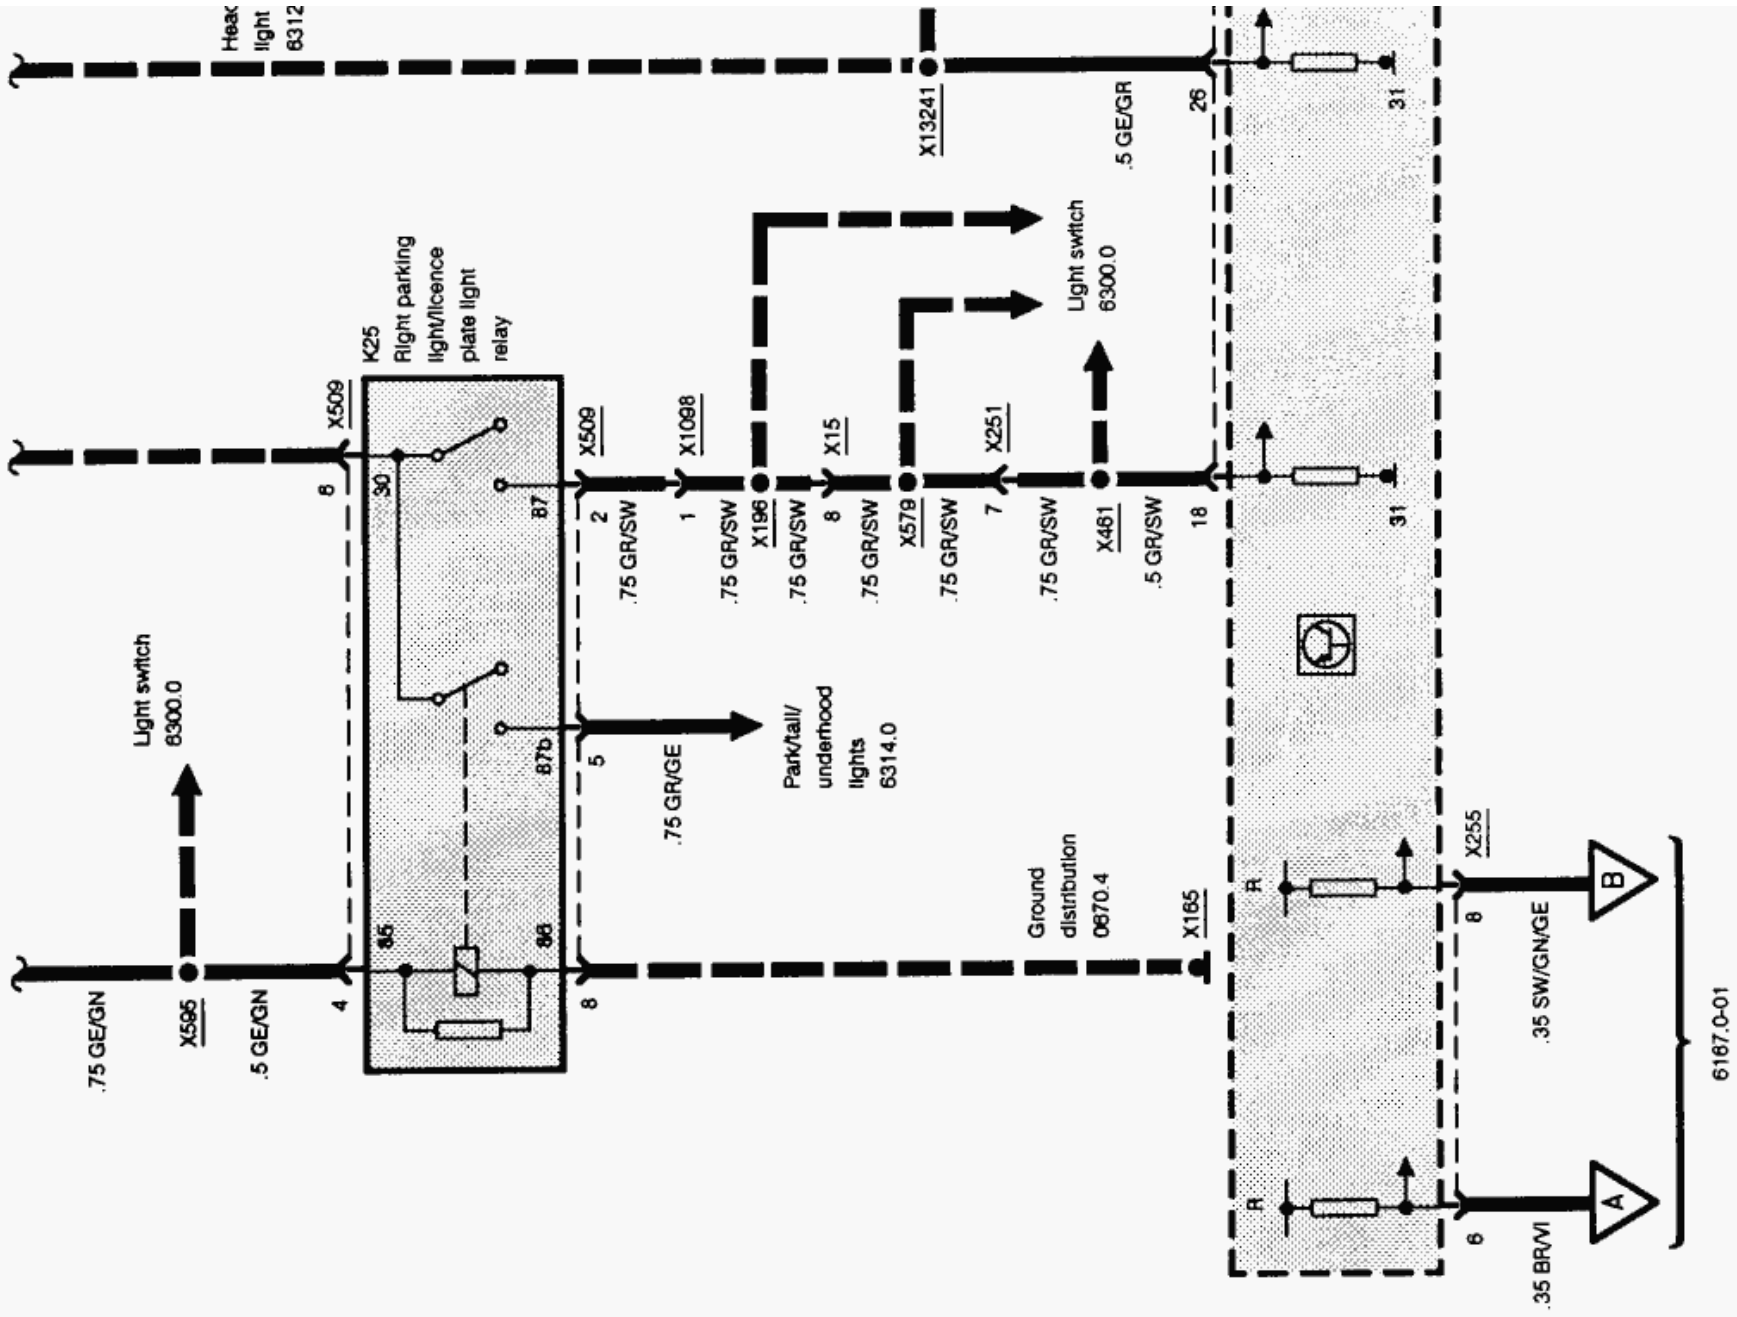

09/93

6167.0-04


1994

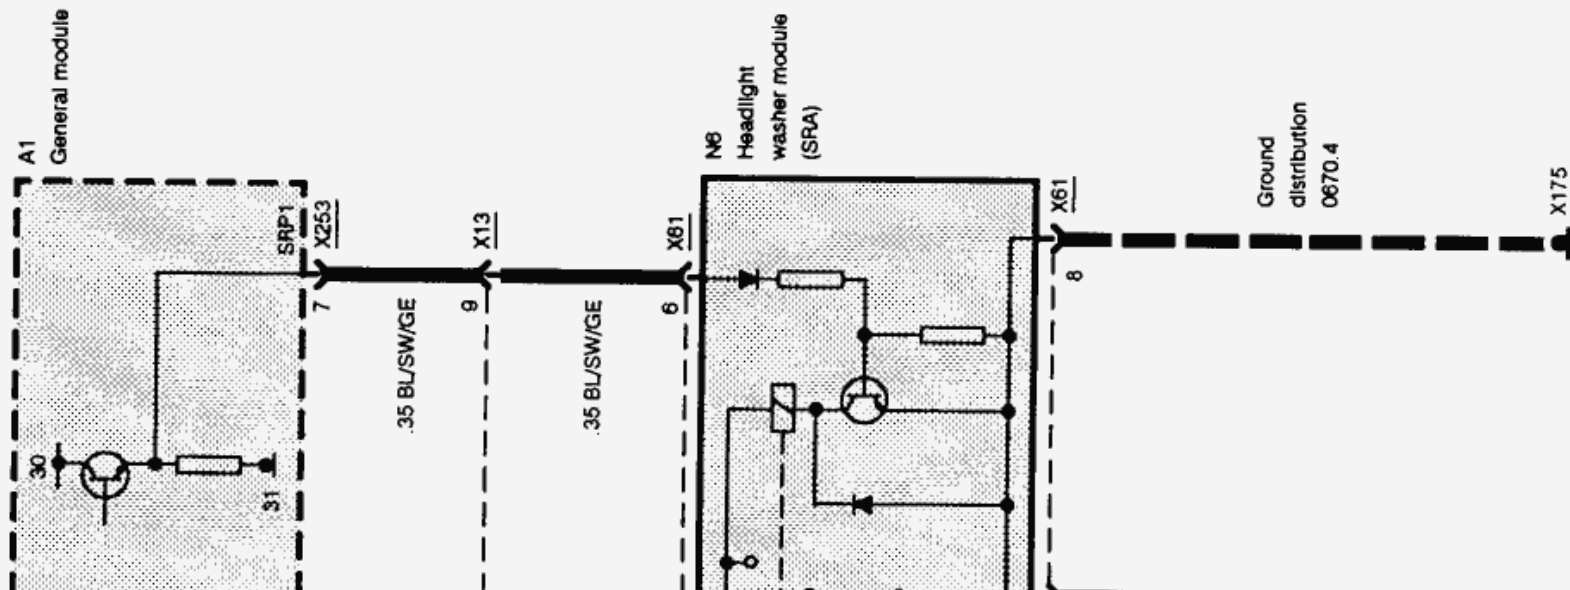




# Headlight washer (ZKE/SRA)

## Inputs

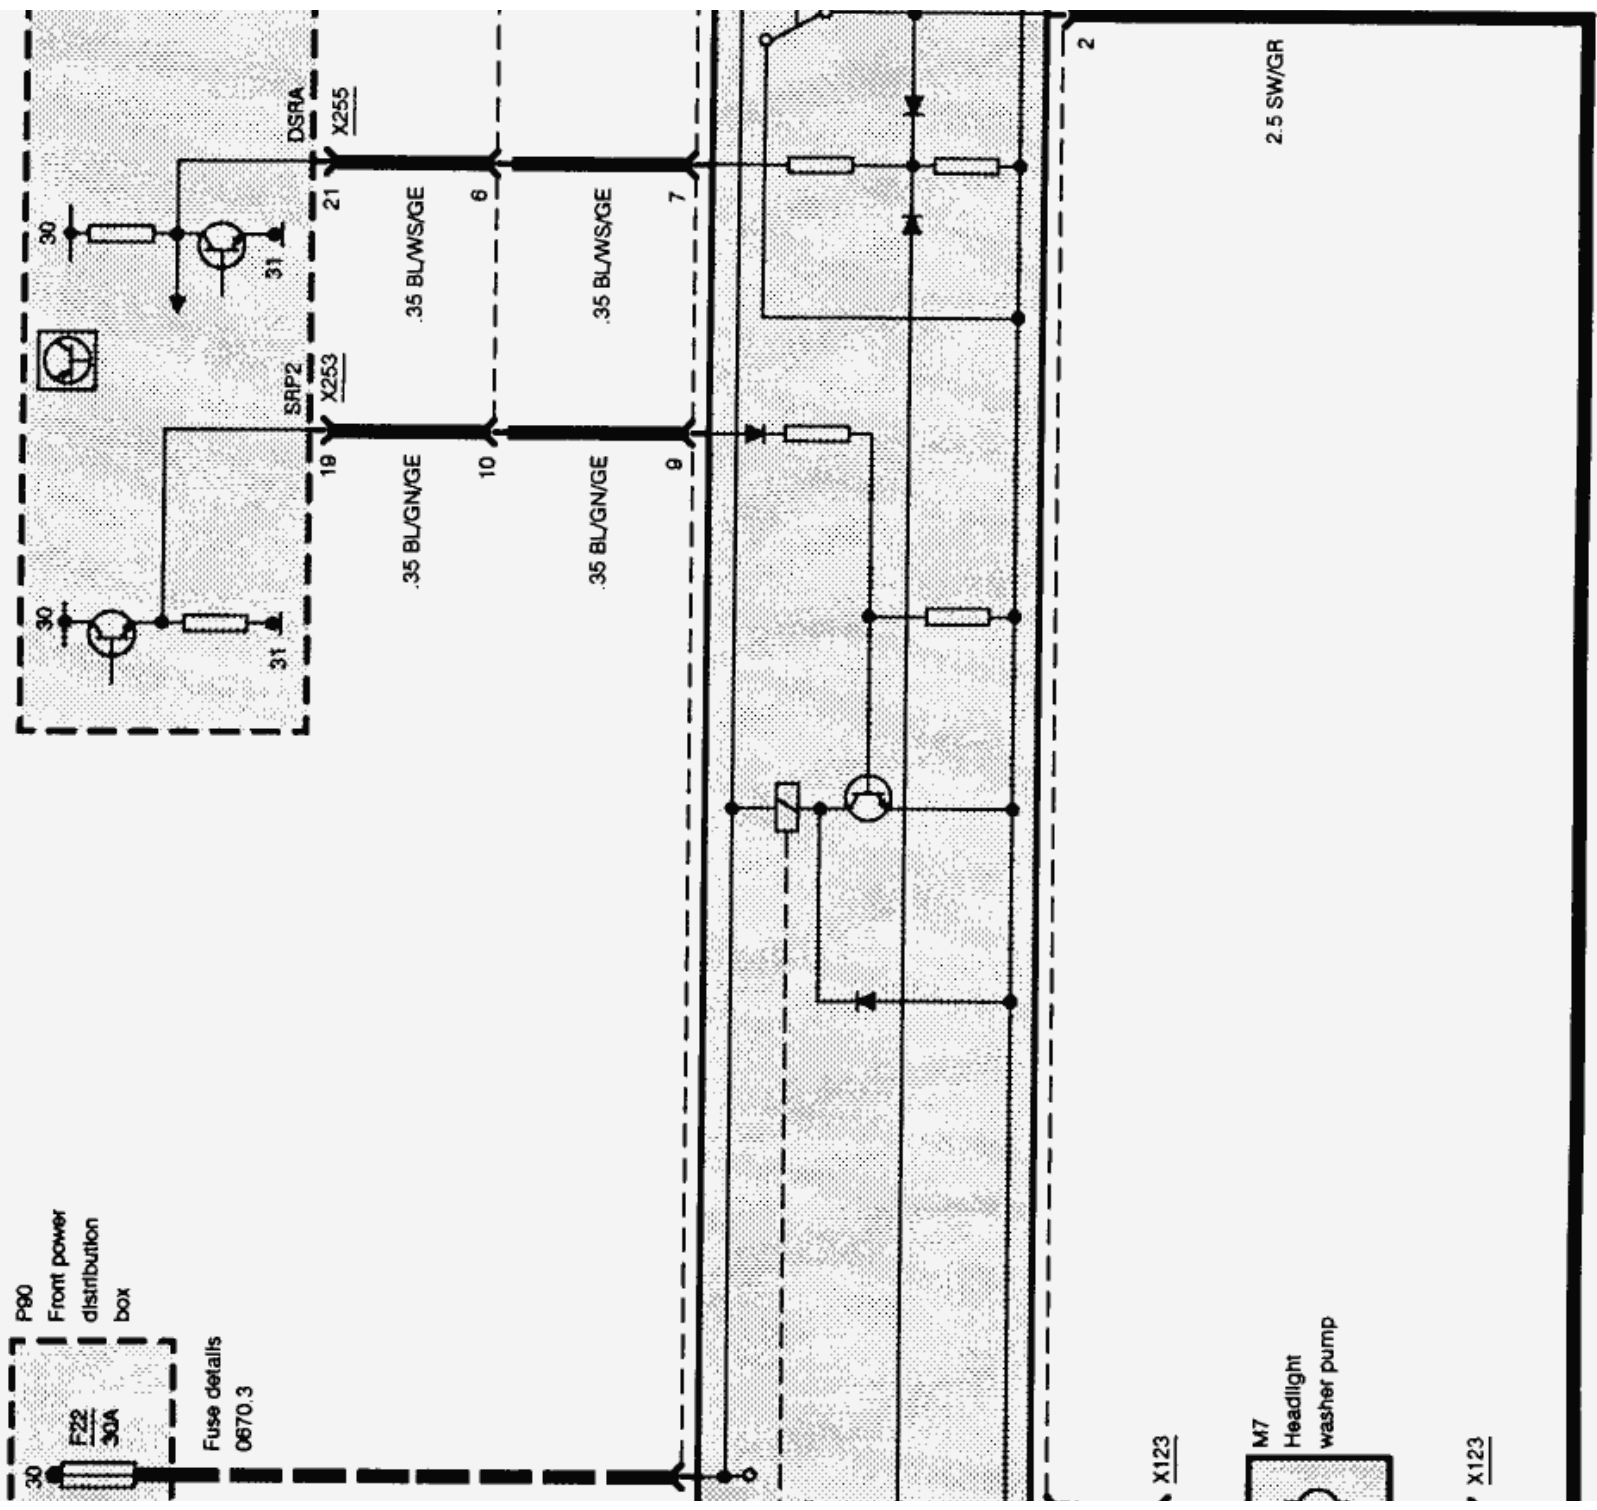



He  
Ou

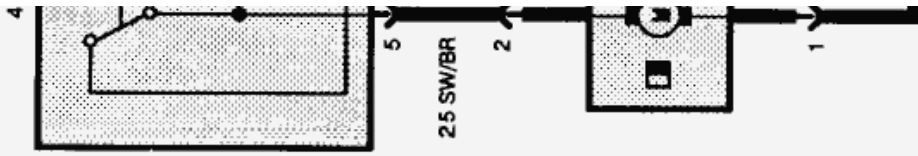

**BMWAG**


Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


Preheating system

Scheme 1220.0

09/93 ————— 1220.0-00 ————— 1994

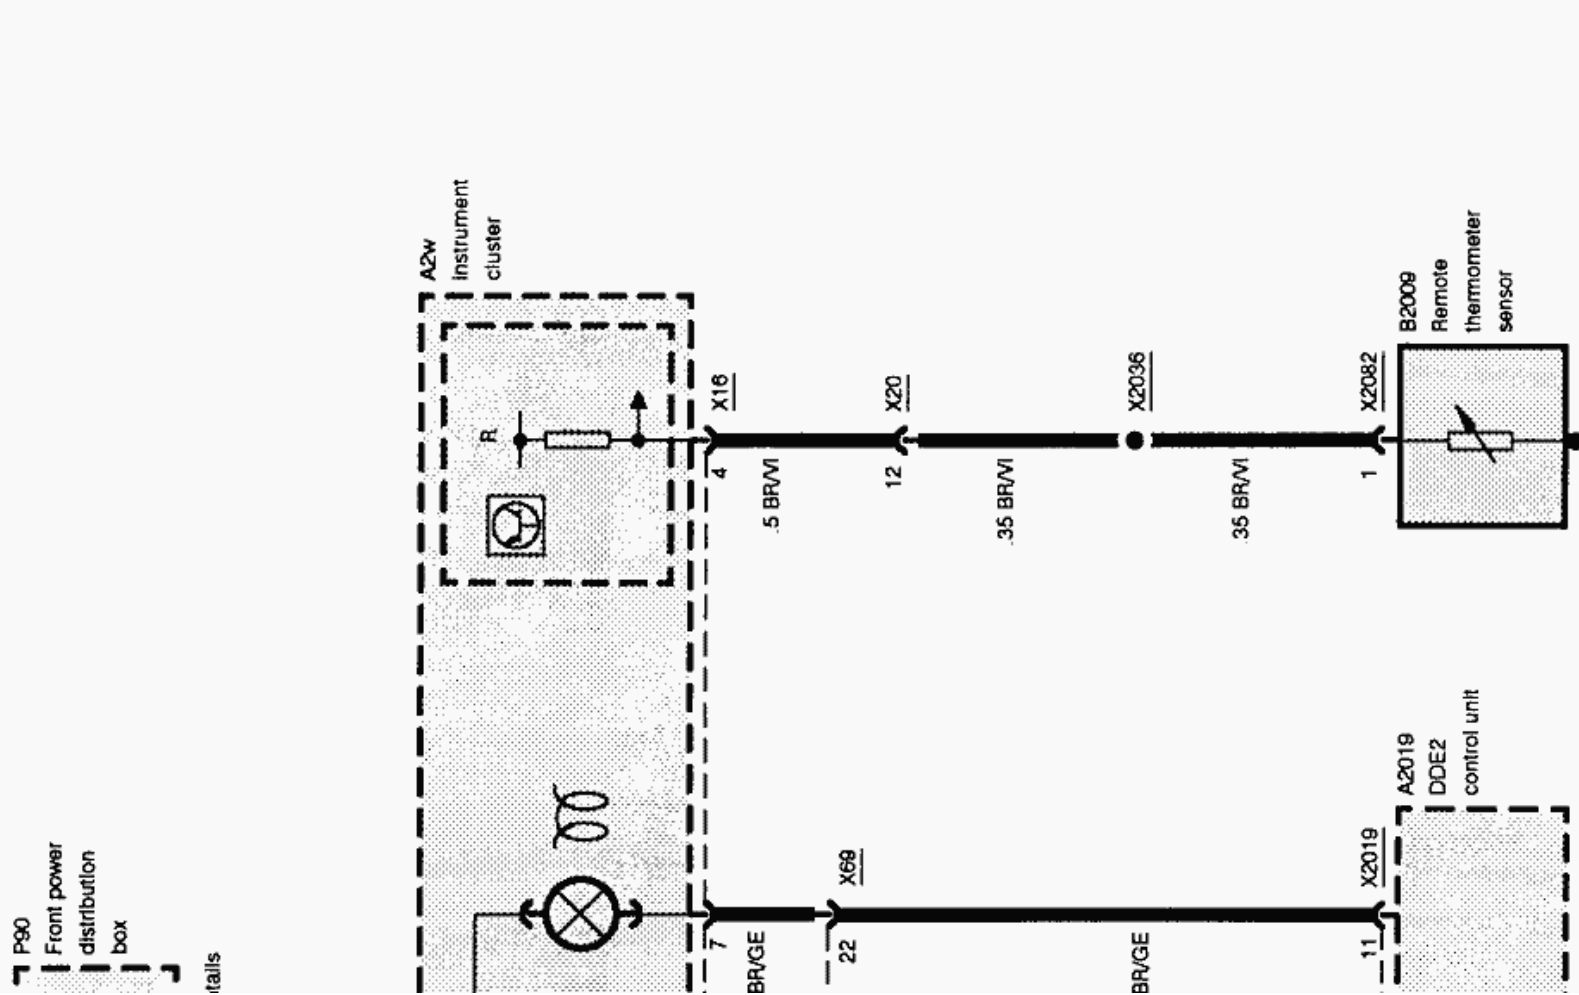

# Preheating system

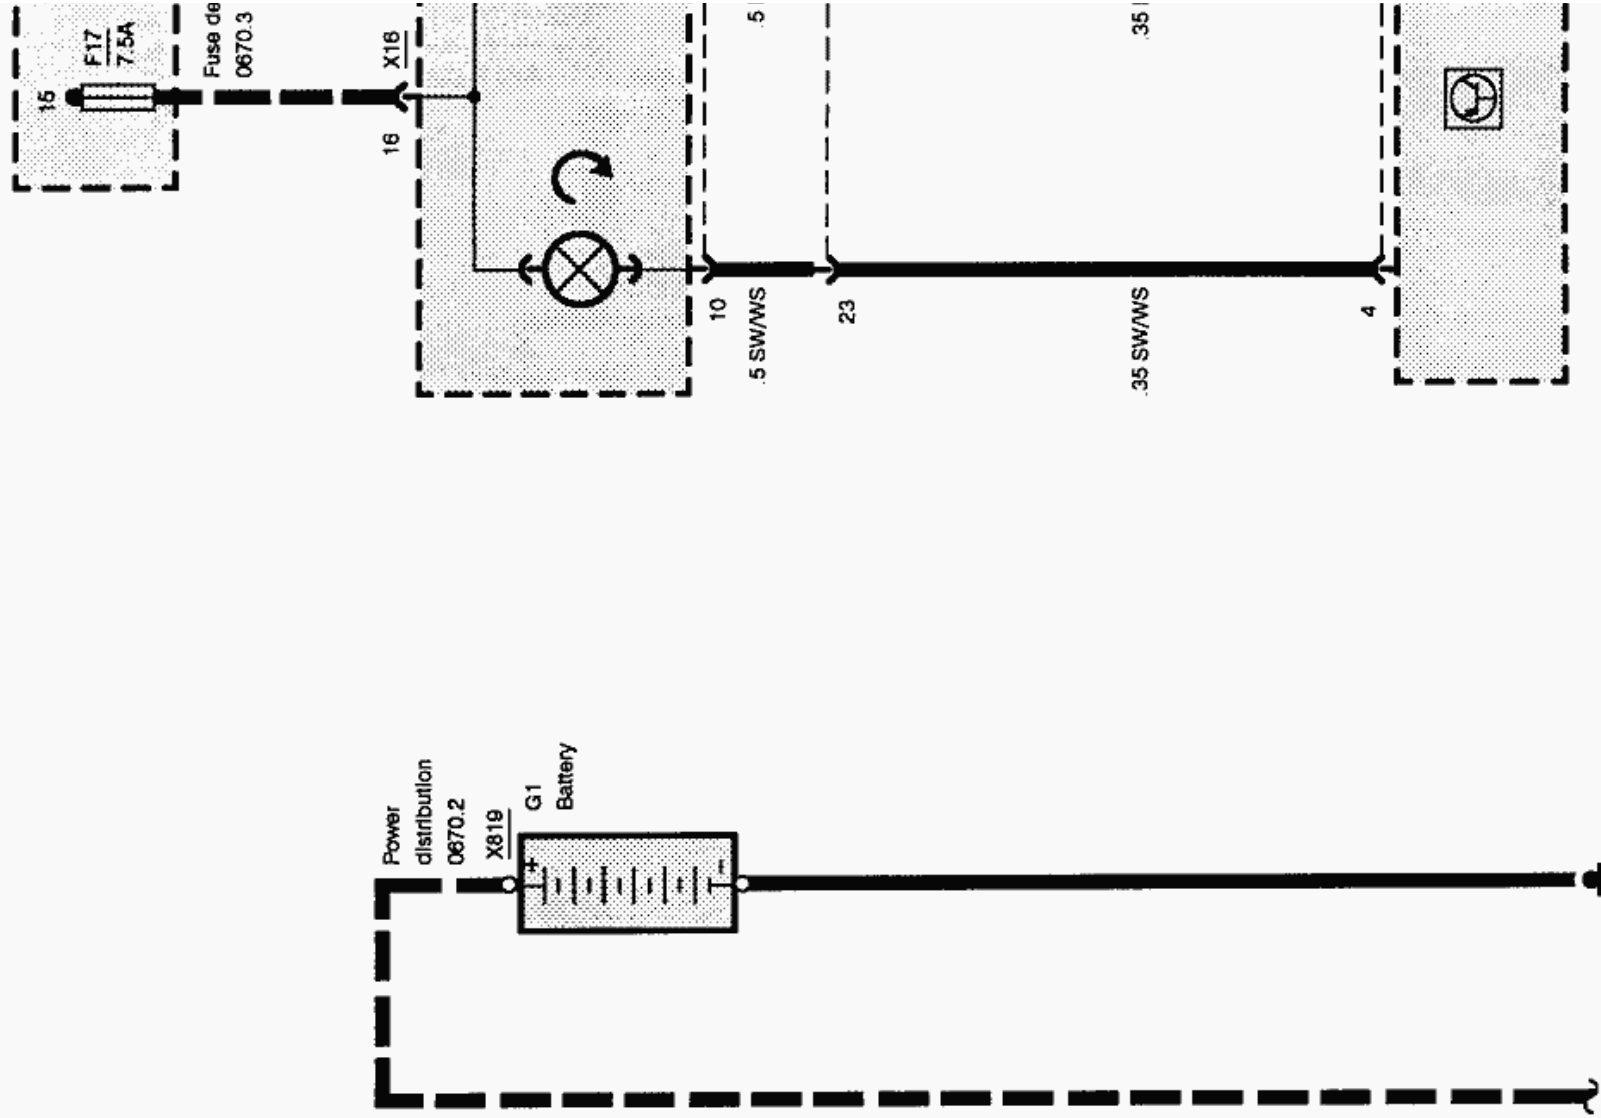





09/93

1220.0-01

1994

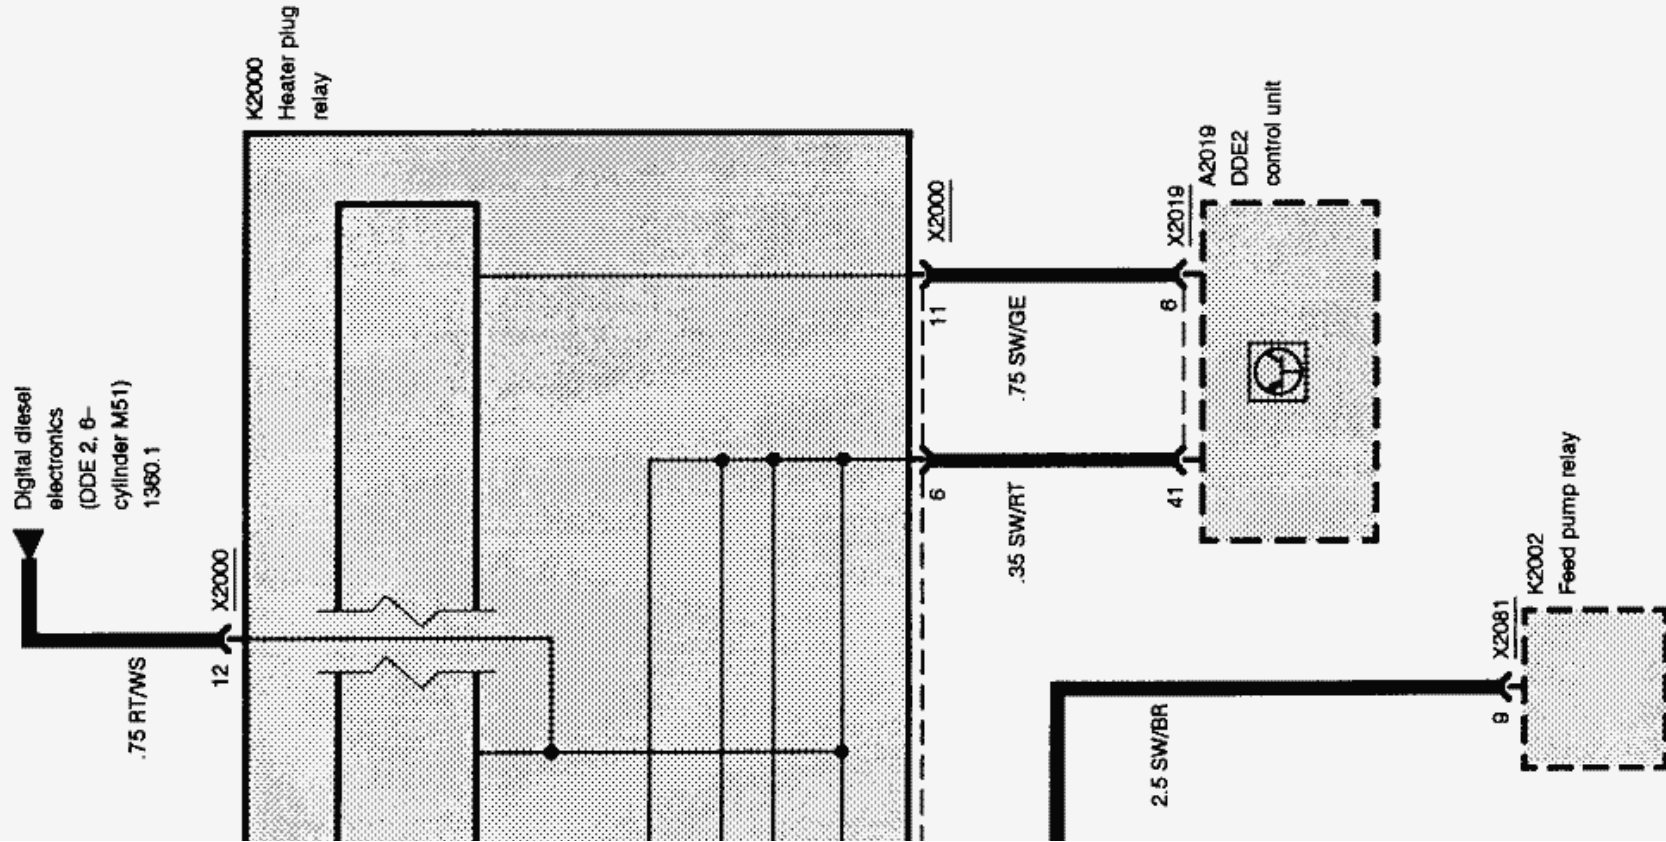

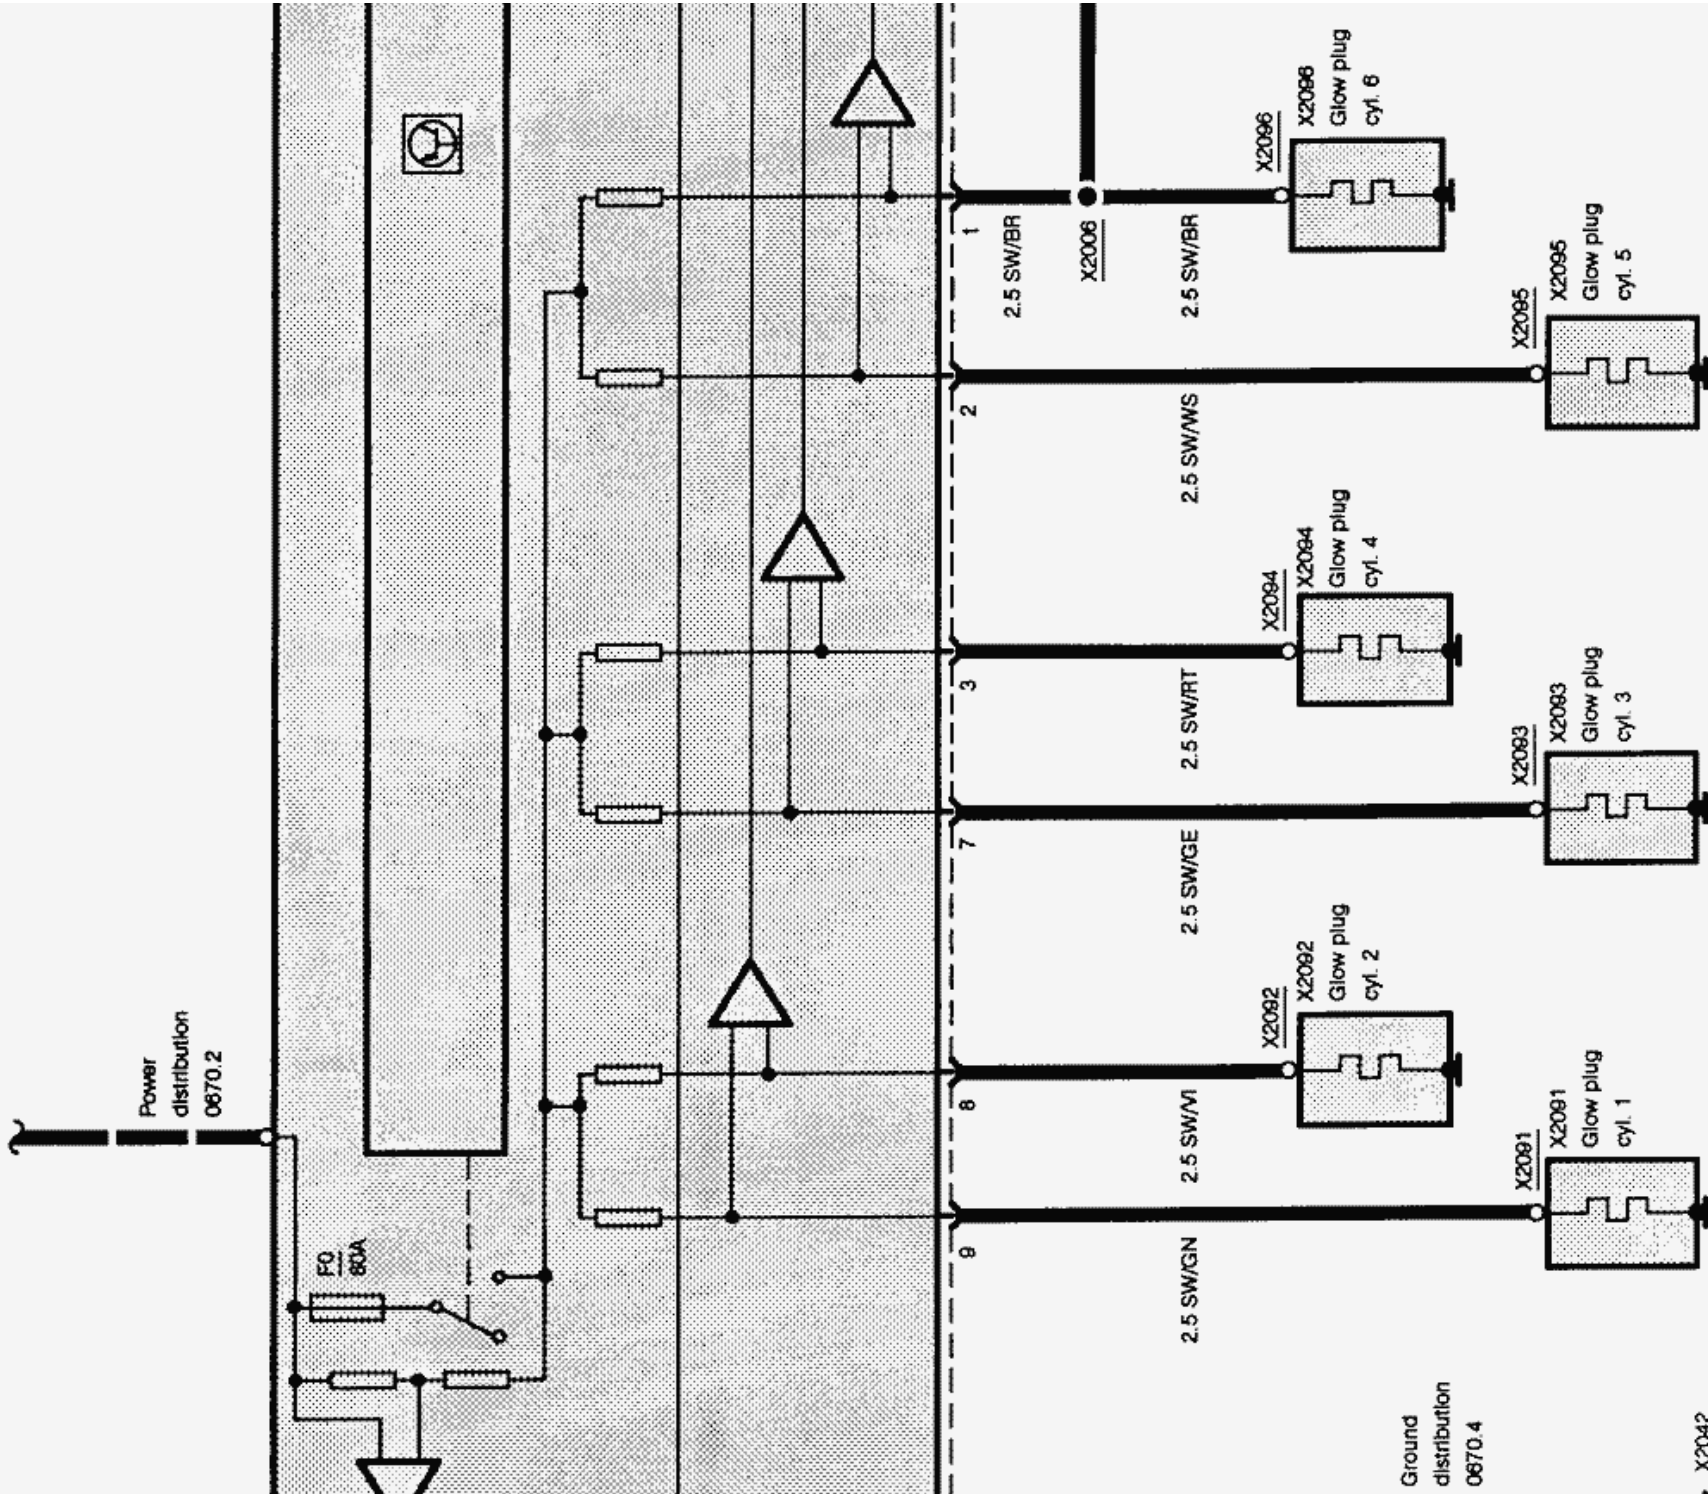

X2042




5





# Horn

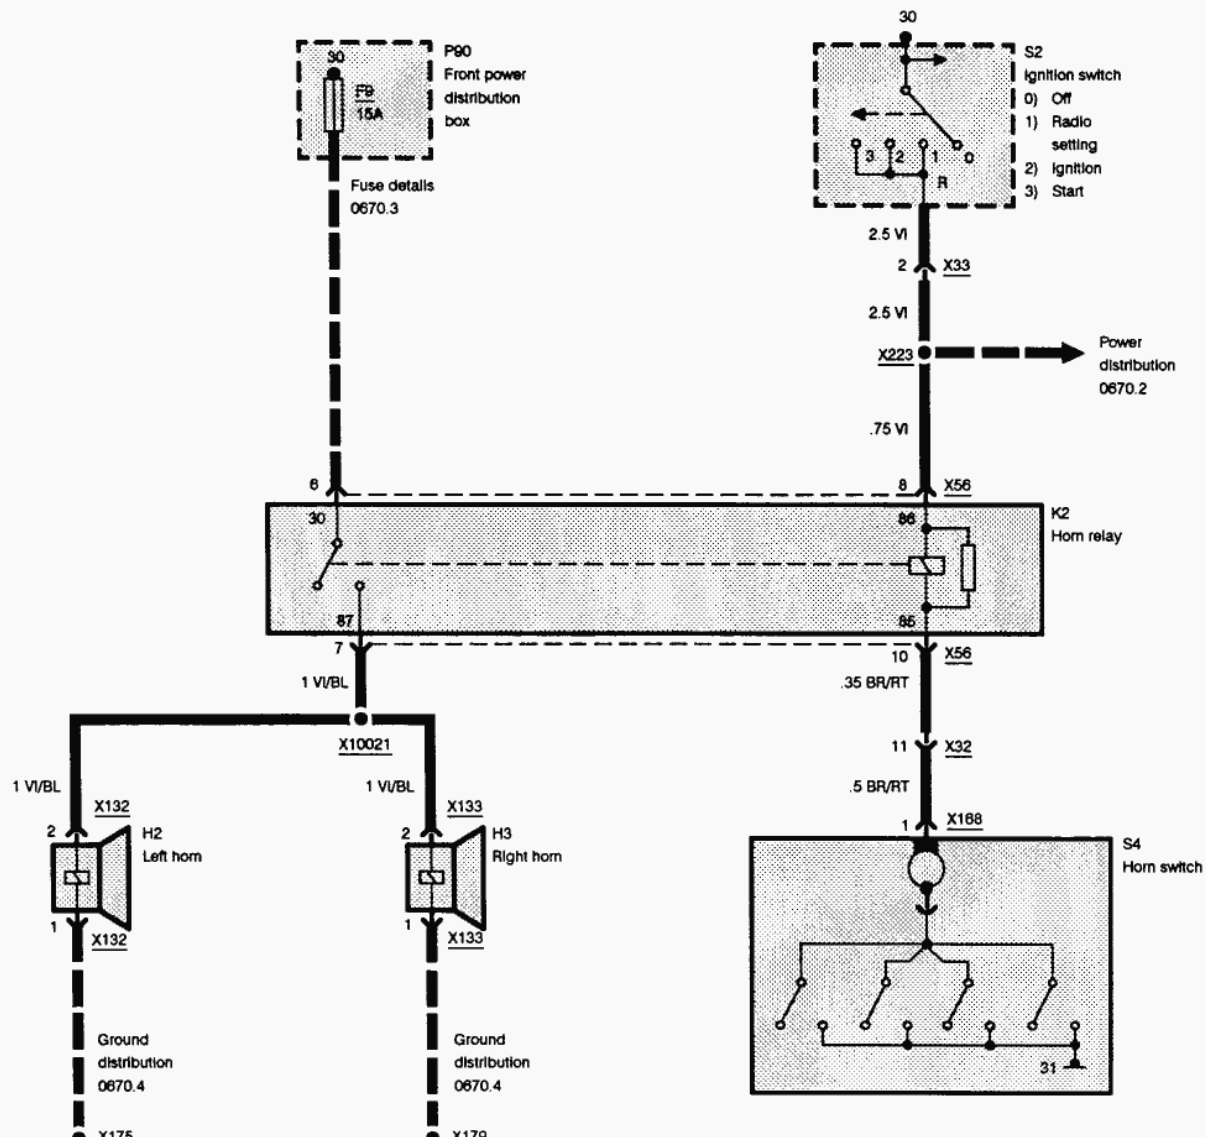





**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Independent heating/ventilation with HR34

Scheme 6412.1

**Pin Assignment X607**


Pin	Type	Description/Function	Connection
1	E	Terminal 30	Fuse
2	A	Signal, independent heating	Independent heating relay
3	E	Signal, independent heating	On-board computer
4	E	Signal, independent ventilation	On-board computer
5		not used	
6	A	Signal, ventilation flap	IHKA operating switch
7	E	Signal, independent ventilation, flap position	IHKA operating switch
8	E	Signal, independent heating, flap position	IHKA operating switch
9	E	Terminal 61	Unloader relay
10	M	Ground	Ground connection
11	E	Terminal R	Fuse F1
12	A	Activation, control unit/stop valve	Independent heating/ventilation control unit/ stop valve

**E = Input, A = Output, M = Ground**



09/93

**6412.1-00**

1994

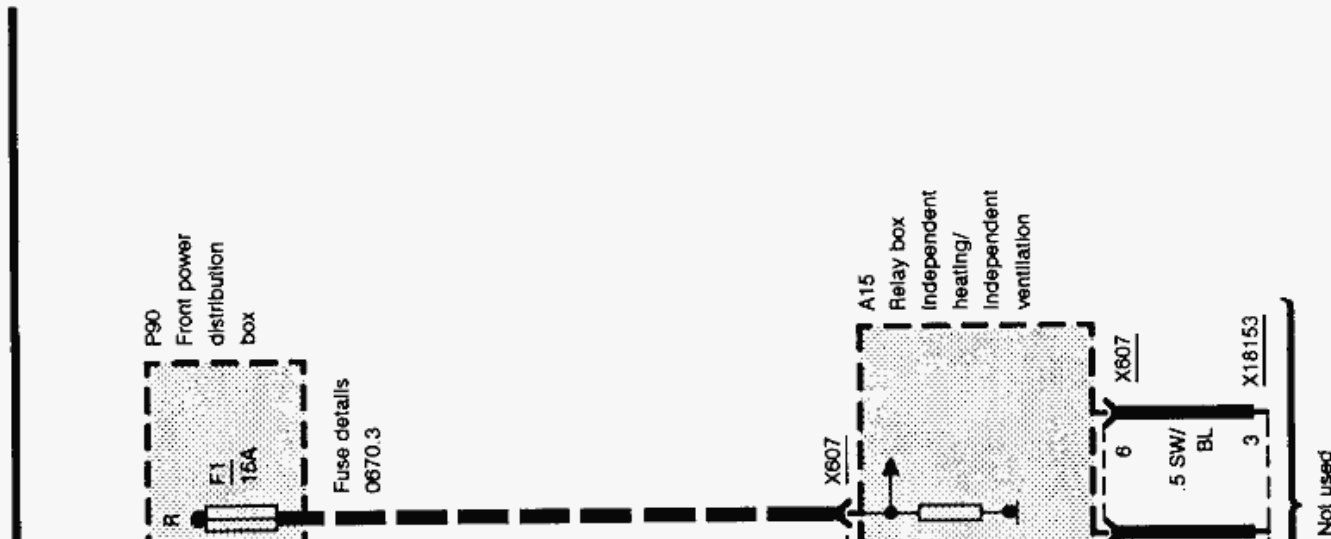

# ating/ ventilation with HR34

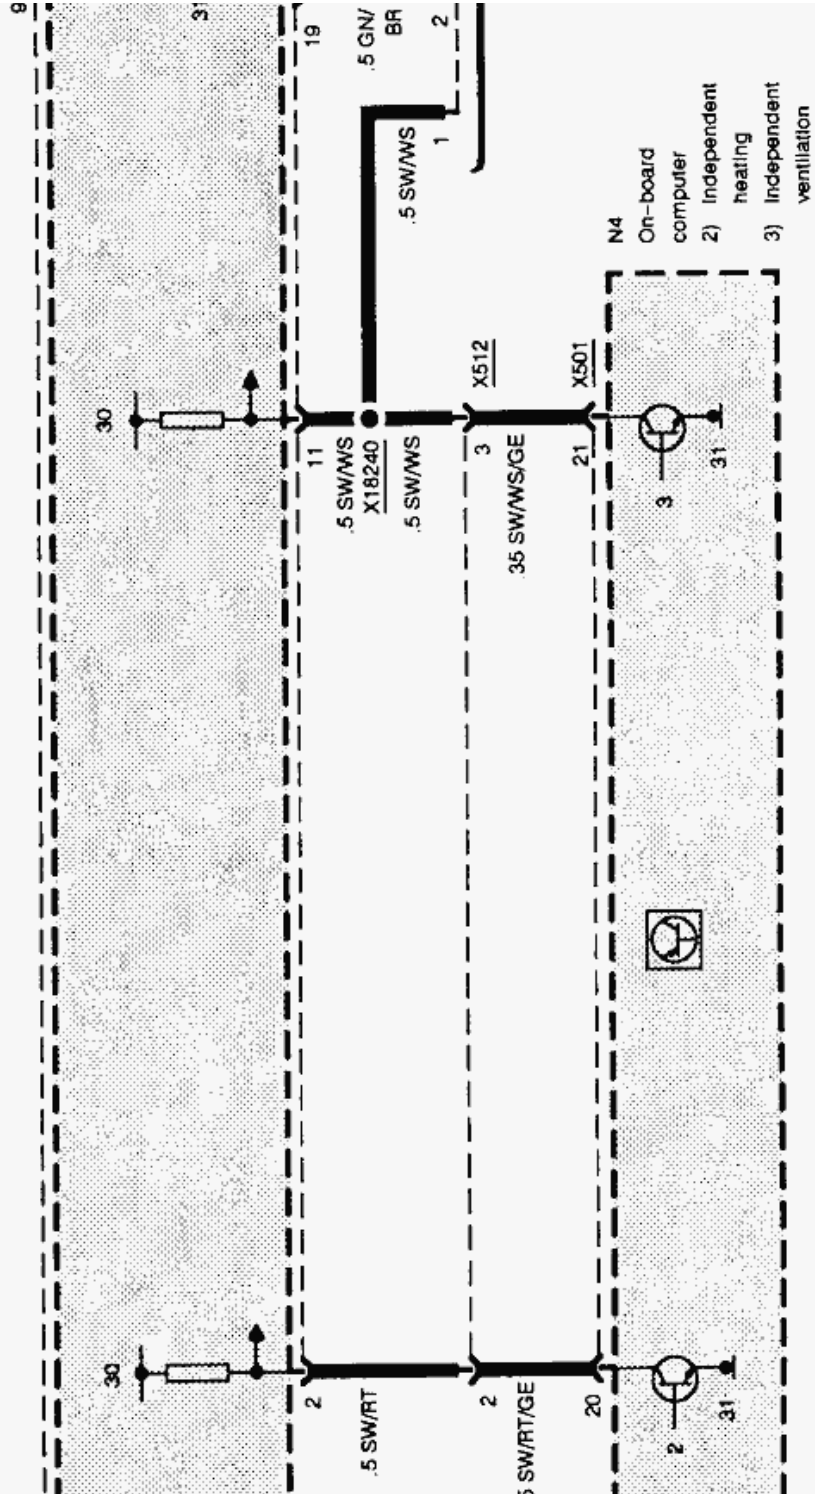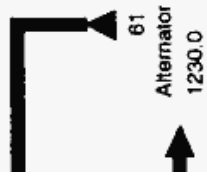





# Independent he

09/93


6412.1-01

1994

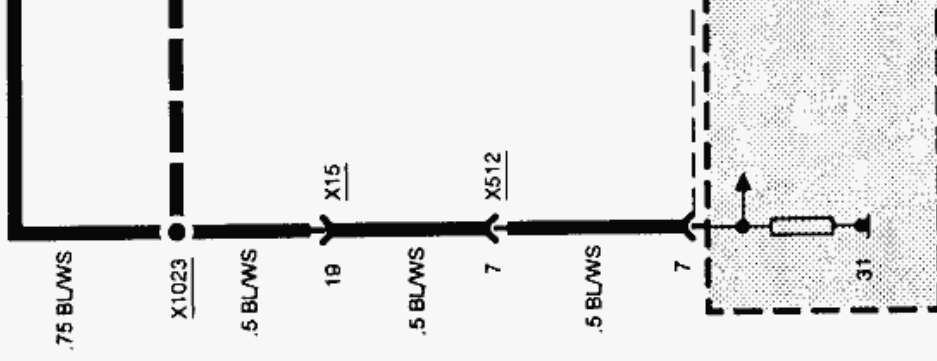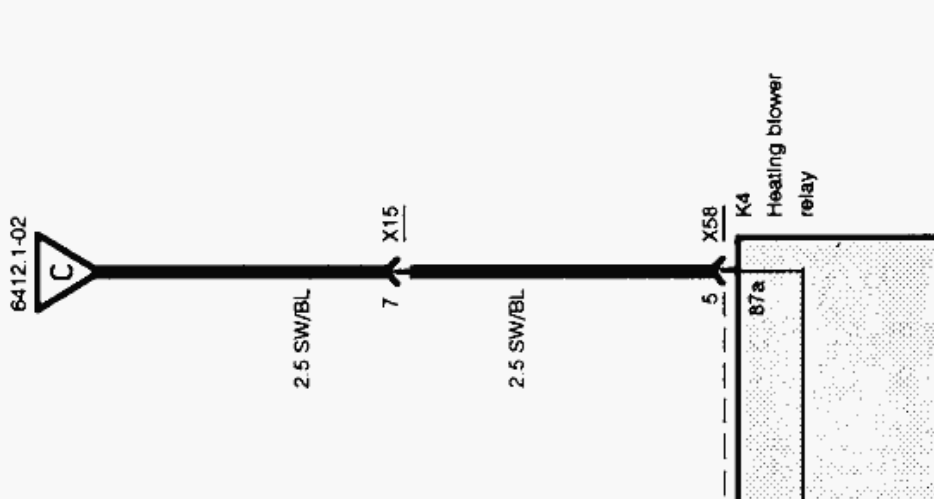


.3t

# ing/ ventilation with HR34

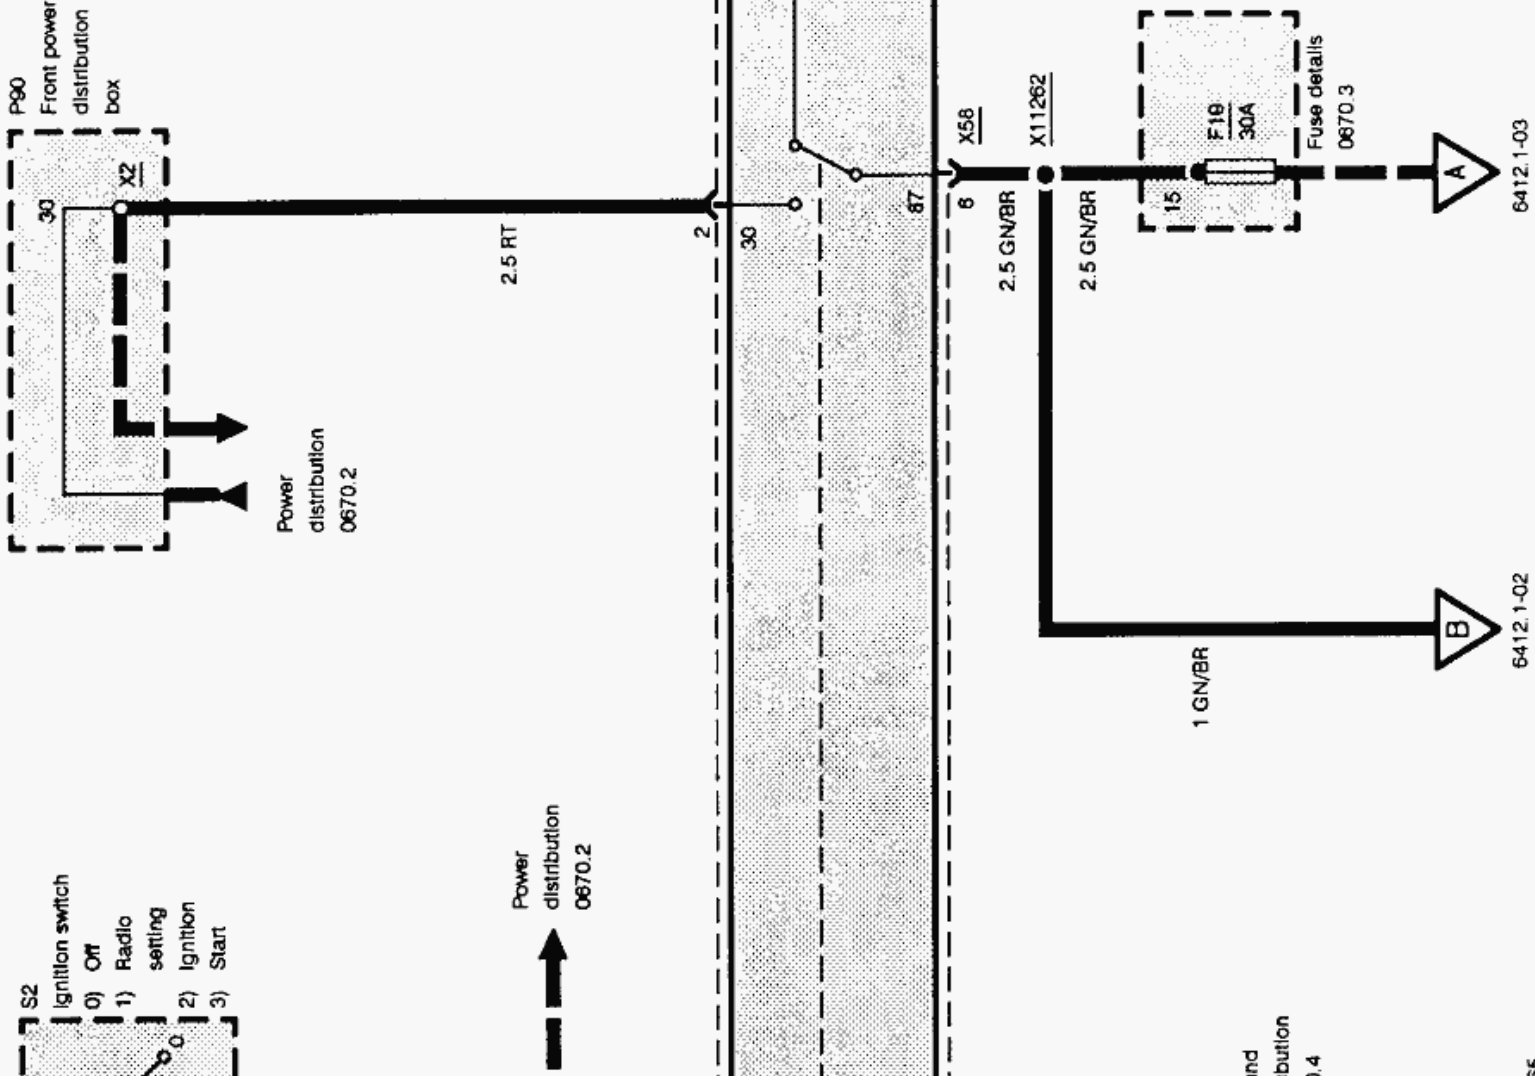



# Independent heating

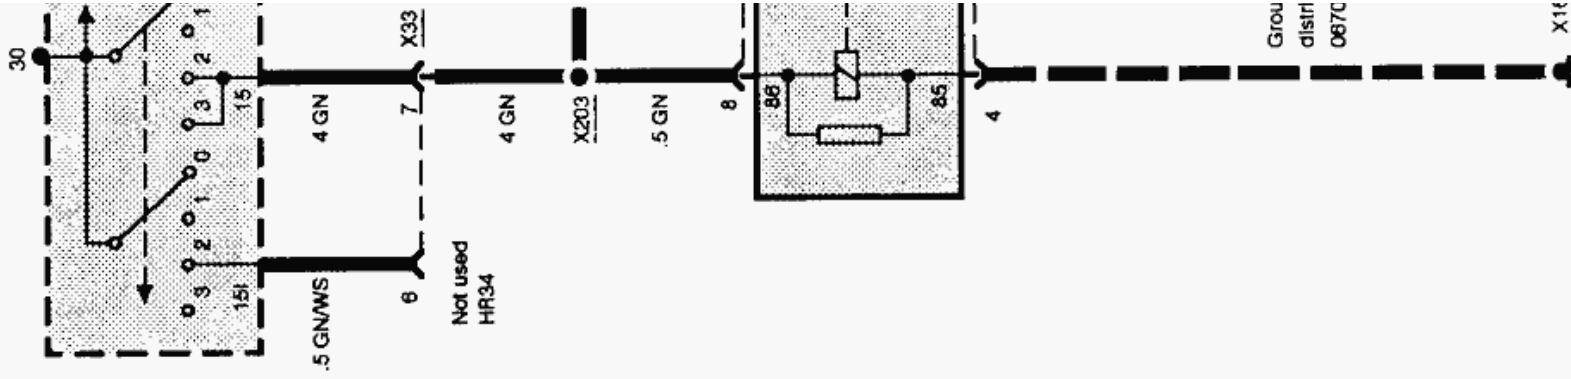


09/93


6412.1-02

1994

A15  
Relay box  
Independent  
heating/  
Independent  
ventilation

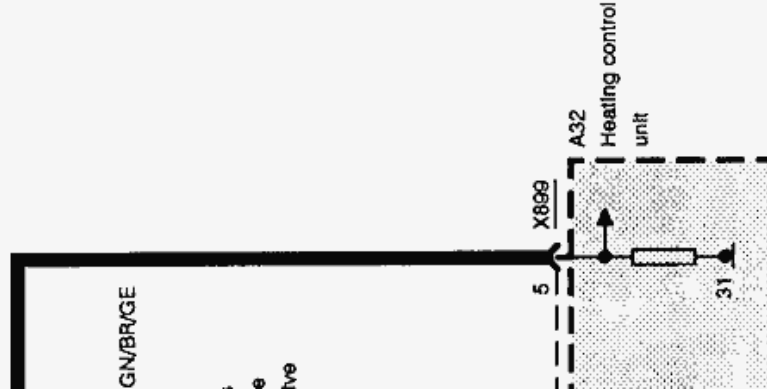


# g/ ventilation with HR34

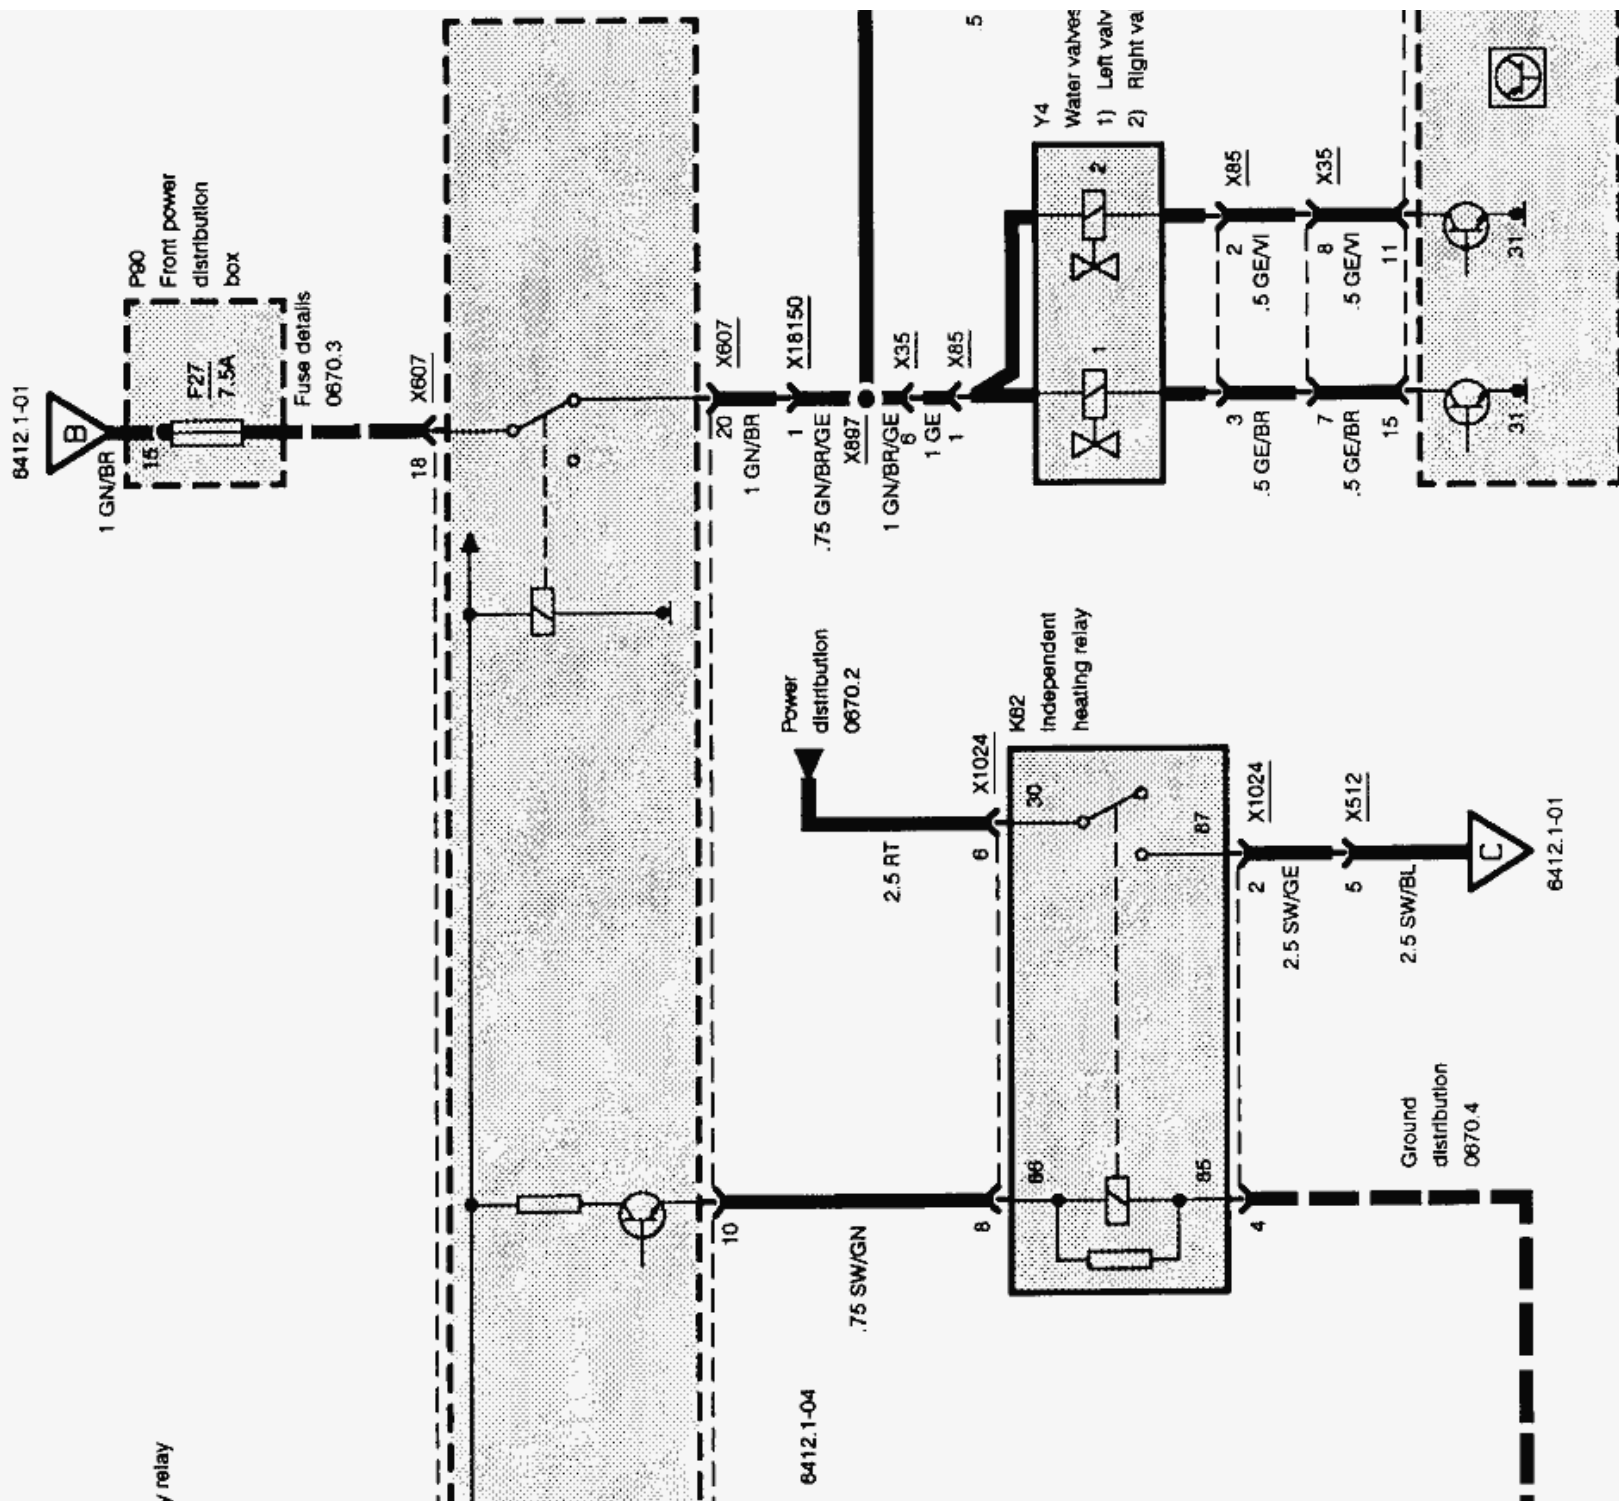




# Independent heating

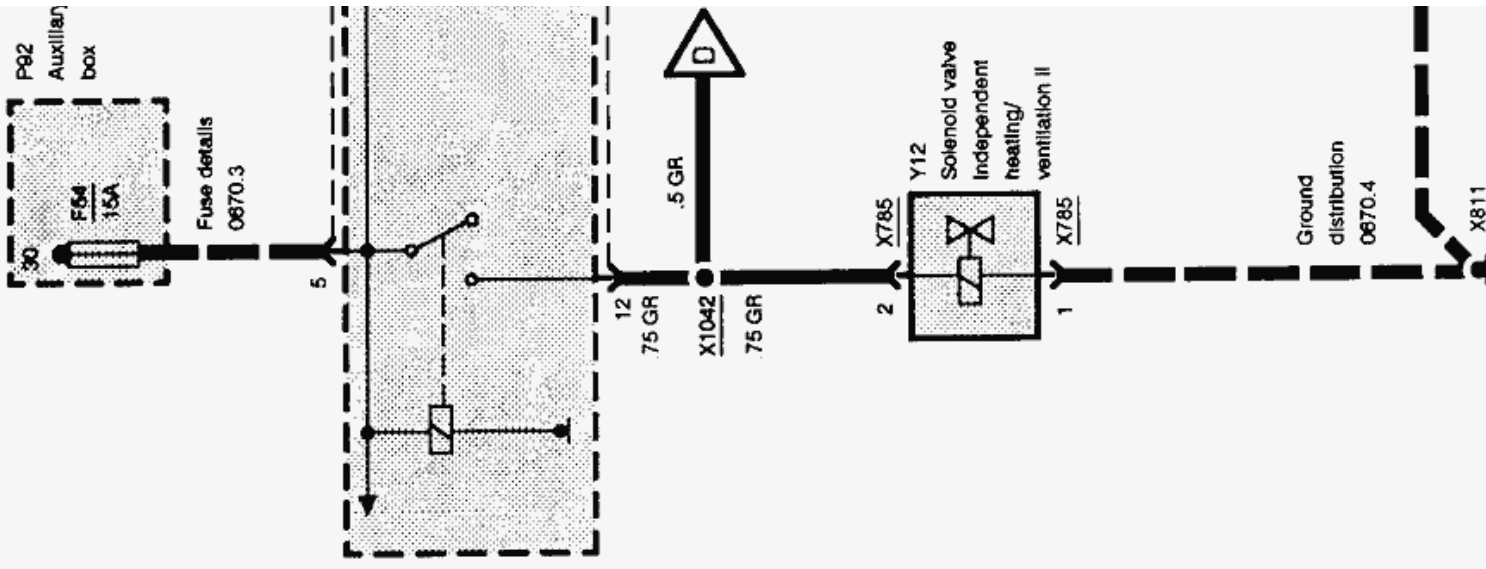

09/93


6412.1-03

1994

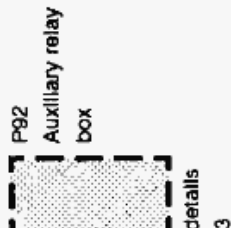



# ventilation with HR34

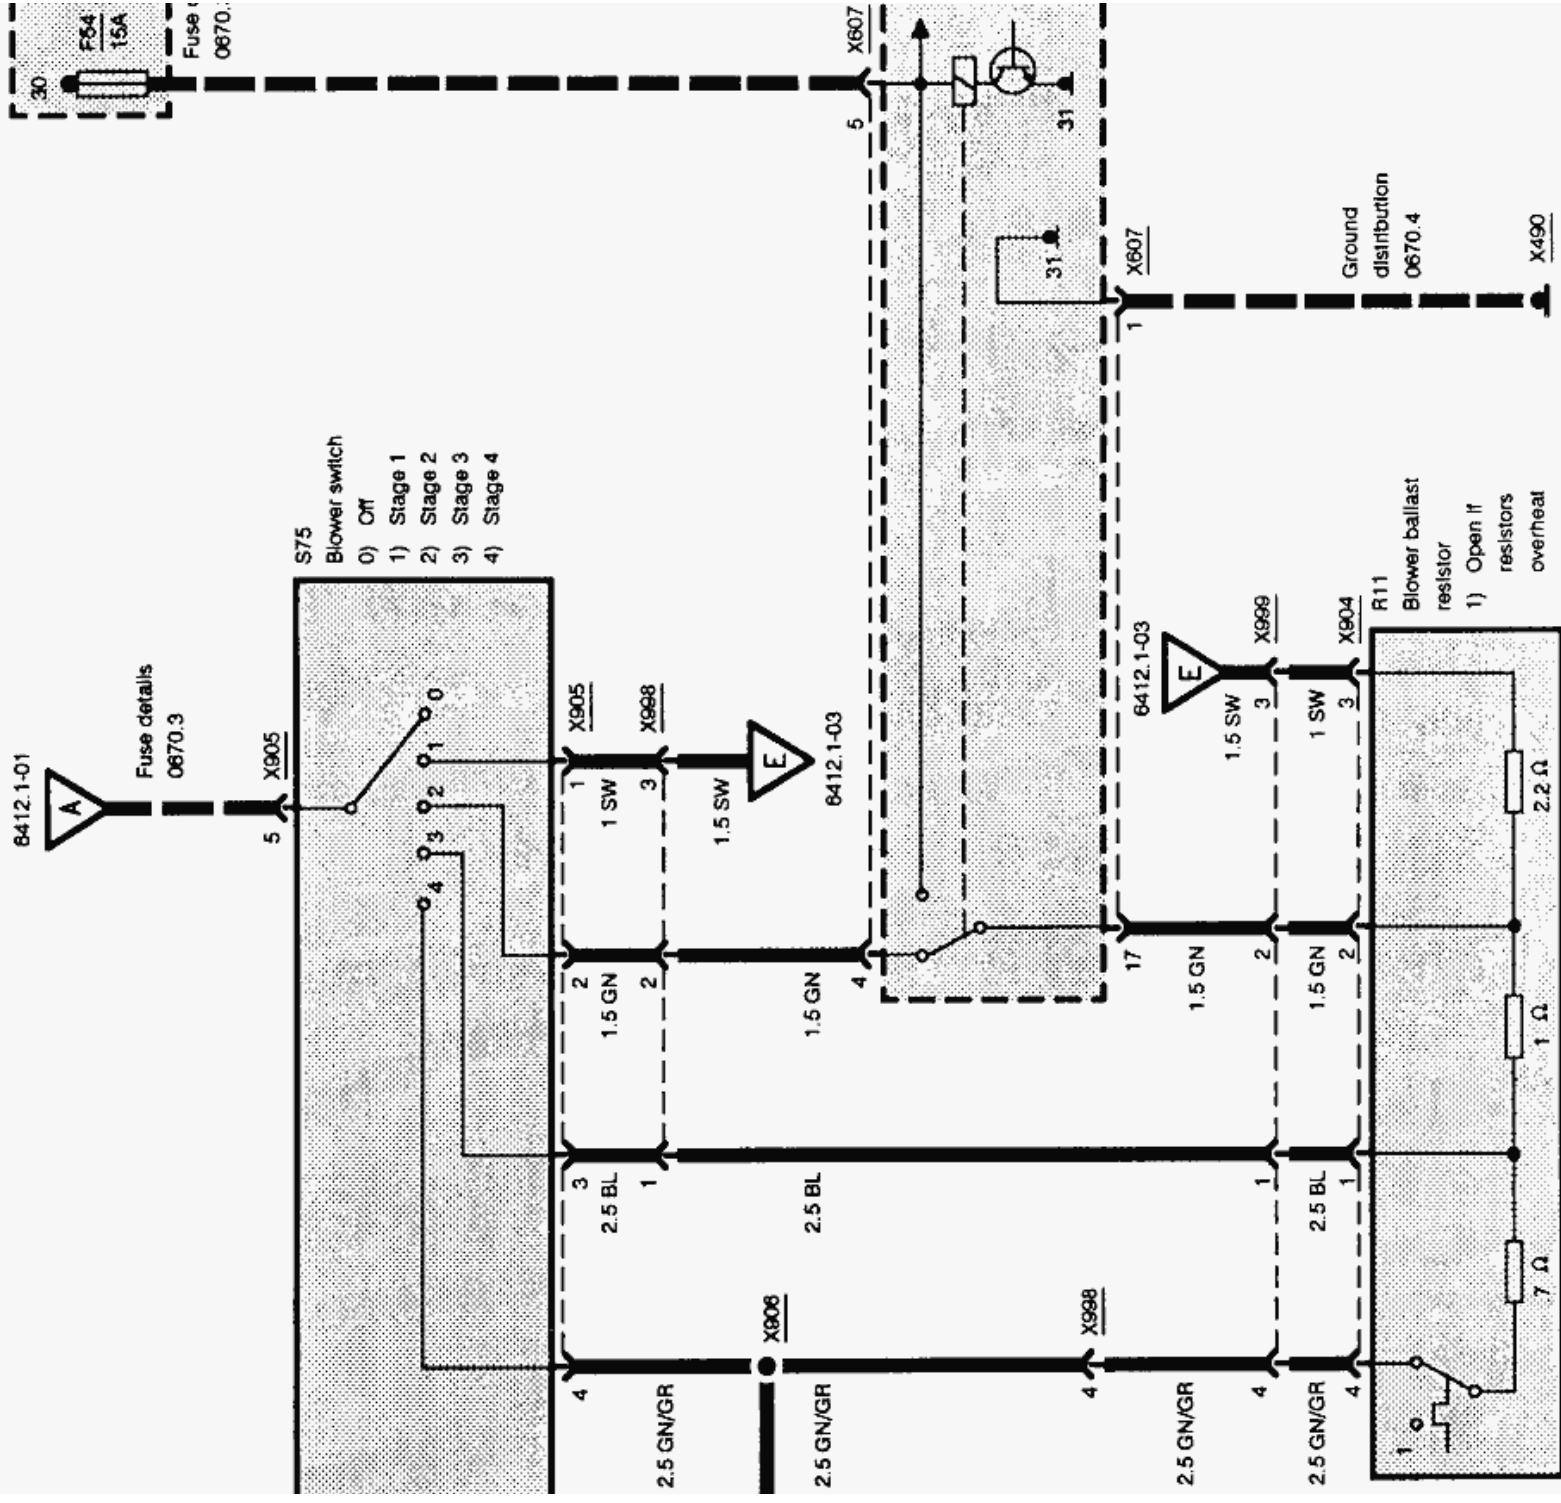






# Independent heating


09/93

6412.1-04

1994

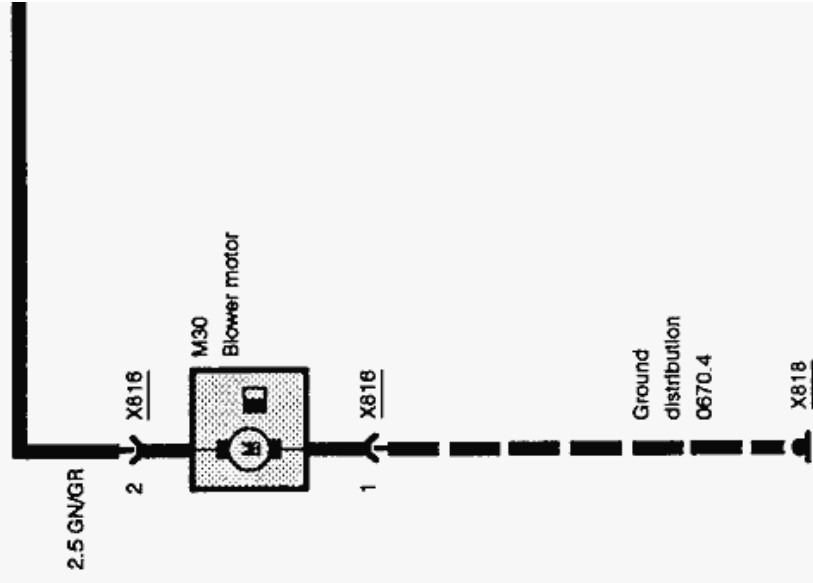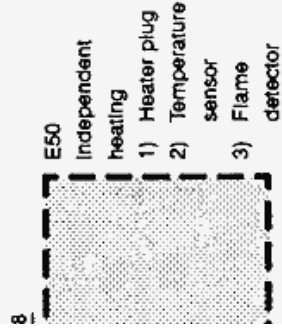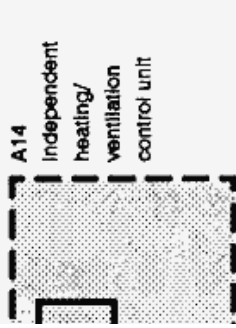


# ventilation with HR34

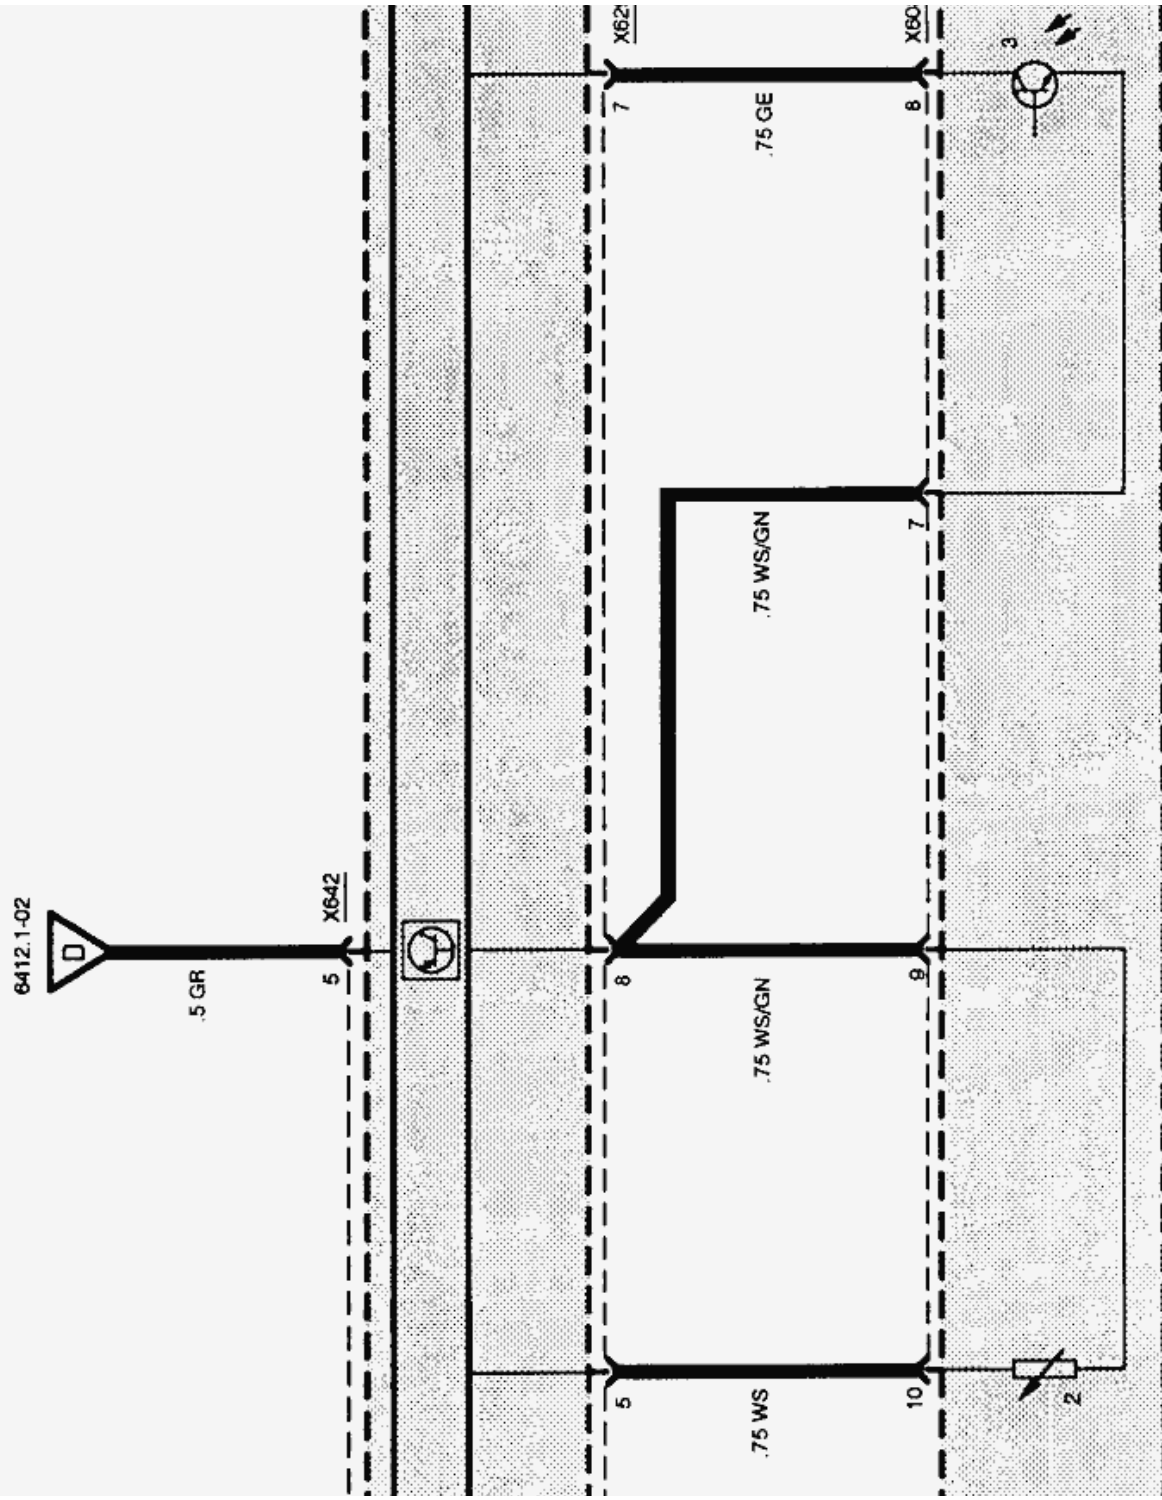



# Independent heating/

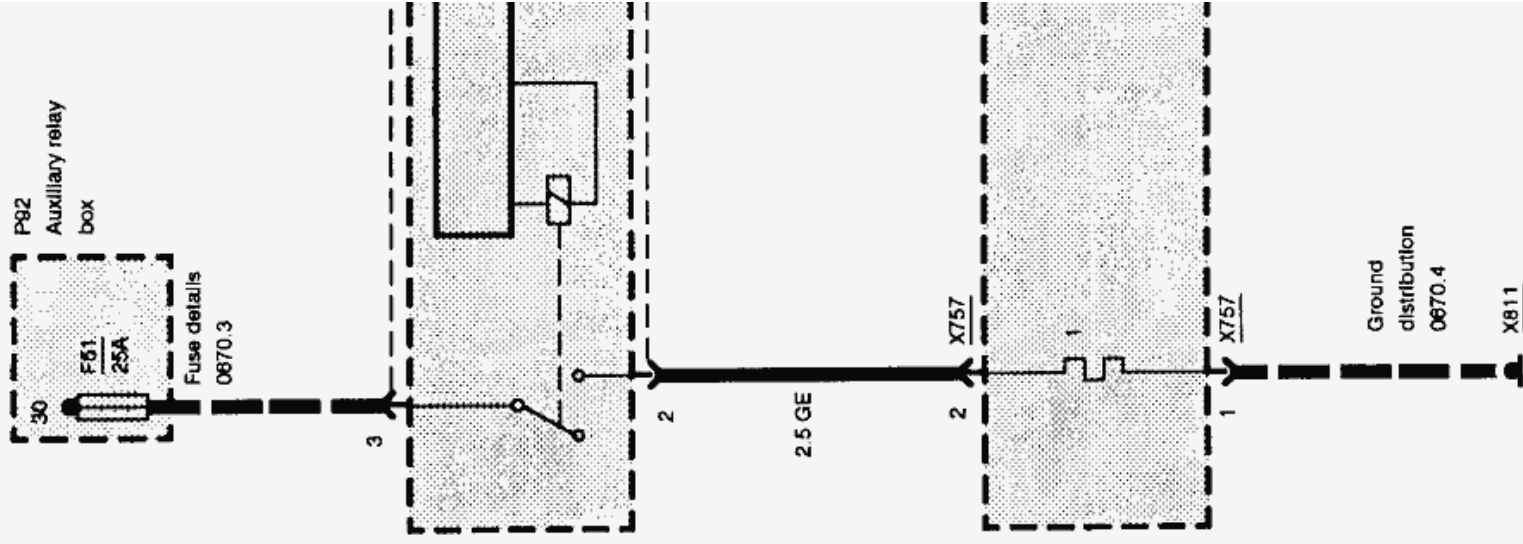

09/93

6412.1-05

1994

A14  
Independent  
heating/  
ventilation  
control unit


64

Ground  
distribution  
0670.4

Ground  
distribution  
0670.4


11

# entilation with HR34

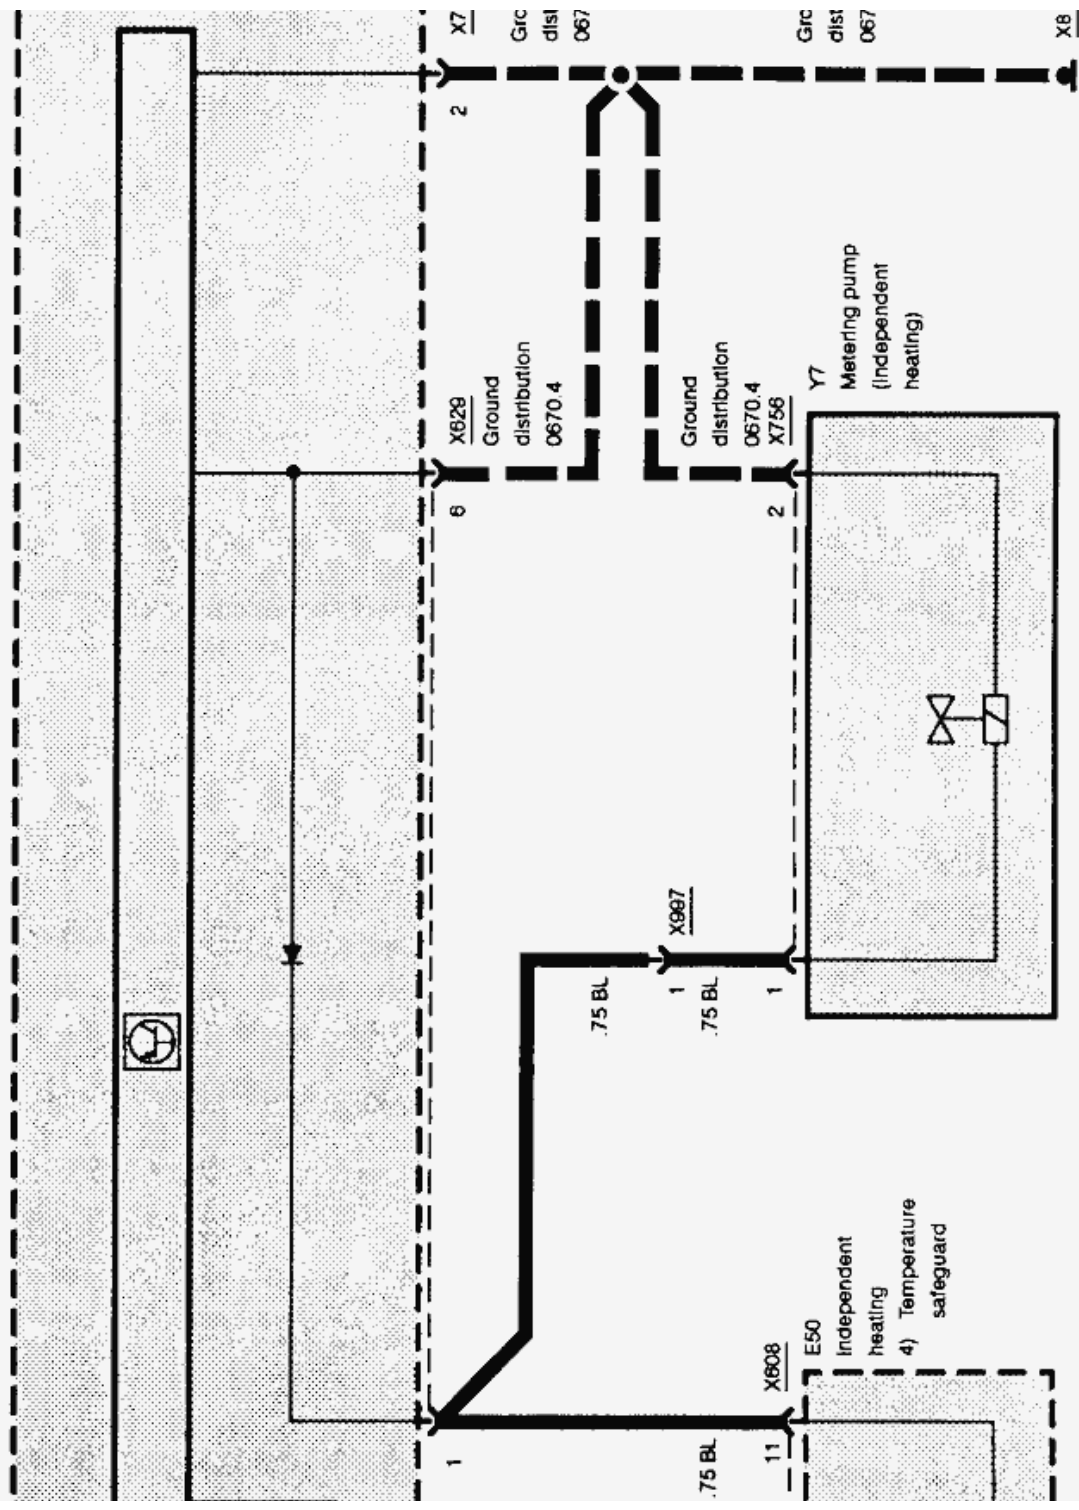



# Independent heating/ v

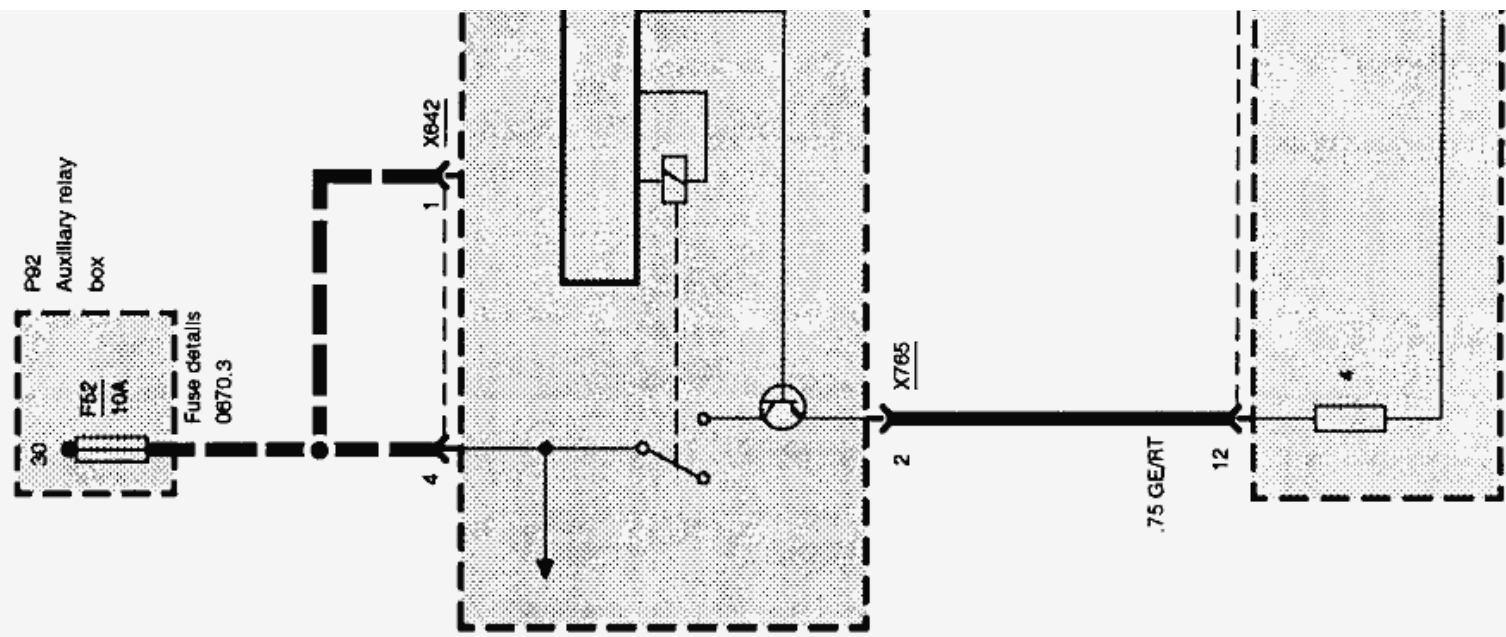


09/93

6412.1-06


1994

# tiltation with HR34

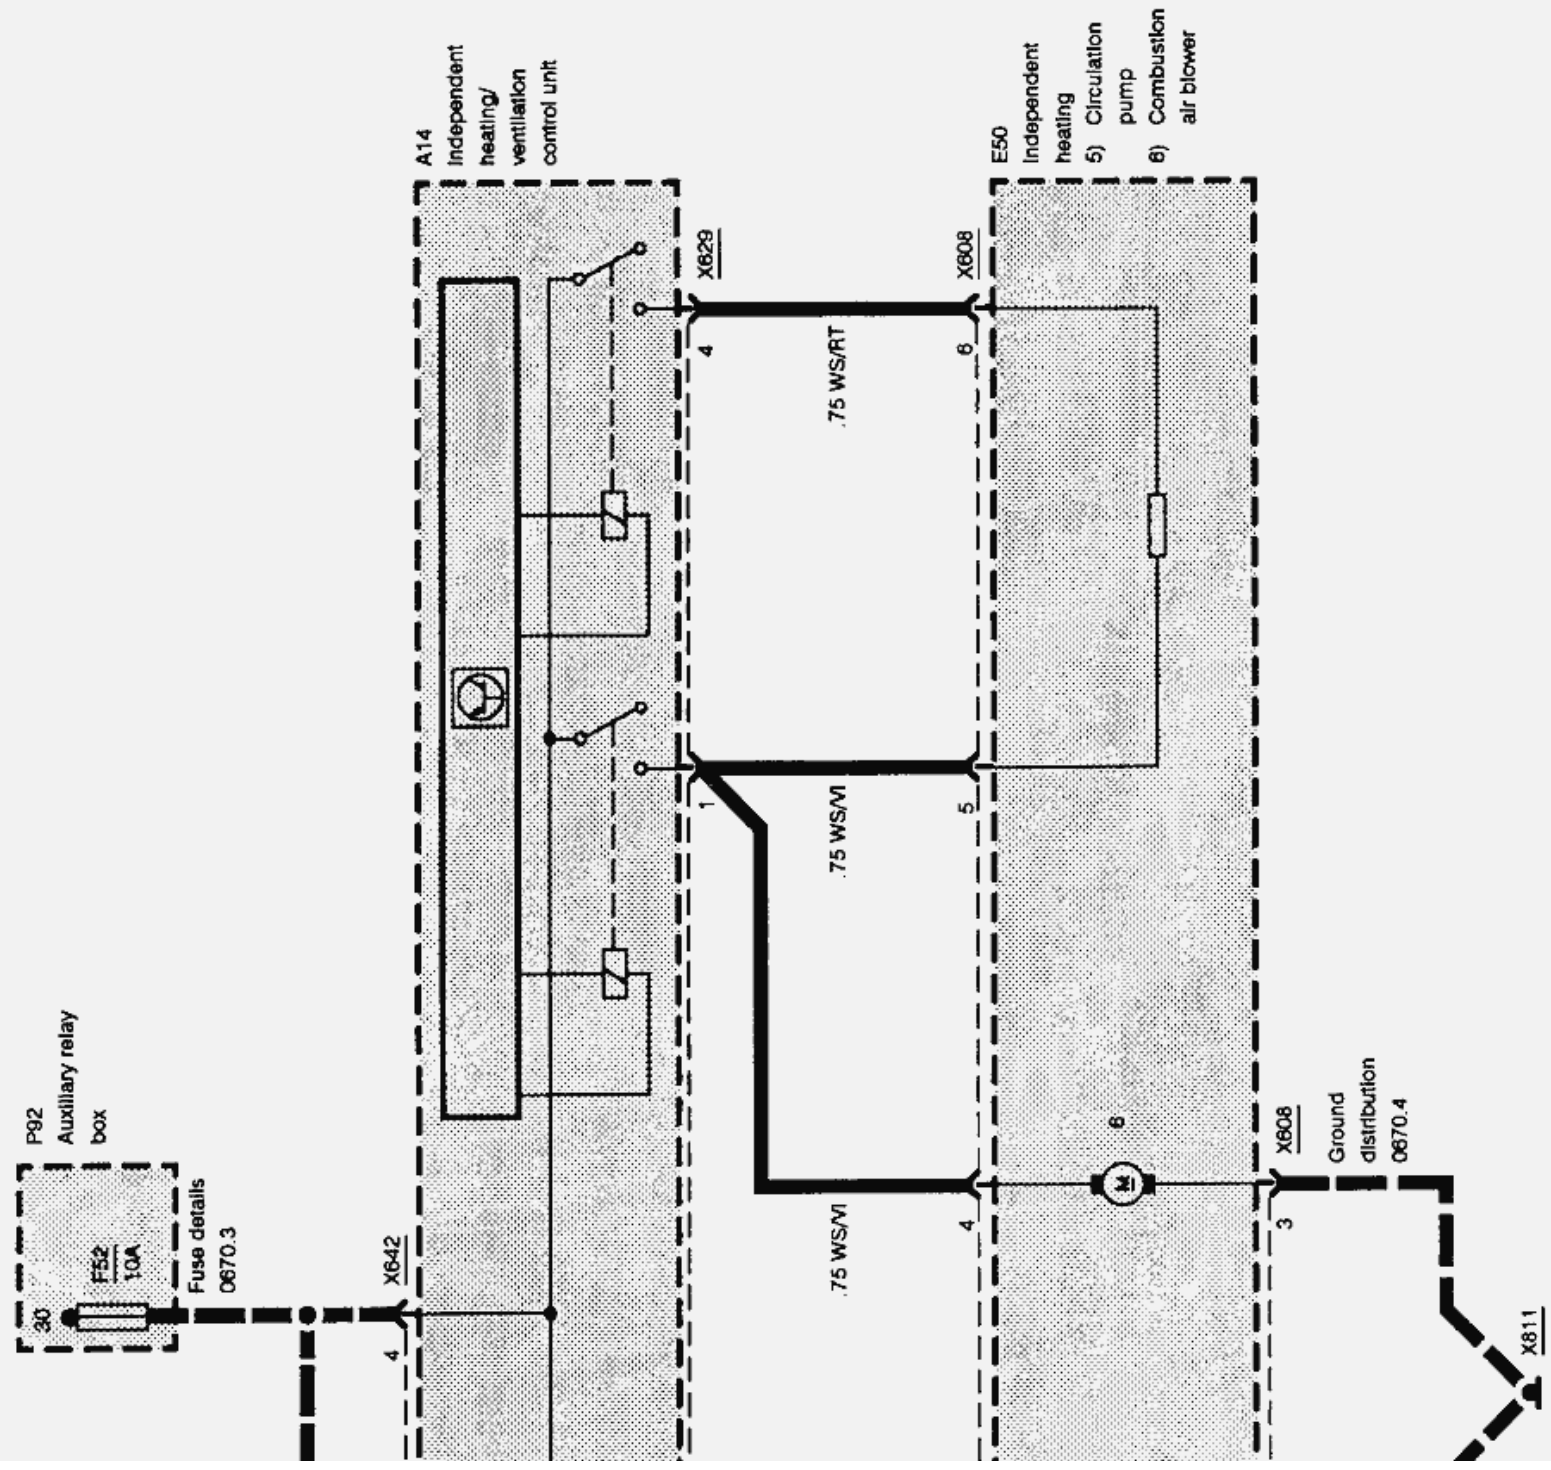



# Independent heating/vent

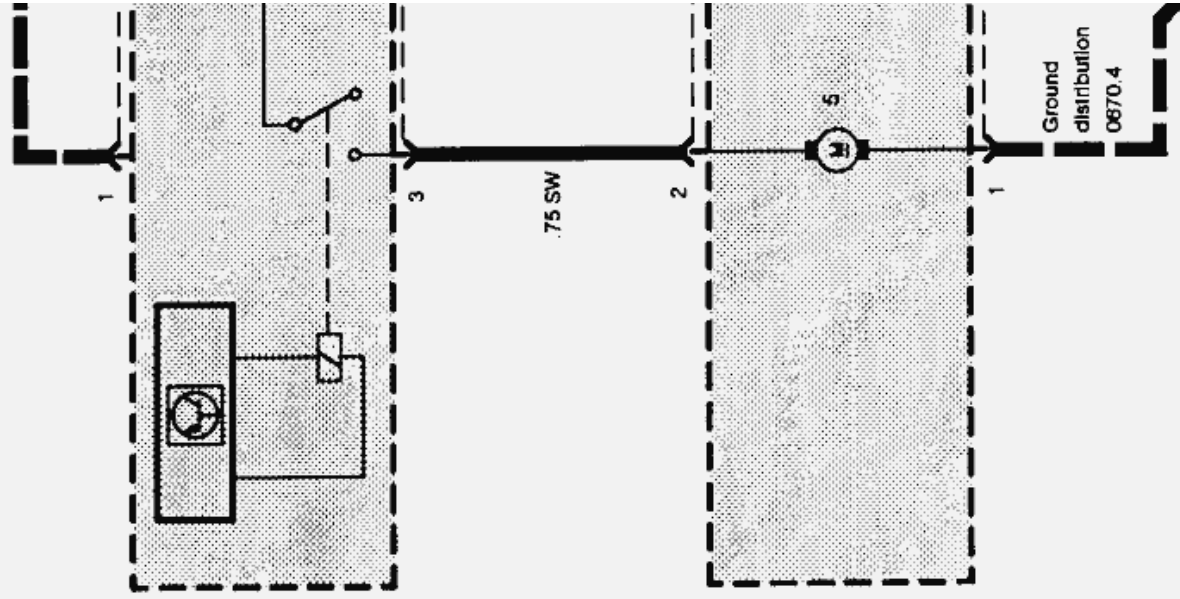



**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


Independent heating/ventilation with IHKA

Scheme 6412.0

Pin Assignment X607				
Pin	Type	Description/Function	Connection	
1	E	Terminal 30	Fuse	
2	A	Signal, independent heating	Independent heating relay	
3	E	Signal, independent heating	On-board computer	
4	E	Signal, independent ventilation	On-board computer	
5		not used		
6	A	Signal, ventilation flap	IHKA operating switch	
7	E	Signal, independent ventilation, flap position	IHKA operating switch	
8	E	Signal, independent heating, flap position	IHKA operating switch	
9	E	Terminal 61	Unloader relay	
10	M	Ground	Ground connection	
11	E	Terminal R	Fuse F1	
12	A	Activation, control unit/stop valve	Independent heating/ventilation control unit/ stop valve	



E = Input, A = Output, M = Ground

**BMW 5** Independent heating/ ventilation with IHKA



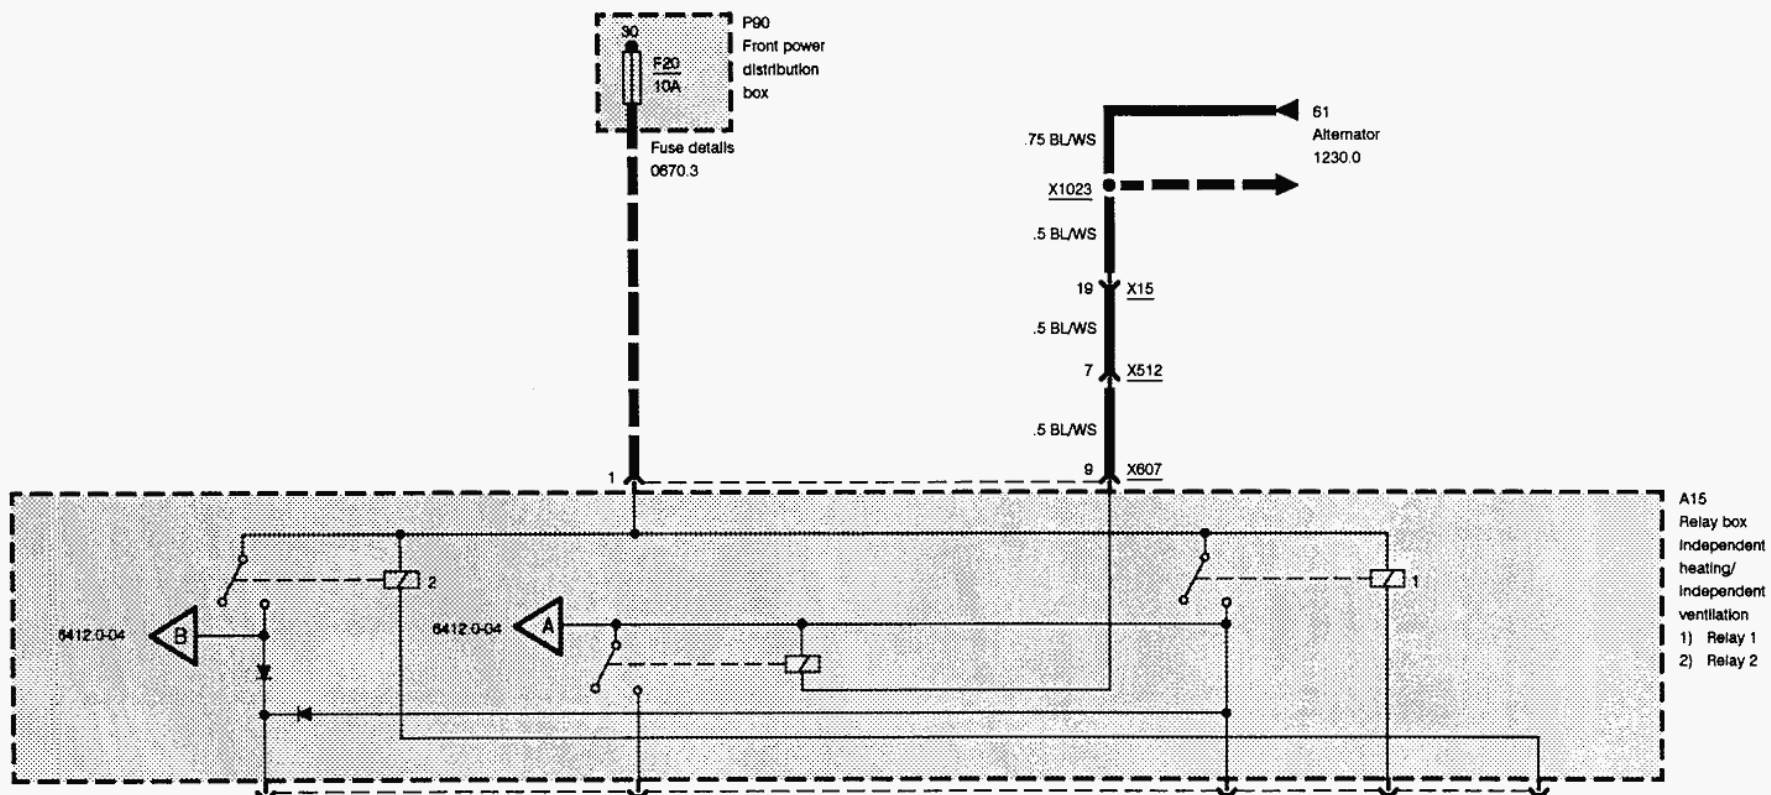


09/93

6412.0-00

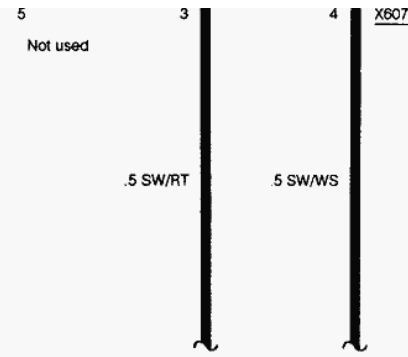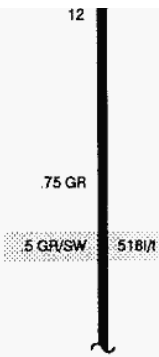


1994

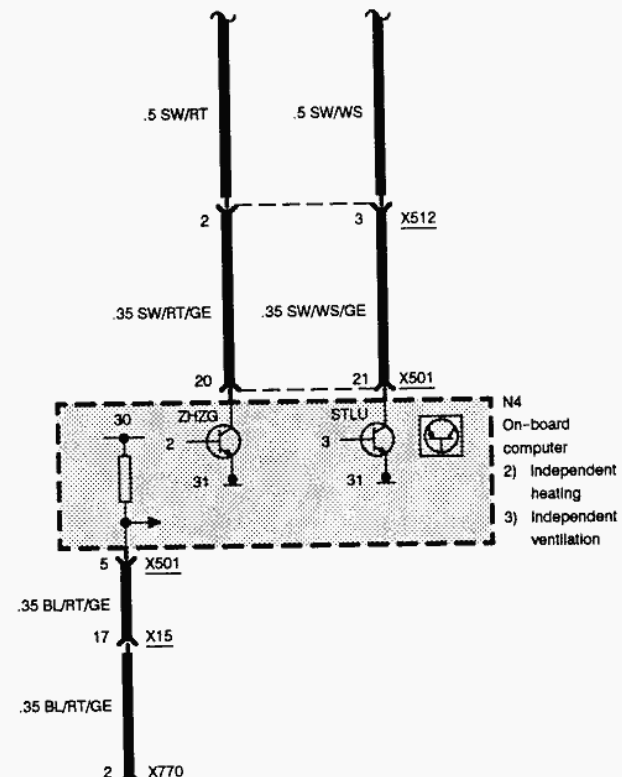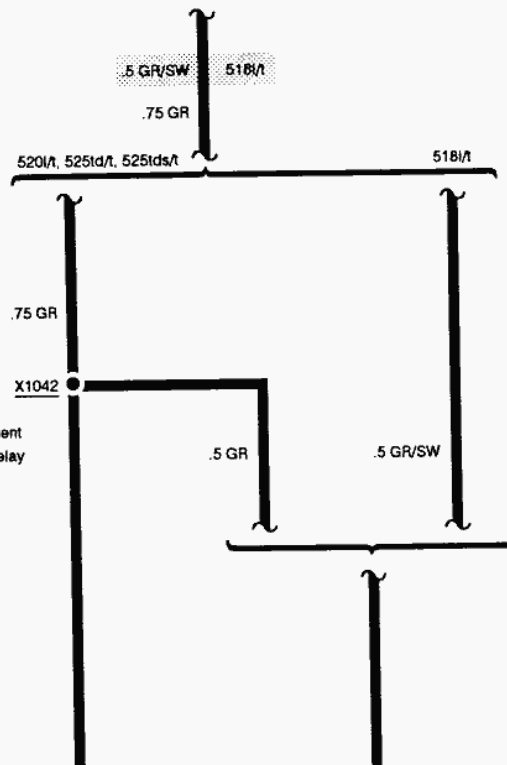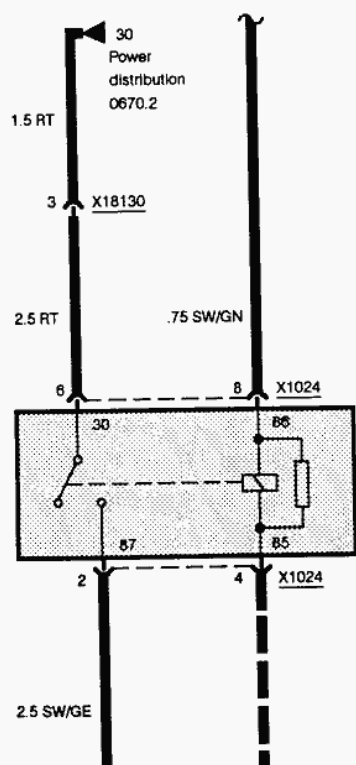

09/93


6412.0-01

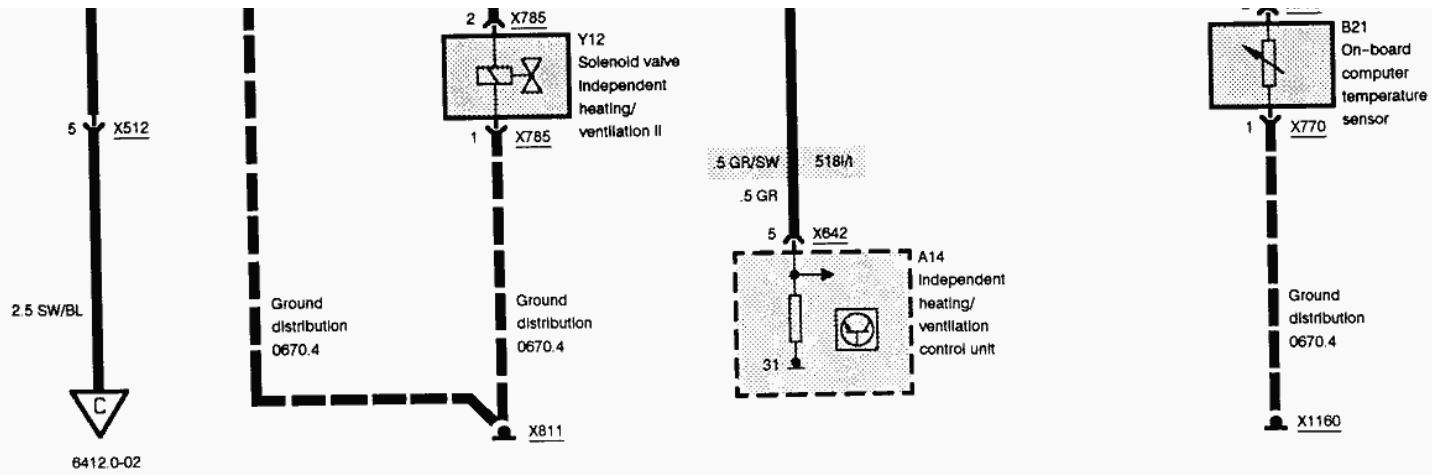

1994





## Independent heating/ ventilation with IHKA





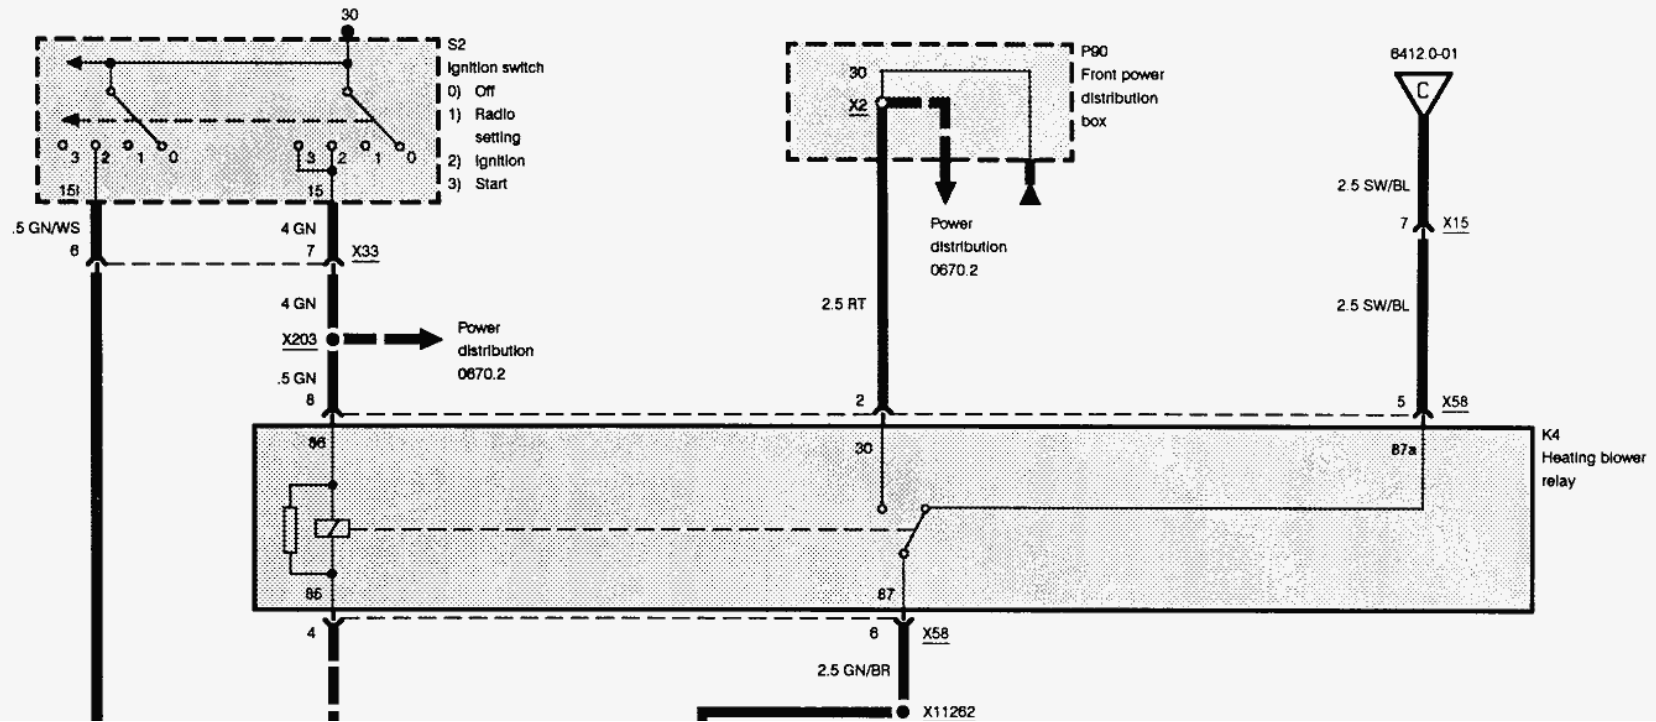


09/93


6412.0-02

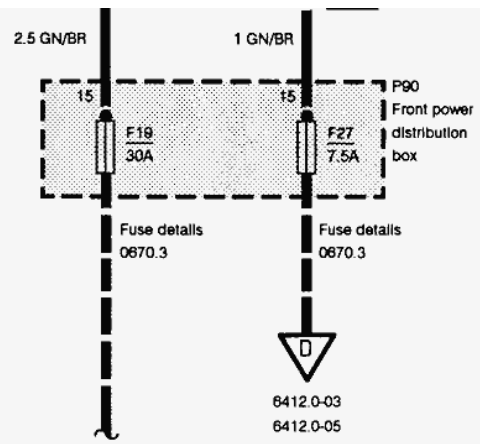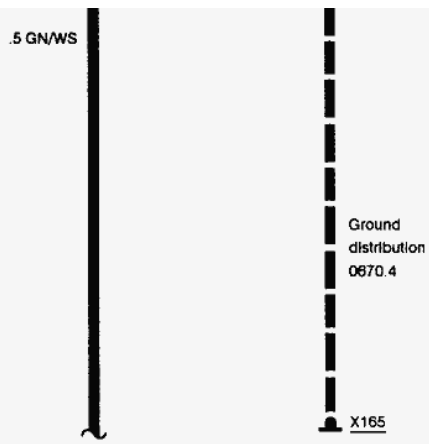

1994

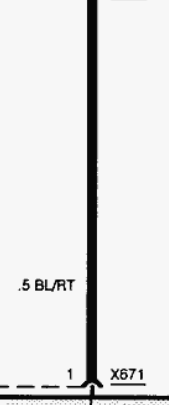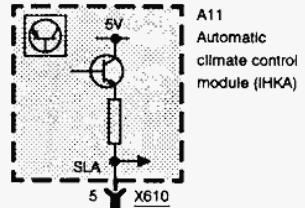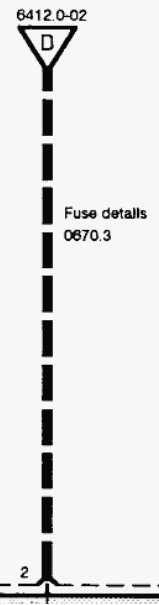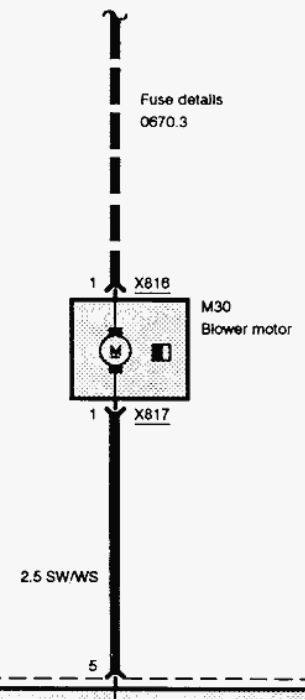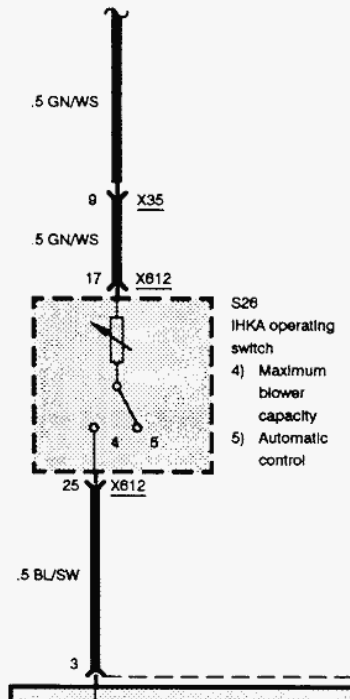


09/93 — 6412.0-0:

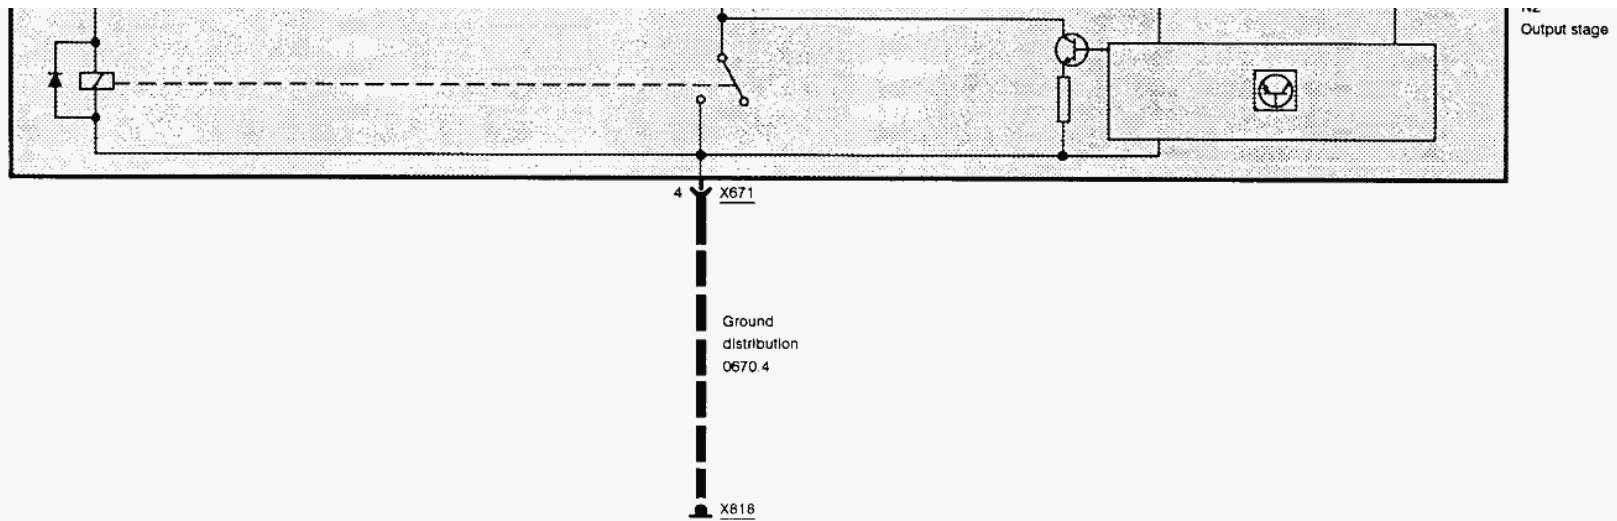


3  
1994




## Independent heating/ ventilation with IHKA

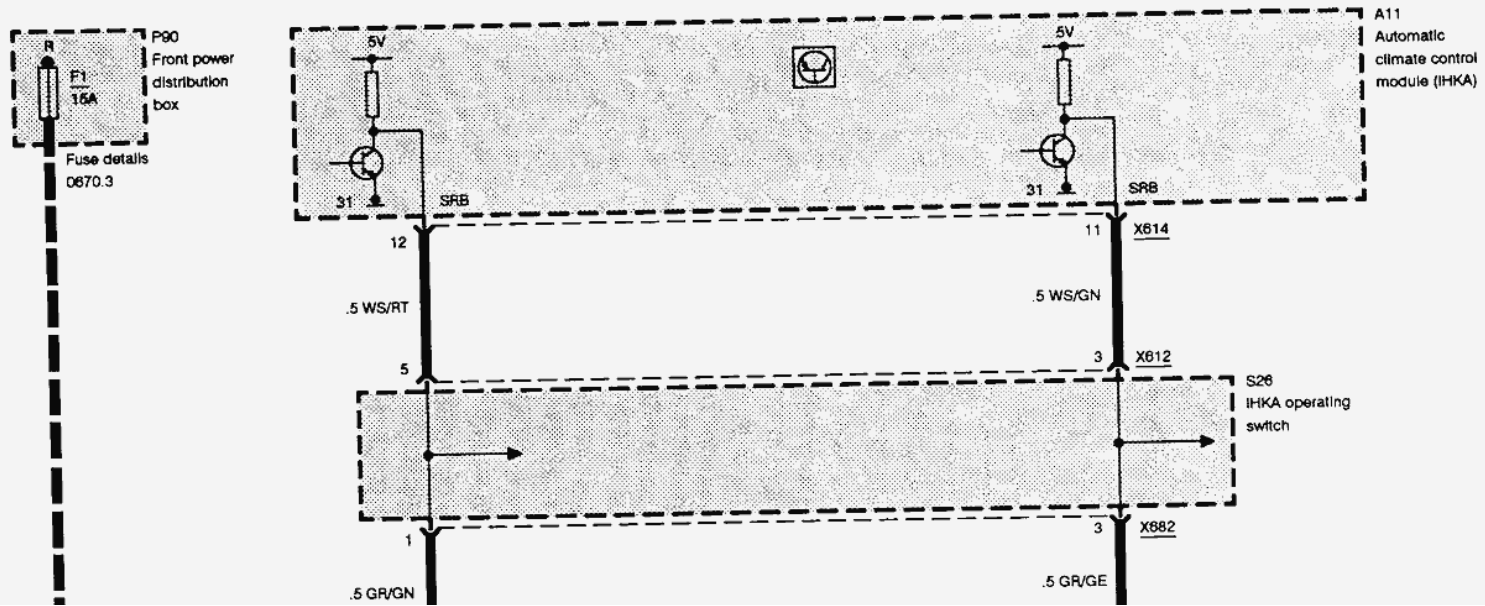


09/93  
6412.0-04

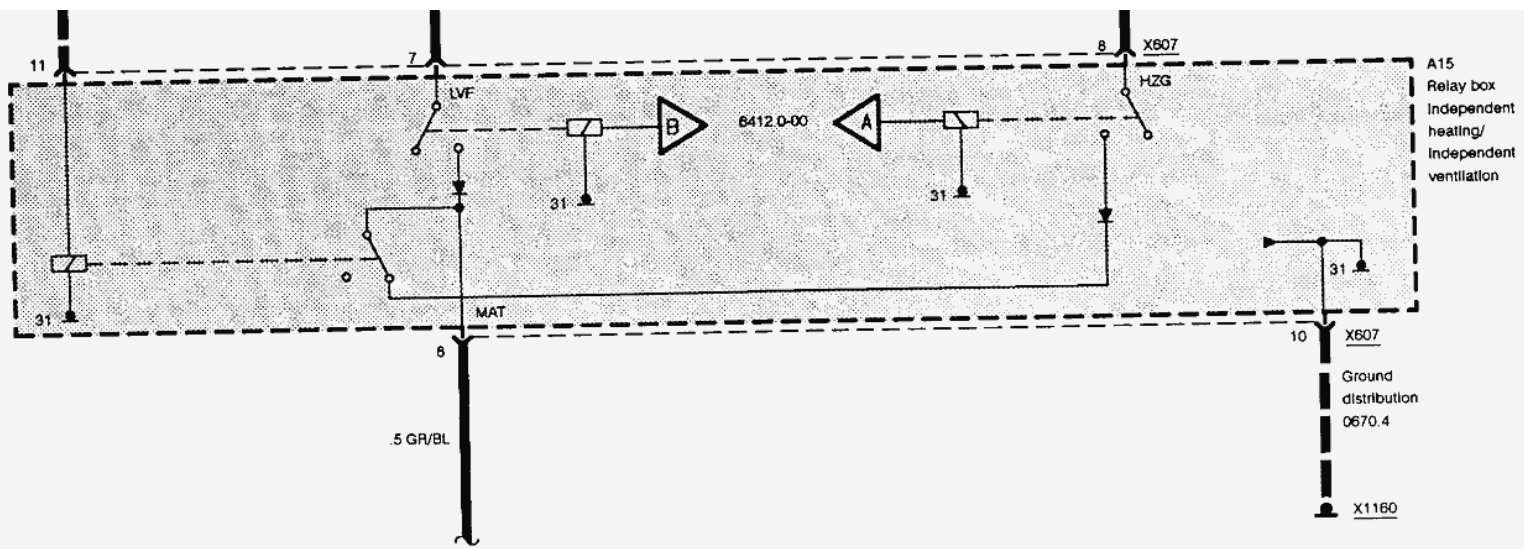

1994


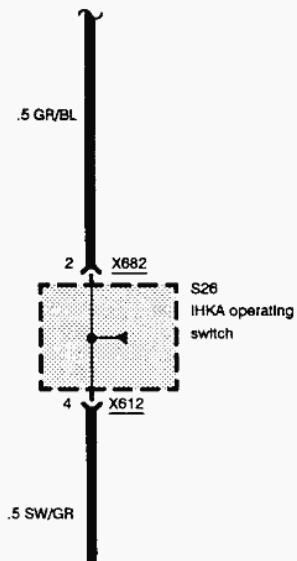


### Water valves

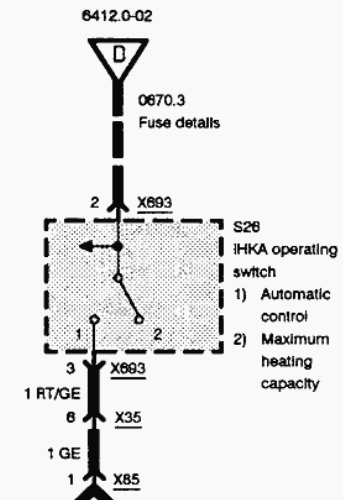

09/93


641

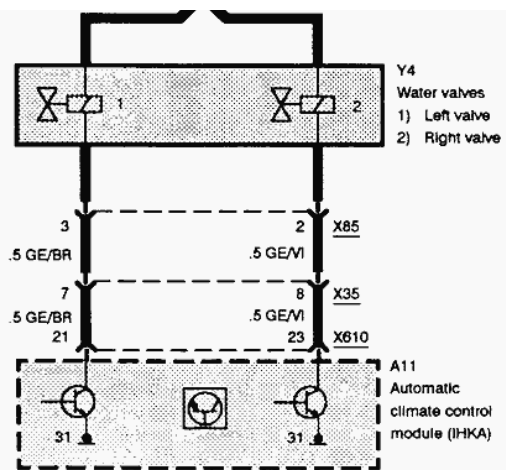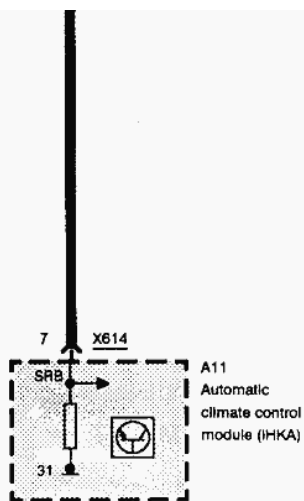


2.0-05  
1994



## Independent heating/ ventilation with IHKA

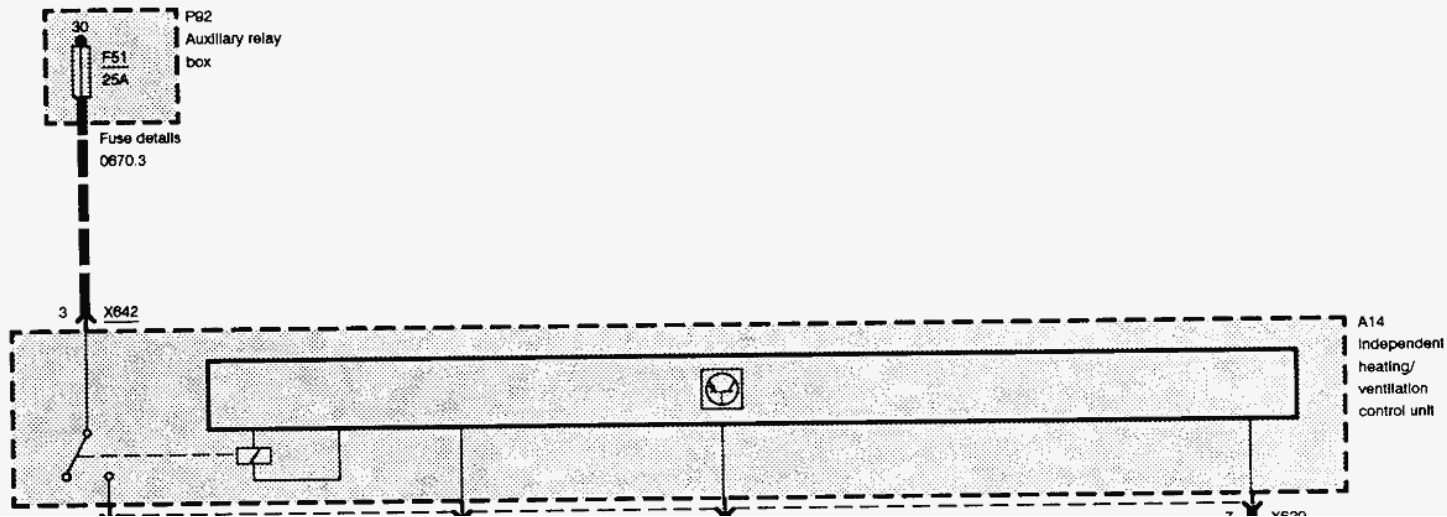


09/93  
6412

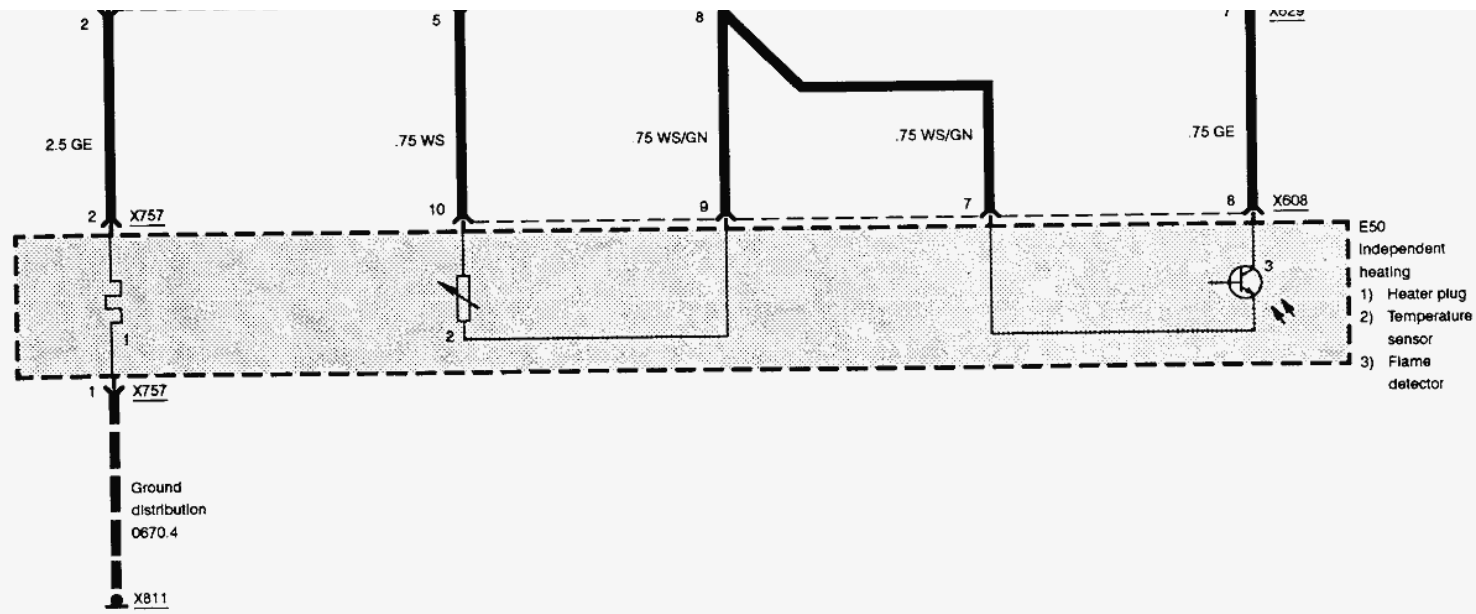

.0-06


1994

**BMW 5** Independent heating/ ventilation with IHKA

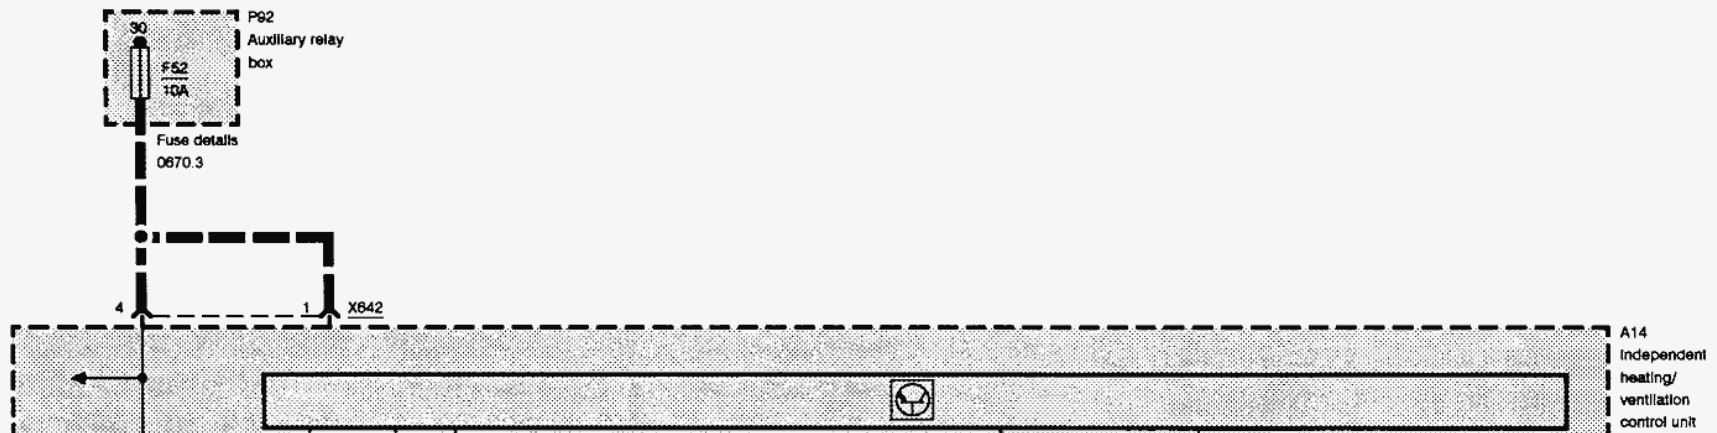

09/93




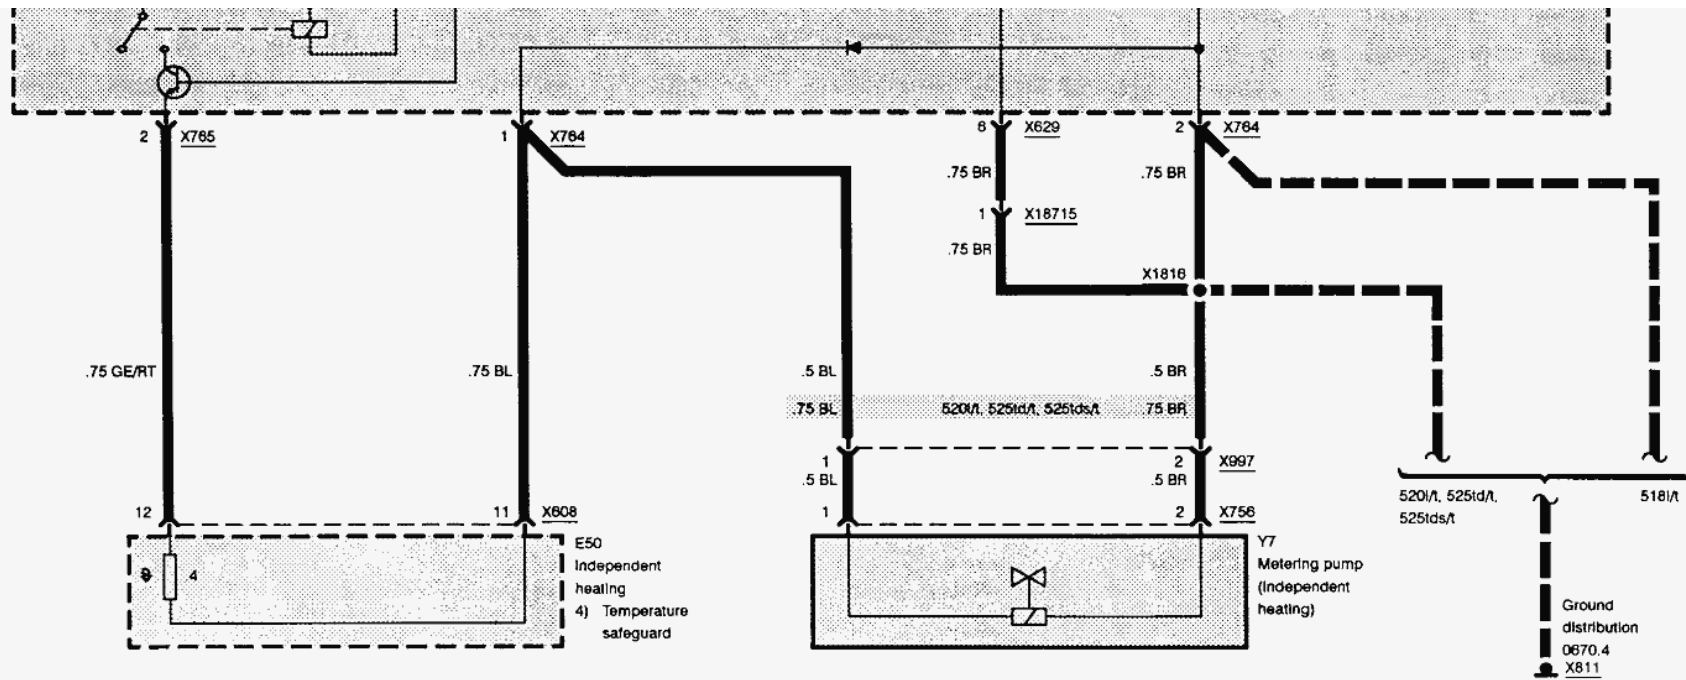


- 6412.0-07 1994



## Independent heating/ ventilation with IHKA

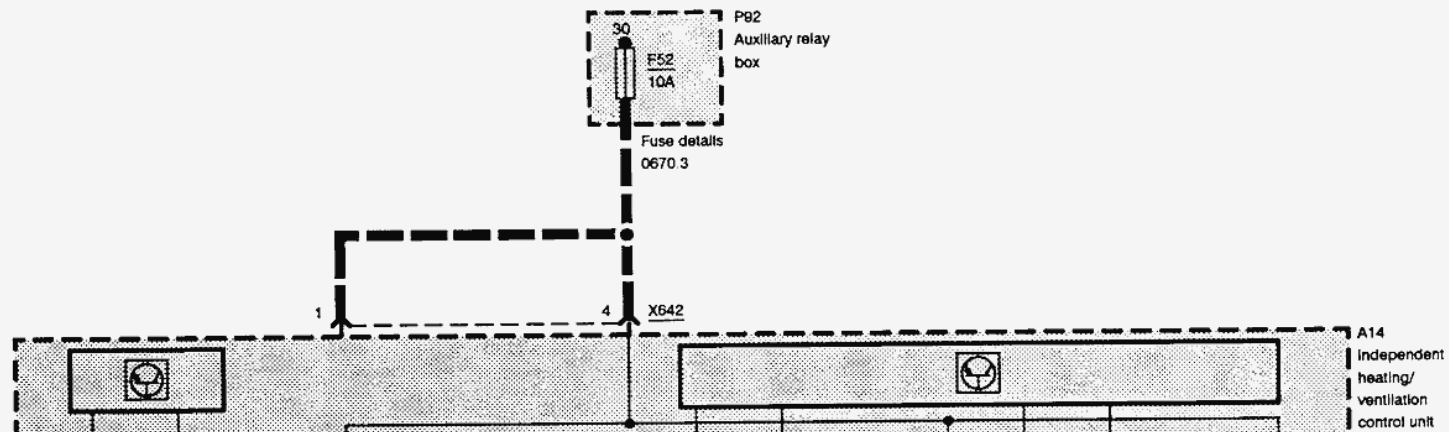

09/93

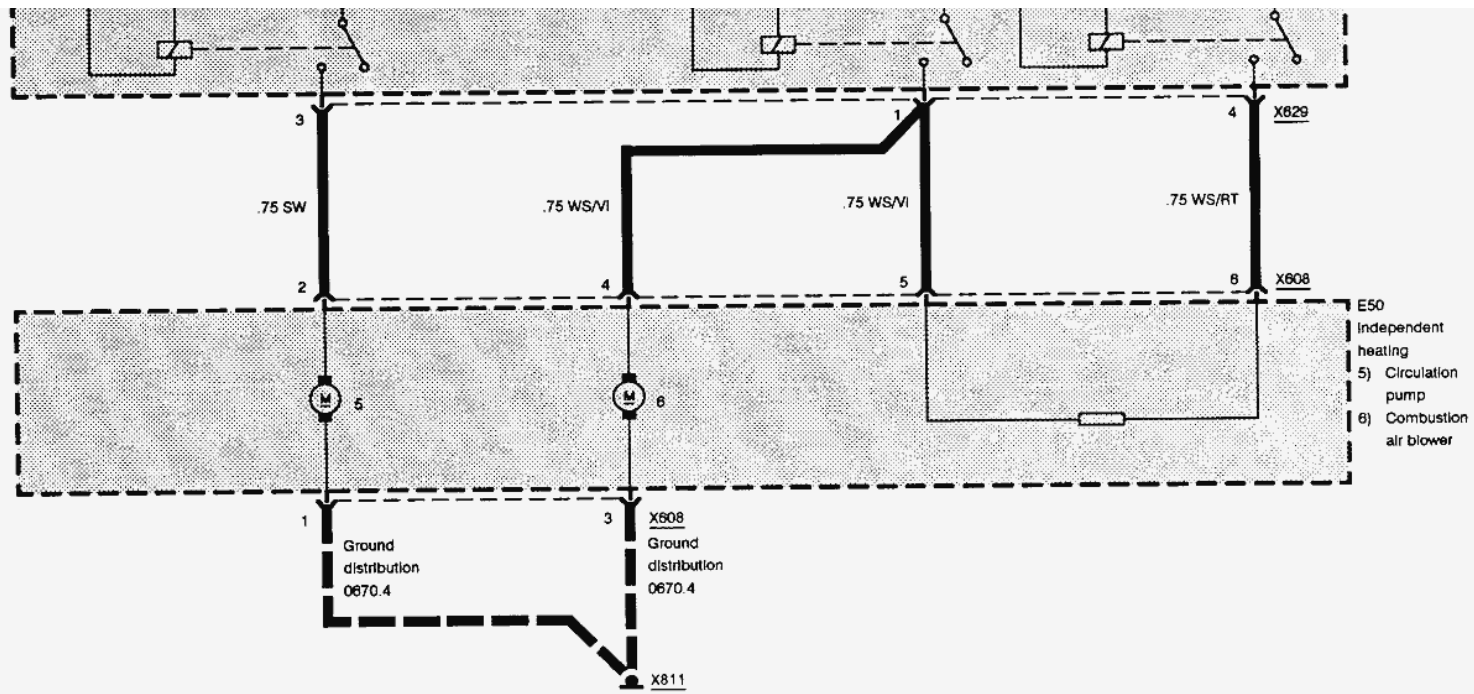

**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Independent heating/ventilation with IHKR/F3

Scheme 6412.18

**Pin Assignment X607**

Pin	Type	Description/Function	Connection
1	E	Terminal 30	Fuse
2	A	Signal, independent heating	Independent heating relay
3	E	Signal, independent heating	On-board computer
4	E	Signal, independent ventilation	On-board computer
5		not used	
6	A	Signal, ventilation flap	IHKA operating switch
7	E	Signal, independent ventilation, flap position	IHKA operating switch
8	E	Signal, independent heating, flap position	IHKA operating switch
9	E	Terminal 61	Unloader relay
10	M	Ground	Ground connection
11	E	Terminal R	Fuse F1
12	A	Activation, control unit/stop valve	Independent heating/ventilation control unit/ stop valve

**E = Input, A = Output, M = Ground**



09/93

**6412.18-00**

1994

K4  
Heating blower  
relay


# ating/ ventilation with IHKR/F3

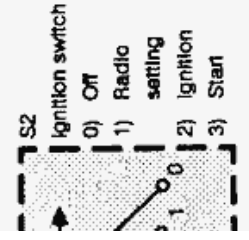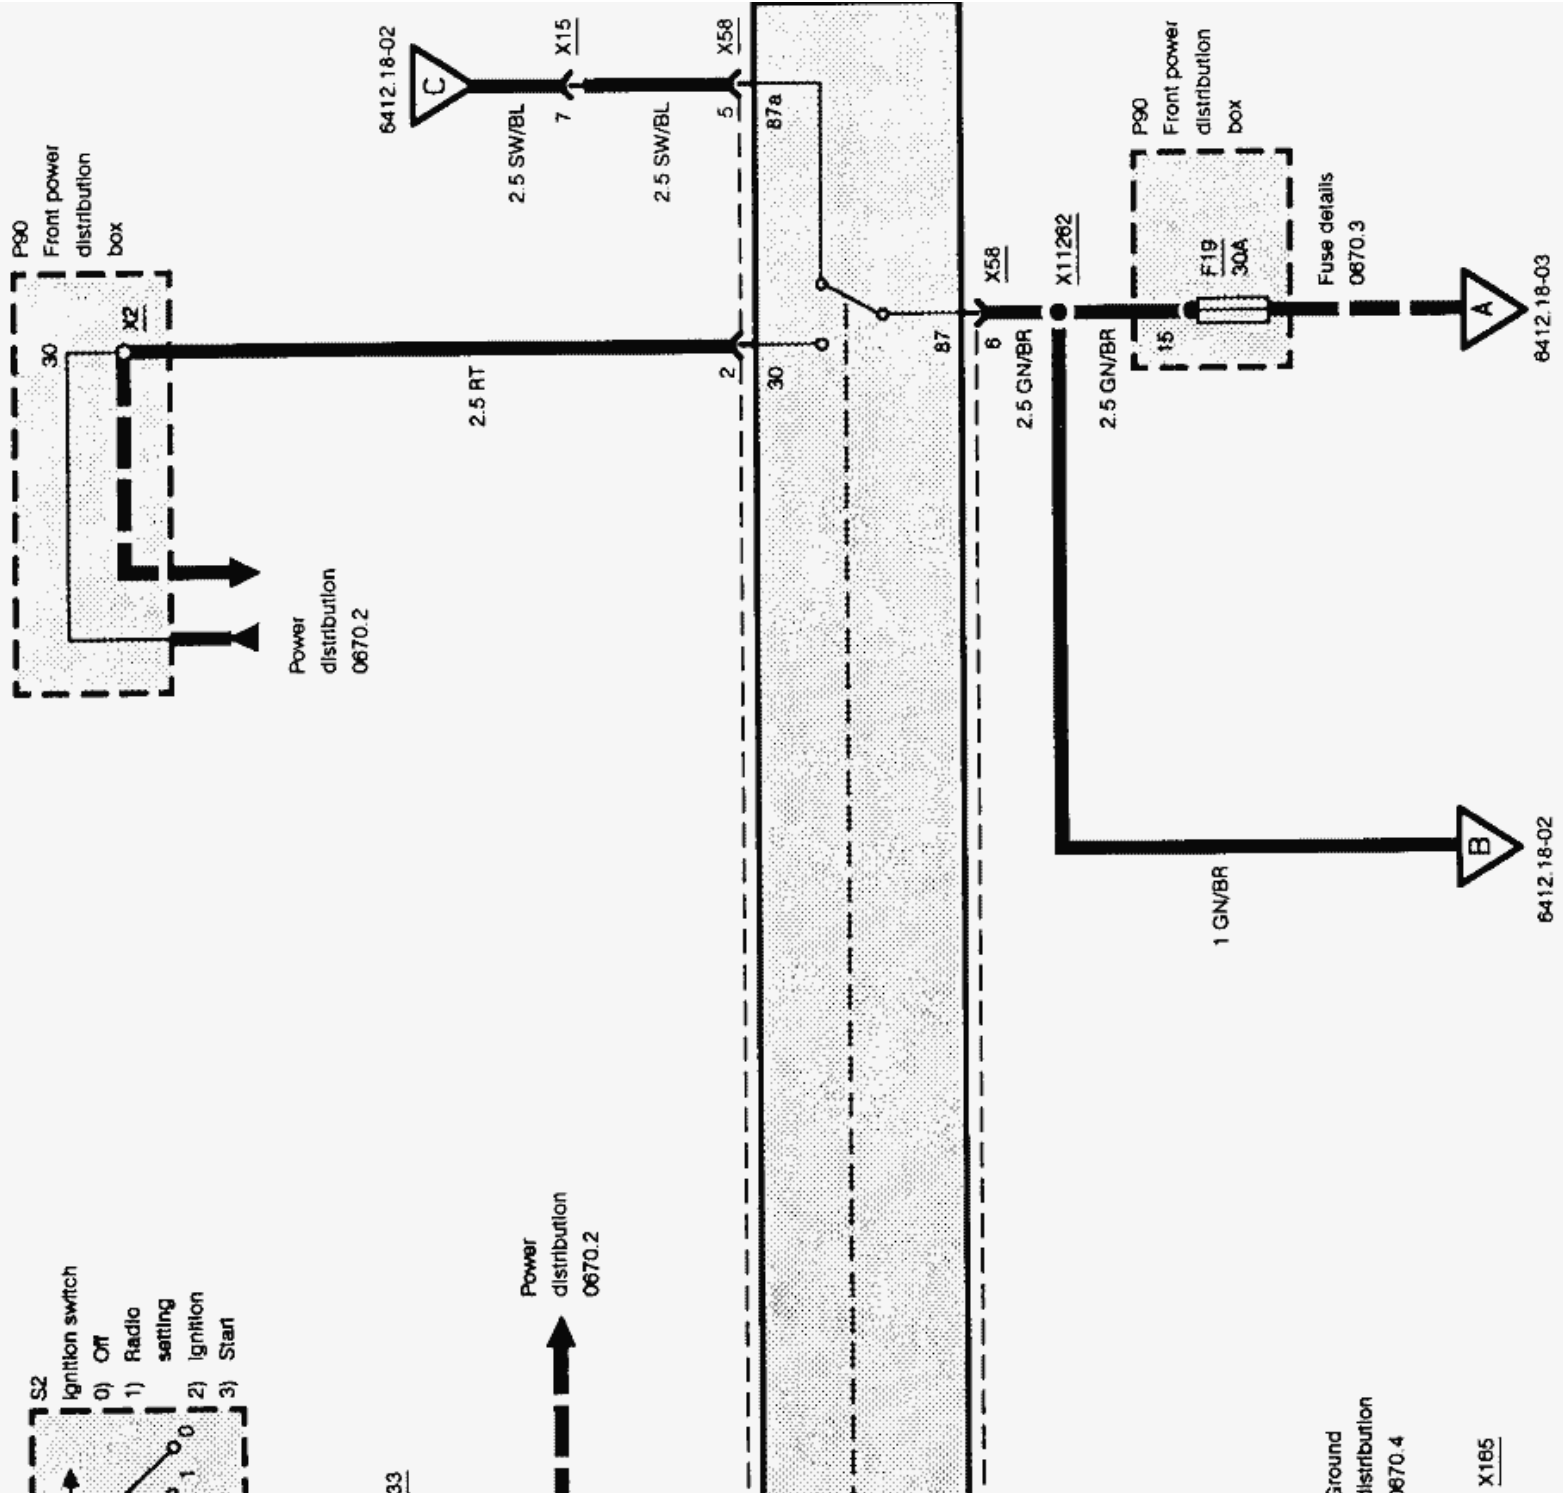

Ground distribution 0670.4  
X165




# Independent heating

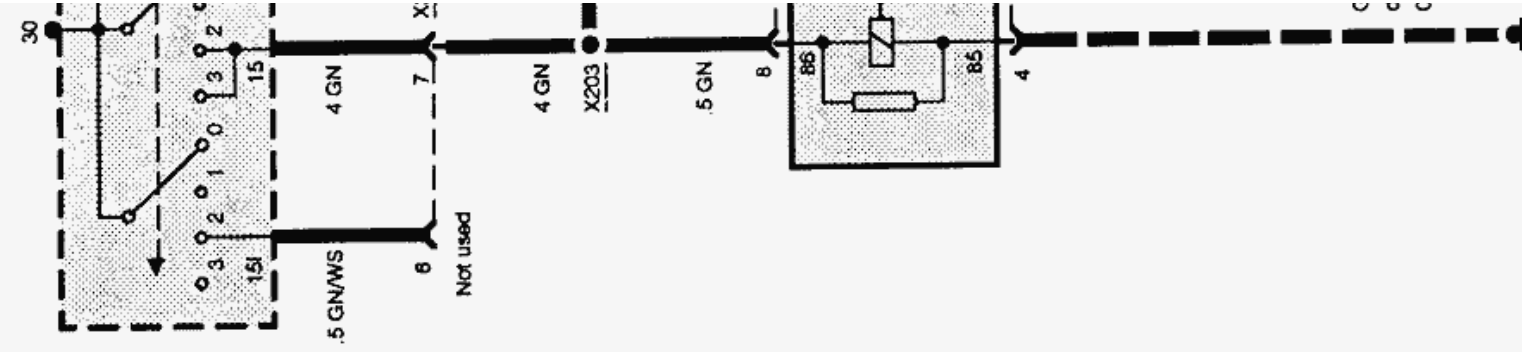


09/93

6412.18- 01

1994

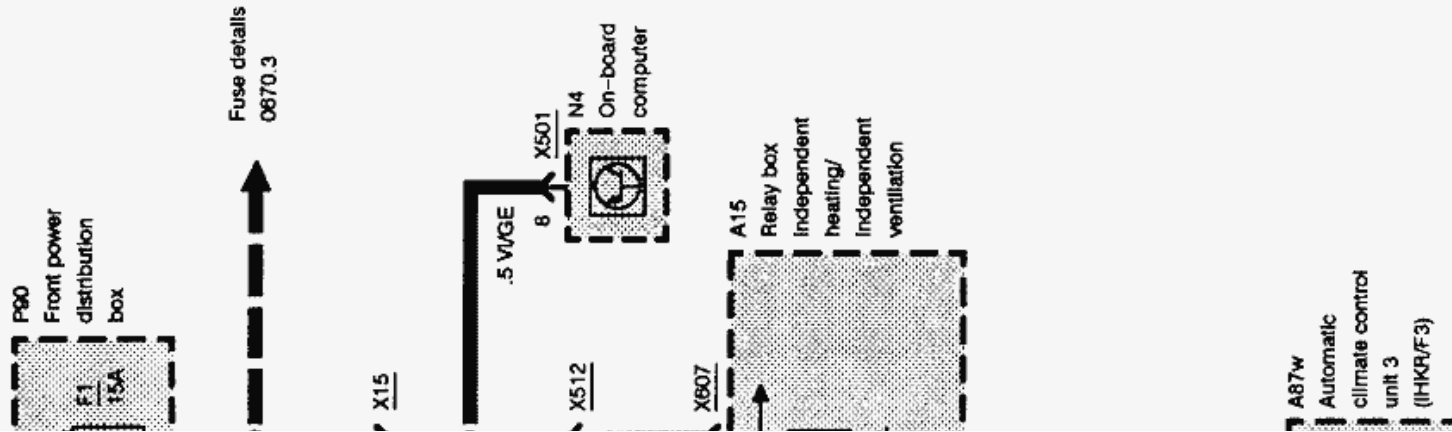



# ating/ ventilation with IHKR/F3

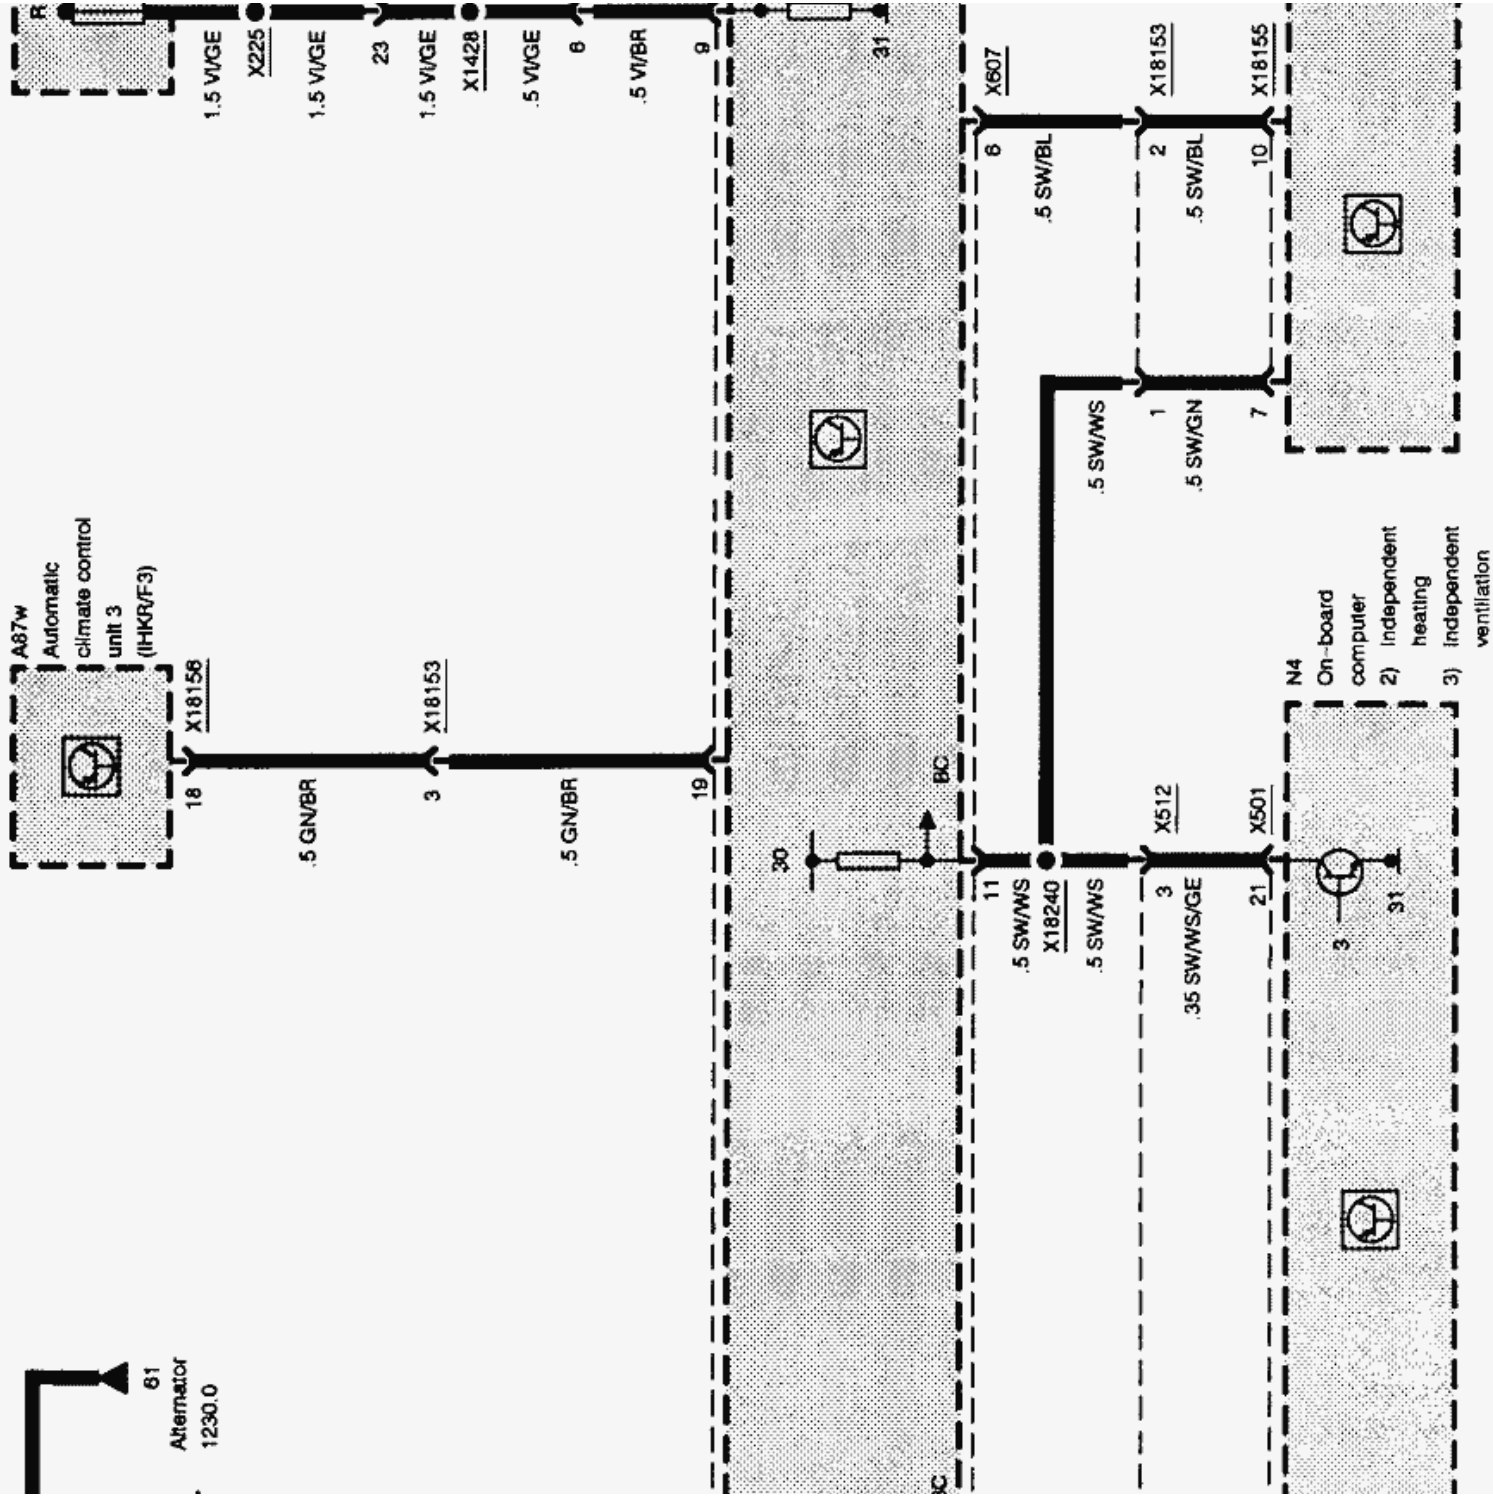

# Independent headlight



09/93 ————— 6412.18-02 ————— 1994

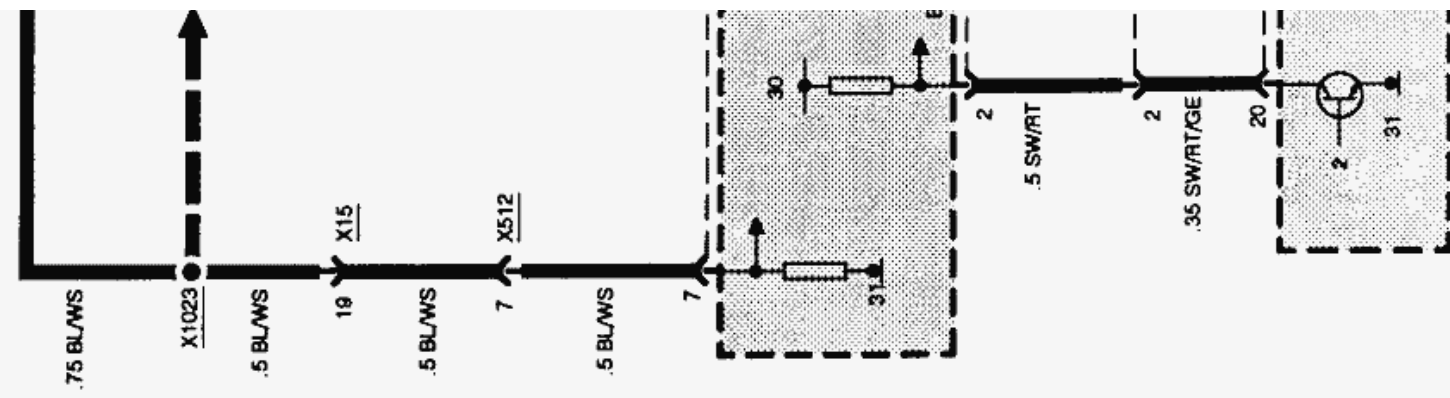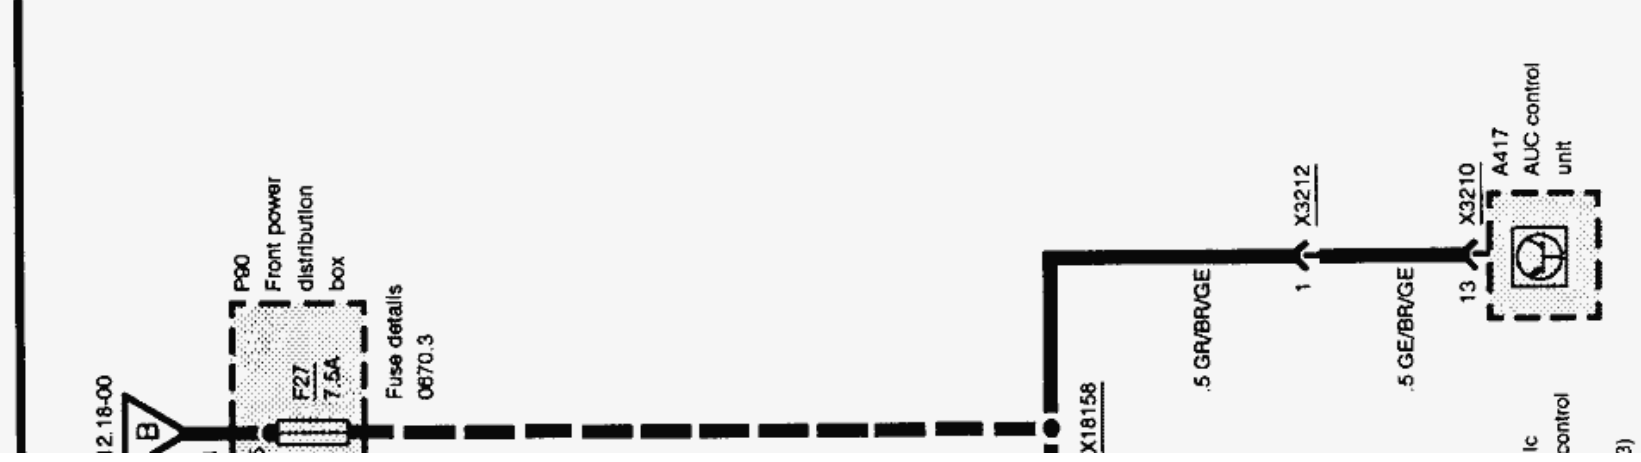


# ig/ ventilation with IHKR/F3

64

y relay


1 GN/BR

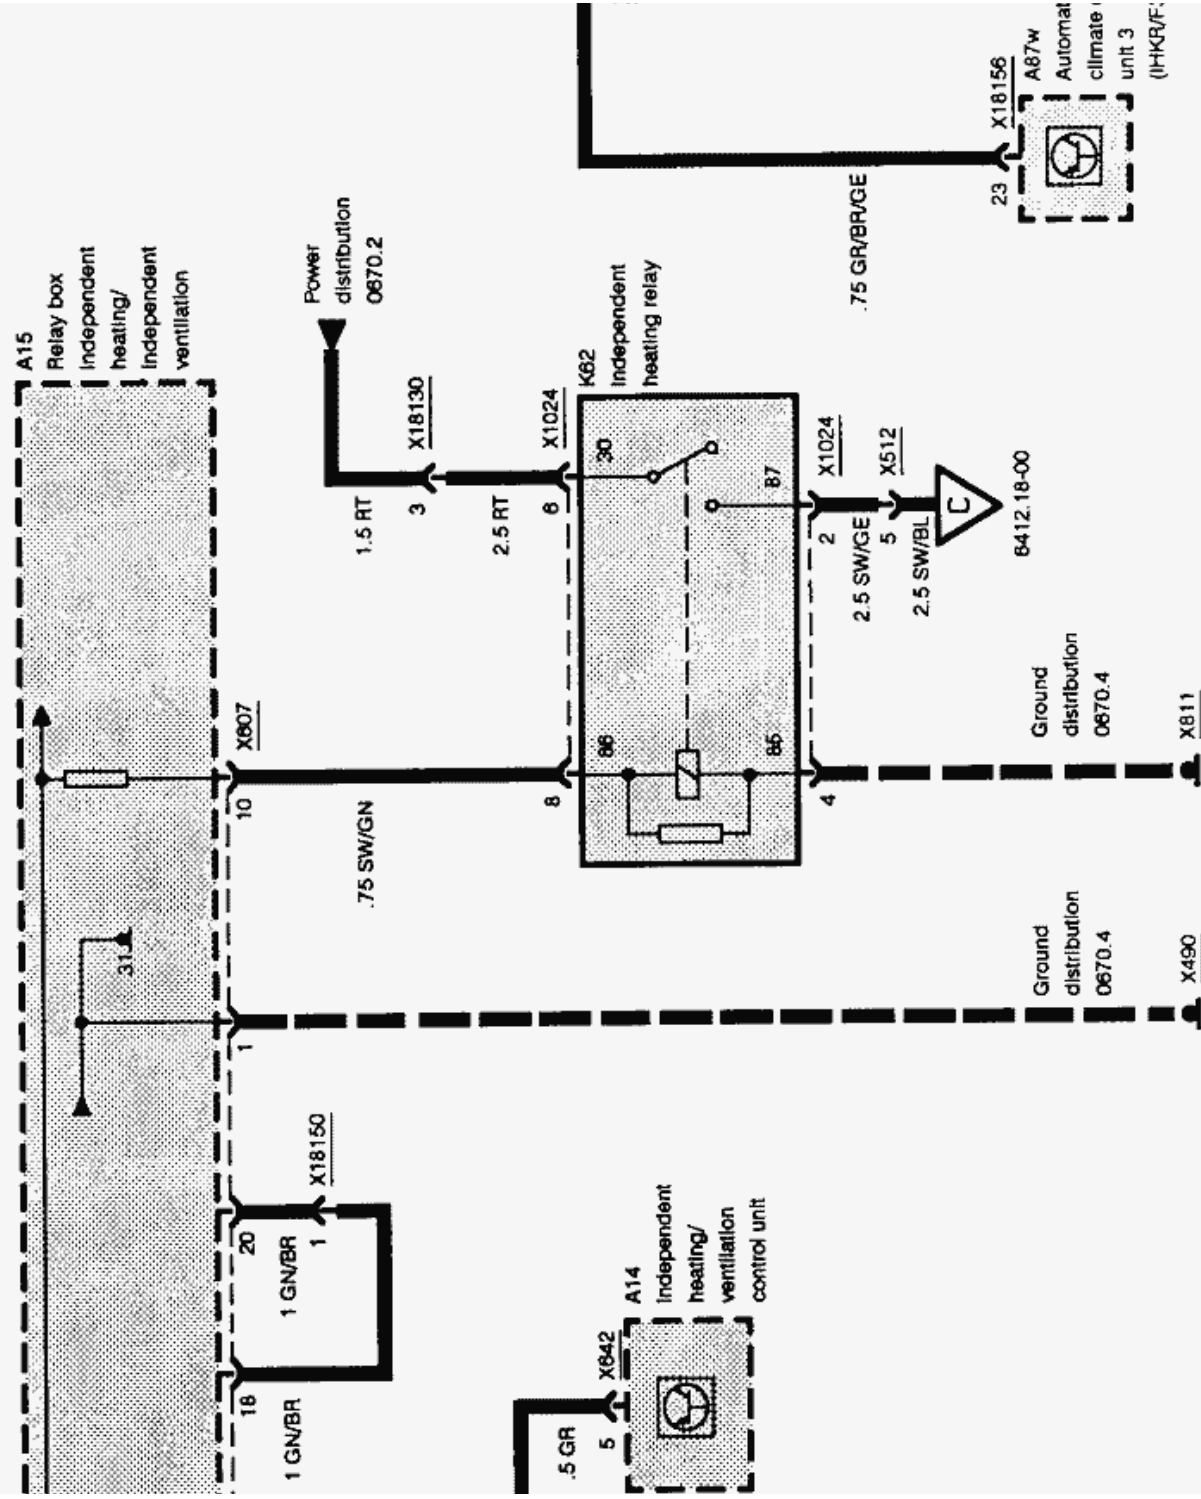







# Independent heating

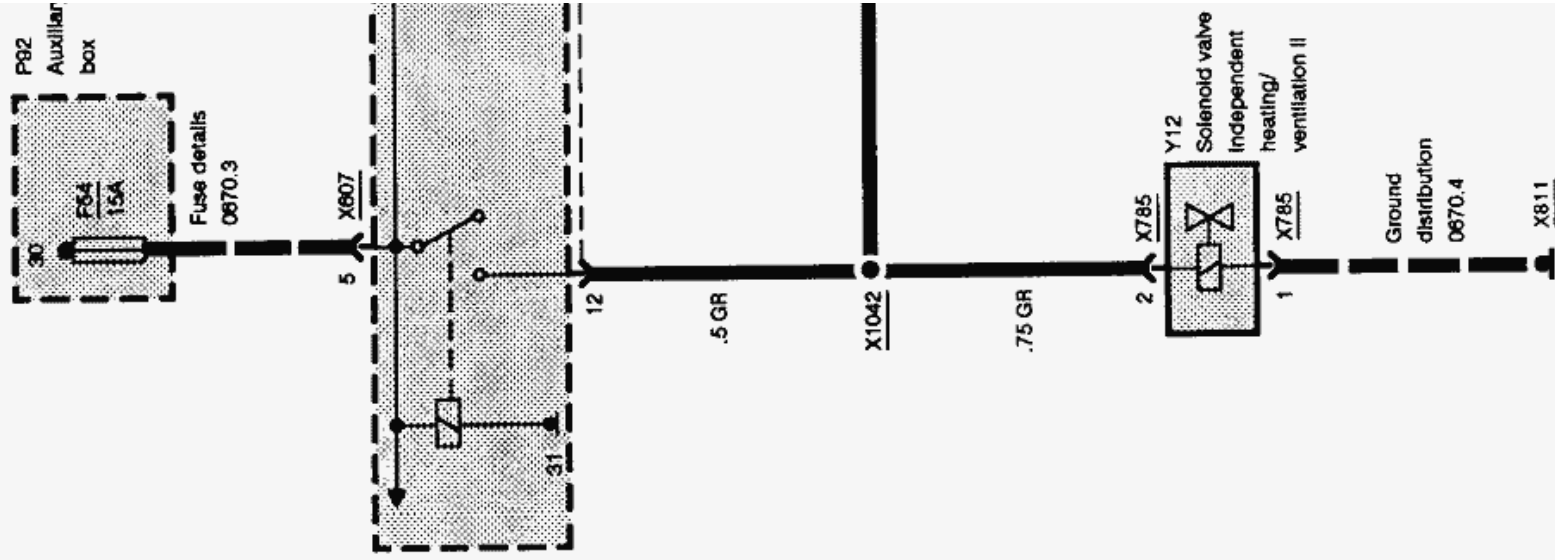


09/93

6412.18-03

1994

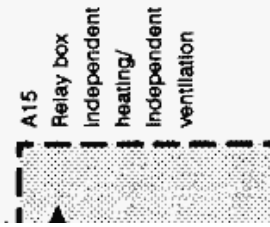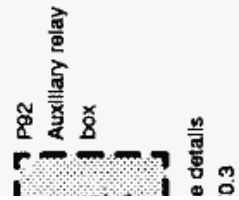

# Blower ventilation with IHKR/F3

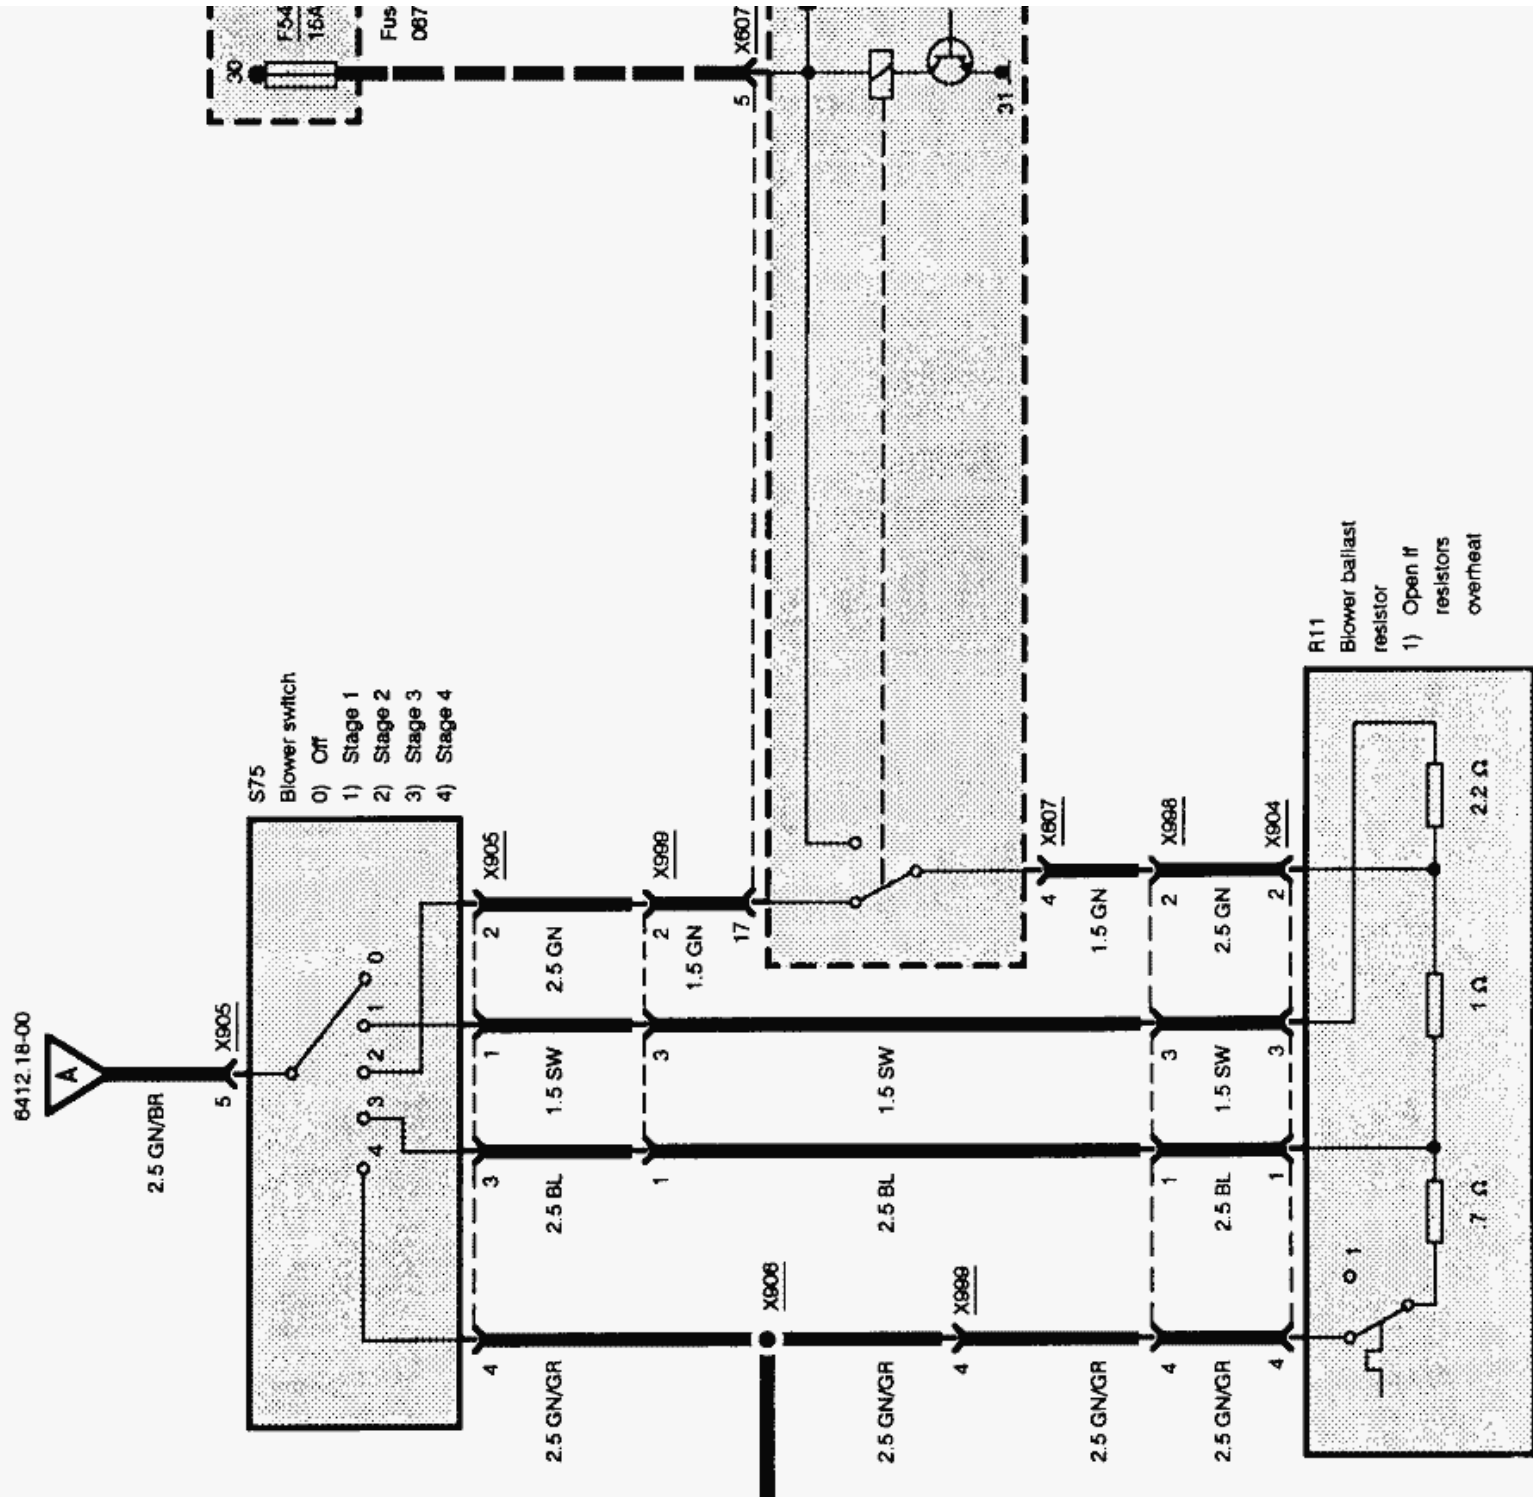


# Independent heating



09/93

6412.18-04


1994

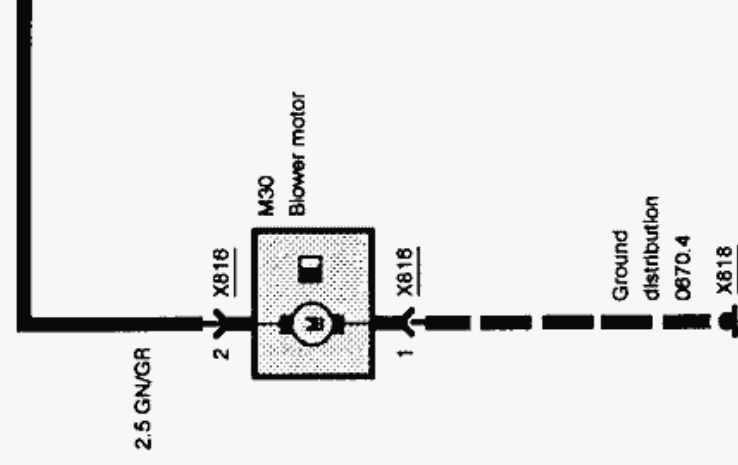

pendent  
ng/  
lation  
of unit


pendent  
ing  
-heater plug  
temperature  
sensor  
Flame  
detector

# ventilation with IHKR/F3

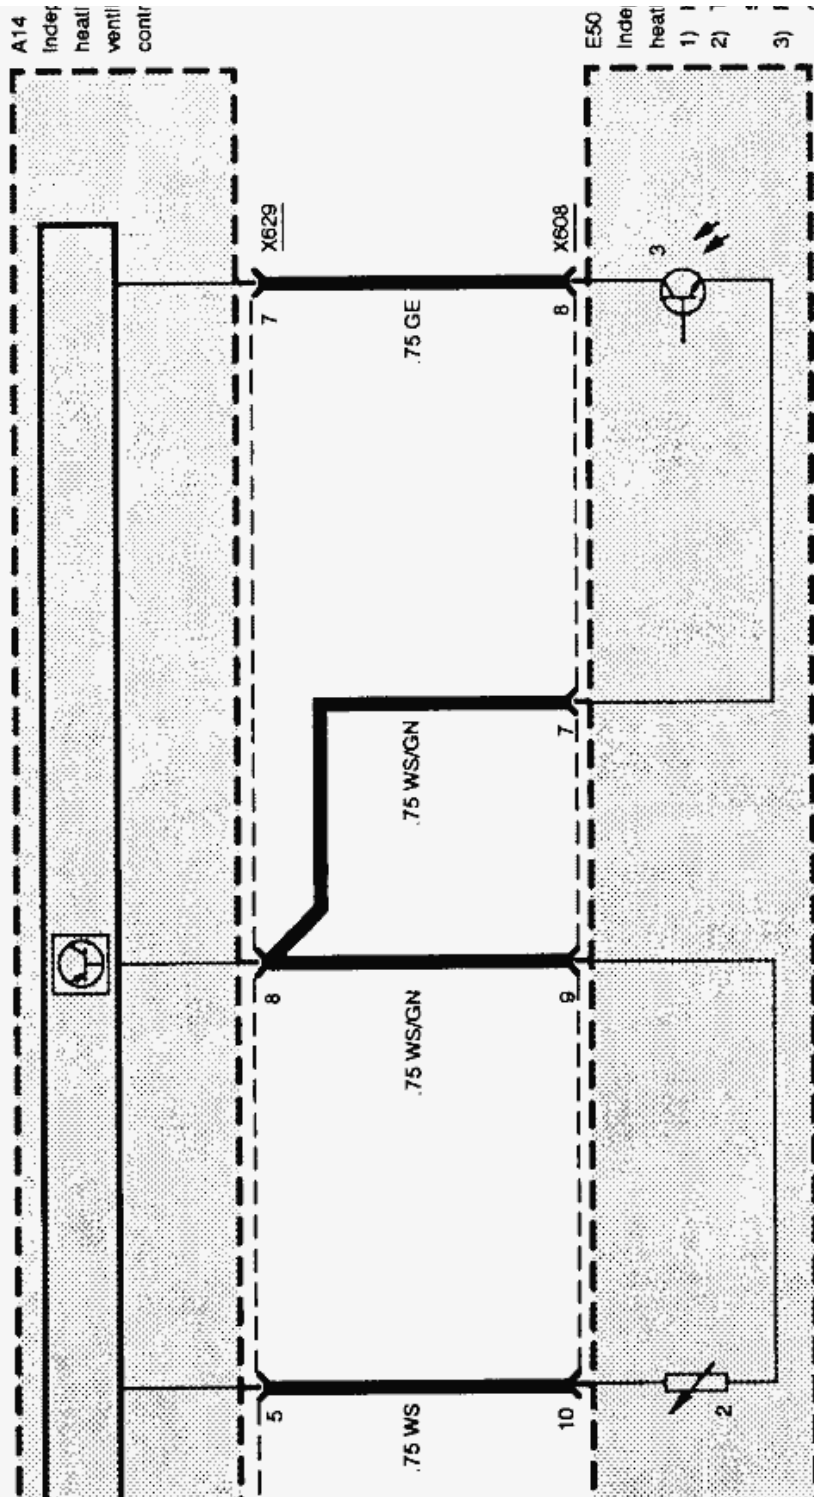



# Independent heating/ventilation control unit

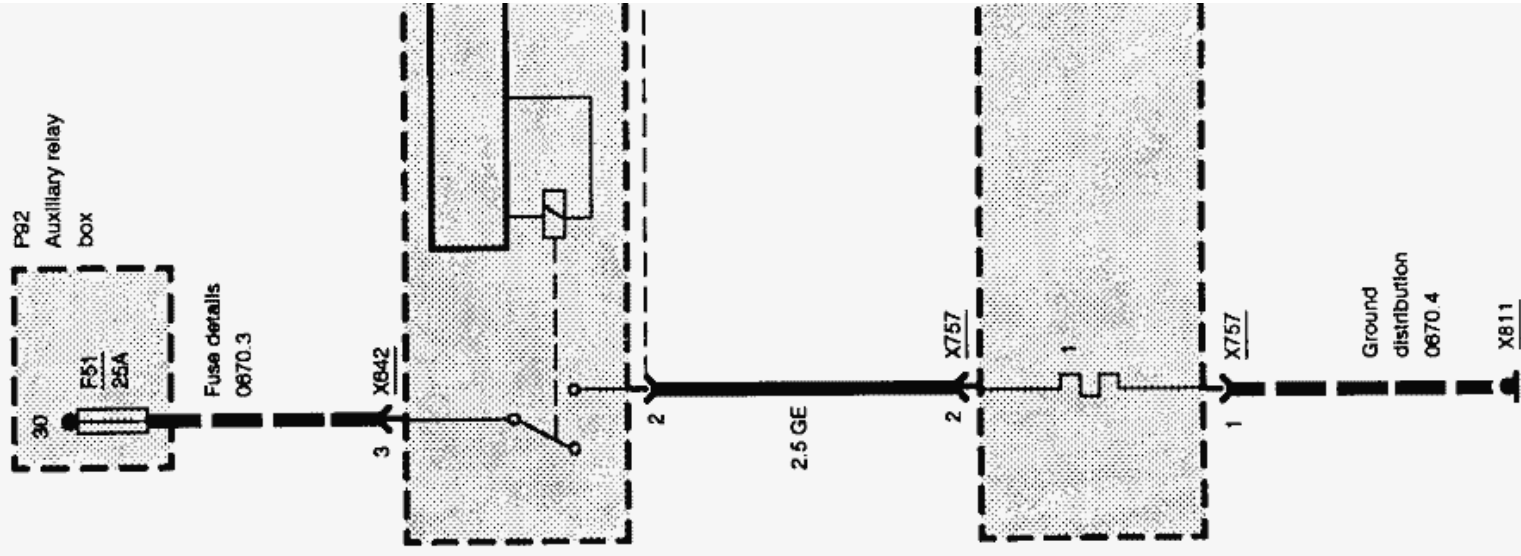

09/93

6412.18-05

1994

A14  
Independent heating/ventilation control unit


764

Ground distribution 0670.4


Ground distribution 0670.4

X811

# Intillation with IHKR/F3

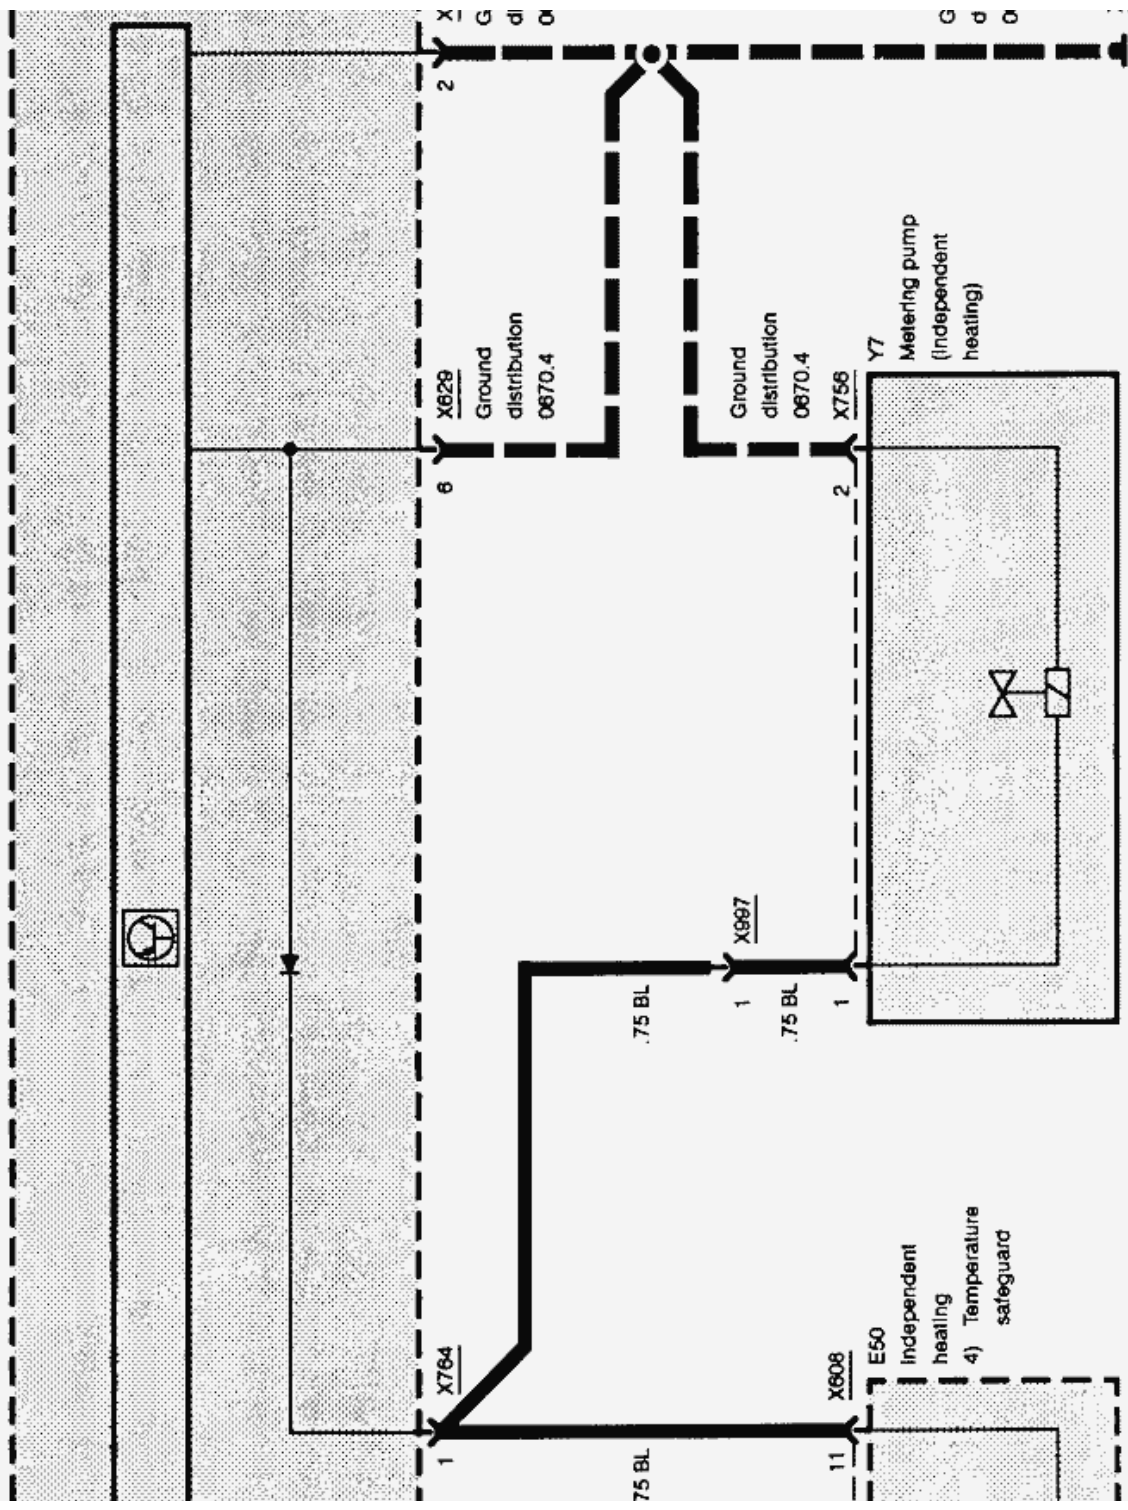

# Independent heating/ve

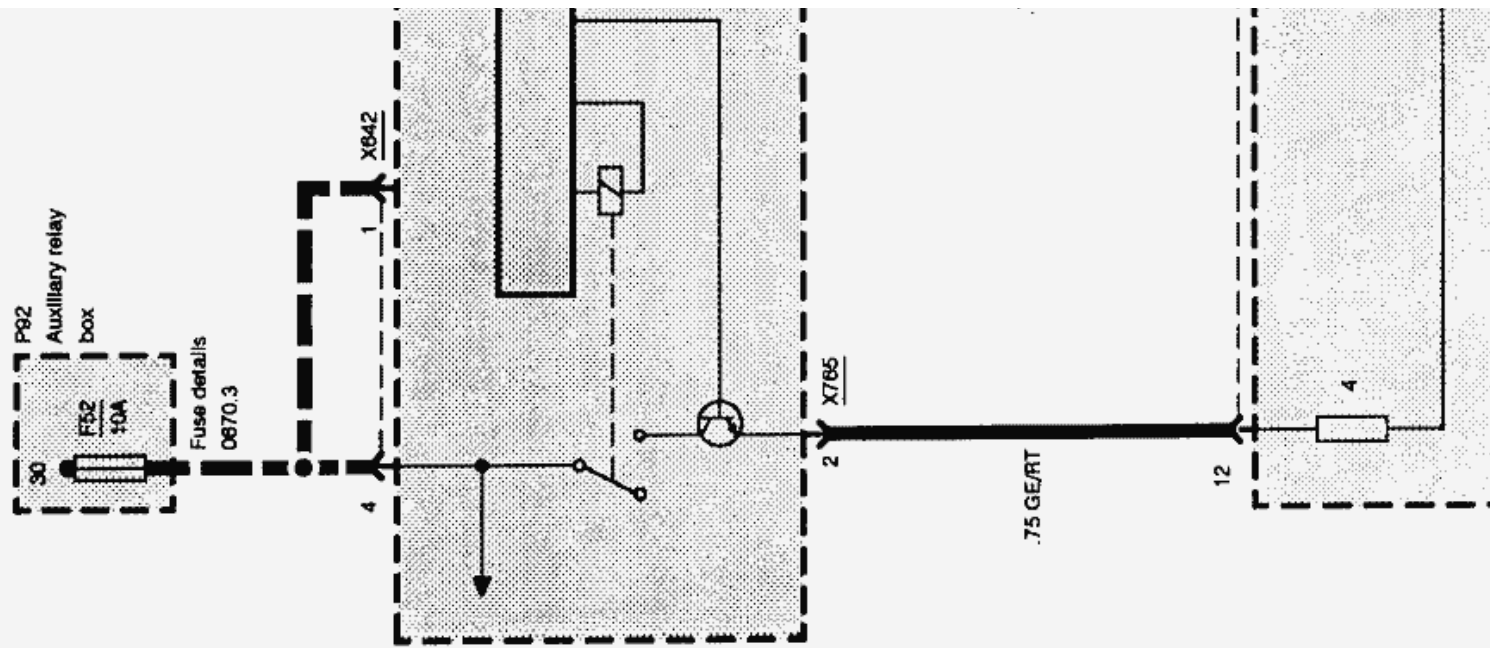


09/93

6412.18-06

1994


# lation with IHKR/F3

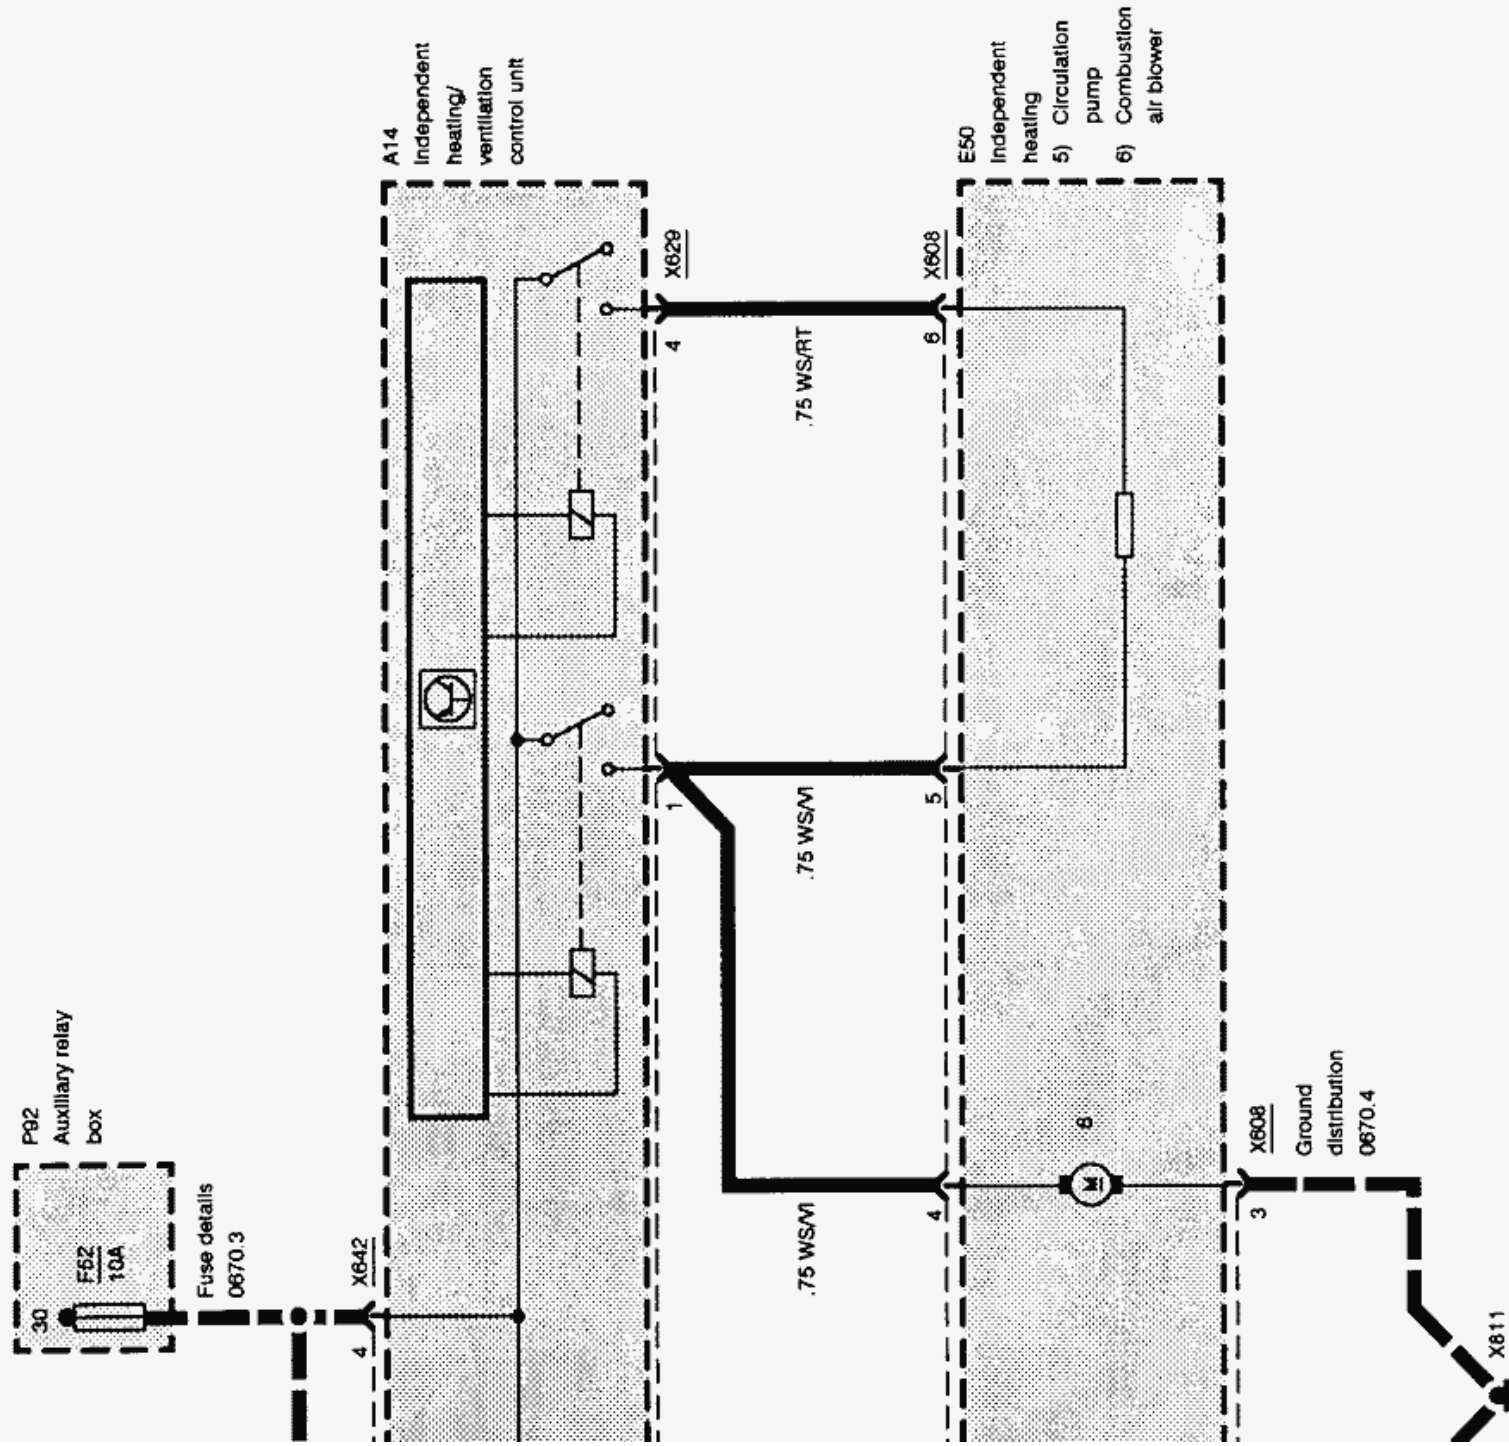





# Independent heating/venti

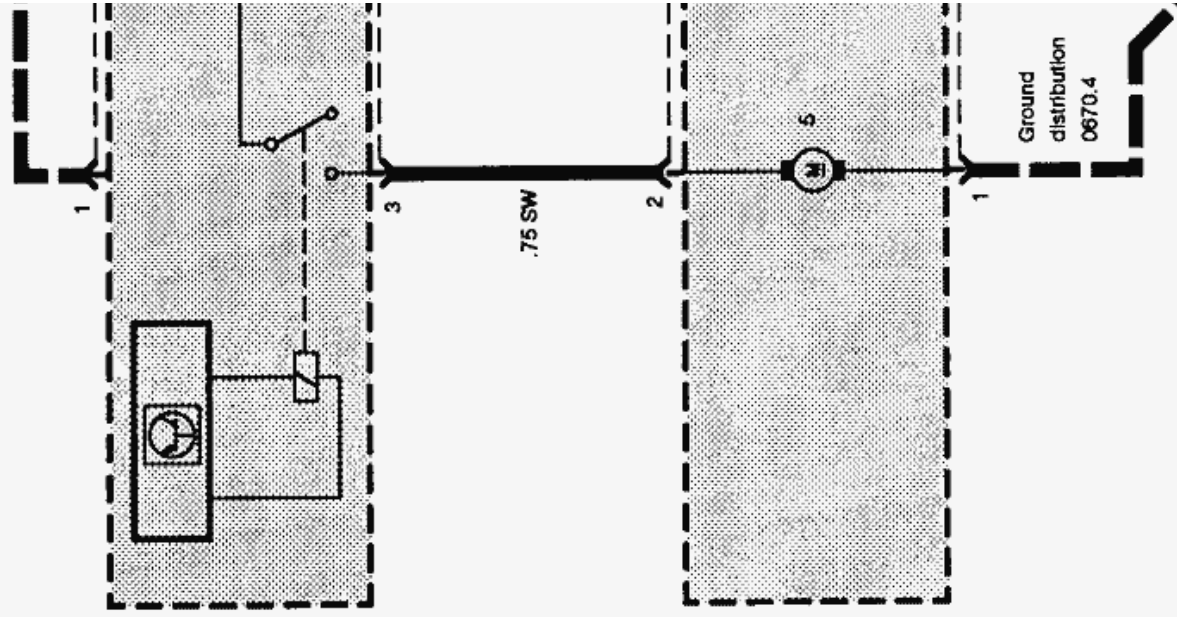


09/93

6412.18-07

1994


5  
re  
tive

# ation with IHKR/F3

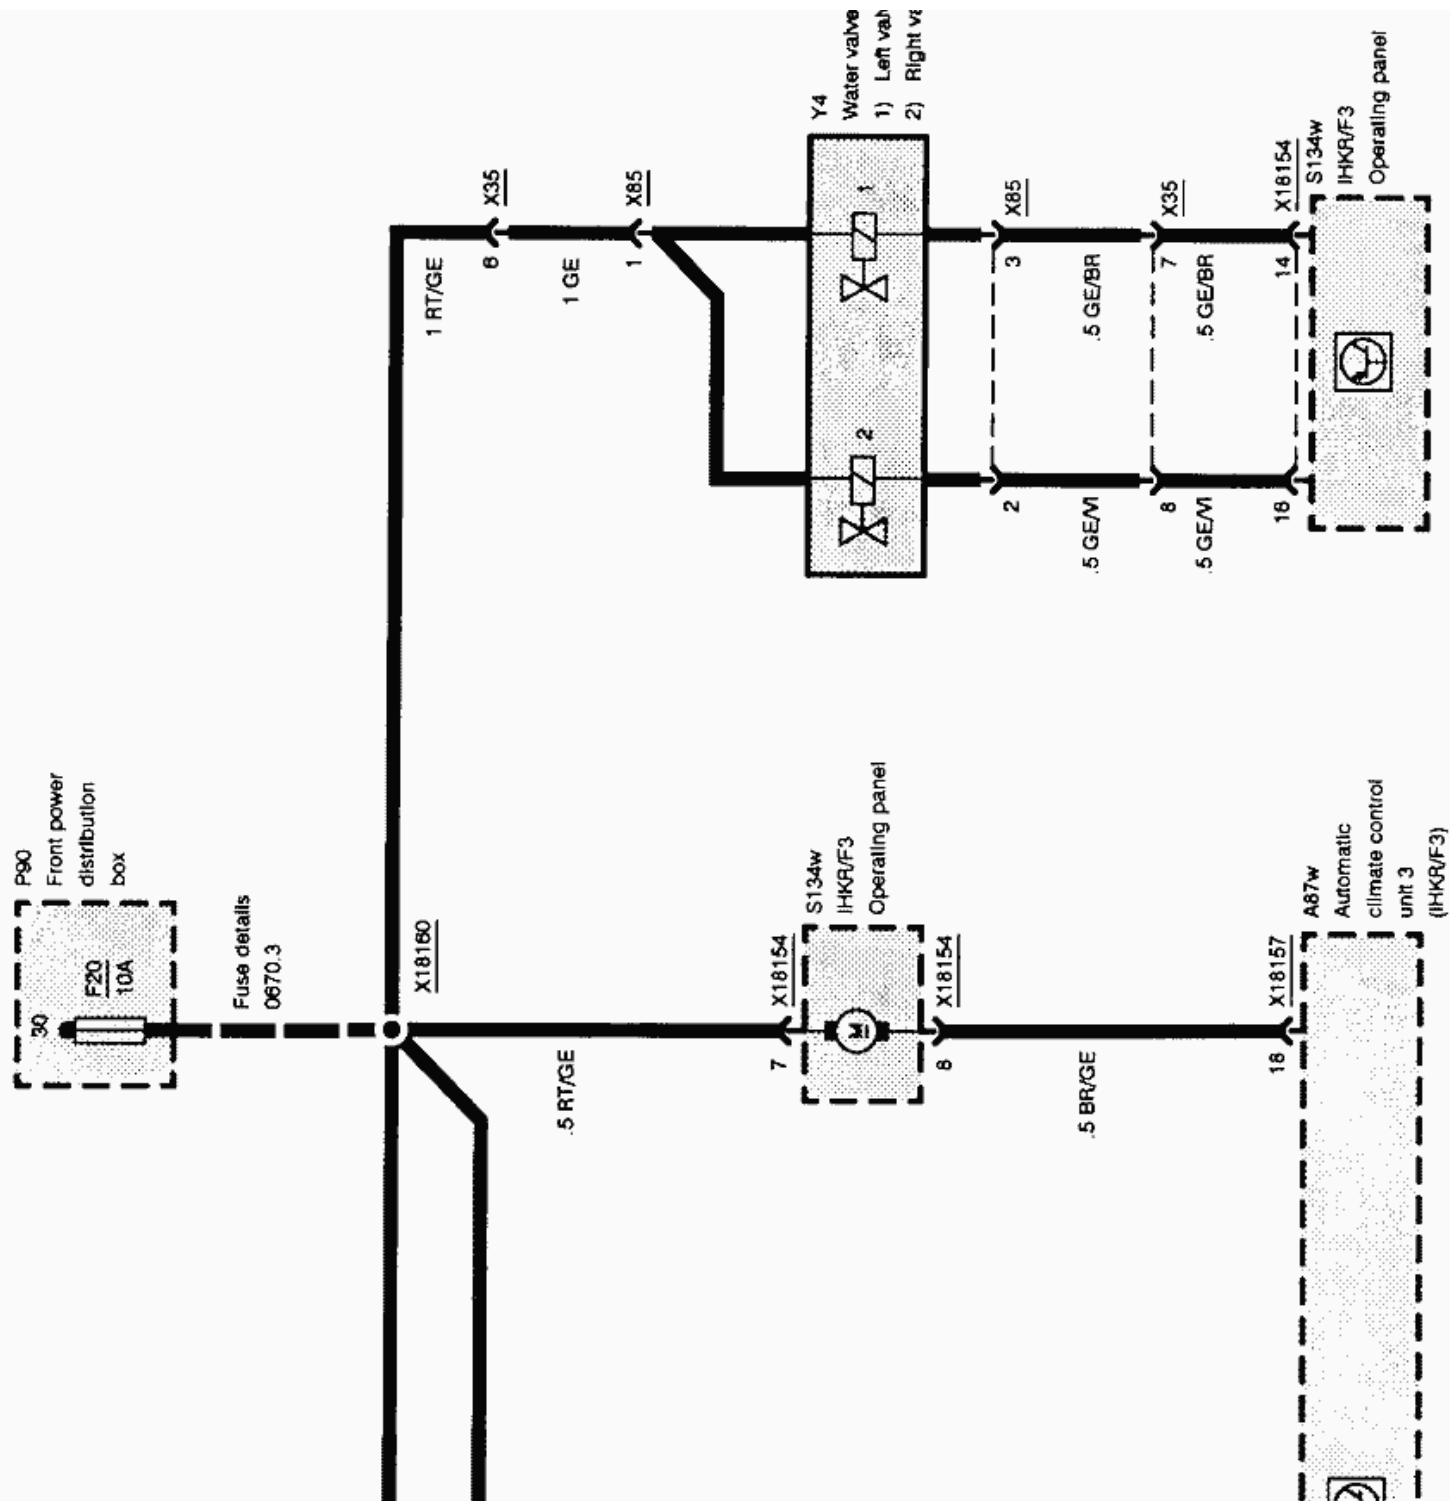



## Independent heating/ ventil

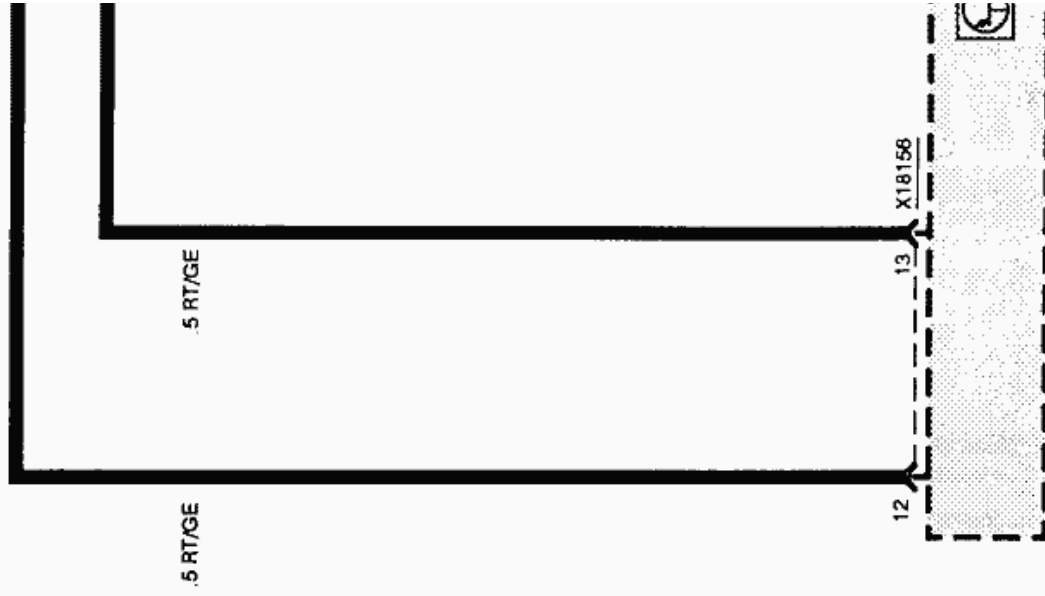

**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Independent heating/ventilation with IHRF3

Scheme 6412.14

**Pin Assignment X607**

Pin	Type	Description/Function	Connection
1	E	Terminal 30	Fuse
2	A	Signal, independent heating	Independent heating relay
3	E	Signal, independent heating	On-board computer
4	E	Signal, independent ventilation	On-board computer
5		not used	
6	A	Signal, ventilation flap	IHKA operating switch
7	E	Signal, independent ventilation, flap position	IHKA operating switch
8	E	Signal, independent heating, flap position	IHKA operating switch
9	E	Terminal 61	Unloader relay
10	M	Ground	Ground connection
11	E	Terminal R	Fuse F1
12	A	Activation, control unit/stop valve	Independent heating/ventilation control unit/ stop valve


**E = Input, A = Output, M = Ground**

09/93


**6412.14-00**

1994

power  
atlon

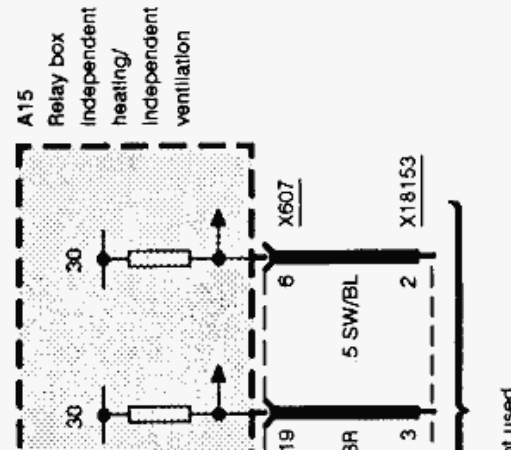

# ating/ ventilation with IHRF3

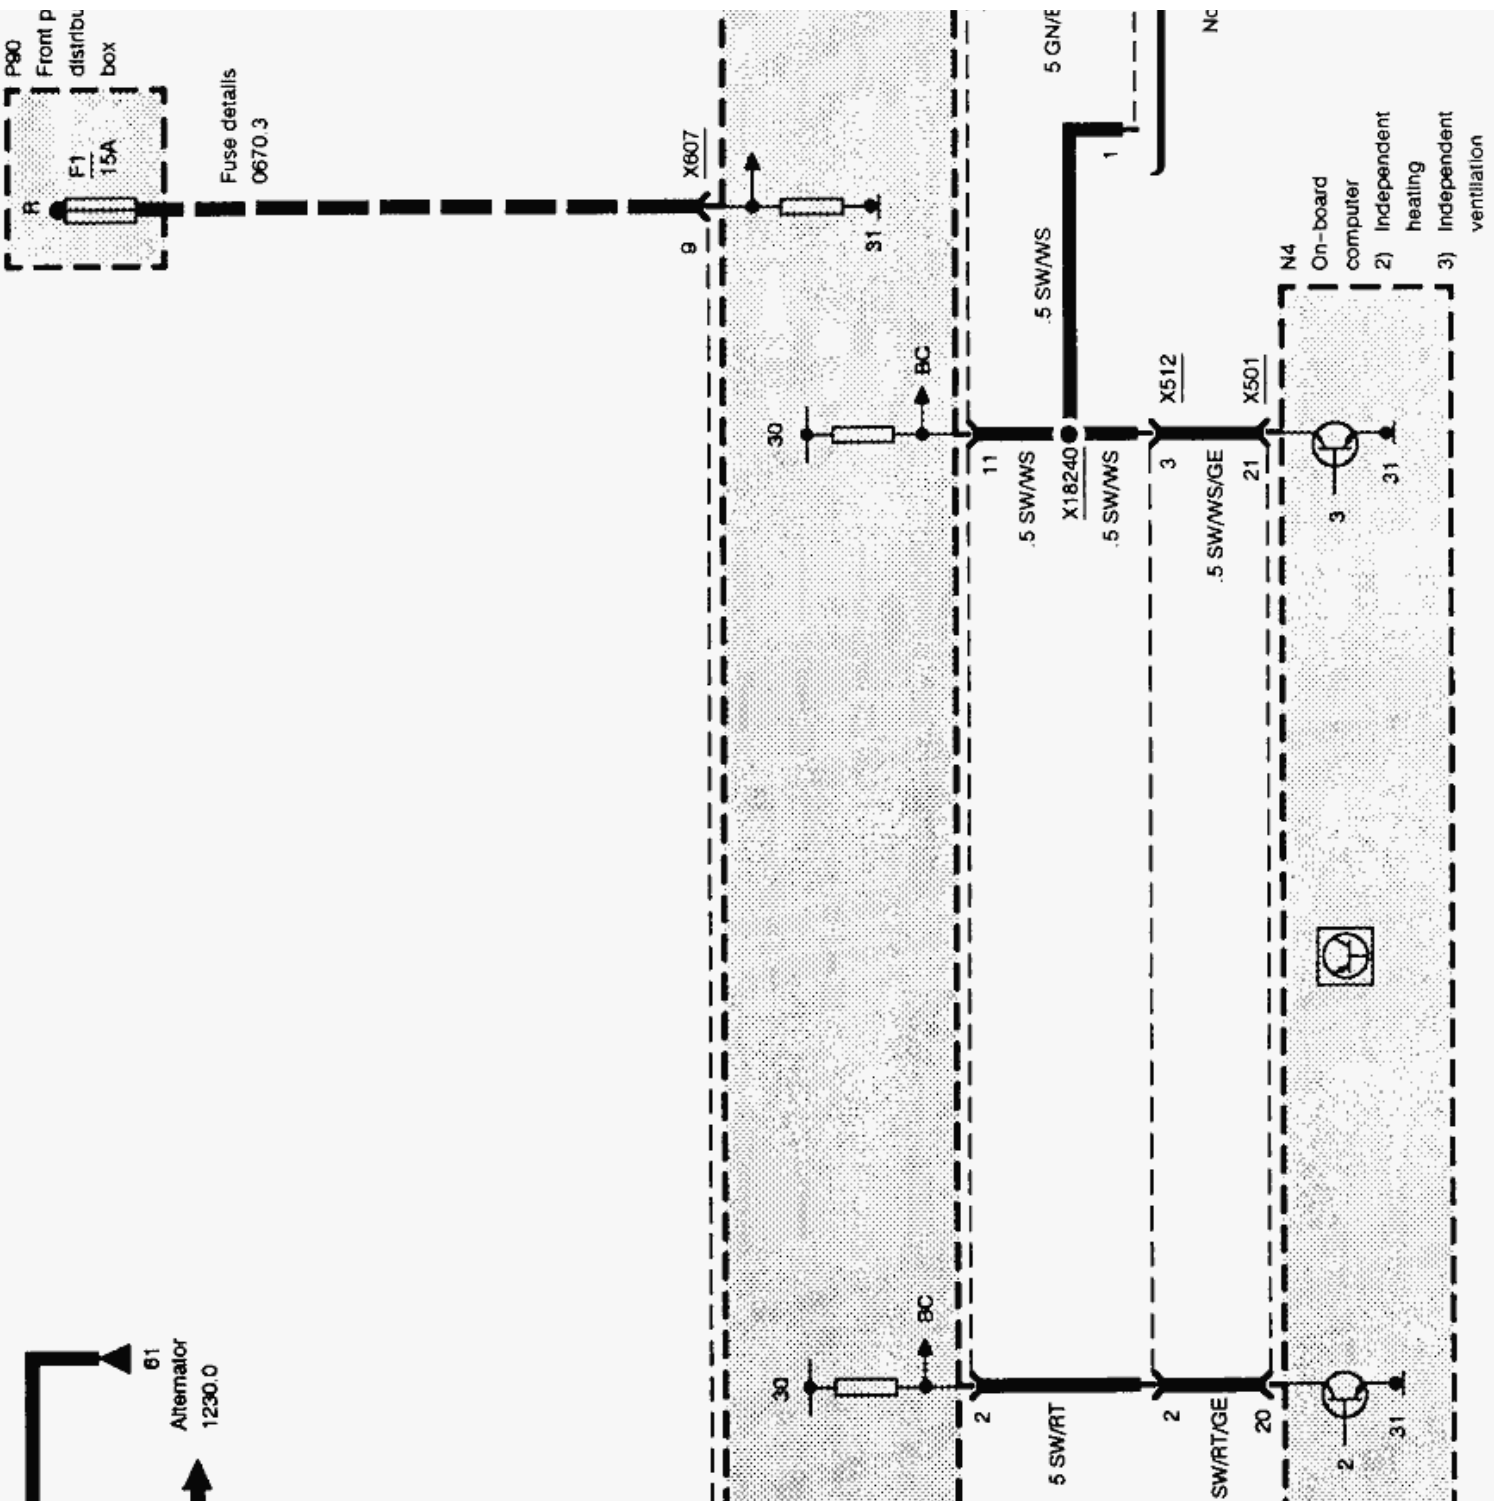





# Independent he

09/93


6412.14-01

1994

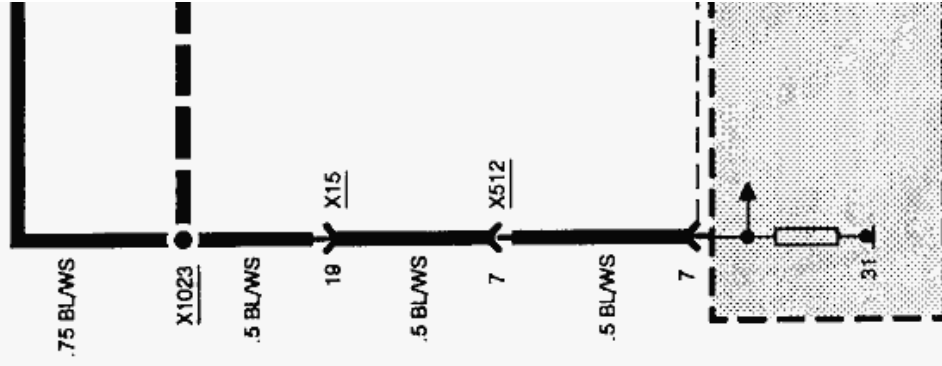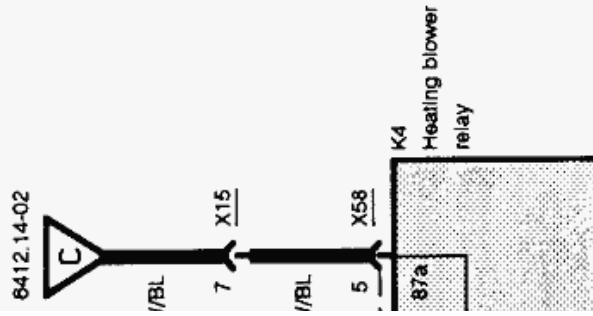


.5

# ignition/ ventilation with IHRF3

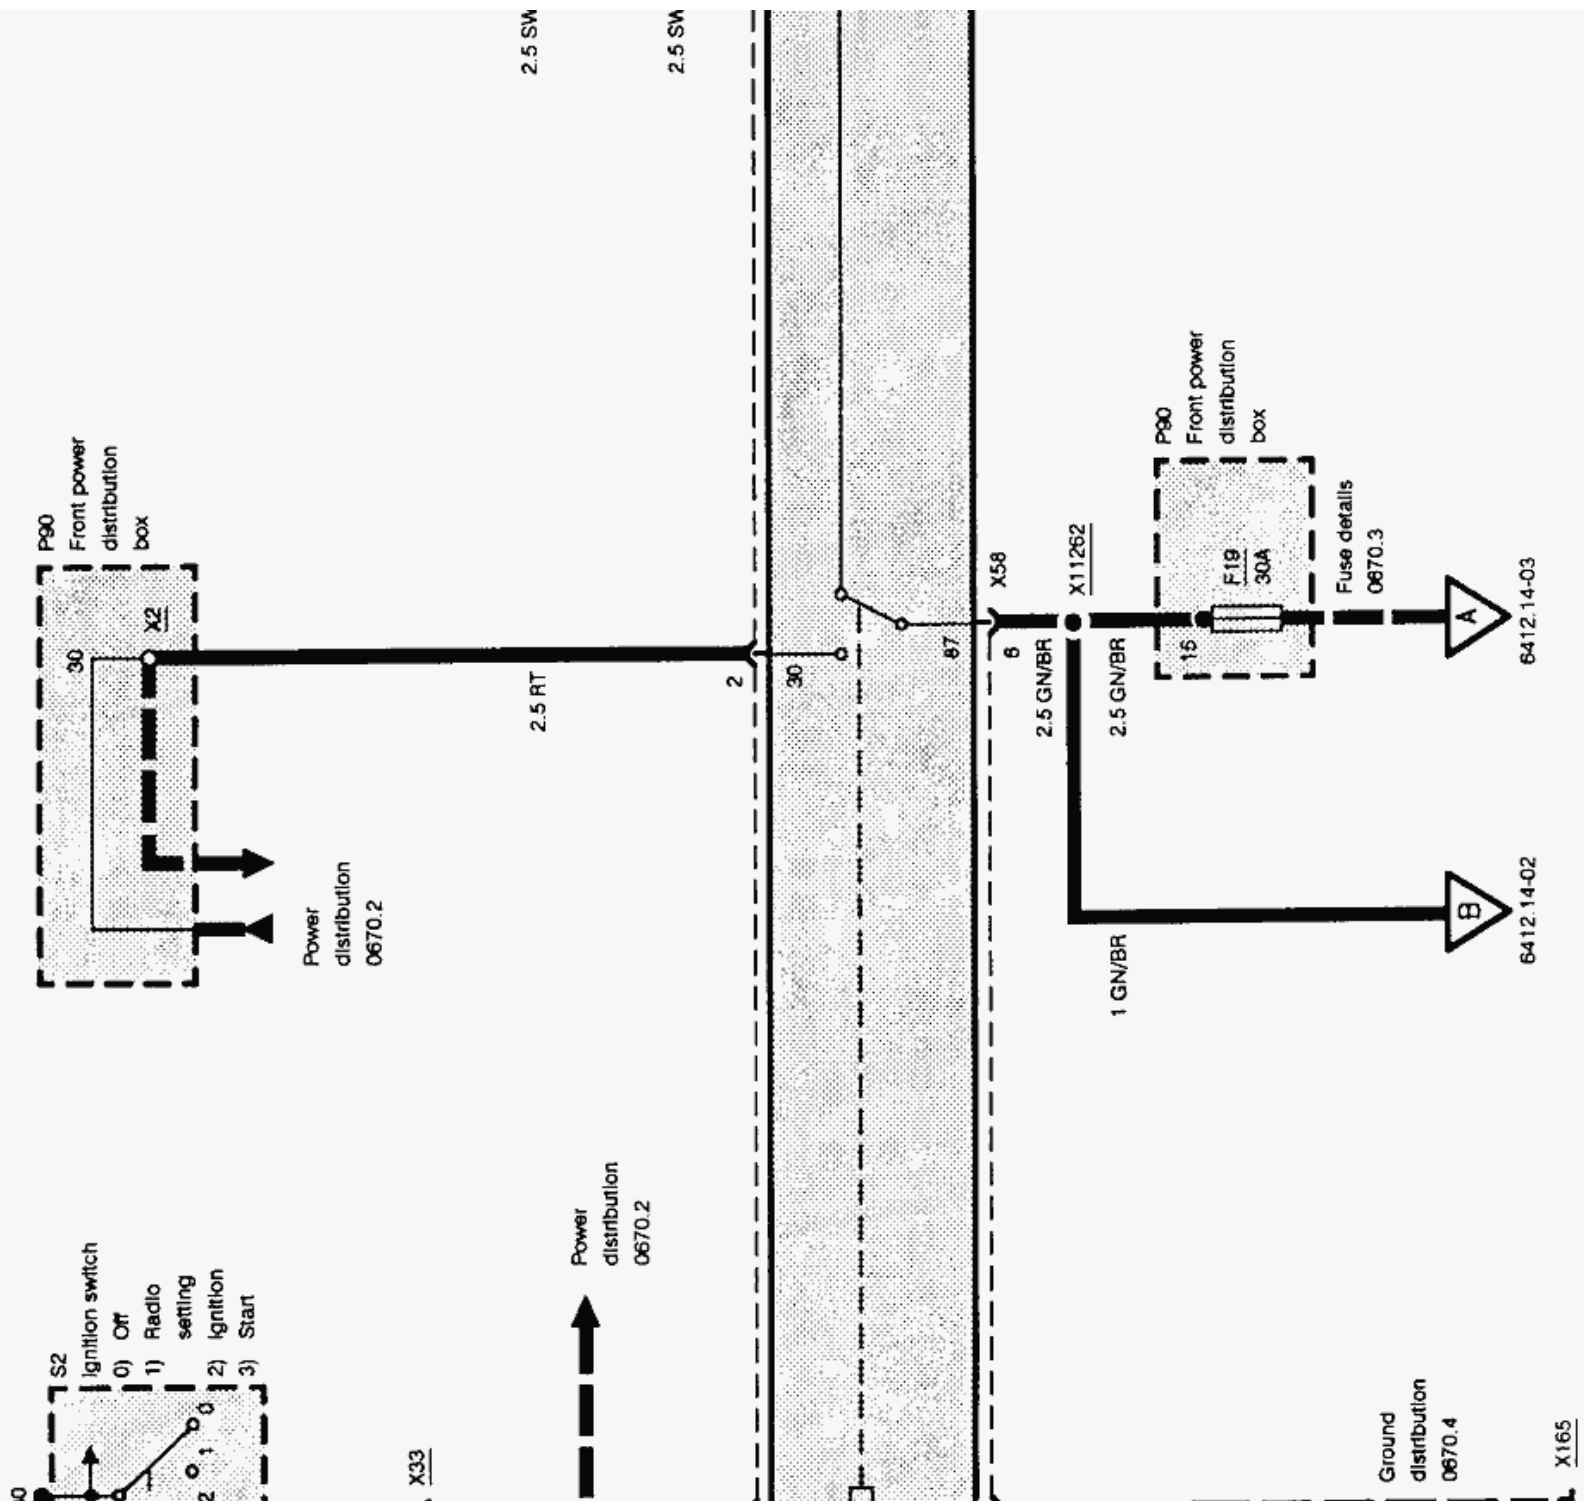




# Independent hea

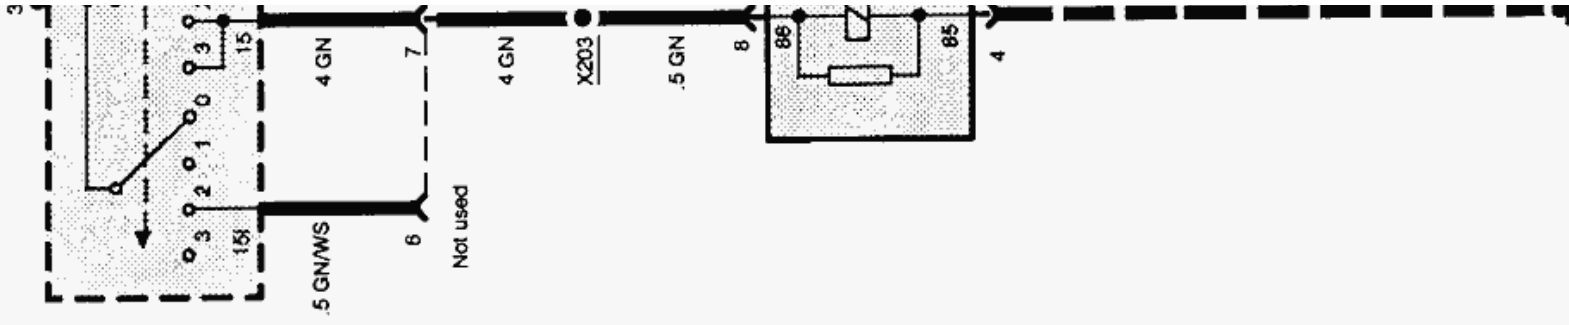

09/93


6412.14-02

1994

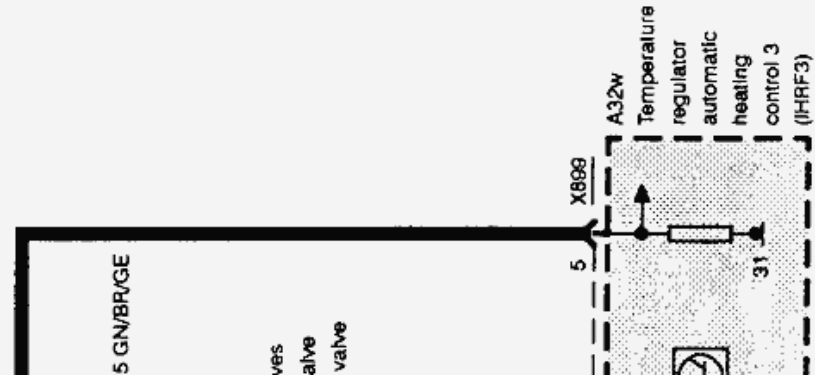



# ng/ ventilation with IHRF3

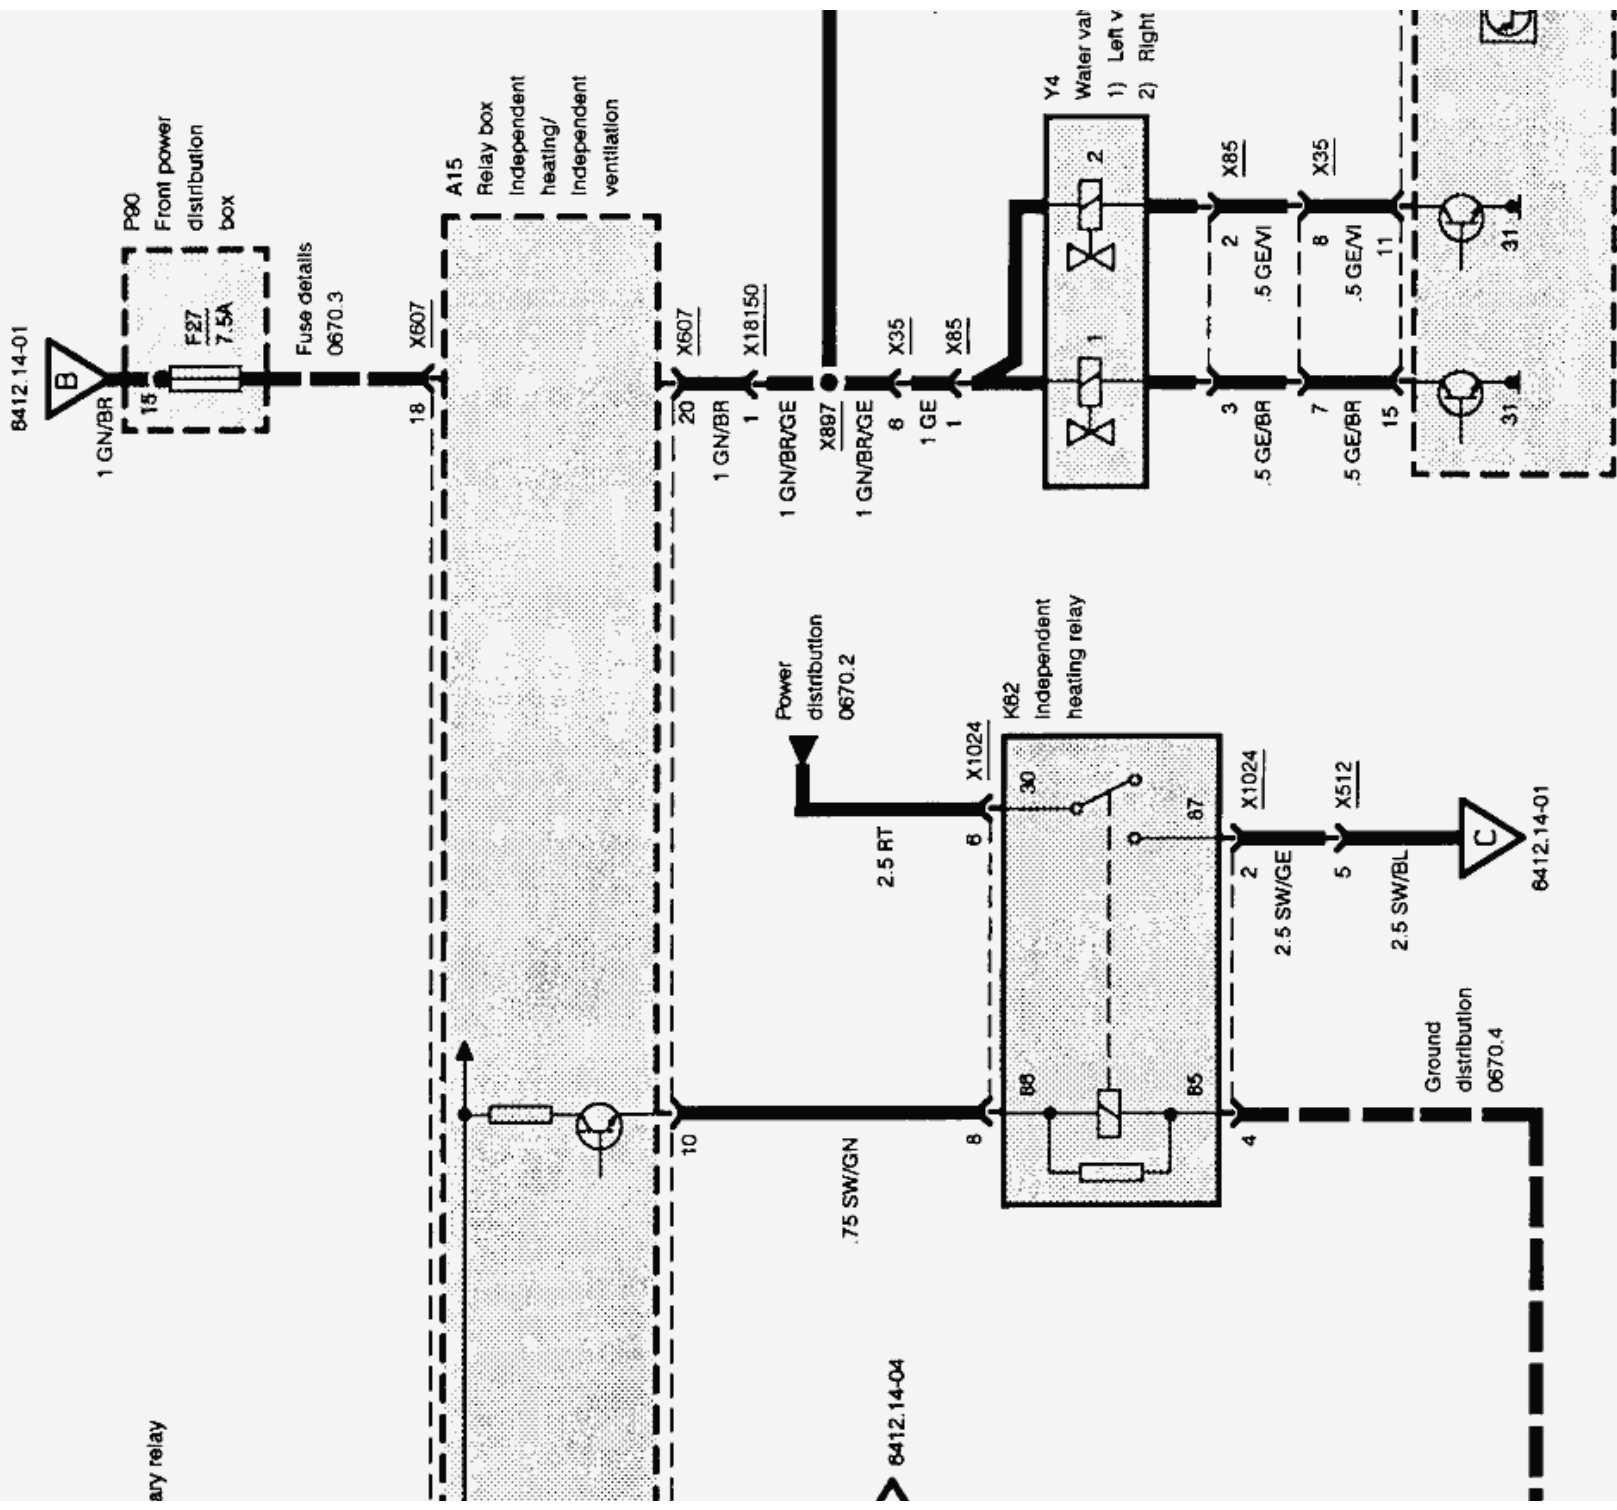






# Independent heati


09/93

6412.14-03

1994

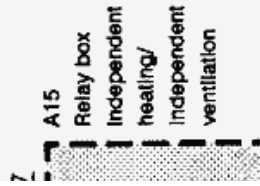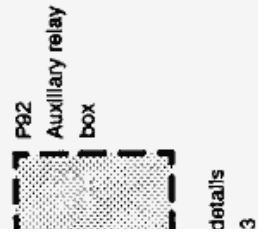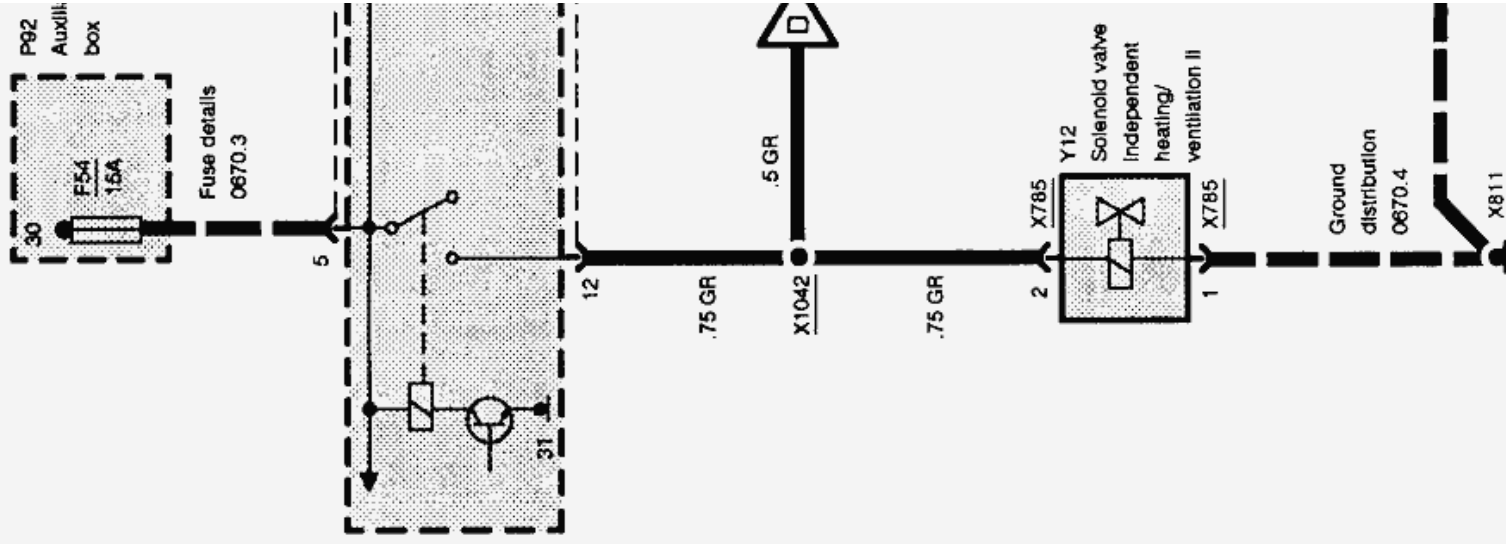

# 1/ ventilation with IHRF3

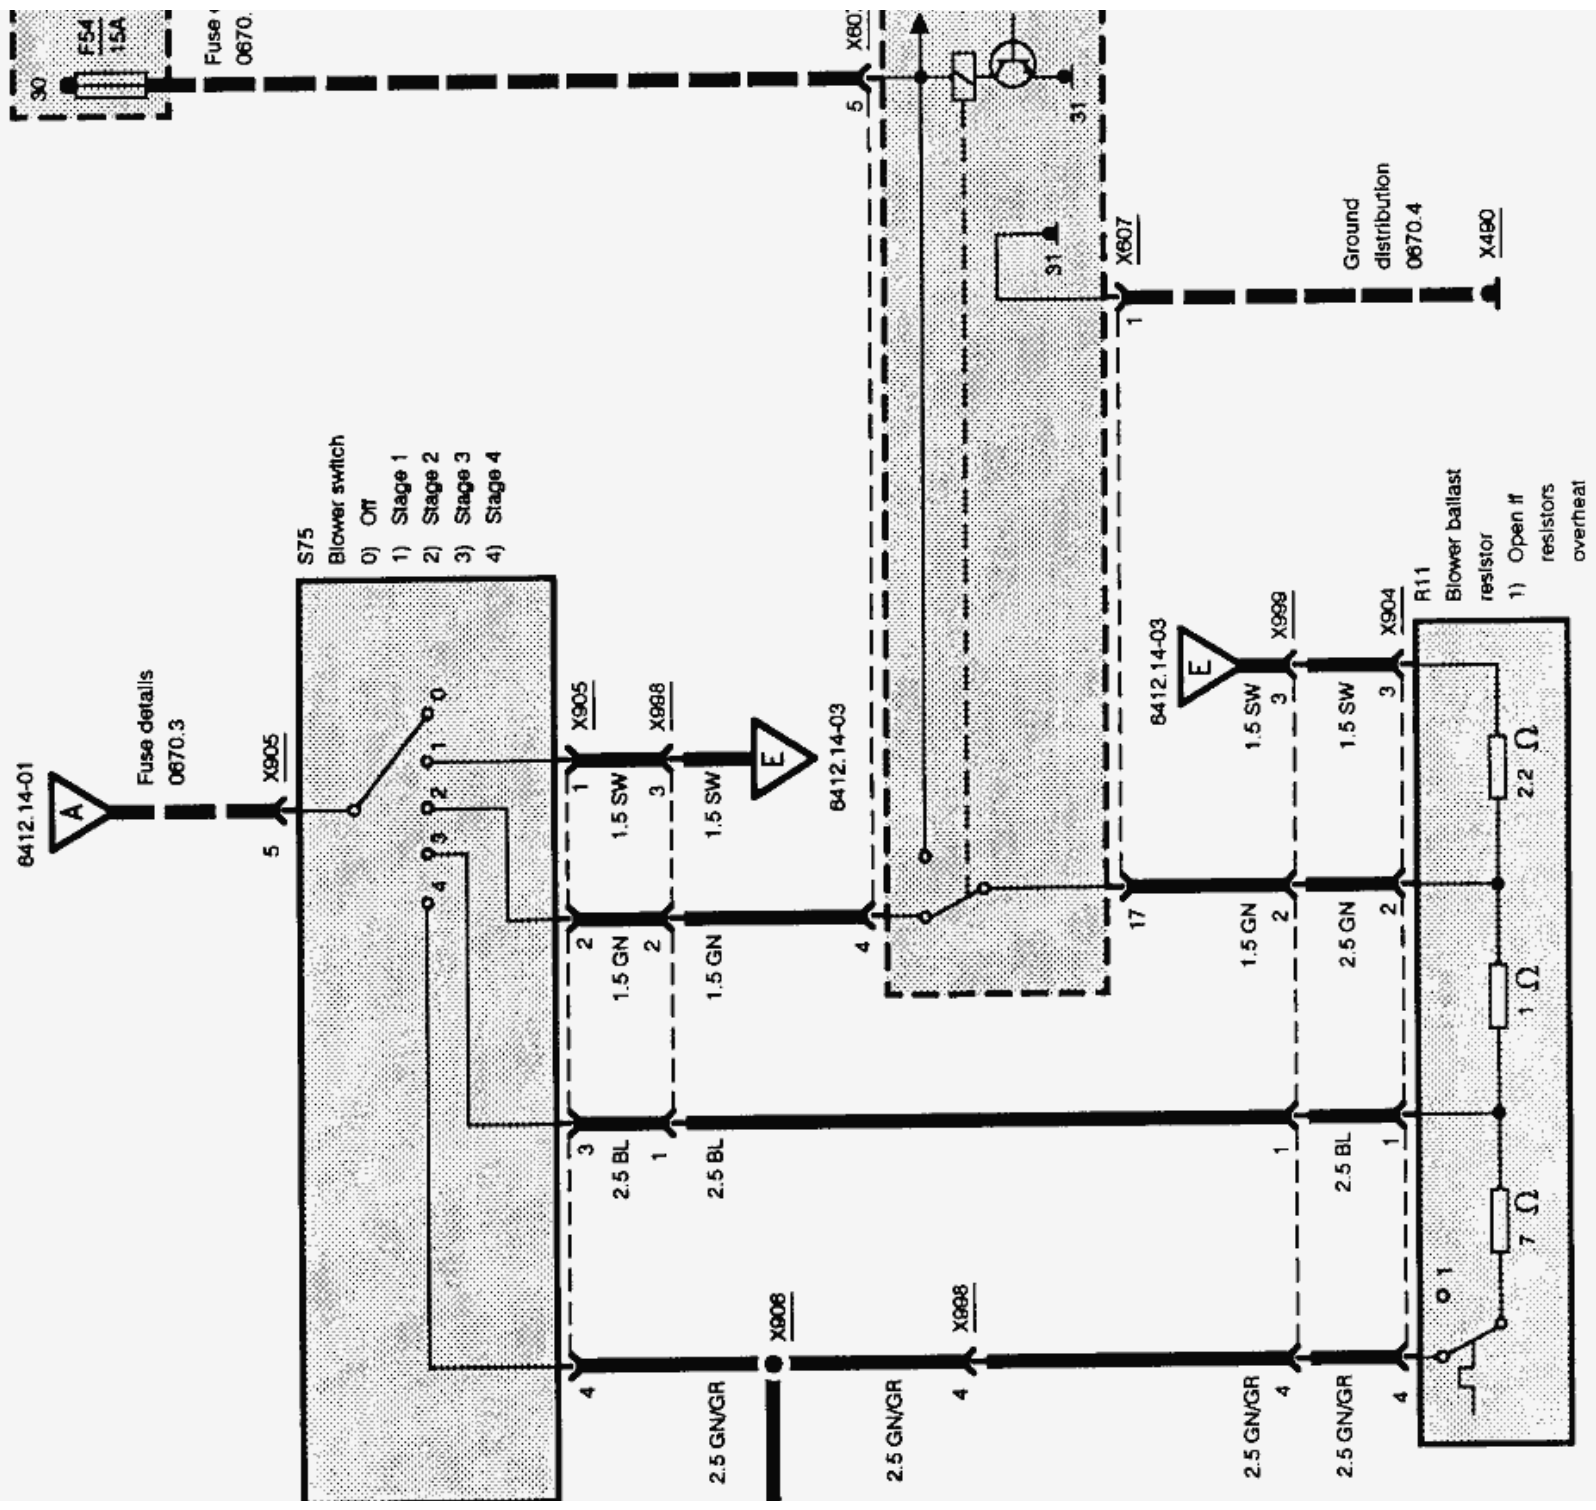


# Independent heating



09/93

6412.14-04


1994

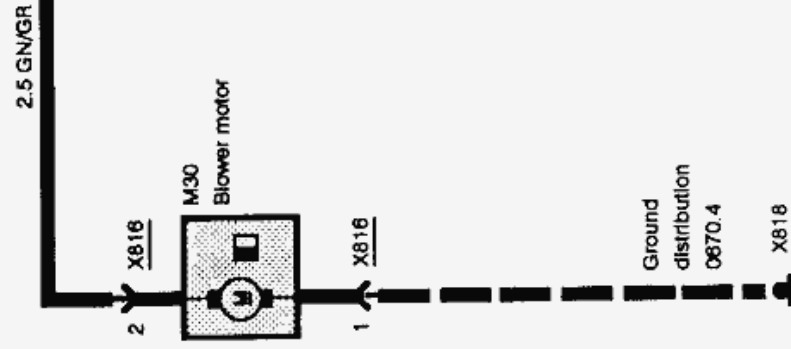

4  
 Independent  
 heating/  
 ventilation  
 control unit

10  
 Independent  
 heating  
 Heater plug  
 Temperature  
 sensor  
 Flame  
 detector

# ventilation with IHRF3

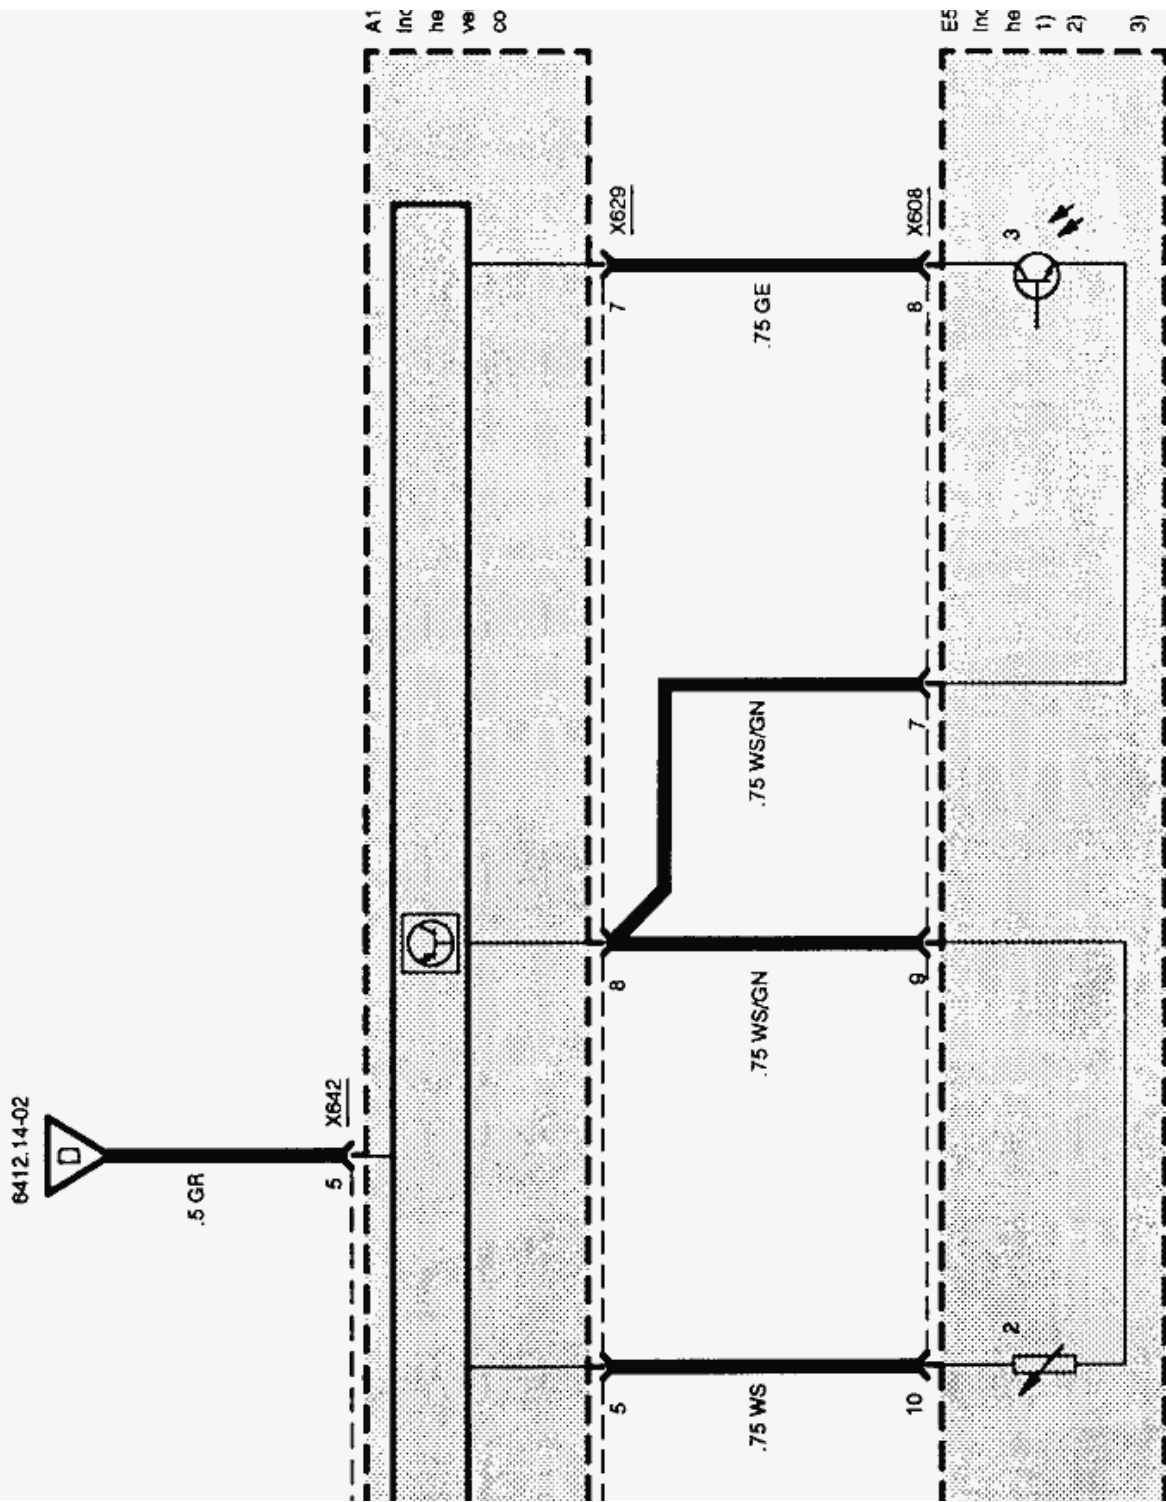




# Independent heating/

09/93

6412.14-05

1994

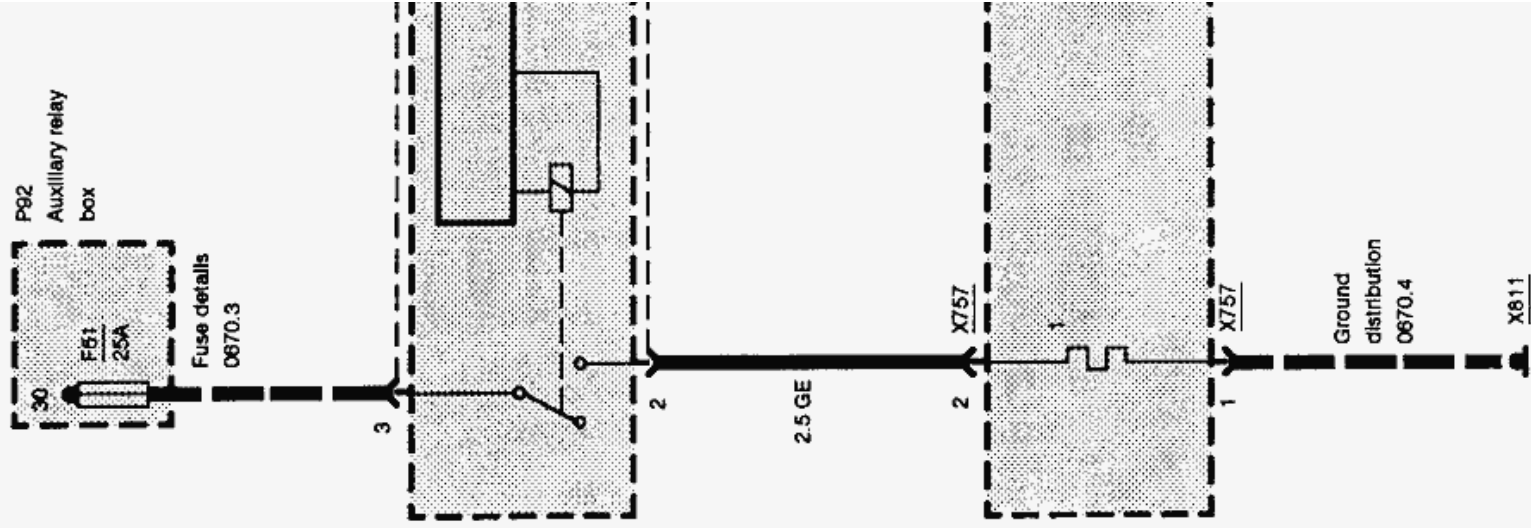

A14  
Independent  
heating/  
ventilation  
control unit




X764

Ground  
distribution  
0670.4

Ground  
distribution  
0670.4


X811

# entilation with IHRF3

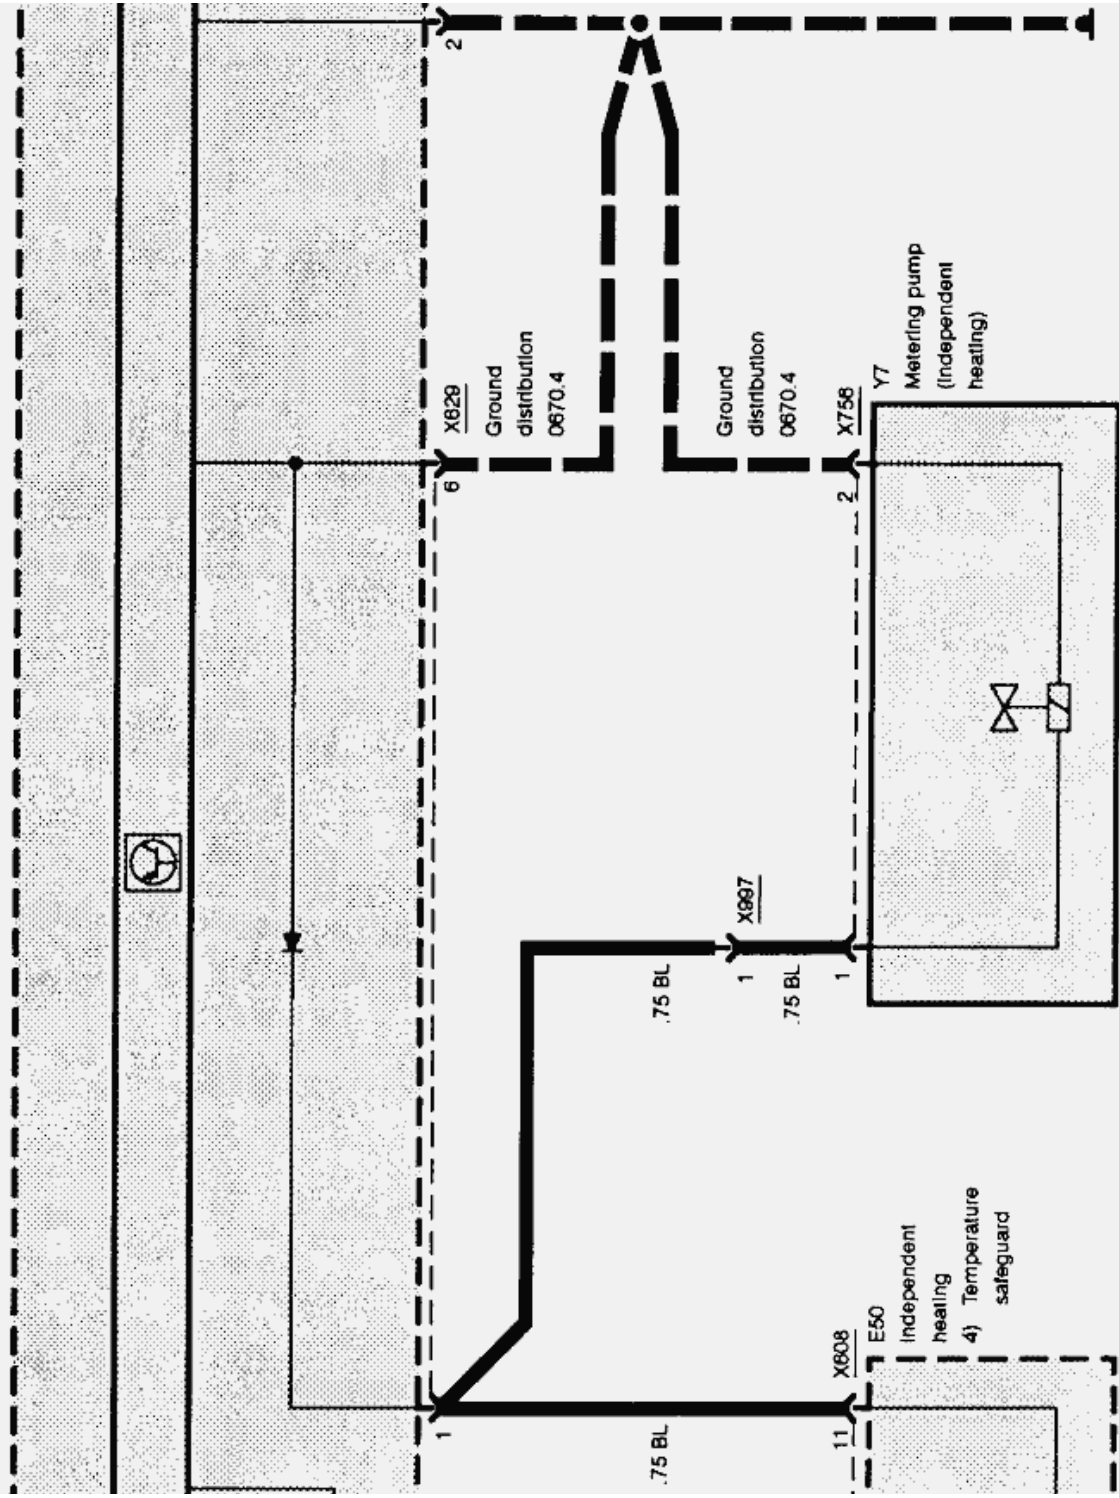



# Independent heating/ v

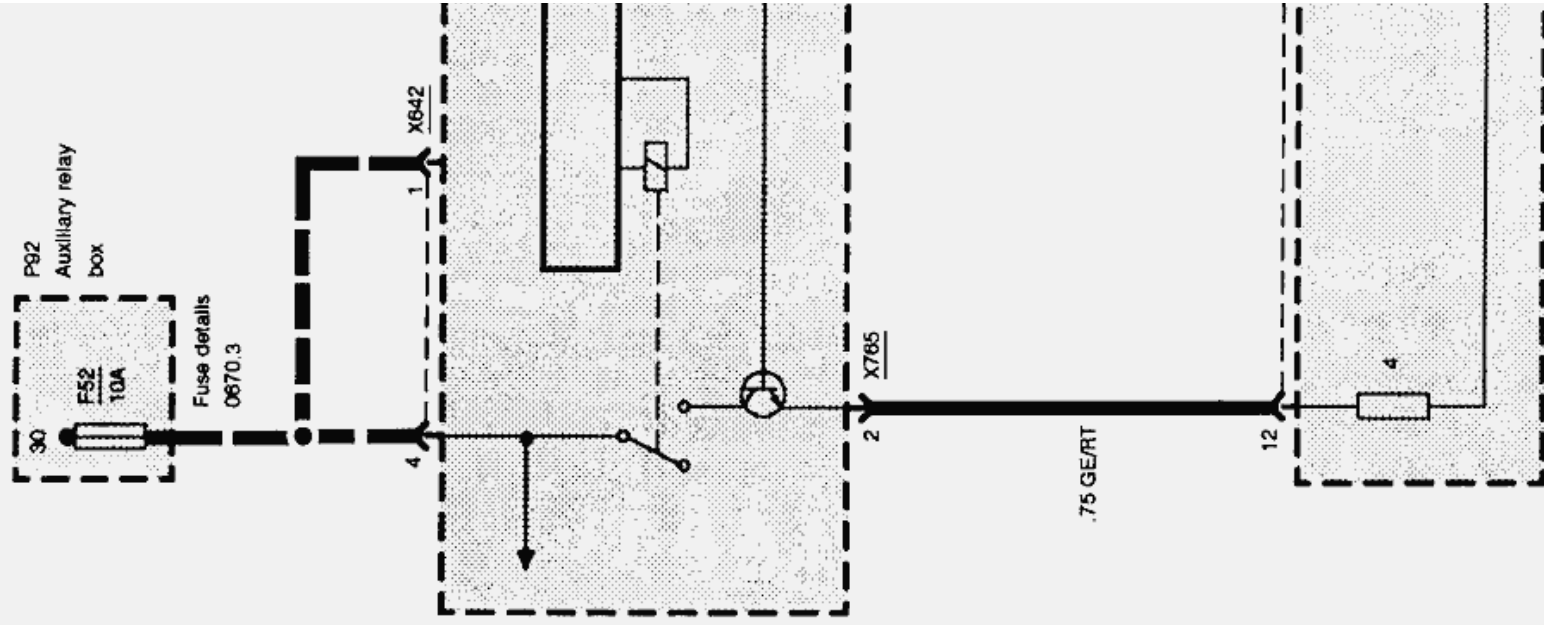


09/93

6412.14-06

1994




# tilation with IHRF3

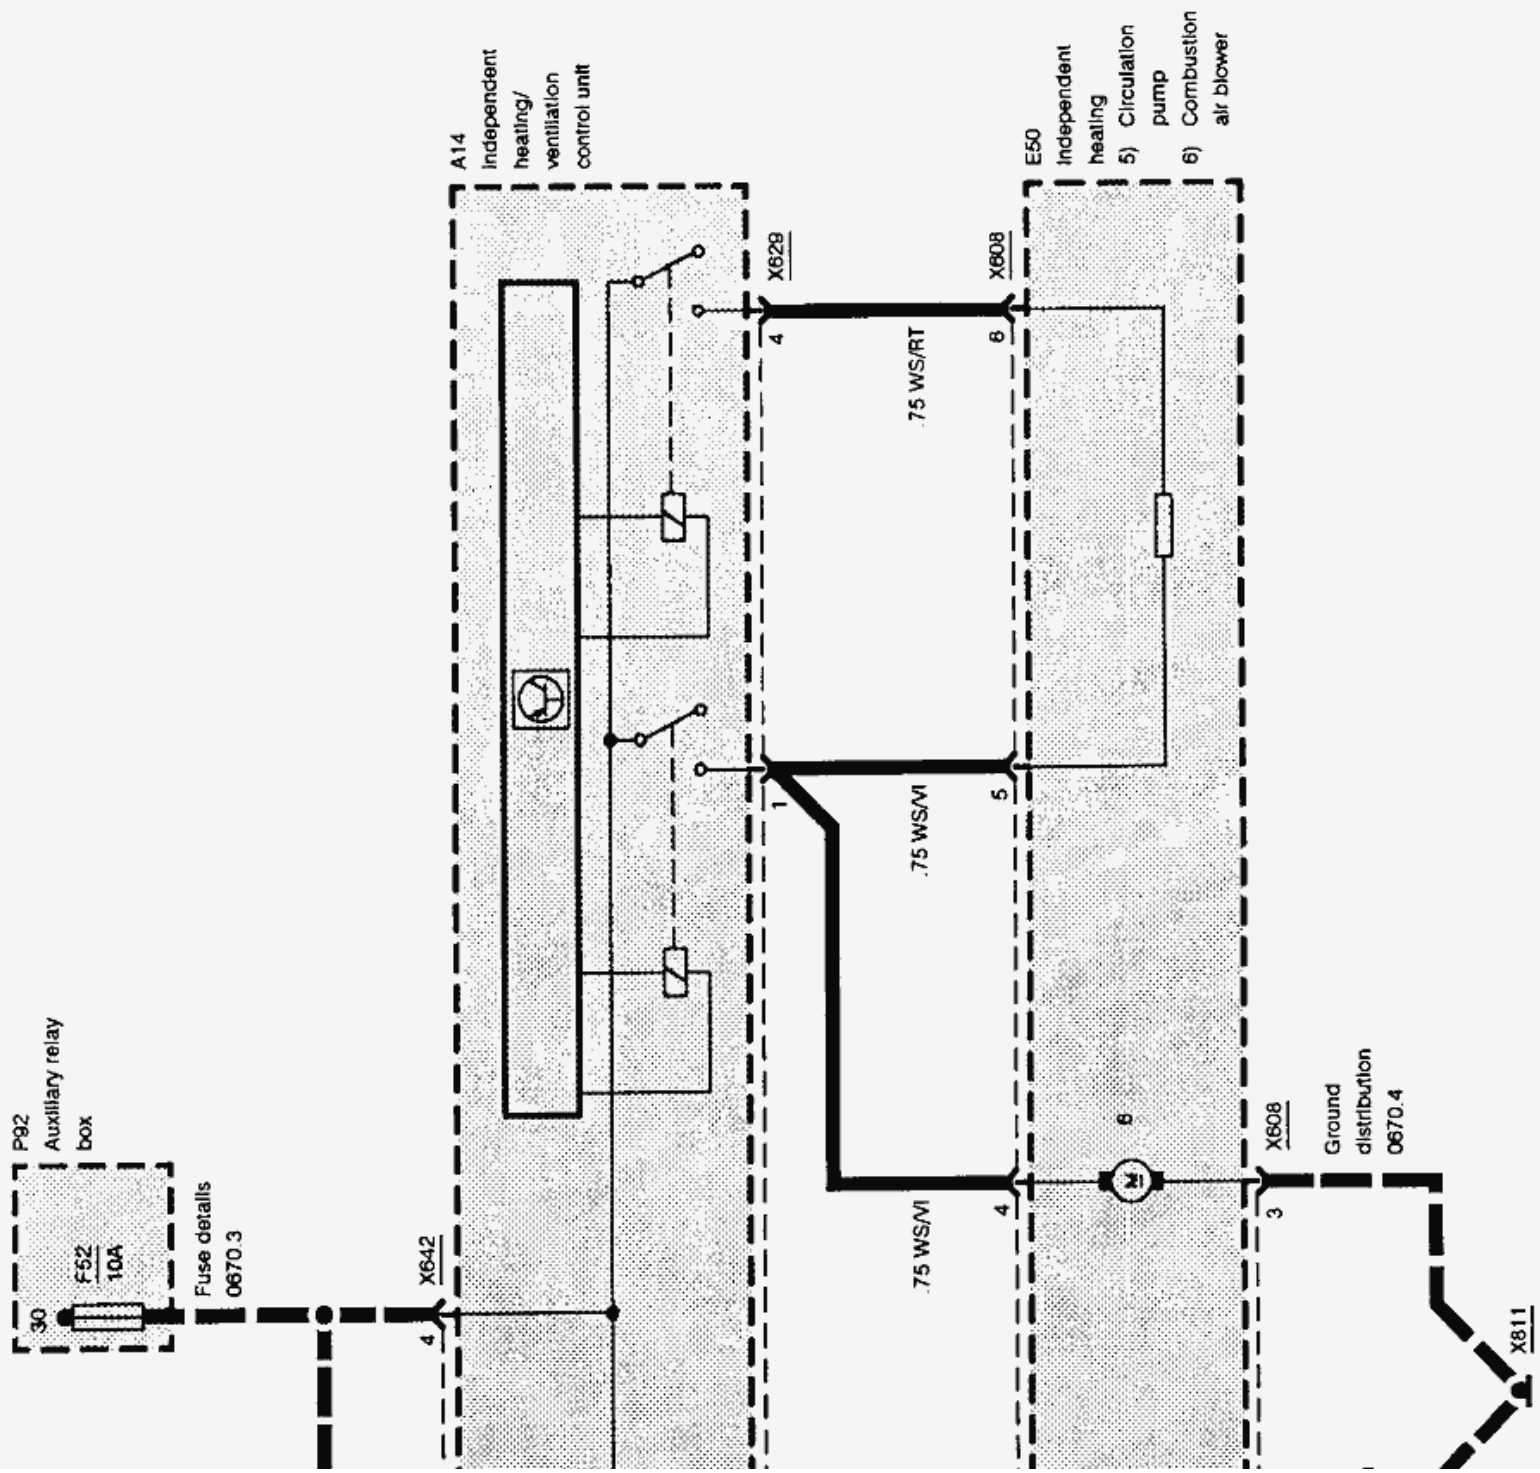




# Independent heating/ ven

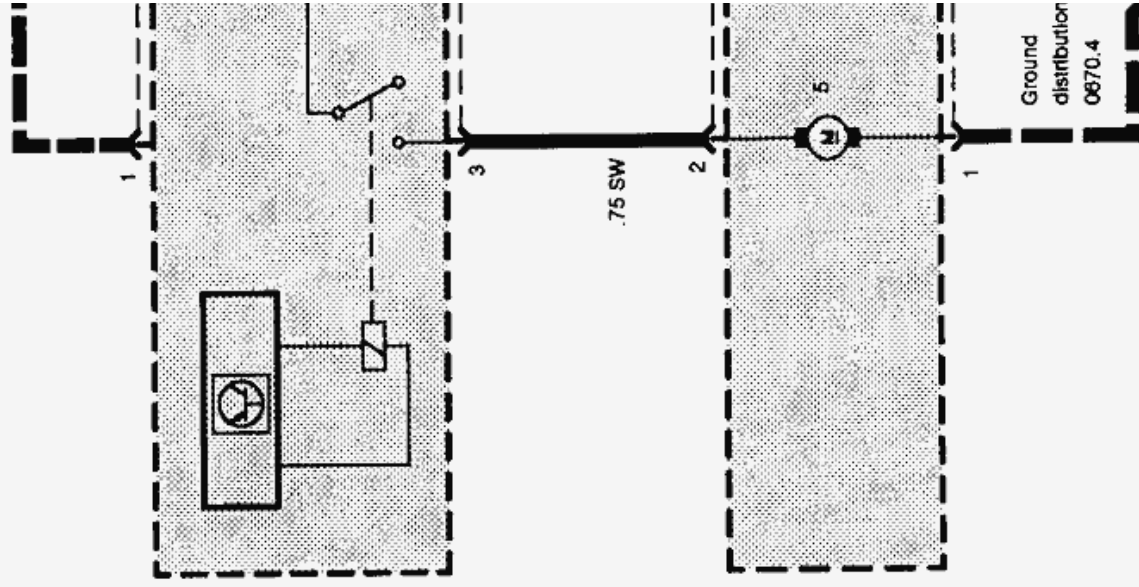





## Independent ventilation with HR34

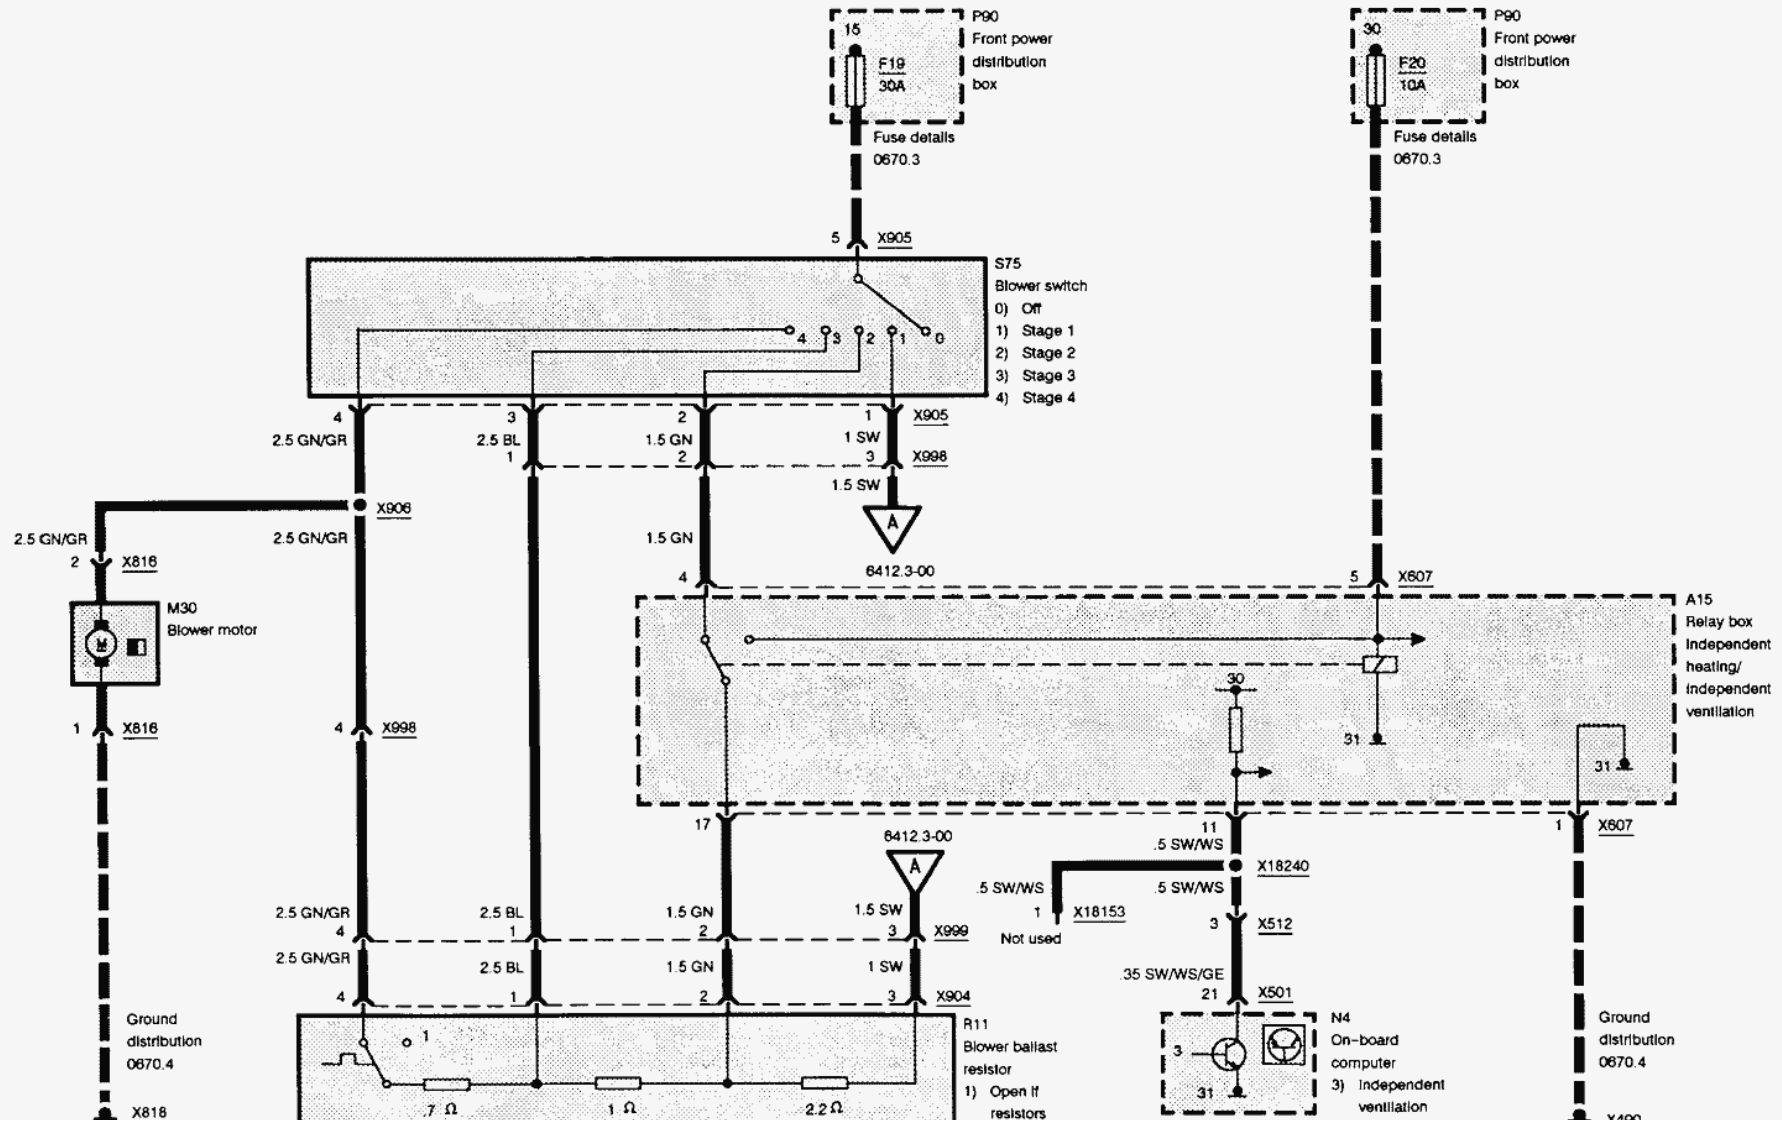




### Independent ventilation with HR34

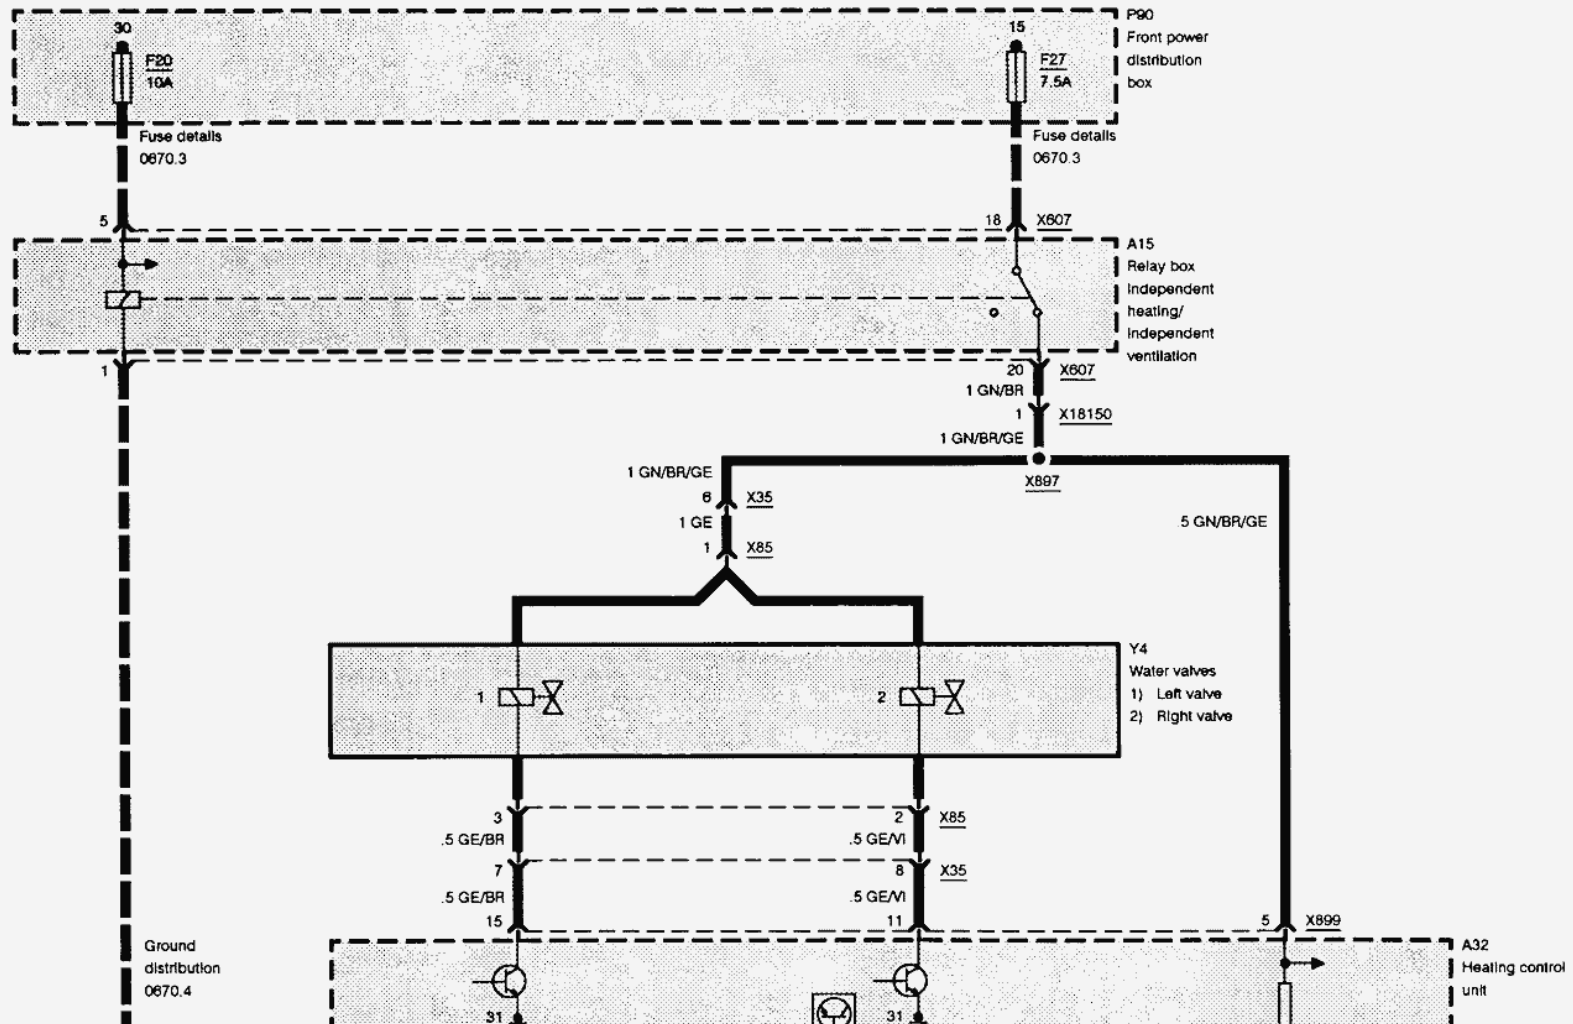


 





# Independent ventilation with IHKA

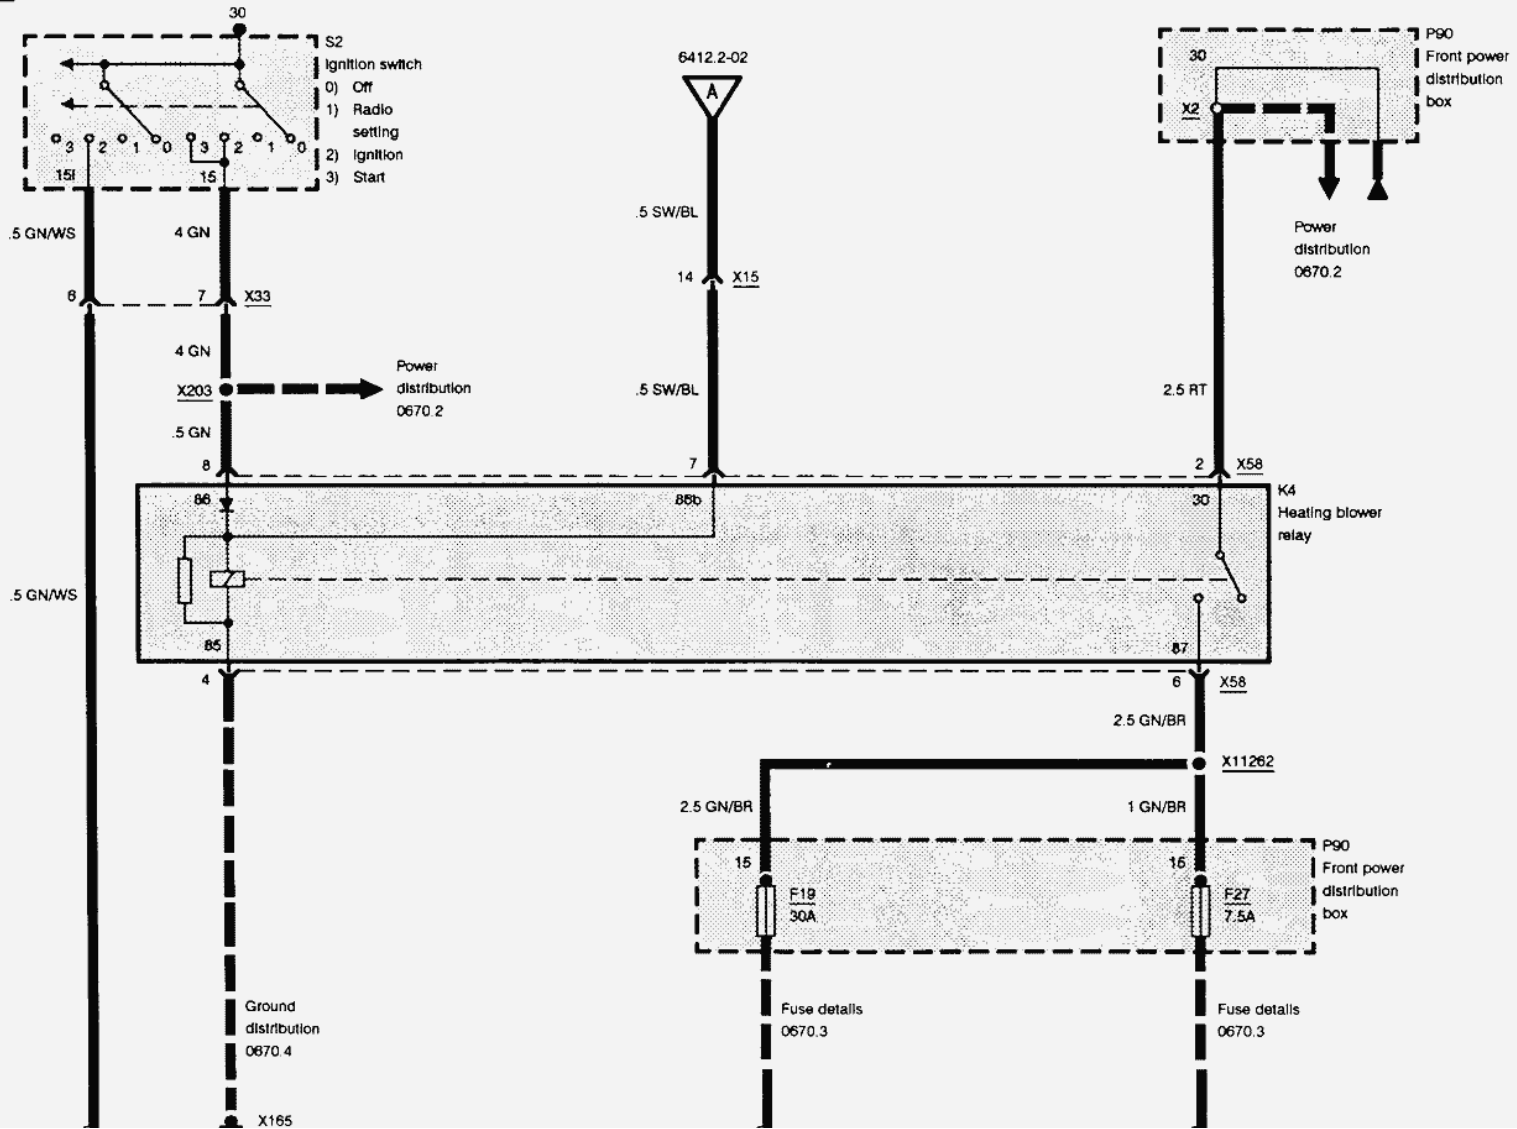

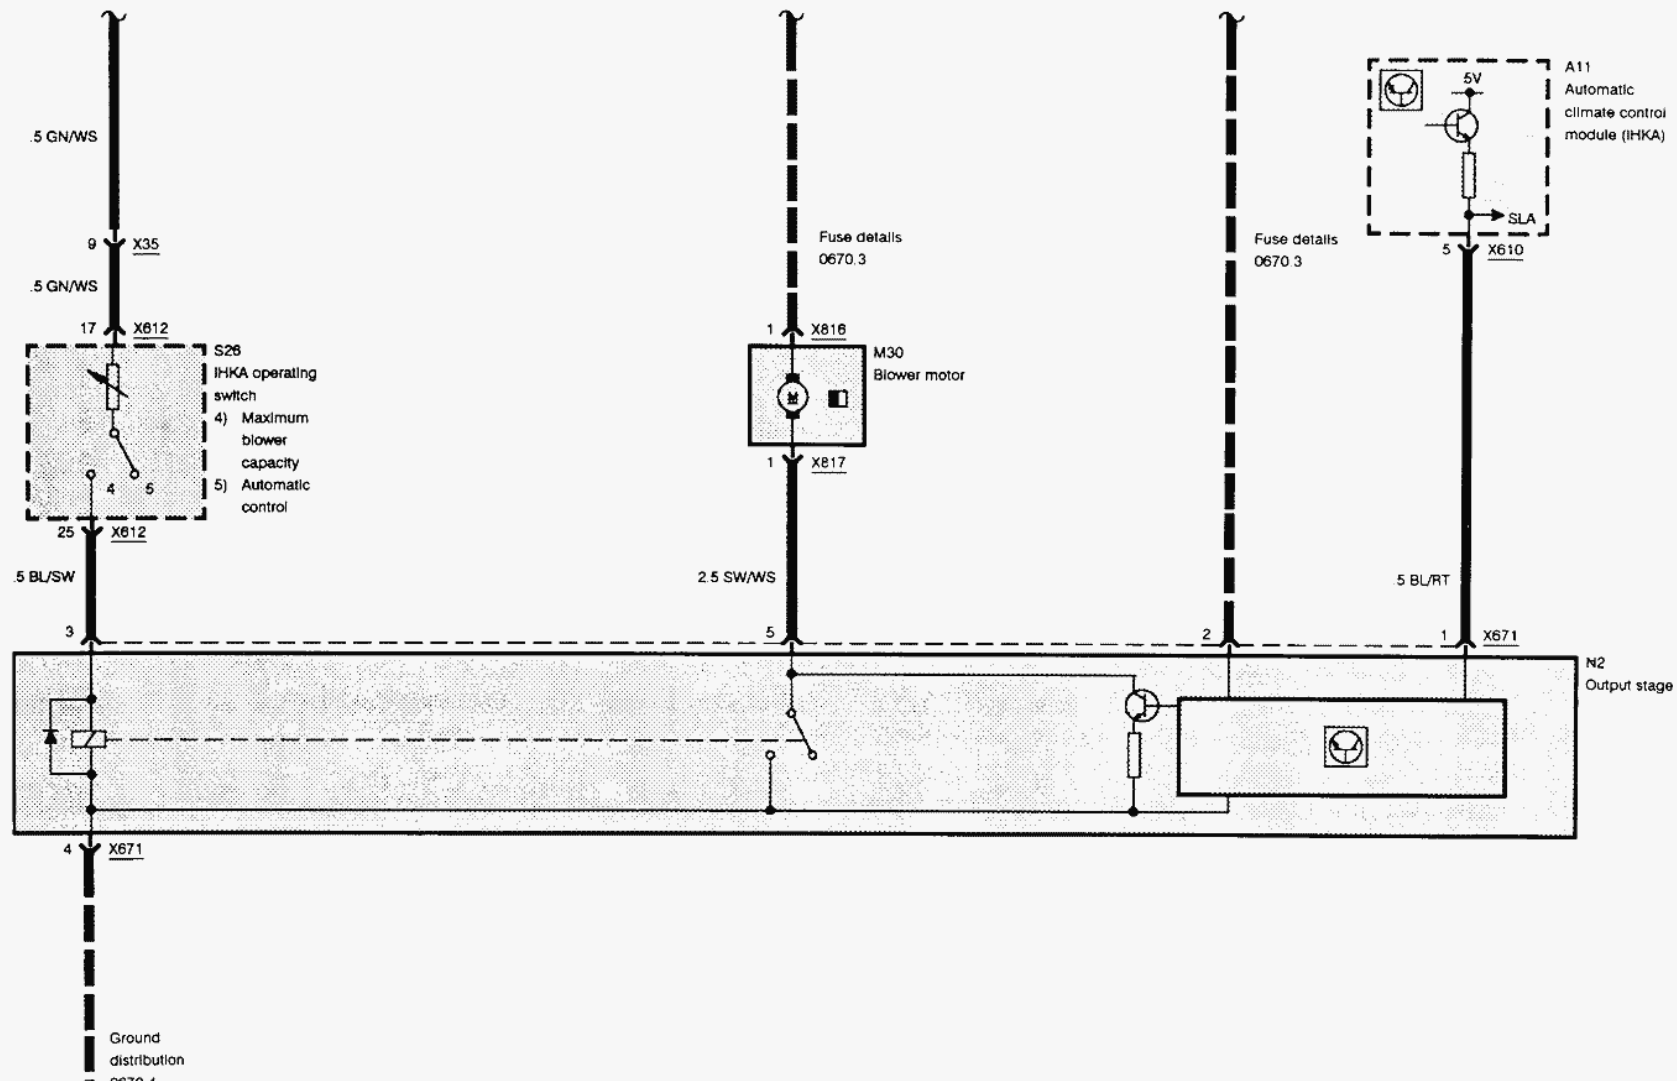

 

# BMW 5 Independent ventilation with IHKA

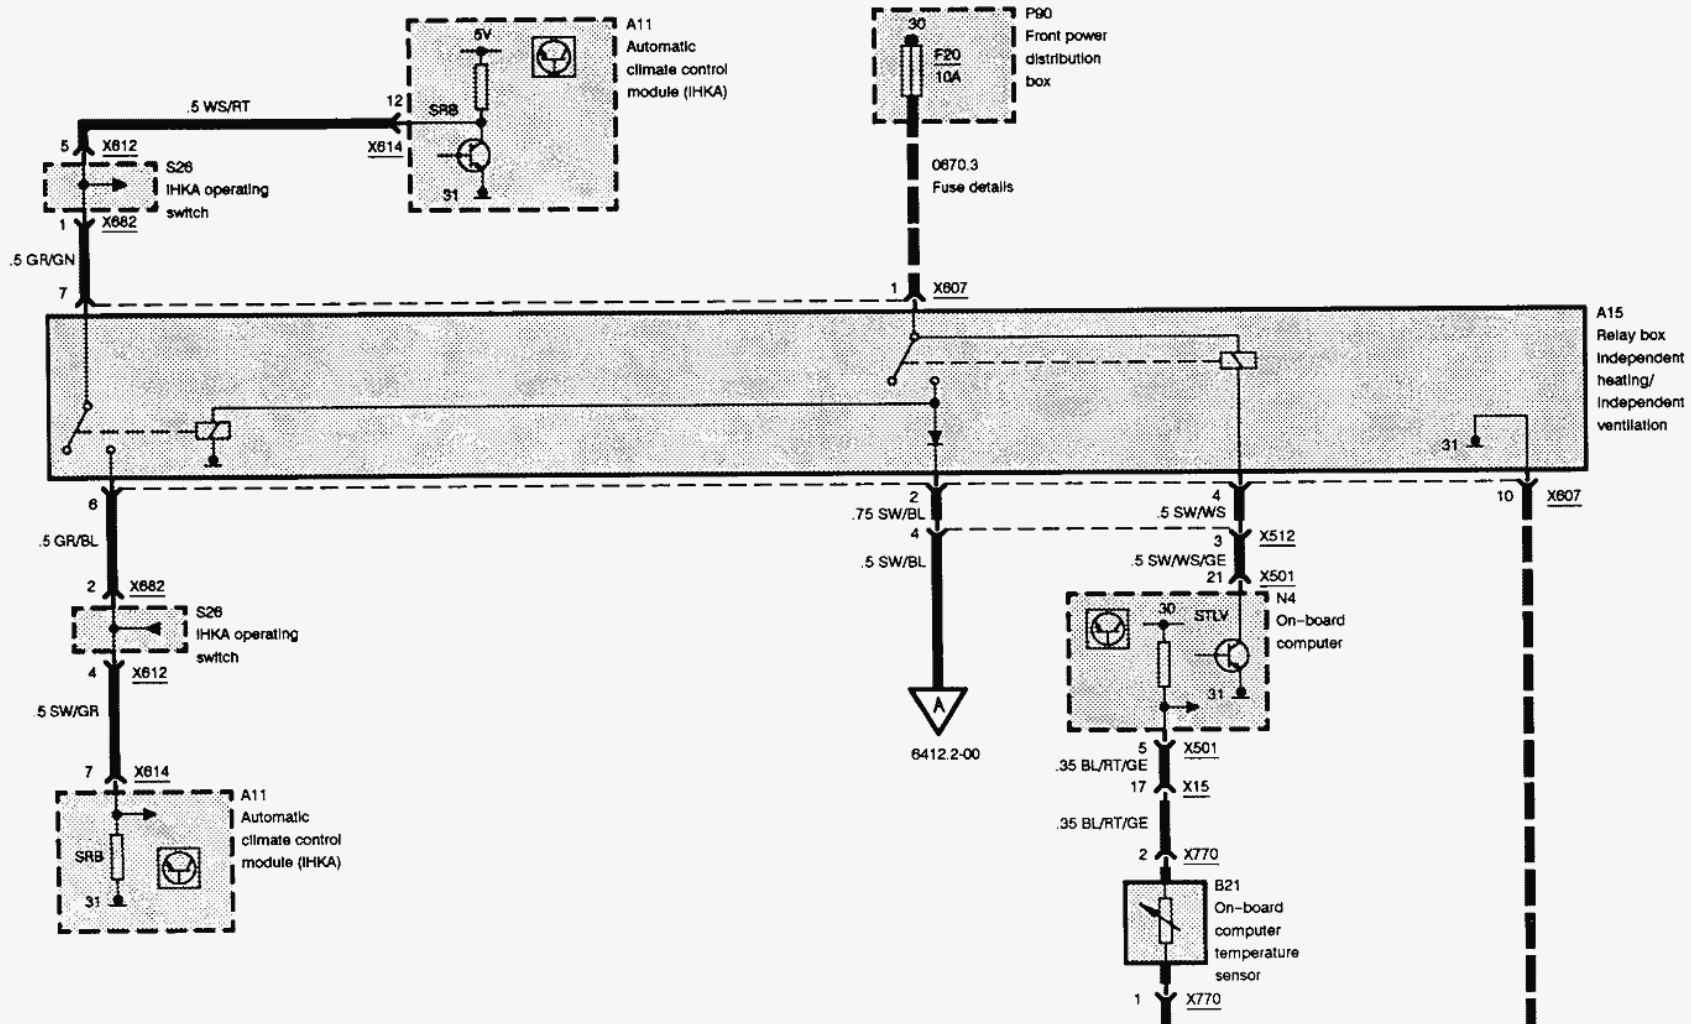



Ground  
distribution  
0670.4  
X1160

Ground  
distribution  
0670.4  
X1160

1994




**BMWAG**

Electrical troubleshooting manual


5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


Independent ventilation with IHKR/3  
Scheme 6412.19

09/93 ————— 6412.19-00 ————— 1994

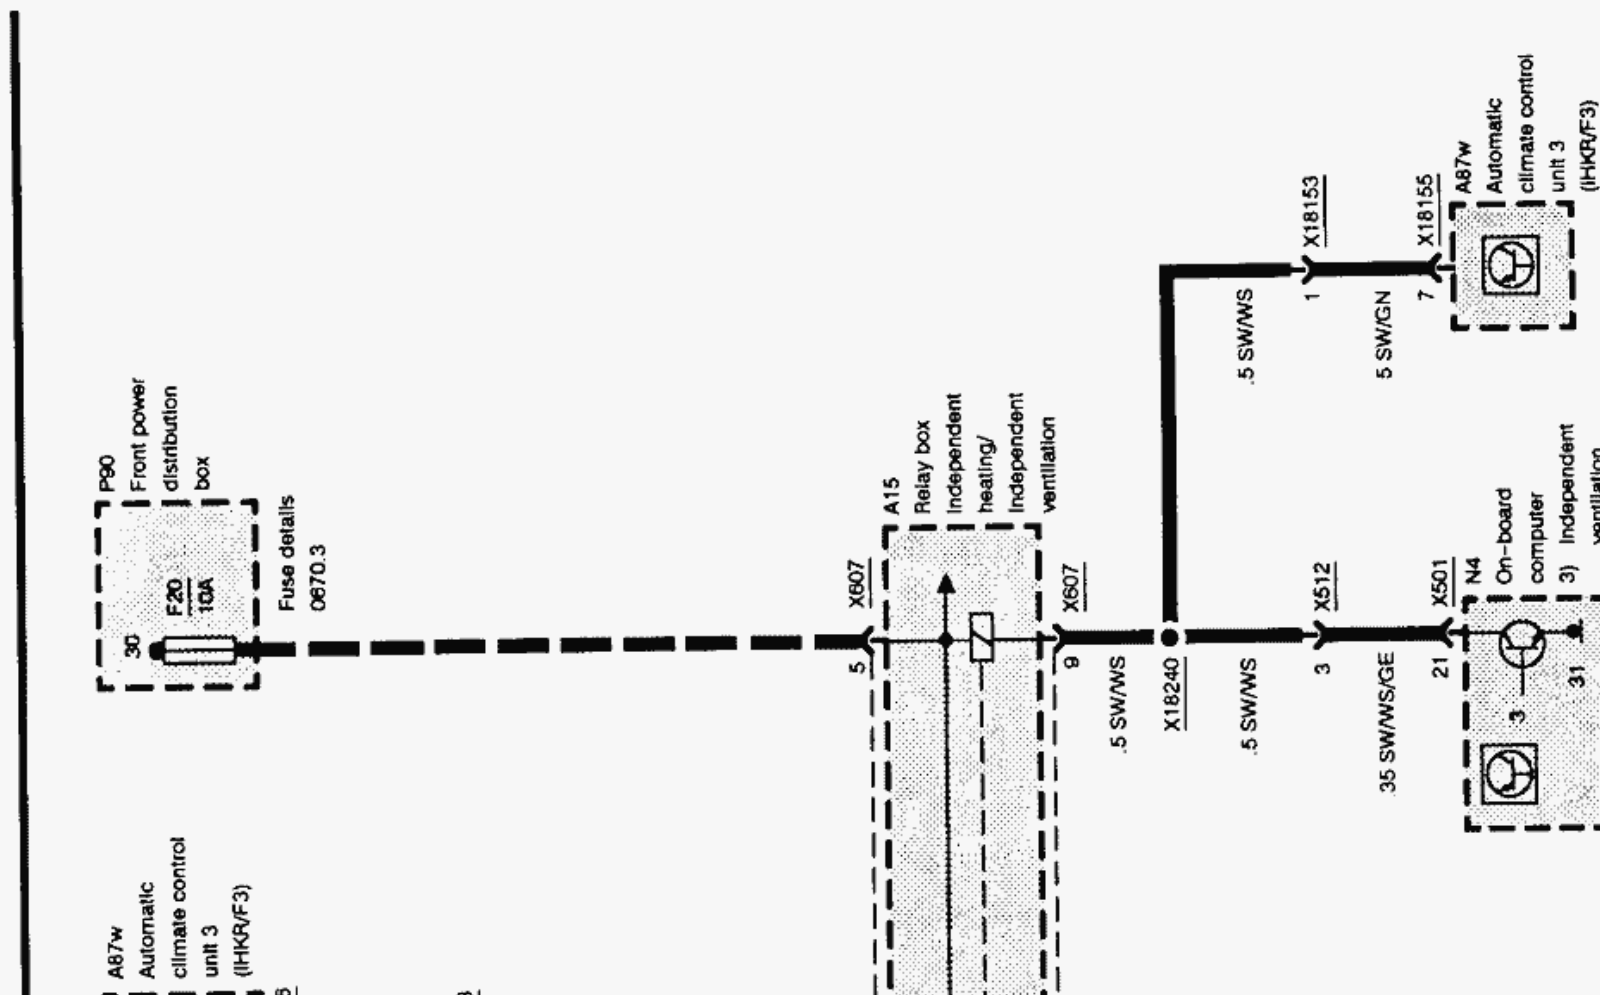

# Independent ventilation with IHKR/3

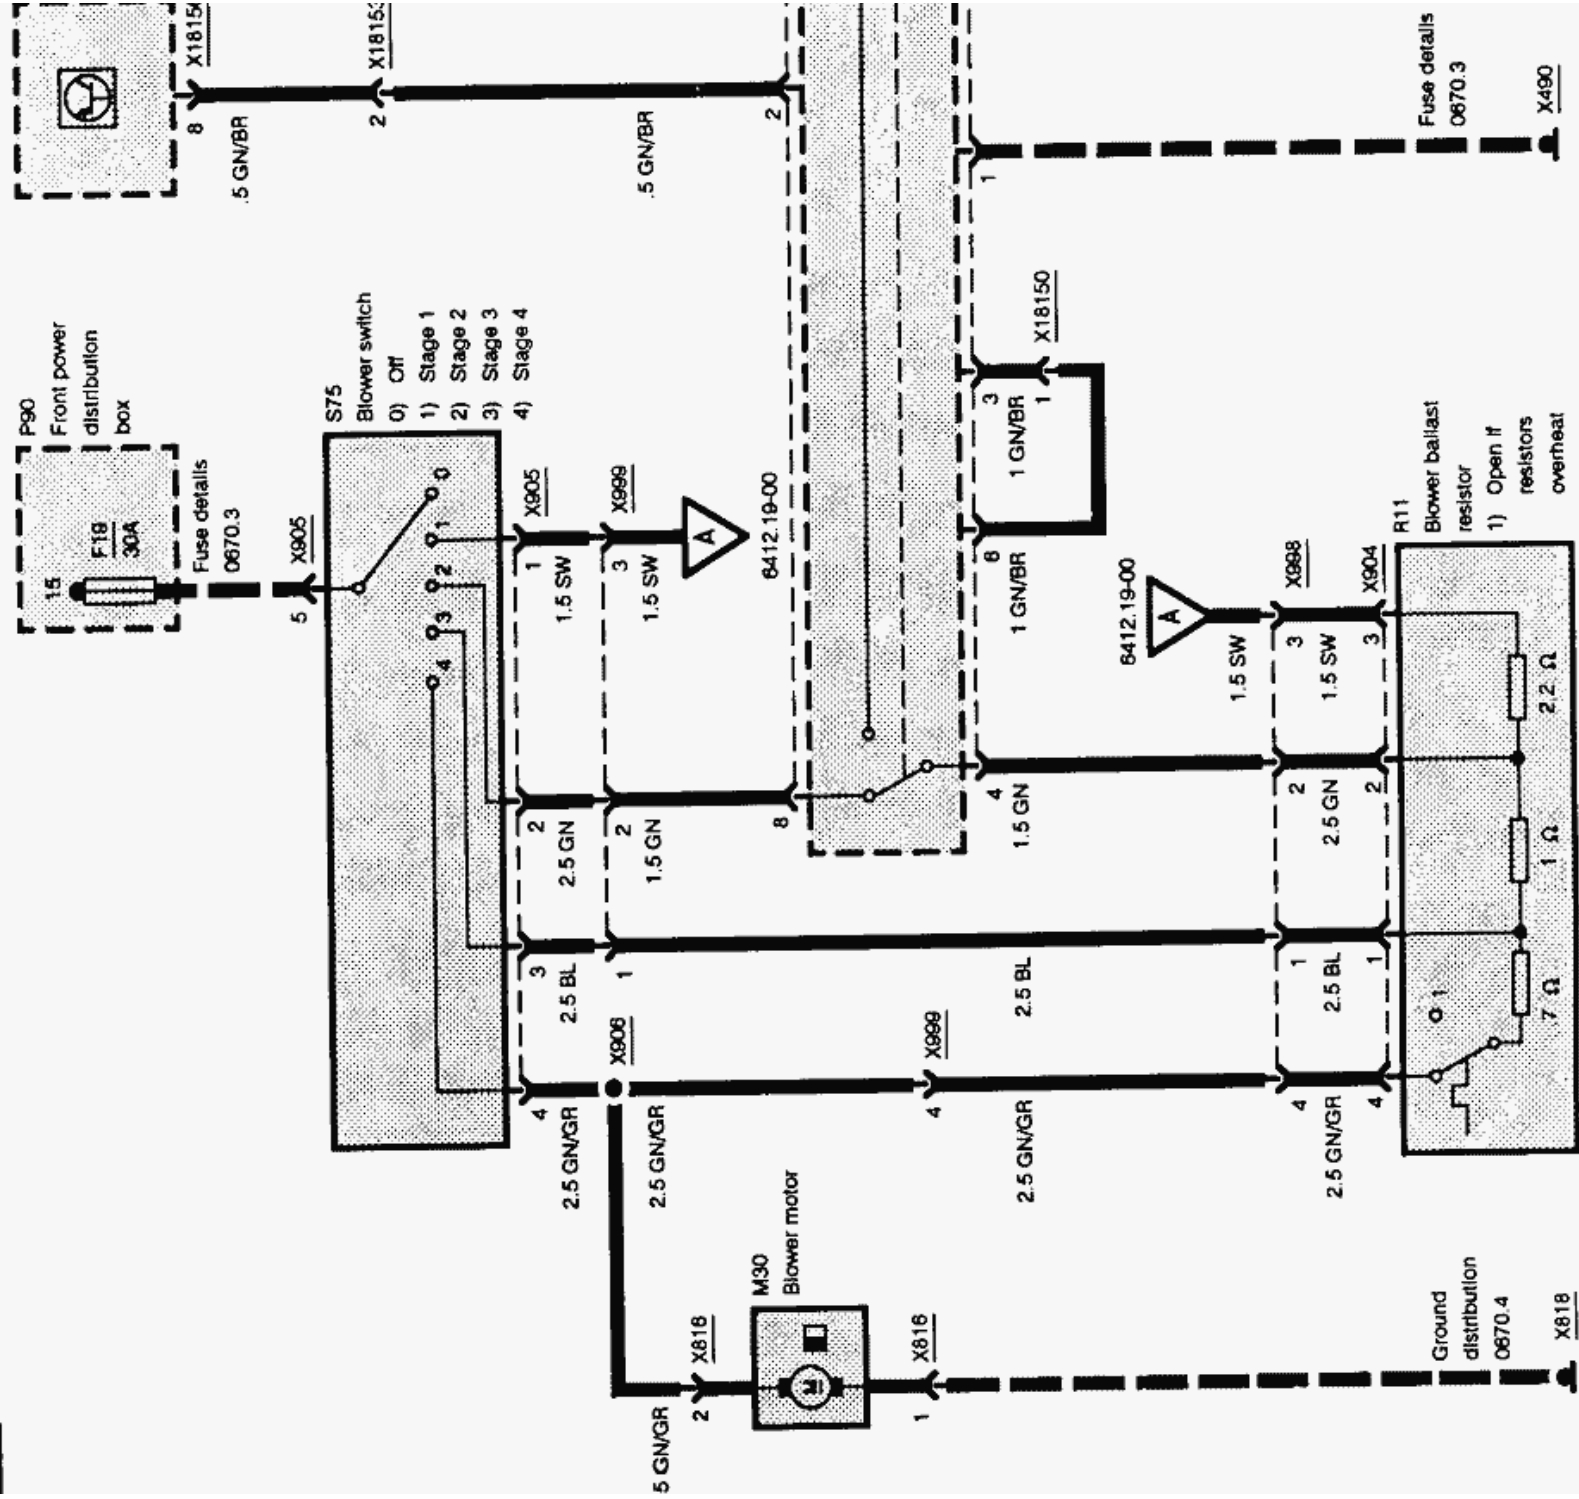

 

**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


Independent ventilation with IHRF3

Scheme 6412.15


09/93

6412.15-00

1994

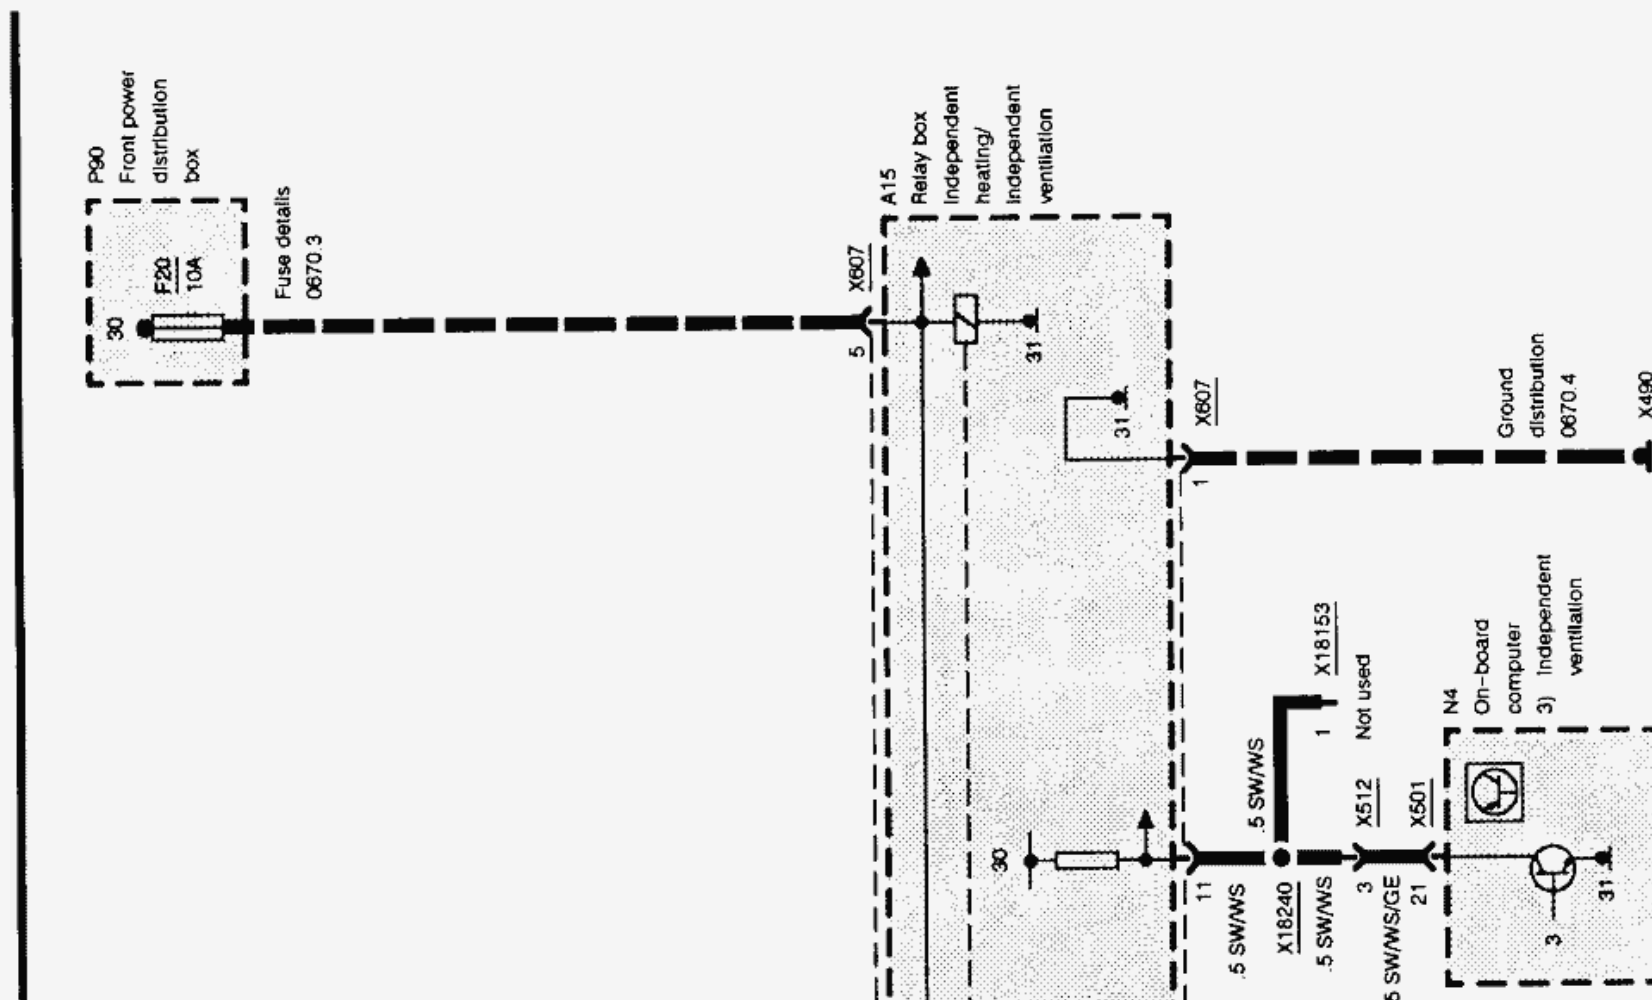

# Independent ventilation with IHRF3

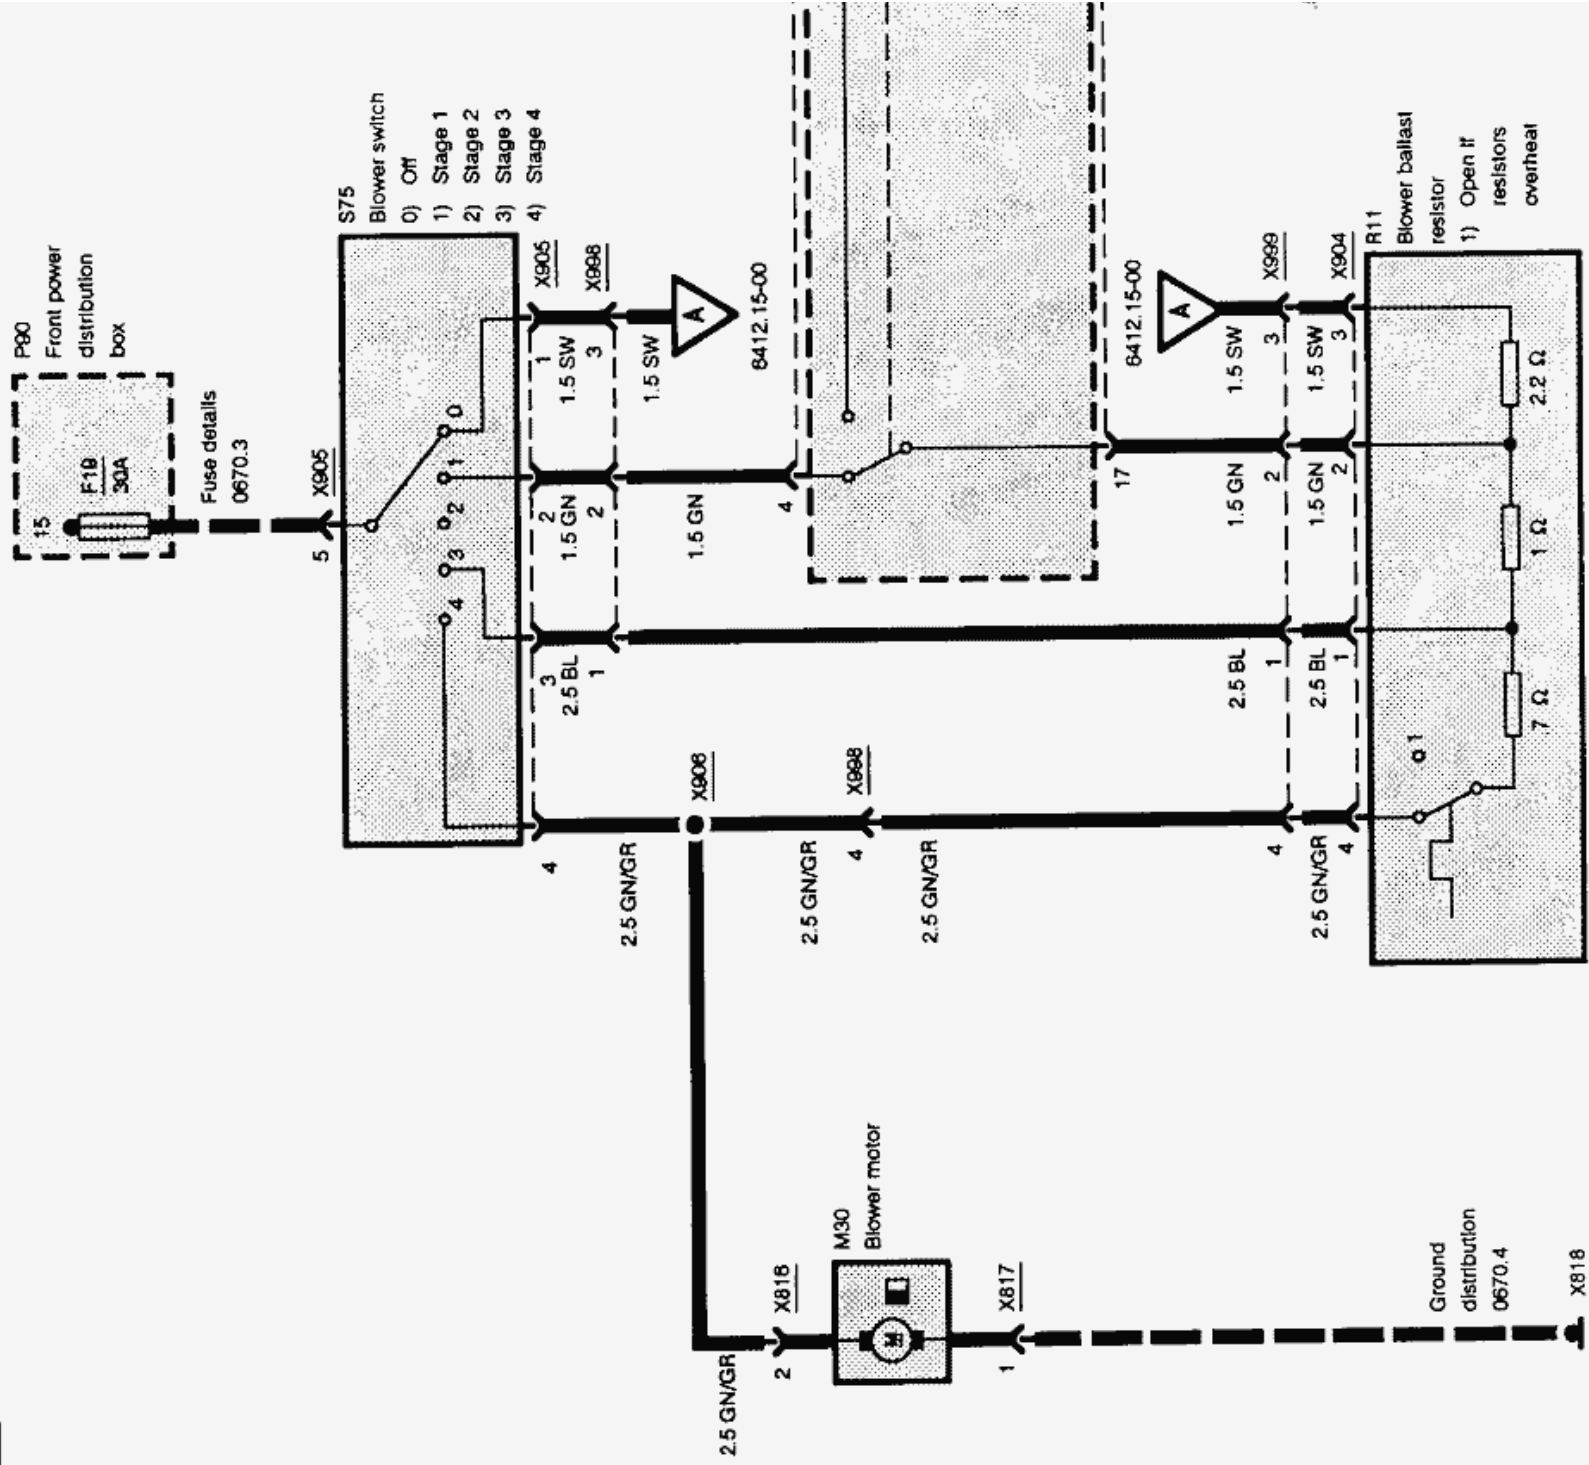



09/93

6412.15-01

1994

P80  
Front power  
distribution  
box

Y4  
Water valves  
1) Left valve  
2) Right valve

.5 GN/BR/GE

X899

5


31

A32w

Temperature  
regulator  
automatic  
heating  
control 3  
(IHRF3)



# Independent ventilation with IHRF3

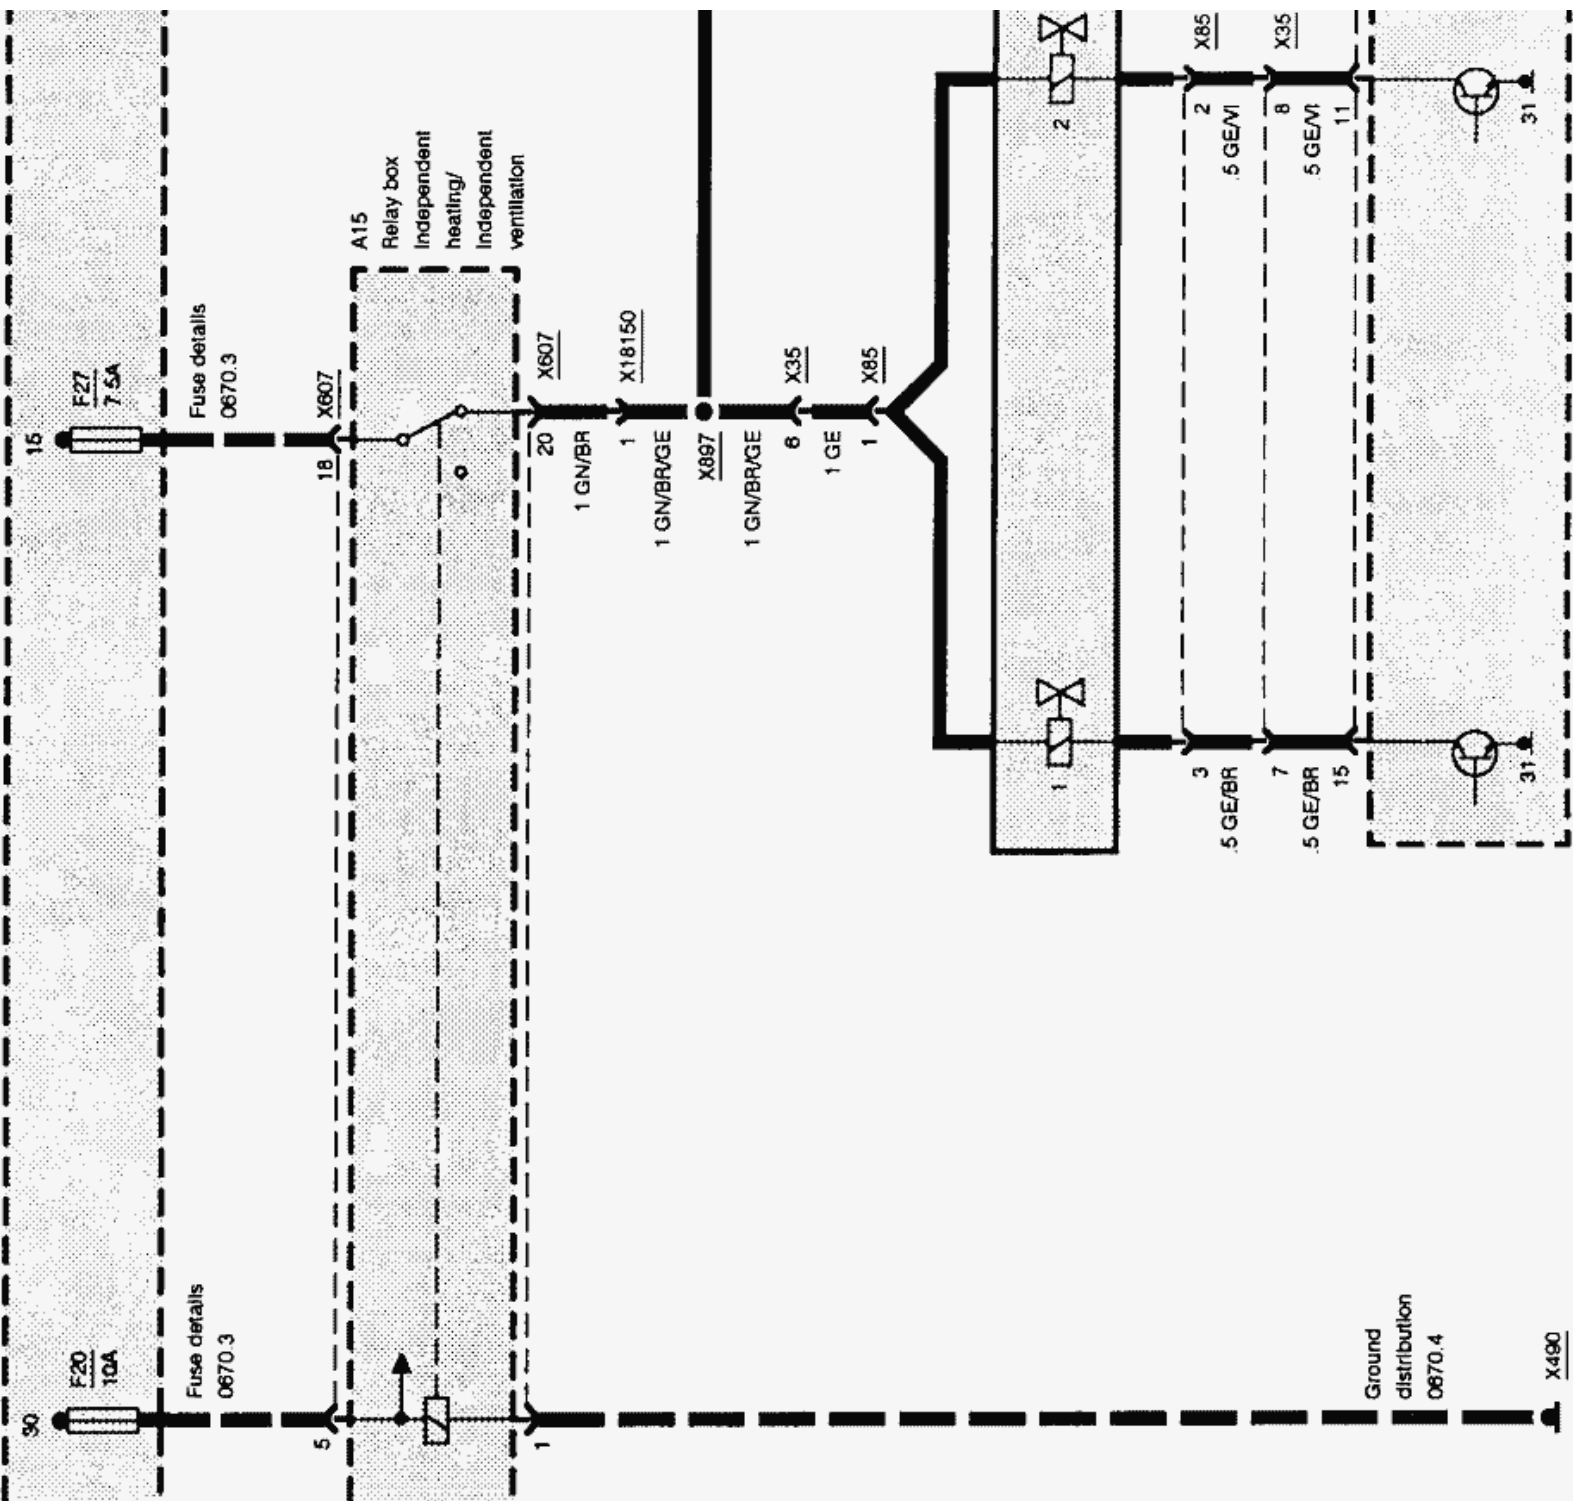









# Windscreen wipe/wash system (ZKE)

## Inputs

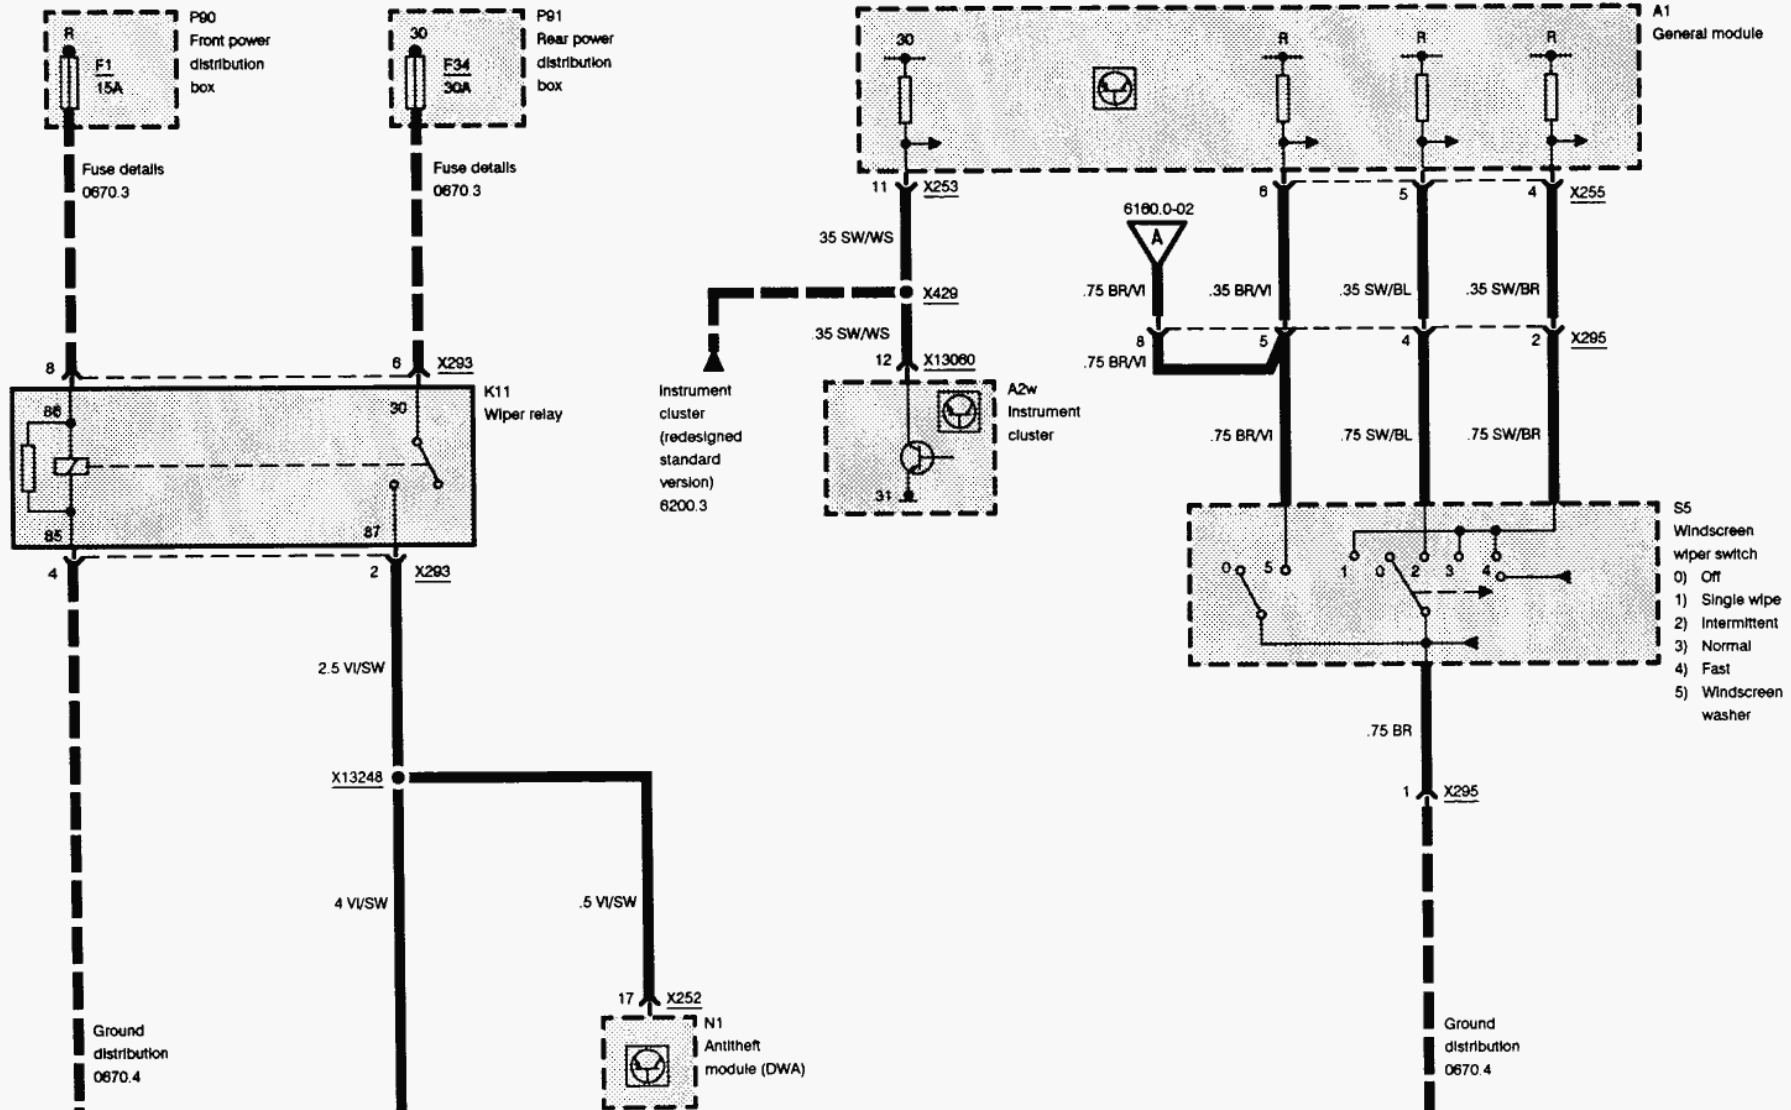

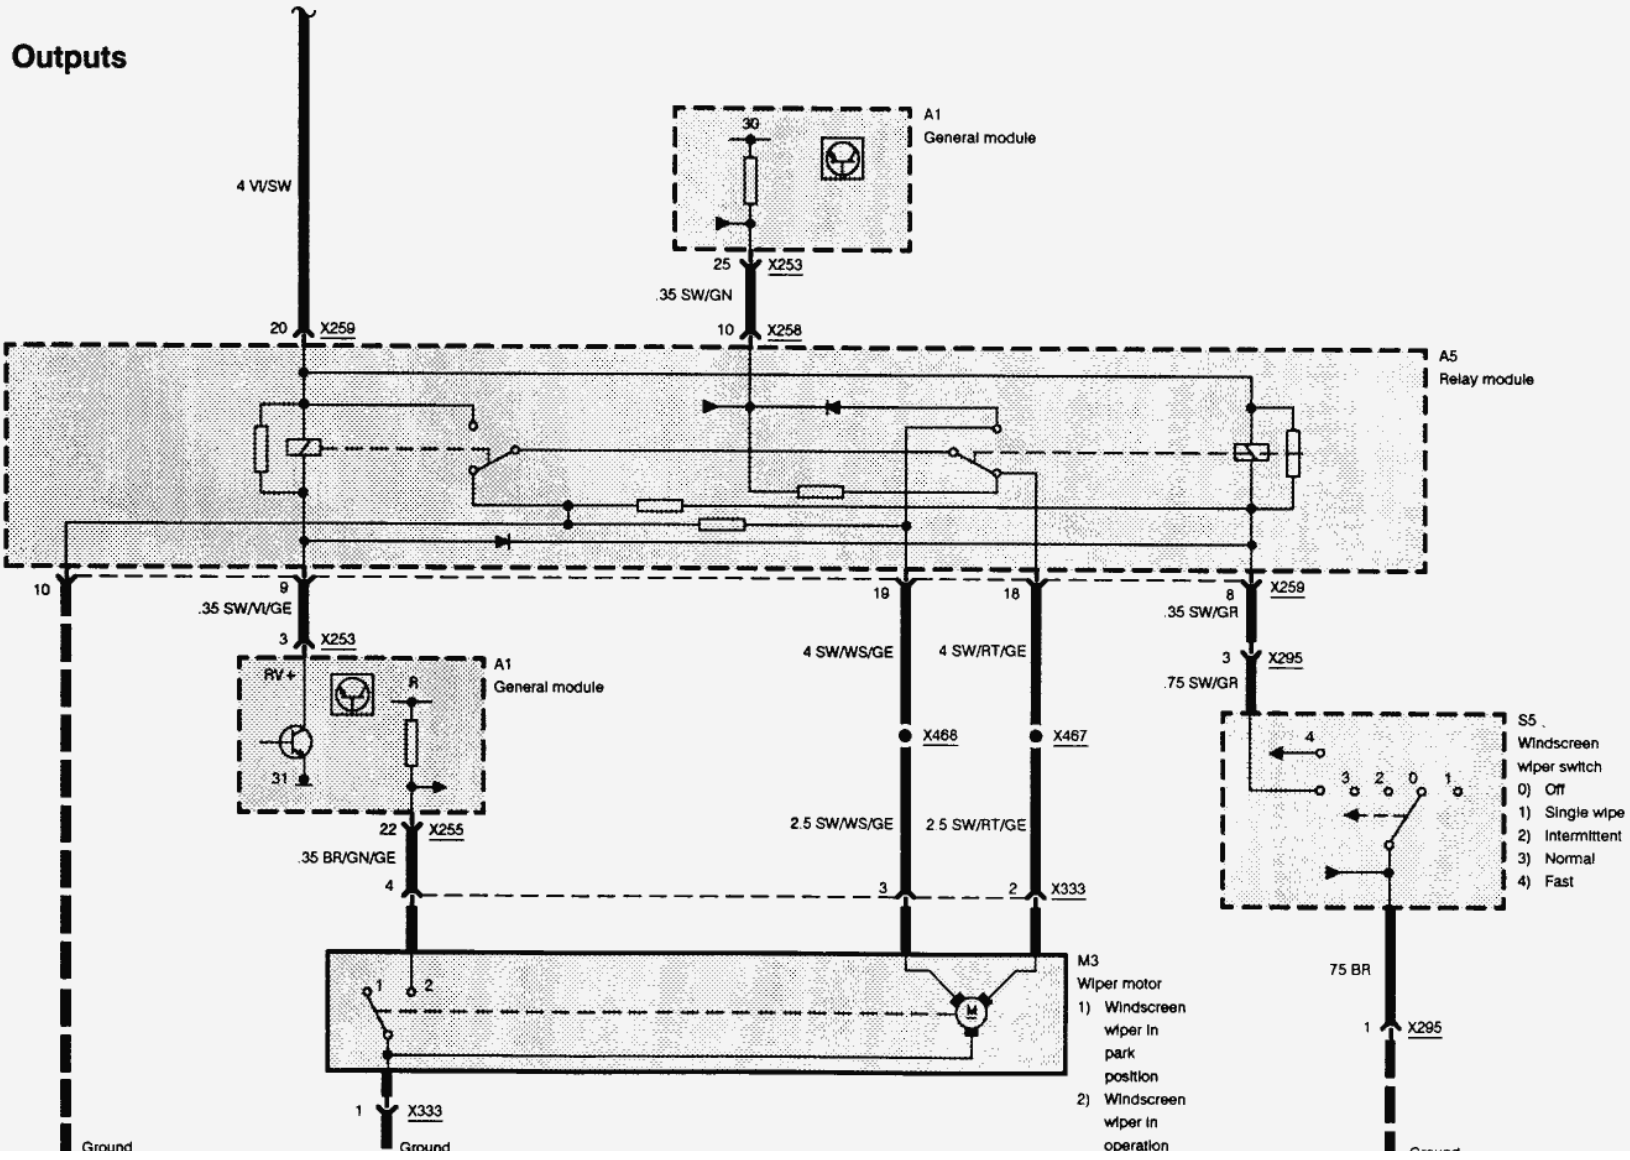

distribution  
0670.4  
X493

distribution  
0670.4  
X491


Ground  
distribution  
0670.4  
X491

1994




# Windscreen wipe/wash system (ZKE)

## Outputs

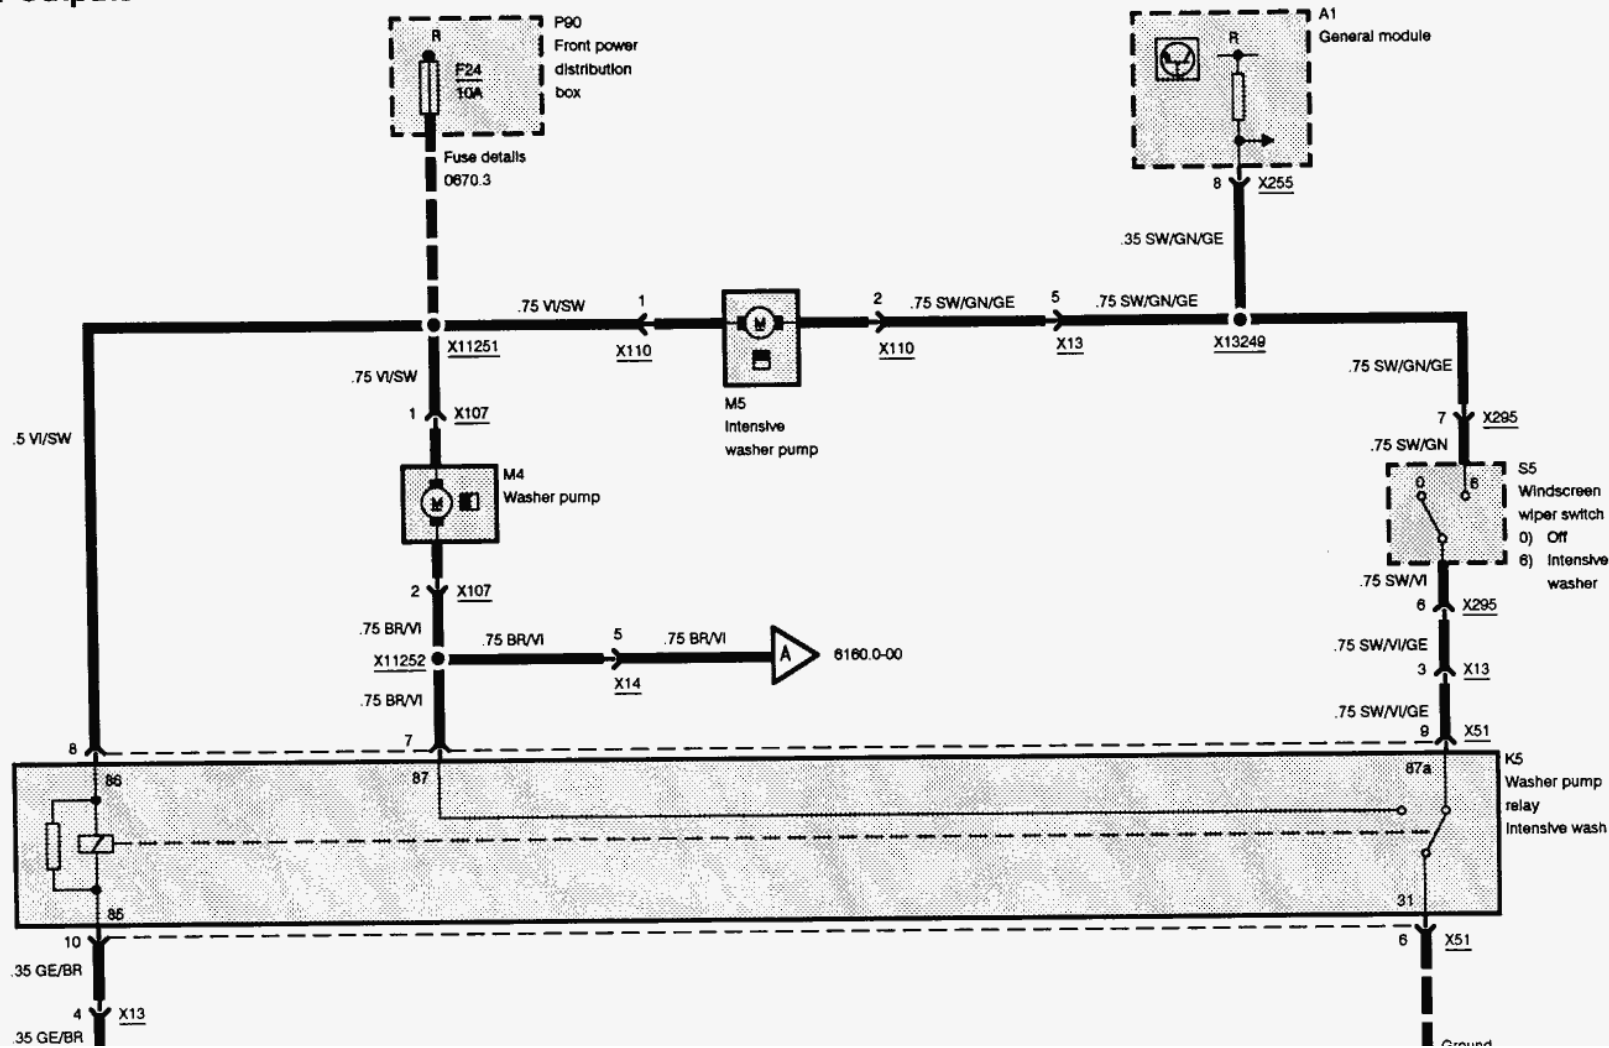

09/93

6160.0-02

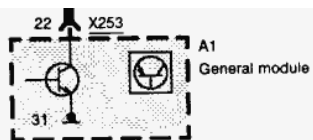

1994



# BMWAG

## Electrical troubleshooting manual

### 5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

#### Introduction

#### Scheme 0110.0

## Schematics

The schematics divide the entire vehicle electrical system into individual circuits. Interacting electrical components are shown on one common schematic.

Switches and other components are represented in such a way that their general layout and function are self-explicit. They are arranged on the sheet such that the current path can be followed from positive (top) to negative (bottom).

**Important:** The components and wires are not drawn to scale. For instance, a lead with a length of over 1m can be shown as a lead which is only a few cm long. To ensure clear arrangement, all connectors, line branches and connected components from the fuses to the component and from the component to ground connection are not shown within the individual cells. If required, reference can be made to the cells **0670.3 Fuse Details** and **0670.4 Ground Distribution** where all lines are illustrated with all plug connections, line branches and connected components.


All circuit symbols used are listed and explained in the cell **0140.0 Symbols**.


In cell **7000.0 Component Location Chart** all important connectors, ground points and components are listed in tabular form. It provides a precise description of the component locations in the vehicle.

In cell **7100.0 Component Location Views** the locations of the connectors and components which are difficult to locate are shown in line arts or illustrations. In cell **8000.0 Solder Connector Location Views** all splices are listed in numerical order and illustrations are provided to assist in locating splices on larger harnesses. In cell **8500.0 Connector Views** diagrams of connectors with more than 2 pins are illustrated.

#### Example

General conventions can be explained based on the following schematic example.

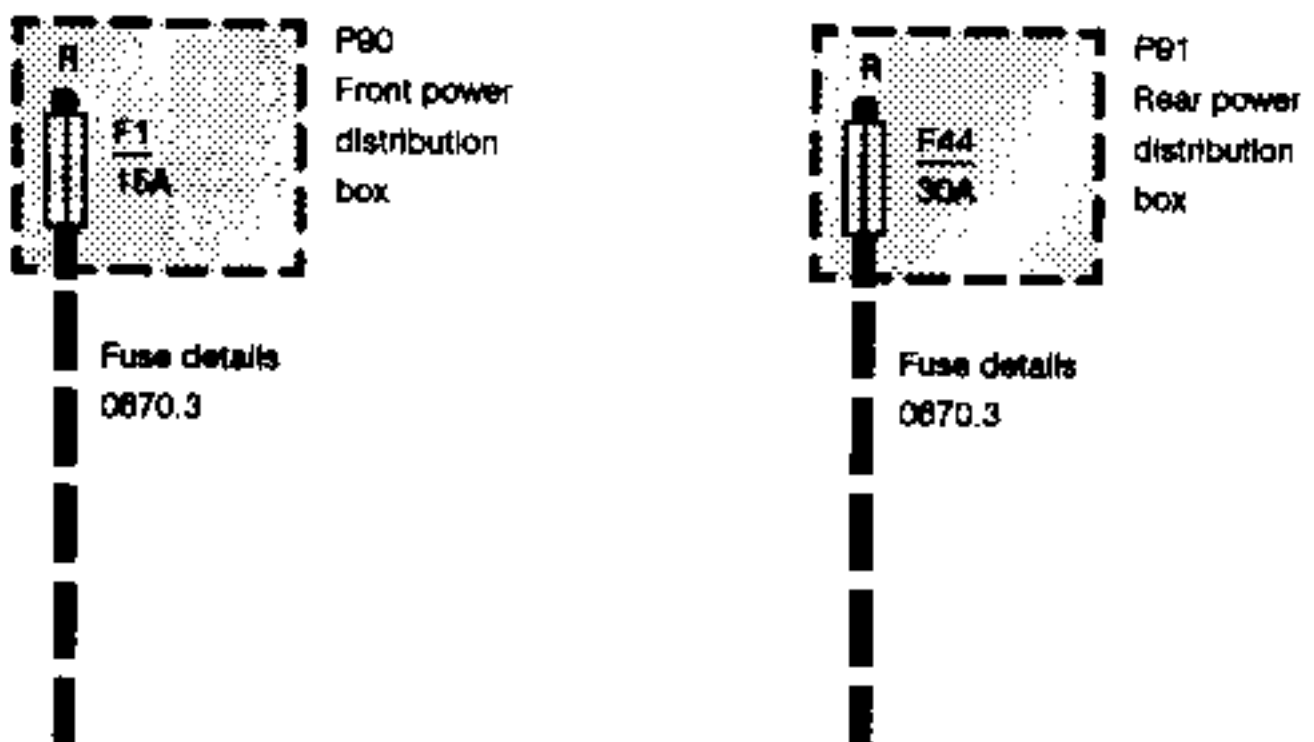

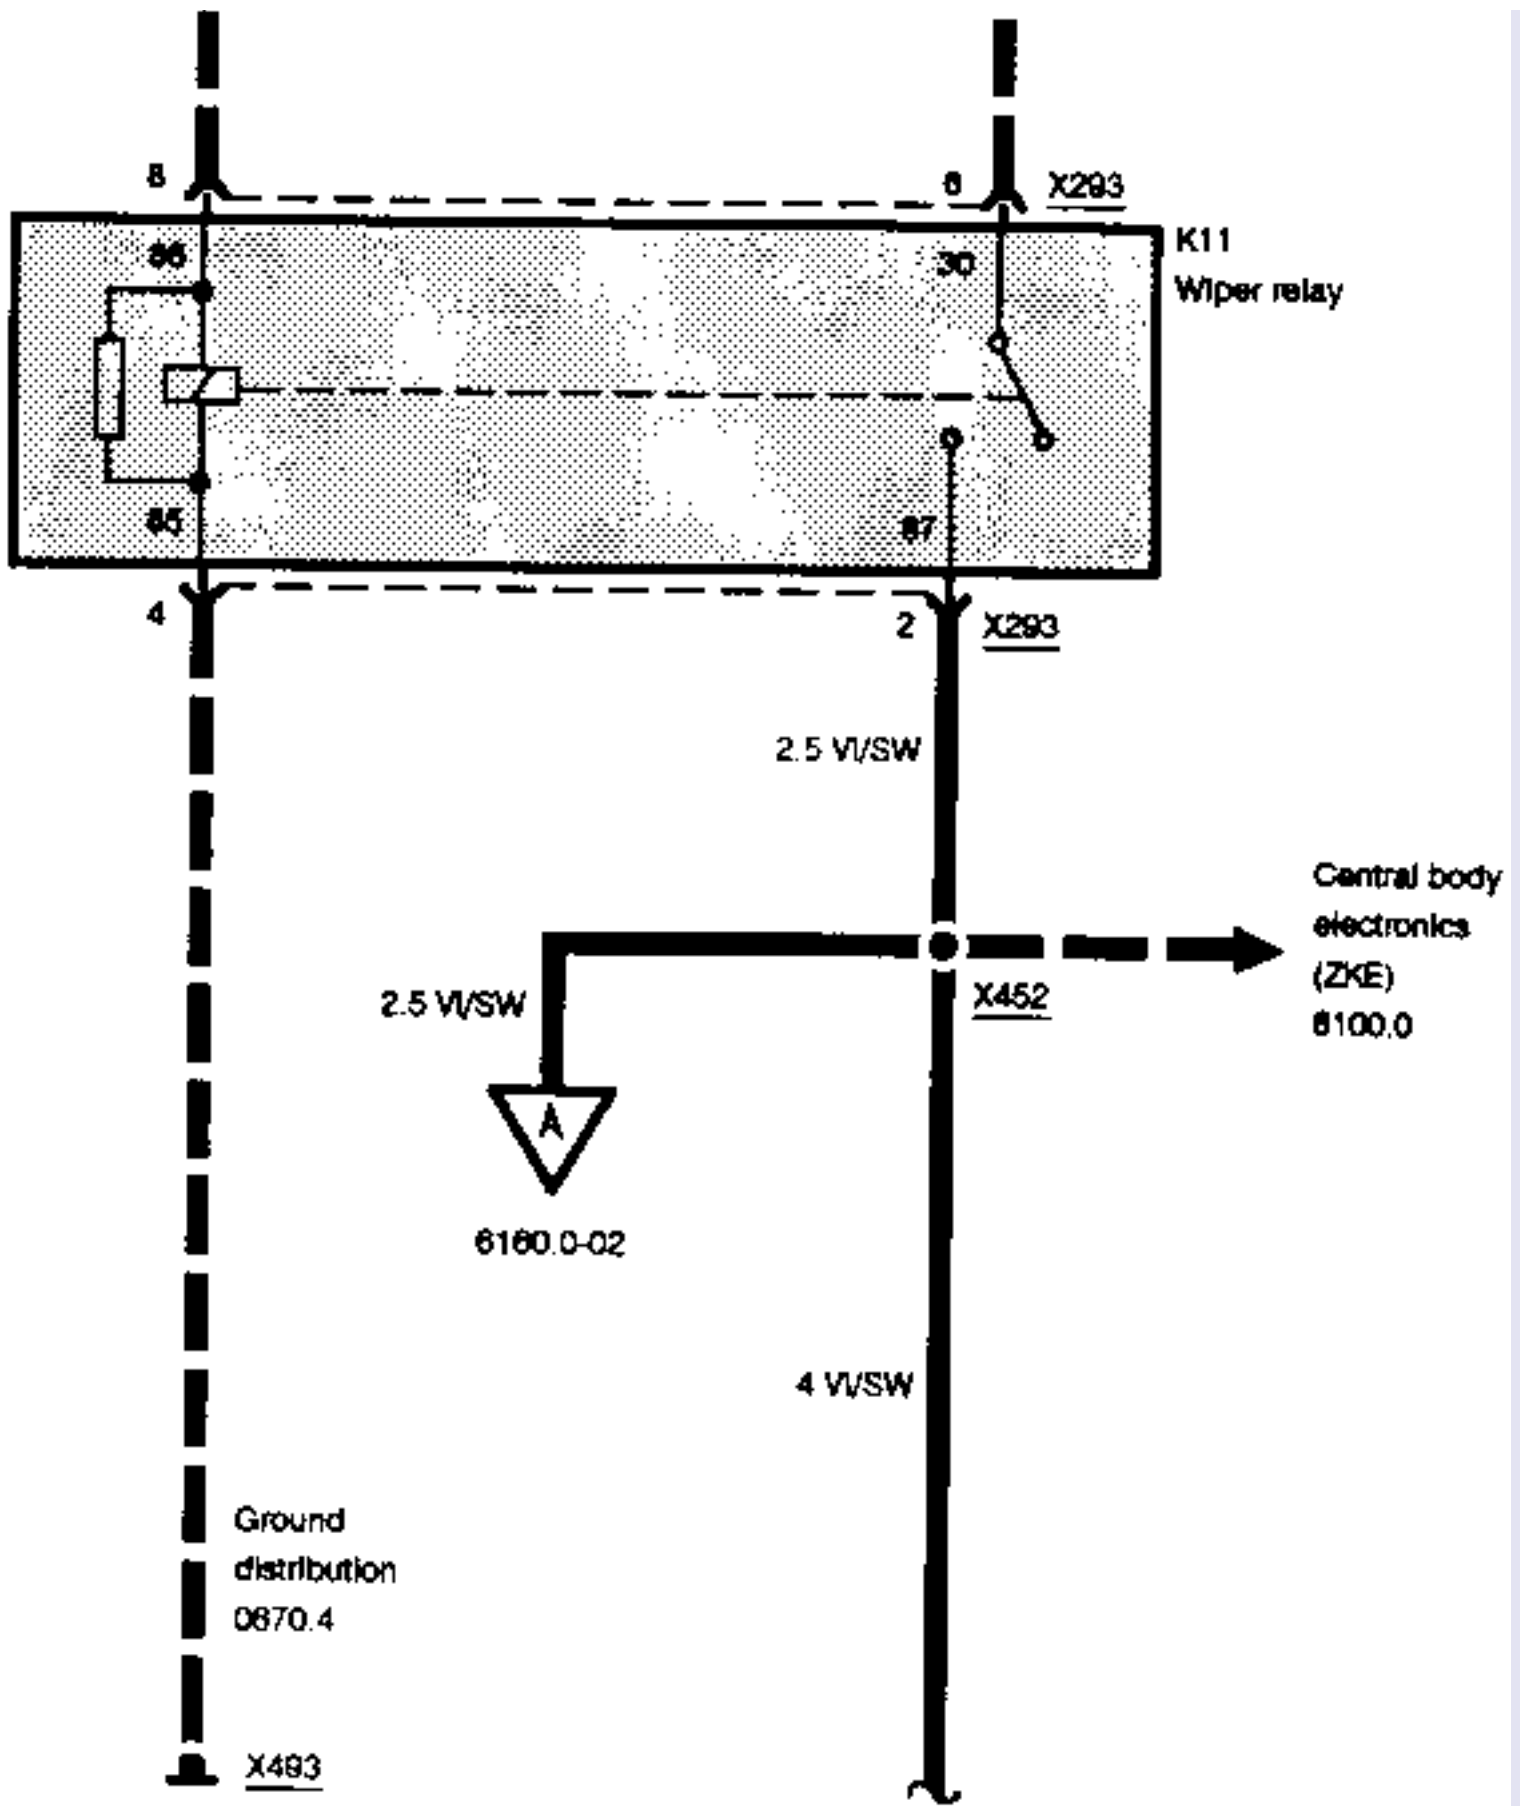

## General conventions


1. Switches and relays are always shown in rest position (e.g. K11).
2. A component shown in a dashed frame signifies that the component is illustrated only in part (e.g. P90 and P91).

3. A component shown in a completely drawn frame signifies that the component is illustrated in full (e.g.K11).
4. The dashed line between pin 8 and pin 6 at the connector X293 indicates that both pins belong to the connector X293.
5. The dashed line from fuse 1 to pin 8 of the connector X293 shows the positive supply of the relay K11. If required, refer to cell **0670.3 Fuse Details** at fuse F1 for the complete line progression with all plug connections, line branches, wire colours and cross sections.
6. The dashed line with arrow at the connector X452 indicates that several wires lead to the connector X452. All lines leading to the connection are illustrated in cell 6100.0 Central Body Electronics (ZKE). An uninterrupted line with arrow indicates that only this one line leads to another circuit.
7. The dashed line from pin 4 of connector X293 to ground X493 shows the ground supply of the relay K11. If required, refer to cell **0670.4 Ground Distribution** at ground X493 for the complete line progression with all plug connections, line branches, wire colours and cross sections.
8. The uninterrupted line from connector X452 with an A in the open arrow is continued on page 6160.0-02.

Termination of the wire 4 WSW from connector X452 with a wavy line indicates that the wire is continued on the opposite page.




09/93 ————— 1240.0-00 ————— 1994

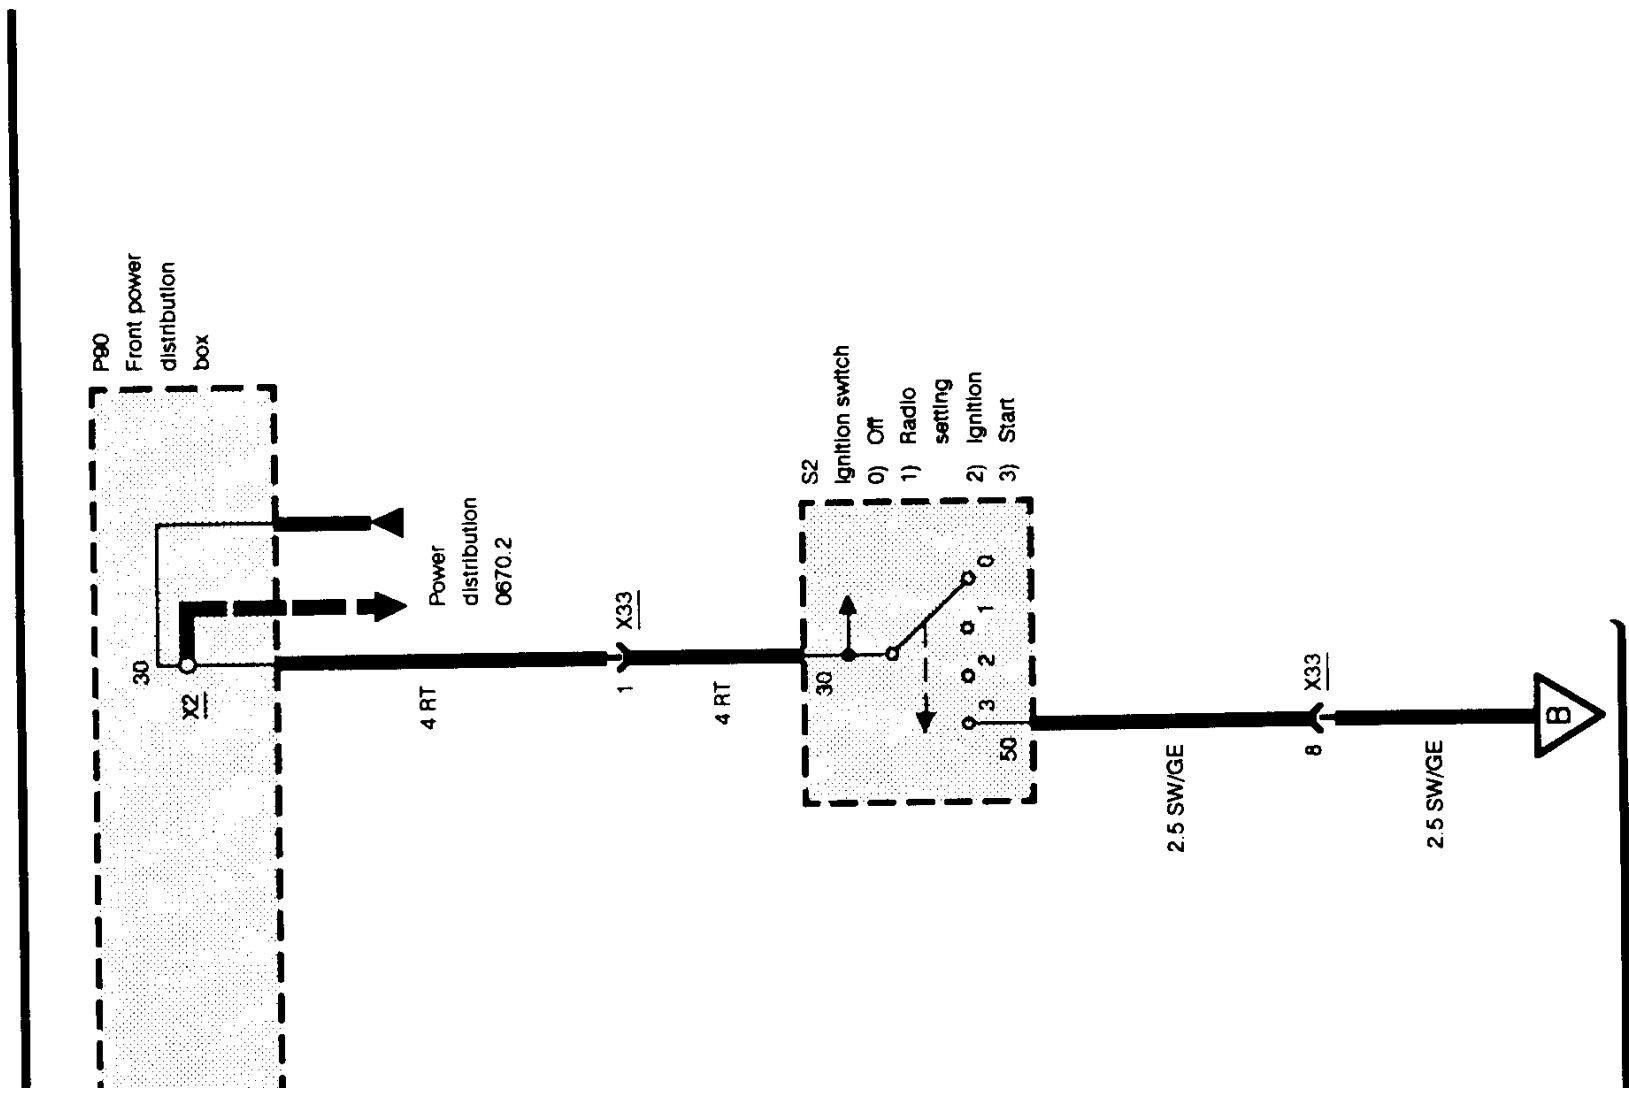



# Starter

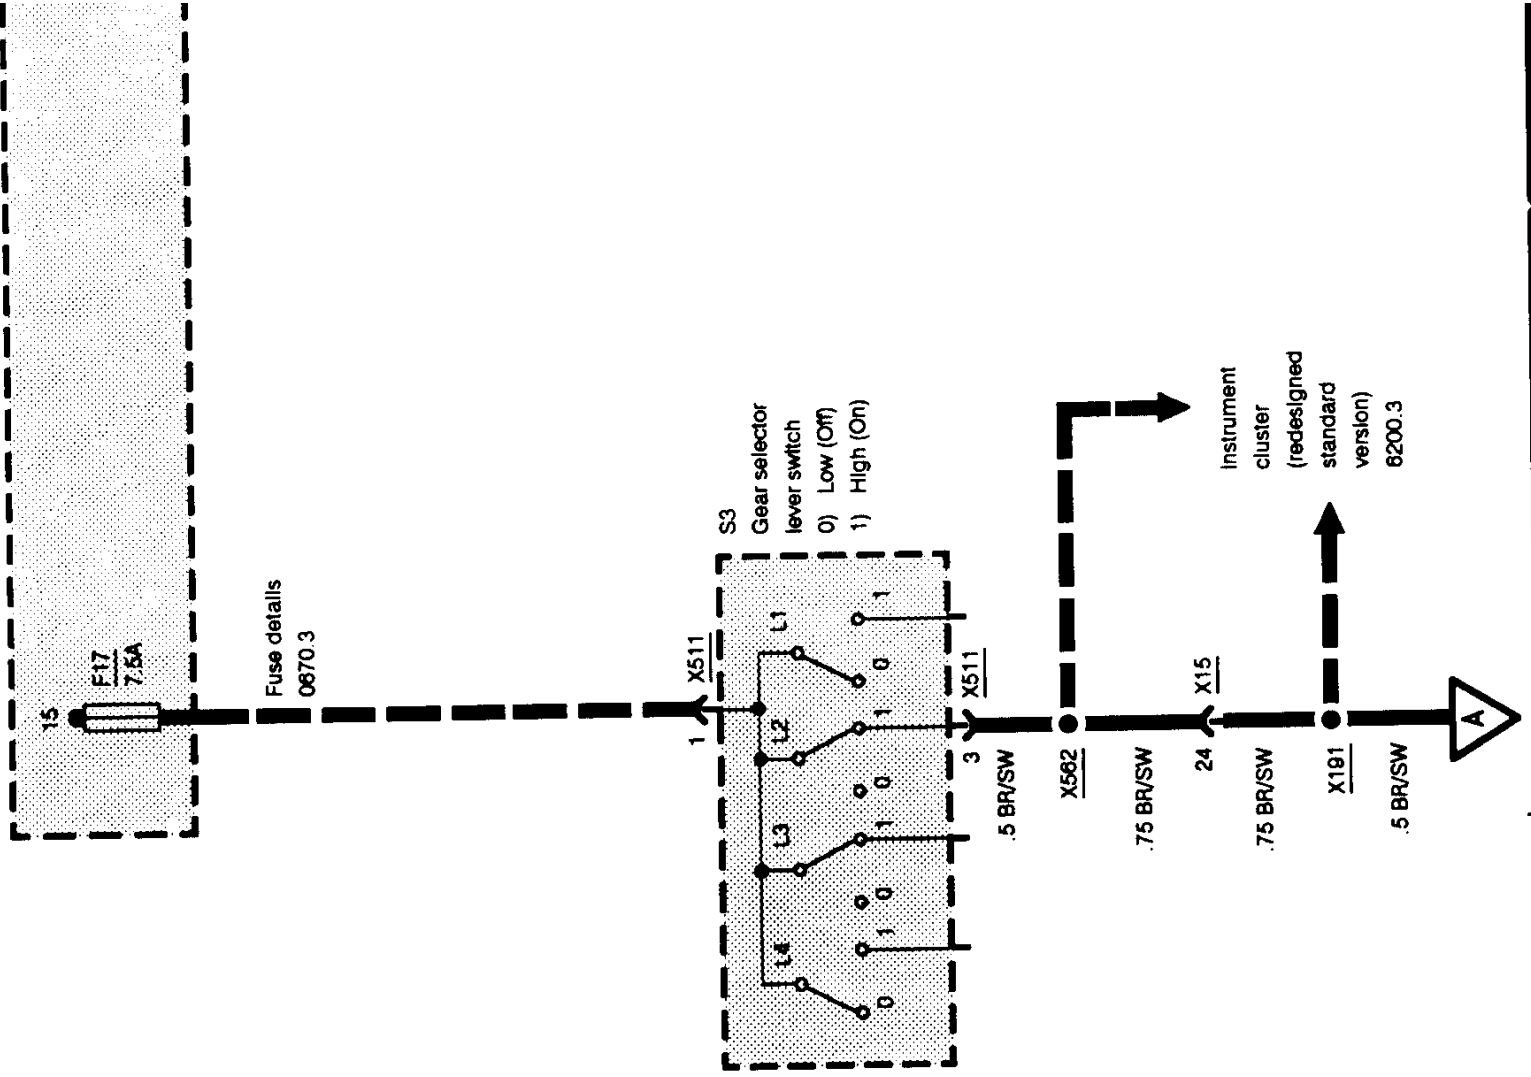

EGS A4S 310R

	L1	L2	L3	L4
P	1	1	0	0
R	1	0	0	1
N	0	1	1	0
D	0	0	0	1
3	0	0	1	0
2	1	0	0	0
1	1	0	1	0

EGS A5S 310Z

EGS A5S 310Z

(diesel)


	L1	L2	L3	L4
P	1	1	0	1
R	1	0	0	0
N	1	1	1	0
D	0	0	0	1
4	0	0	1	1
3	1	0	1	1
2	0	0	1	0




09/93

1240.0-01

1994

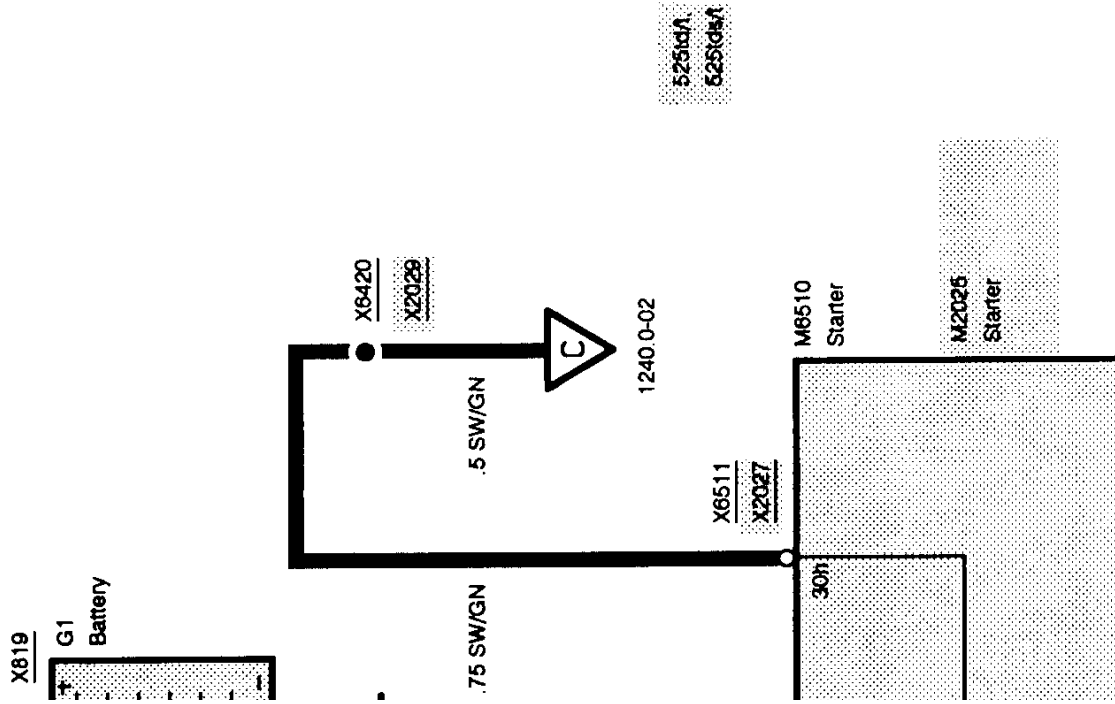

# Starter

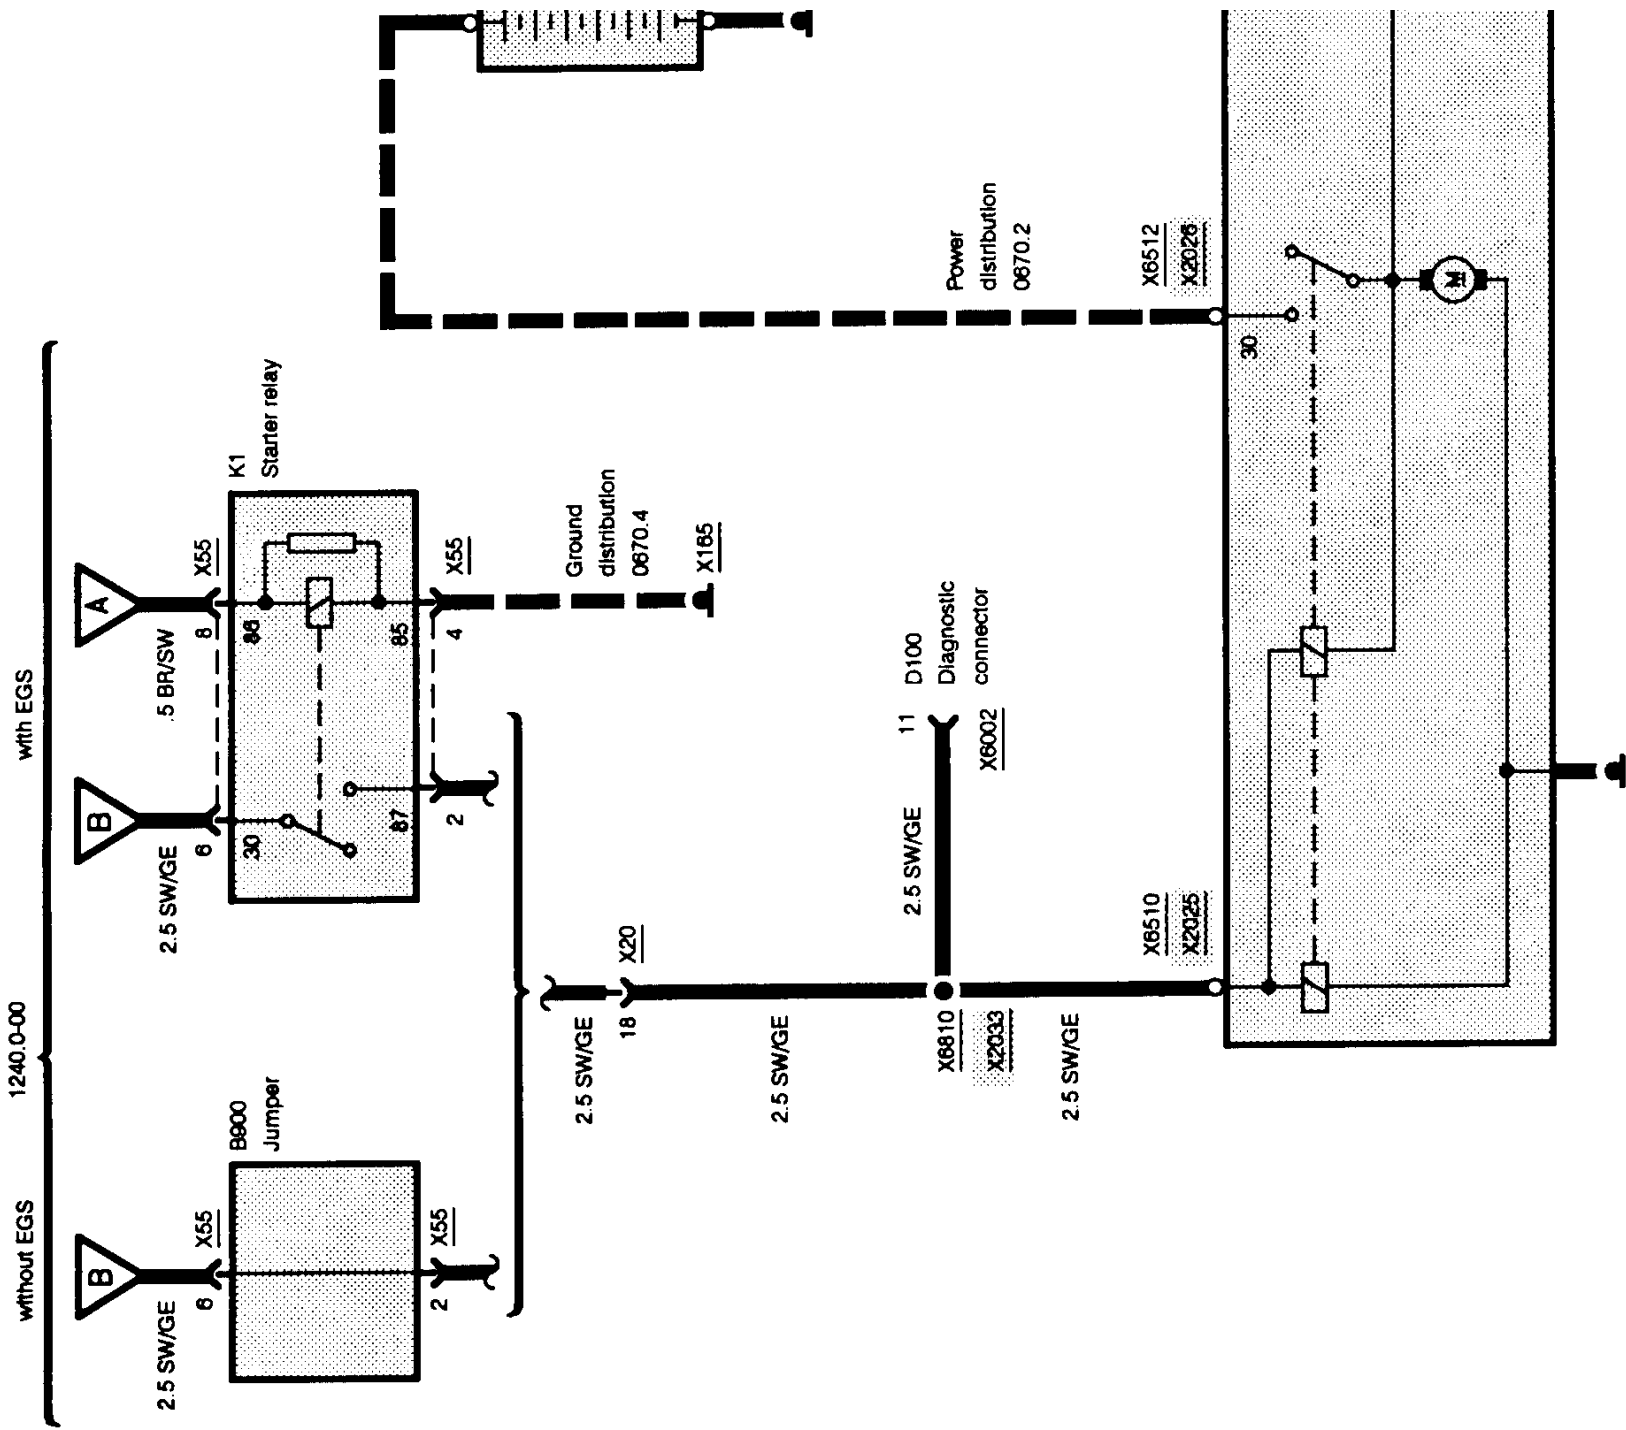





09/93

1240.0-02

1994

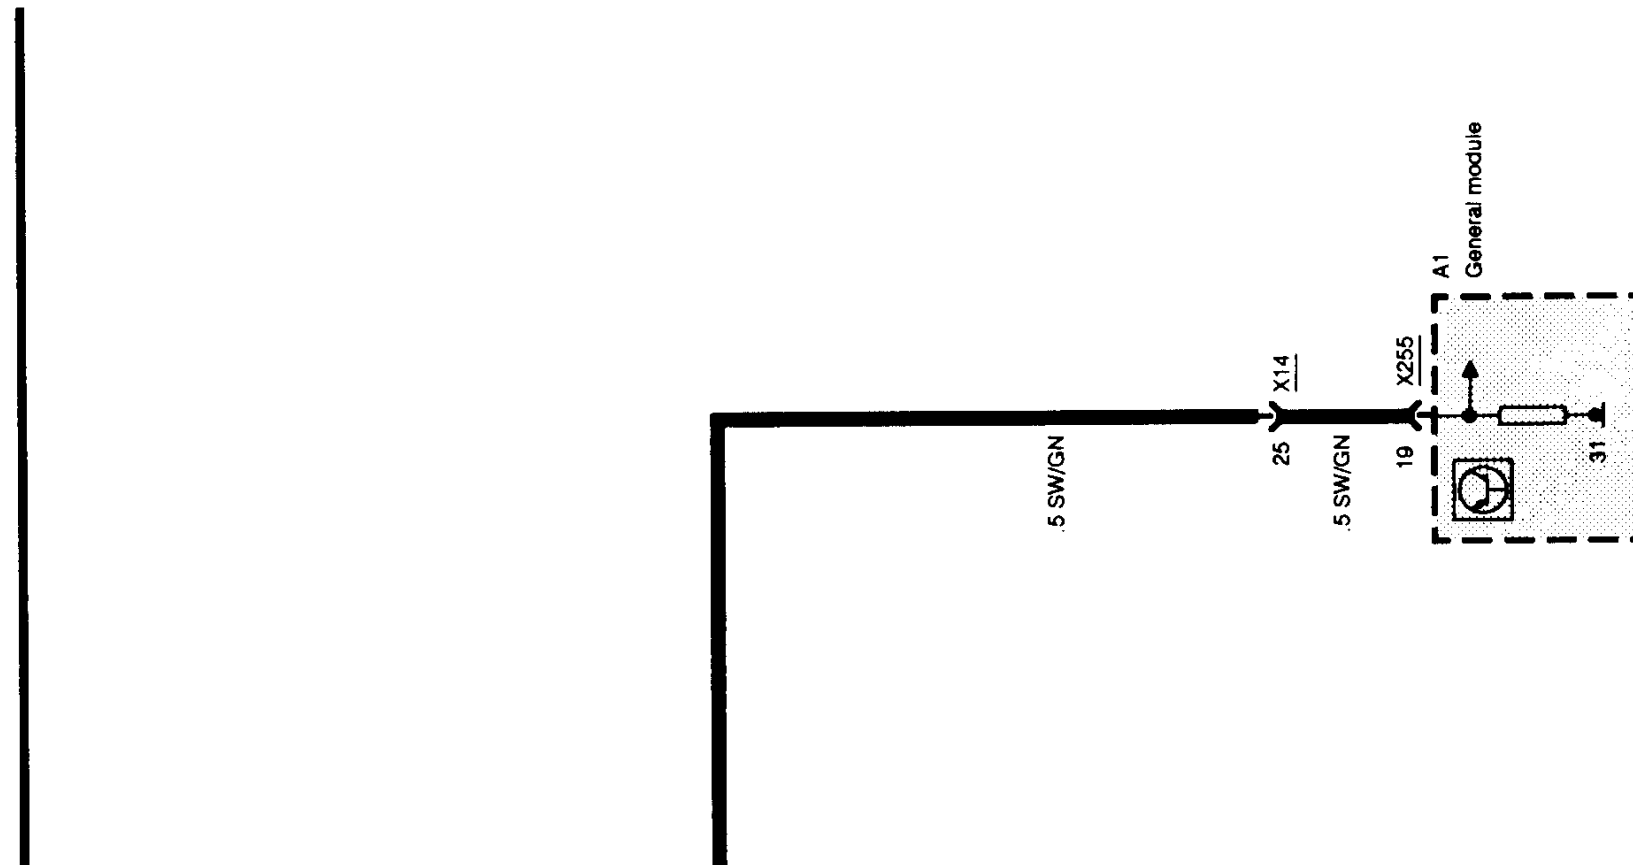


er

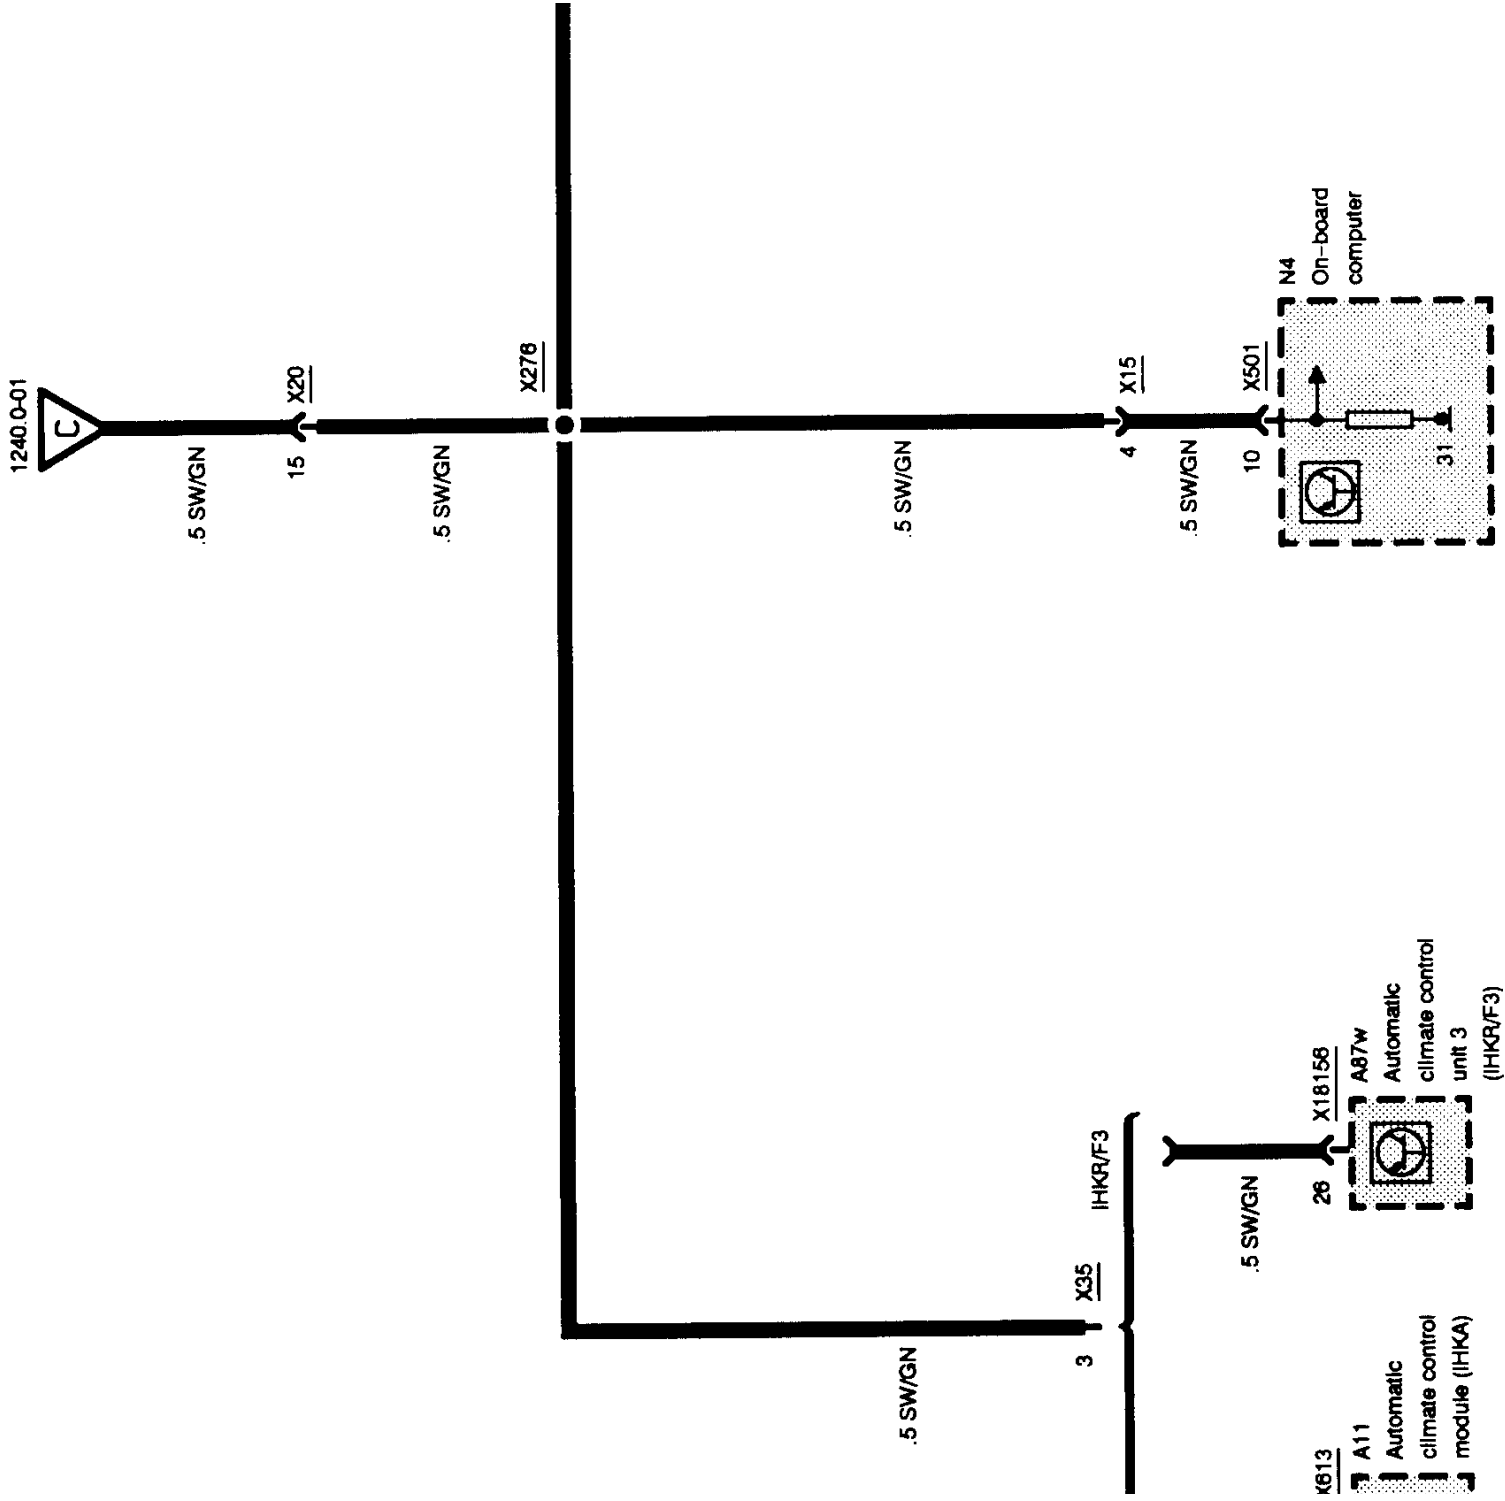




**Start**

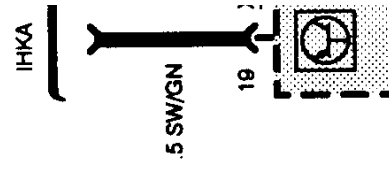


# BMW 5 Radio/stereo One component

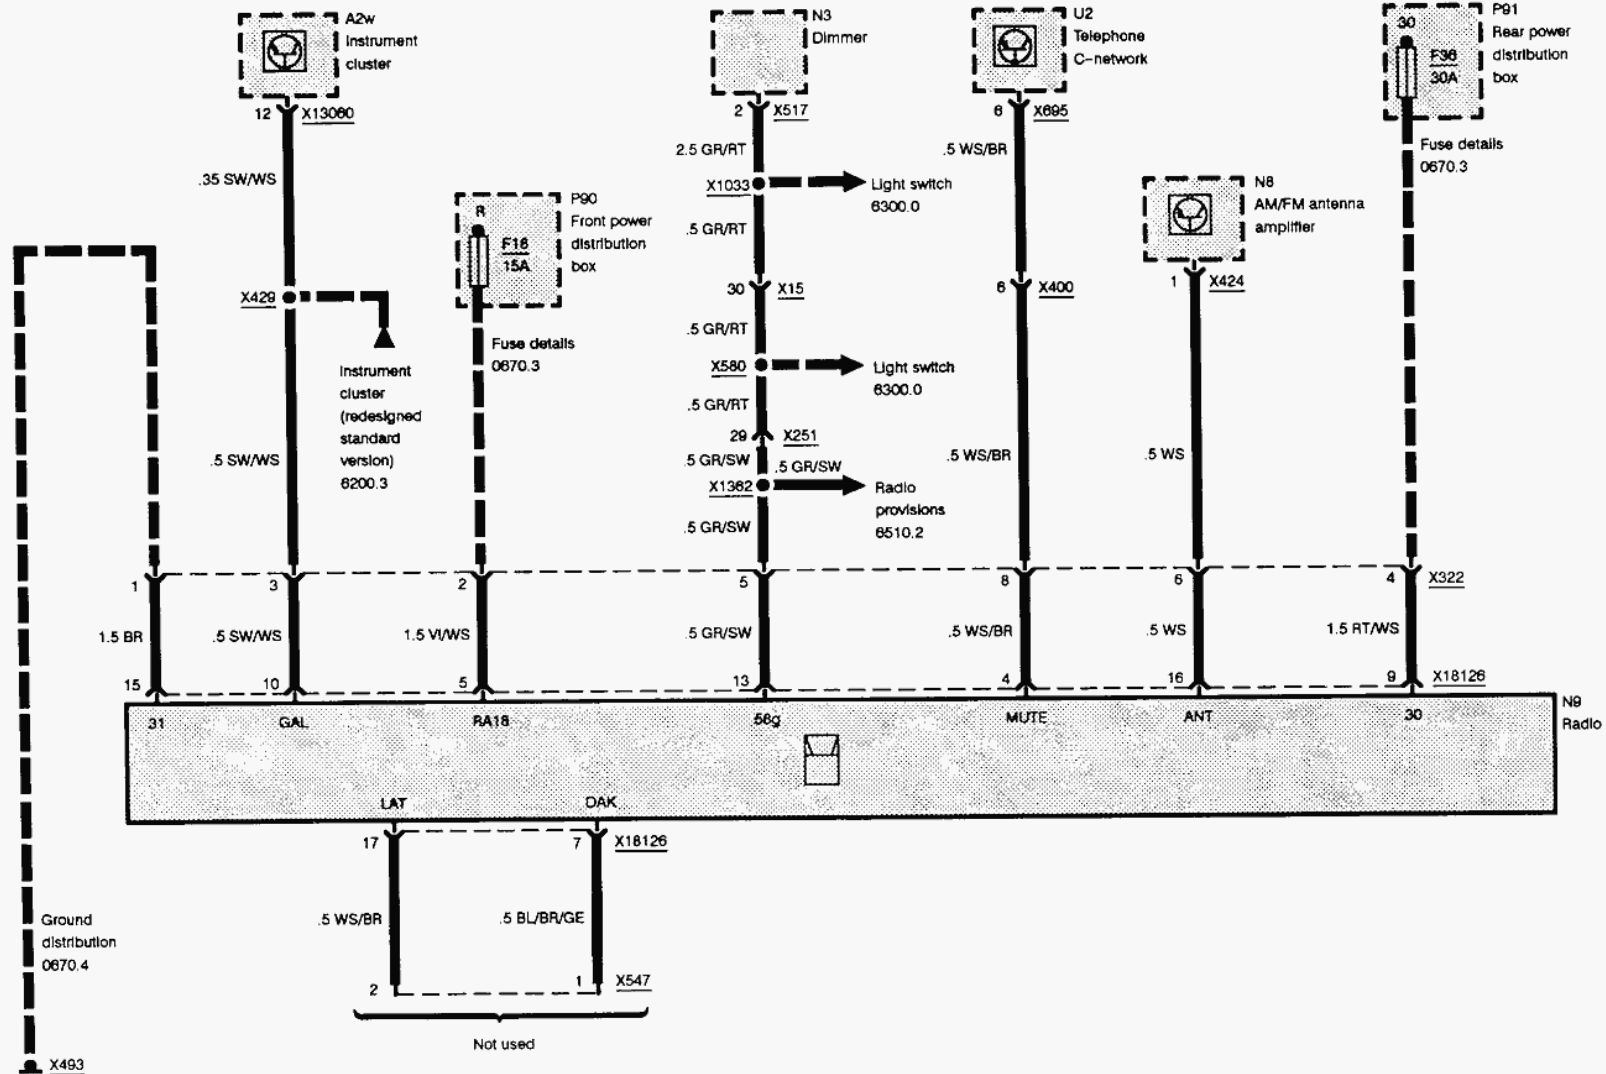






## Radio/stereo Speaker activation (1 component)

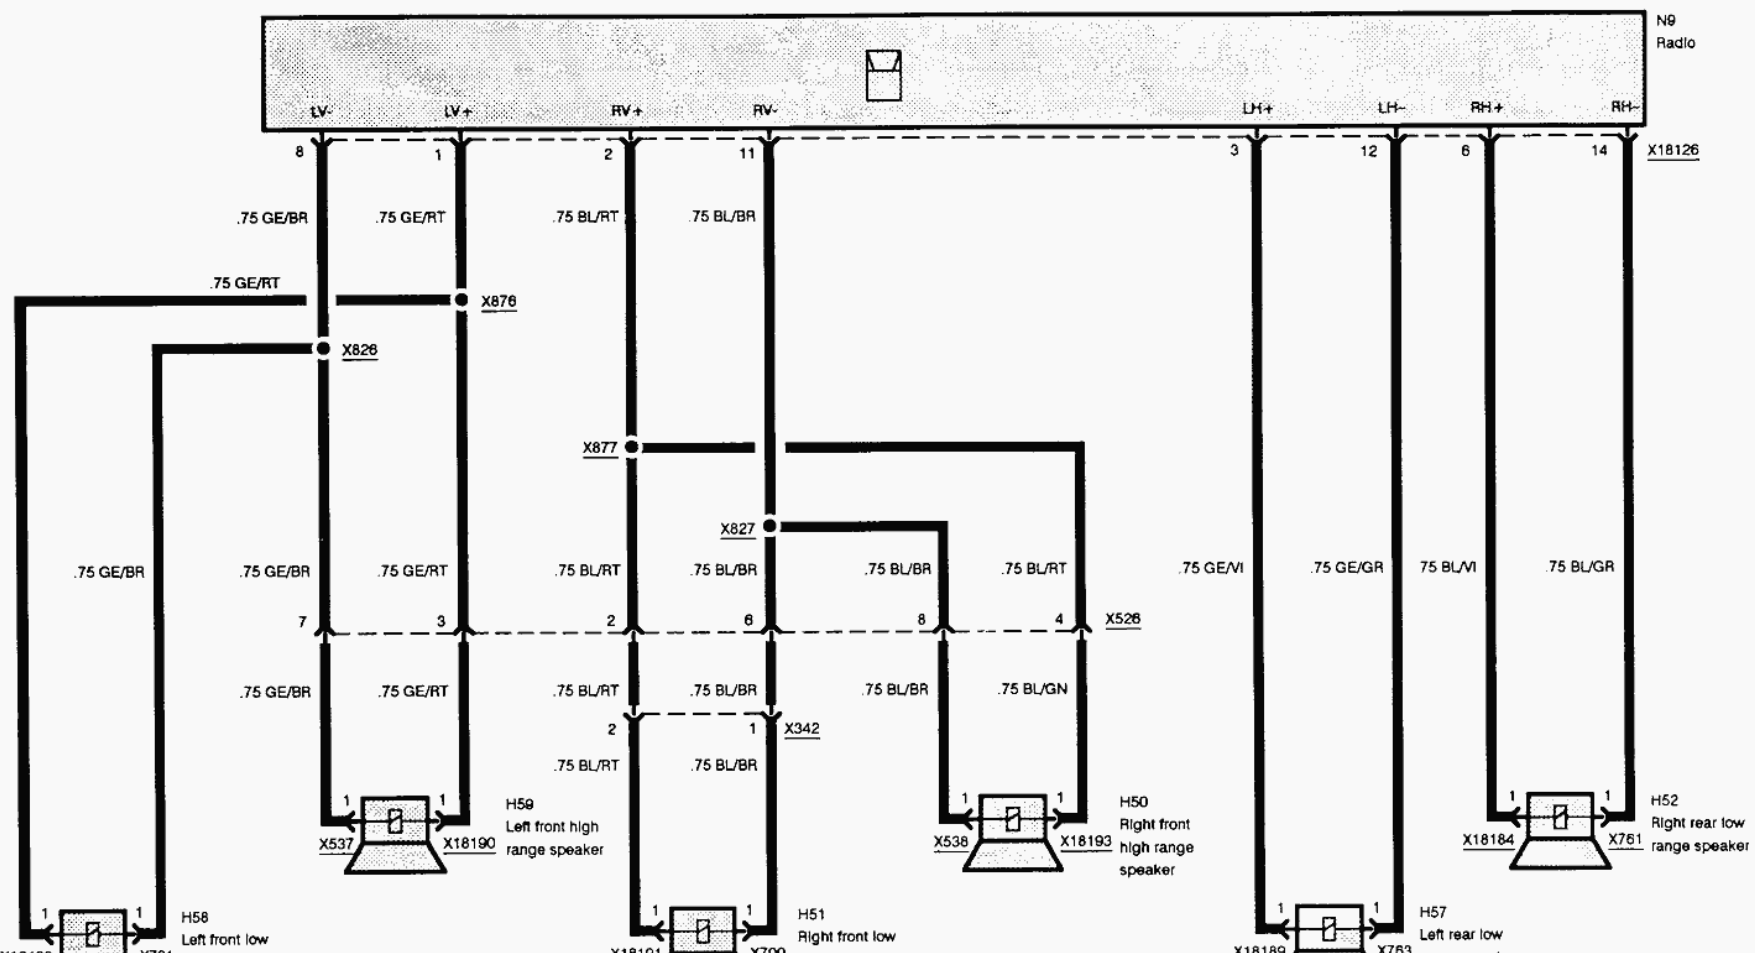

09/93

 6510.0-01



# BMWAG


## Electrical troubleshooting manual

### 5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

#### Licence plate/luggage compartment lights


#### Scheme 6320.0


09/93 ————— 6320.0-00 ————— 1994

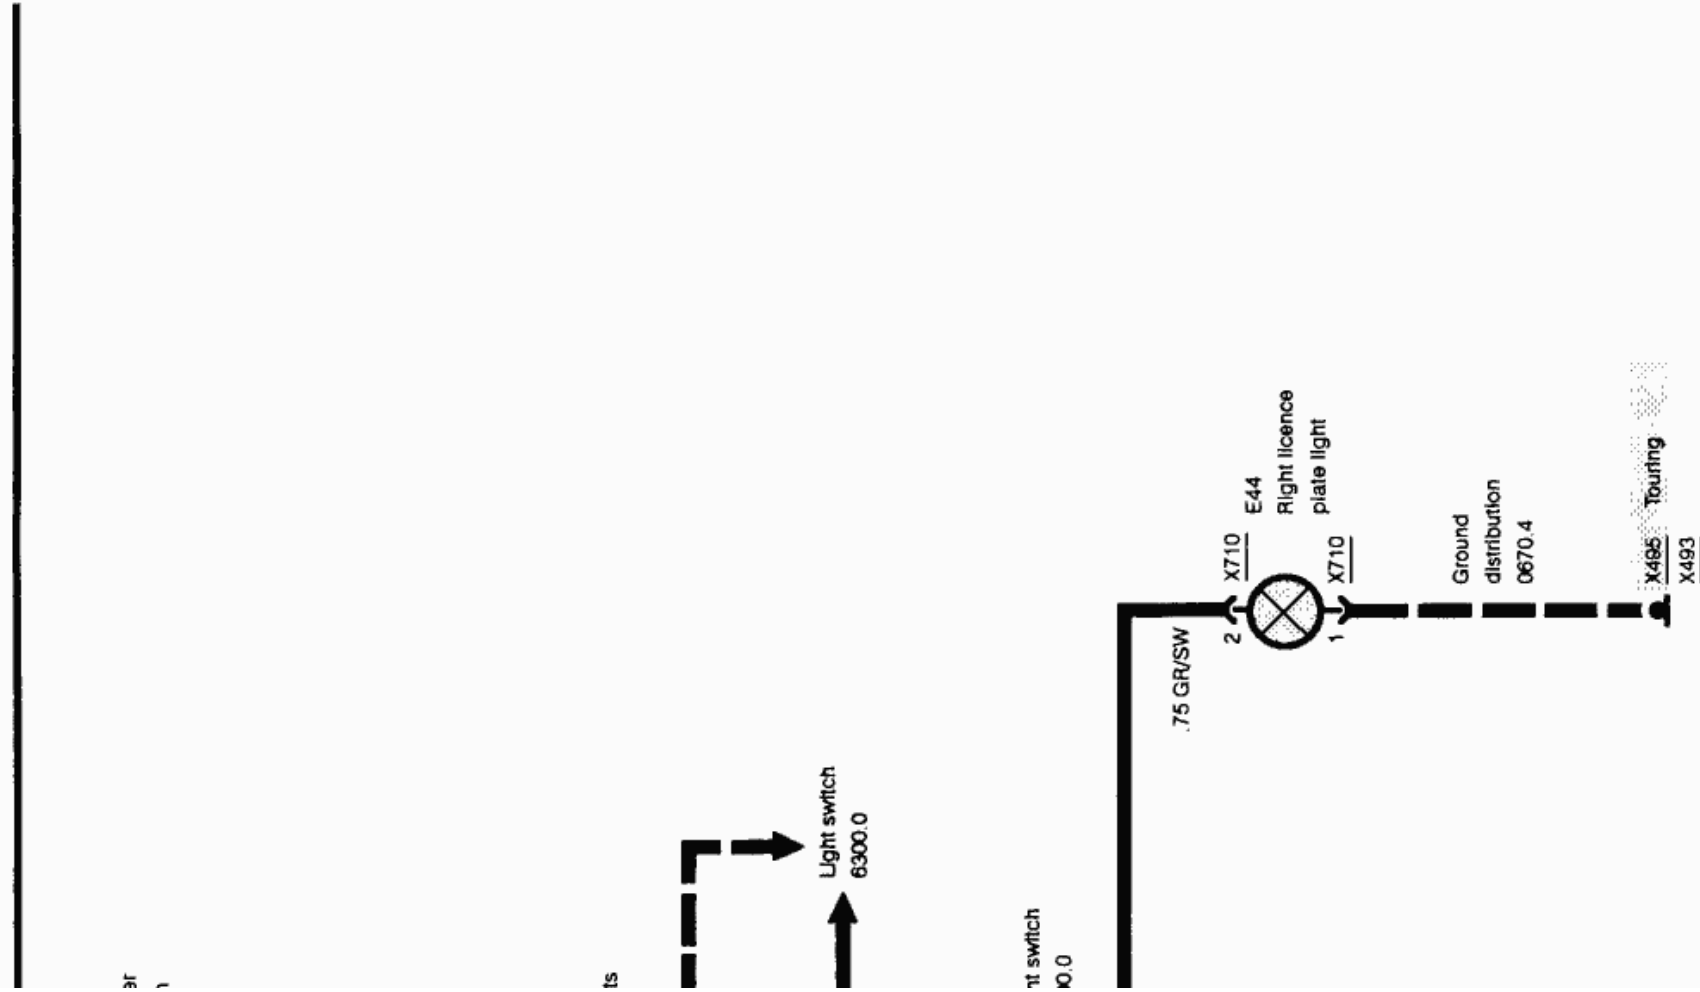

# Licence plate/ luggage compartment lights
 
## Licence plate lights

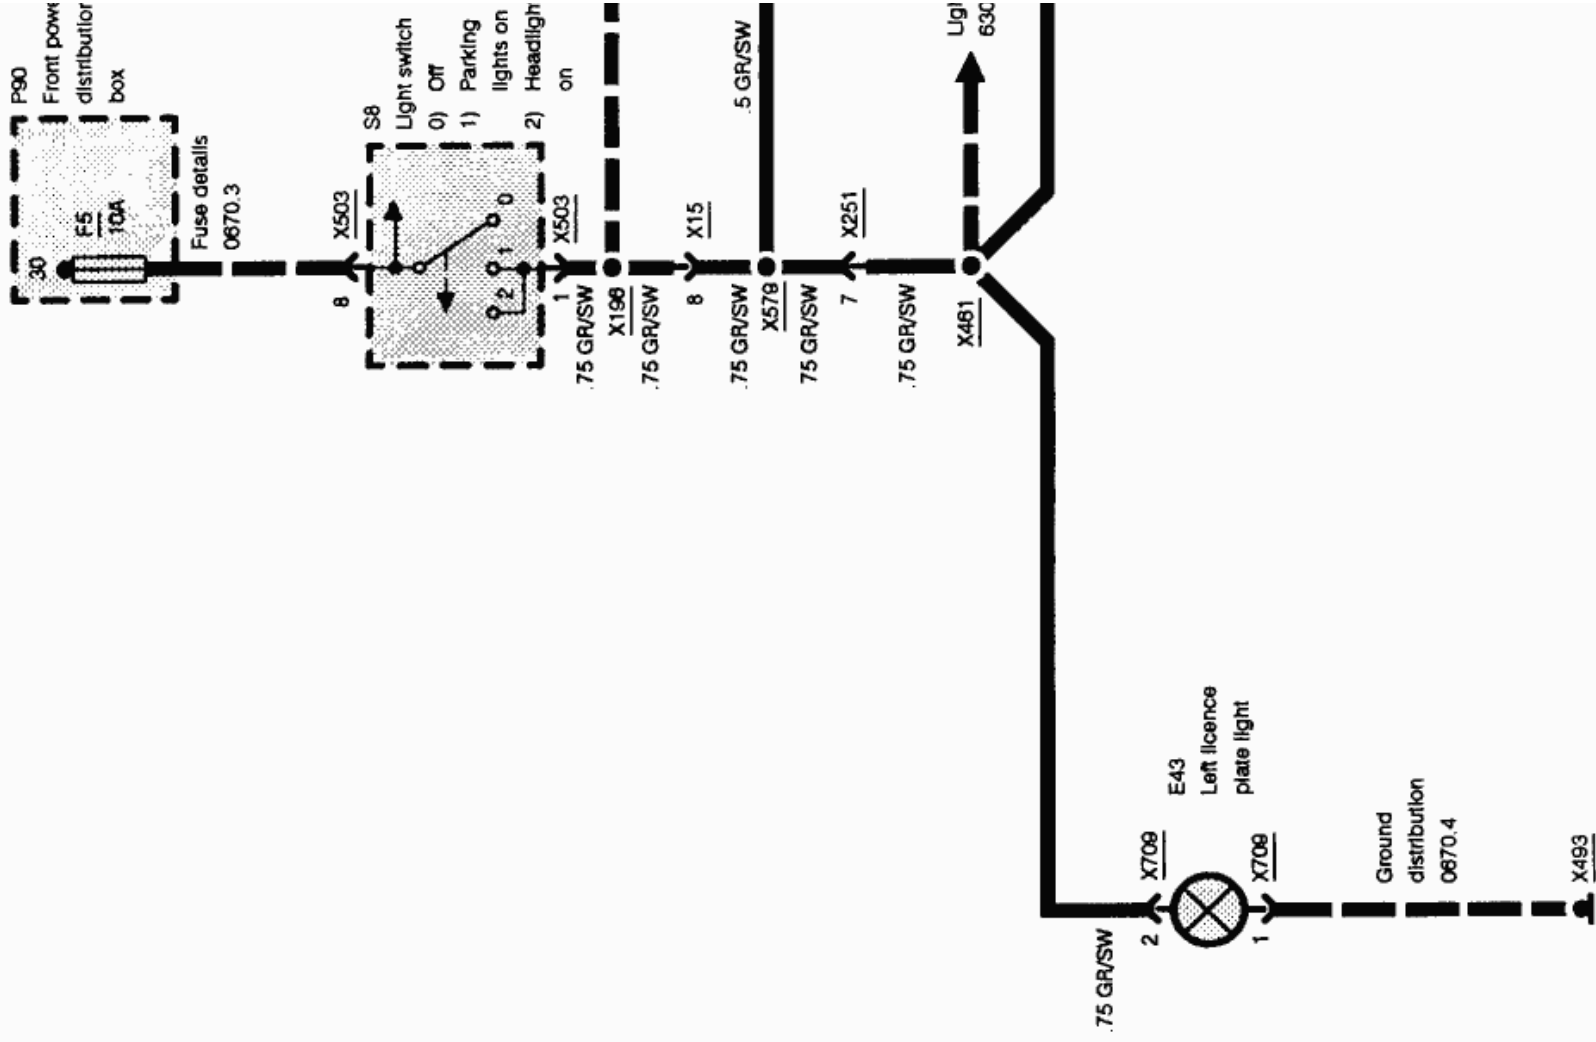





09/93

6320.0-01

1994

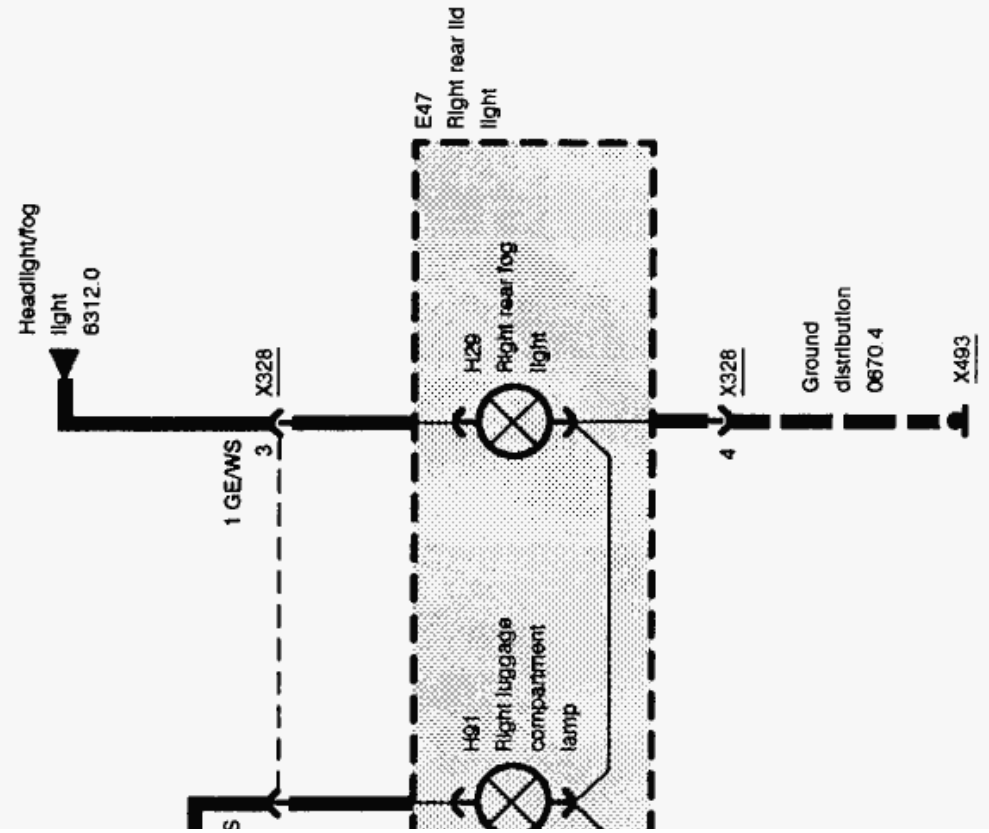

# Licence plate/ luggage compartment lights

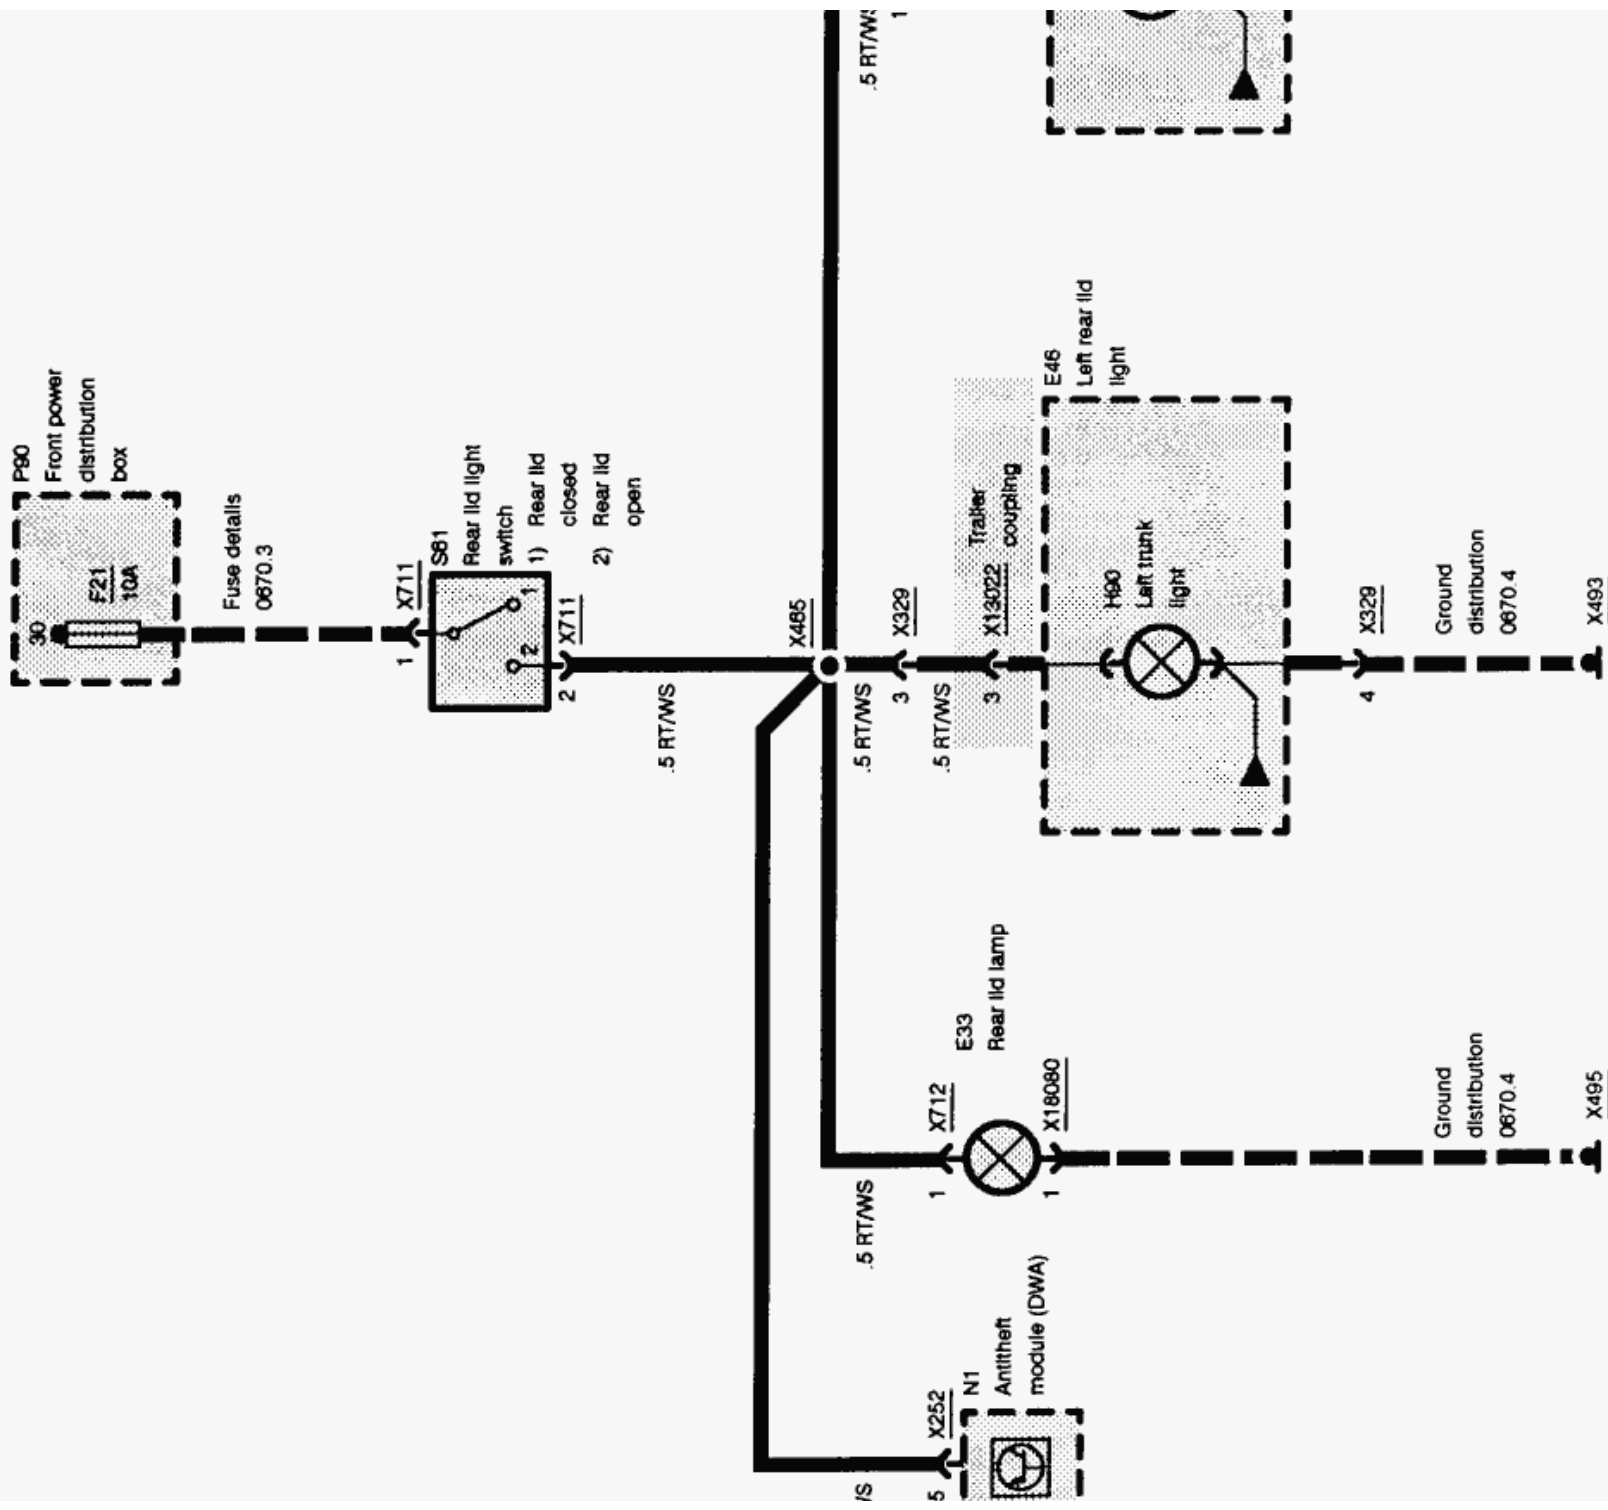



.5 RT/M


# Touring

09/93

6320.0-02


1994

with anti theft system (DWA)

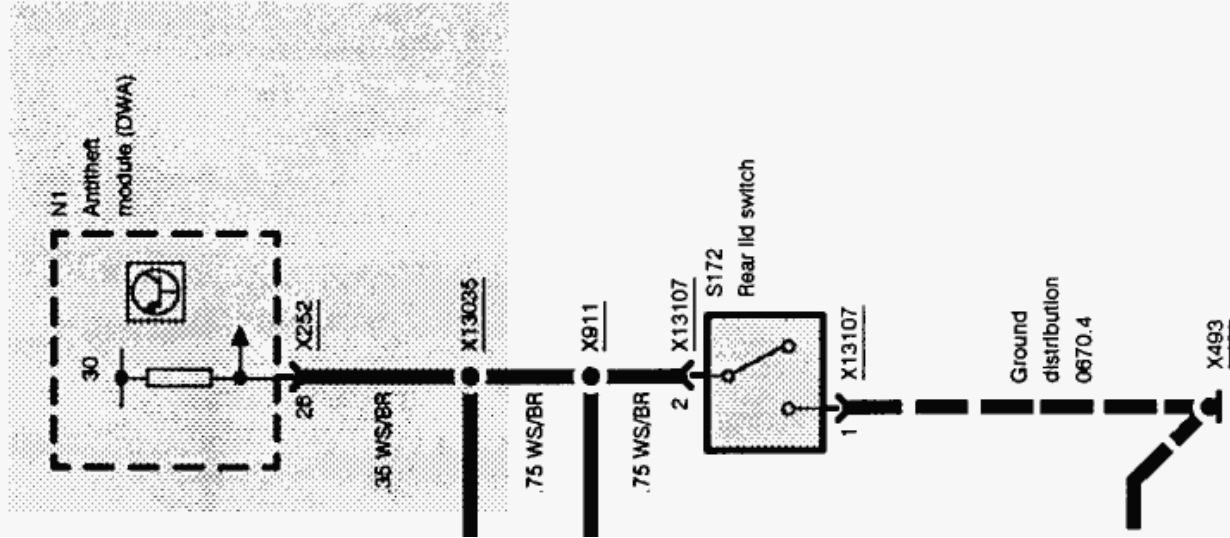

# Licence plate/ luggage compartment lights

## Luggage compartment lights

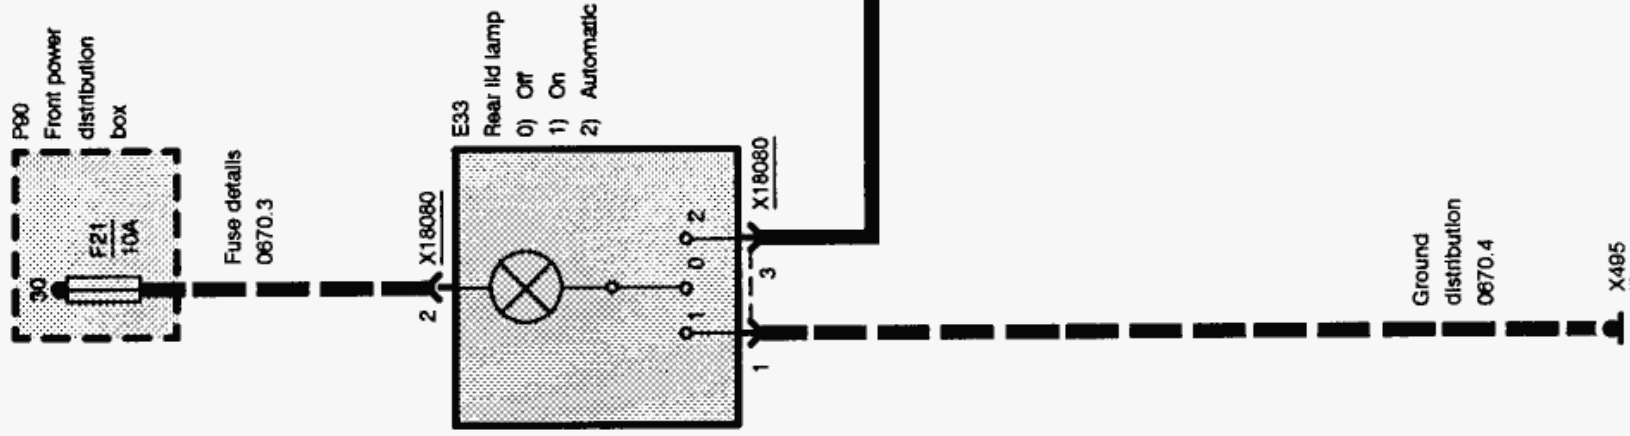





**BMWAG**


Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


Park/tail/underhood lights

Scheme 6314.0

09/93 ————— 6314.0-00 ————— 1994

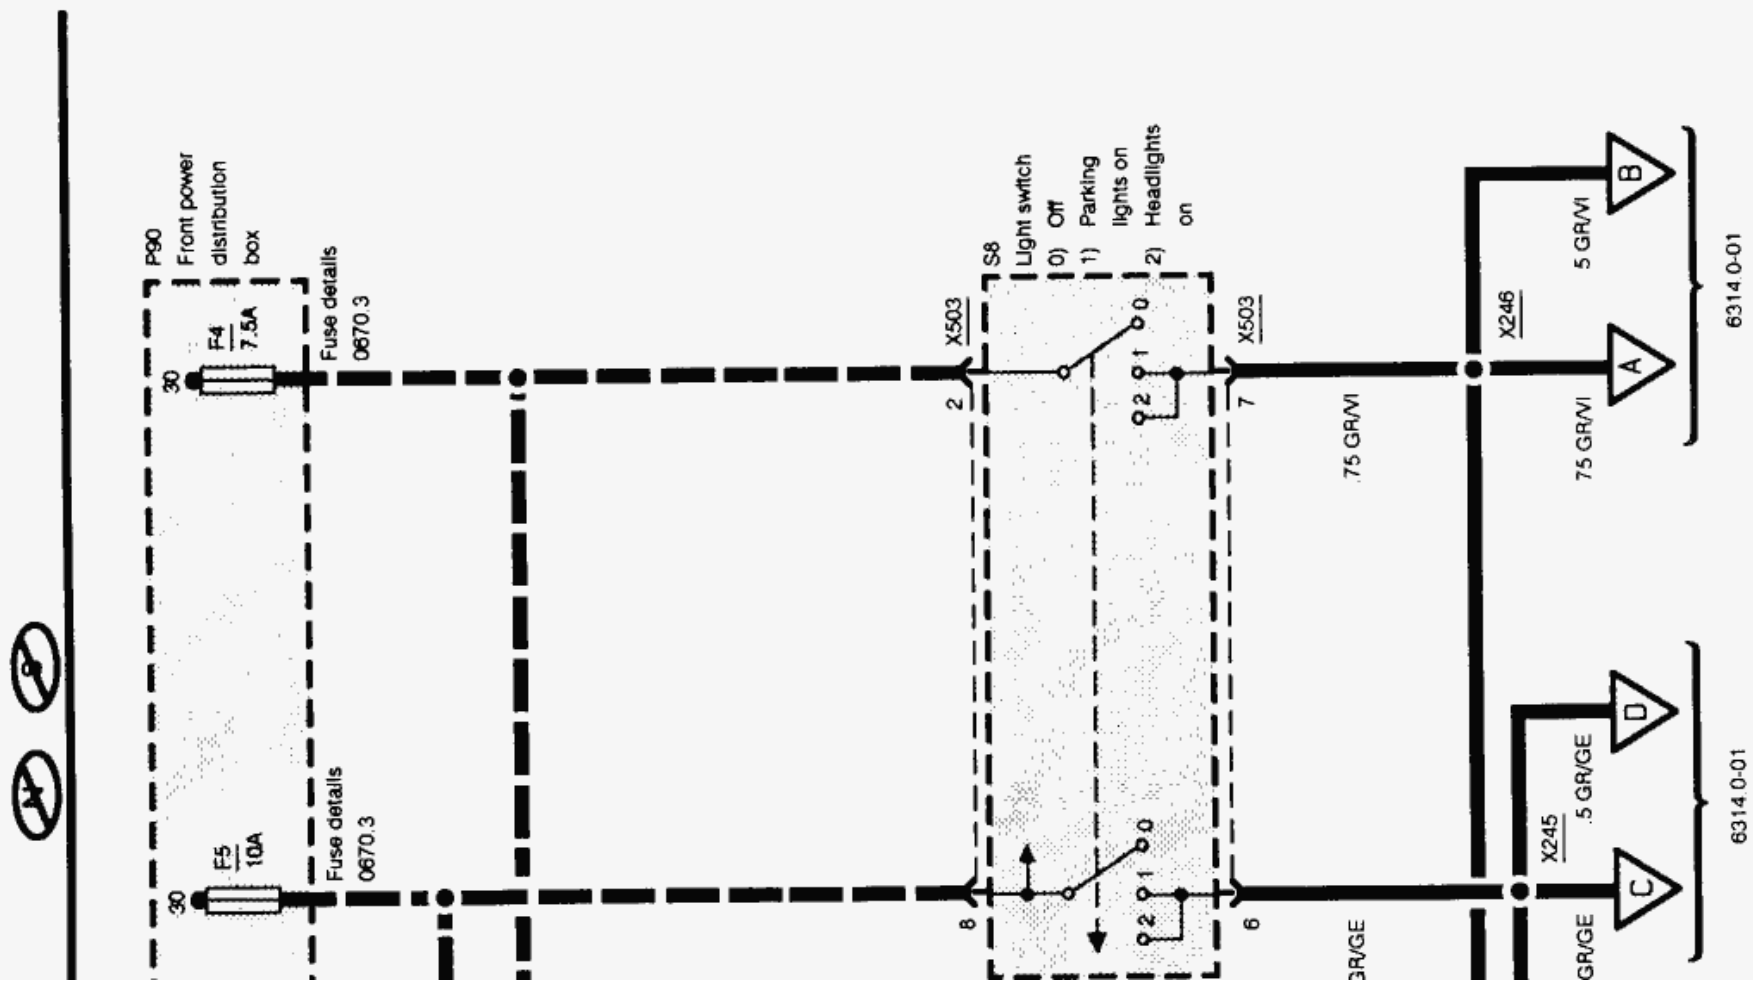

# Park/tail/ underhood lights

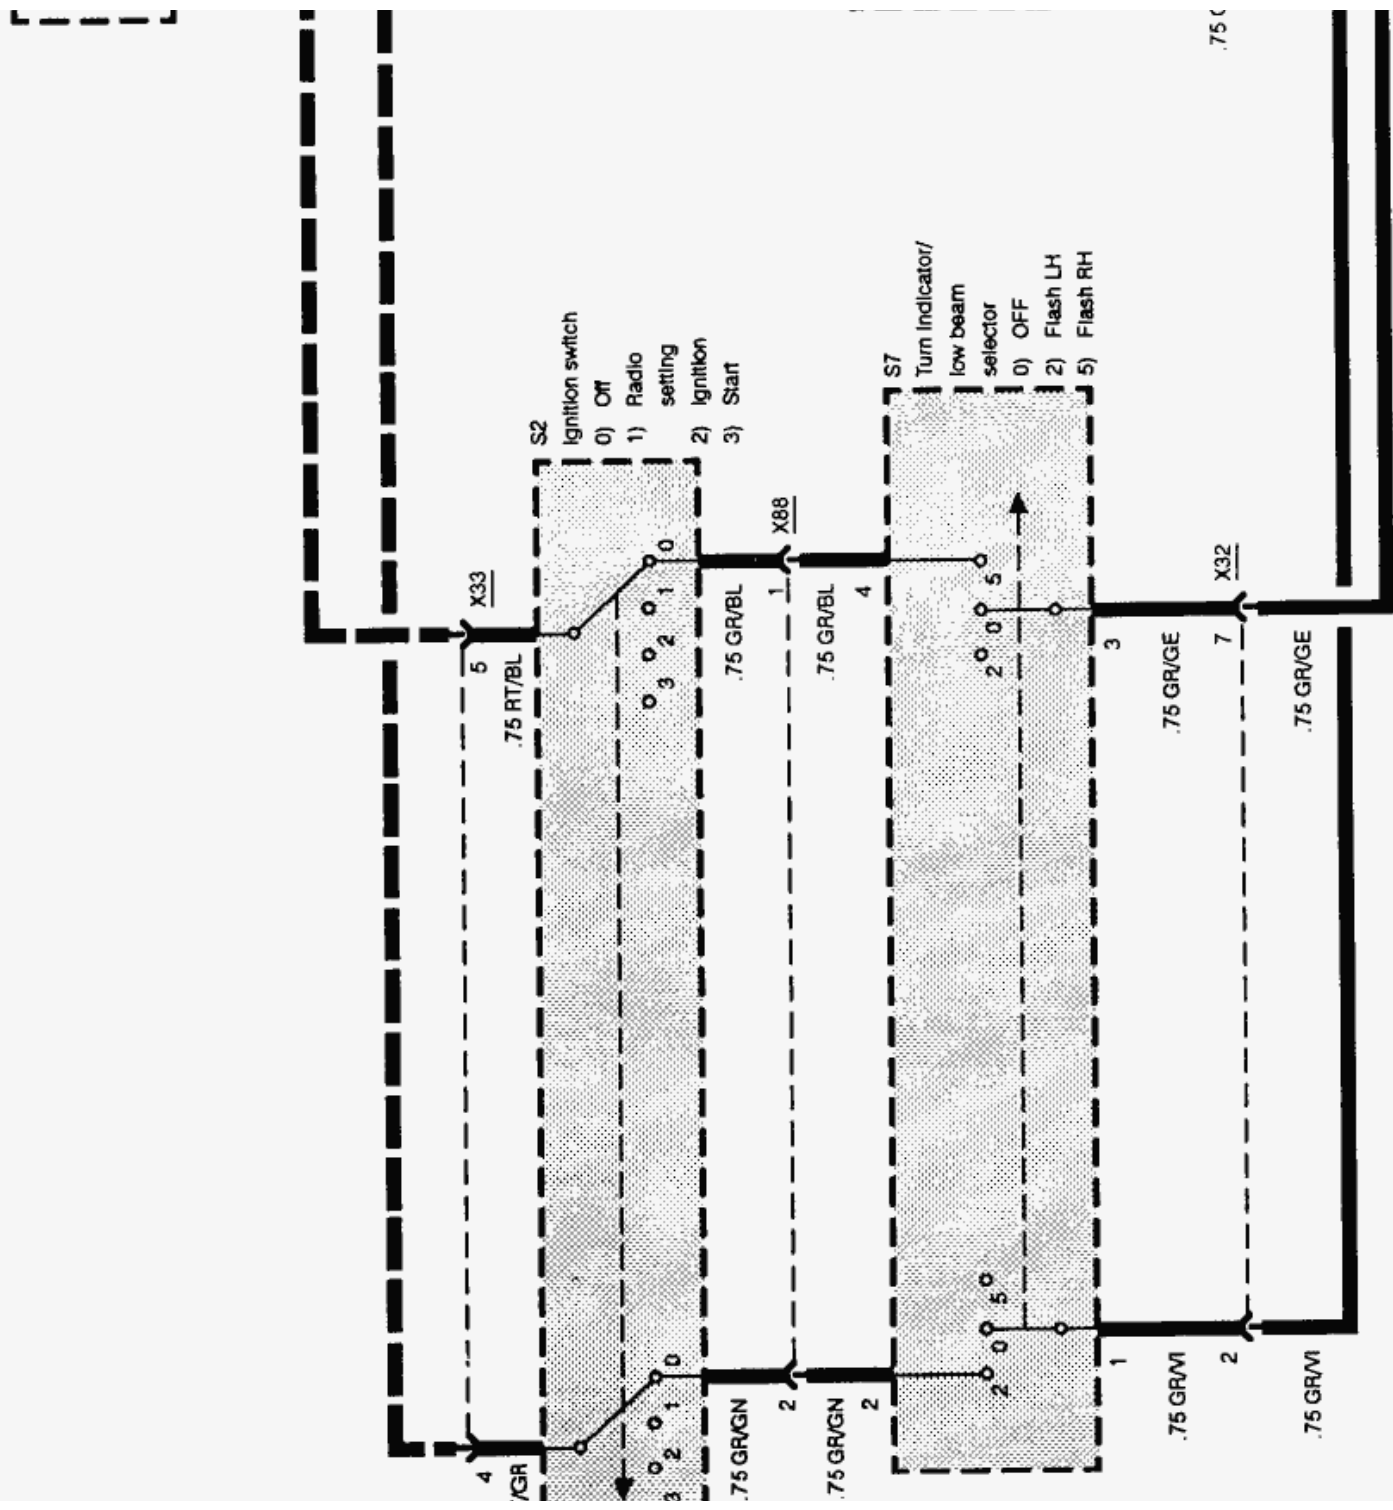

.75 C


75



09/93


6314.0-01

1994

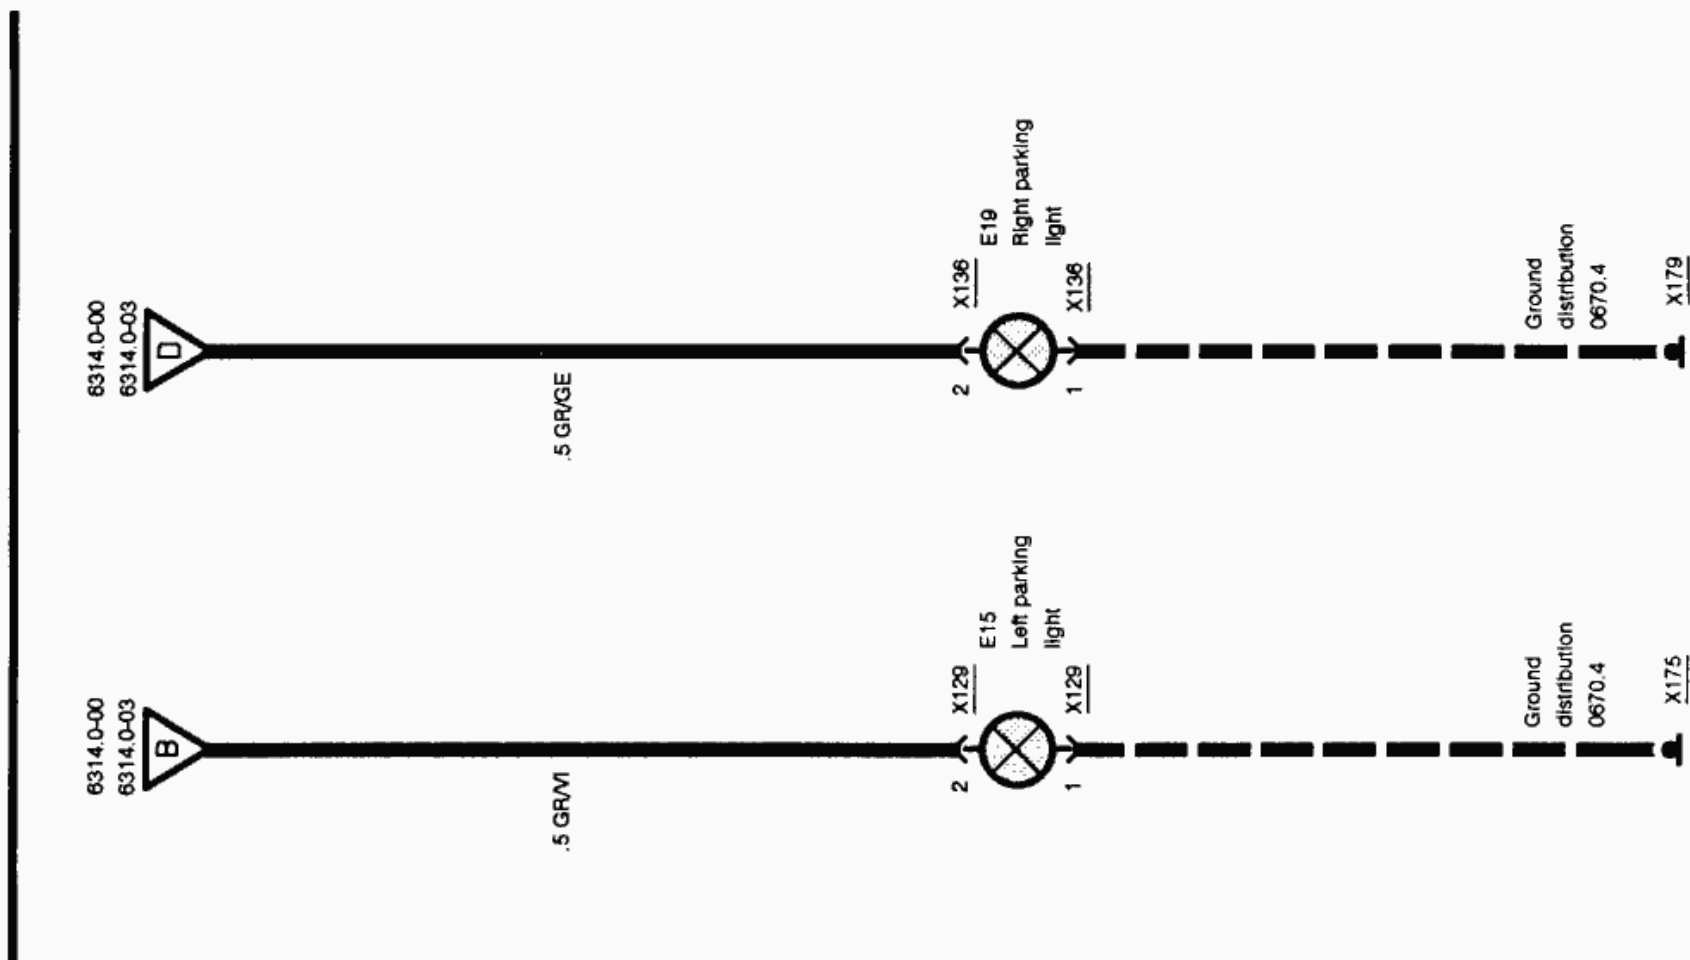

# Park/tail/ underhood lights

## Parking light/tail light

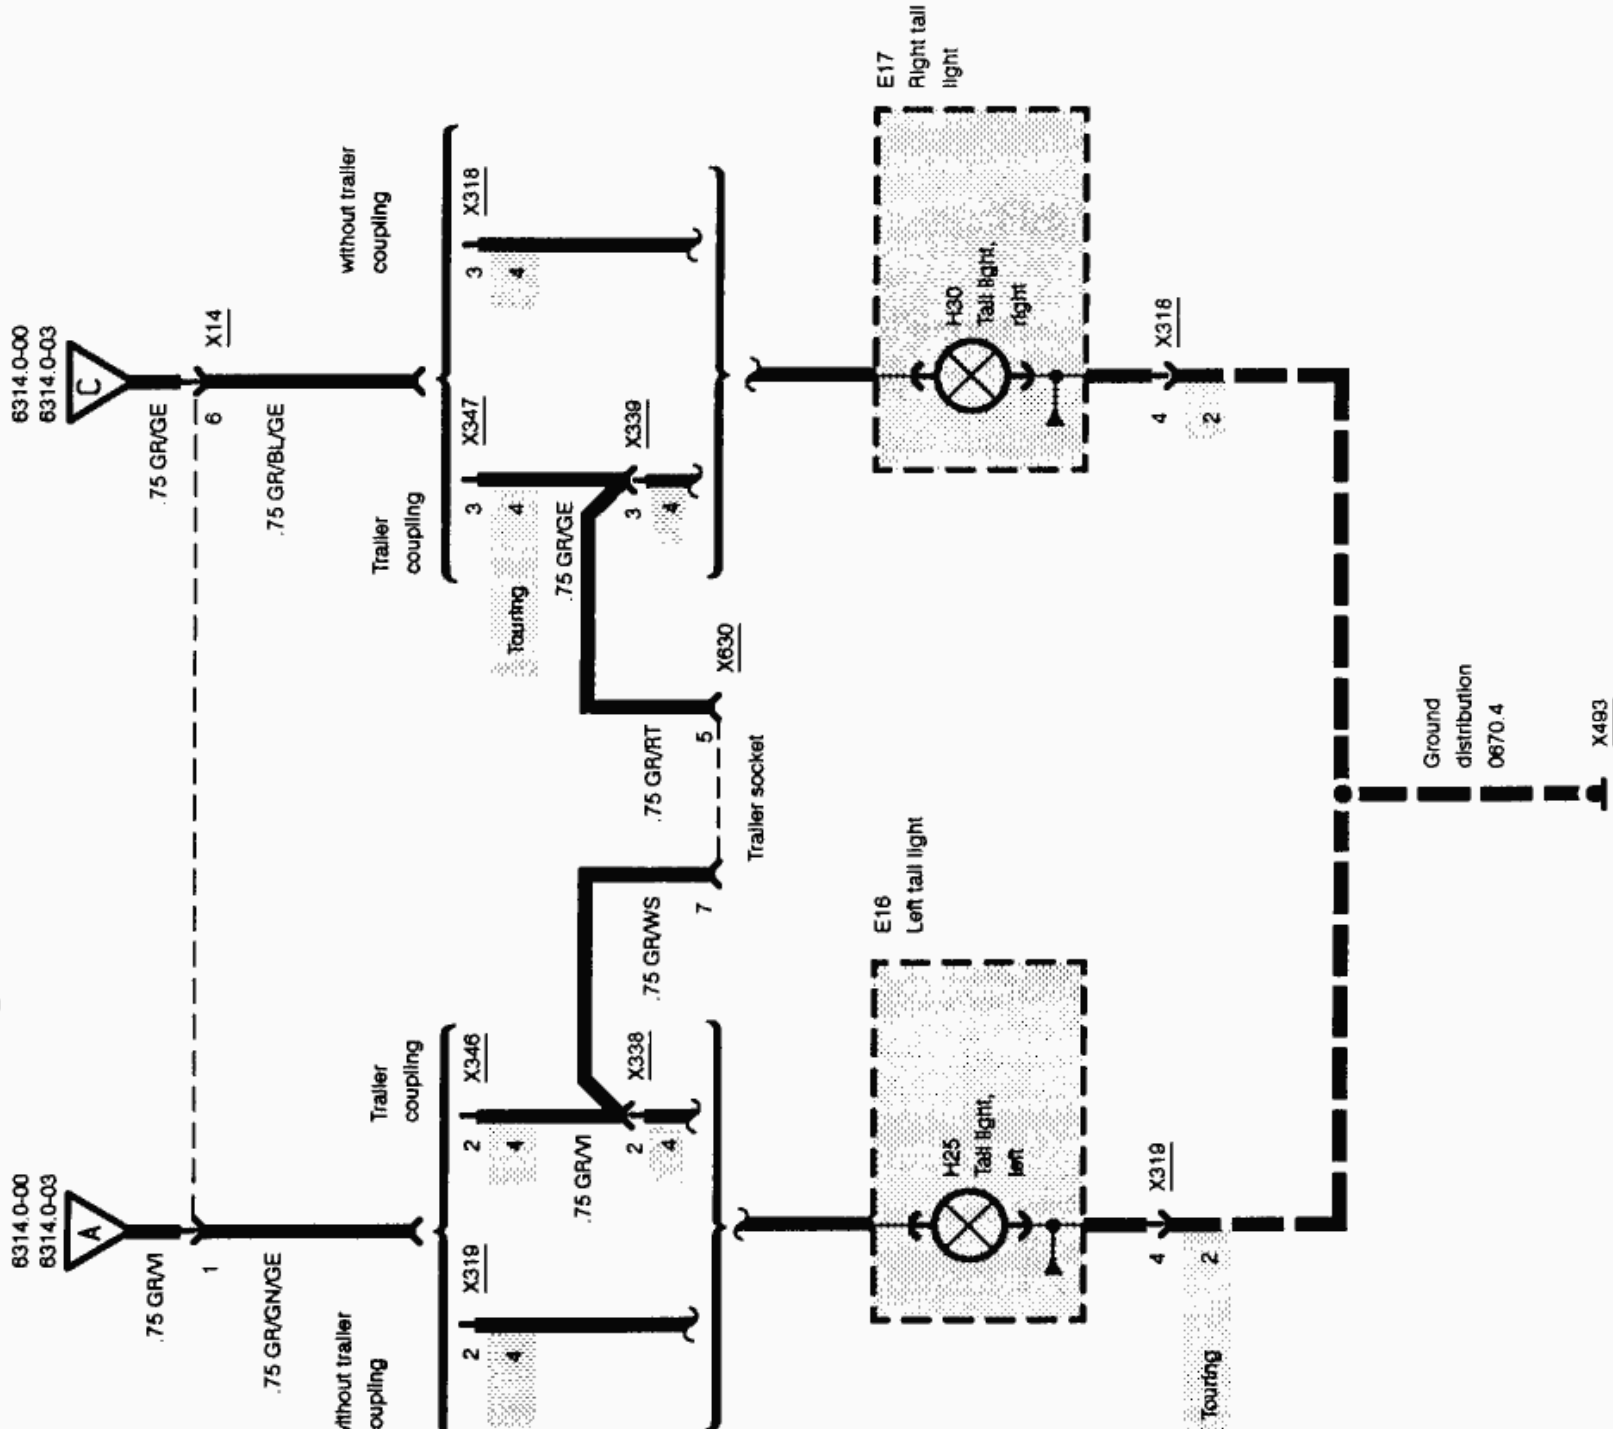




Touring

09/93


6314.0-02

1994

N S

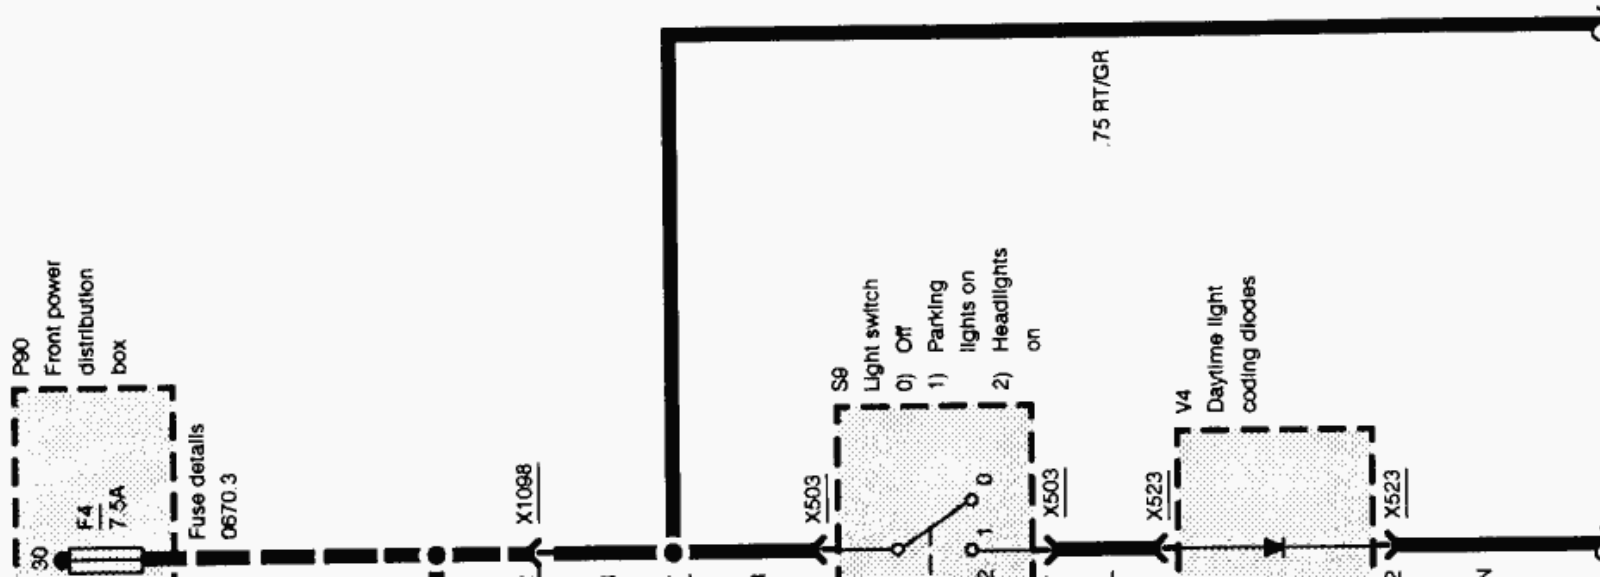


# Park/tail/ underhood lights

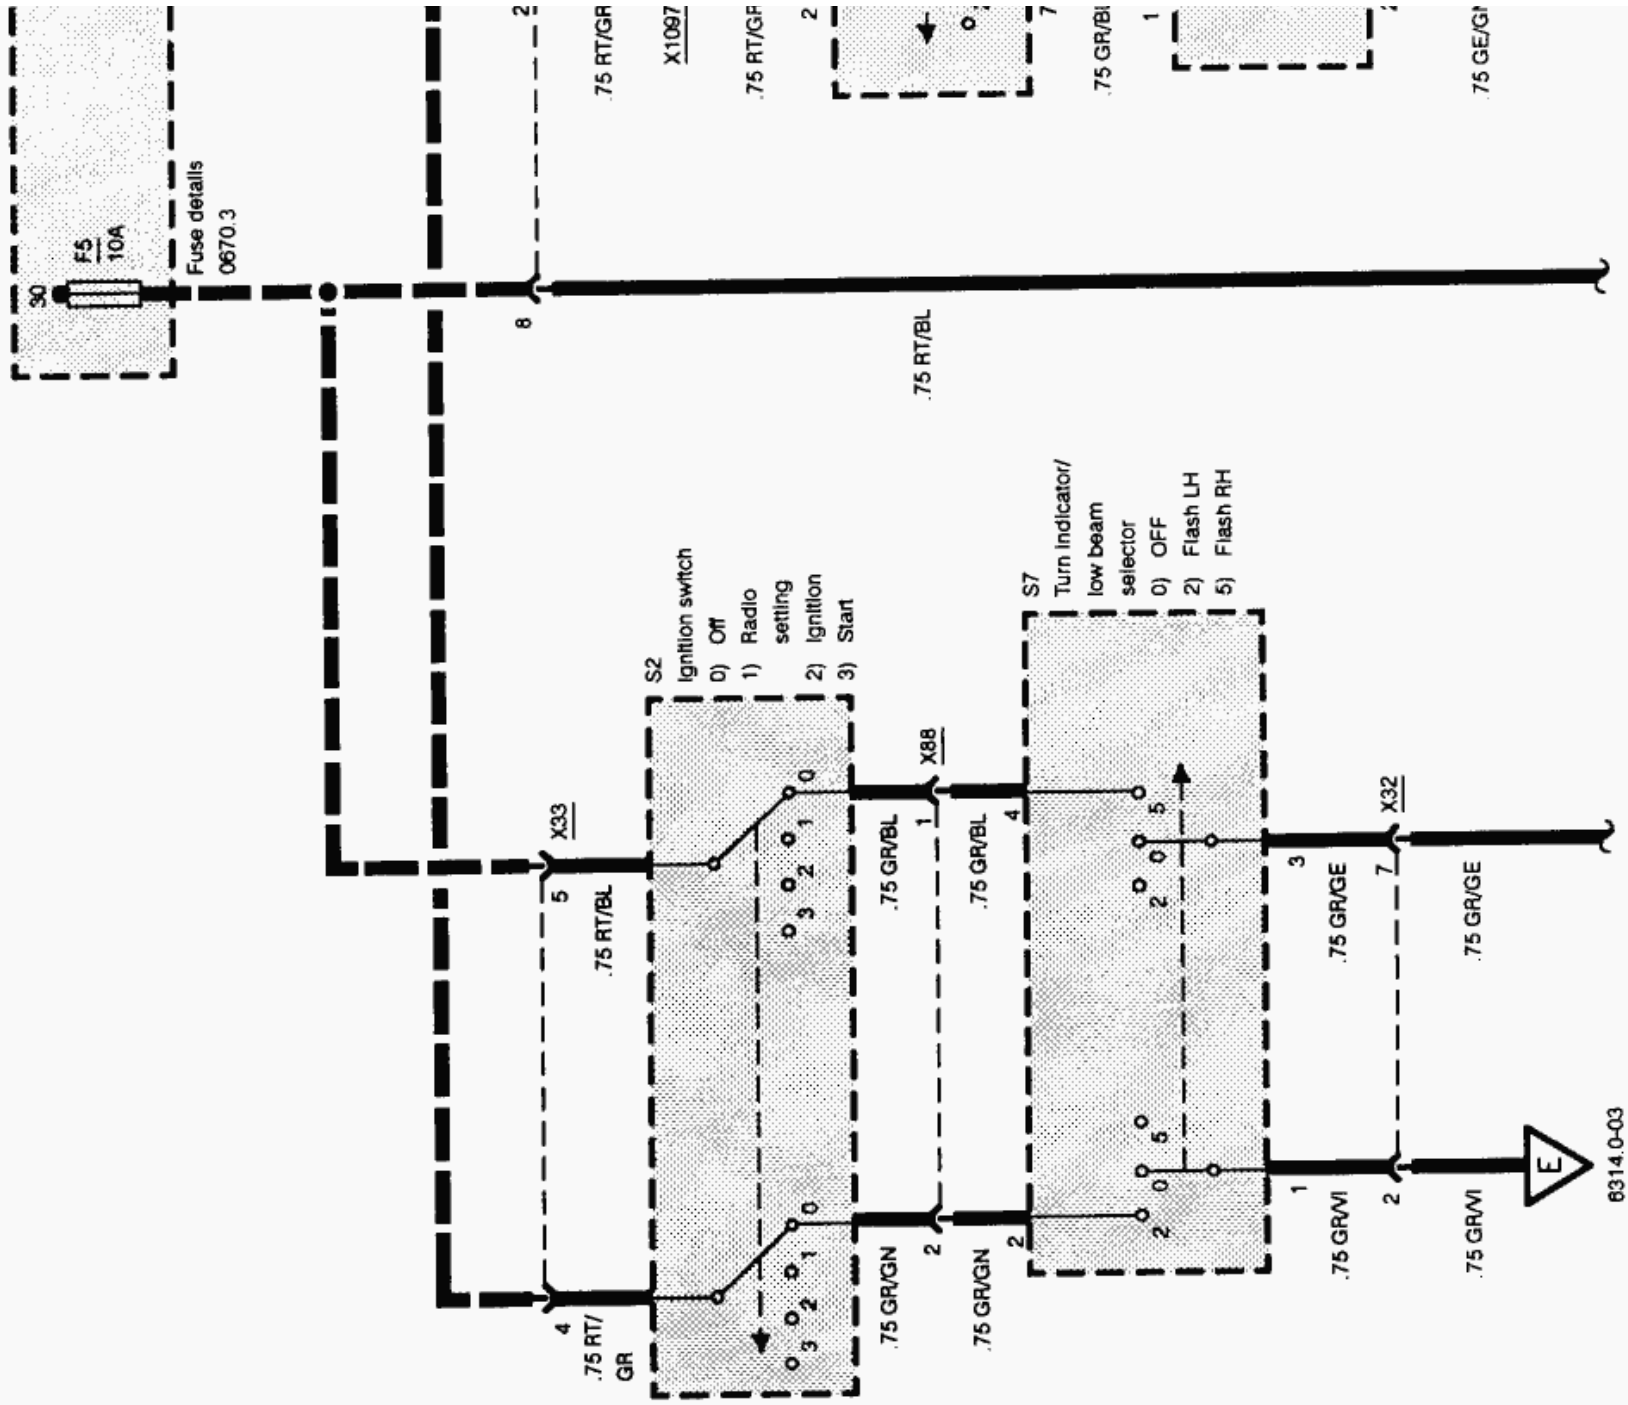




(N) (S)

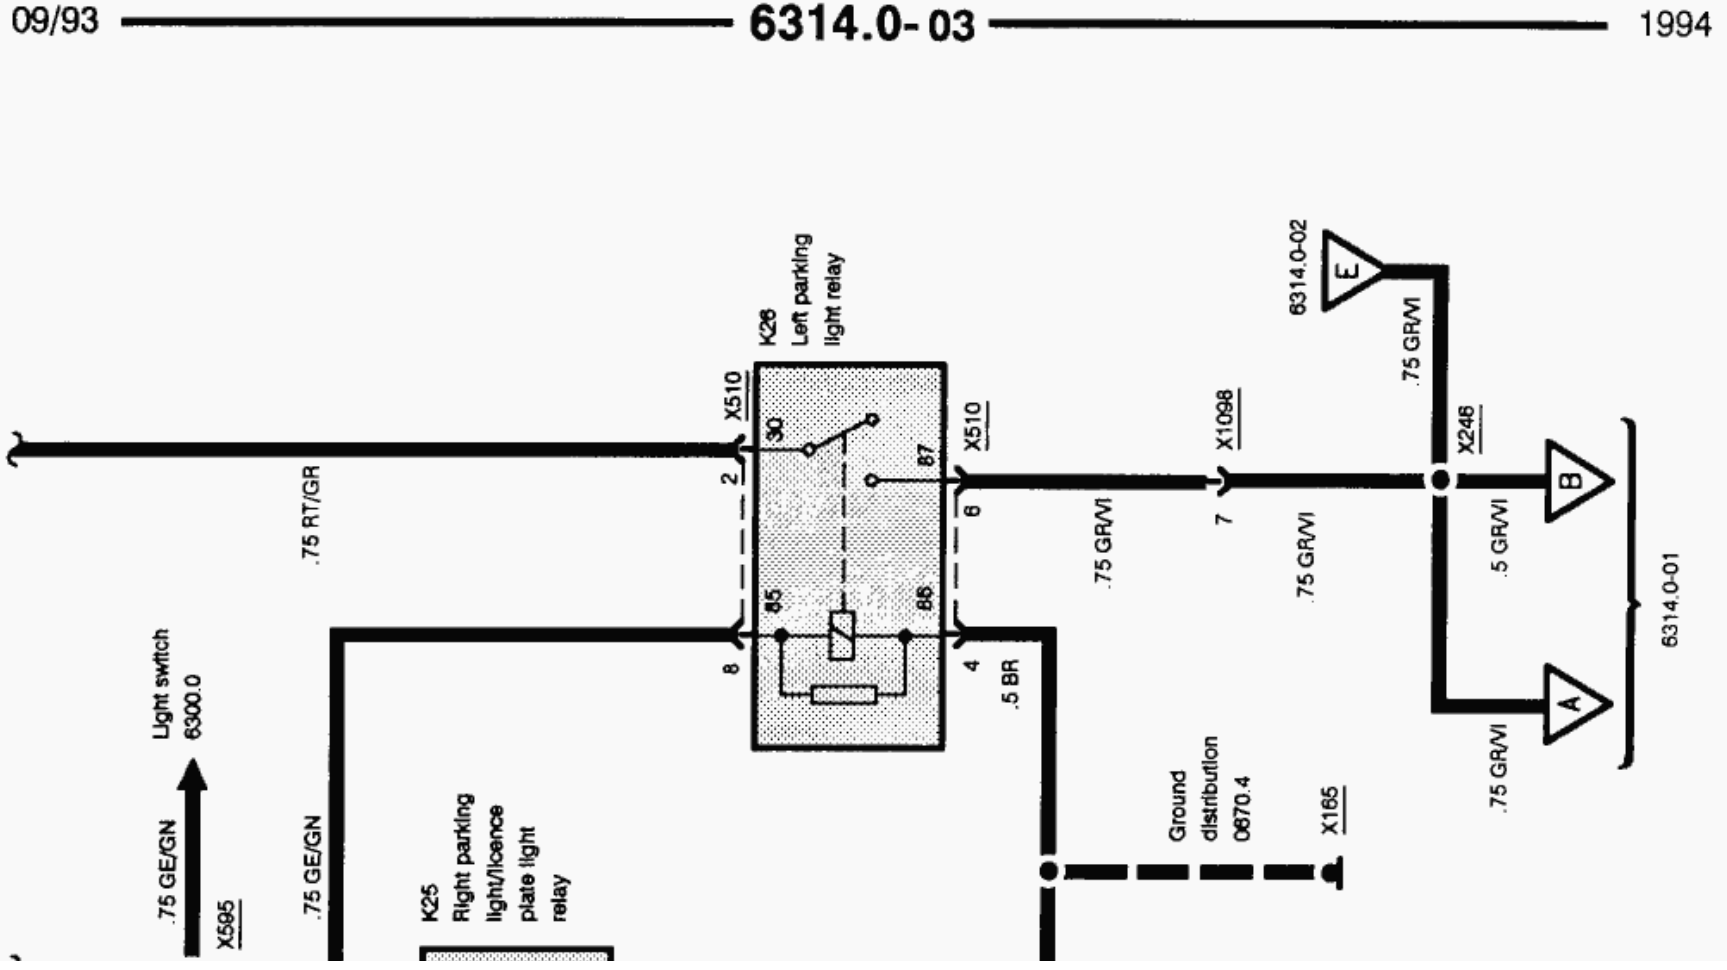



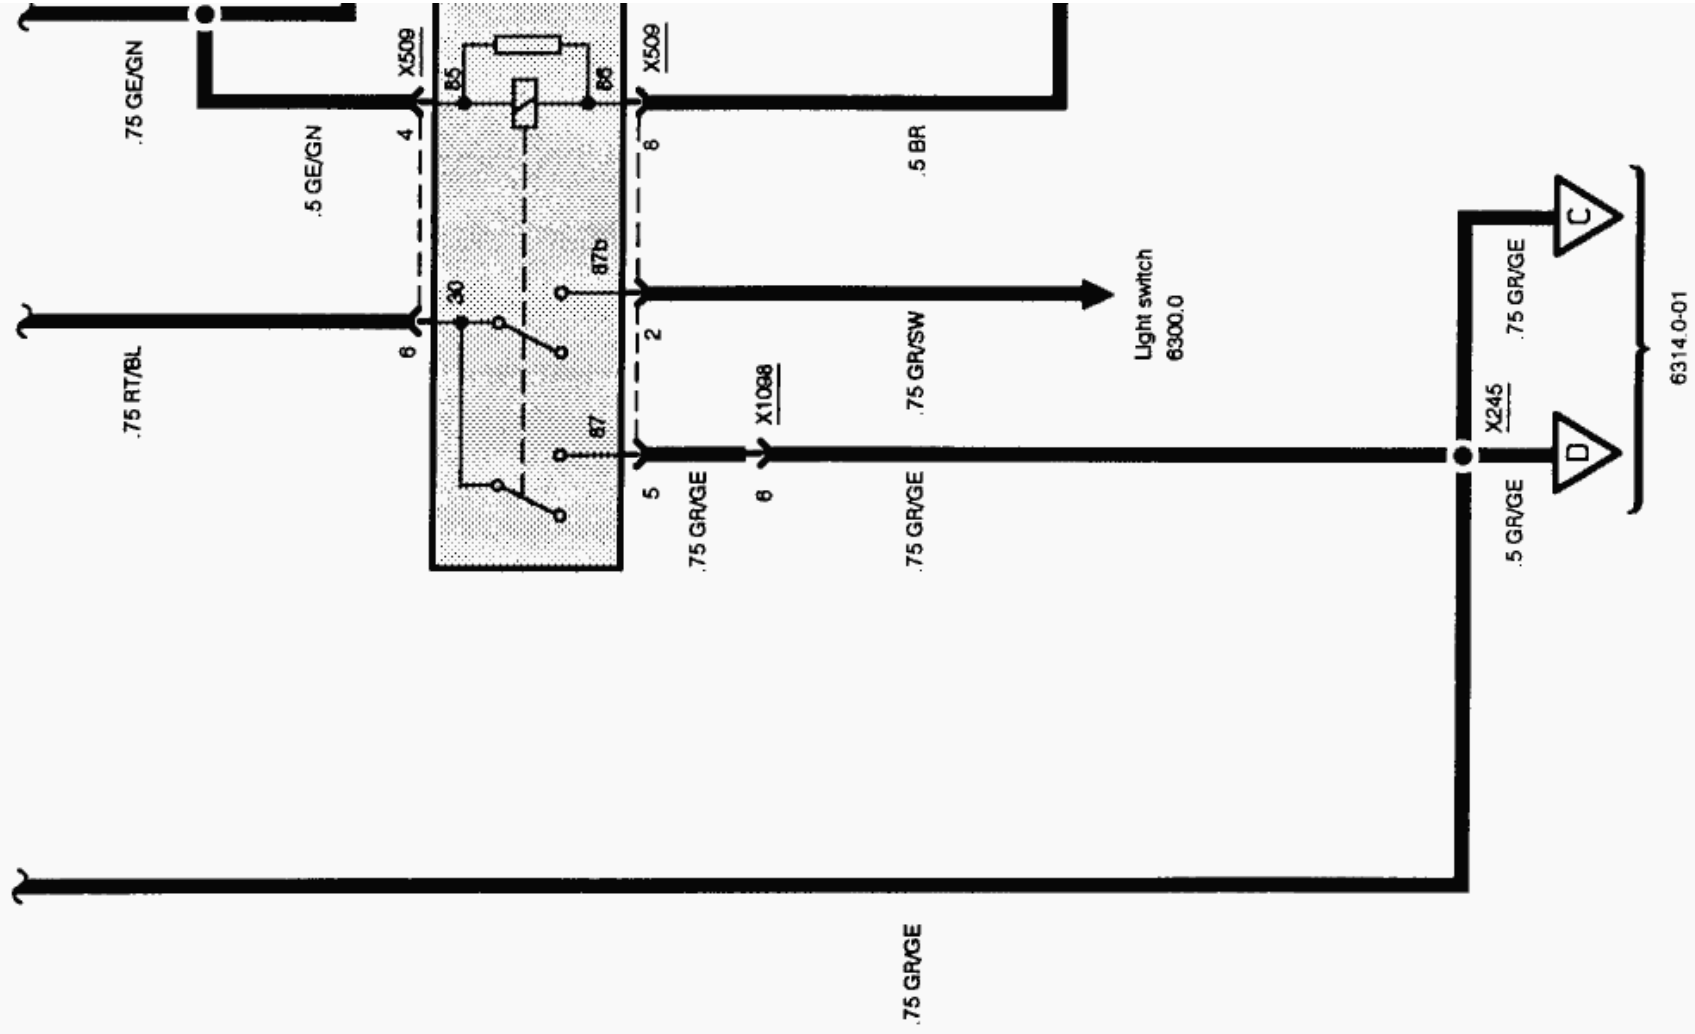



### BMWAG

#### Electrical troubleshooting manual


#### 5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

#### Reversing lights Scheme 6322.0

09/93


6322.0-00

1994

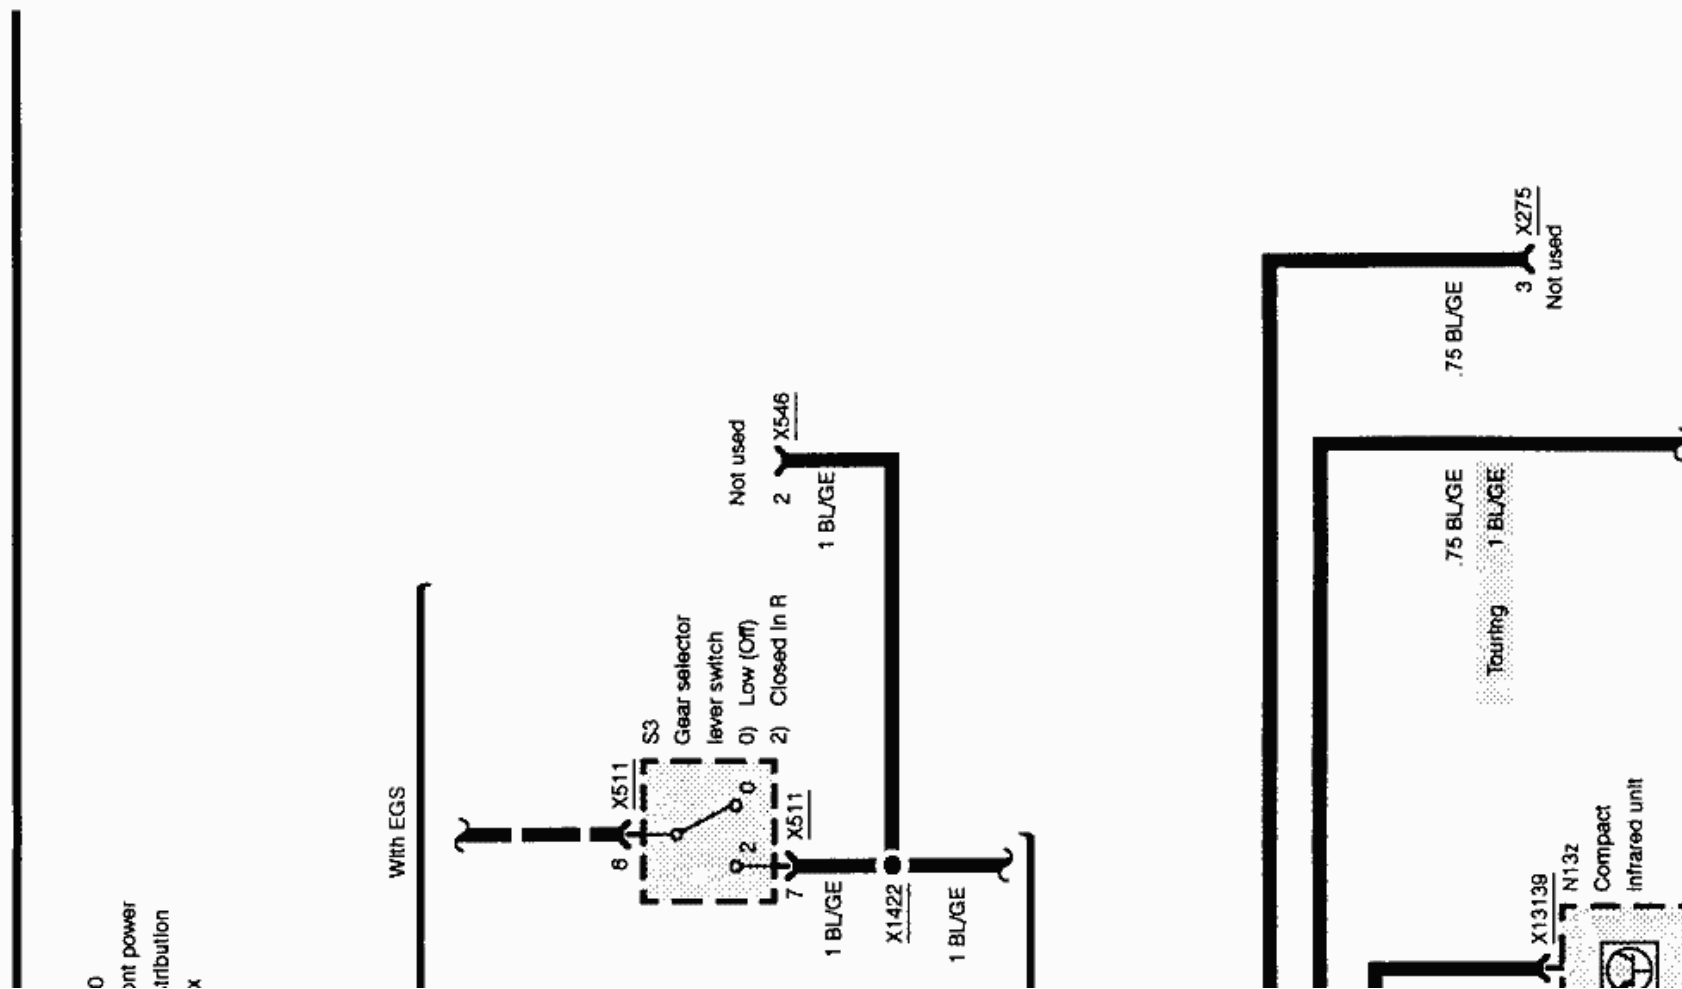



# Reversing lights

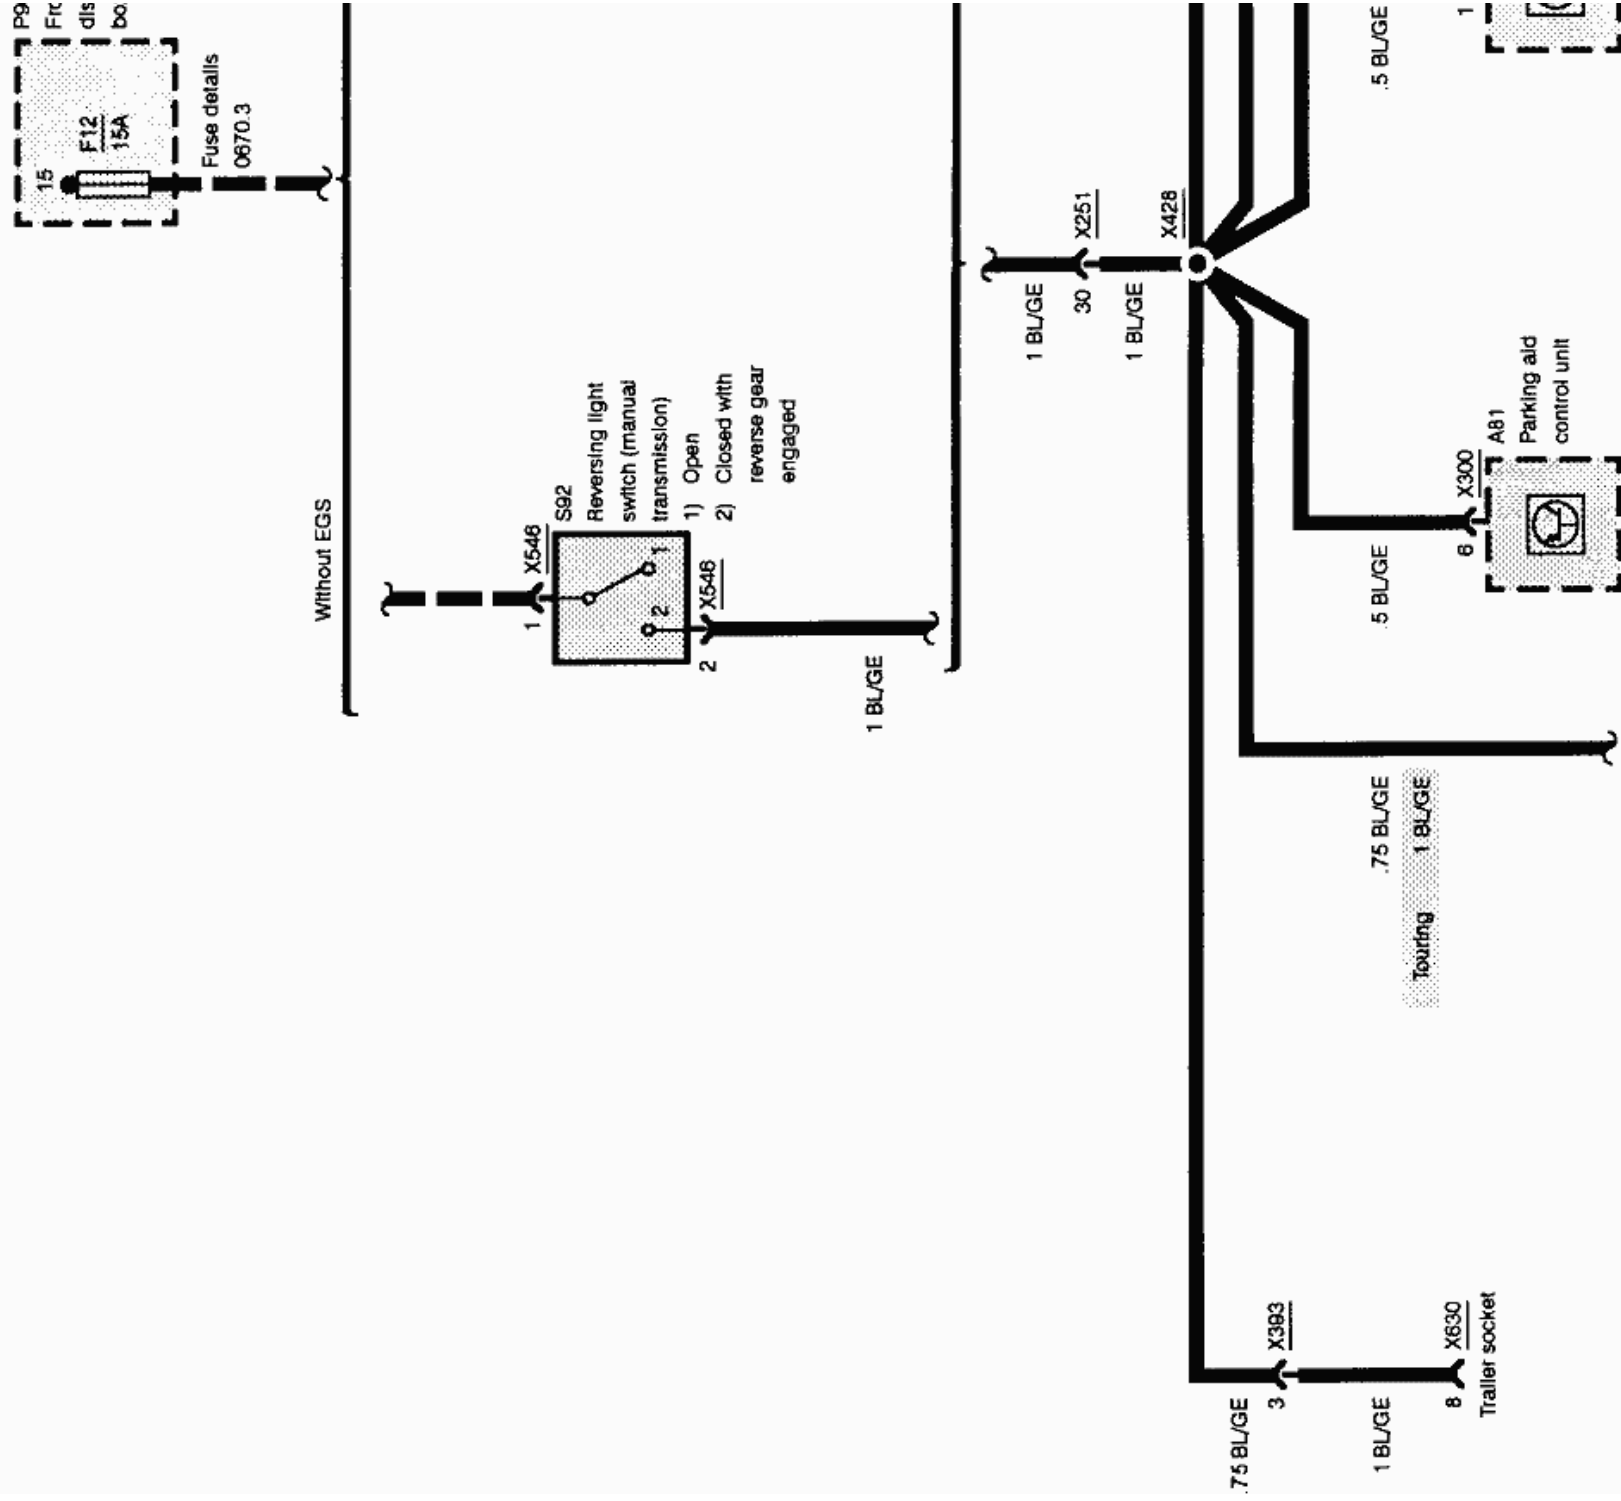




09/93


6322.0-01

1994

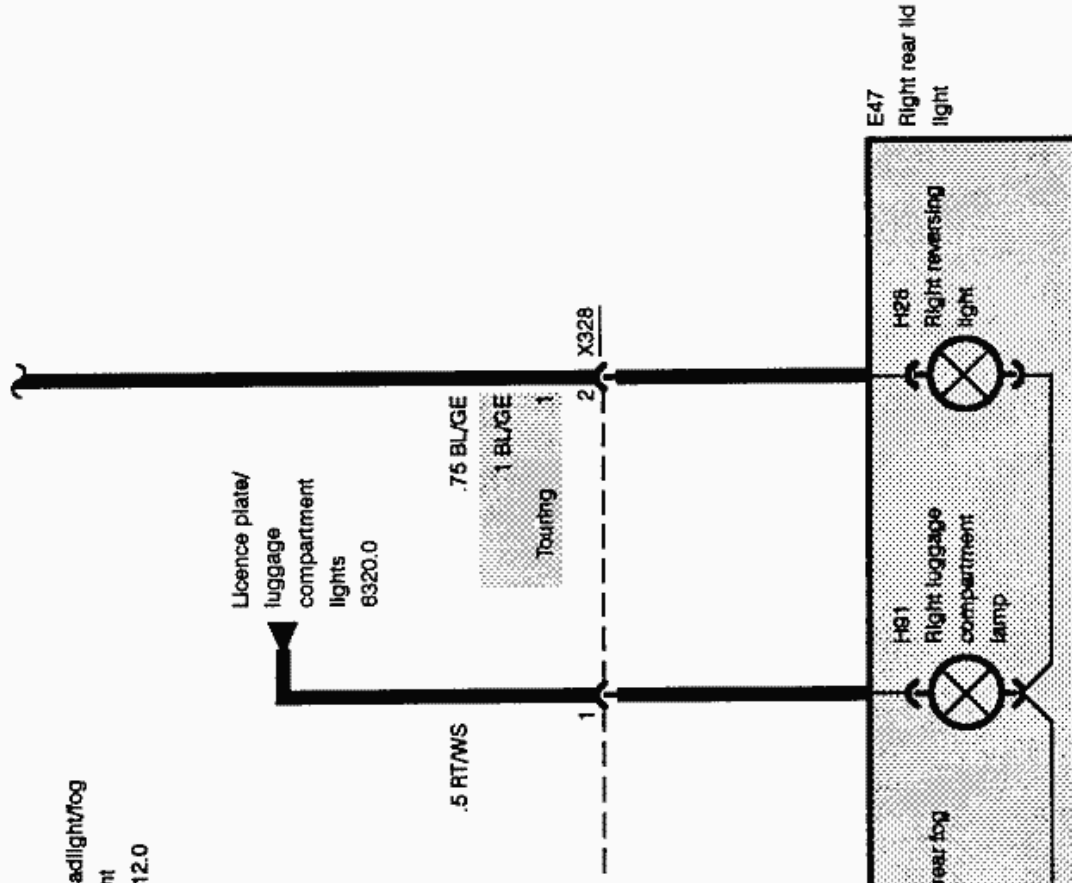

lion

Touring

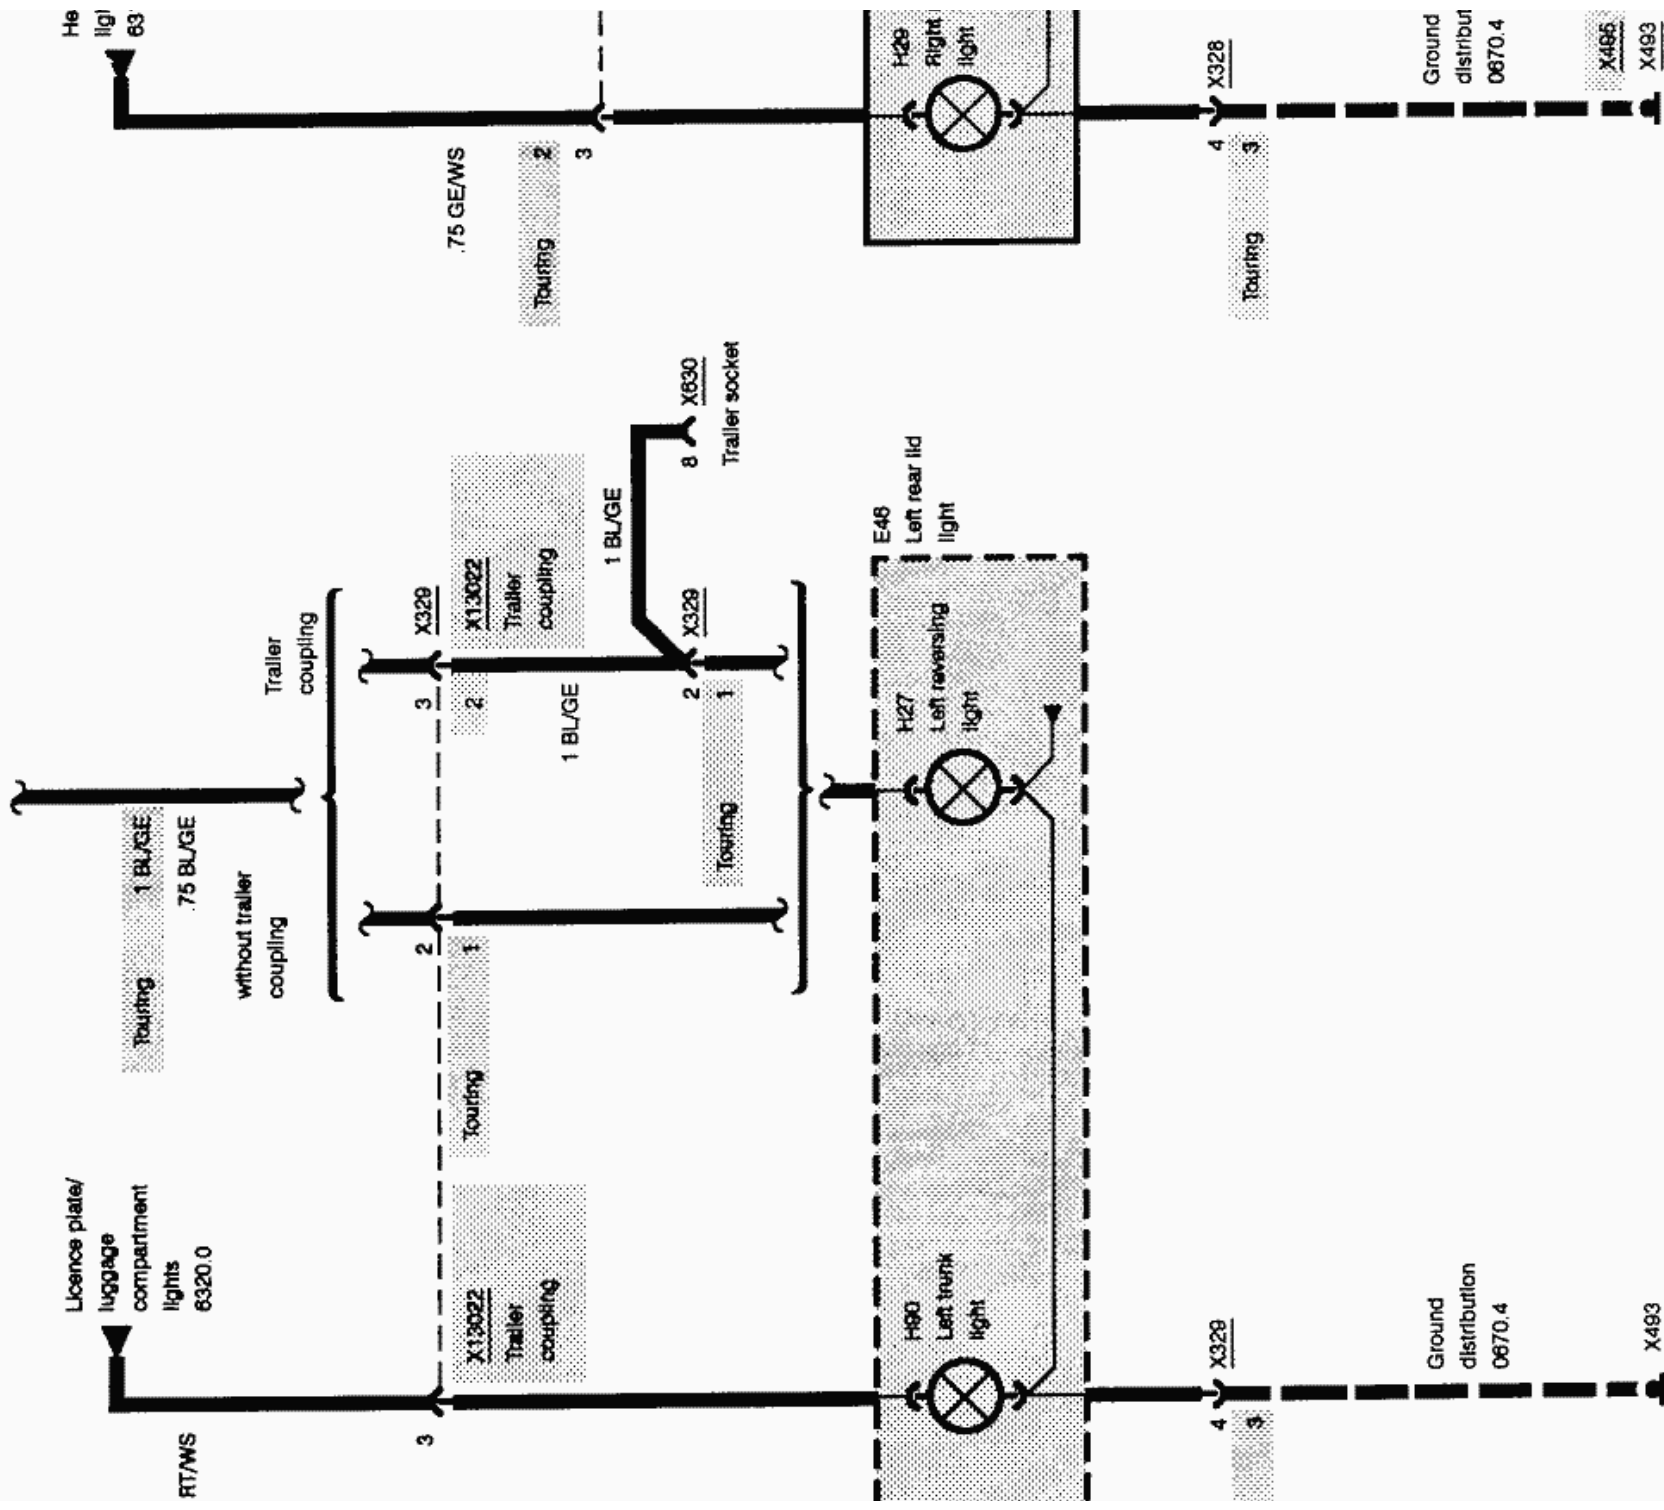



5



Quinn

**BMWAG**


Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Windscreen washer Jet heaters

Scheme 6169.0


09/93 ————— **6169.0-00** ————— 1994

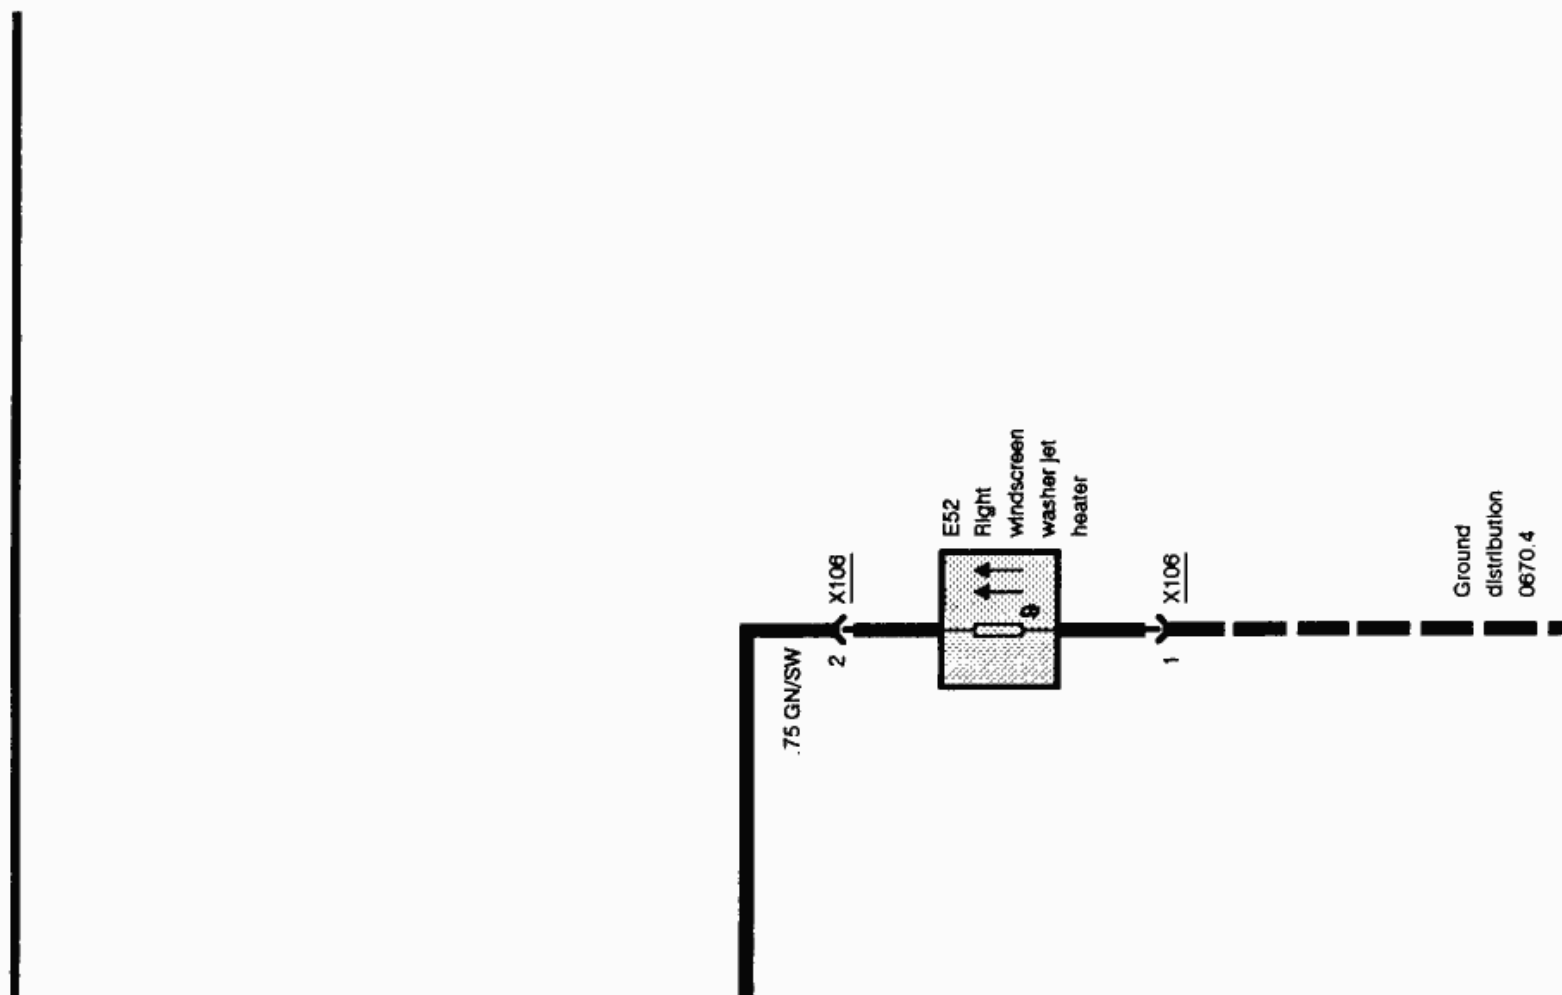





# Windscreen washer jet heaters

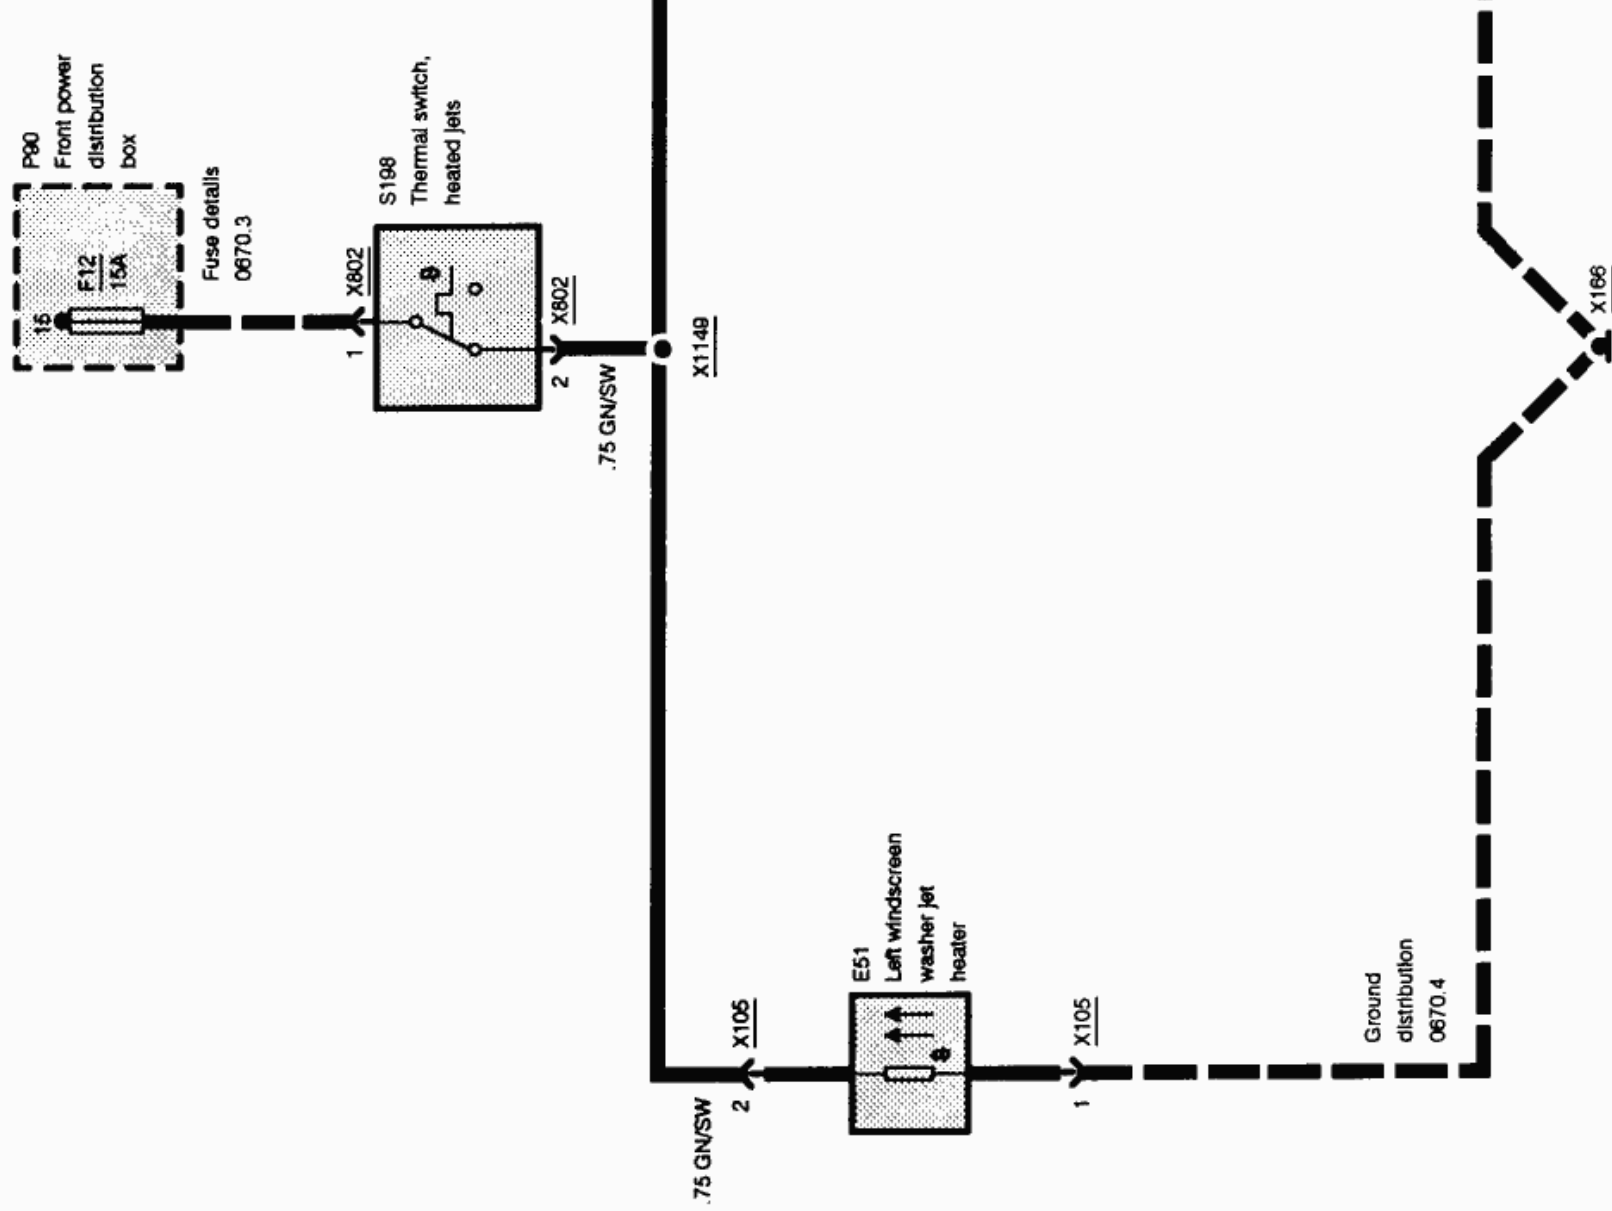



**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


Multi-function clock

Scheme 6213.2


09/93

6213.2-00

1994

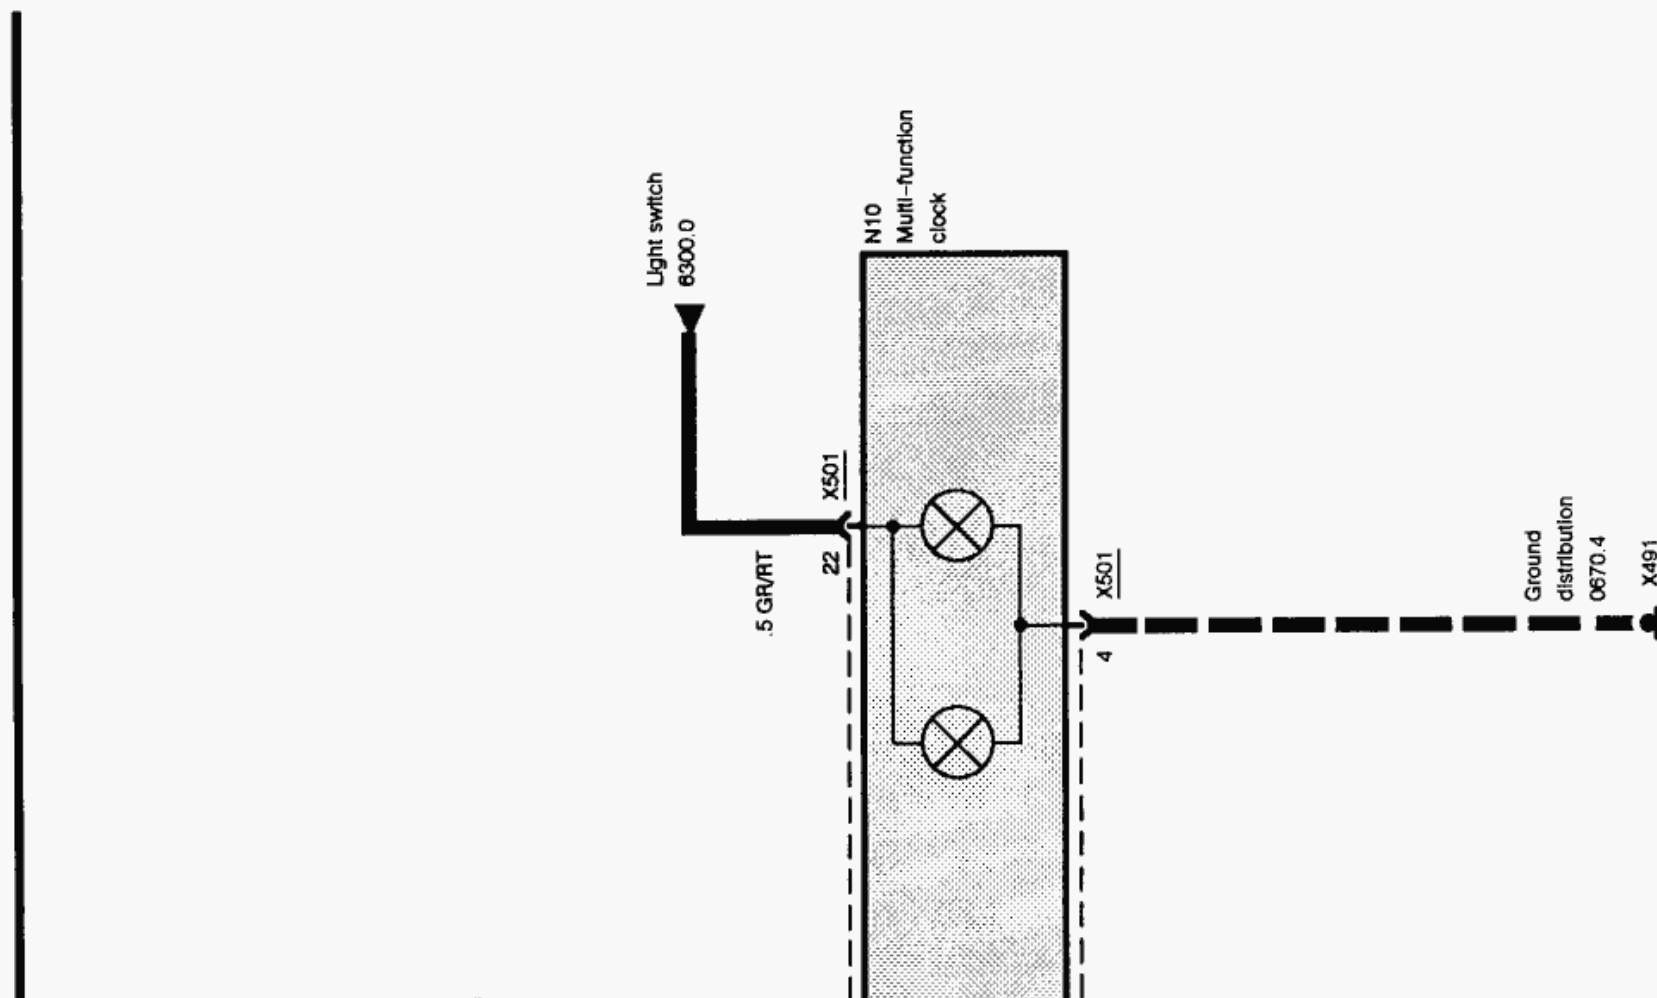


# Multi-function clock

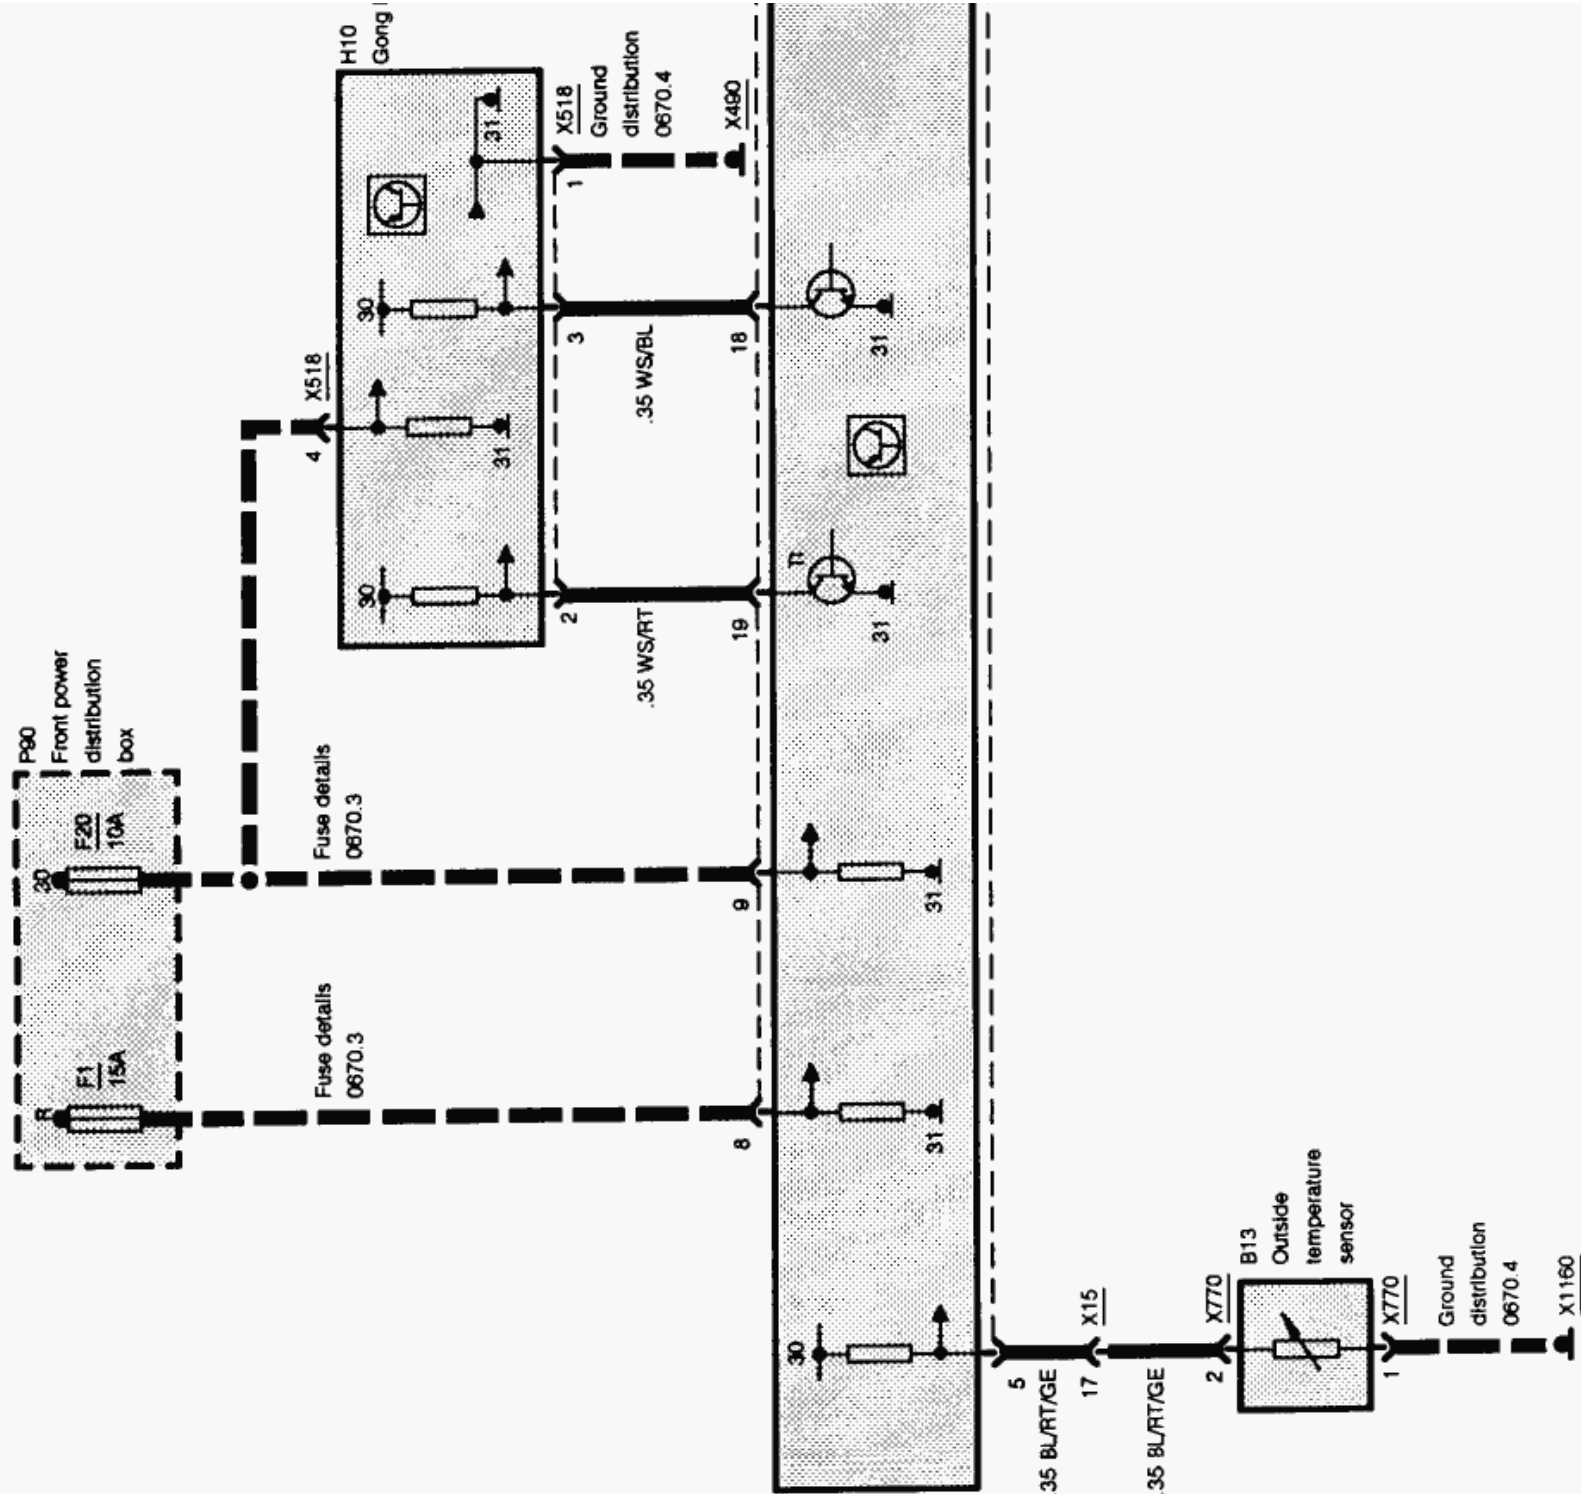







# Park distance control (PDC)

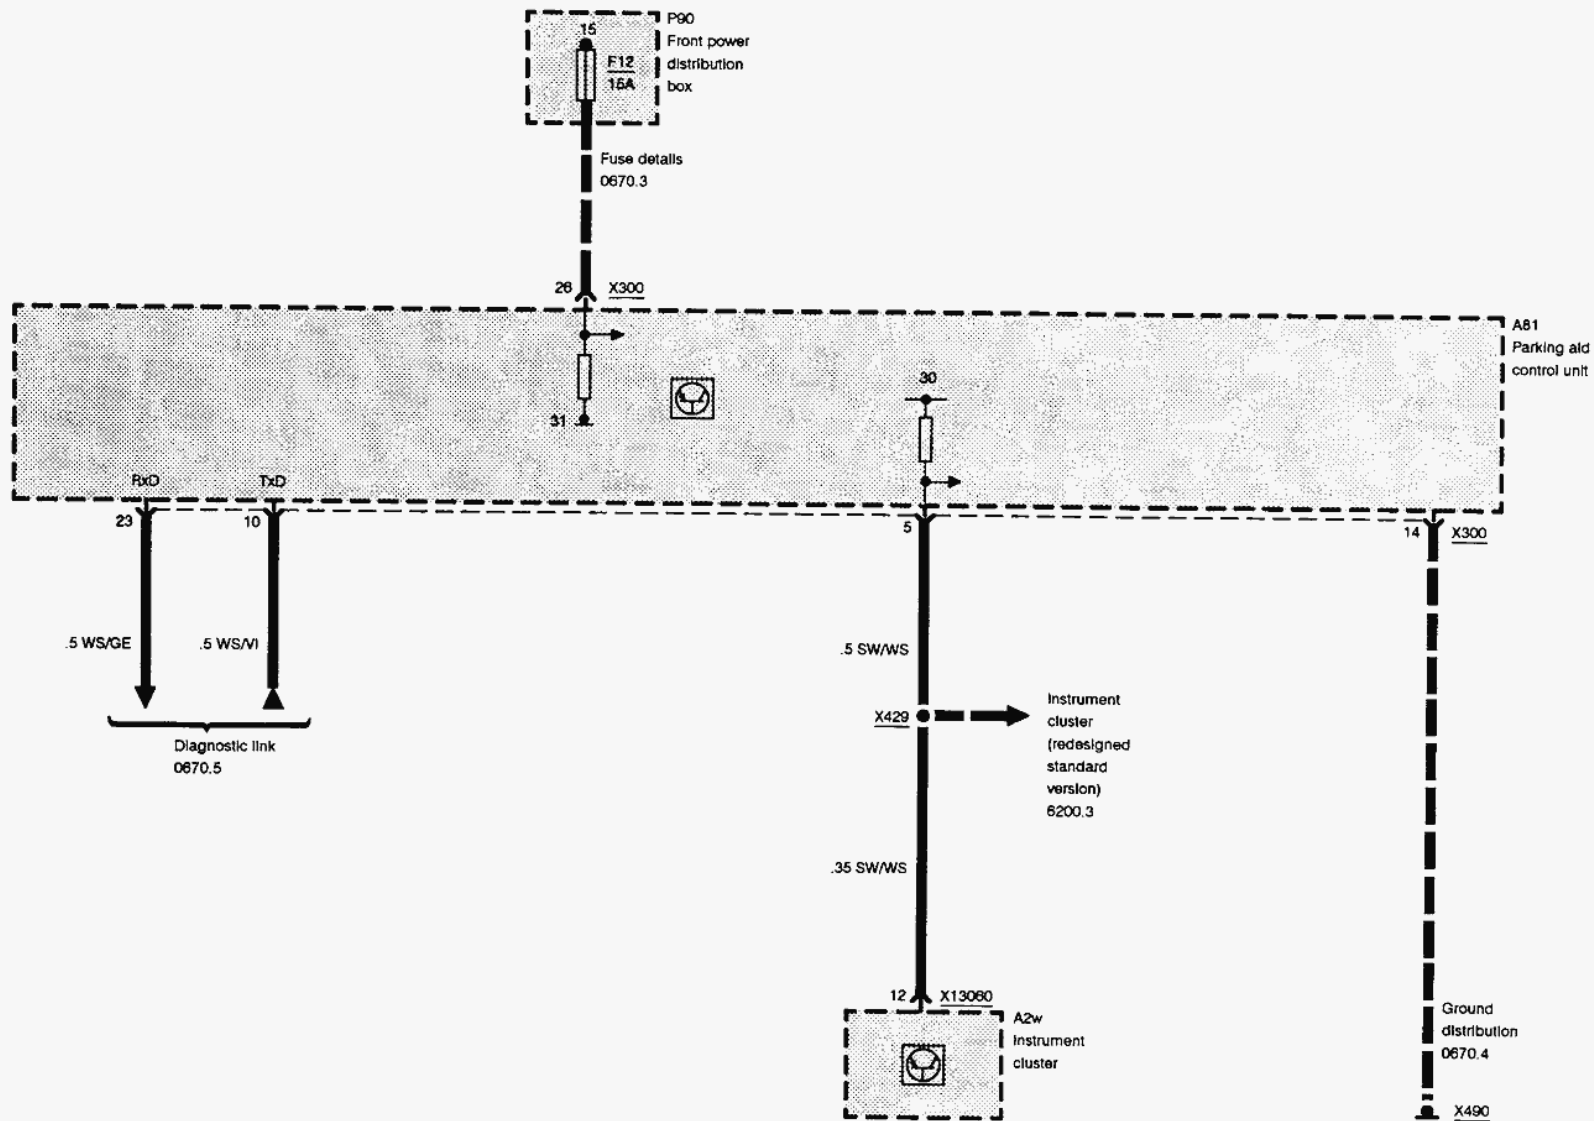




# Park distance control (PDC)

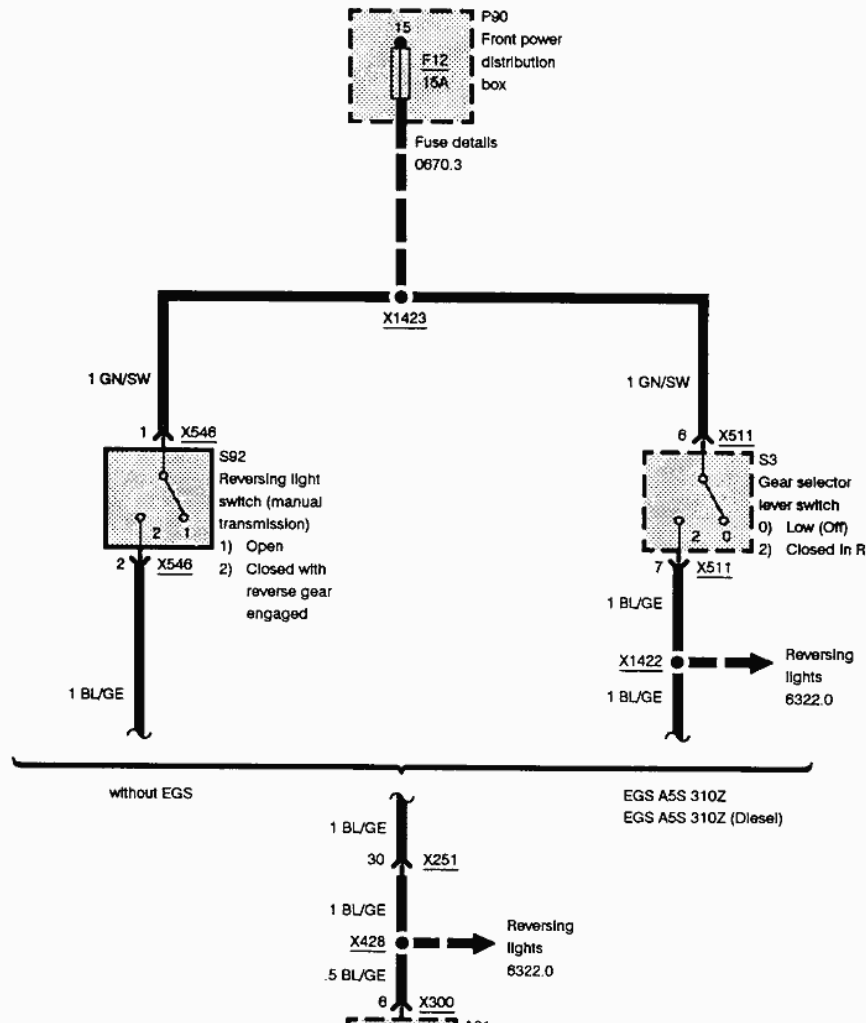

 

# BMW 5 Park distance control (PDC)

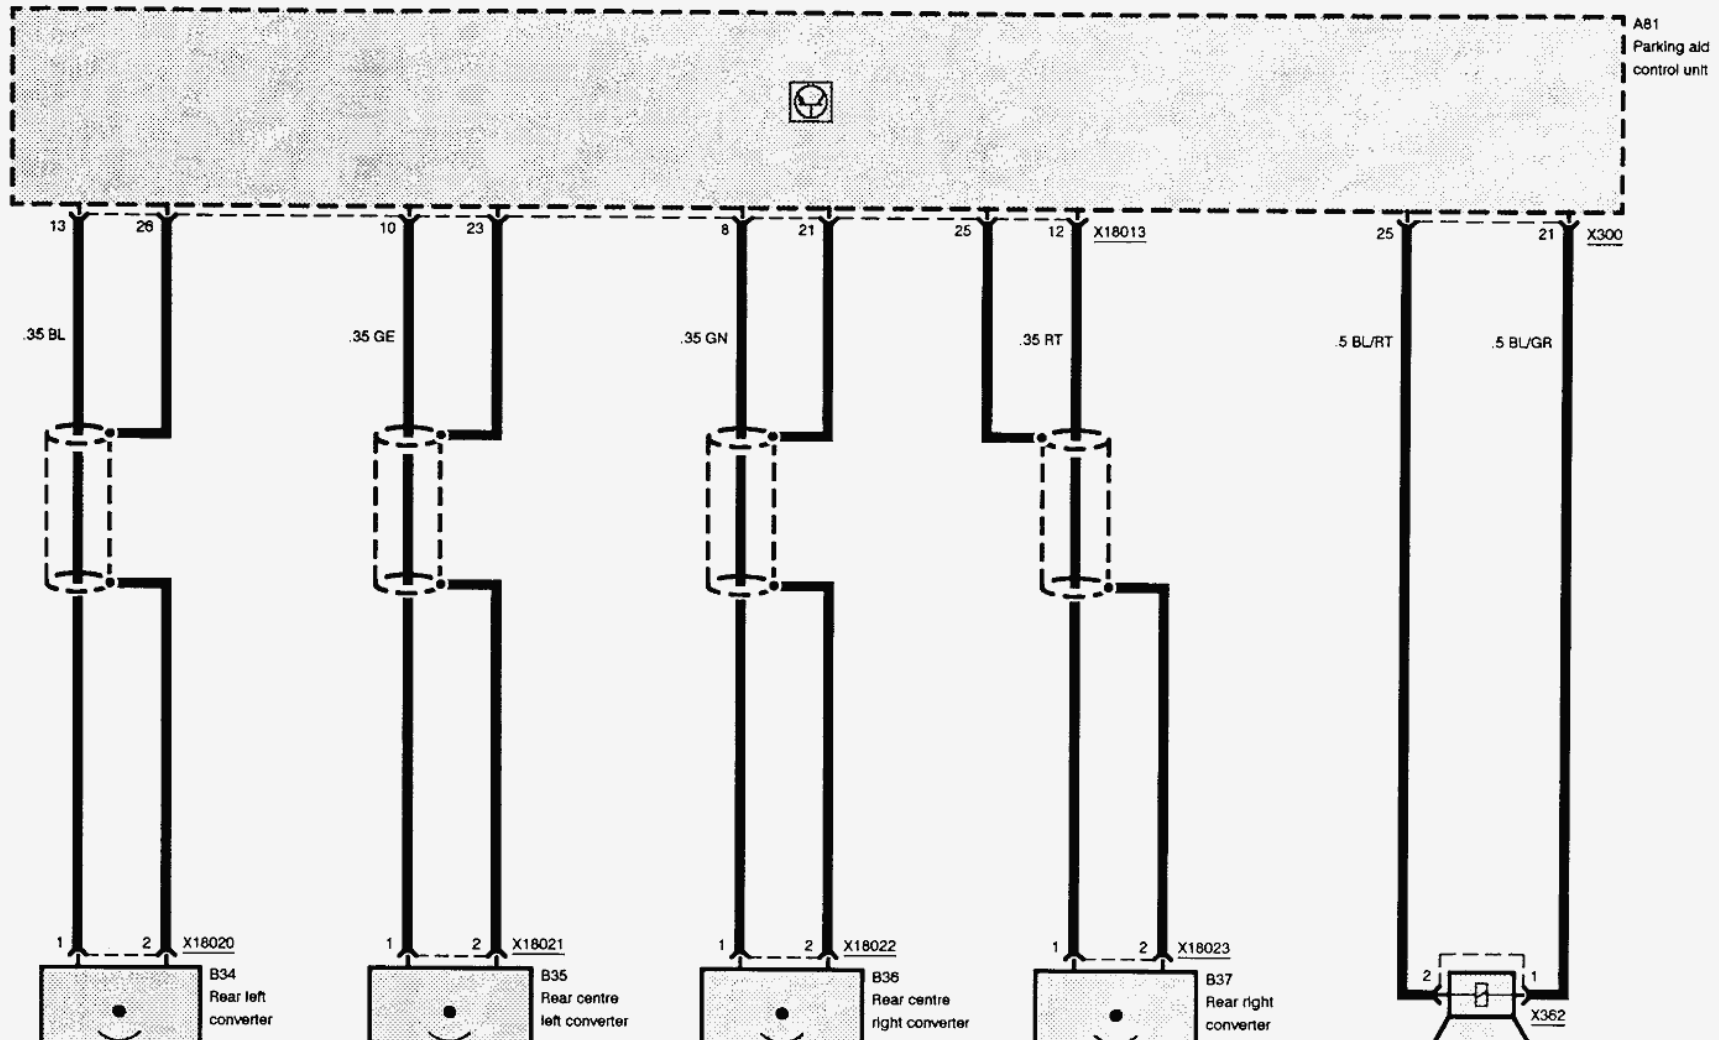





H40  
Parking aid  
speaker

(

(


(

(



# Power distribution chart

## Front power distribution box

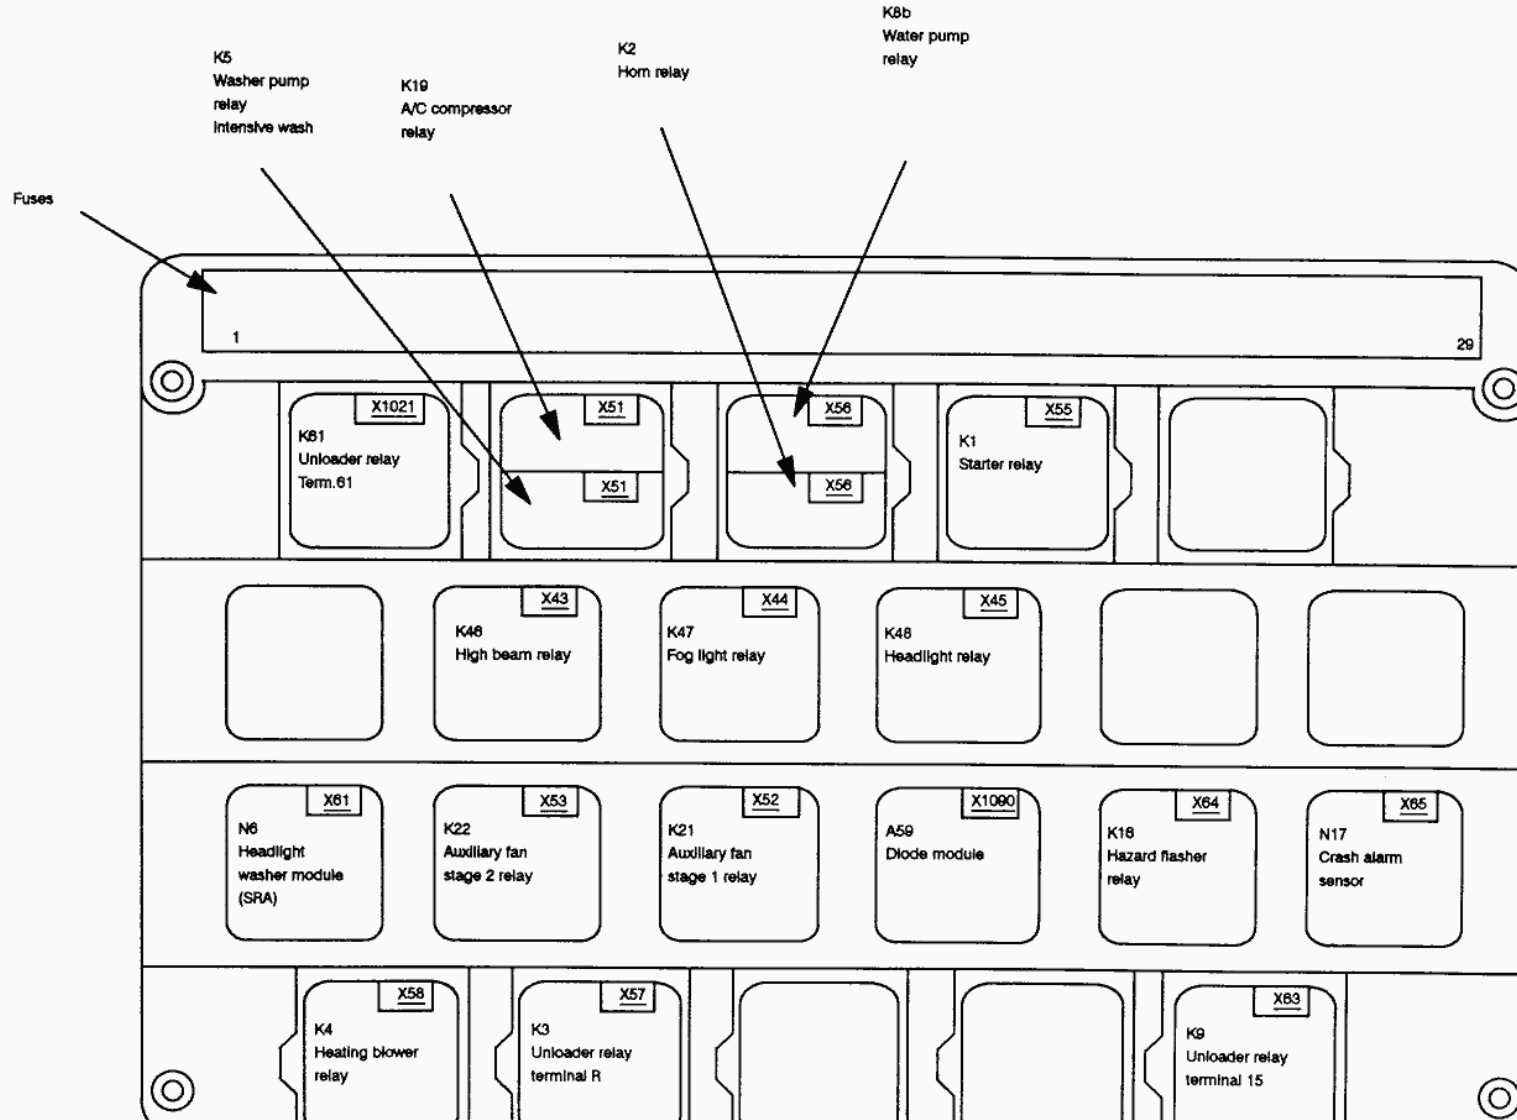


09/93

0670.0-00

15

**BMW 5** **Power distribution chart**  
**Rear power distribution box with ZKE**

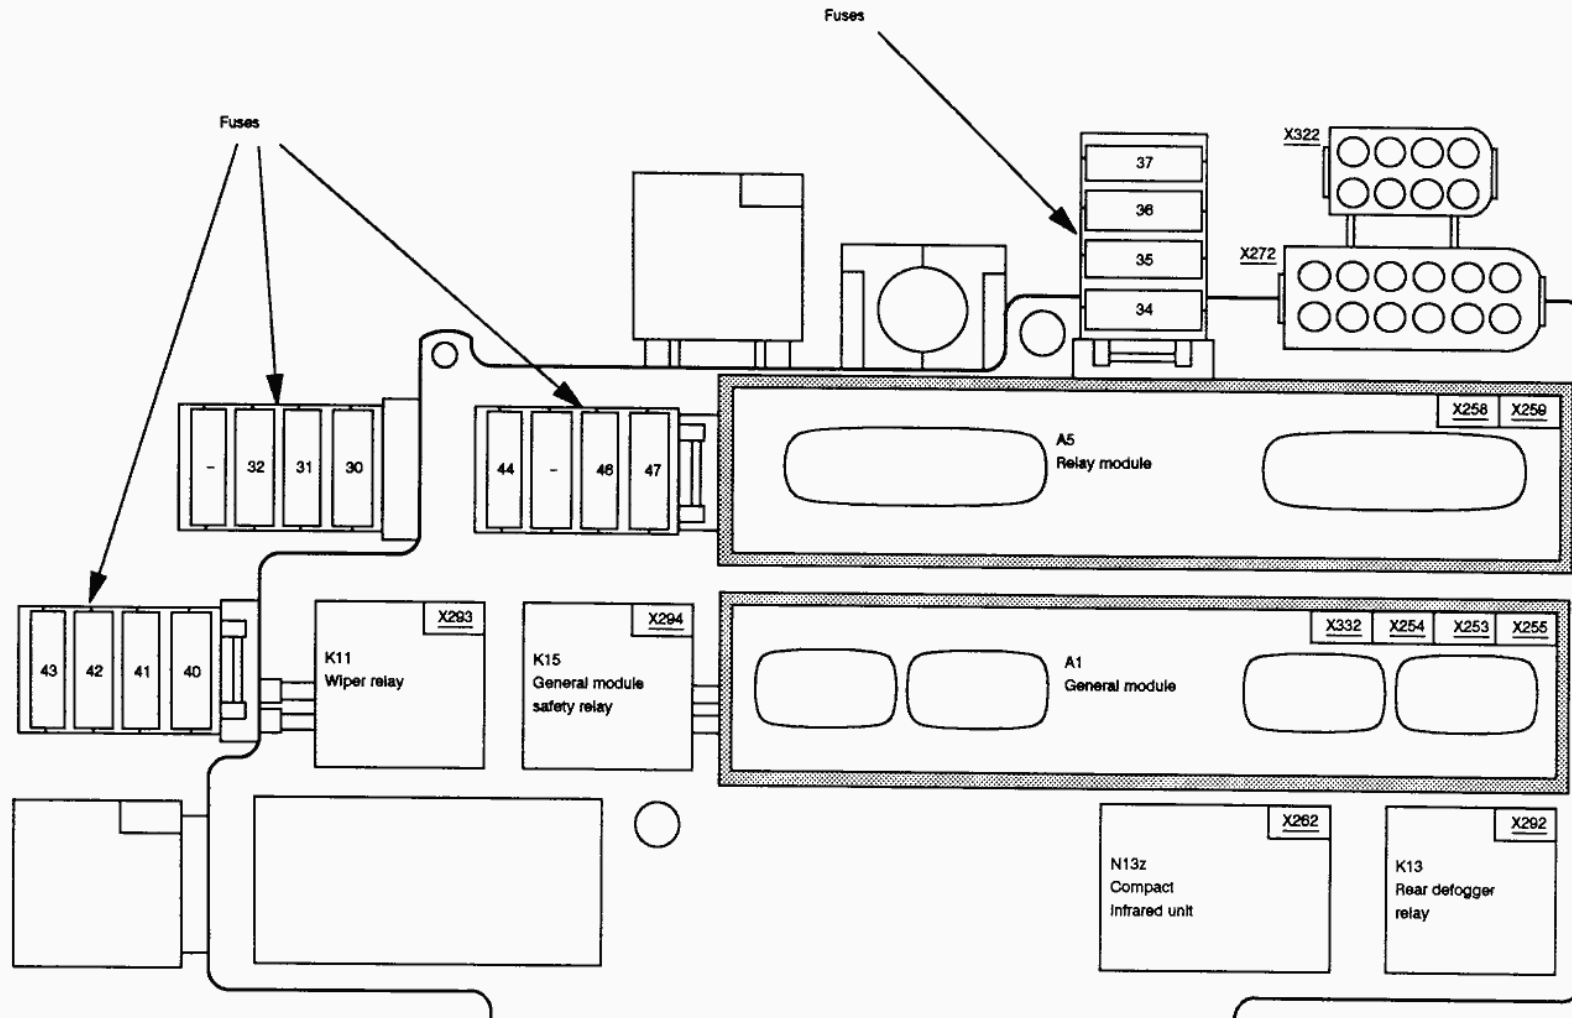



09/93 — 0670.0-01



# Power distribution chart
 
## Rear power distribution box with ZVM

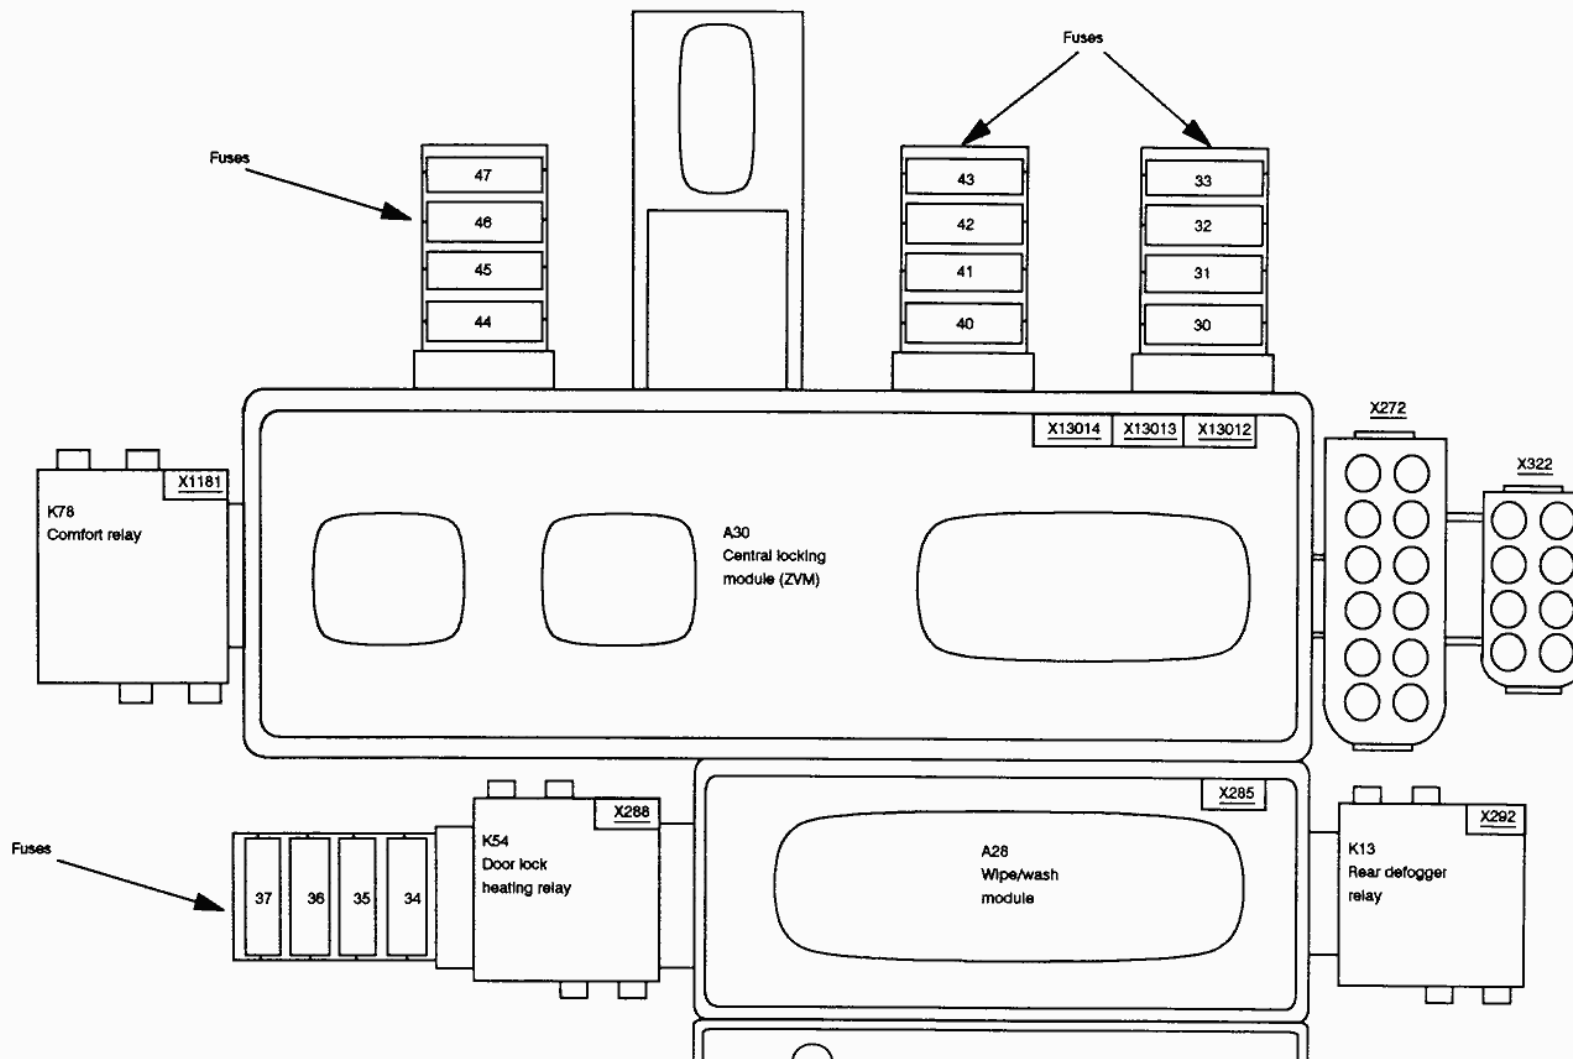



— 1994




**BMW**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Radio provisions

Scheme 6510.2

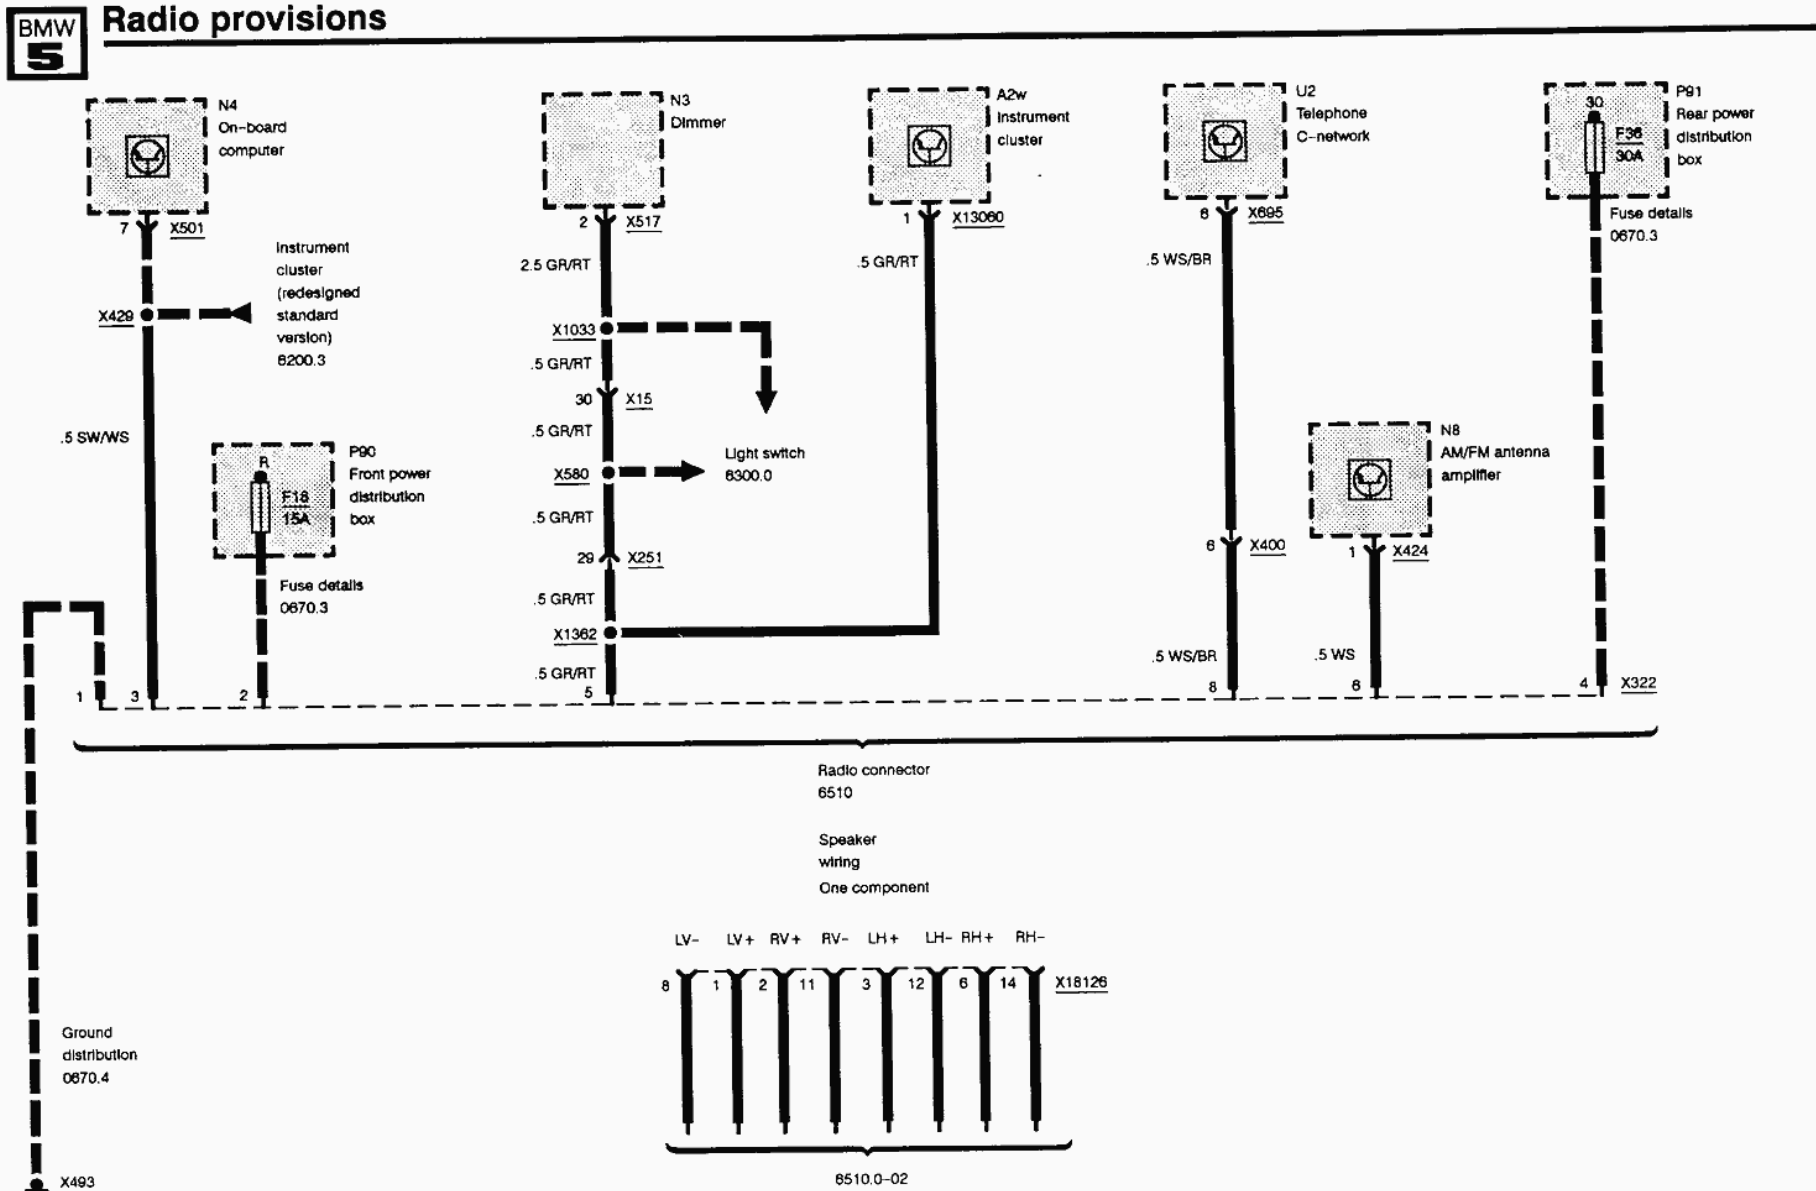



**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Rear window wipe/wash system


Scheme 6162.0

09/93

**6162.0-00**

1994


**Touring**

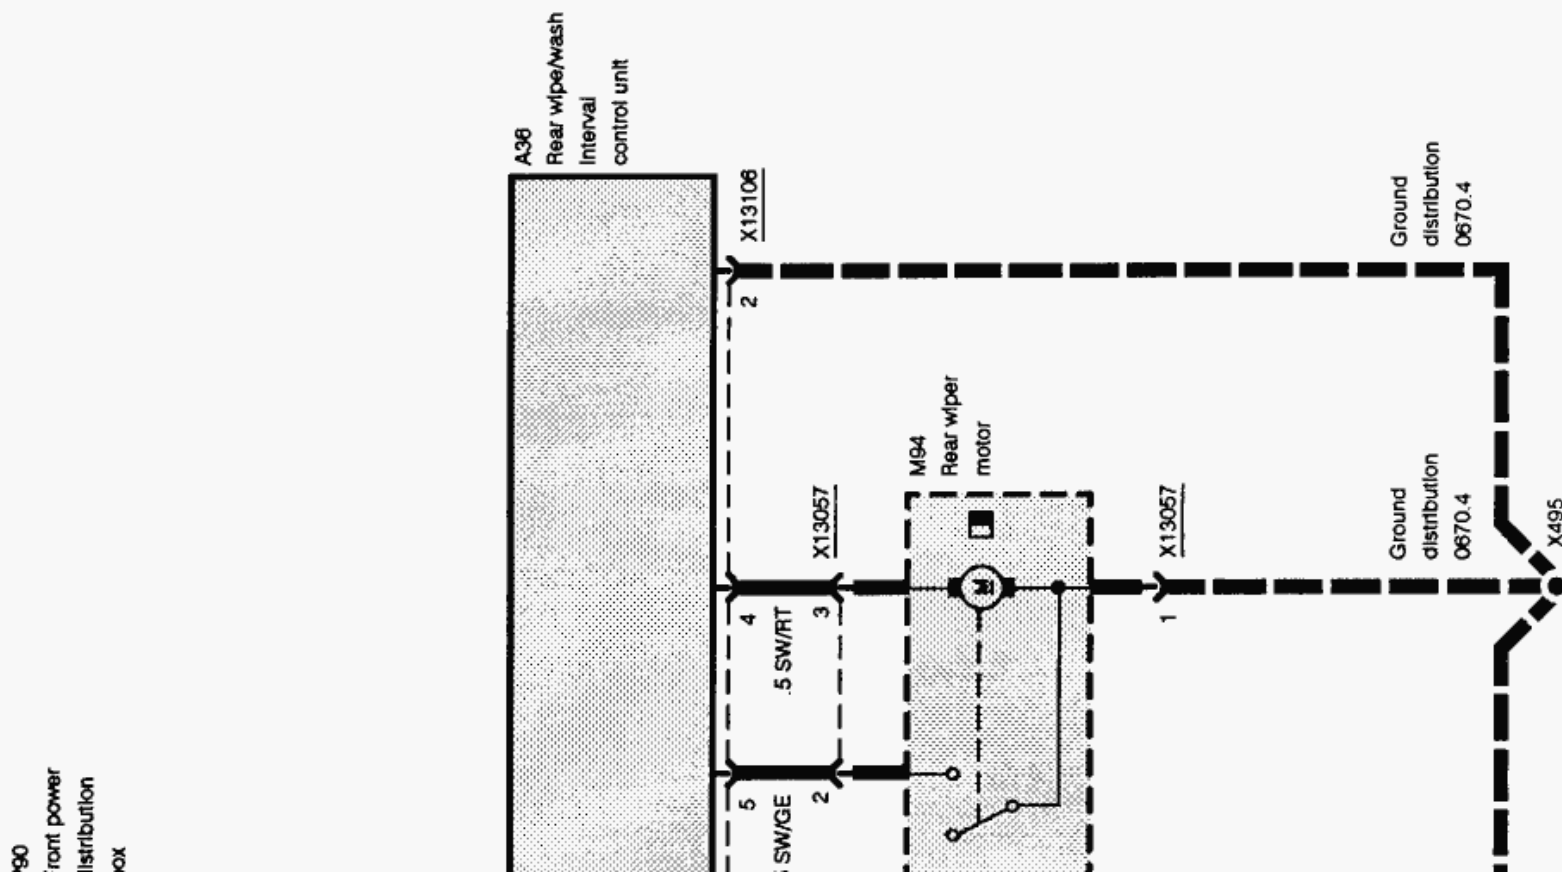





# Rear window wipe/wash system

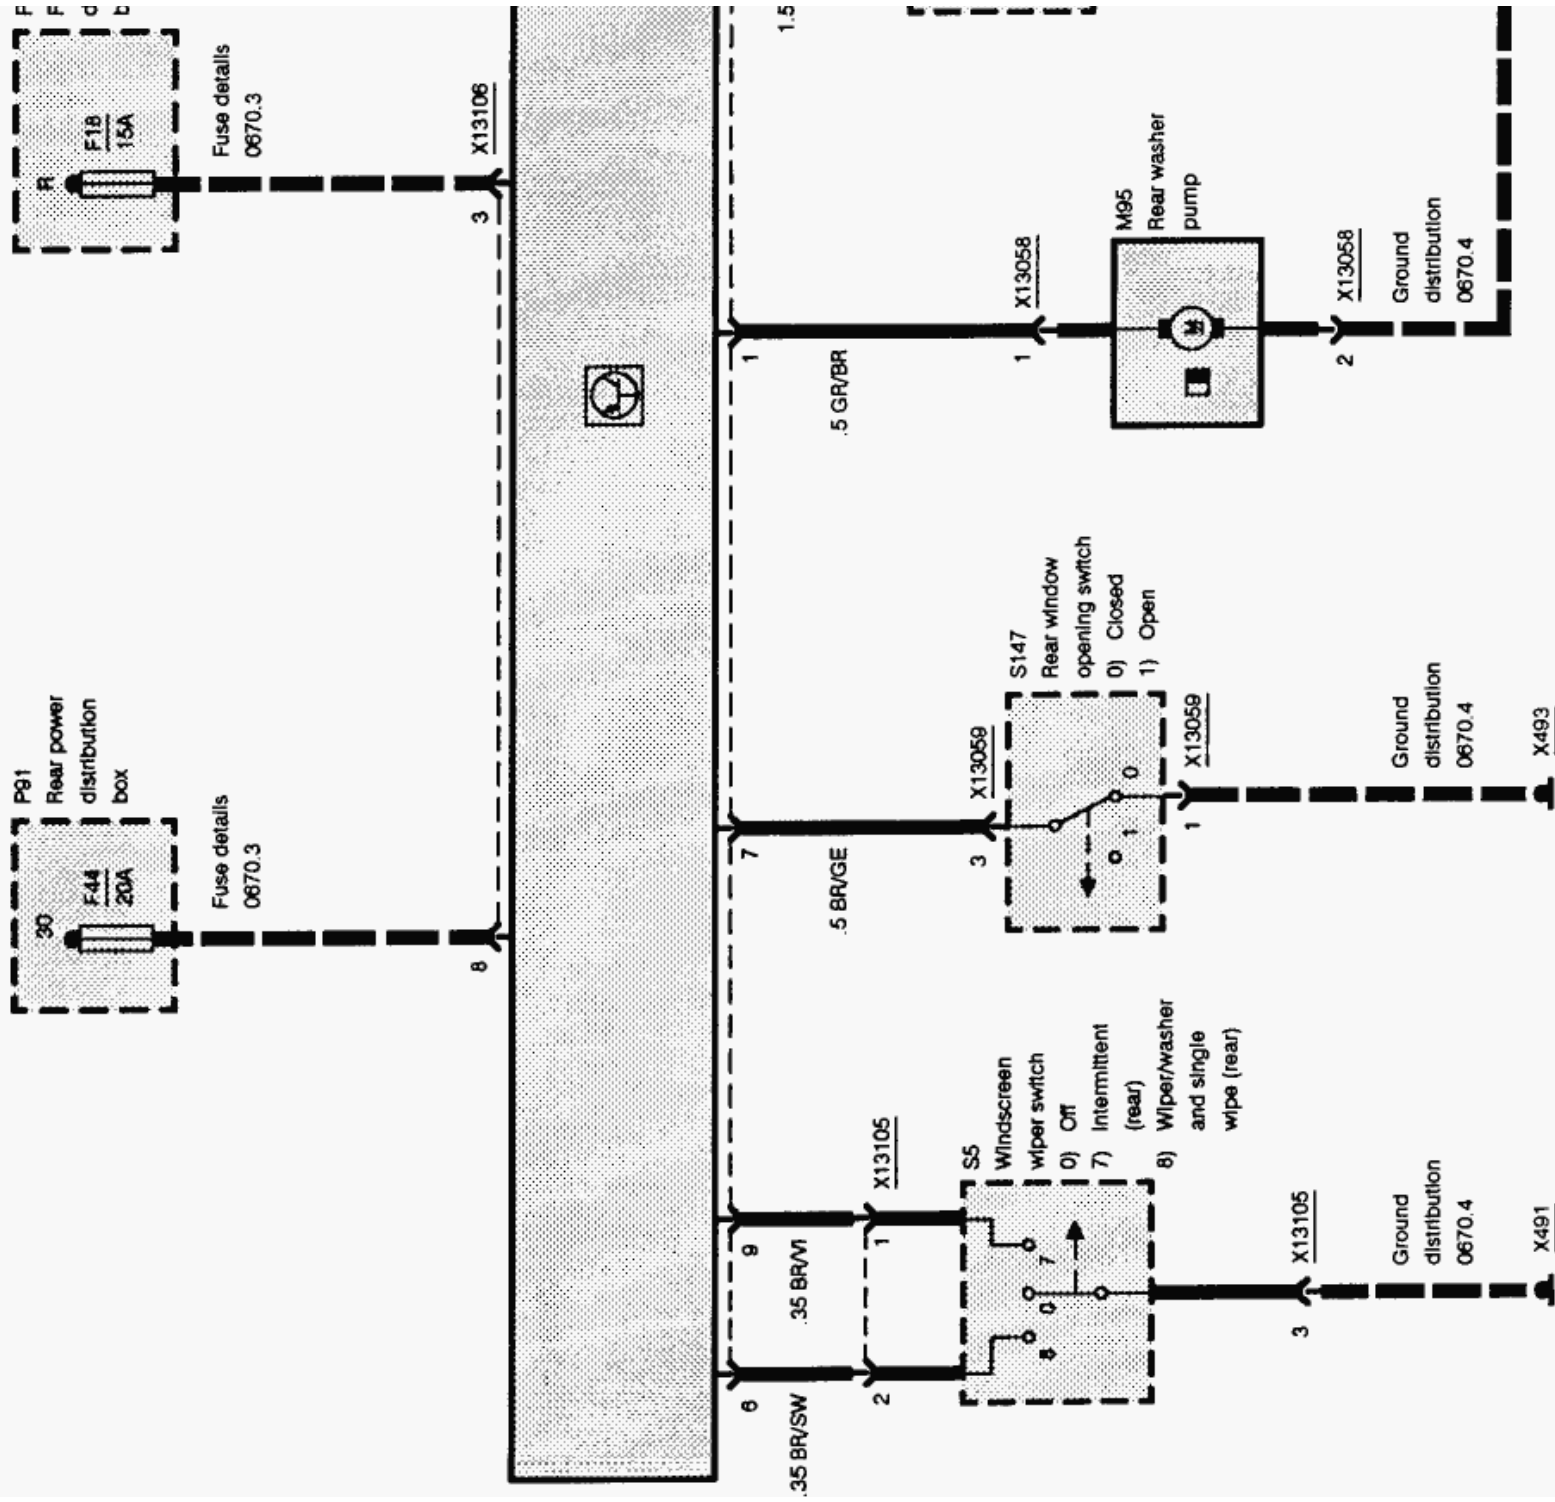



**BMWAG**Electrical troubleshooting manual**5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994****Solder connector location views****Scheme 8000.0****Solder connector location views**


<b>Solder connector</b>	<b>Wire harness</b>	<b>Side</b>
<b>X181-X207</b>	Front	<u>8000.0-01</u>
<b>X208</b>	Rear	<u>8000.0-03</u> <u>8000.0-06</u>
<b>X209-X276</b>	Front	<u>8000.0-01</u>
<b>X414-X433</b>	Rear	<u>8000.0-03</u> <u>8000.0-06</u>
<b>X434</b>	Front	<u>8000.0-01</u>
<b>X435-X479</b>	Rear	<u>8000.0-03</u> <u>8000.0-06</u>
<b>X530</b>	Daytime light	No Fig
<b>X557-X594</b>	Instrument	<u>8000.0-02</u>
<b>X595</b>	Daytime light	No Fig
<b>X824</b>	Side	No Fig
<b>X831</b>	Sunroof	No Fig
<b>X832</b>	Trailer adapter module	No Fig
<b>X833</b>	Rear	<u>8000.0-03</u> <u>8000.0-06</u>
<b>X848-X849</b>	Driver's door	No Fig
<b>X852-X859</b>	IHKR/IHKA	<u>8000.0-04</u>
<b>X864</b>	Independent heating/ ventilation	No Fig
<b>X868-X870</b>	Rear seat headrest	No Fig
<b>X875-X897</b>	IHRF3	<u>8000.0-05</u>
<b>X905</b>	IHR2	No Fig
<b>X906</b>	IHRF3	<u>8000.0-05</u>
<b>X918</b>	Independent heating/ ventilation	No Fig
<b>X994-X1095</b>	Front	<u>8000.0-01</u>
<b>X1097</b>	Daytime light	No Fig
<b>X1 149-1 159</b>	Front	<u>8000.0-01</u>
<b>X1225</b>	Instrument	<u>8000.0-02</u>

<b>X1226-X1362</b>	Rear	<u>8000.0-03</u> <u>8000.0-06</u>
<b>X1382-X1383</b>	Radio	No Fig
<b>X1402-1460</b>	Instrument	<u>8000.0-02</u>
<b>X1813</b>	Daytime light	No Fig
<b>X1816</b>	Independent heating/ ventilation	No Fig
<b>X2001-X2006</b>	Diesel engine	No Fig
<b>X2028-X2162</b>	Diesel engine	No Fig
<b>X6410-X8015</b>	M40 engine M50 engine	No Fig No Fig
<b>X8024</b>	Rear	<u>8000.0-03</u> <u>8000.0-06</u>
<b>X8032</b>	EGS	No Fig
<b>X8042-X8557</b>	M50 engine	No Fig
<b>X10021-X11262</b>	Front	<u>8000.0-01</u>
<b>X13074-X13259</b>	Rear	<u>8000.0-03</u> <u>8000.0-06</u>
<b>X18147</b>	Daytime light	No Fig
<b>X18158</b>	IHKR/F3	No Fig
<b>X18159-X18164</b>	IHR2 IHKR/F3	No Fig No Fig
<b>X18240</b>	Independent heating/ ventilation	No Fig



# Solder connector location views

## Front wire harness

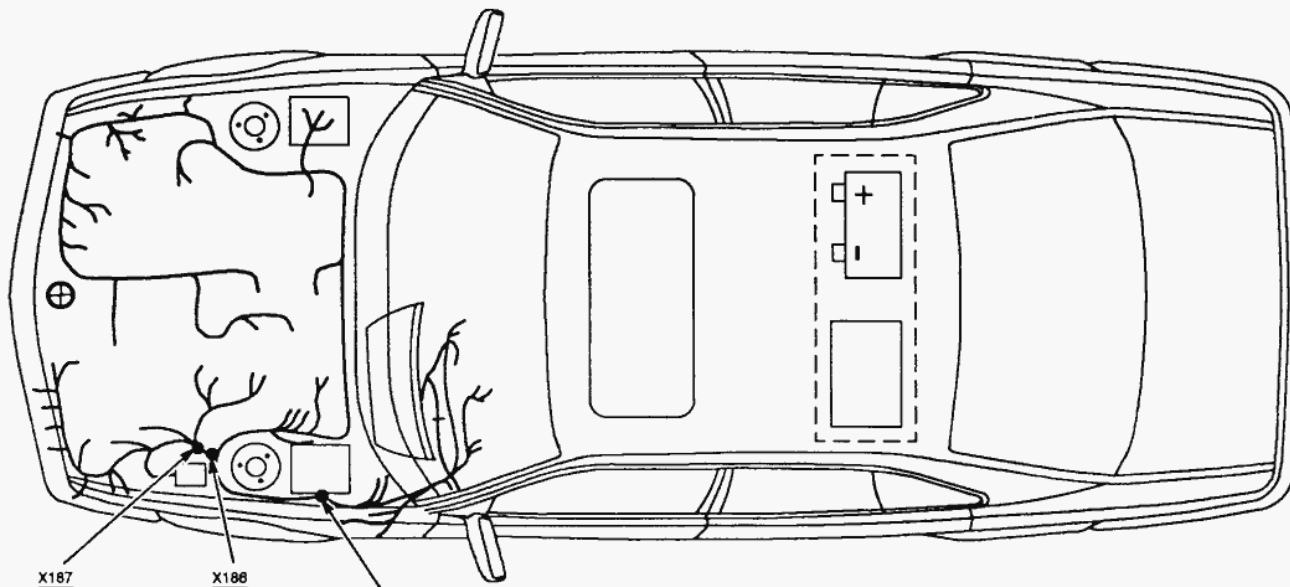

X187

X188


X181	●	X197	●	X212	●	X994	●	X1095	●	X11247	●
X182	●	X198	●	X213	●	X1017	●	X1149	●	X11248	●
X183	●	X199	●	X215	●	X1022	●	X1152	●	X11249	●
X184	●	X200	●	X222	●	X1023	●	X1159	●	X11251	●
X185	●	X201	●	X223	●	X1029	●	X10021	●	X11252	●
X188	●	X203	●	X225	●	X1033	●	X10027	●	X11262	●
X189	●	X204	●	X228	●	X1036	●	X10080	●	X11263	●
X191	●	X205	●	X239	●	X1043	●	X10080	●		
X192	●	X206	●	X241	●	X1047	●	X10081	●		
X193	●	X207	●	X245	●	X1092	●	X10090	●		
X195	●	X209	●	X246	●	X1093	●	X10091	●		
X196	●	X210	●	X276	●	X1094	●	X10093	●		





# Solder connector location views

## Rear wire harness

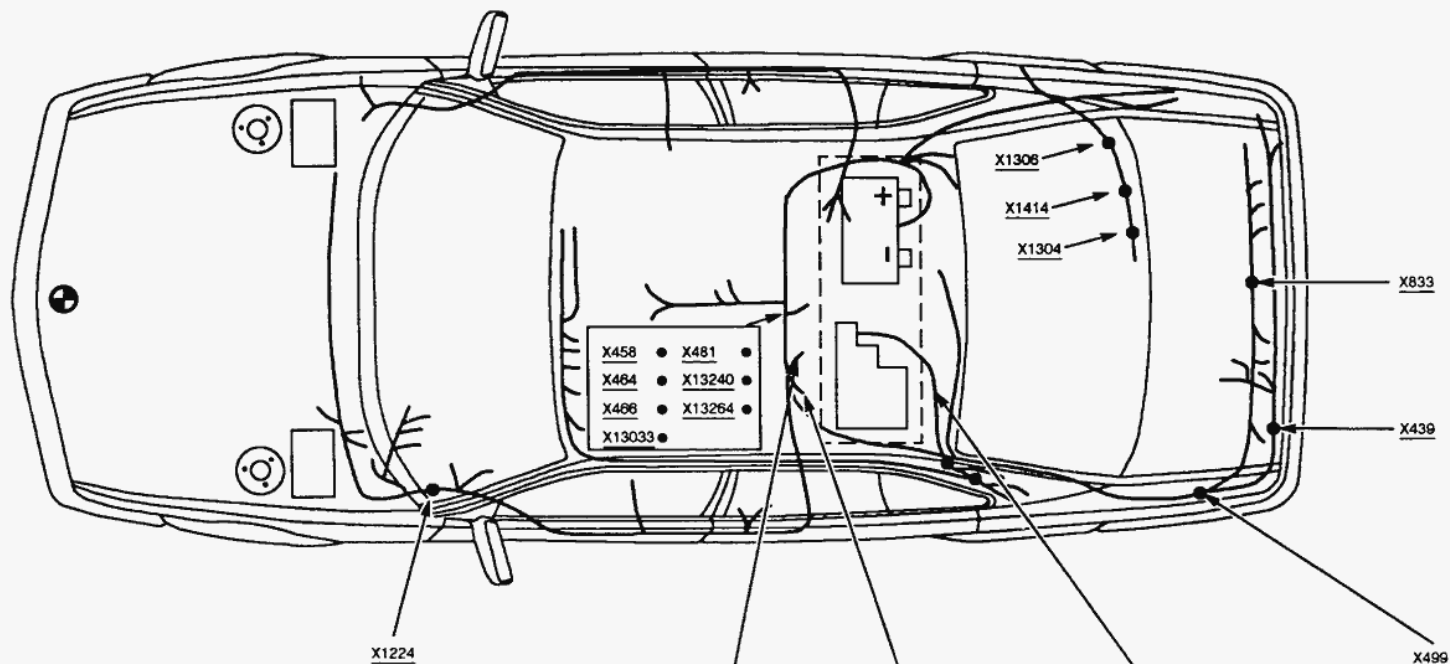

X433	•	X470	•
X443	•	X475	•
X444	•	X479	•
X445	•	X488	•
X451	•	X489	•
X461	•	X1366	•
X467	•	X1367	•
X468	•	X13241	•

X414	•	X462	•
X429	•	X463	•
X435	•	X1228	•
X449	•	X13074	•
X455	•	X13116	•
X456	•	X13117	•
X459	•	X13249	•
X460	•	X13250	•

X428	•	X485	•	X13163	•
X431	•	X1226	•	X13248	•
X441	•	X1362	•	X13259	•
X442	•	X13115	•		
X450	•	X1244	•		
X457	•	X1258	•		
X465	•	X1294	•		
X469	•	X8024	•		








# Solder connector location views

## Rear wire harness

Touring

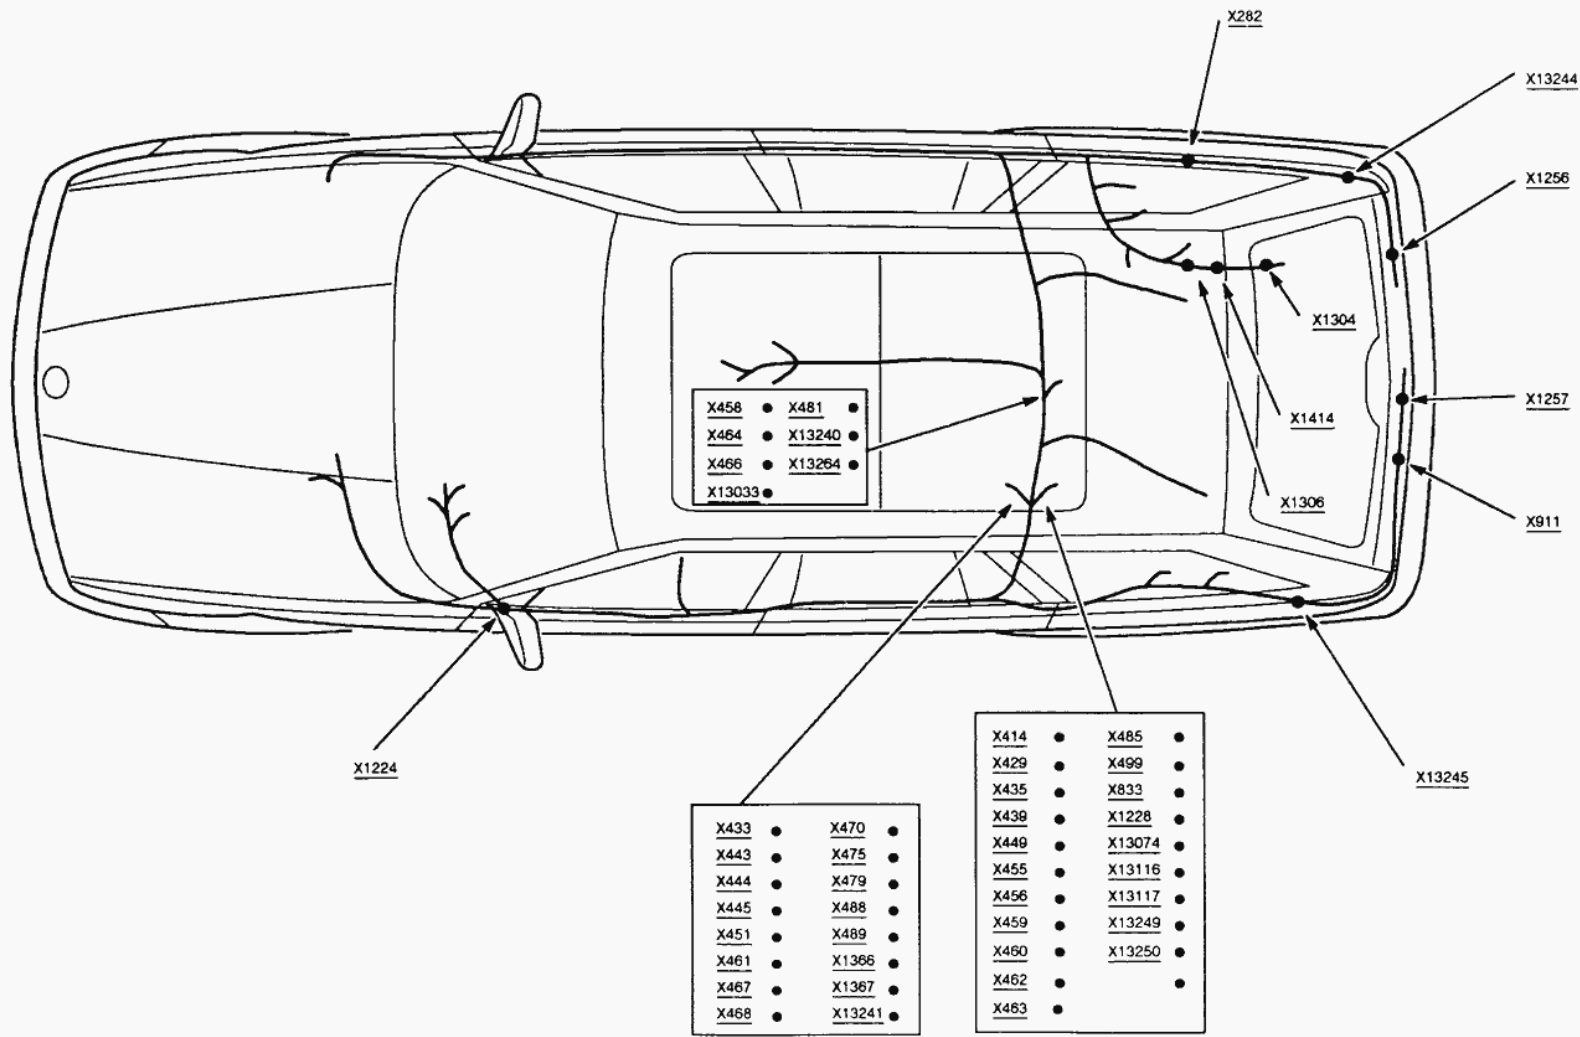

09/93

8000.0-06


1994





# Solder connector location views

## Instrument wire harness

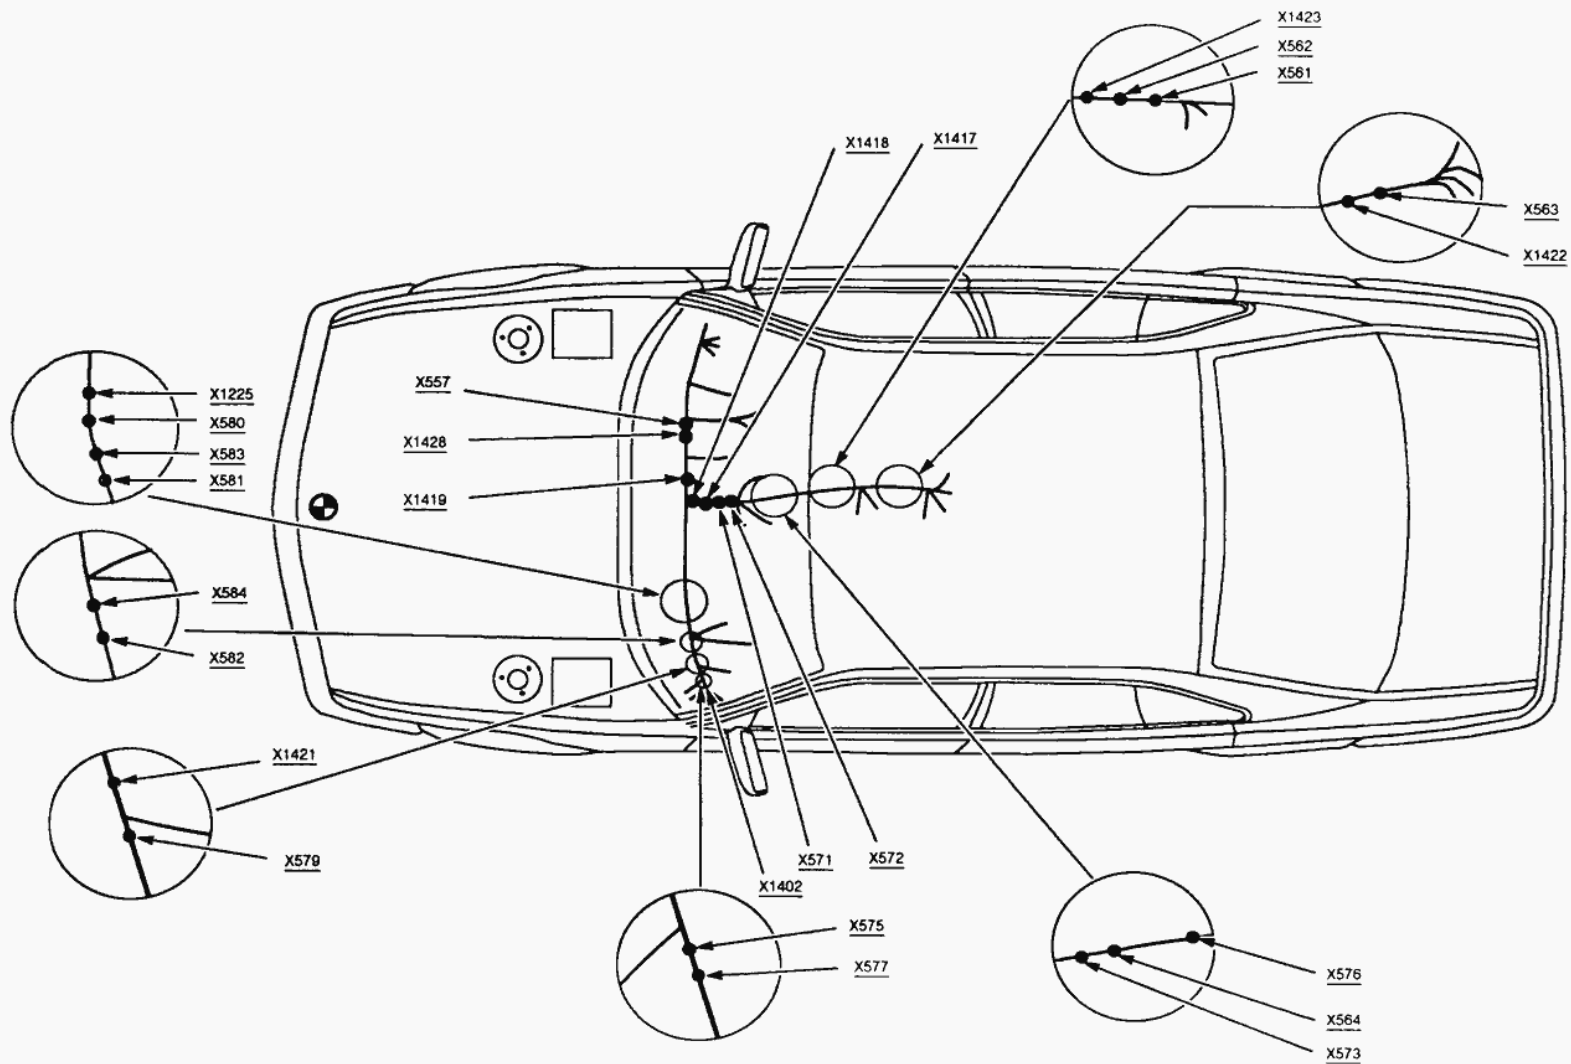






# Solder connector location views

## IHKA/IHKR wire harness

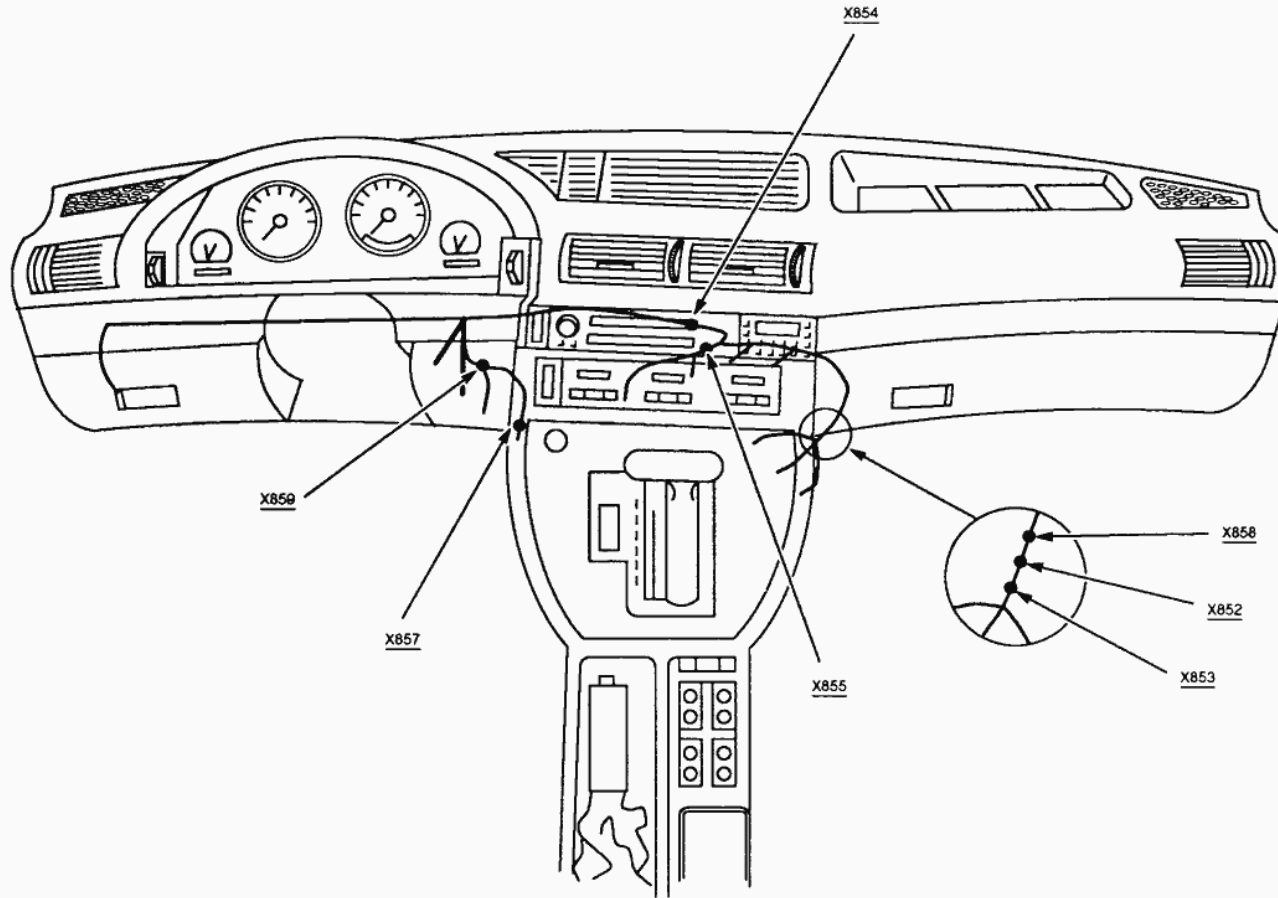






# Solder connector location views

## Wiring harness for IHRF3

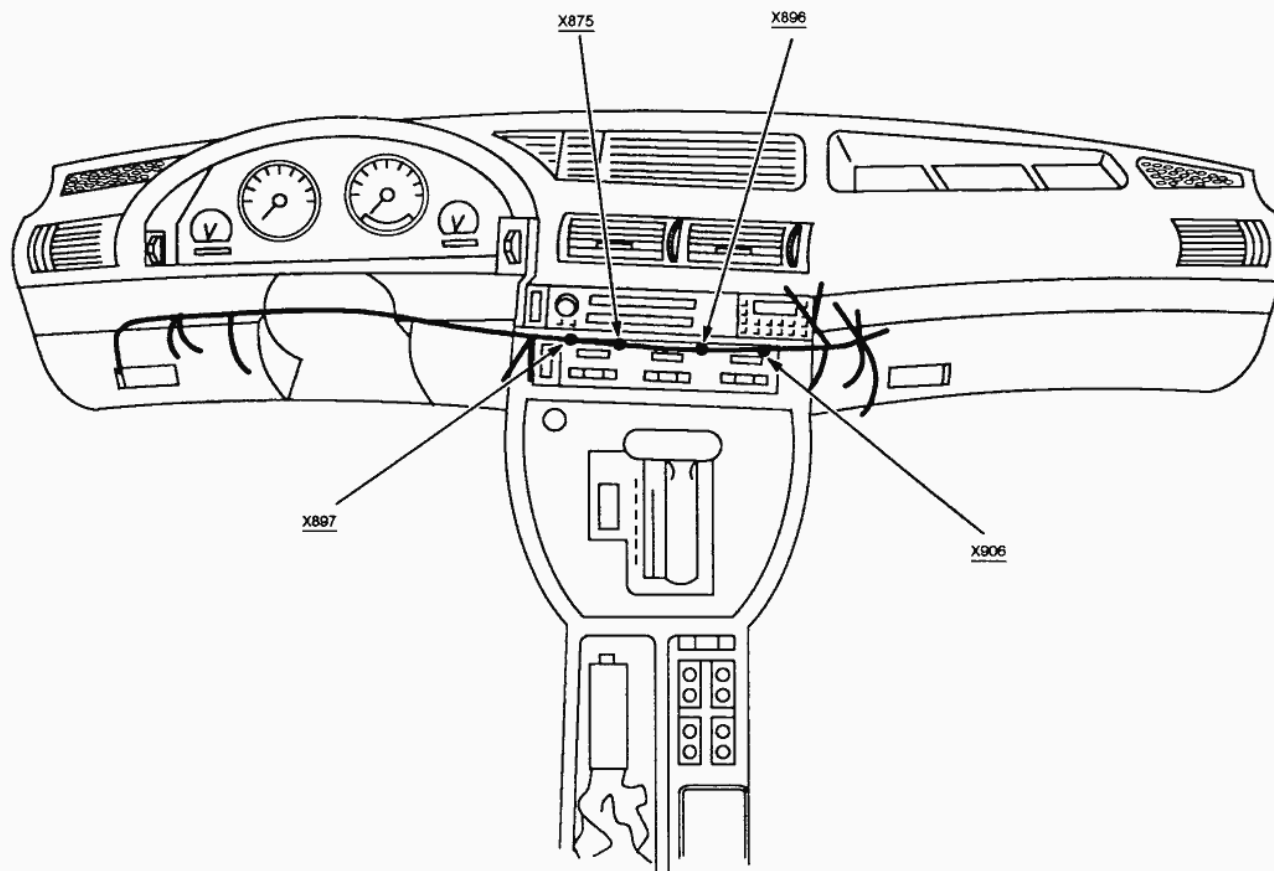





**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


Sunroof (ZKE/SHD)

Scheme 5410.0


09/93

5410.0-00

1994

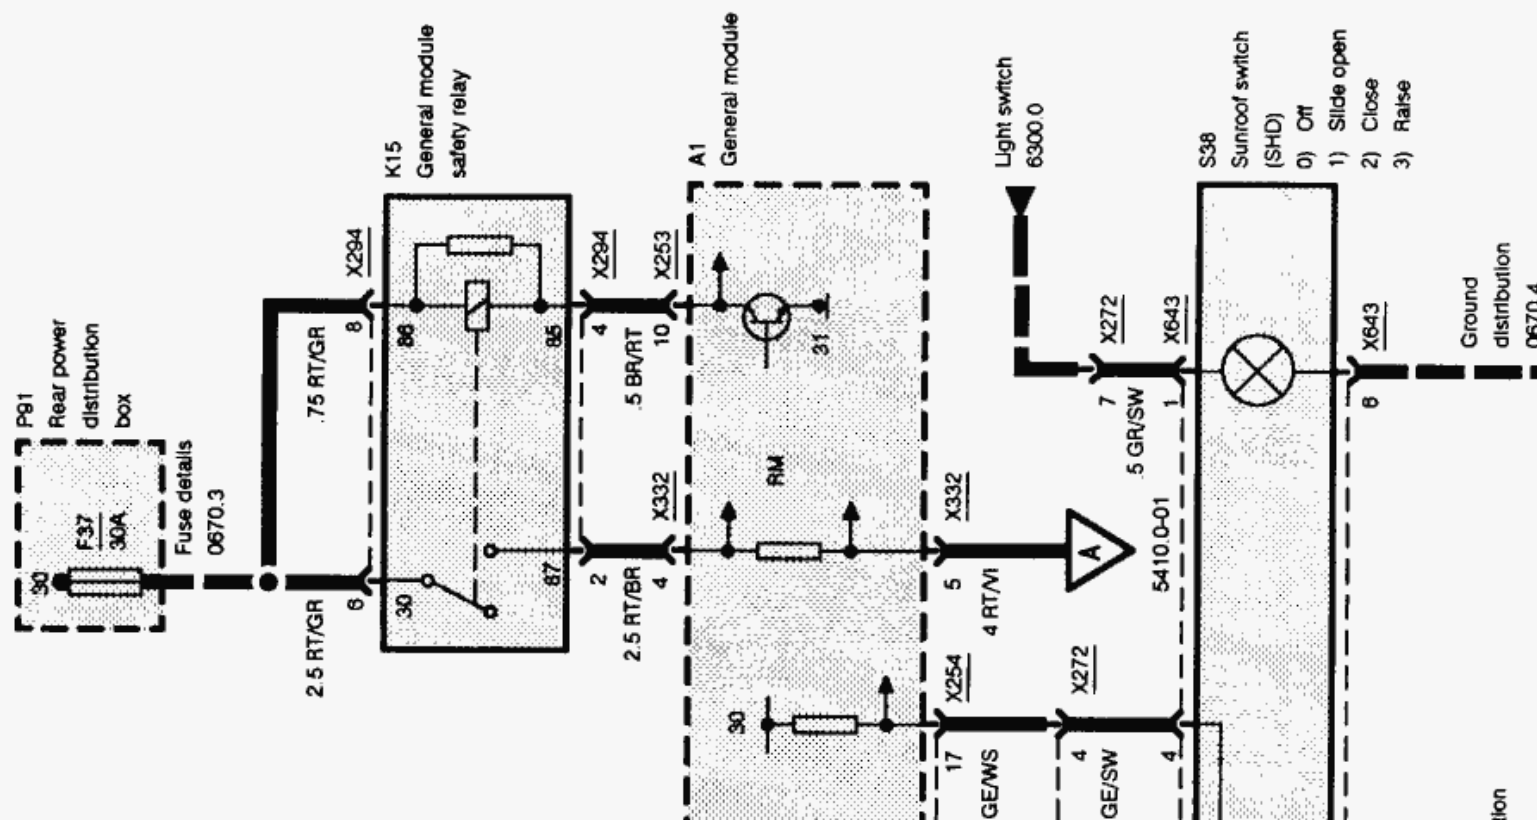

# Sunroof (ZKE/SHD) Inputs

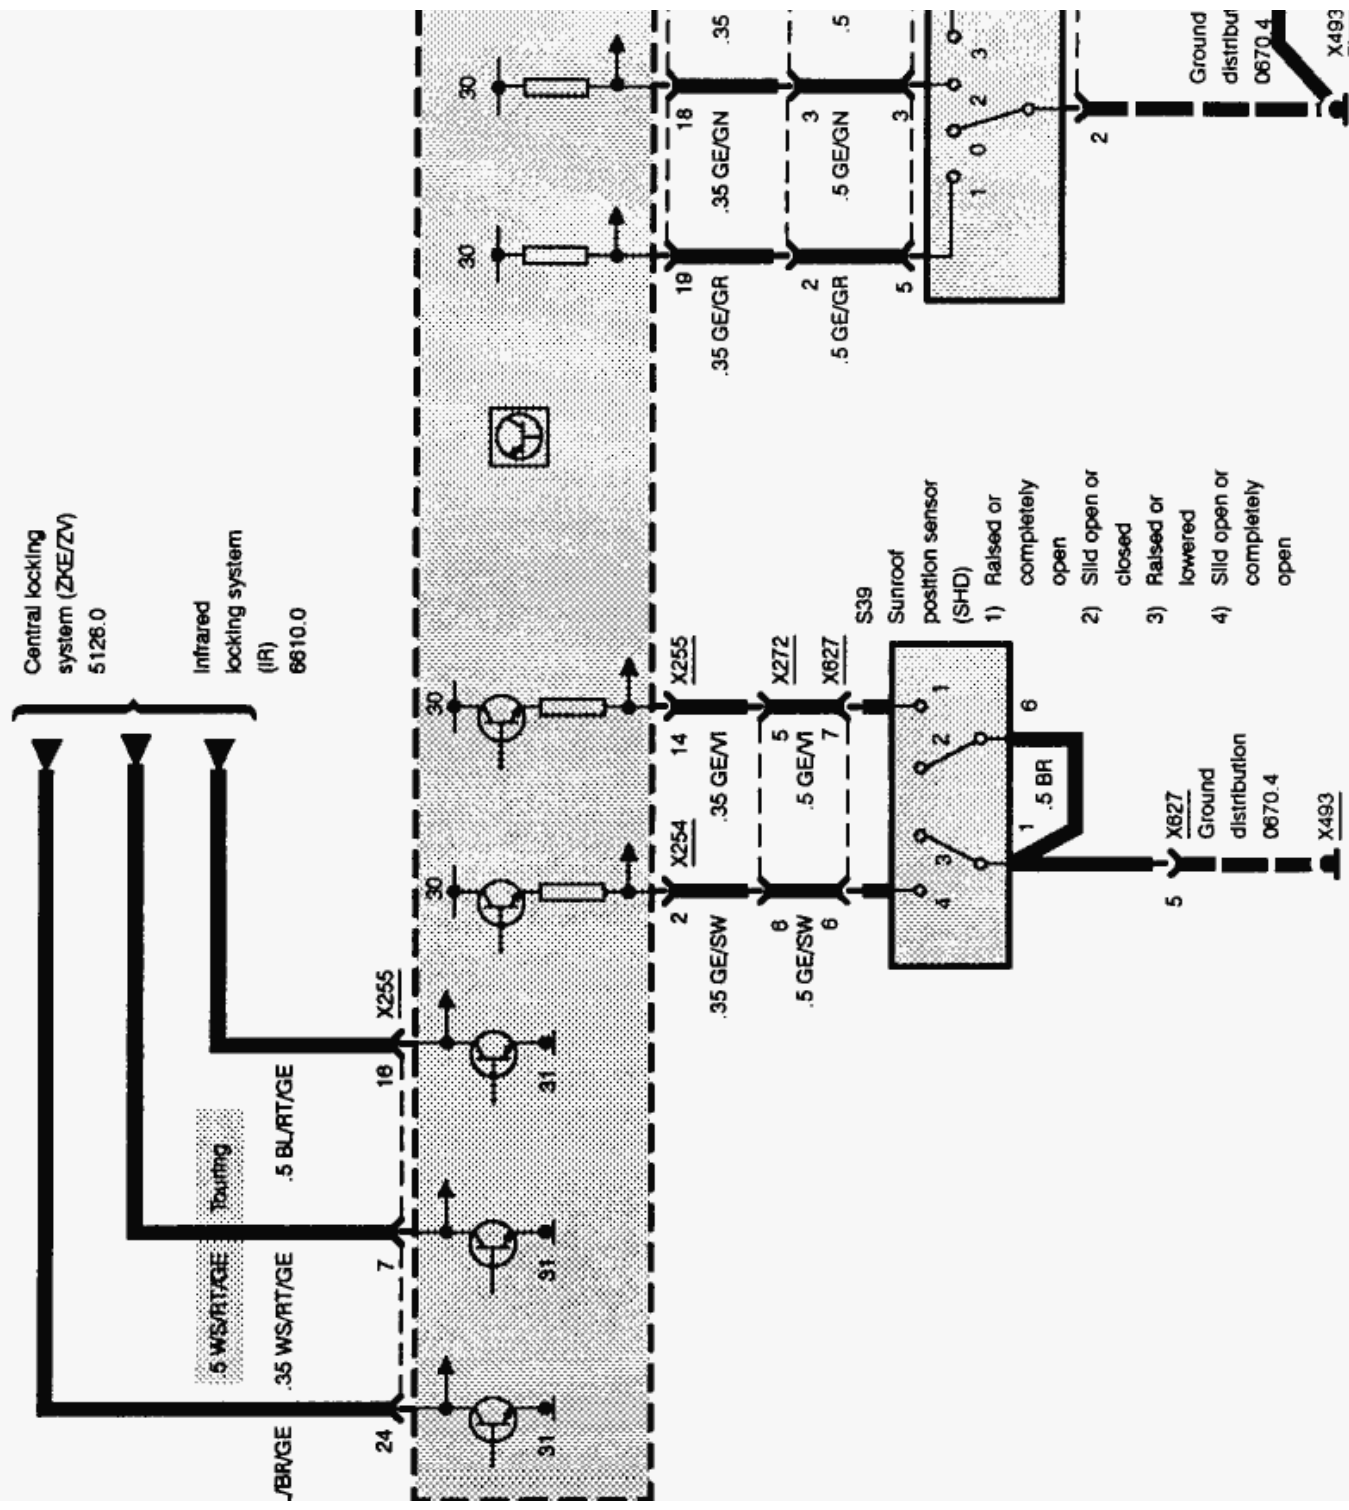




.5 Bl

09/93


5410.0-01

1994

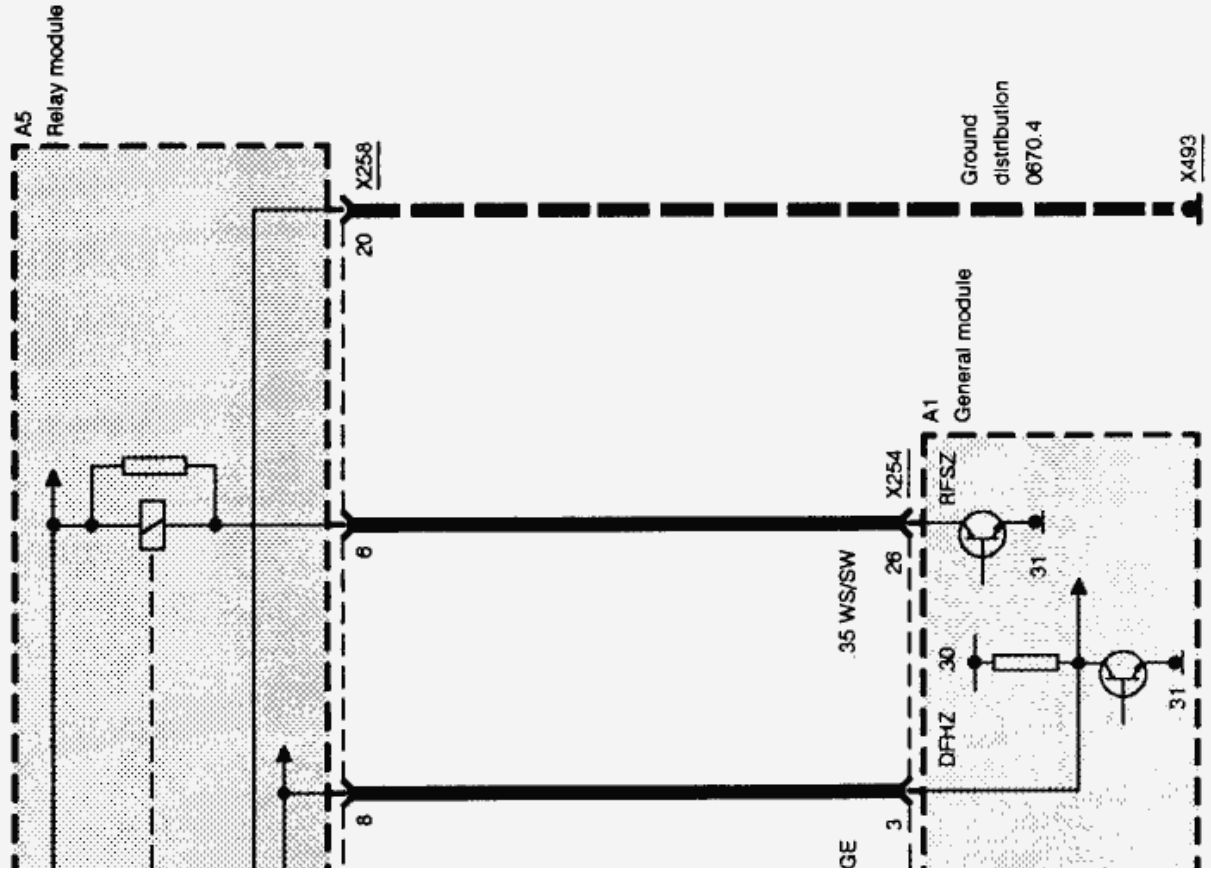

# Sunroof (ZKE/SHD)

## Outputs

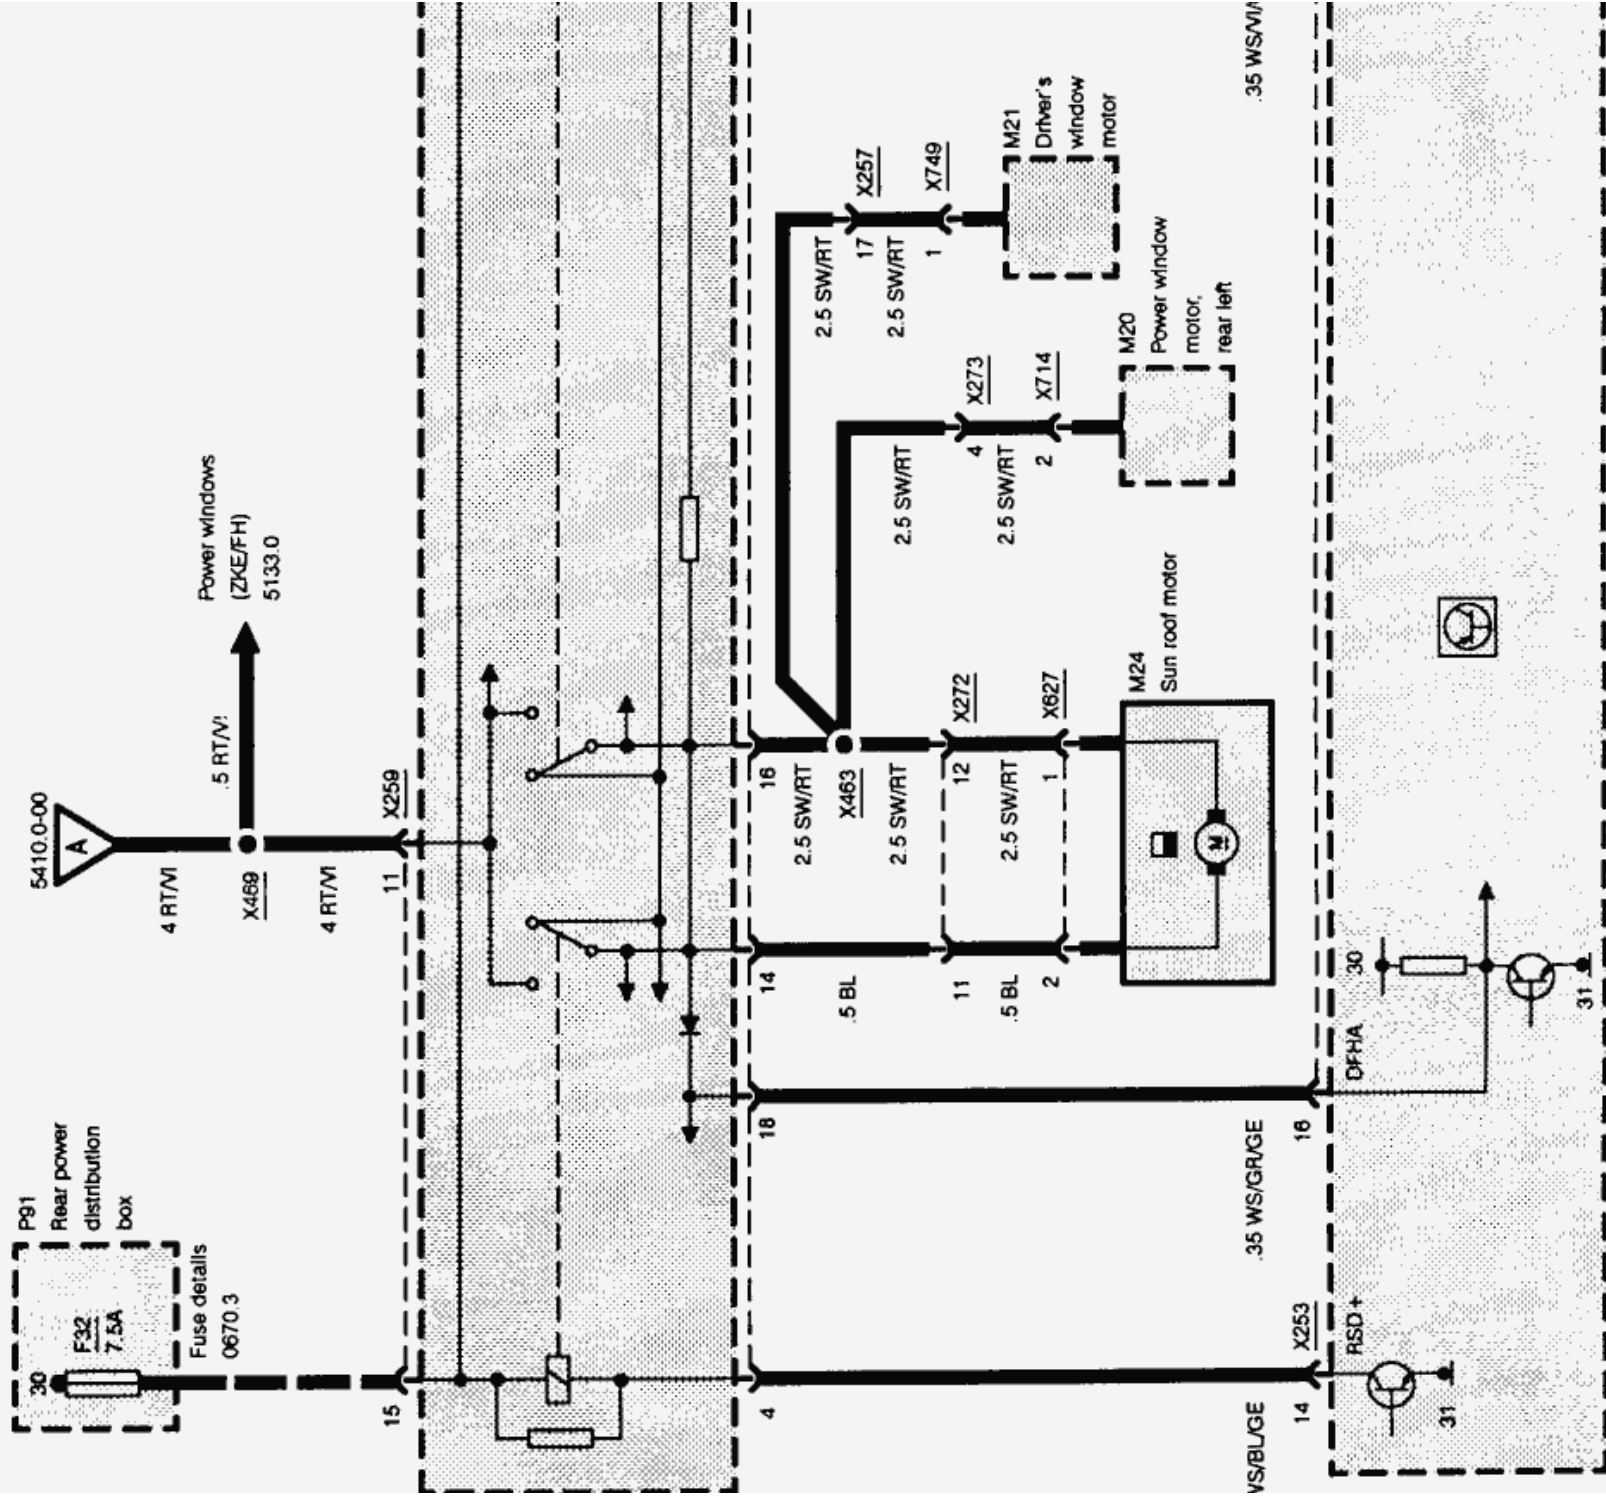



35 V



# Symbols




Battery



Heating element



Potentiometer  
Wiper moved by external force

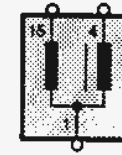

Ignition coil



Fuses



Loudspeaker without horn



Potentiometer  
Change by pressure or temperature



Control/performance electronics



Fuse link



Bulb



Diode  
Current flows in direction of arrow only



Radio



Automatic cut-out



Permanent magnet motor  
one speed



Z-diode  
for voltage control



Transistor switch



Solenoid coil



Permanent magnet motor  
two speeds



LED



Knock sensor



Solenoid valve



Reed contact





 


Oxygen sensor






Overtemperature protection

**BMW 5** Symbols

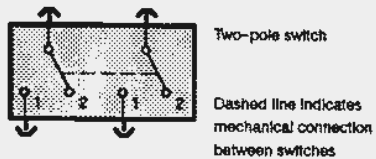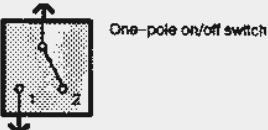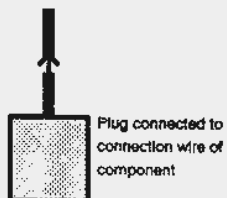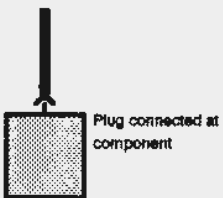

Wire colour	
BL	Blue
BR	Brown
GE	Yellow
GN	Green
GR	Grey
OR	Orange
RS	Pink
RT	Red
SW	Black

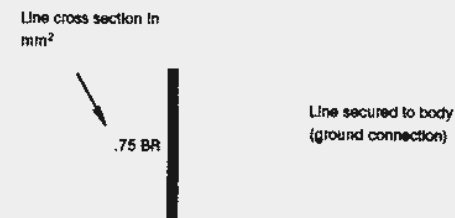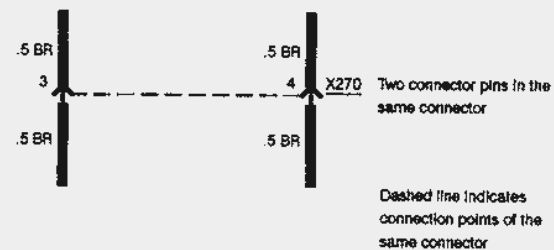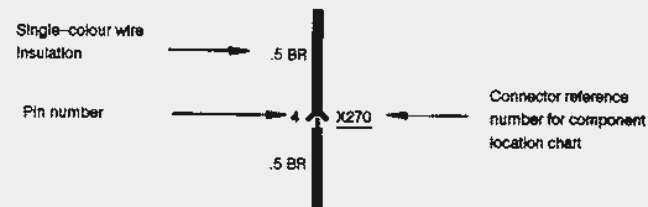

VI	Violet
WS	White
TR	Transparent

X165


Numbered ground connection for reference in component location chart

1994


09/93

0140.0-02


# BMW 5 Symbols

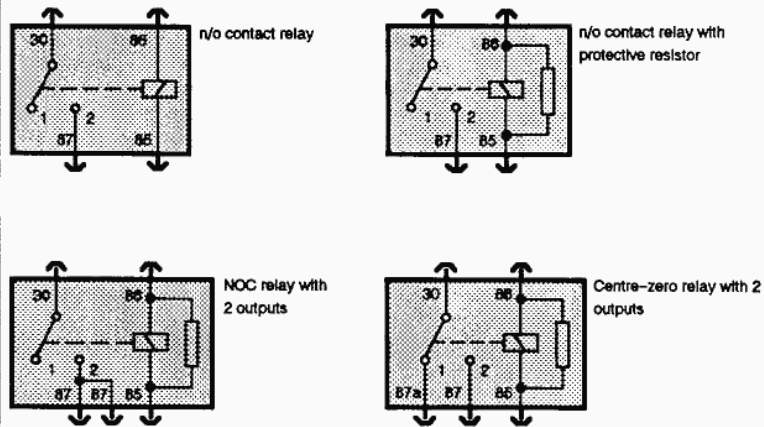

Terminal number	Designation
30	Relay Input
85	Relay output (coll)
86	Relay Input (coll)
87	Relay output (switched)
87a	Relay output (non-switched)

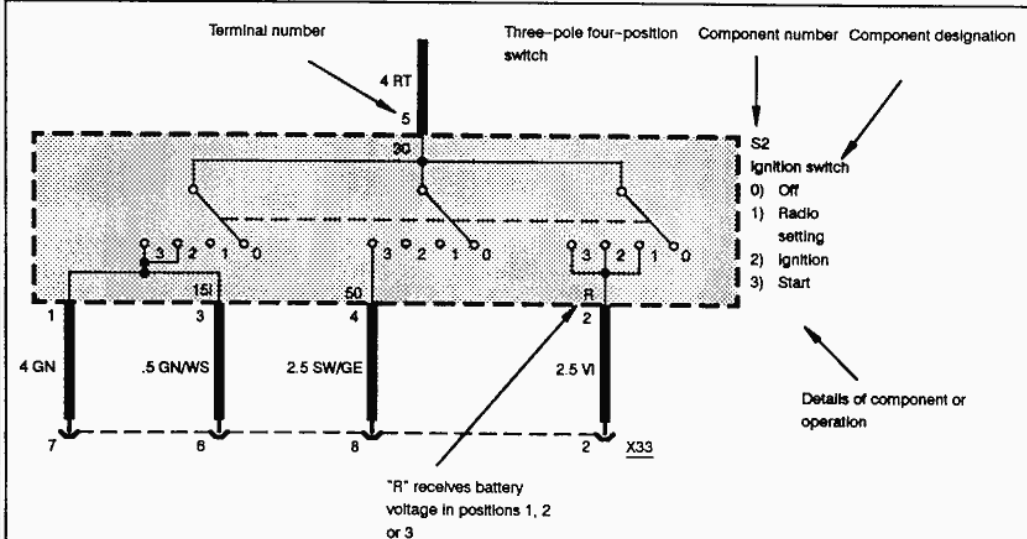

Terminal number	Designation	Terminal number	Designation
50	Battery voltage: Ignition switch in position 3	15I	Battery voltage: Ignition switch in position 2
30	Battery voltage: Supplied constantly	R	Battery voltage: Ignition switch in position 1, 2 or 3
15	Battery voltage: Ignition switch in position 2 or 3	31	Ground

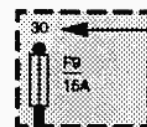

Fuse constantly connected in current path

Terminal number	Designation
30	Battery voltage: Supplied constantly
15	Battery voltage: Ignition switch in




R





position 2 or 3  
Battery voltage:  
Ignition switch in  
position 1, 2 or 3

1994

**BMW**  
**5** Symbols

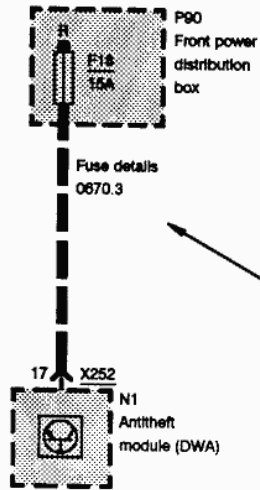


Further circuits  
connected to fuse 18 are  
not shown but are listed  
under "fuse details"

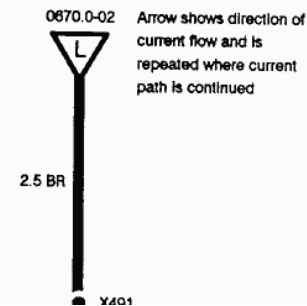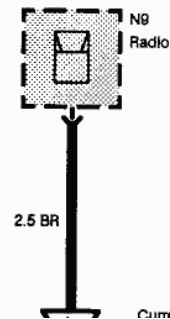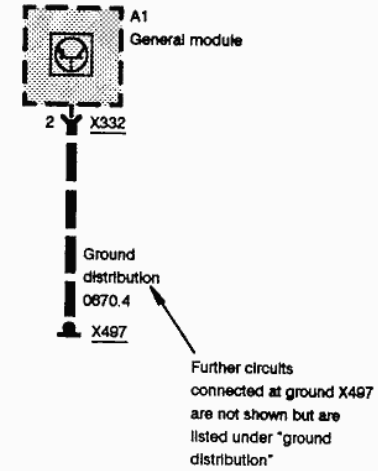
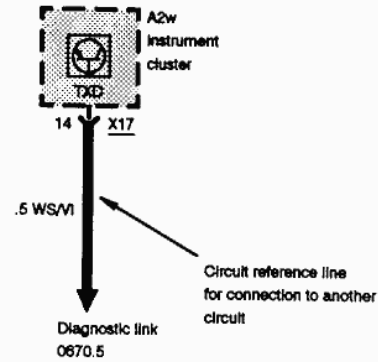


09/93

0140.0-03

 **BMW 5** Symbols  
Block diagram

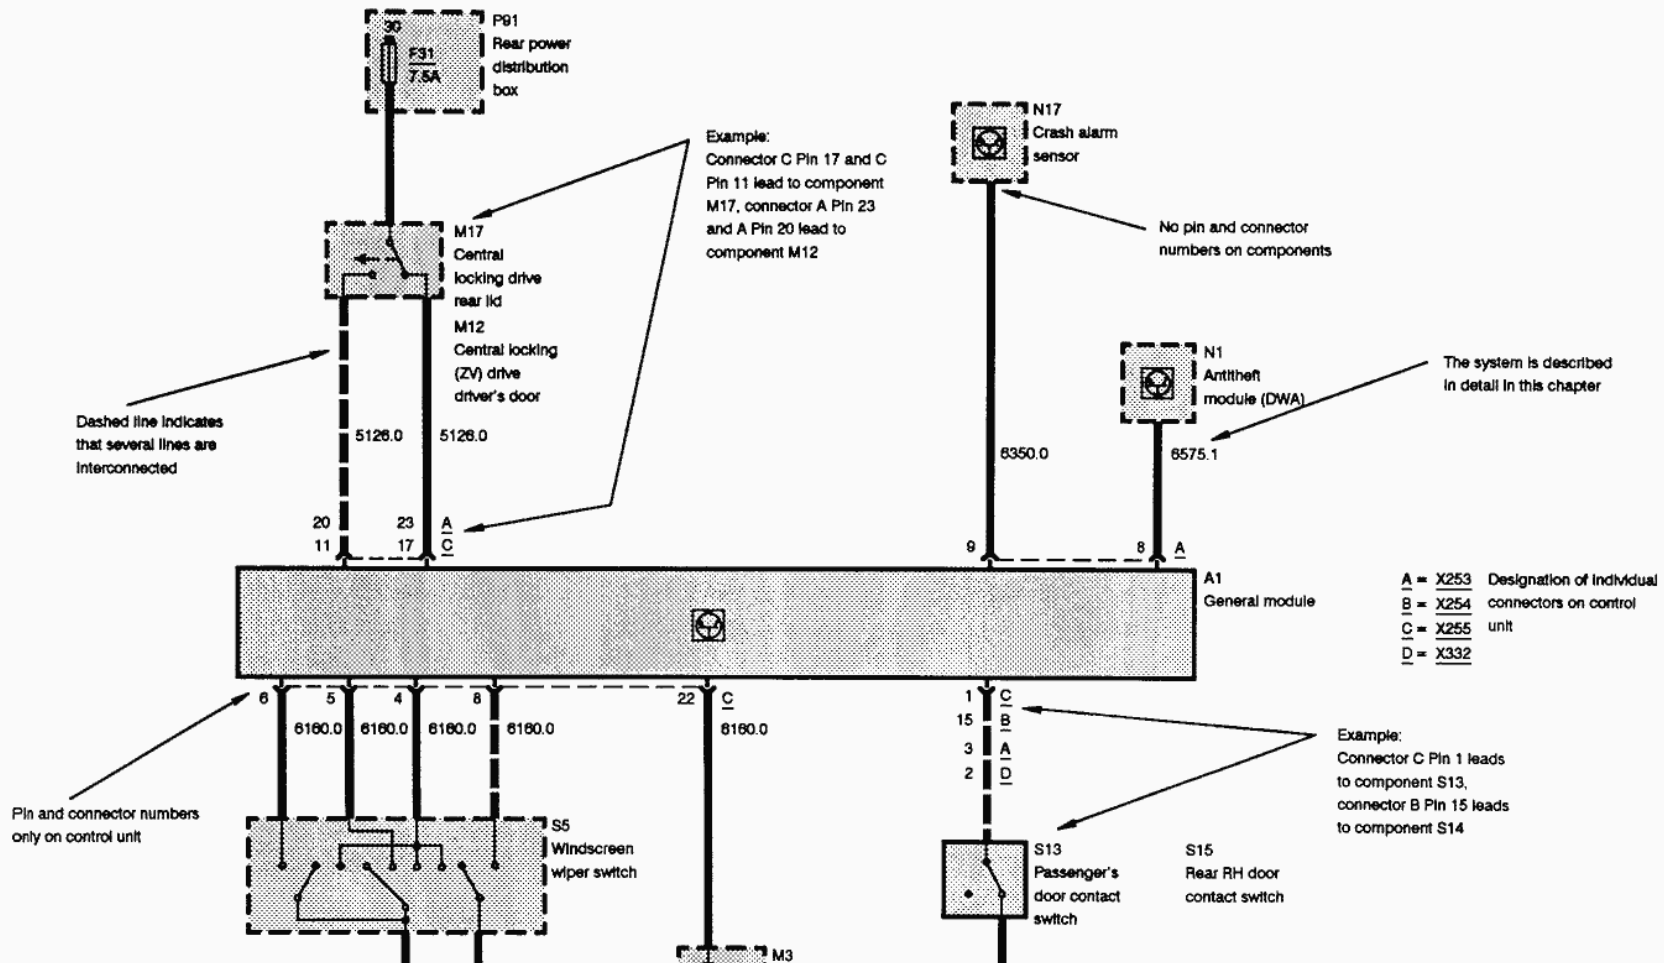

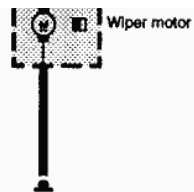

1994




**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994

Trailer coupling  
Scheme 6328.1


09/93 ————— 6328.1-00 ————— 1994

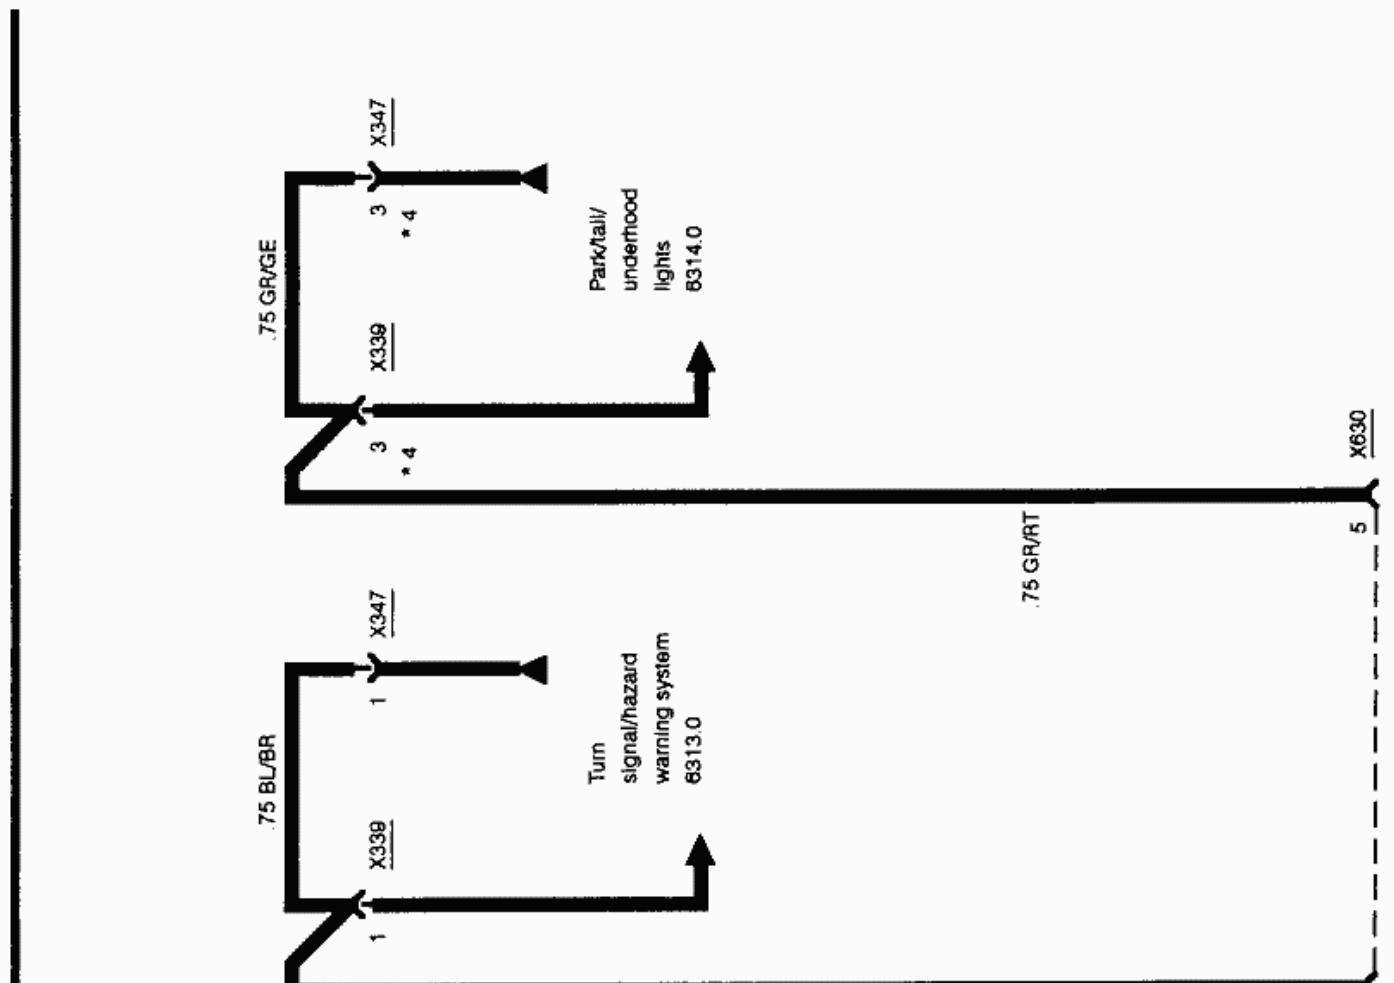

# Trailer coupling



\* Touring

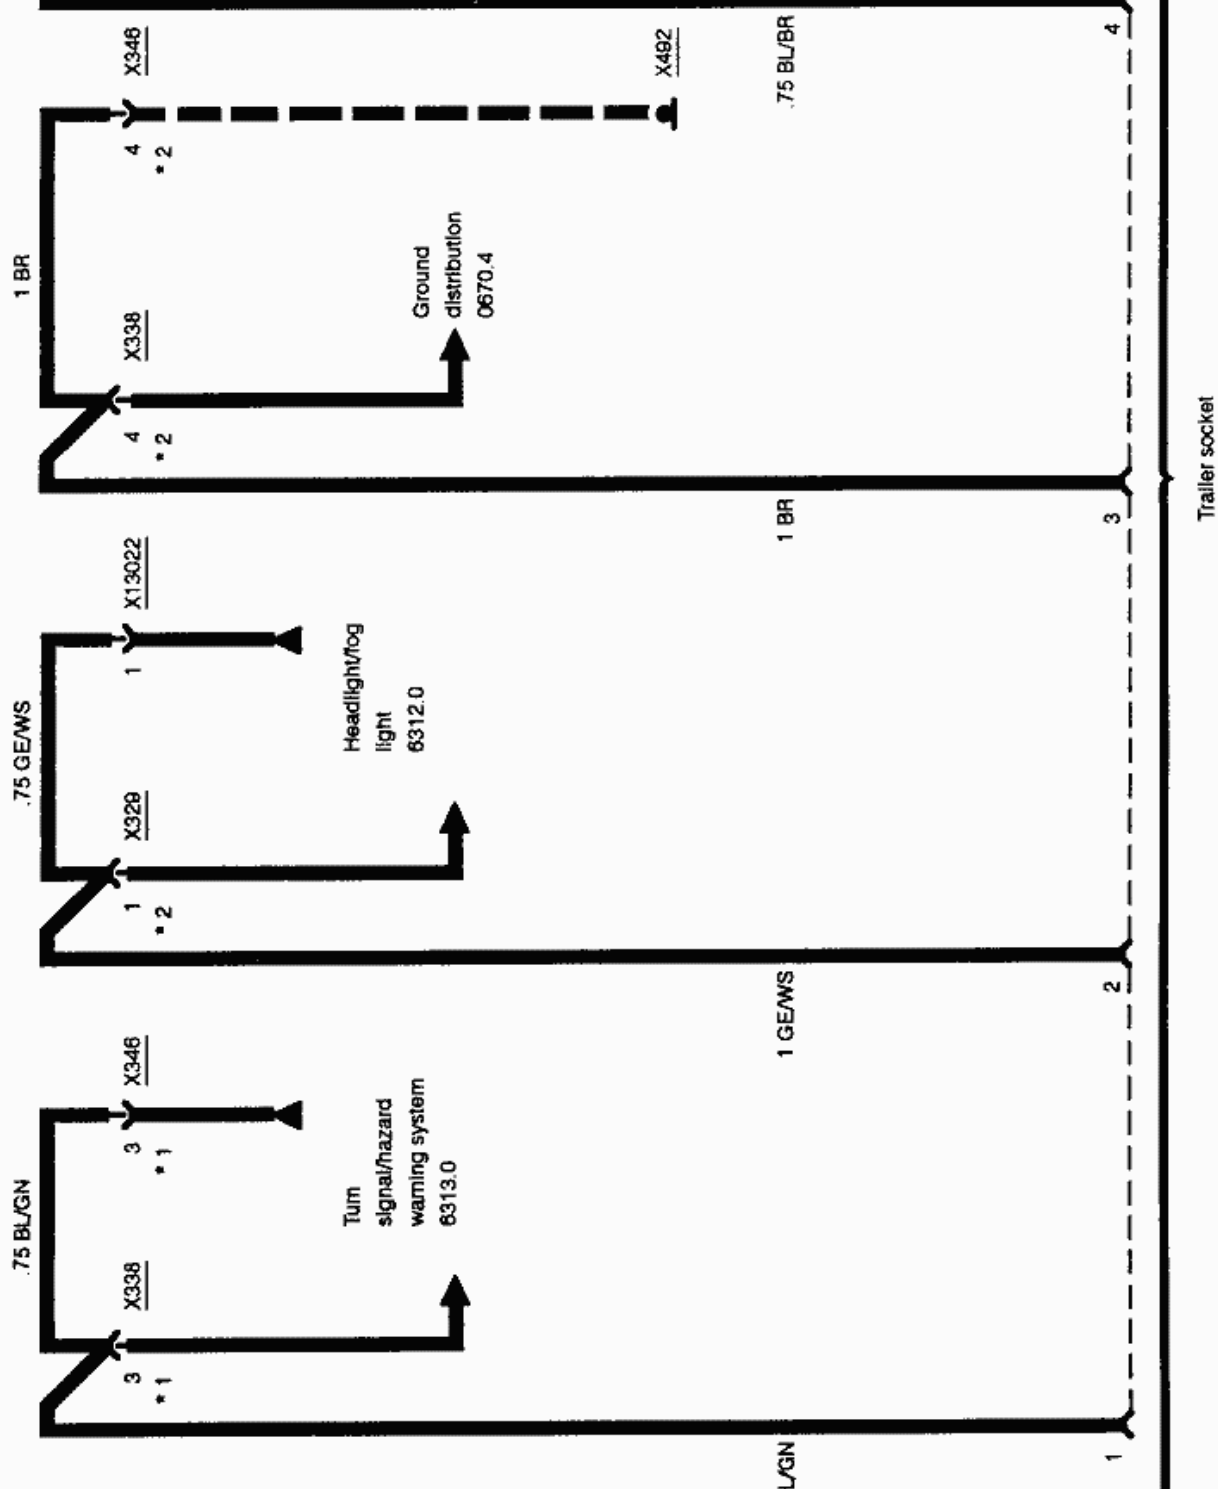




.75 B

09/93


6328.1-01

1994

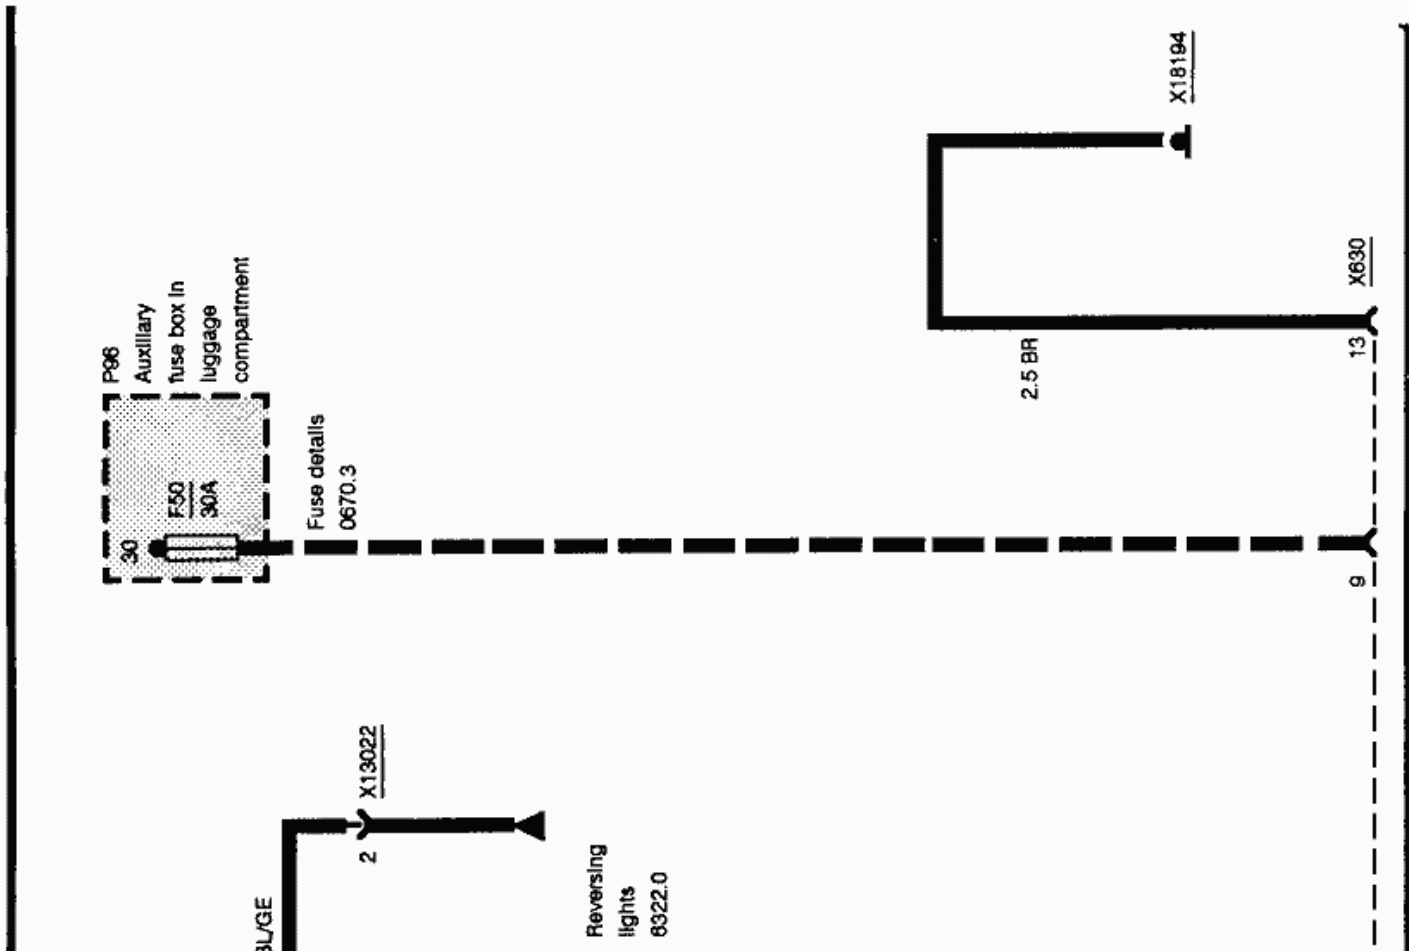

# Trailer coupling

\* Touring

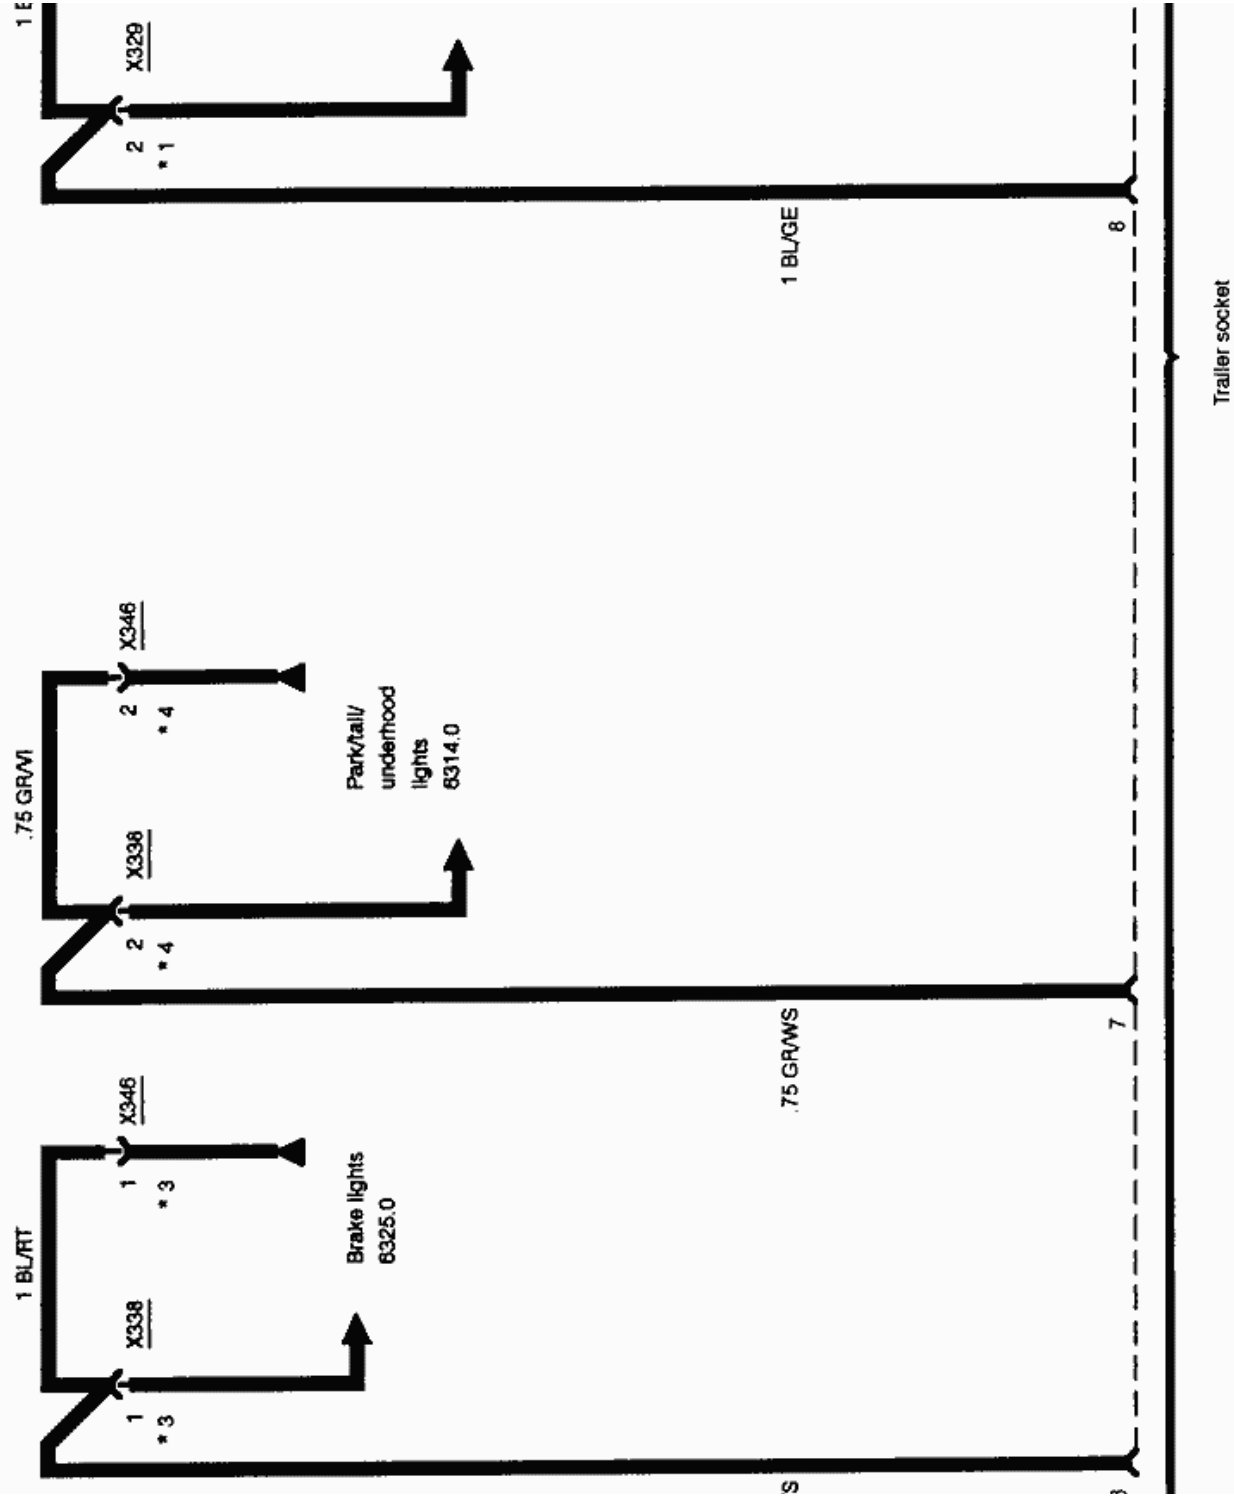



1 SW/W





**BMWAG**

Electrical troubleshooting manual

5 Series - E34 (518i, 520i, 525td, 525tds, incl. touring) Schematics Model year 1994


Wipe/wash module (WWM)

Scheme 6160.1

09/93


6160.1-00

1994

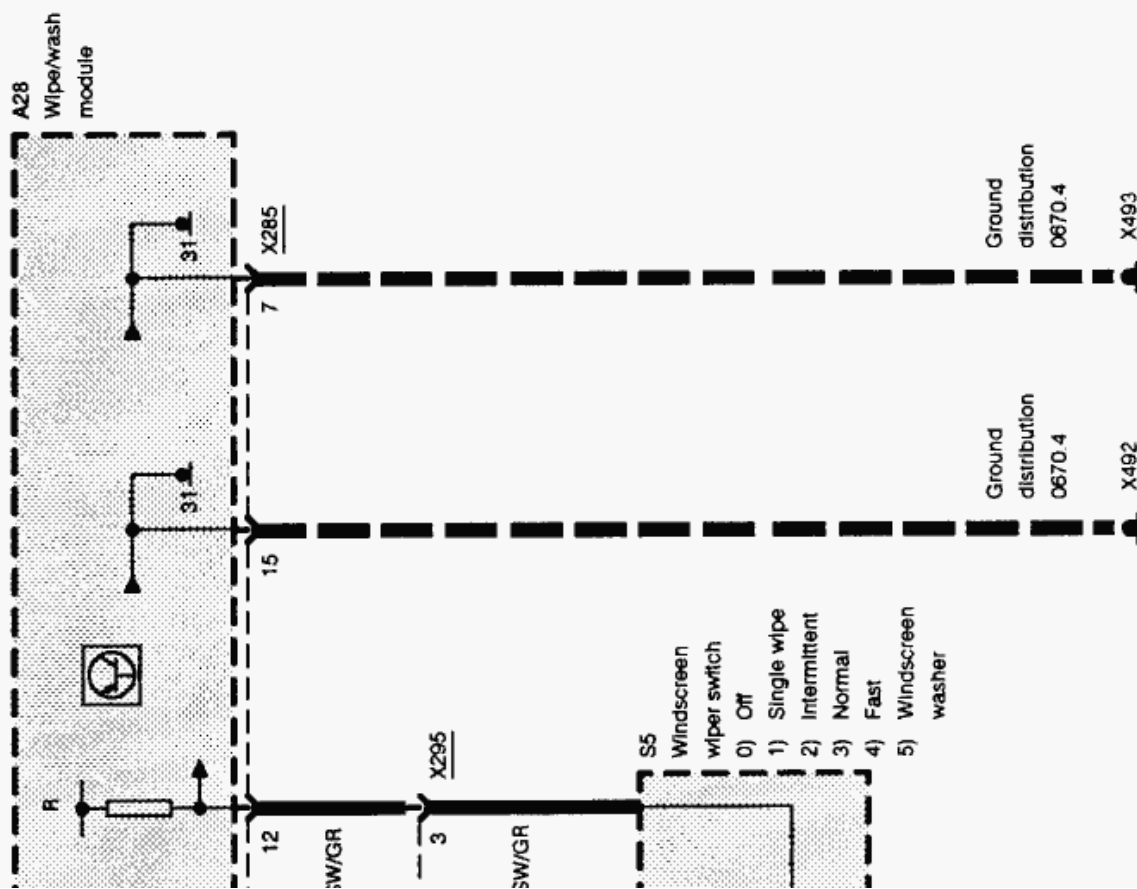



# Wipe/wash module (WWM)

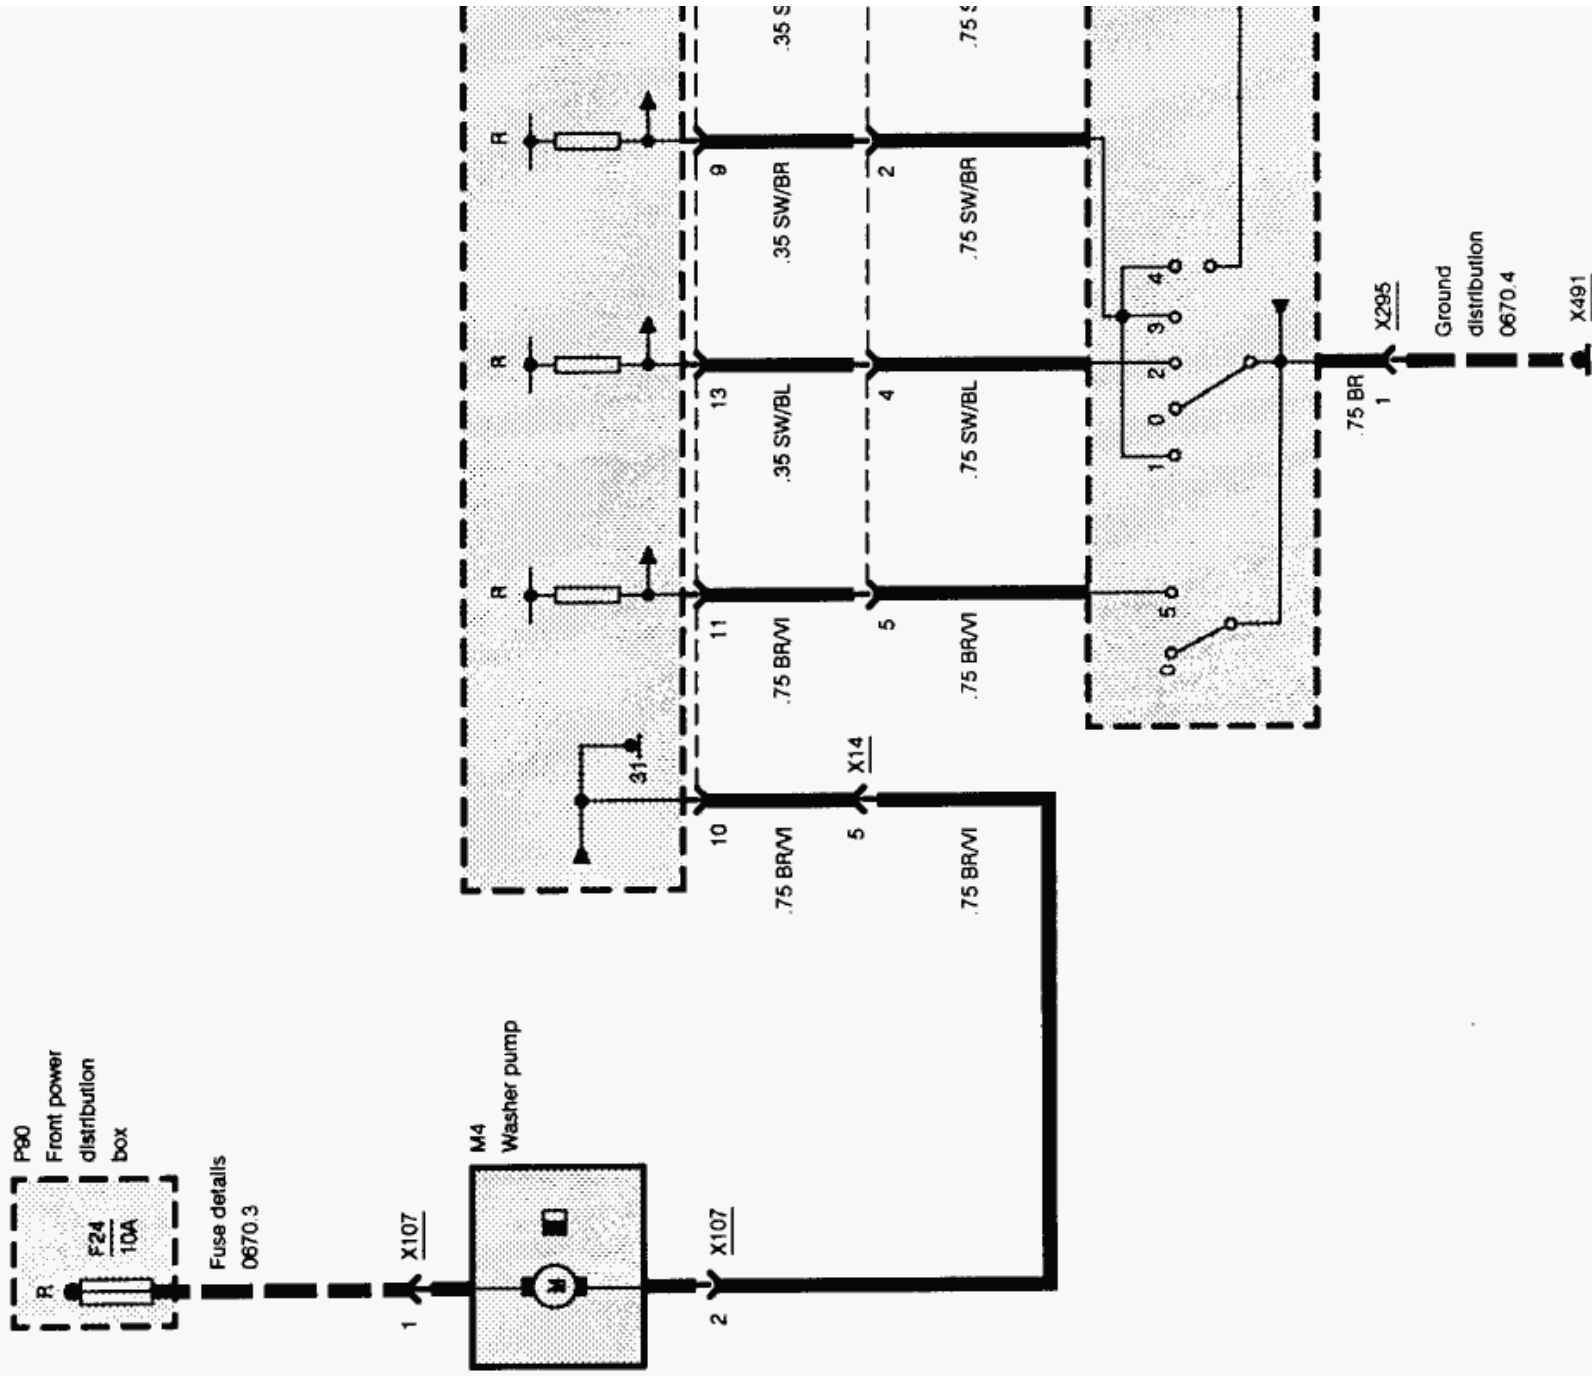



09/93

6160.1-01

1994

A28  
Wipe/wash  
module



Instrument  
cluster  
(redesigned  
standard  
version)  
6200 3



A2w  
Instrument  
cluster  
2) Speedometer  
output

# Wipe/wash module (WWM)

